

HP 83592C RF PLUG-IN (Including Options 002 and 004)

SERIAL NUMBER

This manual applies directly to HP 83592C RF Plug-In having serial number prefix 2328A.

For additional information about serial numbers, refer to INSTRUMENTS COVERED BY MANUAL in Section I.


© Copyright HEWLETT-PACKARD COMPANY 1983
1400 FOUNTAINGROVE PARKWAY, SANTA ROSA, CA 95401 U.S.A.

MANUAL PART NO. 83592-90038
Microfiche Part No. 83592-90039

Printed: DECEMBER 1983



**HEWLETT
PACKARD**

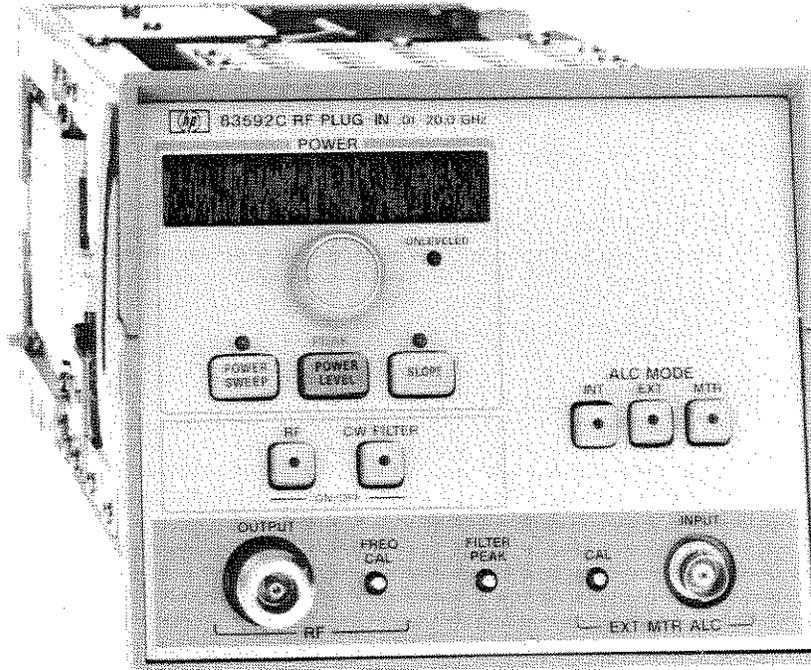

Model 83592C



Part No. 83525-20013

Figure 1-1. Model 83592C RF Plug-In and Accessory Cable

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

1-2. This Operating and Service Manual contains information required to install, operate, test, adjust, and service the Hewlett-Packard Model 83592C RF Plug-In. Figure 1-1 shows the Model 83592C.

1-3. This manual is divided into eight major sections which provide the following information:

- a. SECTION I, GENERAL INFORMATION, includes a brief description of the instrument, safety considerations, specifications, supplemental characteristics, instrument identification, options available, accessories available, and a list of recommended test equipment.
- b. SECTION II, INSTALLATION, provides information for initial inspection, preparation for use, storage, and shipment.
- c. SECTION III, OPERATION, explains the frequency resolution characteristics of the RF Plug-In in CW and swept frequency modes. Operating instructions include FM switch parameter settings, and crystal and power meter leveling instructions. A description of front and rear panel features and Plug-In error codes is also given.
- d. SECTION IV, PERFORMANCE TESTS, presents procedures required to verify that performance of the RF Plug-In is in accordance with published specifications.
- e. SECTION V, ADJUSTMENTS, presents procedures required to properly adjust and align the Model 83592C RF Plug-In after repair.
- f. SECTION VI, REPLACEABLE PARTS, provides information required to order all parts and assemblies.
- g. SECTION VII, MANUAL BACKDATING CHANGES, provides backdating informa-

tion required to make this manual compatible with earlier shipment configurations.

- h. SECTION VIII, SERVICE, provides an overall instrument block diagram with troubleshooting and repair procedures. Each assembly within the instrument is covered on a separate Service Sheet which contains a circuit description, schematic diagram, component location diagram, and troubleshooting information to aid in the proper maintenance of the instrument.

1-4. Supplied with this manual is an Operating Information Supplement. This is simply a copy of the first three sections of the manual, which should be kept with the instrument for use by the instrument operator.

1-5. On the front cover of this manual is a Microfiche part number. This number may be used to order 10- by 15-centimeter (4- by 6-inch) microfilm transparencies of the manual. Each microfiche contains up to 60 photo duplicates of the manual pages. The microfiche package also includes the latest Manual Changes sheet as well as all pertinent Service Notes.

1-6. Refer any questions regarding this manual, the Manual Changes sheet, or the instrument to the nearest HP Sales/Service Office. Always identify the instrument by model number, complete name, and complete serial number in all correspondence. Refer to the inside rear cover of this manual for a worldwide listing of HP Sales/Service Offices.

1-7. SPECIFICATIONS

1-8. Listed in Table 1-1 are the specifications for the Model 83592C RF Plug-In. These specifications are the performance standards, or limits, against which the instrument may be tested. Table 1-2 lists the RF Plug-In supplemental performance characteristics. Supplemental performance characteristics are not specifications but are typical characteristics included as additional information for the user.

Table 1-1. Specifications for HP 83592C Installed in HP 8350A/B (1 of 3)

FREQUENCY ¹							
Range: 0.01 to 20.0 GHz							
Accuracy (25°C ±5°C)	Frequency Bands (GHz)						
	0.01 to 2.4	2.4 to 7.0	7.0 to 13.5	13.5 to 20.0	0.01 to 20.0		
CW Mode	±5 MHz ²	±5 MHz	±10 MHz	±10 MHz	-----		
All Sweep Modes (Sweep time >100 ms)	±15 MHz ²	±20 MHz	±25 MHz	±30 MHz	±50 MHz ²		
Frequency Markers (Sweep time ≥100 ms)	±15 MHz ² ±0.5% of sweep width	±20 MHz ±0.5% of sweep width	±25 MHz ±0.5% of sweep width	±30 MHz ±0.5% of sweep width	±50 MHz ² ±0.5% of sweep width		
Stability							
With 10% Line Voltage Change	±50 kHz	±50kHz	±100 kHz	±150 kHz	±150 kHz		
With 10 dB Power Level Change	±200 kHz	±200 kHz	±400 kHz	±600 kHz	±600 kHz		
With 3:1 Load SWR	±100 kHz	±100 kHz	±200 kHz	±300 kHz	±300 kHz		
Residual FM, Peak (10 Hz – 10 kHz Bandwidth) (CW Mode with CW Filter)	<5 kHz	<5 kHz	<7 kHz	<9 kHz	-----		
POWER OUTPUT ¹							
Maximum Levelled Output Power ^{3, 4, 5} (25°C)	Frequency Bands (GHz)						
	0.01 to 2.4	2.4 to 7.0	7.0 to 13.5	13.5 to 18.6	13.5 to 20.0	0.01 to 18.6	0.01 to 20.0
	+10 dBm	+6 dBm	+6 dBm	+6 dBm	+4 dBm	+6 dBm	+4 dBm
With Option 002	+10 dBm	+4.5 dBm	+4 dBm	+3.5 dBm	+1.5 dBm	+3.5 dBm	+1.5 dBm
Power Level Accuracy ¹² (Internally Levelled)	<±1.5 dB	<±1.3 dB	<±1.3 dB	<±1.4 dB	<±1.4 dB	<±1.5 dB	<±1.5 dB
With Option 002 ⁶ (at 0 dB attenuator step)	<±1.7 dB	<±1.5 dB	<±1.5 dB	<±1.6 dB	<±1.6 dB	<±1.7 dB	<±1.7 dB

Table 1-1. Specifications for HP 83592C Installed in HP 8350A/B (2 of 3)

POWER OUTPUT (Cont'd)												
Minimum Settable Power: -5 dBm												
With Option 002: -60 dBm												
Attenuator Accuracy (±dB referenced from the 0 dB setting)	Frequency Range (GHz)	Attenuator Setting (dB)										
		5	10	15	20	25	30	35	40	45	50	55
	0.01 to 12.4	0.4	0.6	0.9	0.7	1.0	0.9	1.3	1.8	2.0	2.0	2.2
	12.4 to 18.0	0.5	0.7	1.0	0.9	1.2	1.2	1.6	2.0	2.2	2.3	2.5
	18.0 to 20.0	0.6	0.9	1.3	1.5	2.0	2.5	2.8	3.0	3.1	3.2	3.2
Power Variation (at specified Maximum Levelled Power or below)	Frequency Bands (GHz)											
	0.01 to 2.4	2.4 to 7.0	7.0 to 13.5	13.5 to 20.0	0.01 to 20.0							
Internally Levelled	±0.9 dB	±0.7 dB	±0.7 dB	±0.8 dB	±0.9 dB							
Externally Levelled ⁷ Negative Crystal Detector ⁸ (Sweep time >100 ms)	±0.2 dB	±0.2 dB	±0.2 dB	±0.2 dB	±0.2 dB							
Externally Levelled Power Meter ⁹	±0.2 dB	±0.2 dB	±0.2 dB	±0.2 dB	±0.2 dB							
Residual AM in 100 kHz Bandwidth (in dB below carrier and at specified Maximum Levelled Power)	≥50 dB	≥50 dB	≥50 dB	≥50 dB	≥50 dB							
Spurious Signals (at specified Maximum Levelled Power)	0.01 to 1.4	1.4 to 2.4	2.4 to 3.5	3.5 to 7.0	7.0 to 13.5	13.5 to 20.0	0.01 to 20.0					
	Harmonics or Subharmonics (in dB below carrier)	>25 dB	>45 dB	>50 dB	>55 dB	>55 dB	>55 dB	>25 dB				
Non-Harmonics	>25 dB	>25 dB	>55 dB	>55 dB	>55 dB	>55 dB	>25 dB					
Output VSWR (Internally Levelled)	<1.9	<1.9	<1.9	<1.9	<1.9	<1.9	<1.9					
With Option 002	<2.1	<2.1	<2.1	<2.1	<2.1	<2.1	<2.1					
Power Sweep ¹⁰	0.01 to 2.4	2.4 to 7.0	7.0 to 13.5	13.5 to 18.6	13.5 to 20.0	0.01 to 18.6	0.01 to 20.0					
	Calibrated Range ¹¹	>15 dB	>11 dB	>11 dB	>11 dB	>9 dB	>11 dB	>9 dB				
With Option 002	>15 dB	>9.5 dB	>9 dB	>8 dB	>6 dB	>8 dB	>6 dB					

Table 1-1. Specifications for HP 83592C Installed in HP 8350A/B (3 of 3)

MODULATION¹		
External AM		
Maximum Input: 15V		
Internal AM		
Selectable (by internal jumper in HP 8350A/B to 1 kHz or 27.8 kHz squarewave modulation. The 27.8 kHz modulation allows operation with HP 8756A Swept Amplitude Analyzer.		
On/Off Ratio: ≥ 30 dB below specified Maximum Leveled Power.		
Symmetry: 40/60		
External FM		
Maximum Deviations for Modulation Frequencies:		
Modulation Frequency	Cross-Over Coupled	Direct Coupled
DC to 100 Hz	± 75 MHz	± 12 MHz
100 Hz to 1 MHz	± 7 MHz	± 7 MHz
1 MHz to 2 MHz	± 5 MHz	± 5 MHz
2 MHz to 10 MHz	± 1 MHz	± 1 MHz
GENERAL SPECIFICATIONS¹		
Minimum Sweep Time (over full band): 35 ms		
Minimum Sweep Time (over single band): 10 ms		
Bandswitch Points: Internal bandswitch points at approximately 2.4 GHz, 7.0 GHz, and 13.5 GHz.		
RF Output Connector: Type N Female		
<ol style="list-style-type: none"> 1. Unless otherwise noted, all specifications are at the RF OUTPUT connector and at 0° to 55°C. 2. Accuracy when calibrated with the FREQ CAL adjustment. 3. For temperatures greater than 25°C, Maximum Leveled Output Power typically degrades 0.1 dB/°C. 4. When RF output is peaked with PEAK and FILTER PEAK controls. 5. 0.5 dB lower for Option 004. 6. Attenuator switch points are every 5 dB starting at -5 dBm indicated power. 7. Discontinuity at 2.4 GHz bandswitch point is typically <0.25 dB. 8. Excludes coupler and detector variation. Crystal detector output should be between -10mV and -200mV at specified Maximum Leveled Power. 9. Use HP 432A/B/C Power Meter. Sweep time 100 seconds, typically \geq seconds/GHz but not ≤ 10 seconds. 10. Power sweep and Slope compensation total must not exceed the specified Power Sweep calibrated range. 11. With Option 002, in Power Sweep or Slope functions, power can exceed the attenuator step by the amount that the Power Sweep calibrated range exceeds 5 dB (e.g. if the calibrated range is 7 dB, power can exceed the attenuator step by 2 dB). 12. Includes power level variations. 		

Table 1-2. Supplemental Performance Characteristics for HP 83592C Installed in HP 8350A/B (1 of 2)

NOTE						
Values in this table are not specifications, but are typical characteristics included for user information.						
FREQUENCY CHARACTERISTICS¹						
Accuracy (25°C ±5°C)²	Frequency Bands (GHz)					
	0.01 to 2.4	2.4 to 7.0	7.0 to 13.5	13.5 to 20.0	0.01 to 20.0	
CW Mode typically	±2 MHz	±2 MHz	±3 MHz	±4 MHz	—————	
Manual Sweep	≤15 MHz	≤30 MHz	≤30 MHz	≤30 MHz	≤100 MHz	
All Sweep Modes (Sweep time 10 mS to 100 mS)	≤±5 MHz	≤±6 MHz	≤±8 MHz	≤±10 MHz	≤±35 MHz	
Sweep Mode Linearity ³	≤±2 MHz	≤±2 MHz	≤±4 MHz	≤±6 MHz	≤±10 MHz	
Stability With Temperature	±200 kHz/°C	±200 kHz/°C	±400 kHz/°C	±600 kHz/°C	±600 kHz/°C	
With Time (in a ten minute period after one hour warmup at the same frequency setting)	<±100 kHz	<±100 kHz	<±200 kHz	<±300 kHz	<±300 kHz	
OUTPUT CHARACTERISTICS¹						
Power Output						
Resolution (Displayed): 0.1 dB						
Resolution (Power): Typically ±0.01 dB						
Stability with Temperature (at specified Maximum Leveled Power): ±0.1 dB/°C						
Power Variation (at specified Maximum Leveled Power or below)						
Externally leveled with Negative Crystal Detector (sweep time 10 mS to 100 mS): ⁶ ±0.25 dB						
Spurious Signals (in dB below carrier and at specified Maximum Leveled Power)	Frequency Bands (GHz)					
	0.01 to 2.4	2.4 to 3.5	3.5 to 7.0	7.0 to 13.5	13.5 to 20.0	0.01 to 20.0
Harmonics and Subharmonics	>35 dB	>55 dB	>60 dB	>60 dB	>60 dB	>35 dB
Non-Harmonics Typically	>40 dB	>60 dB	>60 dB	>60 dB	>60 dB	>40 dB
Impedance 50 Ohms						
Power Sweep⁴						
Accuracy (including Linearity): Typically ±1.5 dB						
Resolution (Displayed): 0.1 dB						

Table 1-2. Supplemental Performance Characteristics for HP 83592C Installed in HP 8350A/B (2 of 2)

OUTPUT CHARACTERISTICS (Cont'd)											
<p>Slope Compensation⁴</p> <p>Linearity: Typically <0.2 dB Calibrated Range:⁵ Up to 5 dB/GHz; up to 15 dB for full sweep range Resolution (Displayed): 0.01 dB/GHz</p>											
MODULATION CHARACTERISTICS ¹											
<p>External AM</p> <p>Frequency Response: Typically 100 kHz Input Impedance: Approximately 10k Ohm Range of Amplitude Control: Typically 15 dB Sensitivity: Typically 1 dB/V</p>											
<p>Pulse In</p> <p>TTL compatible: Logic high = RF on, Logic low = RF off</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 33%;">Squarewave Modulation</th> <th colspan="2" style="width: 66%;">Pulse Modulation</th> </tr> <tr> <th style="text-align: center;">0.01 to 20.0 GHz</th> <th style="text-align: center;">10 MHz to 2.5 GHz</th> <th style="text-align: center;">2.5 to 20.0 GHz</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">up to 30 kHz</td> <td> Rise/Fall Time: Typically 50 nS Minimum Pulse Width: Leveled: 5 μS Unleveled Power Level set to +20 dBm: 200 nS </td> <td> Rise/Fall Time: Typically 10 nS Minimum Pulse Width: Leveled: 5 μS Unleveled Power Level set to +20 dBm: 100 nS </td> </tr> </tbody> </table>			Squarewave Modulation	Pulse Modulation		0.01 to 20.0 GHz	10 MHz to 2.5 GHz	2.5 to 20.0 GHz	up to 30 kHz	Rise/Fall Time: Typically 50 nS Minimum Pulse Width: Leveled: 5 μS Unleveled Power Level set to +20 dBm: 200 nS	Rise/Fall Time: Typically 10 nS Minimum Pulse Width: Leveled: 5 μS Unleveled Power Level set to +20 dBm: 100 nS
Squarewave Modulation	Pulse Modulation										
0.01 to 20.0 GHz	10 MHz to 2.5 GHz	2.5 to 20.0 GHz									
up to 30 kHz	Rise/Fall Time: Typically 50 nS Minimum Pulse Width: Leveled: 5 μS Unleveled Power Level set to +20 dBm: 200 nS	Rise/Fall Time: Typically 10 nS Minimum Pulse Width: Leveled: 5 μS Unleveled Power Level set to +20 dBm: 100 nS									
<p>External FM</p> <p>Frequency Response (DC to 2 MHz): Typically ±3 dB Sensitivity (Switch selectable): Typically -20 MHz/V (FM Mode) Typically -6 MHz/V (Phase-Lock Mode) Input Impedance: 2000 Ohms nominal</p>											
GENERAL CHARACTERISTICS ¹											
<p>Frequency Reference Output: <1.0 GHz 1V/GHz ±25mV (rear panel BNC output) 1.0 to 18.0 GHz 1V/GHz ±2.5%</p> <p>Auxiliary Output: Rear panel 2.3 to 7.0 GHz fundamental oscillator output, nominally 0 dBm</p> <p>Weight: Net 6.0 kg (13.2 lb), Shipping 9.2 kg (20 lb.)</p>											
<ol style="list-style-type: none"> 1. Unless otherwise noted, all characteristics are at the RF OUTPUT connector and at 0° to 55°C. 2. Accuracy when calibrated with the FREQ CAL adjustment. 3. With respect to the SWEEP OUT voltage. 4. Power Sweep and Slope compensation must not exceed the specified Power Sweep calibrated range. 5. With Option 002, in Power Sweep or Slope functions, power can exceed attenuator step by the amount that the Power Sweep calibrated range exceeds 5 dB (e.g. if the calibrated range is 7 dB, power can exceed the attenuator step by 2 dB). 6. Excludes coupler and detector variation. Crystal detector output should be between -10 mV and -mV at specified Maximum Leveled Power. 											

1-9. SAFETY CONSIDERATIONS

1-10. This product has been manufactured and tested in accordance with international safety standards. Before operation, this product and related documentation must be reviewed for familiarization with safety markings and instructions. A complete listing of Safety Considerations precedes Section I of this manual.

1-11. INSTRUMENTS COVERED BY MANUAL

1-12. Attached to the rear panel of the instrument is a serial number plate. A typical serial number plate is shown in Figure 1-2. The serial number is in two parts. The first four digits followed by a letter comprise the serial number prefix. The last five digits form the sequential suffix that is unique to each instrument. The content of this manual applies directly to instruments having the same serial number prefix as listed on the title page of this manual under SERIAL NUMBER.

1-13. An instrument manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. An unlisted serial prefix indicates that the instrument is different from those documented in this manual. The manual for the instrument is then supplied with a Manual Changes supplement that contains information which documents the differences.

1-14. In addition to change information, the Manual Changes supplement may contain information for correcting errors in the manual. To keep this manual as current as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is keyed to the manual's print date and part number, both of which appear on the title page. Complimentary copies of the Manual Changes supplement are available on request from Hewlett-Packard.

1-15. For information concerning a serial number prefix that is not listed on the title page or in the Manual Changes Supplement, contact your nearest Hewlett-Packard Sales/Service Office.

1-16. DESCRIPTION

1-17. The Model 83592C is an RF Plug-In which has been designed for use with the Model

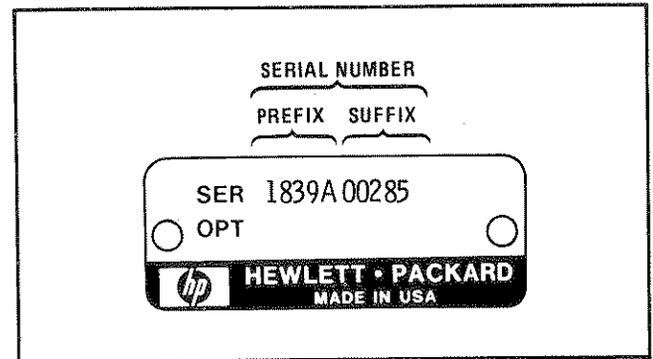


Figure 1-2. Typical Serial Number Plate

8350A/B Sweep Oscillator. The Model 83592C covers the frequency range of 0.01 to 20.0 GHz in four bands. A YIG Oscillator is used as the tunable RF frequency source for all bands. The lowest band (Band 0) uses a fixed 3.8 GHz oscillator which is mixed with the YIG Oscillator to generate a 0.1 to 2.4 GHz RF output. The YIG Oscillator fundamental frequency is used for Band 1 (2.3 to 7.0 GHz). A YIG Tuned Multiplier (YTM) is used to multiply the YIG Oscillator frequency for Bands 2 and 3 (6.9 to 13.5 GHz, and 13.4 to 20.0 GHz).

1-18. Model 83592C front panel functional controls, pushbuttons, and the Rotary Pulse Generator (RPG), are monitored by the Model 8350A/B via the RF Plug-In interface circuits. The Model 8350A/B generates a tuning voltage according to the mode of operation (CW, START/STOP, CF/ Δ F). This signal is scaled and offset by the Plug-In to provide a voltage ramp (in swept modes) proportional to the YIG Oscillator and YTM/YTF frequency. The Model 83592C tuning circuits accept the tuning ramp output from the Model 8350A/B and convert it to a current which drives the YIG Oscillator and YTM/YTF tuning coil.

1-19. The standard Model 83592C offers a maximum leveled RF output power of +10 dBm to 2.4 GHz (+6 dBm from 2.4 to 18.6 GHz, and +4 dBm from 18.6 to 20 GHz). Internal (INT), External (EXT), and Power Meter (MTR) leveling are available as selected by the front panel pushbuttons. A front panel EXT/MTR ALC input connector and gain control (CAL) are provided to use with an external leveling loop. A front panel LED indicates when the RF output becomes unleveled. The RF output level is controlled by the Model 83592C RPG, the Model 8350A/B data entry controls (keypad and step keys), or through HP-IB control via the Model 8350A/B.

1-20. A power sweep function allows the RF output power to be swept at least 5 dB during CW mode or swept frequency modes. Power sweep is selected by the front panel POWER SWEEP pushbutton. Slope compensation control is also available by selecting the SLOPE pushbutton and rotating the Model 83592C RPG or manipulating the Model 8350A/B data entry controls. The power sweep function and slope compensation may both be selected and modified through HP-IB control via the Model 8350A/B. HP-IB (Hewlett-Packard Interface Bus) is Hewlett-Packard's system of instrument-to-instrument communication. HP-IB is electrically compatible with the IEEE-488 and IEC-625 worldwide interface standards. In addition, HP-IB includes extensive hardware, software, documentation, and instrument-system support.

1-21. The RF output may be internally or externally amplitude modulated, or externally frequency modulated. The internal squarewave modulation frequency is selectable by the Model 8350A/B front panel or HP-IB. An internal 8350A/B jumper selects either 1 kHz or 27.8 kHz (for use with the Model 8756A Swept Amplitude Analyzer). Rear panel BNC connectors accept an external AM or FM signal. FM coupling (direct coupled or cross-over) and sensitivity are selected by an internal configuration switch in the Model 83592C. Refer to Section III, Operation, of this manual for detailed information on the configuration switch.

1-22. A rear panel 1V/GHz signal corresponds to the RF output frequency up to 18 GHz. This output voltage may be used as a reference for pretuning external equipment in phase-locking applications. (The Model 8410B/8411A Network Analyzer utilizes this output in such a configuration.)

1-23. The RF output may be turned off by the RF ON/OFF pushbutton. An internal switch is set to select whether the RF is on or off at turn on. RF power ON is indicated by the LED in the center of the pushbutton. Additionally, in CW mode, the CW FILTER, when selected, places a capacitor across the YIG Oscillator tuning coil to filter high frequency noise which would appear at the RF output. All front panel functions, with the exception of the FREQ CAL, EXT/MTR ALC CAL, and FILTER PEAK adjustments, may be set or altered via the HP-IB bus connection on the Model 8350A/B.

1-24. OPTIONS

1-25. Option 002, 55 dB Attenuator

1-26. Option 002 instruments contain a digitally controlled attenuator just before the RF output. Up to 55 dB of attenuation in 5 dB steps is automatically selected as required to attenuate the RF output power to the indicated level. The continuously variable power level function operates as in a standard instrument with the data entry controls.

1-27. Option 004, Rear Panel RF Output

1-28. Option 004 instruments have the Type N(f) RF OUTPUT connector and the BNC EXT/MTR ALC input connector on the rear panel instead of the front panel.

1-29. SUPPLIED ACCESSORY

1-30. Figure 1-1 shows the HP 83592C RF Plug-In and the accessory cable supplied. The cable type and part number are as follows:

- Accessory Cable HP Part No. 83525-20013.

1-31. EQUIPMENT REQUIRED BUT NOT SUPPLIED

1-32. To have a complete operating Sweep Oscillator unit, the Model 83592C RF Plug-In must be installed in a Model 8350A/B Sweep Oscillator mainframe. Refer to Section II, Installation, in this manual for a detailed description of RF Plug-In installation.

1-33. EQUIPMENT AVAILABLE

1-34. Service Accessories

1-35. A Service Accessory Kit (HP Part Number 08350-60020) is available for servicing the Model 83592C RF Plug-In and the Model 8350A/B Sweep Oscillator. HP Part Numbers for the individual pieces of the kit are provided in Table 1-3. The accessory kit includes:

- Two 44-pin printed circuit board extenders. These boards have keyed slots which allow them to be used in each of the keyed PC board receptacles in the Model 83592C, and in the Model 8350A/B as well.

- An RF Plug-In extender cable set that provides all electrical connections when the RF Plug-In is removed from the Sweep Oscillator. The RF Plug-In Interface connector (P2) and the Power Supply Interface connector (P1) are extended by separate cables.
- One Hex Balldriver for use in Model 8350A/B front panel repairs.
- One 16-pin and one 20-pin I.C. Test Clip for probing integrated circuits.

1-36. A listing of service accessories available including service cables, wrenches, adapters, and extender boards is given in Table 1-3.

1-37. Model 8410B/8411A Network Analyzer

1-38. The Model 8350A/B Sweep Oscillator, with the Model 83592C RF Plug-In installed, is compatible with the HP Model 8410B Network Analyzer system. The combination of the Model 8410B Network Analyzer, the Model 8411A Frequency Converter, and an appropriate display Plug-In, forms a phasemeter and a ratiometer for direct phase and amplitude ratio measurement of RF voltages. These measurements can be made on CW frequencies and on swept frequencies from 110 MHz to 18 GHz. The Model 8350A/B-83592C combination is capable of operation over this full frequency range. The Model 8410B has an Auto-Frequency range mode which gives it the capability of automatically tracking the Model 8350A/B Sweep Oscillator over octave and multi-octave frequency bands. Two interconnections to the Model 8350A/B are necessary to ensure that the Model 8410B will phase-lock properly. The Model 8410B Source Control Cable (HP 08410-60146) connects the Model 8410B rear panel SOURCE CONTROL connector to the Model 8350A/B rear panel PROGRAMMING connector. Additionally, the Model 83592C RF Plug-In rear panel 1V/GHz output connects to

the Model 8410B rear panel FREQ REF INPUT. The Model 8410B Source Control Cable connector pins and signals are illustrated in the Model 8350A/B Sweep Oscillator Operating and Service Manual.

1-39. Model 8756A Frequency Response Test Set

1-40. The Model 8350A/B sweep oscillator with the Model 83592C RF Plug-In installed is compatible with the Model 8755C and 8756A Frequency Response Test Sets for broadband swept scalar measurements. The Model 8350A/B provides internal 27.8 kHz squarewave modulation of the RF output, eliminating unnecessary cable connections to the Model 8755C or 8756A, or the use of an external modulator. The Model 8350A/B can also produce alternate sweeps through use of the ALT n Function, allowing display of two different measurement states on the Model 8755C or 8756A.

1-41. Power Meters and Crystal Detectors

1-42. The RF output can be externally leveled using the HP Model 432A Power Meter or negative polarity output crystal detectors. Refer to Section III, Operation, of this manual for detailed information on leveling techniques that may be used with the Model 8350A/RF Plug-In combination.

NOTE

The Model 435A and 436A Power Meters should not be used in Model 8350A/B-Model 83592C external leveling systems.

1-43. RECOMMENDED TEST EQUIPMENT

1-44. Equipment required for testing and adjusting the instrument is listed in Table 1-4. Other equipment may be substituted if it meets or exceeds the critical specifications indicated in the table.

Table 1-3. Model 83592C Service Accessories Available

Name	HP Part Number	Description
44-pin printed circuit board extender	08350-60031*	Extends printed circuit boards
RF Plug-In Extender Cables	08350-60034*	Extends RF Plug-In Interface connector (P2)
	08350-60035*	Extends RF Plug-In Power Supply Interface connector (P1)
Adjustment Tool	8830-0024	Fits miniature adjustment slot on potentiometers
Wrenches	08555-20097	5/16" slotted box/open end
	8710-0946	15/64" open end
Service Cables	8120-1578	46 cm (18") coax with SMA (m) connector on each end
	83525-60019	25 cm (10") coax with SMB snap on (f) and SMA (m)
Adapters	1250-0777	Type N (f) to BNC (m)
	1250-0082	Type N (m) to BNC (m)
	1250-1404	Type N (f) to SMA (f)
	1250-1158	SMA (f) to SMA (f)
	1250-0674	SMA (f) to SMB (m)
	1250-0675	SMA (f) to SMC (m)
	1250-0069	SMB snap on (m) to SMB snap on (m)
	1250-1743	APC-3.5 (m) to N (m)
	1250-1750	APC-3.5 (m) to N (f)
	1250-1744	APC-3.5 (f) to N (m)
	1250-1745	APC 3.5 (f) to N(f)
	1250-1746	APC-3.5 (m) to APC-7
	1250-1747	APC-3.5 (f) to APC-7
	1250-1748	APC-3.5 (m) to APC-3.5 (m)
	1250-1749	APC-3.5 (f) to APC-3.5 (f)
Hex Balldriver	8710-0523*	Removes front panel hold down plate hex screws in 8350A
IC Test Clip	1400-0734*	16-pin IC test clip
	1400-0979*	20-pin IC test clip

*These items are included in a Service Accessories Kit HP Part No. 08350-60020 (2 board extenders are included in this kit).

Table 1-4. Recommended Test Equipment (1 of 3)

Instrument	Critical Specifications	Recommended Model	Use*
Sweep Oscillator	No substitute	HP 8350A/B	P,A,T
Digital Voltmeter (DVM)	Range: -50V to +50V Accuracy: ±0.01% Input Impedance: ≥10M Ohms	HP 3456A	A,T
Oscilloscope	Dual Channel Bandwidth: DC to 100 MHz Vertical Sensitivity: ≤5 mV/DIV Horizontal Sweep Rate: ≤0.1μ S/DIV External Sweep Capability	HP 1740A	P,A,T
Oscilloscope Probe	1:1 General Purpose Probe	HP 10008B	A
Frequency Counter	Frequency Range: 0.01 to 20 GHz Input Impedance: 50 Ohms Resolution: ≤1 MHz	HP 5343A	P,A
Spectrum Analyzer	Frequency Range: 0.01 to 20 GHz Residual FM: <100 Hz	HP 8565A or 8569A or HP 8566A	P,T

Table 1-4. Recommended Test Equipment (2 of 3)

Instrument	Critical Specifications	Recommended Model	Use*
Swept Amplitude Analyzer	Capable of Transmission Measurements Power Resolution: ≤ 0.25 dB. Capable of ≤ 30 ms Sweeptime	HP 8755C	A
Display Mainframe	Compatible with Model 8755C Swept Amplitude Analyzer	HP 180TR, 182T	A
Swept Amplitude Analyzer	Capable of Transmission Measurements Power Resolution ≤ 0.25 dB	HP 8756A	A
Detectors (2)	Compatible with Swept Amplitude Analyzer Frequency Range: 0.01 to 20 GHz Power Range: -20 to $+10$ dBm	HP 11664B	A
Frequency Meter	Frequency Accuracy: $\leq 0.17\%$ Calibration Increments: ≤ 2 MHz Frequency Range: 0.96 to 4.0 GHz 4.0 to 12.4 GHz 12.4 to 18 GHz 18.0 to 26.5 GHz	HP 536A HP 537A HP P532A HP K532A	A A A A
Function Generator	Frequency Range: 0.1 Hz to 10 MHz Sinewave and squarewave output Output Level: 10Vp-p into 50 Ohms Output Level Flatness: $\leq \pm 3\%$ from 10 Hz to 100 kHz $\leq \pm 10\%$ from 100 kHz to 10 MHz	HP 3312A	P,A,T
Power Meter	Power Range -20 to $+10$ dBm (No substitute when used for external power meter leveling).	HP 432A	P,A
Thermistor Sensor	Frequency Range: 0.01 to 18 GHz Maximum SWR: ≤ 1.75	HP 8478B	P,A
Thermistor Sensor	Frequency Range 18 to 20 GHz Maximum SWR: ≤ 2.0	HP K486	P,A
Adapter	Waveguide to APC 3.5 (f) for use with HP K486	HP K281C	A
Power Meter	Power Range: 1μ W to 100mV	HP 436A	P,A
Power Sensor	Frequency Range: 0.05 to 20 GHz	HP 8485A	P,A
Crystal Detector**	Frequency Response: 0.01 to 20 GHz Maximum Input Power: 100mV	HP 8473C	P,A
Attenuator**	Frequency Range: 0.01 to 20 GHz Maximum Input Power: $+20$ dBm Attenuation: 20 dB ± 1.0 dB 10 dB ± 0.8 dB 6 dB ± 0.6 dB 3 dB ± 0.5 dB	HP 8493C-020 HP 8493C-101 HP 8493C-006 HP 8493C-003	P P,A P P

Table 1-4. Recommended Test Equipment (3 of 3)

Instrument	Critical Specifications	Recommended Model	Use*
Power Splitter**	Frequency Range: 0.01 to 20 GHz Maximum Input Power: $\geq +20$ dBm	Weinschel Model 1579A	P, A
Directional Coupler	Frequency Range: 0.1 to 2.0 GHz Nominal Coupling: ≥ 20 dB Maximum Coupling Variation: $\geq \pm 1$ dB Minimum Directivity: ≥ 32 dB	HP 778D	P
Directional Coupler	Frequency Range: 2.0 to 18 GHz Nominal Coupling: ≥ 22 dB Maximum Coupling Variation: ± 1 dB Minimum Directivity: 26 dB	HP 11691D	P
Directional Coupler	Frequency Range: 18 to 20 GHz Nominal Coupling: 10 dB Maximum Coupling Variation: ± 0.5 dB Minimum Directivity: 40 dB	HP K752C	P
RMS Voltmeter	dB Range: -20 to -70 dBm (0 dBm = 1 mW into 600 ohms) Frequency Range: 10 Hz to 10 MHz Accuracy: $\pm 5\%$ of full scale	HP 3400A	P
Air Line Extension (2 required)	Impedance: 50 Ohms Frequency Range: DC to 18 GHz Reflection Coefficient: 0.018 to 0.001 (times the frequency in GHz)	HP 11567A	P
Step Attenuator	Frequency Range: DC to 18 GHz Incremental Attenuation: 0 to 70 dB in 10 dB steps Calibration Accuracy: $\leq \pm 0.1$ dB at all steps	HP 8495B Option 890	P
Adjustable Short	Frequency Range: 1.1 to 18 GHz Impedance: 50 ± 1.5 Ohms	Maury Microwave 1953-2	P
DC Power Supply	DC Output: 0 to 6.5 Vdc ± 0.05 Vdc	HP 6213A	A
50 Ohm Termination	Type N, 50 ± 0.5 Ohms	HP 909A	P
Delay Line Discriminator	Refer to Figure 1-3.		P, A
PC Board Extender	44-pin, extends printed circuit boards	HP Part No 08350-60031	A, T


* P = Performance Test; A = Adjustments; T = Troubleshooting

** For testing at frequency of ≤ 18 GHz, the following equipment may be substituted:

ATTENUATORS
 20 dB HP 8491B Option 020
 10 dB HP 8491B Option 010
 6 dB HP 8491B Option 006
 3 dB HP 8491B Option 003

POWER SPLITTER
 HP 11667A

CRYSTAL DETECTOR
 HP 8470B

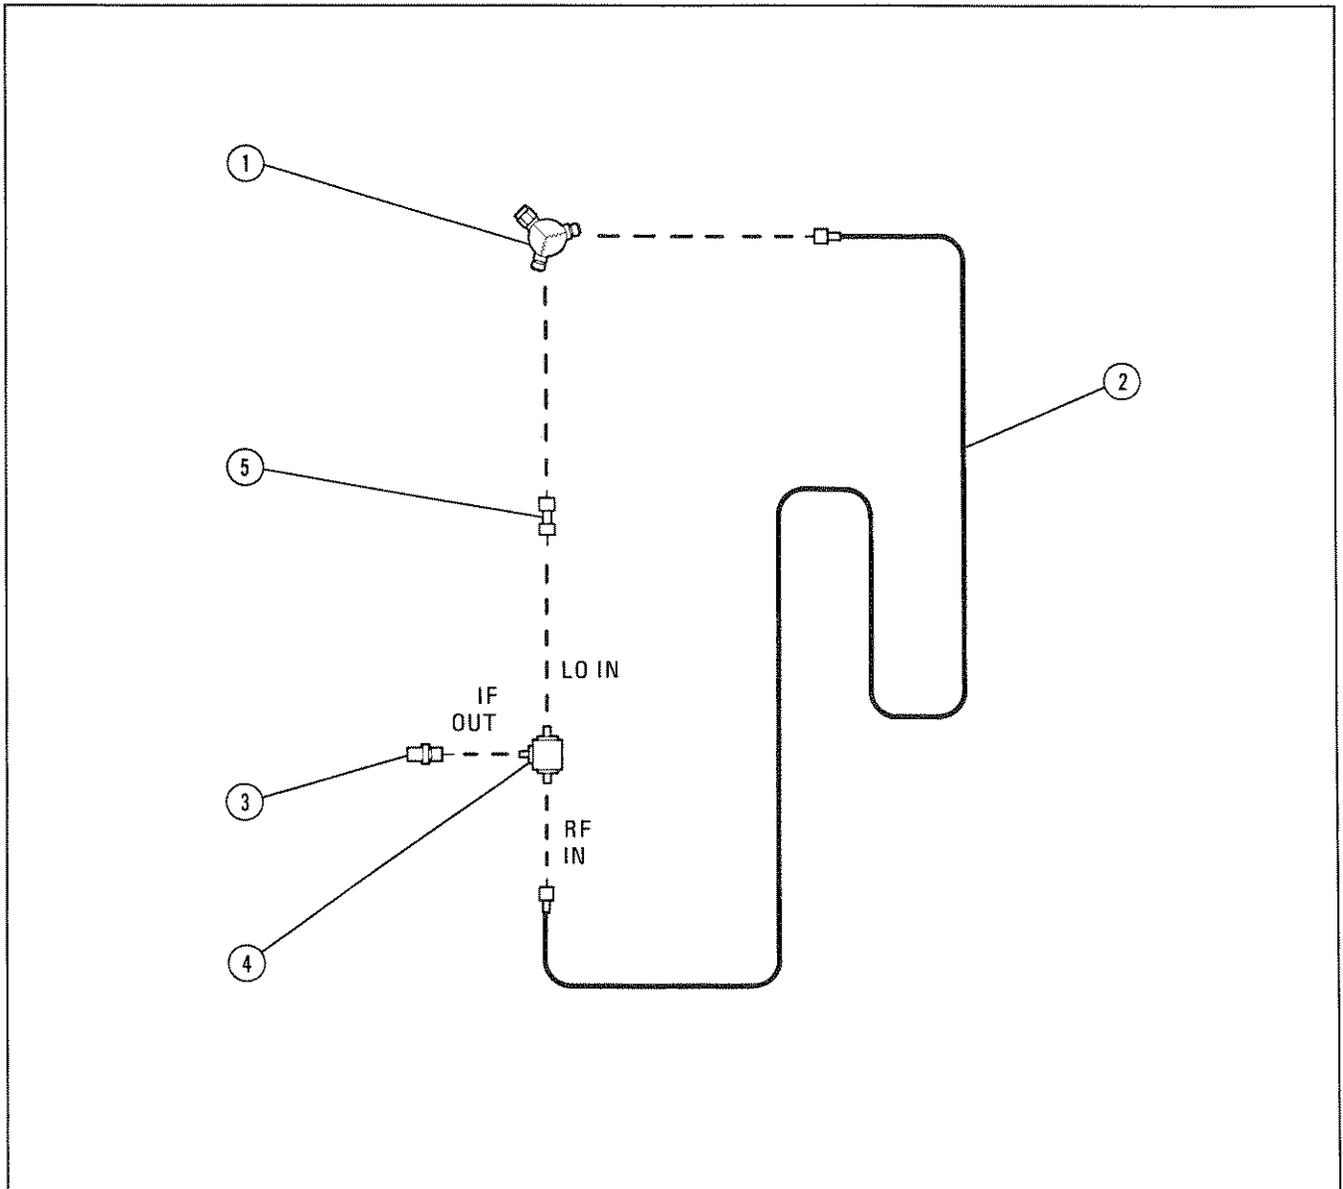

Item	Description	HP Part Number
1	Power Splitter: Weinschel Model 1579B	none
2	Delay Line: > 1 meter (3 feet) in length, SMA Male connectors	08503-20038
3	Adapter: BNC Female to SMA Male	1250-1200
4	Mixer: Double Balanced RHG Electronics Part No. DMS - 26 RHG Electronics Laboratories, Inc. Deer Park, NY 11729	
5	Adapter: SMA Male to SMA Male	1250-1159

Figure 1-3. Delay Line Discriminator

SECTION II INSTALLATION

2-1. INTRODUCTION

2-2. This section provides installation instructions for the Model 83592C RF Plug-In. This section also includes information about initial inspection, damage claims, preparation for use, packaging, storage, and shipment.

2-3. INITIAL INSPECTION

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1. Procedures for checking electrical performance are given in Section IV, Performance Tests, of this Operating and Service Manual. If the instrument combination does not pass the electrical Performance Tests, refer to Section V, Adjustments, of this manual. If, after the adjustments have been made, the instrument combination still fails to meet specifications, and a circuit malfunction is suspected, refer to troubleshooting procedures in Section VIII, Service, in this manual. If the instrument does not pass the above electrical tests, if the shipment contents are incomplete, or if there is mechanical damage or defect, notify the nearest Hewlett-Packard Office. If the shipping container is damaged, or if the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard Office. Keep the shipping materials for the carrier's inspection. The HP Office will arrange for repair or replacement without waiting for claim settlement.

2-5. PREPARATION FOR USE

2-6. Power Requirements

2-7. When the Model 83592C RF Plug-In is properly installed, it obtains all power through the rear panel interface connector from the Model 8350A/B Sweep Oscillator.

2-8. RF Plug-In Configuration Switch

2-9. The Model 83592C RF Plug-In has a configuration switch (A3S1) located on the A3 Digital Interface Board. This switch must be preset prior to RF Plug-In operation in the Model 8350A/B. The configuration switch is an 8-section multiple switch. Each separate switch section corresponds to a separate RF Plug-In function such as FM sensitivity selection, FM input coupling selection (direct coupled or crossover), RF power level at power on (maximum or off), and Option 002 Step Attenuator operation. Refer to Section III, Operation, in this manual for a complete description of the configuration switch and instructions on how to set the switches.

2-10. Interconnections

2-11. There are two rear panel interconnections from the Model 83592C RF Plug-In to the Model 8350A/B Sweep Oscillator. These are the RF Plug-In Interface connector (P2) and the Power Supply Interface connector (P1). A complete listing of pins and associated signals for these connectors is provided in Figures 2-1 and 2-2.

2-12. Mating Connectors

2-13. All of the externally mounted connectors on the Model 83592C are listed in Table 2-1. Opposite each connector is an industry identification, the HP part number of a mating connector, and the part number of an alternate source for the mating connector. For HP part numbers of the externally mounted connectors themselves, refer to Section VI, Replaceable Parts, of this manual.

2-14. Operating Environment

2-15. **Temperature.** The instrument may be operated in temperatures from 0°C to +55°C.

Table 2-1. Model 83592C Mating Connectors

HP 83592C Connector		Mating Connector	
Connector Name	Industry Identification	HP Part Number	Alternate Source
J1 RF OUTPUT	Type N (f)	1250-0882	Specialty Connector 25-P117-2
J2 EXT/MTR ALC INPUT	BNC (f)	1250-0256 Straight cable	Specialty Connector 25-P118-1
J3 AUX OUTPUT	Type N (f)	1250-0882 Straight cable	Specialty Connector 25-P117-2
J4 PULSE IN	BNC (f)	120-0256 Straight cable	Specialty Connector 25-P118-1
J5 1V/GHz	BNC (f)	1250-0256 Straight cable	Specialty Connector 25-P118-1

2-16. Humidity. The instrument may be operated in environments with humidity from 5% to 80% relative at +25°C to +40°C. However, the instrument should also be protected from temperature extremes which cause condensation within the instrument.

2-17. Altitude. The instrument may be operated at altitudes up to 4572 meters (15,000 feet).

2-18. Cooling. When the Model 83592C RF Plug-In is properly installed in the Model 8350A/B Sweep Oscillator, it obtains all of its cooling airflow by forced ventilation from the fan in the Model 8350A/B. A diagram showing the various cooling airflow paths within the Sweep Oscillator is given in Section II, Installation, of the Model 8350A/B Sweep Oscillator Operating and Service Manual. Ensure that all airflow passages in the Model 8350A/B and the Model 83592C are clear before installing the RF Plug-In in the Sweep Oscillator.

2-19. Installation Instructions

2-20. To operate as a completely functional Sweep Oscillator, the Model 83592C RF Plug-In must be installed in a Model 8350A/B Sweep Oscillator. To install the Model 83592C RF Plug-In in the Model 8350A/B Sweep Oscillator:

- a. Set the Model 8350A/B mainframe LINE switch to OFF.
- b. Remove all connectors and accessories from the front and rear panel connectors of

the Model 83592C to prevent them from being damaged.

- c. Position the RF Plug-In unit latching handle in the fully raised position. The latching handle should spring easily into the raised position and be held by spring tension.
- d. Ensure that the Model 8350A/B RF Plug-In channel is clear. Align the RF Plug-In in the channel and slide it carefully into place toward the rear of the channel. It should slide easily without binding.
- e. The drawer latch handle slot will engage with the locking pin just before the RF Plug-In is fully seated in position.
- f. Press the latch handle downward, while still pushing in on the RF Plug-In, until the drawer latch is fully closed and the front panel of the RF Plug-In is aligned with the Sweep Oscillator front panel.

2-21. STORAGE AND SHIPMENT

2-22. Environment

2-23. The instrument may be stored or shipped in environments within the following limits:

- Temperature -40°C to +75°C
- Humidity 5% to 95% relative at 0°
to +40°C
- Altitude Up to 15240 meters
(approximately 50,000 feet)

2-24. The instrument should also be protected from temperature extremes which may cause condensation in the instrument.

2-25. Packaging

2-26. Original Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. A complete diagram and listing of packaging materials used for the Model 83592C is shown in Figure 2-3. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number (located on the rear panel serial plate). Mark the container FRAGILE to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-27. Other Packaging. The following general instructions should be used for repackaging with commercially available packaging materials:

- a. Wrap the instrument in heavy paper or plastic. If shipping to a Hewlett-Packard Office or Service Center, attach a tag indicating the type of service required, return address, model number, and full serial number.
- b. Use a strong shipping container.
- c. Use enough shock-absorbing material around all sides of the instrument to provide a firm cushion and to prevent movement inside the container. Protect the control panel with cardboard.
- d. Seal the shipping container securely.
- e. Mark the shipping container FRAGILE to ensure careful handling.
- f. In any correspondence, refer to the instrument by model number and full serial number.

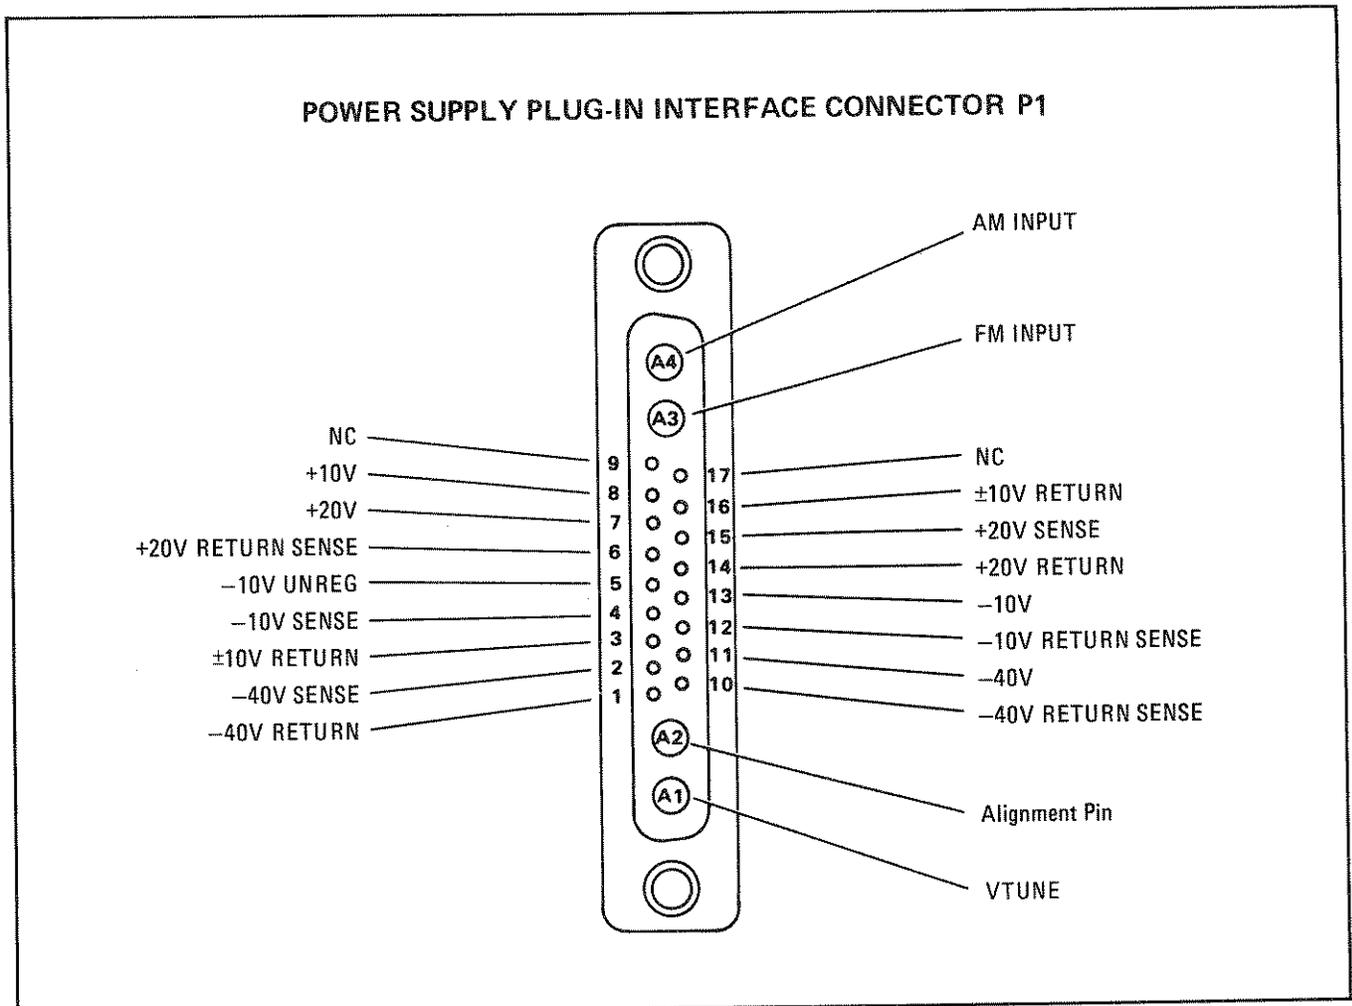


Figure 2-1. Interface Signals on Connector P1


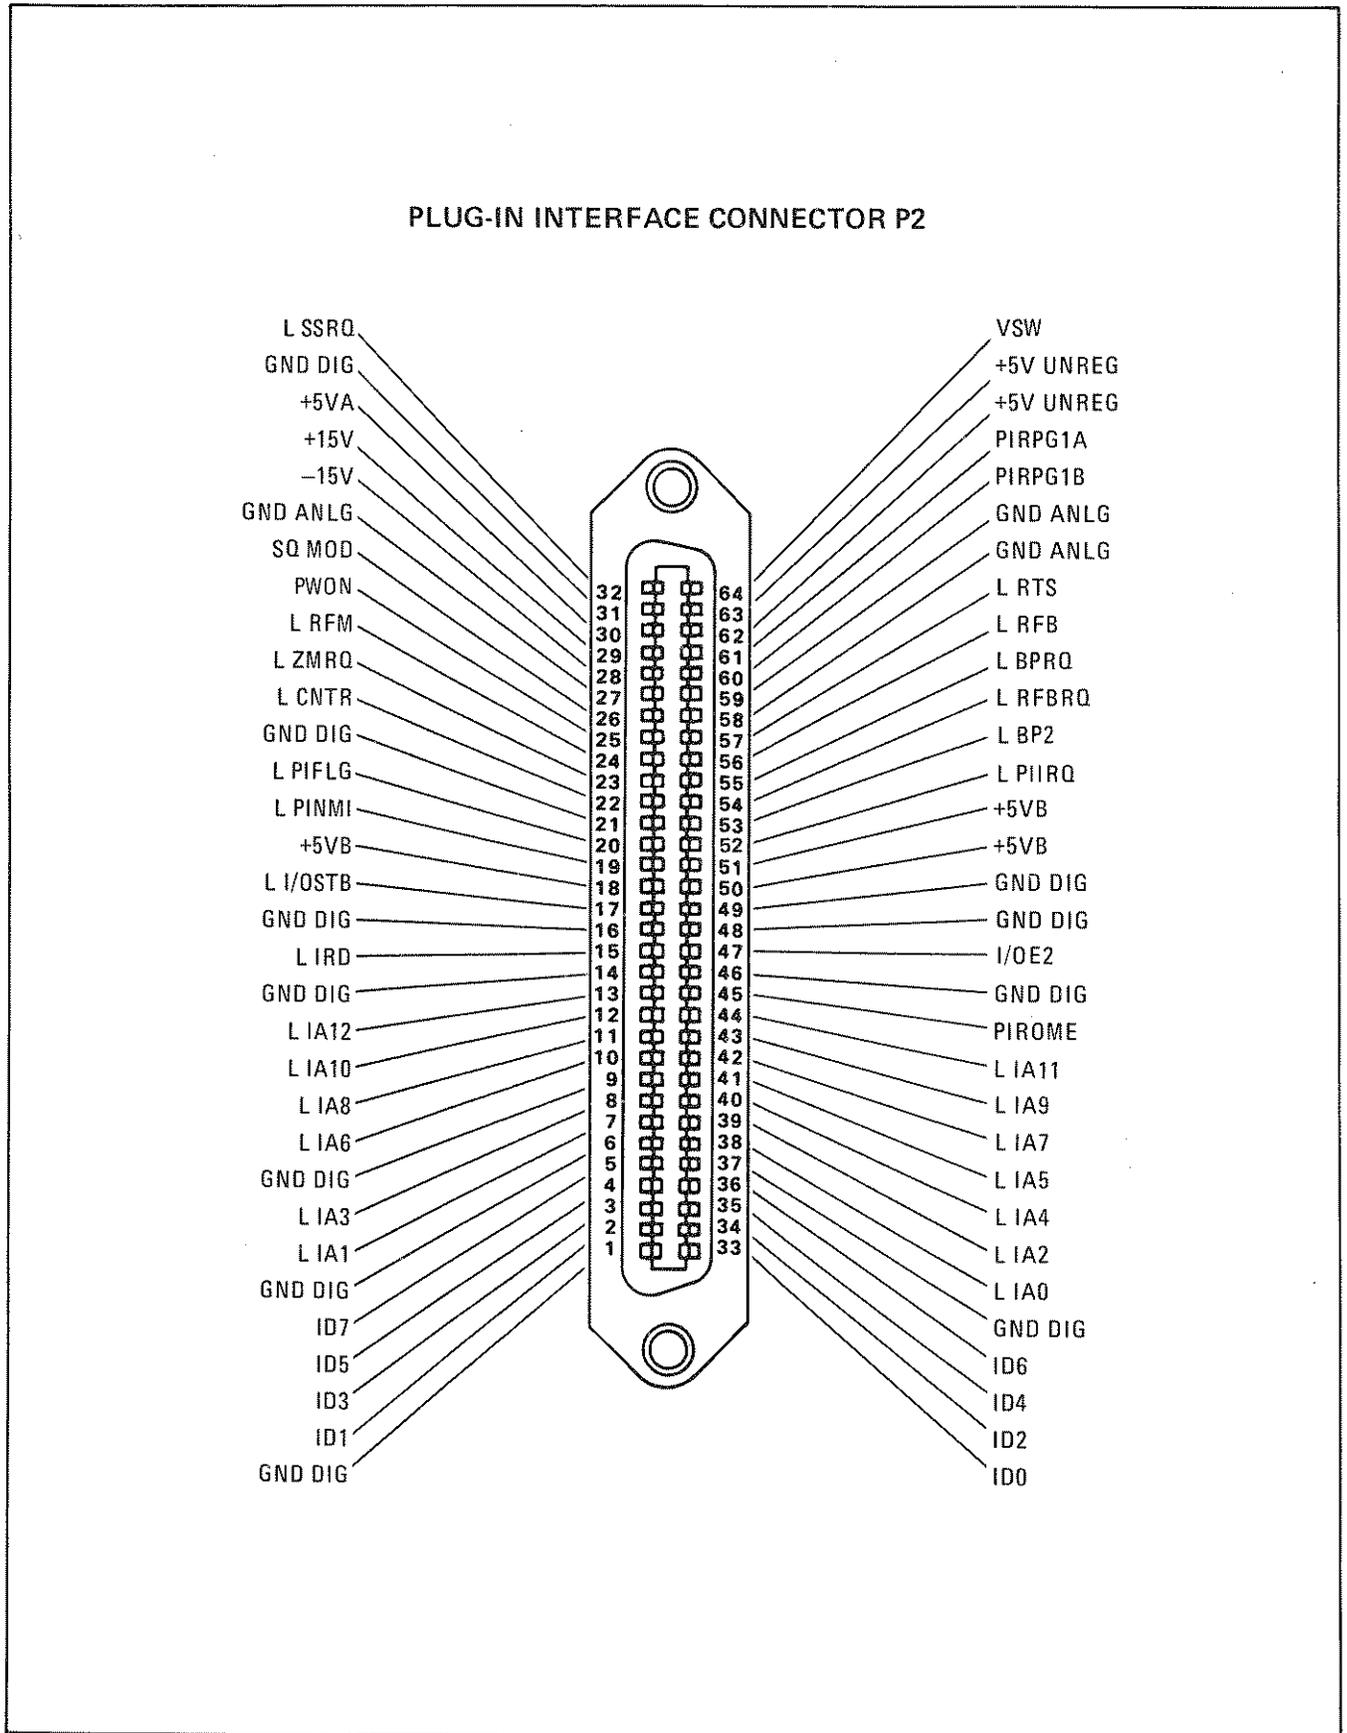


Figure 2-2. Interface Signals on Connector P2

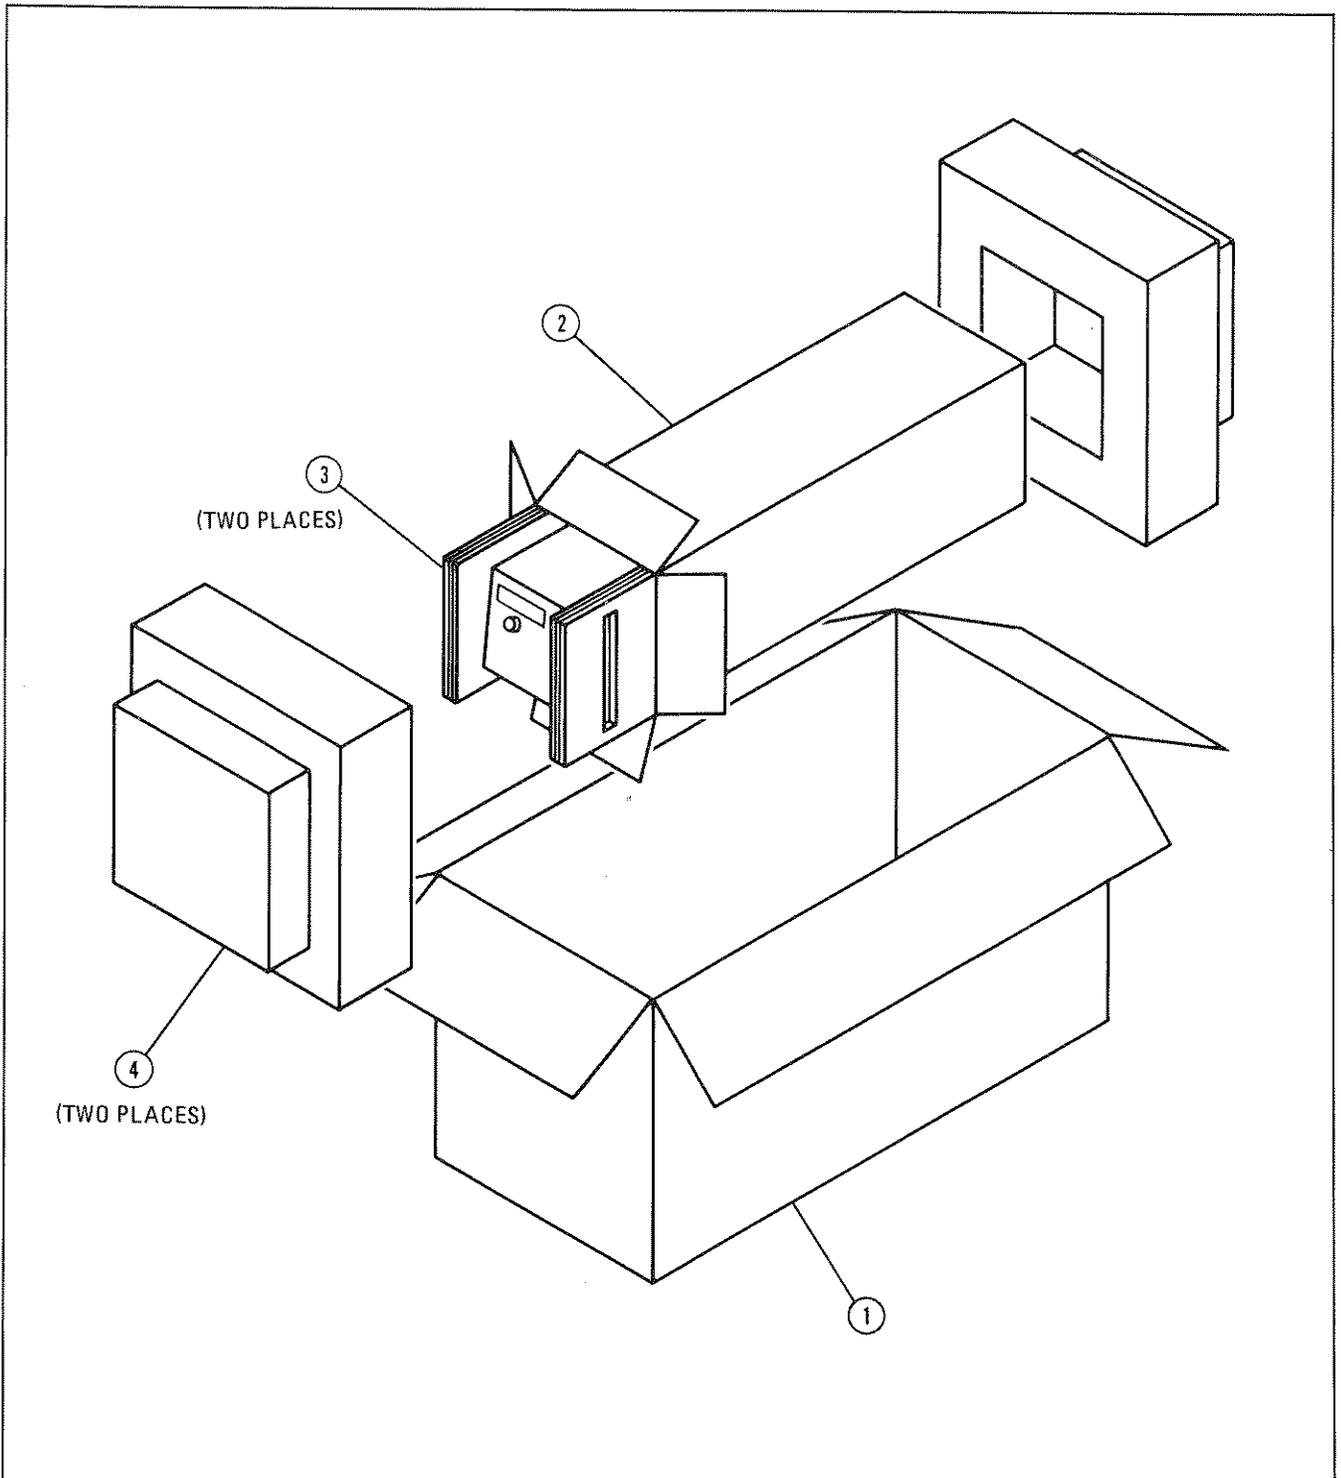

Item	Quantity	HP Part Number	CD	Description
1	1	9211-4781	0	Outer Carton
2	1	9211-4782	1	Inner Carton
3	2	83592-80016	1	Side Pads — corrugated cardboard
4	2	9220-3406	3	Foam Pads
	1	9222-0943	1	Anti-static Bag — to cover instrument

Figure 2-3. Packaging for Shipment Using Factory Packaging Materials

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This section is divided into four major parts. Operating Characteristics explains the bandswitching and frequency resolution characteristics in CW and swept modes. Front and rear panel Panel Features are shown with illustrated descriptions. Operating Instructions provide a front panel frequency calibration procedure, configuration switch setting instructions, and crystal detector and power meter leveling instructions. Operator's Maintenance includes information on the Plug-In error codes, fuses, and service tags.

3-3. OPERATING CHARACTERISTICS

3-4. Bandswitching and Resolution

3-5. The following paragraphs describe the bandswitching and frequency resolution characteristics of the Model 83592C RF Plug-In.

3-6. The Model 83592C 10 MHz to 20 GHz RF output is provided in four bands. When sweeping a range of frequencies larger than a single band, the switching between these bands is done automatically. Careful selection of sweep frequencies may avoid problems associated with bandswitching such as harmonics, sweep time, stability, or switching discontinuities. Figure 3-1 illustrates the bandswitching points in the sequential and single band sweep modes.

3-7. The mainframe controls both input resolution (resolution of tuning voltage into parts by the DAC) and displayed resolution (number of digits shown on the frequency display). For further information refer to the appropriate mainframe manual.

3-8. PANEL FEATURES

3-9. Front and rear panel features are described in Figures 3-2 and 3-3, respectively. Numbered callouts on the features described match numbered descriptions below each figure.

3-10. OPERATORS CHECKS

3-11. The Operator's Checks portion (Local and Remote) of the Model 8350A/B Sweep Oscillator manual provides a quick evaluation of both Model 8350A/B and Model 83592C main functions. Error codes 50 to 99, displayed on the Model 8350A/B FREQUENCY display, are reserved to indicate Plug-In related problems. The Model 8350A/B Local Check covers the Sweep Oscillator and RF Plug-In. If the correct indications are not obtained, trouble may be in either of the units. If the RF Plug-In is suspected, follow the troubleshooting information in Section VIII, Service, in this manual, to isolate the problem.

3-12. OPERATING INSTRUCTIONS

3-13. Front Panel FREQ CAL

NOTE

The Model 83592C RF Plug-In may not meet the frequency accuracy specifications unless the front panel FREQ CAL (frequency calibration) procedure is performed.

3-14. The front panel FREQ CAL procedure, shown in Figure 3-4, should be performed after the instrument has warmed up for at least one hour. This procedure calibrates the RF output frequency for Band 0 with an external frequency counter.

3-15. Peaking RF Output Power

3-16. Front panel PEAK and FILTER PEAK are controls used to optimize output power by adjusting tracking between the YTF, YTM, and YTO. These controls allow optimization at frequencies of interest, or as compensation for mistracking due to aging. FILTER PEAK controls YTF/YTM to YTO tracking. FILTER PEAK should be adjusted first. The front panel PEAK function is accessed by pressing [SHIFT] [POWER LEVEL]. In order to monitor the effect of the Peaking function on the RF output, the Model 83592C must be set for an unlevelled


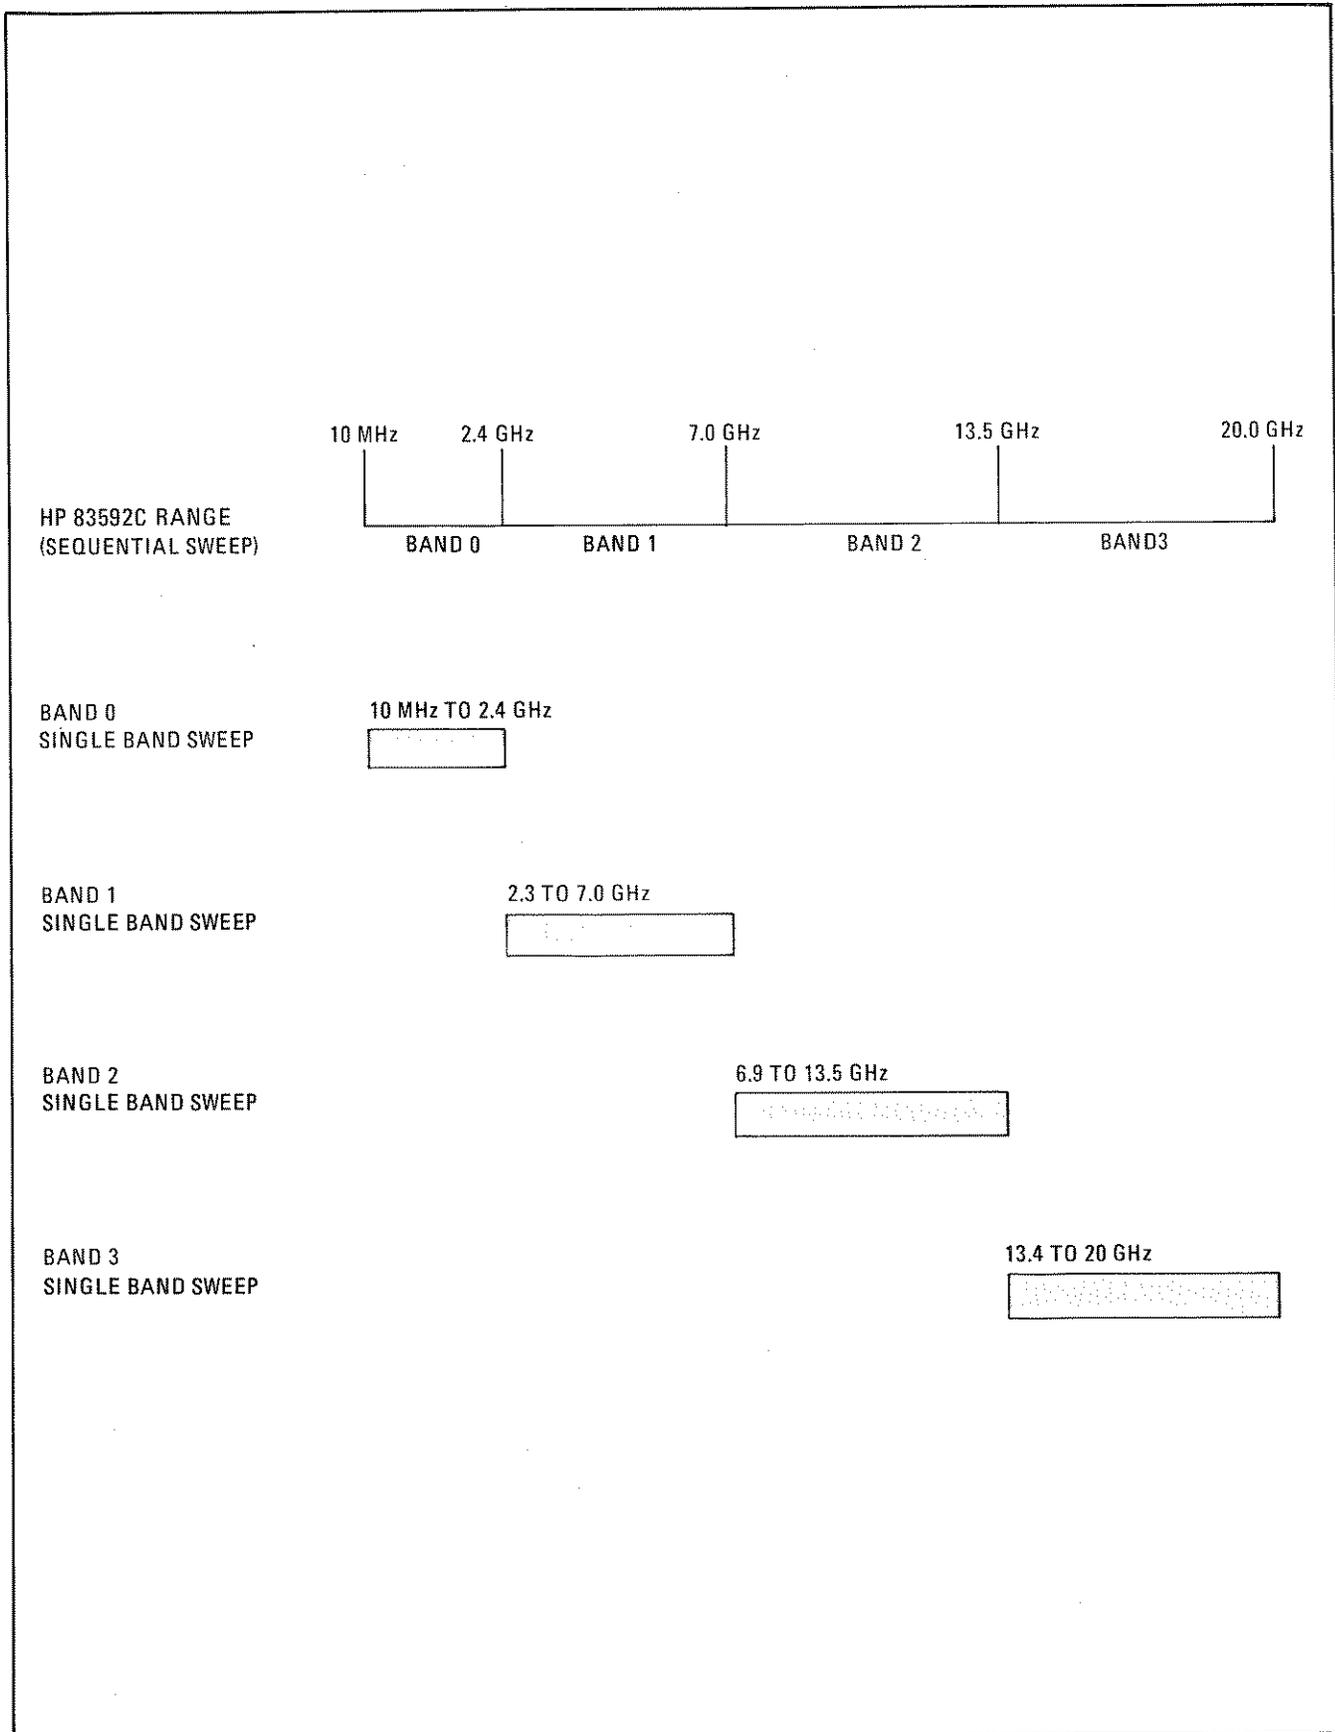



Figure 3-1. Bandswitching in Sequential and Single Band Sweep Modes

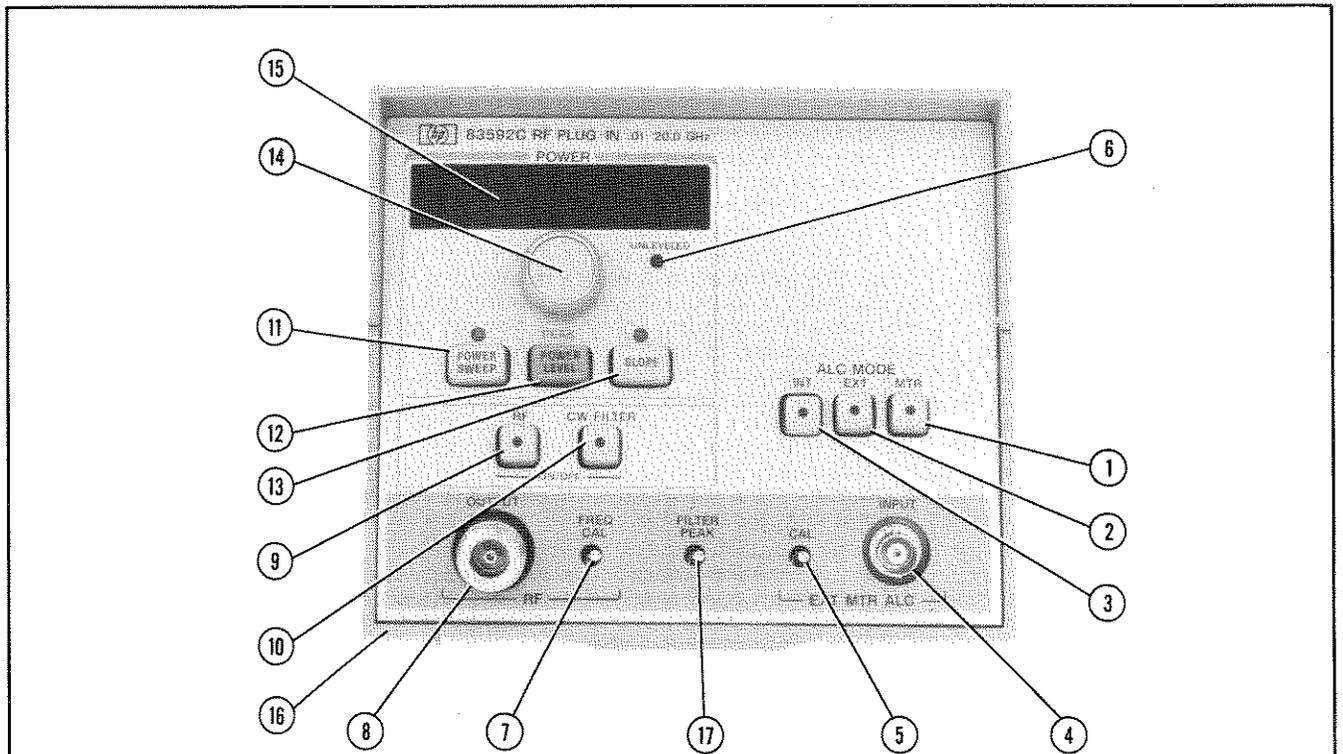

FRONT PANEL FEATURES

1. Power meter automatic leveling control selection (HP 432 only).
2. External (crystal detector) automatic leveling control selection (negative crystal output).
3. Internal leveling control selection.
4. Connector (BNC) for power meter or external crystal leveling inputs (rear panel on Option 004).
5. Power level CAL adjust, for setting external (MTR or EXT) ALC.
6. UNLEVELED lamp lights if output power is unlevelled.
7. Fine frequency adjust used for front panel frequency calibration.
8. Type N(f) 50-ohm RF OUTPUT connector (rear panel on Option 004).
9. RF on-off key. Used for zeroing a power meter or referencing an X-Y recorder.
10. CW FILTER enables an oscillator tune voltage filter in CW mode.
11. POWER SWEEP allows setting an increase in power per sweep (dB/SWP). **[SHIFT] [POWER SWEEP]** (Option 002) latches the Step Attenuator at its current setting. Power Level changes are controlled by the ALC loop.
12. POWER LEVEL allows setting of output power for all ALC modes (may be calibrated for external leveling). PEAK allows peaking of RF output power (selected when **[SHIFT] [POWER LEVEL]** is pressed).
13. SLOPE allows setting of the frequency slope compensation in dB/GHz (for lossy devices). **[SHIFT] [SLOPE]** (Option 002) latches the ALC loop at its current reference level. Power level changes are controlled by the Step Attenuator (5 dB steps).
14. Power control knob for controlling power sweep, power level, peak, or slope.
15. Plug-In display provides readout of selected power mode in dBm, dB/GHz, or dB/SWP to a tenth of a dB/dBm.
16. Plug-In latch handle is used to remove, install, and latch the RF Plug-In in the Sweep Oscillator.
17. FILTER PEAK allows peaking of RF power (use before PEAK).


Figure 3-2. Front Panel Features

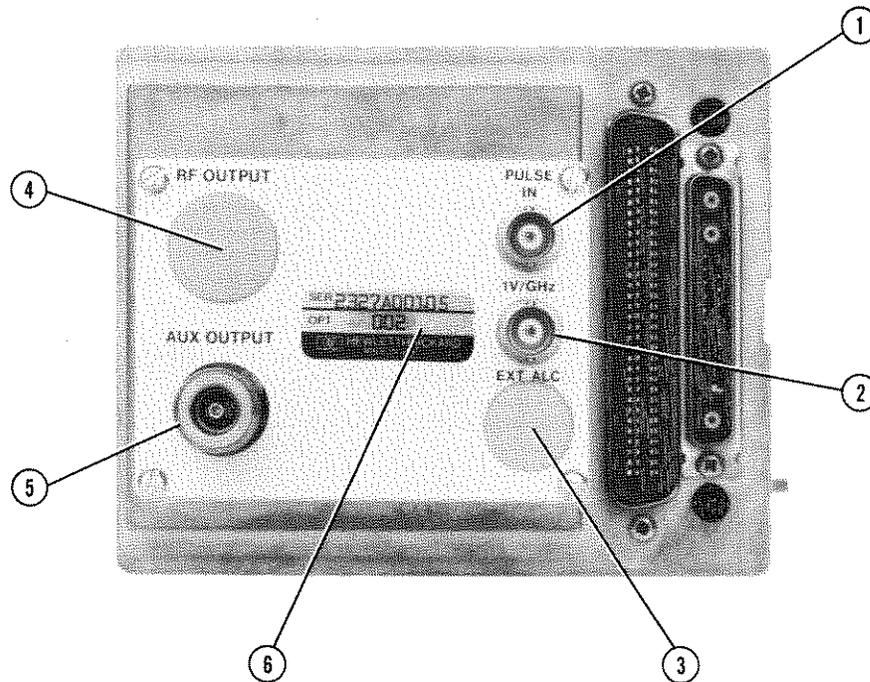

REAR PANEL FEATURES

1. PULSE IN connector is used to input external pulse or squarewave modulation.
2. 1V/GHz connector provides a frequency reference output of approximately 1 volt DC per GHz (to 18 GHz only).
3. EXT ALC connector replaces front panel EXT ALC connector on Option 004 Plug-Ins.
4. RF OUTPUT connector replaces front panel RF output connector in Option 004 Plug-Ins.
5. AUX OUTPUT connector provides 2.3 to 7.0 GHz fundamental oscillator output at approximately 0 dBm.
6. Serial Number plate has a ten digit serial number (used in any correspondence concerning Plug-In) and Option number if applicable.

Figure 3-3. Rear Panel Features

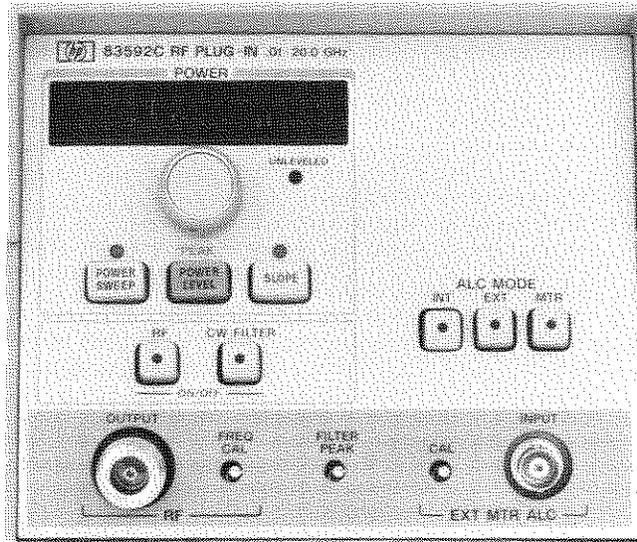

FREQ CAL PROCEDURE

1. Press Model 8350A/B [INSTR PRESET] [CW] [5] [0] [MHz].
2. Connect external frequency counter through a 10 dB attenuator to the RF OUTPUT connector.
3. Adjust FREQ CAL control for a frequency counter indication of 50.0 MHz.

ALTERNATE FREQ CAL PROCEDURE

NOTE

This alternate FREQ CAL procedure is not as accurate as using an external counter, but normally calibrates the Band 0 frequency accuracy within specifications.

1. Press [INSTR PRESET] [CW] [0] [MHz].
2. Adjust FREQ CAL control through its range and note the portion of its range that the UNLEVELED light is turned on. Set the FREQ CAL control to the center of this range.

Figure 3-4. Front Panel FREQ CAL Procedure

power condition. This can be accomplished by setting the ALC Mode to External (without an external detector) or increasing the Power setting until the RF output is unlevelled. With the Peak function selected and an unlevelled RF output, the POWER control should be adjusted to maximize the RF output power over the 2.4 to 20 GHz frequency range.

3-17. Internal Leveling

3-18. The most convenient method of RF output leveling is internal leveling. A portion of the RF output is coupled out of an internal directional detector, producing a DC voltage proportional to the RF output signal. This detected DC voltage is applied to the automatic leveling control circuit (ALC).

3-19. External Crystal Detector Leveling

3-20. RF output power may also be leveled externally using a power splitter (or external directional coupler) and a negative output crystal detector. This leveling system uses a power splitter to sample a portion of the RF output signal with a crystal detector to produce a DC voltage proportional to the RF output power level. The detector output voltage is compared with an internal reference voltage, and the difference voltage is applied, as modulator drive, to a PIN Modulator which changes the output power level to keep a constant RF output power level. A directional coupler may be used instead of a power splitter to sample the RF signal for the leveling loop. Directional couplers are usually narrow band devices, whereas the power splitter has a flatter frequency response over a wide frequency range. The advantage of a directional coupler is that it does not have as great a coupled loss as the 6dB loss encountered with the power splitter, therefore a higher maximum leveled output power may be obtained. Figure 3-5 illustrates a typical crystal detector leveling setup.

3-21. External Power Meter Leveling

3-22. RF output power may also be leveled with a power meter and power splitter (or directional coupler) as shown in Figure 3-6. The sweep time is limited to greater than 100 seconds when this leveling method is used. A sample of the RF output signal is routed to a power meter which produces a DC output voltage proportional to the RF input signal level. This DC


voltage is applied to the Model 83592C ALC circuits and compared with an internal reference voltage. A difference voltage is produced and amplified by the ALC amplifier before being applied, as modulator drive, to a PIN Modulator.

3-23. External FM

3-24. The Model 83592C RF output signal can be frequency modulated using an external modulating signal applied to the Model 8350A/B rear panel FM INPUT connector. The external FM function provides a means of obtaining an output frequency that varies under the control of an external modulating signal. A positive-going voltage at the FM INPUT causes output frequency to decrease, while a negative-going voltage causes output frequency to increase. The sensitivity and coupling of the modulating signal may be set via configuration switch A3S1. Figure 3-7 lists the available configuration switch settings override Model 8350A/B Sweep Oscillator non-volatile memory settings at Instrument Preset.

3-25. External Amplitude Modulation

3-26. Pulse Modulation (PULSE IN Connector on Plug-In). The PULSE IN connector provides pulsed or squarewave modulation, where the RF output is switched on and off. This input provides an on/off power ratio of greater than 30 dB below specified maximum leveled power. The PULSE IN input is normally at a TTL HIGH (approximately + volts DC). When a TTL LOW signal (approximately 0 volts DC) is applied, the RF output is turned off. To get the best pulse modulation performance, the RF output power should be set at +20 dBm. With this power setting, a pulse repetition rate of up to 1 MHz is achievable in the 0.01 to 7.0 GHz frequency bands. With leveled power in this frequency range, pulse repetition rates may be up to 100 kHz. In the 7.0 to 20 GHz frequency bands, RF power may be squarewave modulated at repetition rates up to 30 kHz at any power output setting. The input impedance for TTL level signals is approximately 500 ohms. If the PULSE IN circuit is driven beyond TTL levels, the input impedance is reduced to approximately 200 ohms due to the diode clamping action. See the specifications and supplemental characteristics in Section I for more details on the modulation characteristics when using this input.

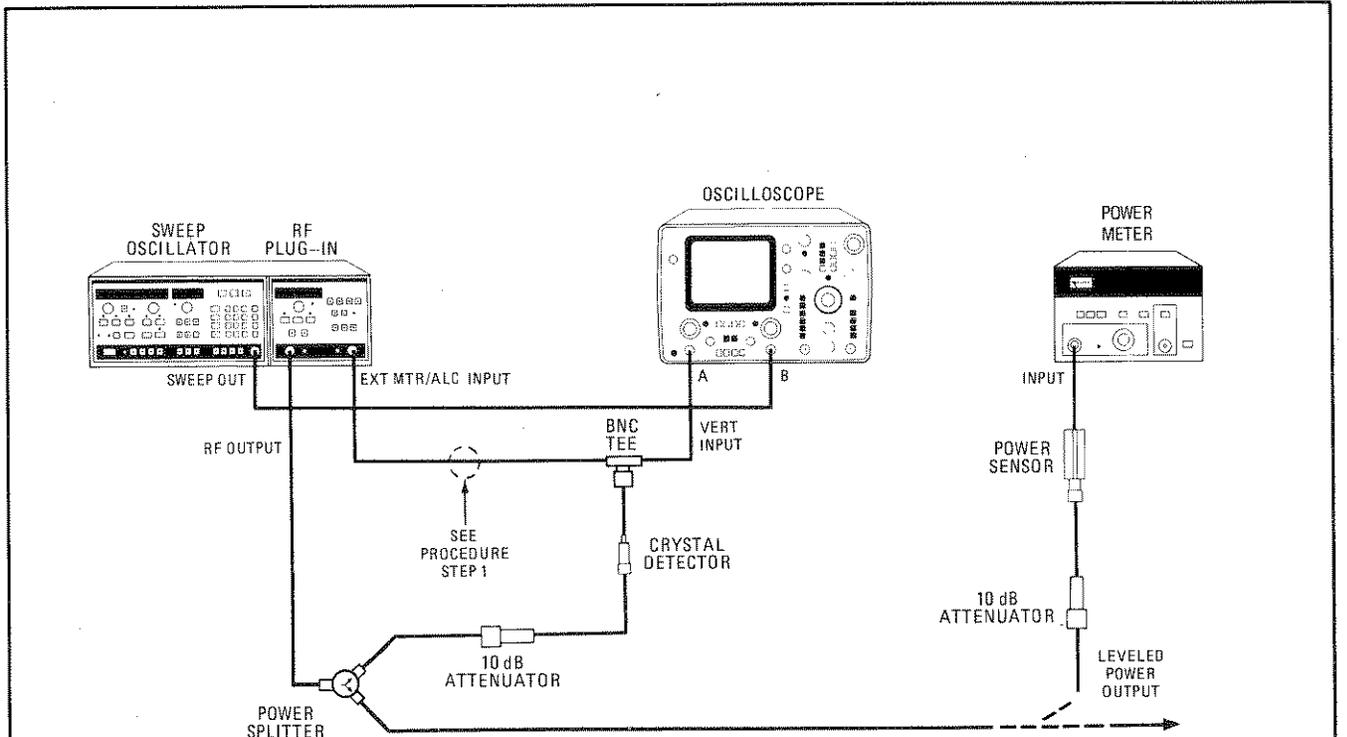

EXTERNAL CRYSTAL DETECTOR LEVELING

EQUIPMENT:

Sweep Oscillator.....	HP 8350A/B
RF Plug-In	HP 83592C
Oscilloscope.....	HP 1740A
Power Meter	HP 436A
Power Sensor.....	HP 8485A
Crystal Detector	HP 8473C
Power Splitter.....	Weinschel Model 1579
BNC Tee	HP 1250-0781


PROCEDURE:

NOTE

Crystal output signal must be between -10 mVdc and -200 mVdc.

1. Connect equipment as shown in test setup.

Figure 3-5. External Crystal Detector Leveling (1 of 2)

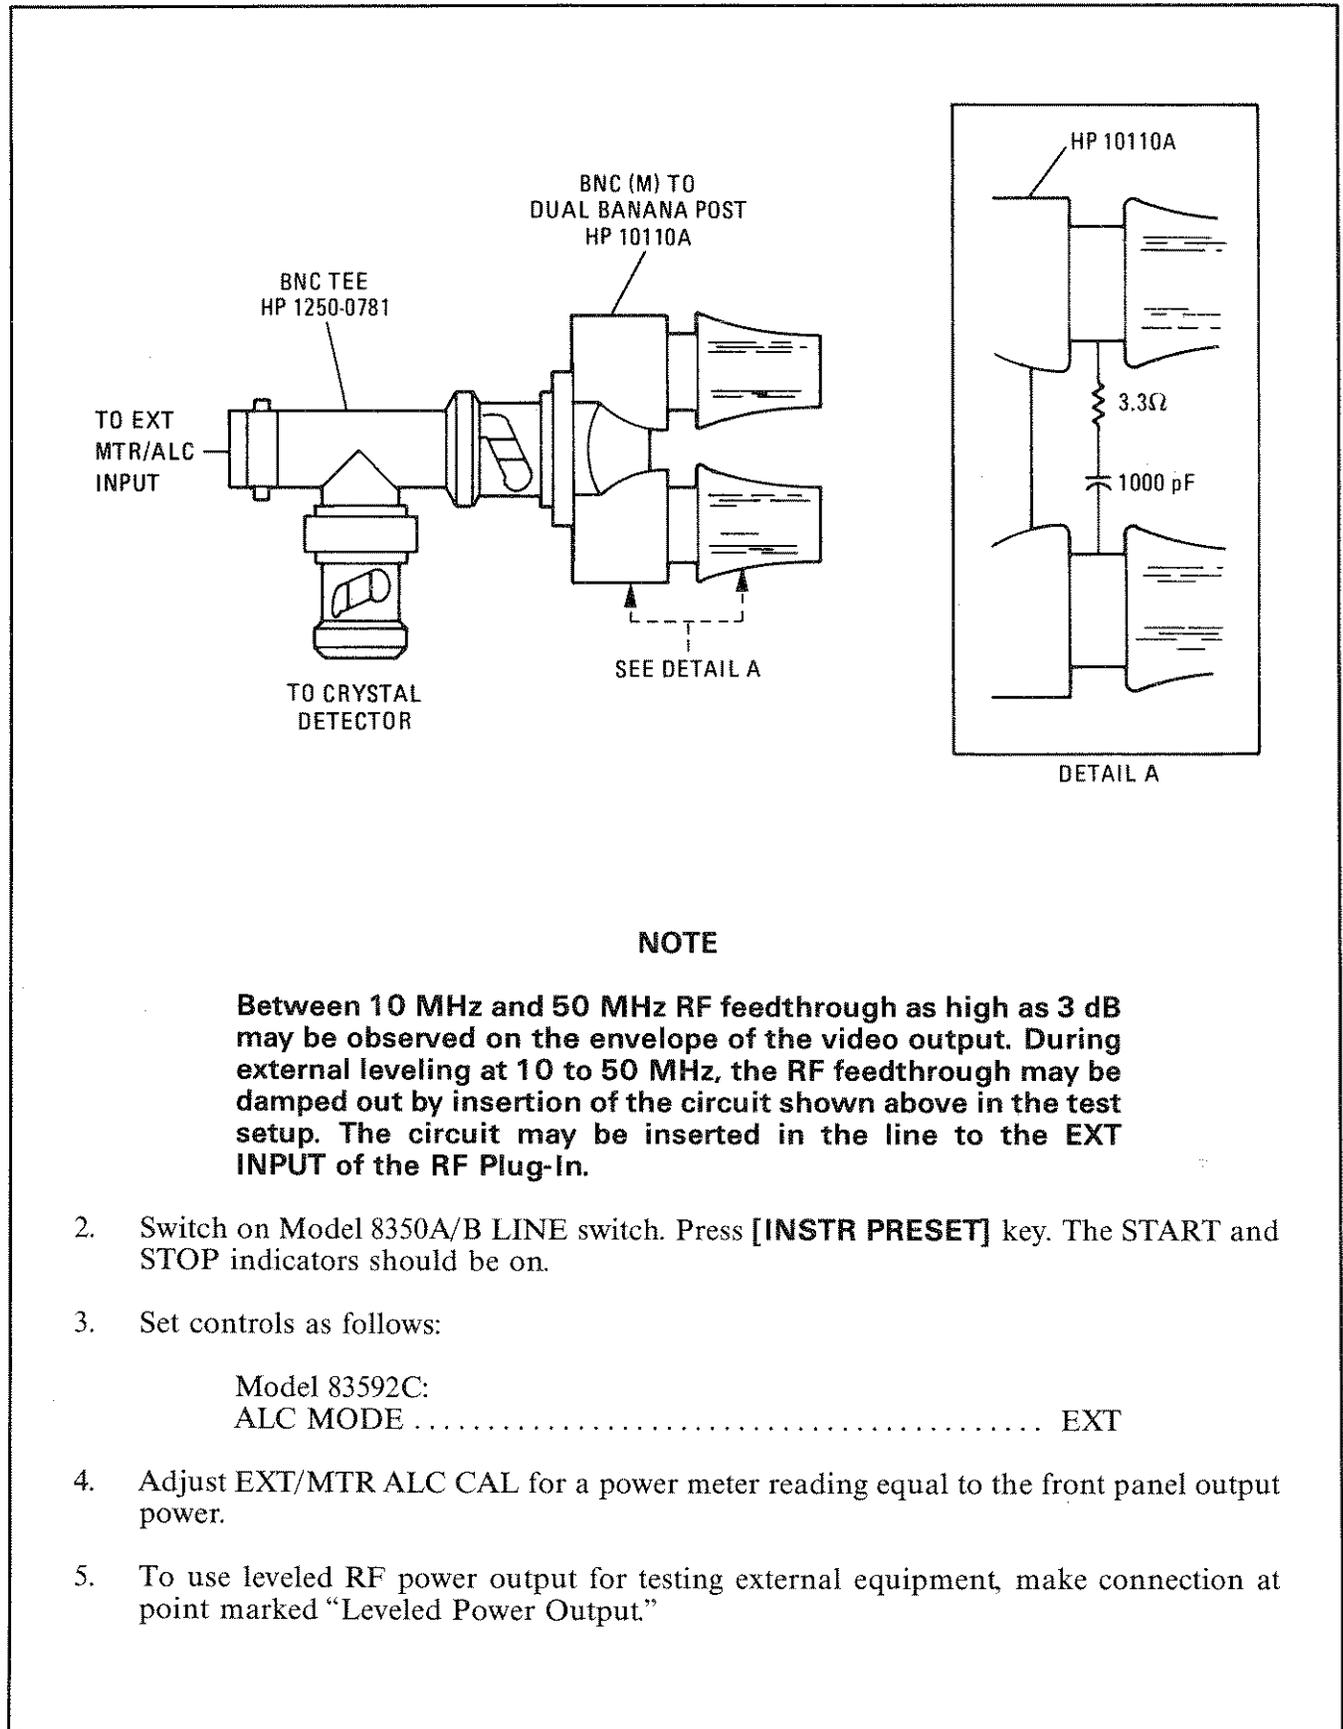


NOTE

Between 10 MHz and 50 MHz RF feedthrough as high as 3 dB may be observed on the envelope of the video output. During external leveling at 10 to 50 MHz, the RF feedthrough may be damped out by insertion of the circuit shown above in the test setup. The circuit may be inserted in the line to the EXT INPUT of the RF Plug-In.

2. Switch on Model 8350A/B LINE switch. Press [INSTR PRESET] key. The START and STOP indicators should be on.
3. Set controls as follows:
 Model 83592C:
 ALC MODE EXT
4. Adjust EXT/MTR ALC CAL for a power meter reading equal to the front panel output power.
5. To use leveled RF power output for testing external equipment, make connection at point marked "Leveled Power Output."

Figure 3-5. External Crystal Detector Leveling (2 of 2)

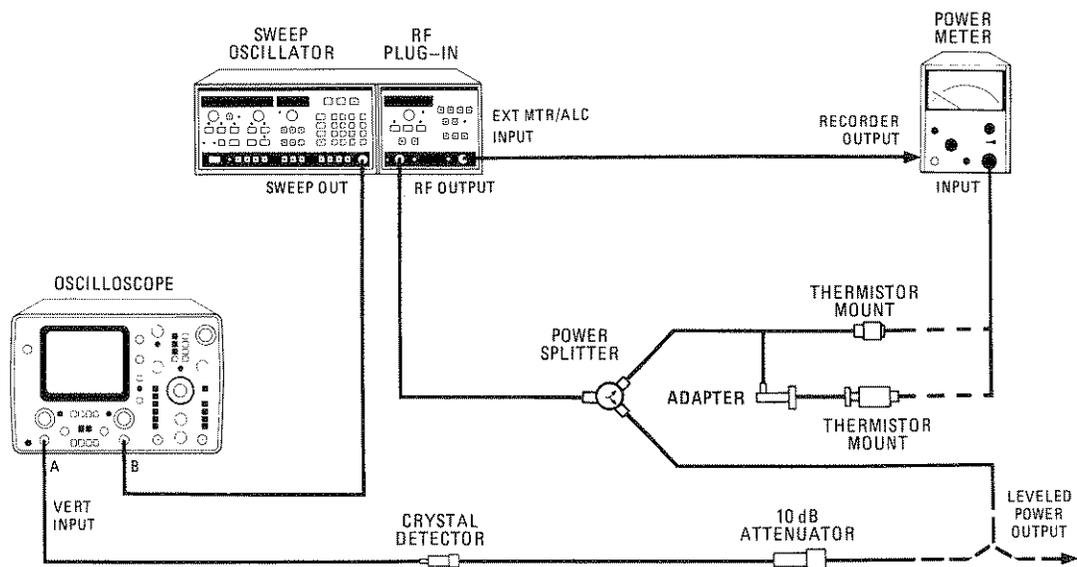

**EXTERNAL POWER METER LEVELING
EQUIPMENT**

Sweep Oscillator.....	HP 8350A/B
RF Plug-In.....	HP 83592C
Power Meter.....	HP 432A
Thermistor Mount (0.01 to 18.0 GHz).....	HP 8478A
Thermistor Mount (18.0 to 20.0 GHz).....	HP K486A
Oscilloscope.....	HP 1740A
Crystal Detector.....	HP 8473C
10 dB Attenuator.....	HP 8493C
Power Splitter.....	Weinschel Model 1579
Adapter.....	HP K281C

NOTE

For power meter leveling, sweep rate should be 100 sec/sweep to ensure proper leveling due to the slow response of the thermistor mount. The HP 435 and HP 436 power meters will not power meter level this Plug-In. Only an HP 432 may be used.

PROCEDURE:

1. Connect equipment as shown in test setup. Use the HP 8478A thermistor mount for output frequencies between 0.01 and 18.0 GHz or the HP K486A thermistor mount and HP K281C adapter for frequencies between 18.0 and 20 GHz.
2. Set LINE switch to turn on Sweep Oscillator. The START and STOP indicators should light, indicating the START/STOP mode is selected.

Figure 3-6. External Power Meter Leveling (1 of 2)

3. Set controls as follows:

Model 8350A/B: Press [**INSTR PRESET**]

SWEEP TIME 100 sec
START/STOP FREQUENCY As required within thermistor
mount limits


Model 83592C: Set power to maximum specified.

ALC MODE MTR

4. Select +10 dBm range on power meter.
5. Adjust Model 83592C EXT/MTR ALC CAL for a +7 dBm reading on the HP 432A power meter. Press Model 8350A/B SWEEP TRIGGER [**SINGLE**] key twice to set single sweep mode and start a sweep.
6. To use level RF power output for testing external equipment, make connection at point in test setup marked "Leveled Power Output."

Figure 3-6. External Power Meter Leveling (2 of 2)

PHASELOCKING USING THE HP 5344S SOURCE SYNCHRONIZER

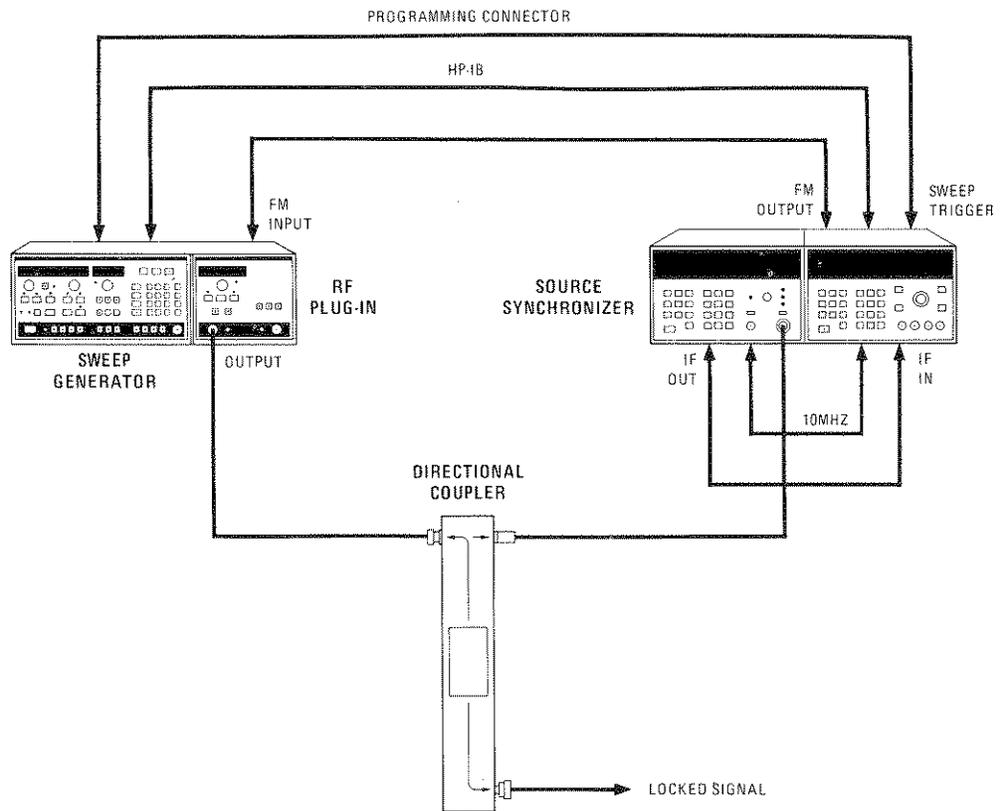

EQUIPMENT:

Sweep Oscillator.....	HP 8350A/B
RF Plug-In.....	HP 83592C
Source Synchronizer.....	HP 5344S Opt. 043
Directional Coupler (2 to 18 GHz).....	HP 11691D

DESCRIPTION:

The required CW frequency for the Model 83592C is automatically tuned and locked by the HP 5344S, with the HP 5344S acting as an HP-IB controller. No manual tuning is required. The Model 8350A/B Sweep Oscillator and the HP 5344S Source Synchronizer must be set to the same HP-IB address.

Figure 3-7. Phase-Locking Using the HP 5344S Source Synchronizer (1 of 2)

NOTE

This setup can be used for phase-locking from 2.0 to 18.0 GHz, the range of the HP 11691D Directional Coupler. For phase-locking without the use of a broadband coupling device, the Model 83592C rear-panel AUX OUTPUT fundamental oscillator frequency signal can be used.

PROCEDURE:

1. Set the Model 83592C Configuration Switch (A3S1) for an FM Sensitivity of -6 MHz/V, Cross-Over Coupled FM, and front panel RF OUTPUT Phaselock (See Figure 3-8 for specific settings of A3S1).
2. Connect the equipment as shown in the test setup. Connect the HP-IB connector of the Model 8350A/B to the HP-IB connector of the HP 5344A section of the HP 5344S.
3. Set the HP 5344A HP-IB address to 19 (equal to the Model 8350A/B) by setting the bottom five switches to 10011.
4. Set the HP 5344A to the System Controller mode by setting the top HP-IB switch to the left (SYS CONT).
5. On the Model 8350A/B press [**INSTR PRESET**].
6. On the Model 83592C press [**CW FILTER**] to turn off the CW filter (pushbutton LED turned off). Set the Model 83592C Power Level between 0 and +5 dBm.
7. Set the Model 8350A/B HP-IB address to 19 if it is not already. Press [**SHIFT**] [**LCL**] [**0**] [**GHz s**]. The HP-IB address will be shown on the Model 8350A/B FREQUENCY/TIME display.
8. On the HP 5344A, make sure that MANUAL LOCK and AUTO LOCK are both set to off (pushbutton LEDs off). Verify that the front panel CONT lamp is on.
9. Press the HP 5344A [**MODE**] key until the CW annunciator lights. The MODE key will scroll through the four modes of operation. If you pass CW, continue pressing MODE until you return to CW.
10. On the HP 5344A, enter the frequency required for the Model 83592C RF output signal.
11. Press the HP 5344A [**AUTO LOCK**] key. The Model 83592C RF output signal will now be programmed and locked to the specified CW frequency.

Figure 3-7. Phase-Locking Using the HP 5344S Source Synchronizer (2 of 2)

3-27. Amplitude Modulation (AM INPUT Connector on Model 8350A/B). The AM INPUT provides linear amplitude changes (up to approximately 15 dB) proportional to the modulating input voltage. It is limited to a frequency response of about 100 kHz. For maximum depth of modulation (i.e. maximum modulation index), the RF power level should be set to the middle of the control range (e.g. +2.5 dBm for a Plug-In with calibrated power control from -5 to +10 dBm). For Plug-Ins equipped with Option 002 (55 dB step attenuator), the middle of the attenuator range would be selected. The center of the power control range may be selected with the front panel power control or by applying a DC bias voltage on the external modulating signal. A positive (+) DC voltage into the AM INPUT causes a decrease in RF output power; a negative (-) DC voltage causes an increase in RF output power.

3-28. RF Power Control

3-29. The RF power set at power-up (during Instrument Preset) may be either 4 dBm or RF power OFF as selected by the configuration switch (A3S1). Refer to Figure 3-8 for this setting. Configuration switch settings relating to the specific model Plug-In used and Option 002 Step Attenuator equipped instruments must be set prior to operation. Configuration switch number 7 is set at the factory and should not be changed.

3-30. Option 002 Step Attenuator

3-31. With Option 002 installed, the RF output power may be continuously controlled from maximum leveled output power down to -60 dBm. When the selected POWER setting goes below -5 dBm, the step attenuator increments as required in 5 dB steps to a maximum attenuation of 55 dB. Within the individual 5 dB steps of the attenuator, the ALC loop adjusts the power output to the power level programmed by the front panel POWER control. Pressing **[SHIFT] [POWER SWEEP]** allows control of power within the ALC range without changing attenuator settings. The display in the **[SHIFT] [POWER SWEEP]** mode disregards attenuator settings and only displays the ALC setting. Pressing **[SHIFT] [SLOPE]** allows control of attenuator steps without affecting ALC setting. In this mode the attenuator setting is displayed.


3-32. Alternate Sweep Mode

3-33. If the alternate sweep mode is used and the Model 83592C changes frequency bands (e.g. Band 1 to Band 3) between each sweep, the minimum sweep time recommended is 100 milliseconds. This allows enough time for the bandswitch operation and settling time for the fundamental oscillator for the next sweep.

3-34. If the Option 002 attenuator is installed, and alternate sweep mode is selected, a slow sweep default condition of 1 second/sweep may occur. This default condition only occurs when the POWER settings of the two alternate sweeps require the attenuator to switch after each sweep. The attenuator is prevented from switching faster than one step per second to prevent damage to the attenuator relay coils due to overheating.

3-35. Phase-Lock Operation

3-36. The RF output signal of the Model 83592C can be phase-locked to a specified CW frequency using the HP 5344S Option 043 Microwave Source Synchronizer. The Model 83592C signal is automatically tuned by the HP 5344S. Alternatively the Model 83592C signal can be phase-locked to an external reference oscillator. In either case, the phase-lock signal is applied to the Model 8350A/B rear panel FM INPUT connector. The phase-lock function provides a means of obtaining a very stable CW signal by transferring the frequency stability of the HP 5344S Source Synchronizer or the reference oscillator to the Model 8350A/B and eliminating frequency drift. The Model 83592C CW frequency used for phase-locking may be either the RF output or the fundamental oscillator frequency available at the rear panel AUX OUTPUT. However, use of the front panel RF output requires a broadband coupling device. Therefore it is preferable to use the rear panel AUX OUTPUT for phase-locking. Configuration Switch A3S1 switch position 8 must be set according to which Model 83592C output signal is used as the CW source for phase-locking (see Figure 3-8). The CW filter should be turned off in phase-lock operation. Figure 3-7 shows an example of phase-locking the Model 83592C front panel RF output signal using the HP 5344S Source Synchronizer and the HP 11691D 2 to 18 GHz Directional Coupler.

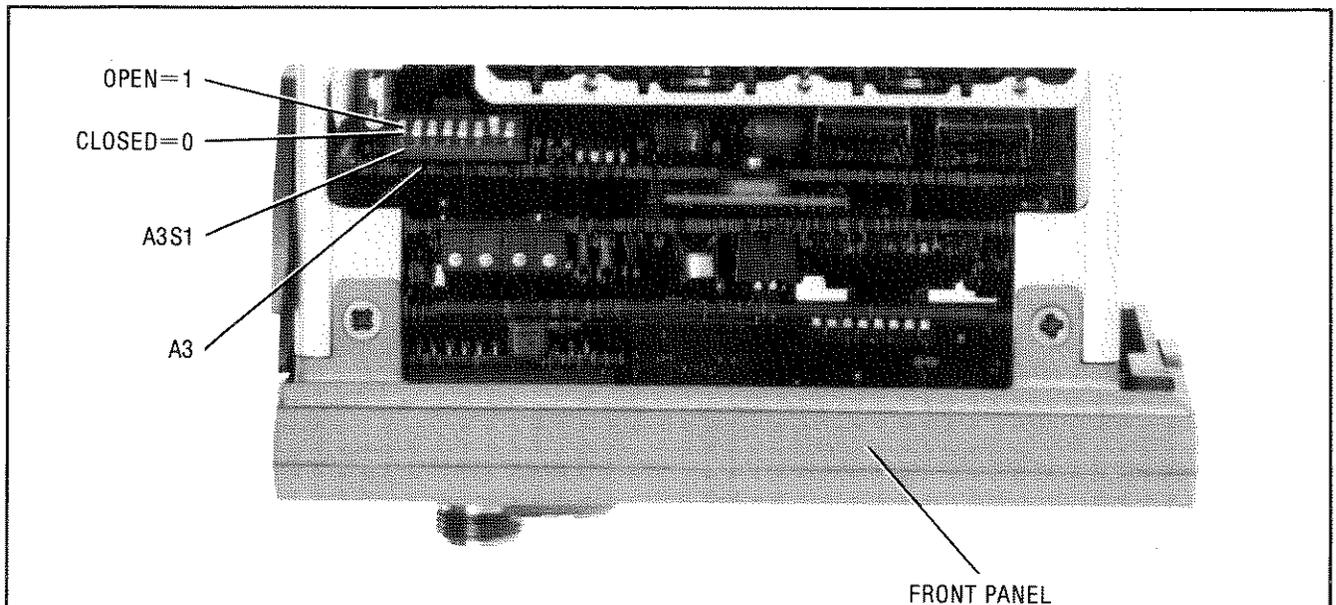

Description	Switch Number							
	1	2	3	4	5	6	7	8
Normal Sweep	0	X	X	X	X	X	X	X
Sequential Sweep Only	1	X	X	X	X	X	X	X
No RF Power at Instrument Preset	X	X	X	1	X	X	X	X
Maximum RF Power at Instrument Preset	X	X	X	0	X	X	X	X
-6 MHz/V FM Sensitivity	X	X	X	X	1	X	X	X
-20 MHz/V FM Sensitivity	X	X	X	X	0	X	X	X
Direct-Coupled FM (-20 MHz/V)	X	X	X	X	X	1	X	X
Cross-Over Coupled FM	X	X	X	X	X	0	X	X
Step Attenuator	X	X	X	X	X	X	1	X
Option 002 Installed	X	X	X	X	X	X	0	X
No Step Attenuator	X	X	X	X	X	X	0	X
AUX OUT Phase Lock	X	X	X	X	X	X	X	1
RF OUTPUT Phase Lock	X	X	X	X	X	X	X	0

NOTES

1. Switch Positions:

- 1 = Switch Open = High
- 0 = Switch Closed = Low (Ground)
- X = Don't Care
- * = Varies, 1 of Opt. 002, 0 if no Opt. 002.

2. Switch is set at the factory as follows:

Switch No.	1	2	3	4	5	6	7	8
Position	0	X	X	0	0	0	*	0

Figure 3-8. Configuration Switch

3-37. OPERATOR'S MAINTENANCE**3-38. Plug-In Error Codes**

3-39. The Model 8350A/B FREQUENCY window will display RF Plug-In error codes (50 to 99) or Sweep Oscillator error codes. Information necessary to interpret Plug-In error codes may be found in Section VIII, Service, in this manual.

3-40. Fuses

3-41. Power circuits for the Model 83592C RF Plug-In are fused in the Model 8350A/B Sweep

Oscillator. See the Model 8350A/B Sweep Oscillator Operating and Service Manual for fuse locations and replacement instructions.

3-42. Blue Service Tags

3-43. If the Model 83592C RF Plug-In requires service, the instrument may be sent to your local HP service organization as described in Section II, Installation, in this manual. Before sending the instrument back, fill out and attach one of the blue service tags. Record any error codes noted on the failure symptoms/special control settings portion of the tag.

