





downloaded by Amateur Radio Directory www.hamdirectory.info

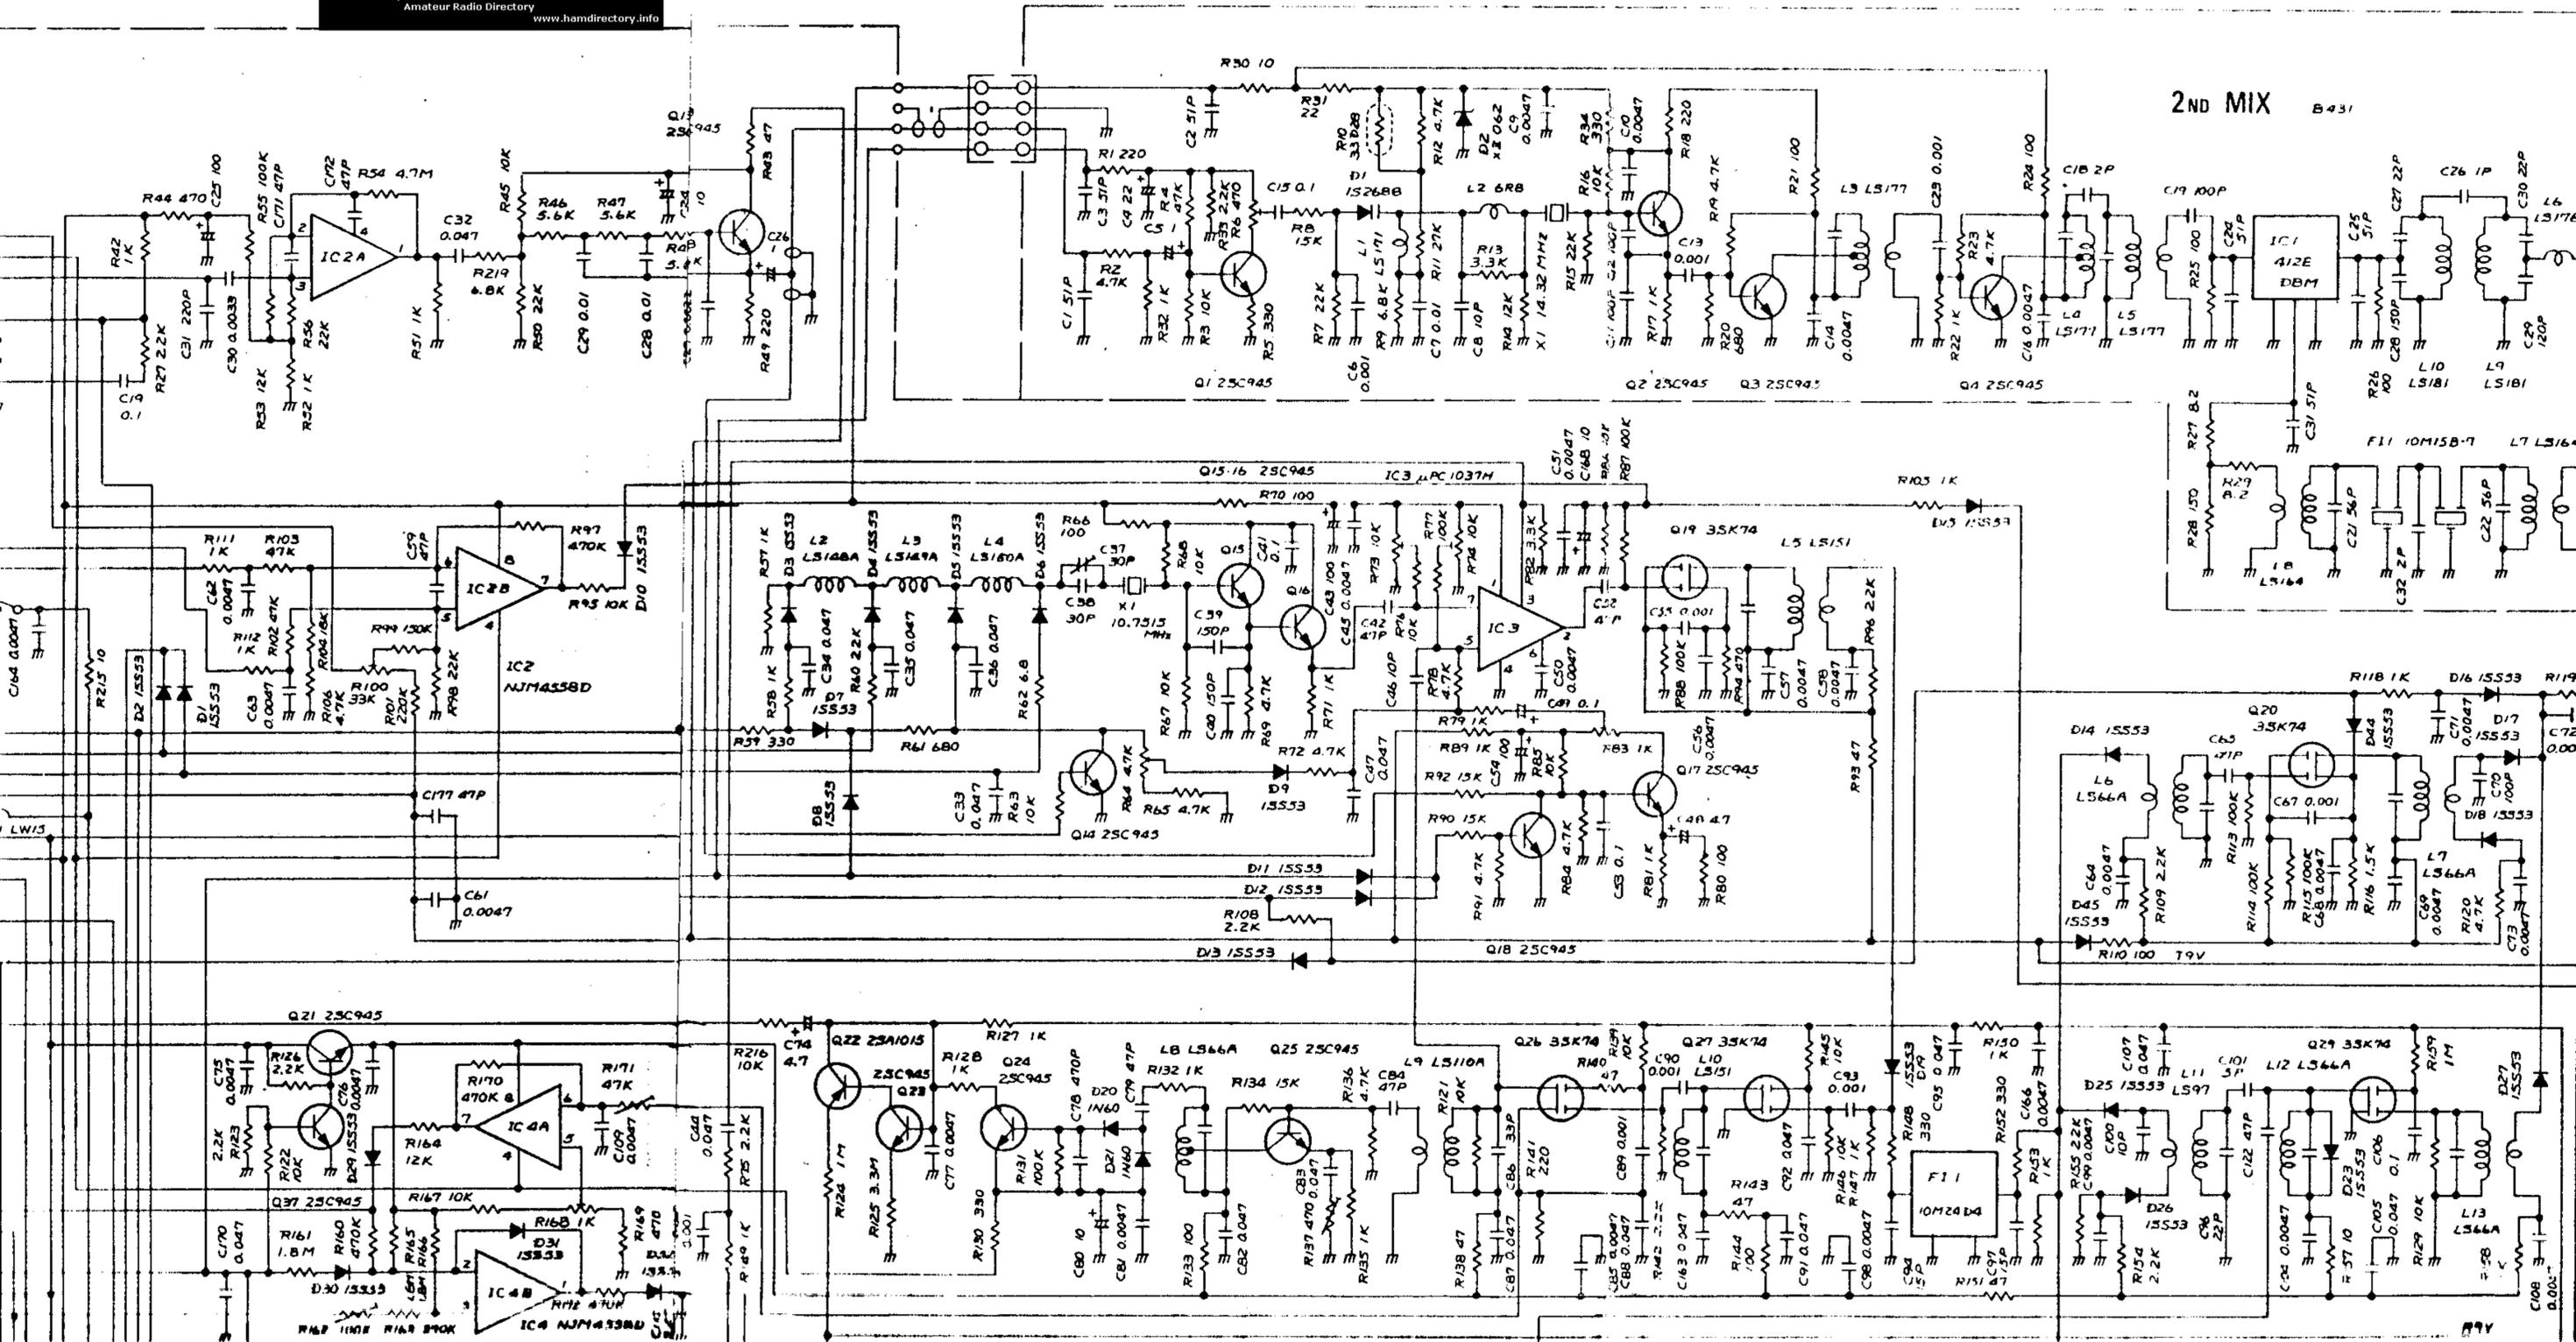


downloaded by Amateur Radio Directory
www.hamdirectory.info

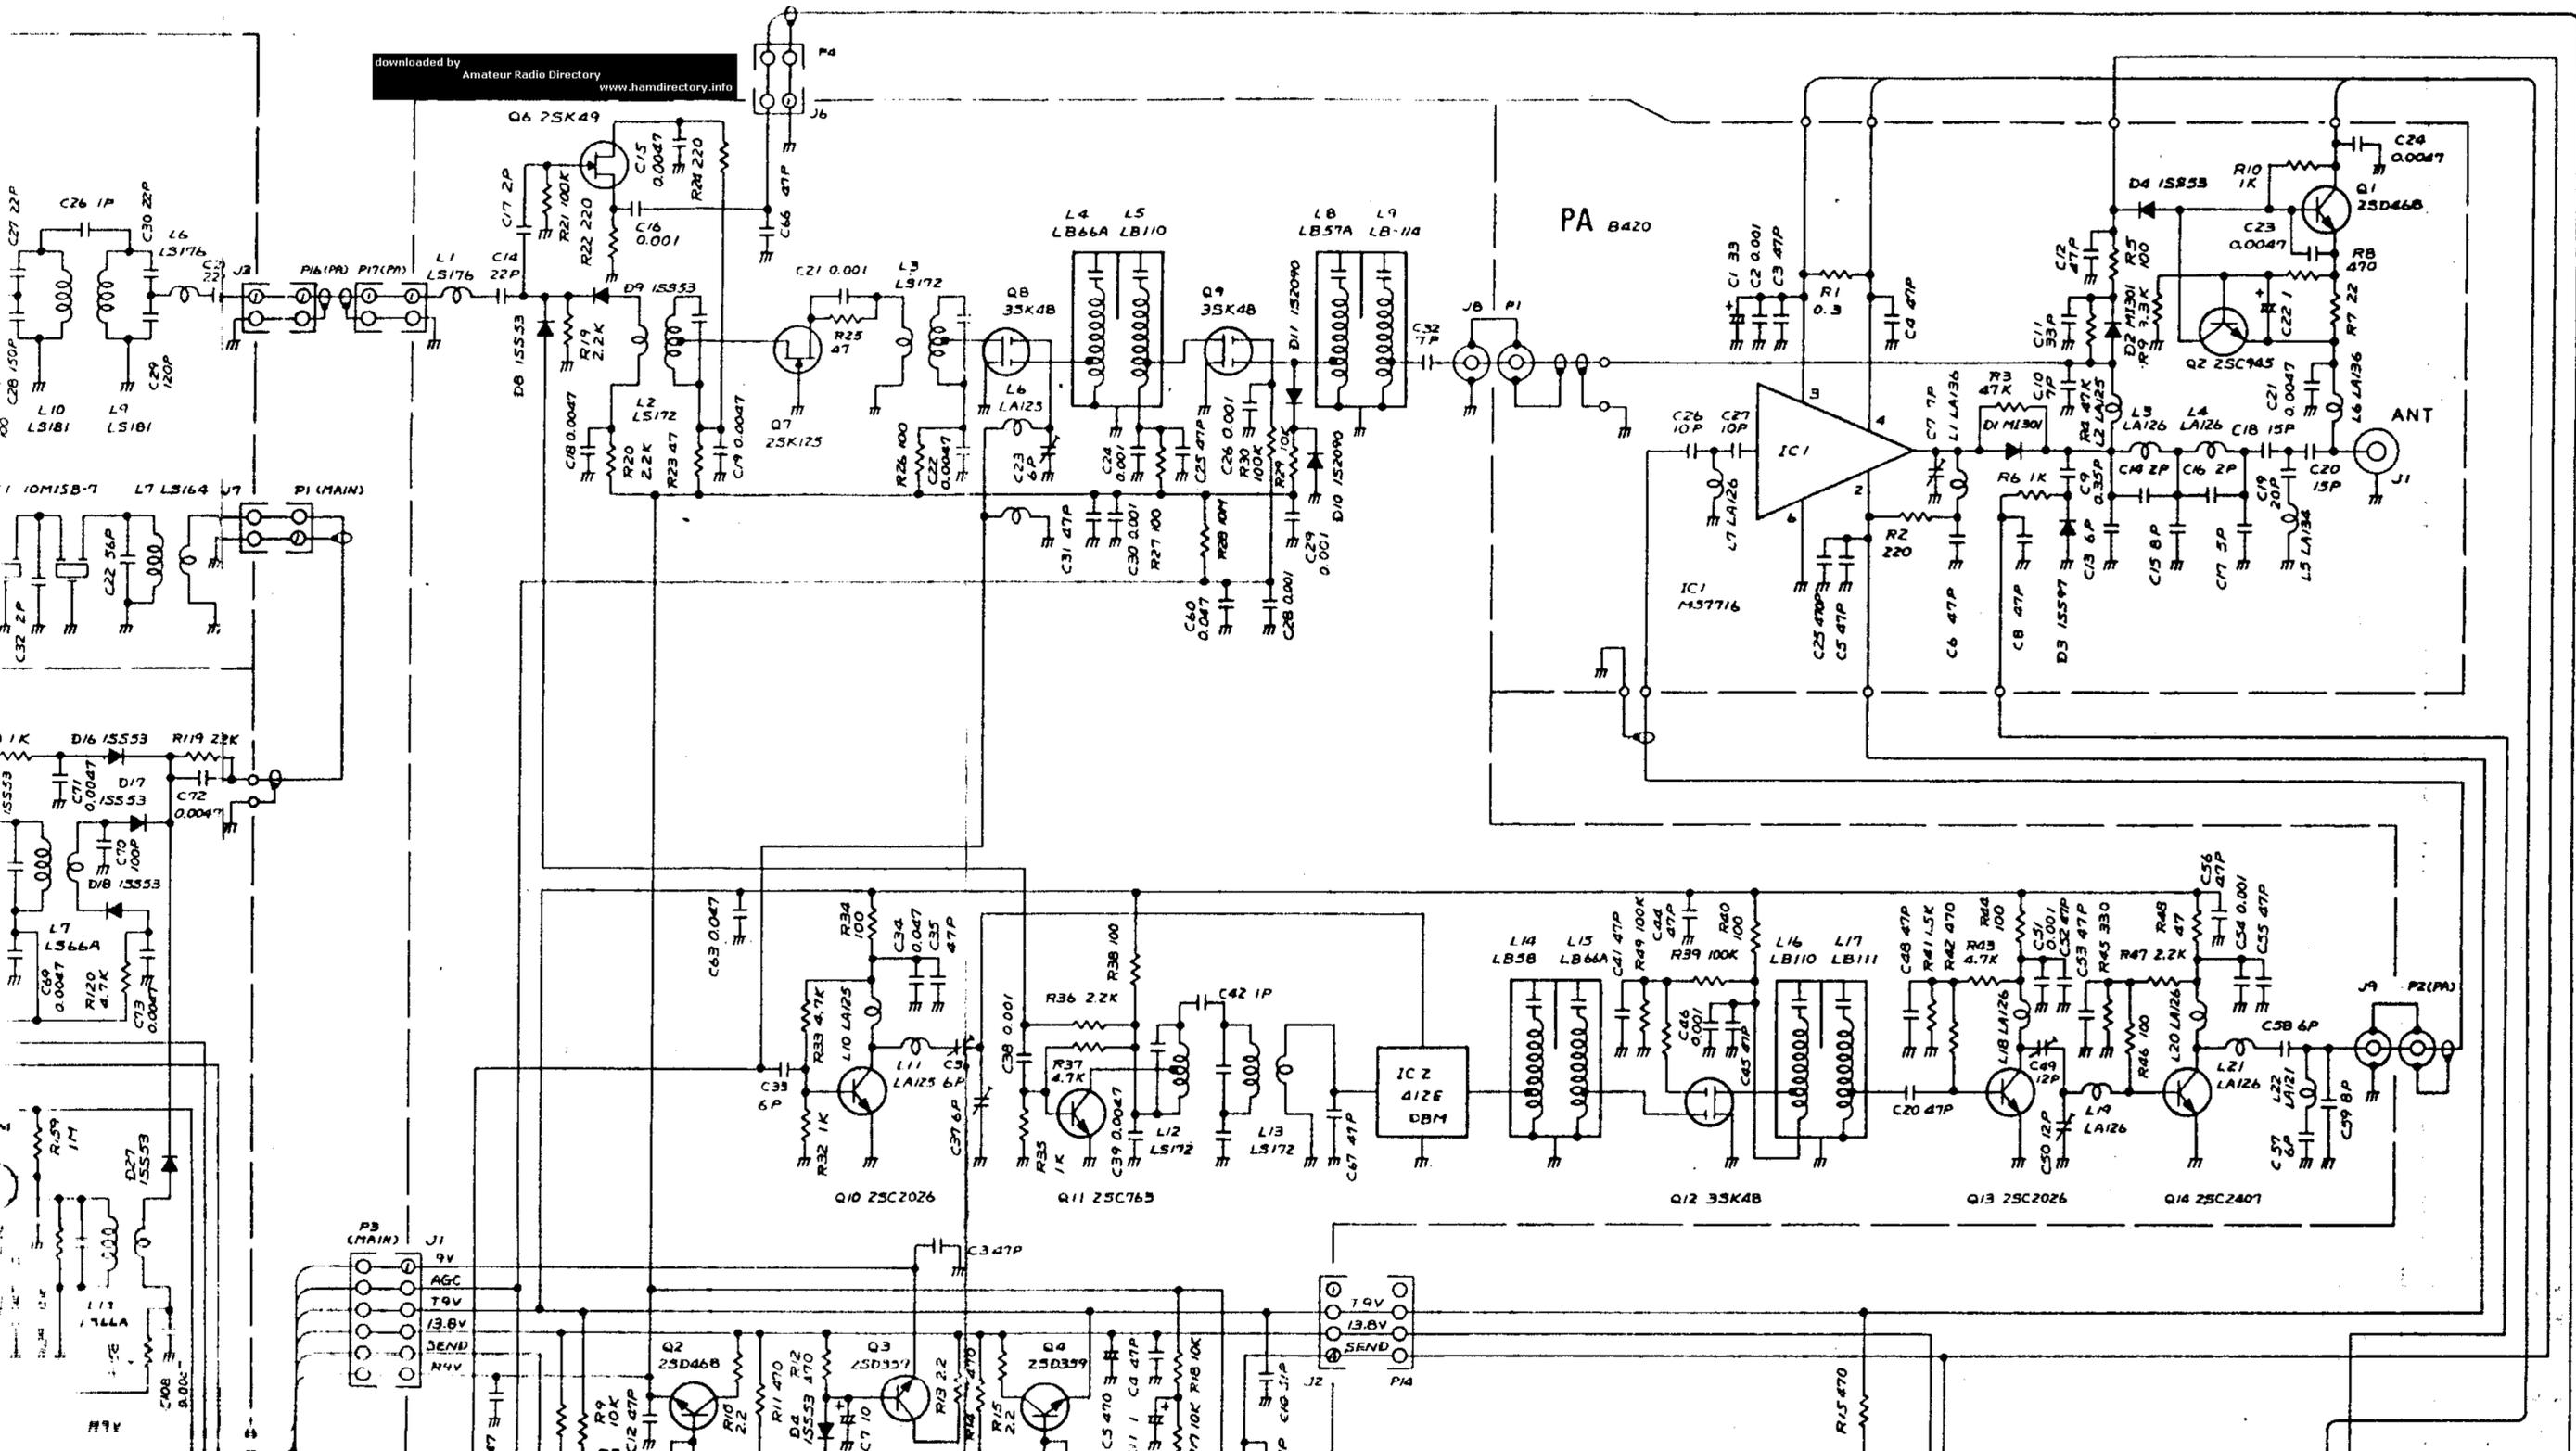


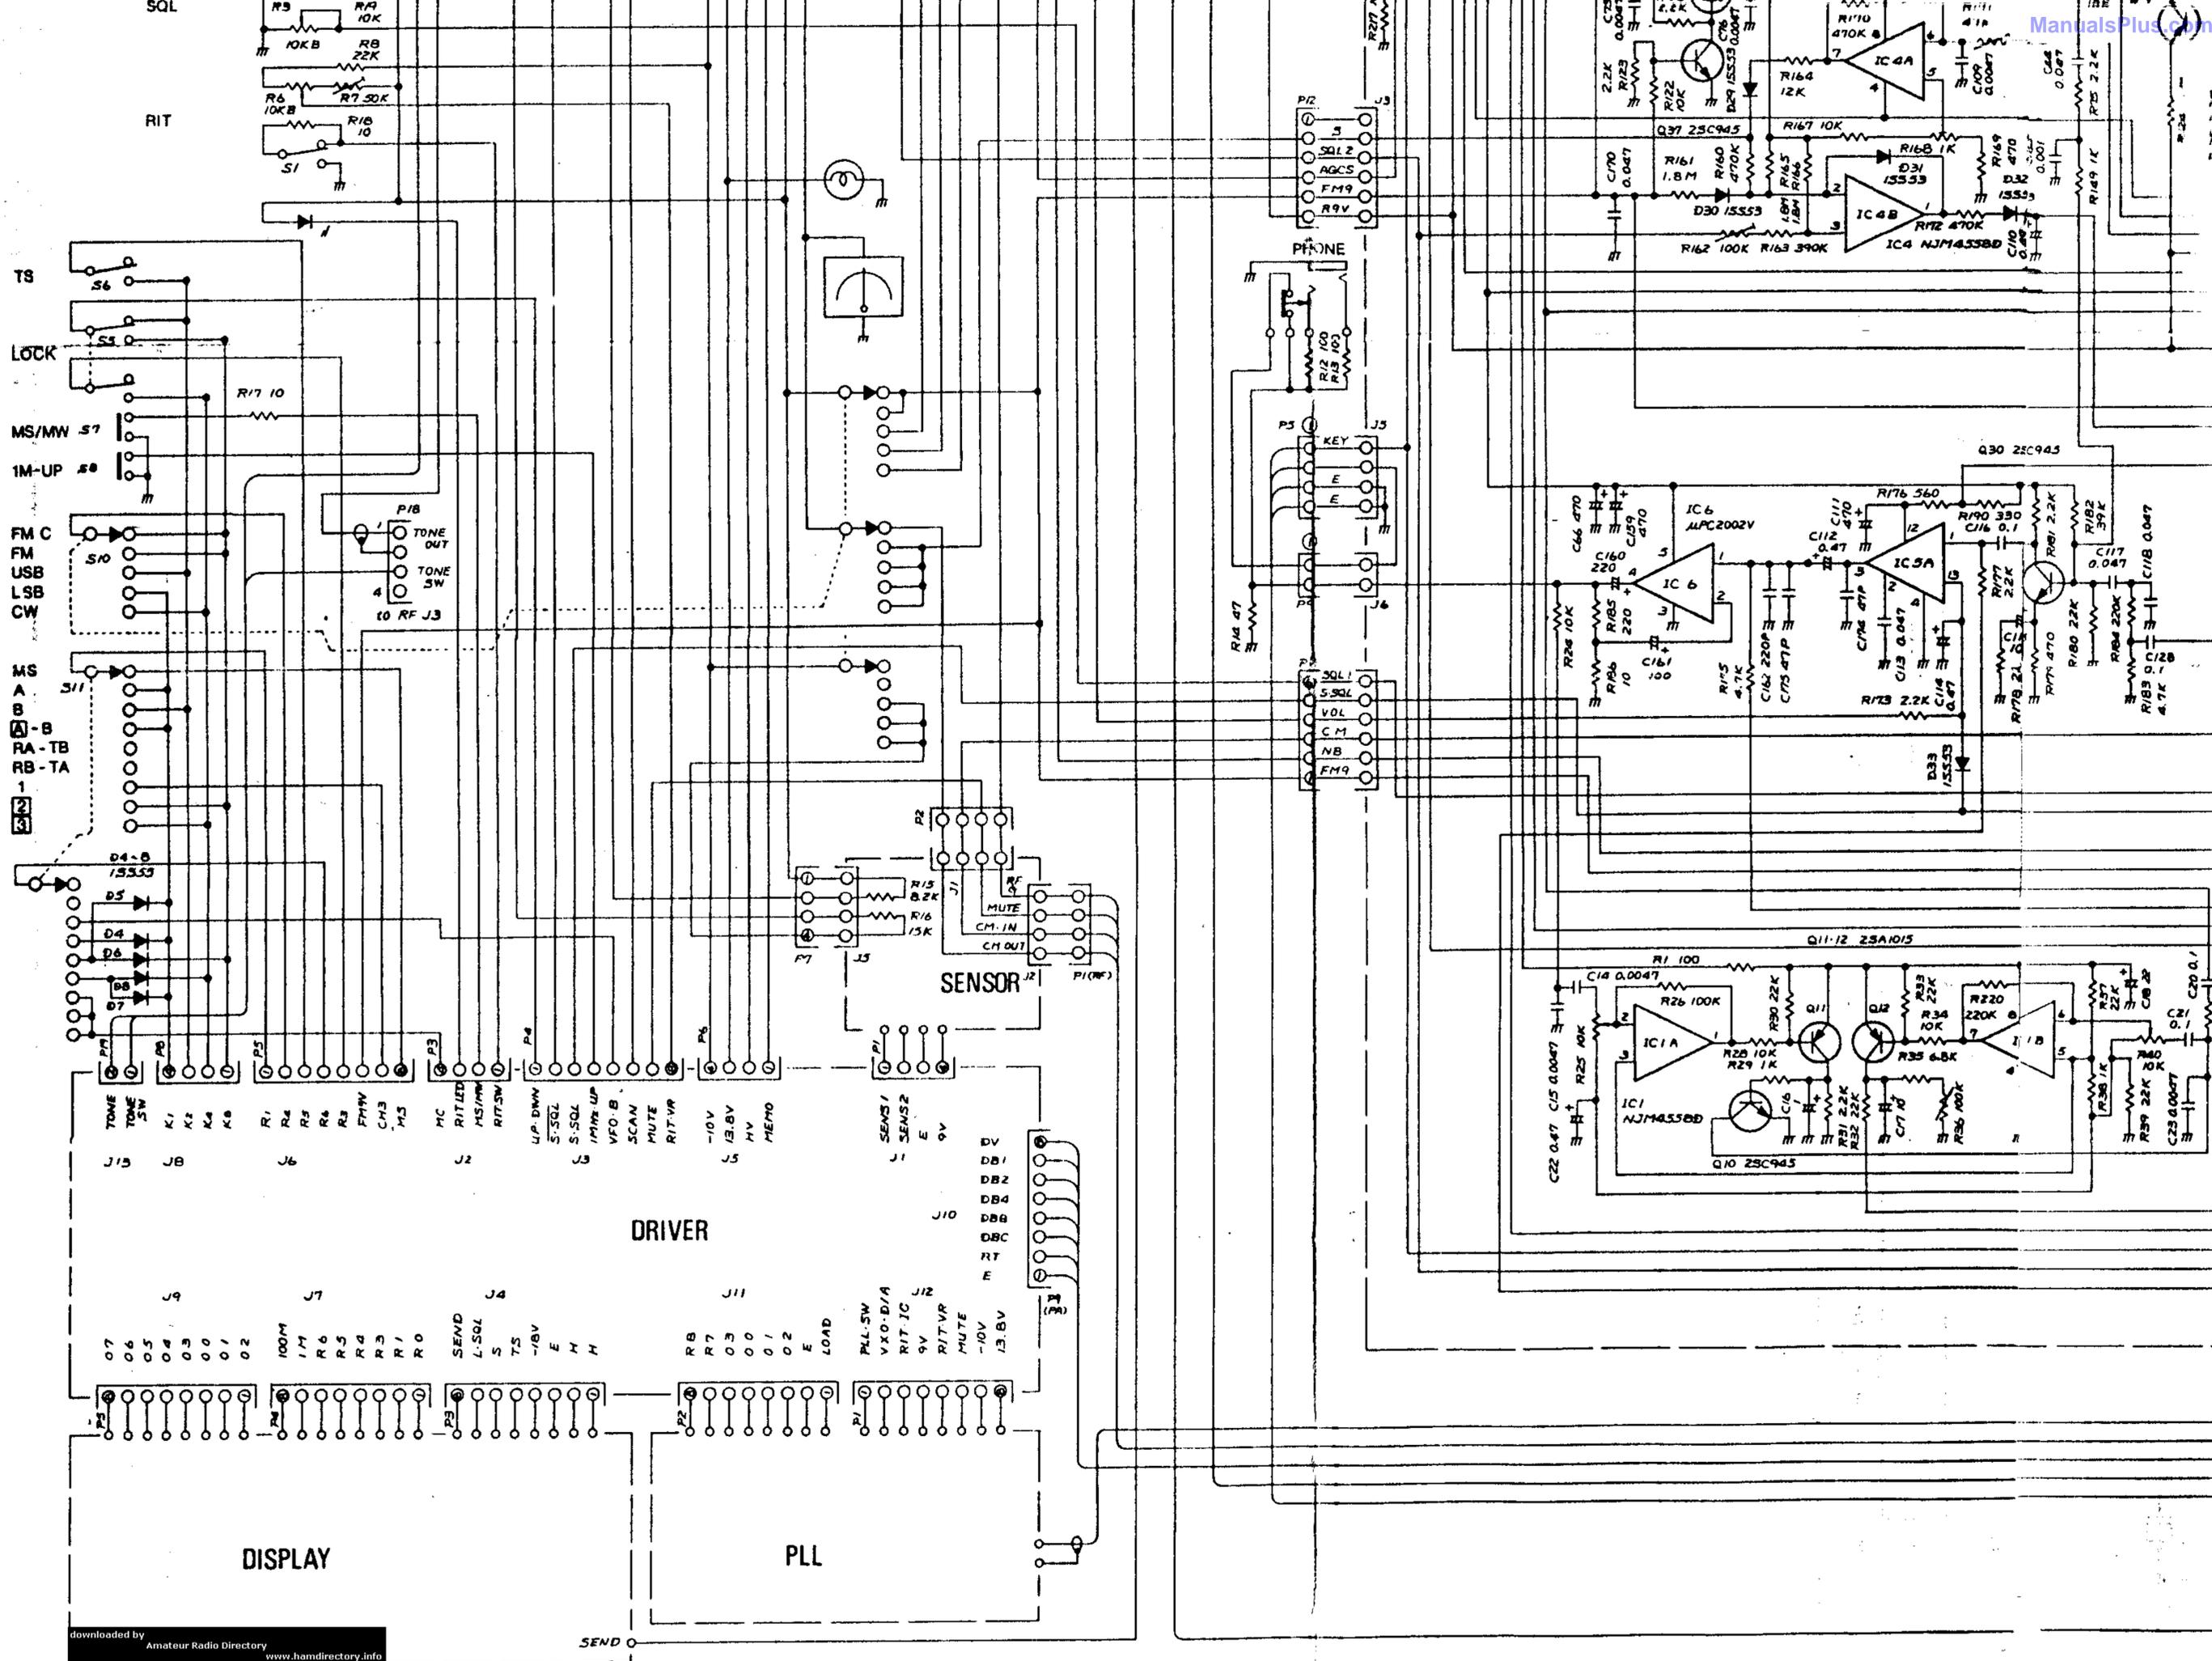

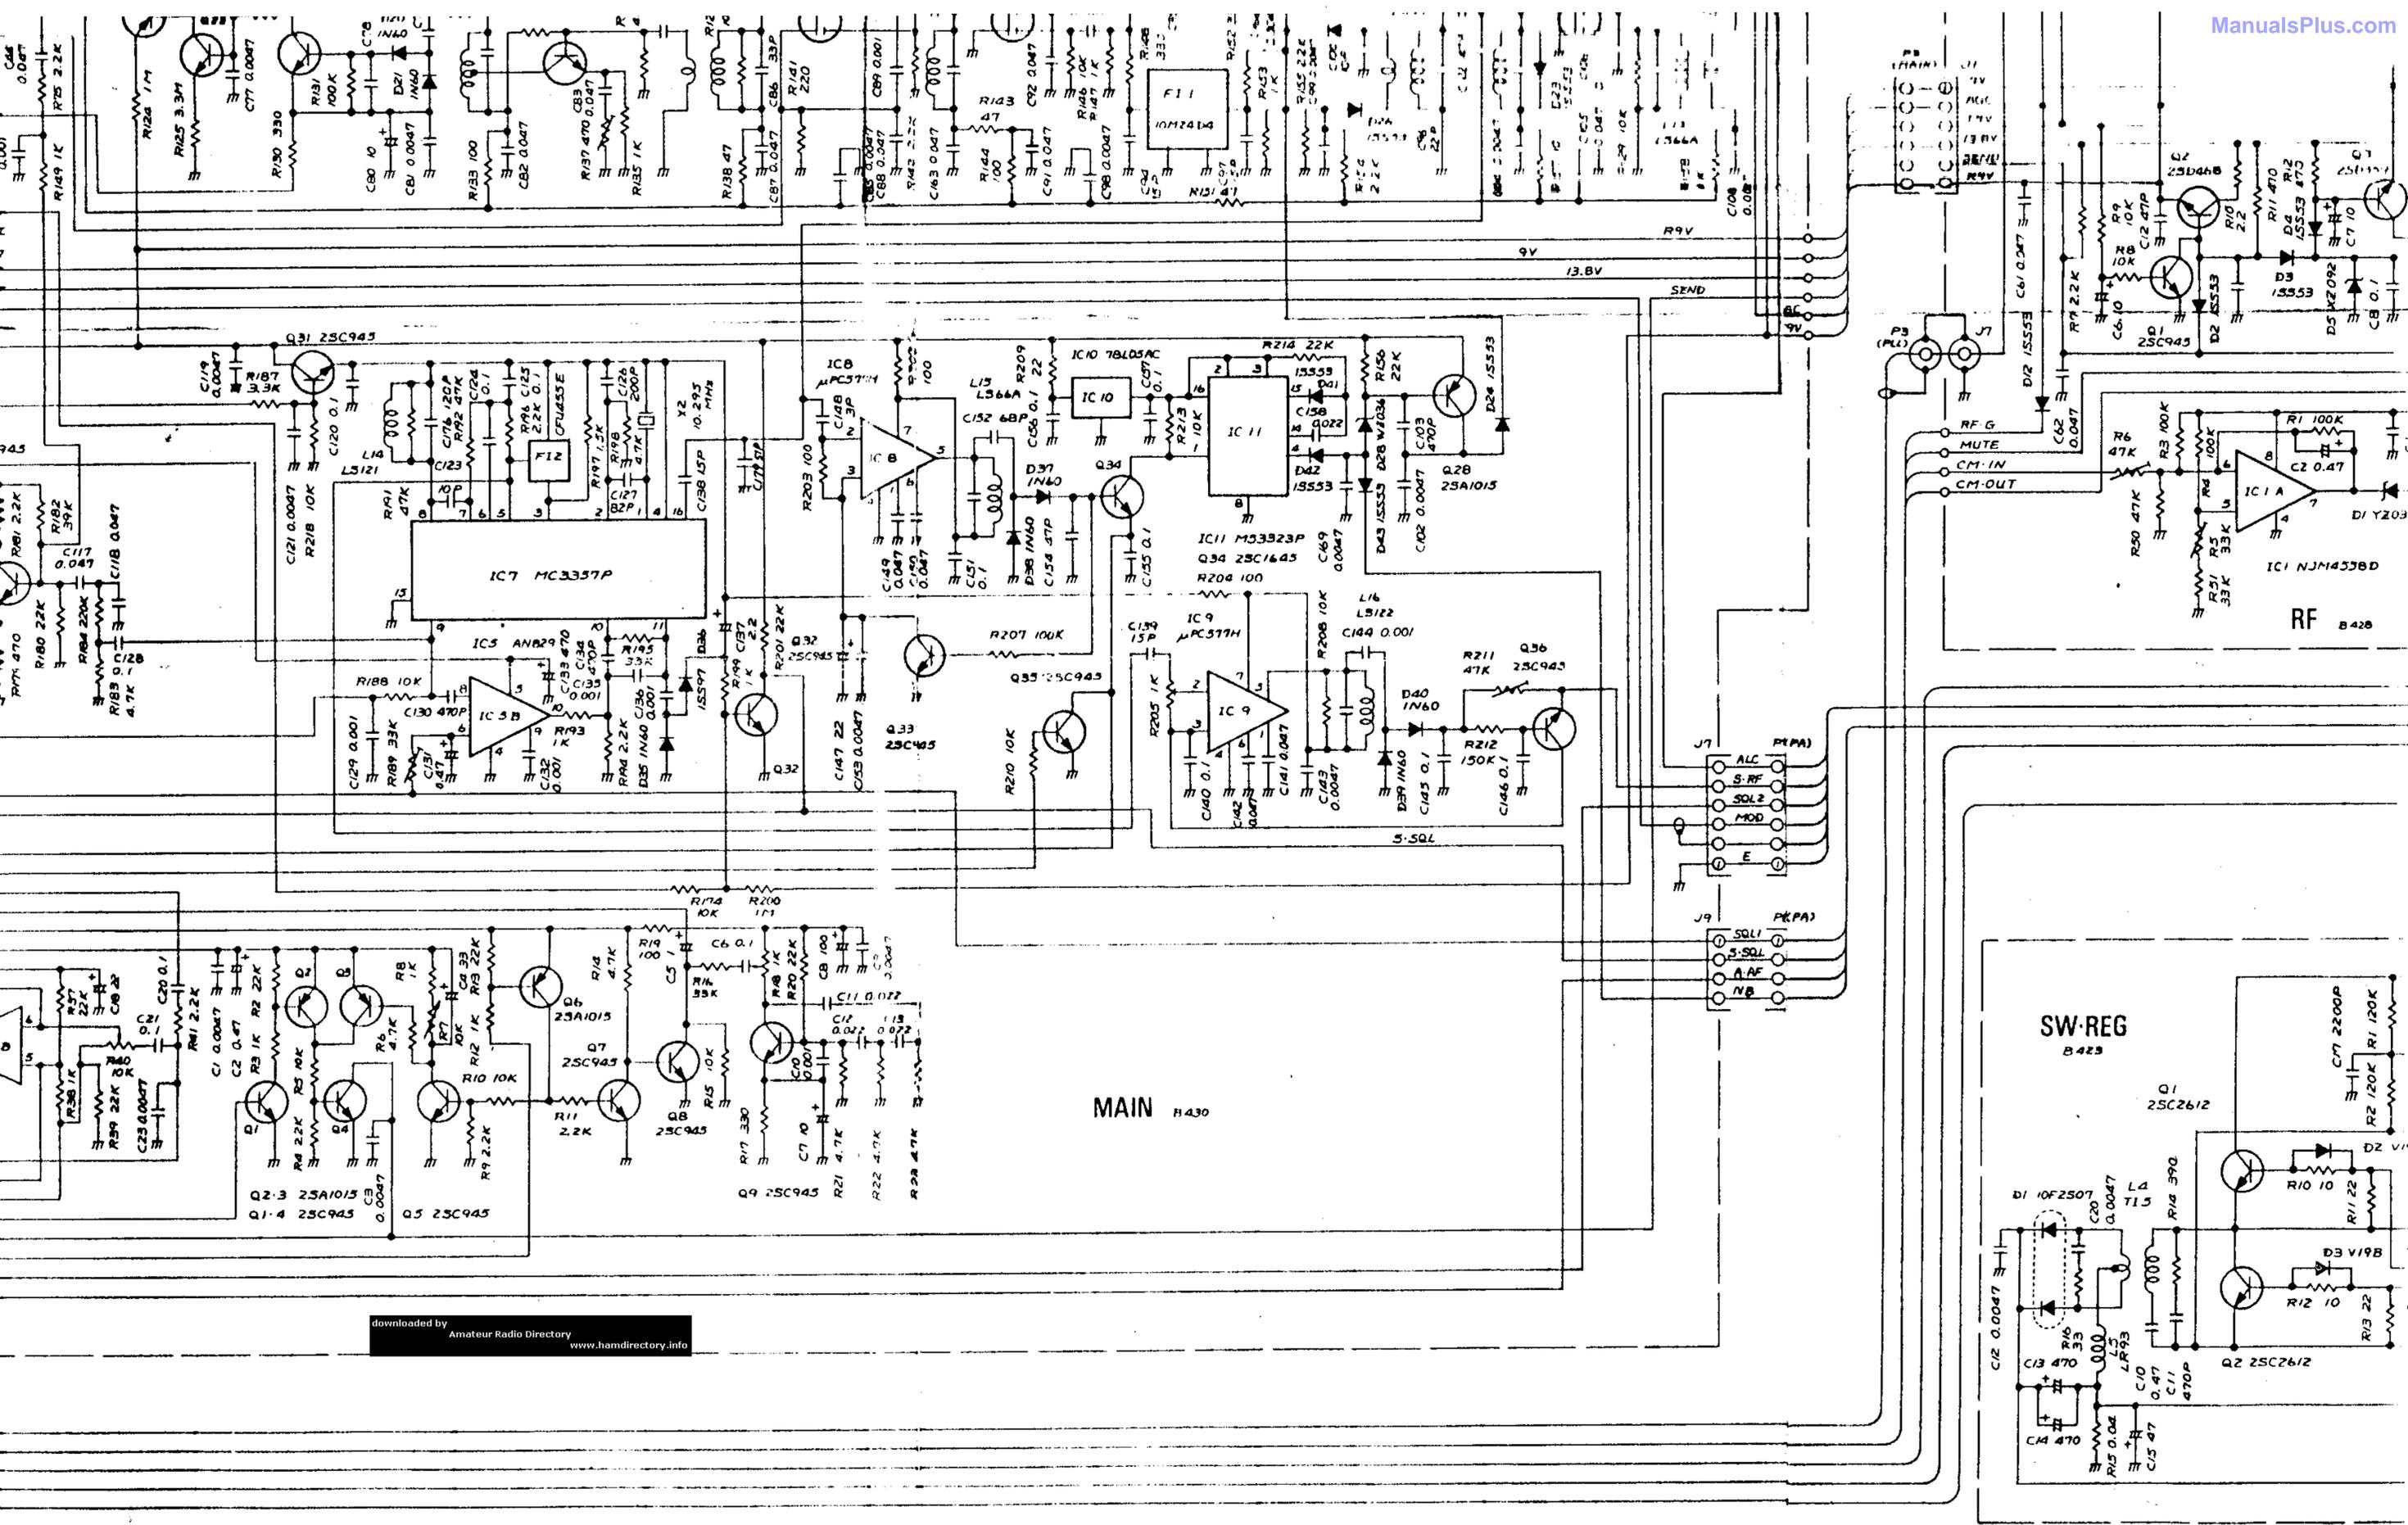

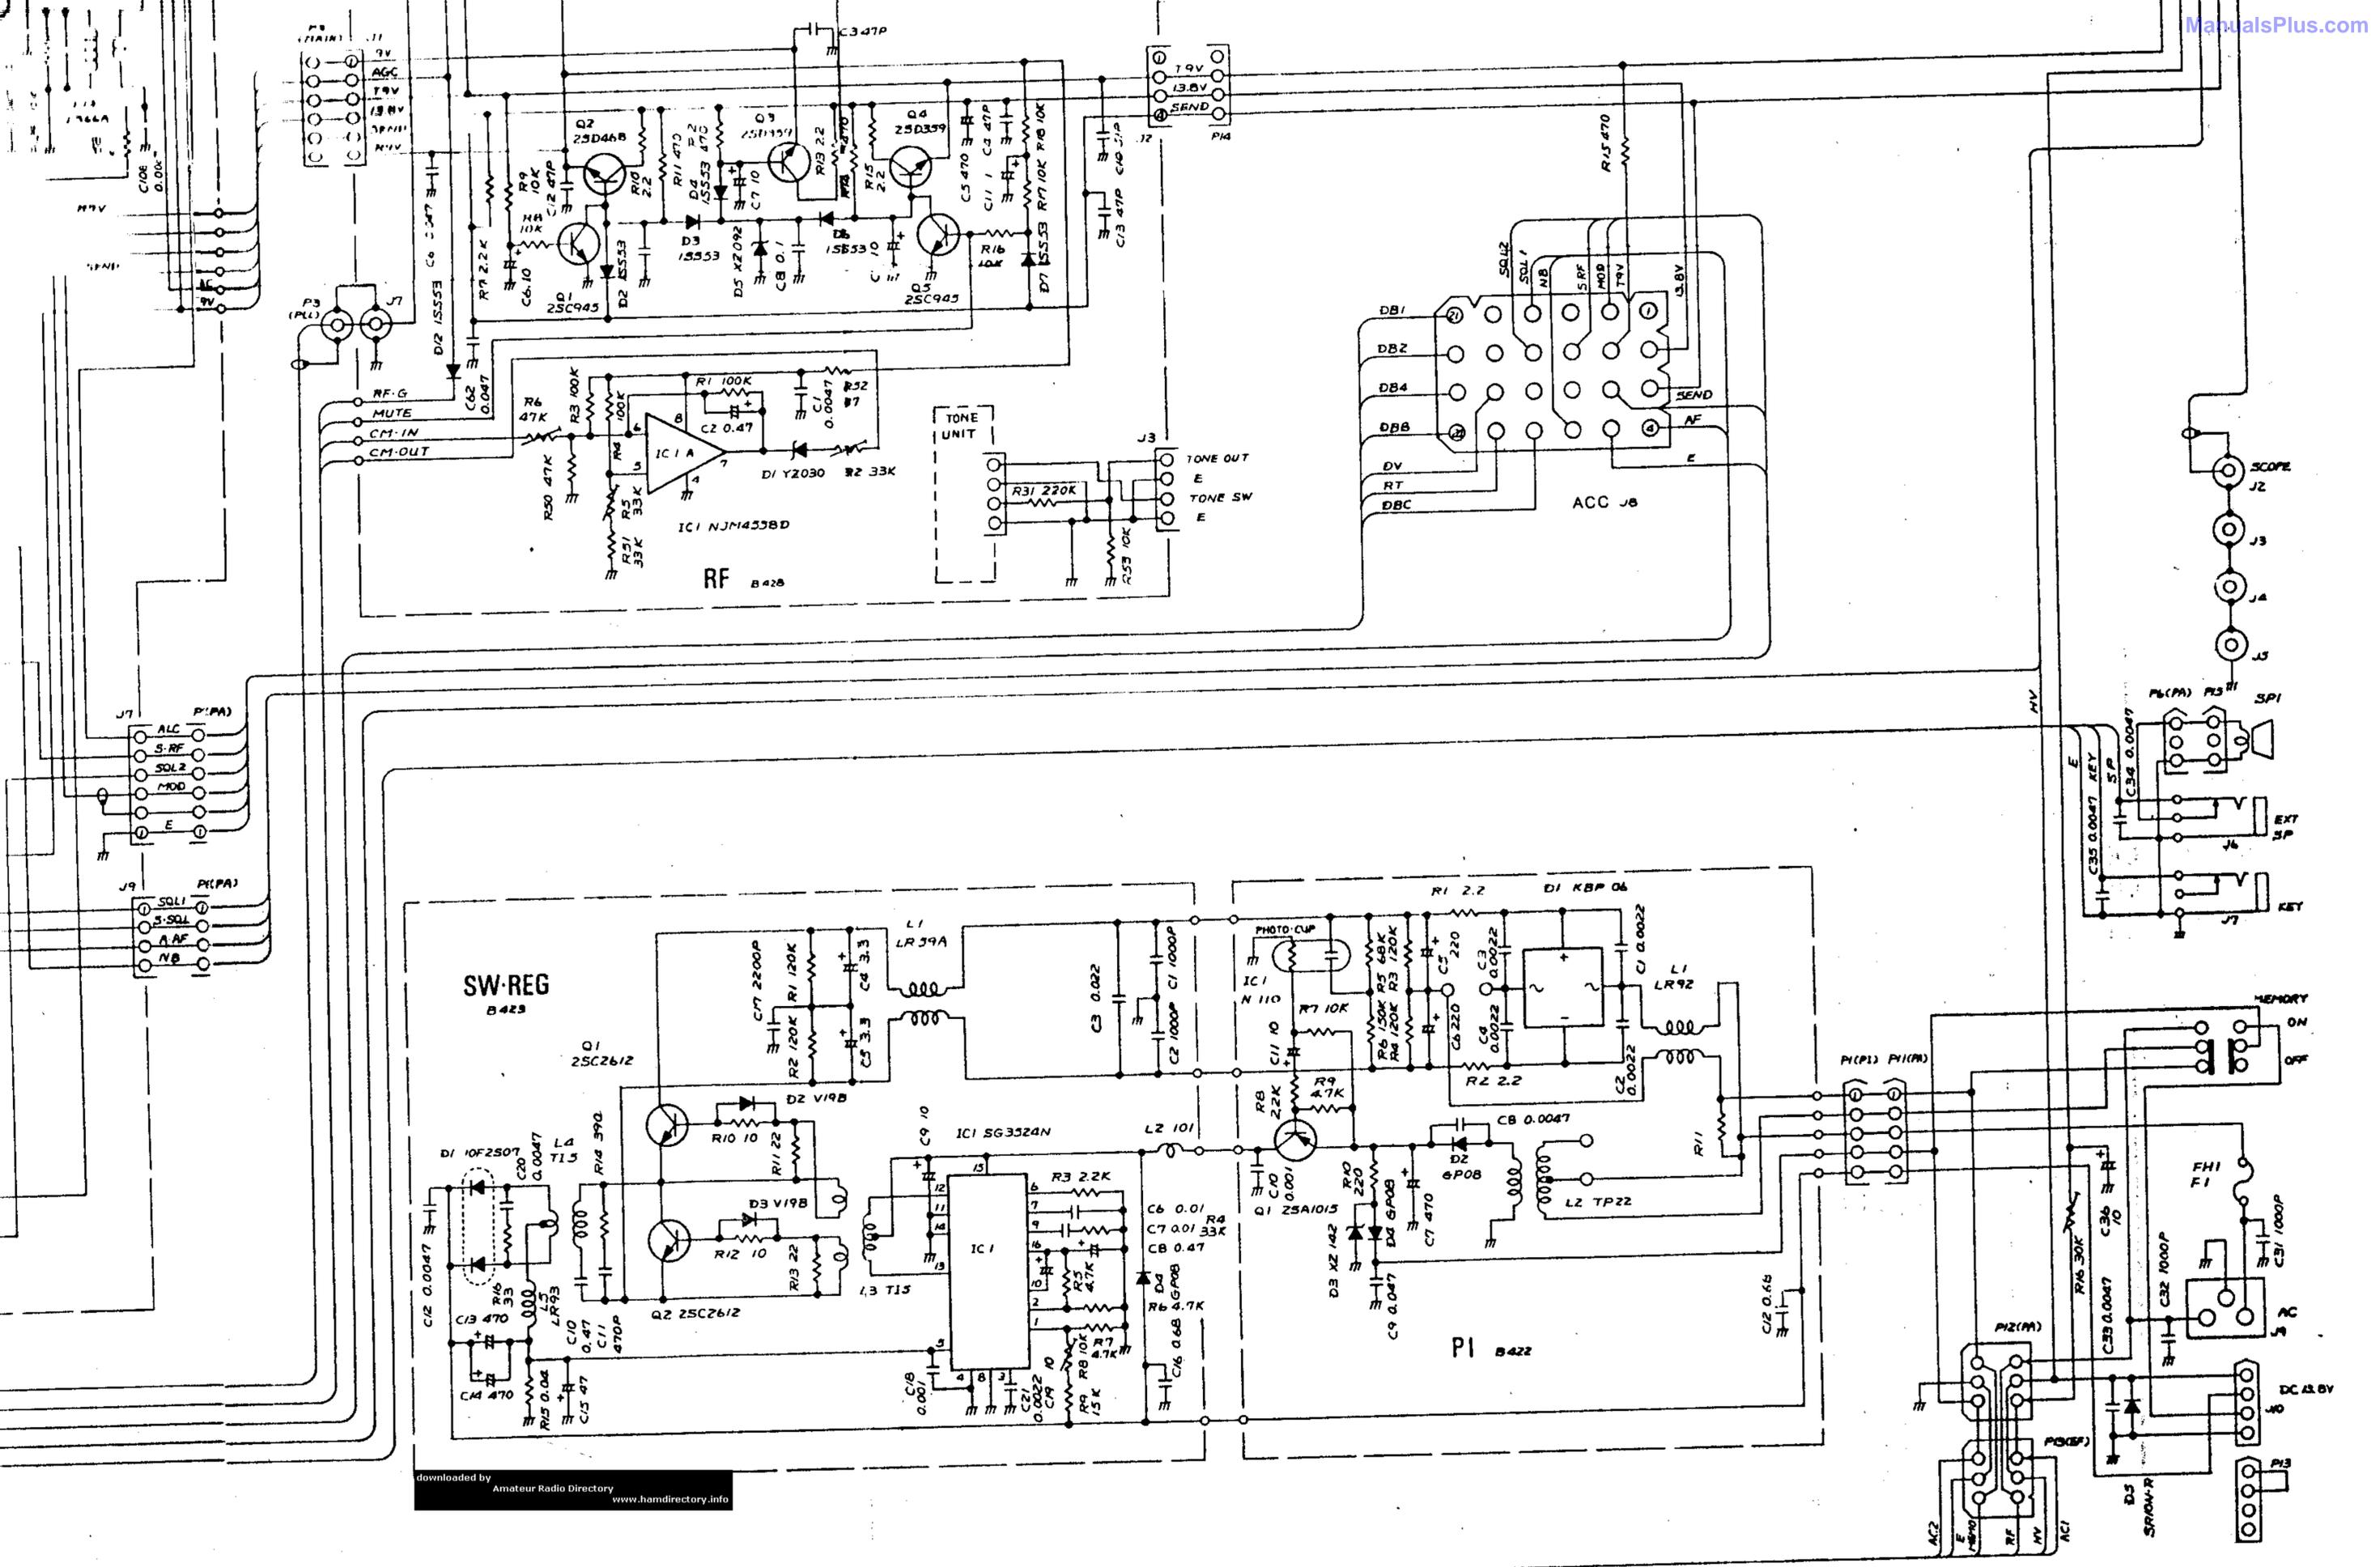

downloaded by Amateur Radio Directory www.hamdirectory.info

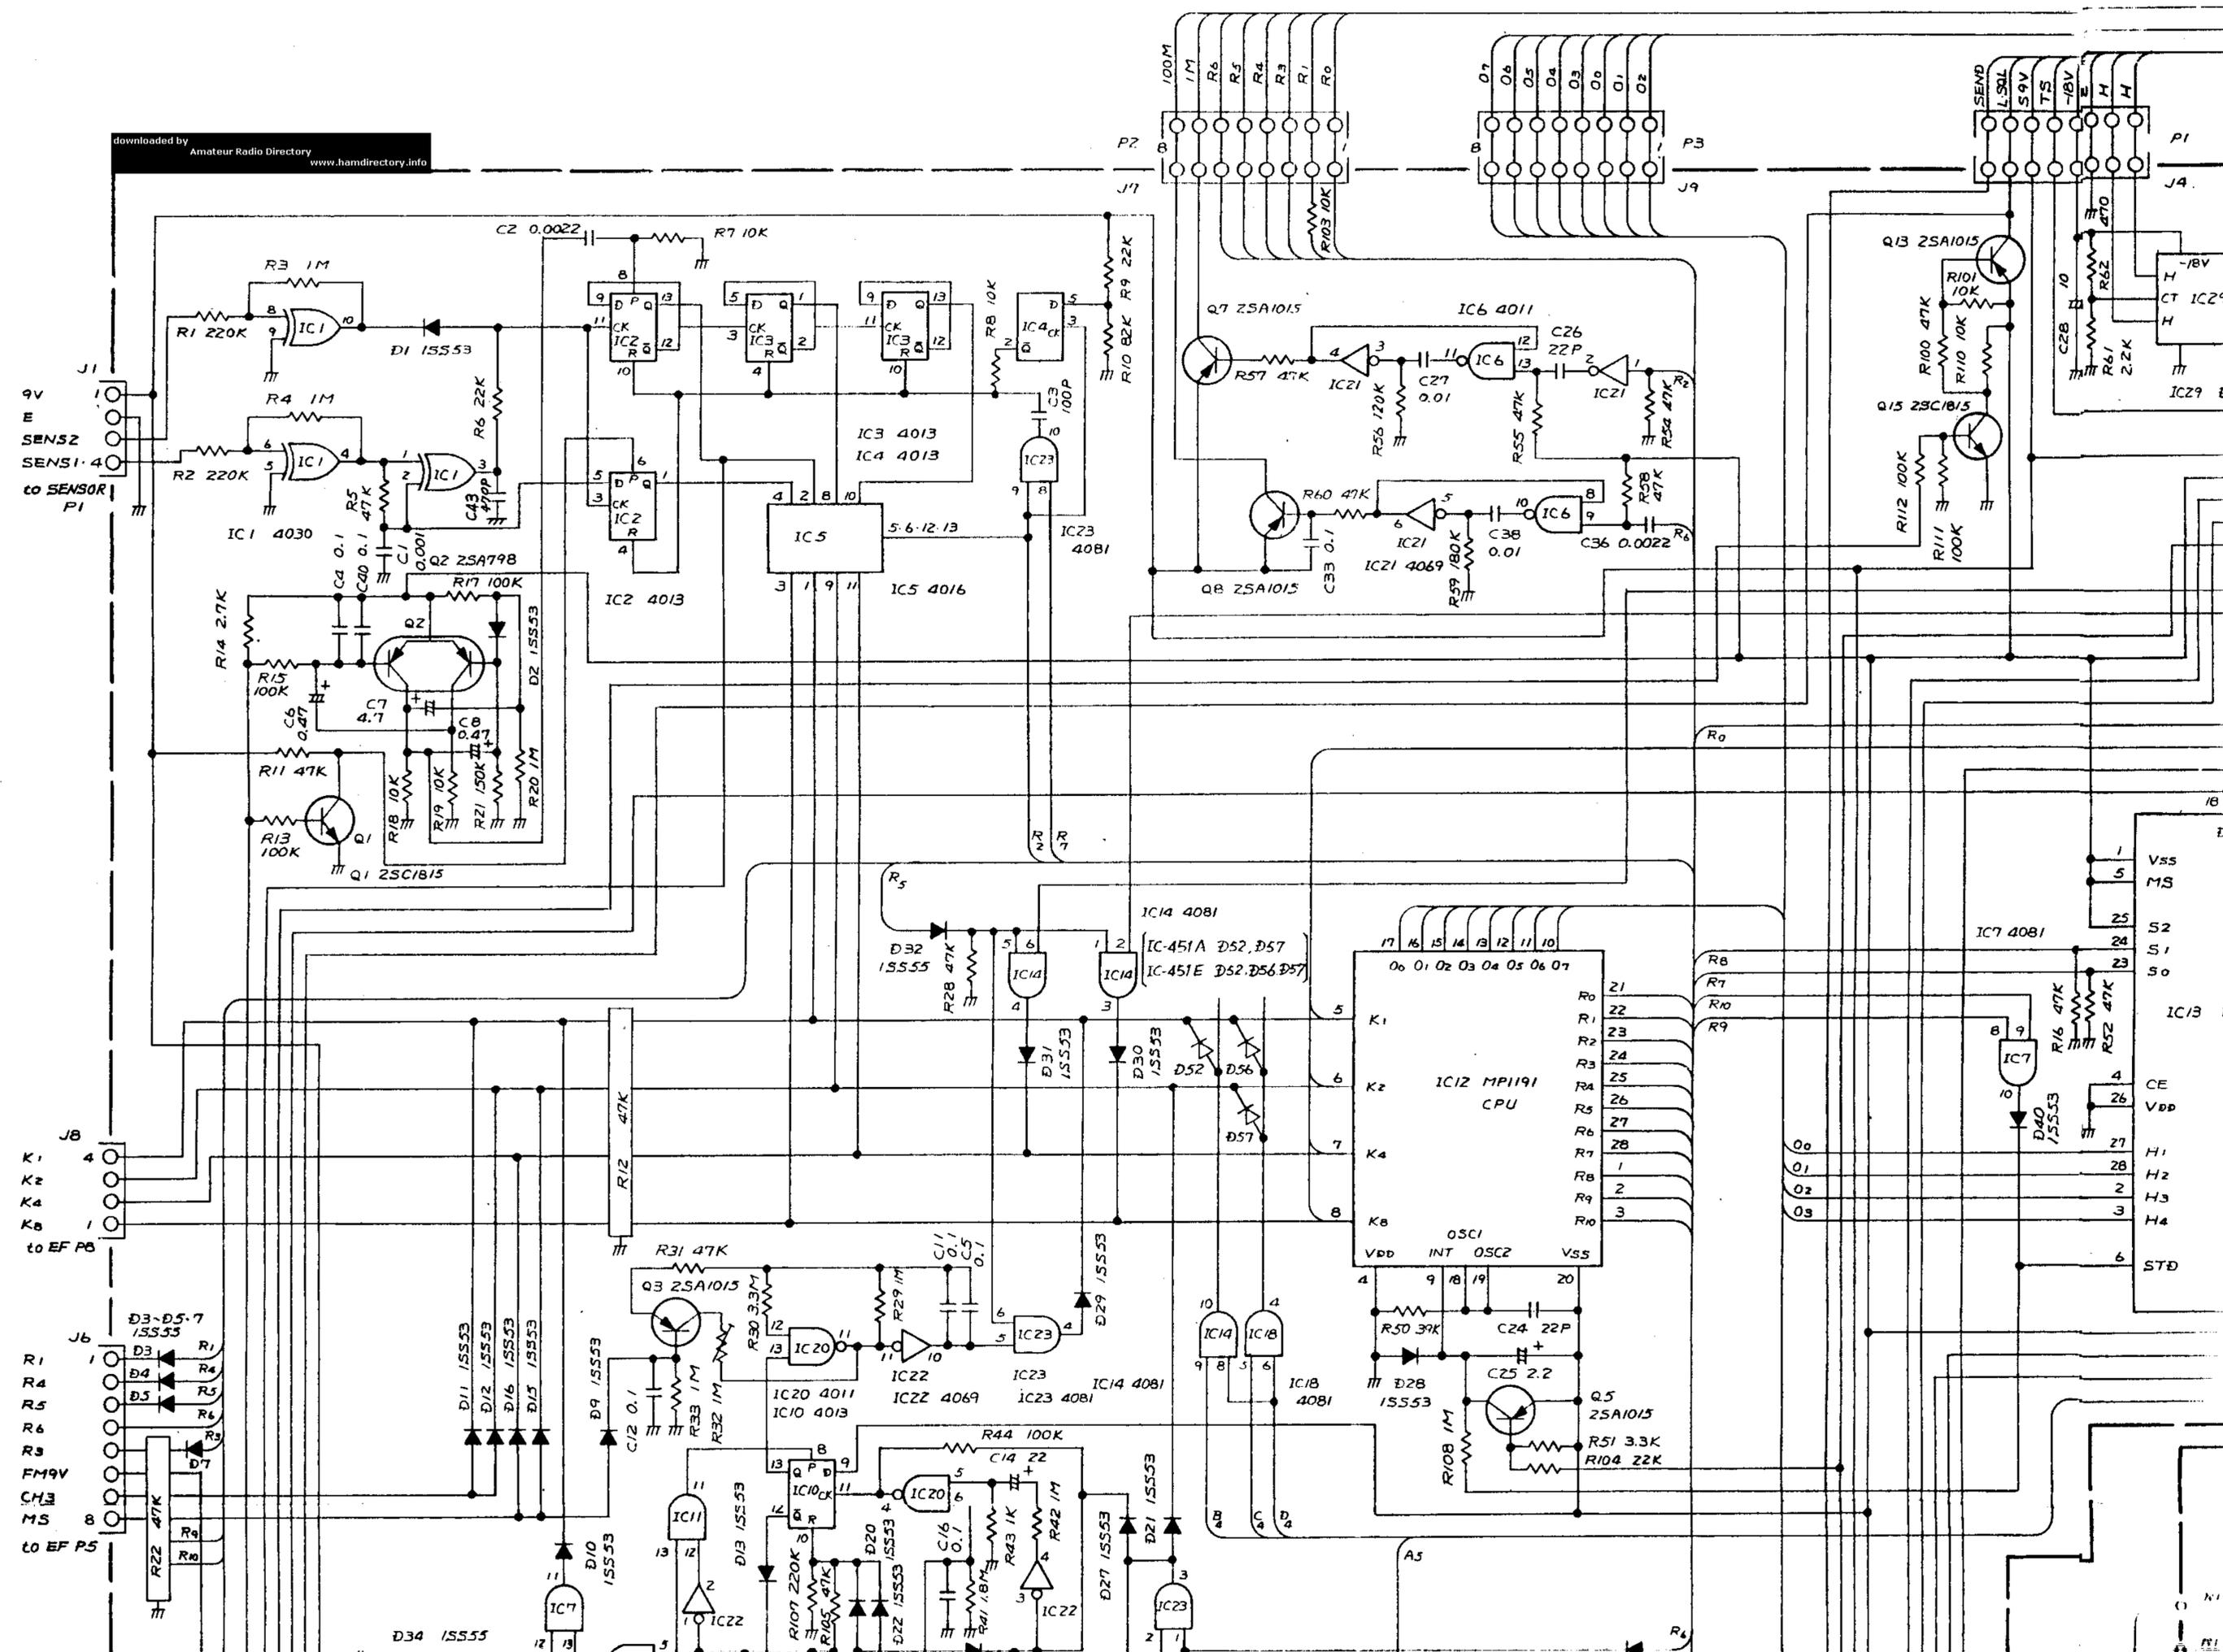


9V
E
SENS2
SENS1
PI

K1
K2
K4
K6
to EF P6

R1
R4
R5
R6
R8
FM9V
CH3
MS
to EF P5

VSS
MS
S2
S1
S0
CE
VDD
H1
H2
H3
H4
STD

N11
R11

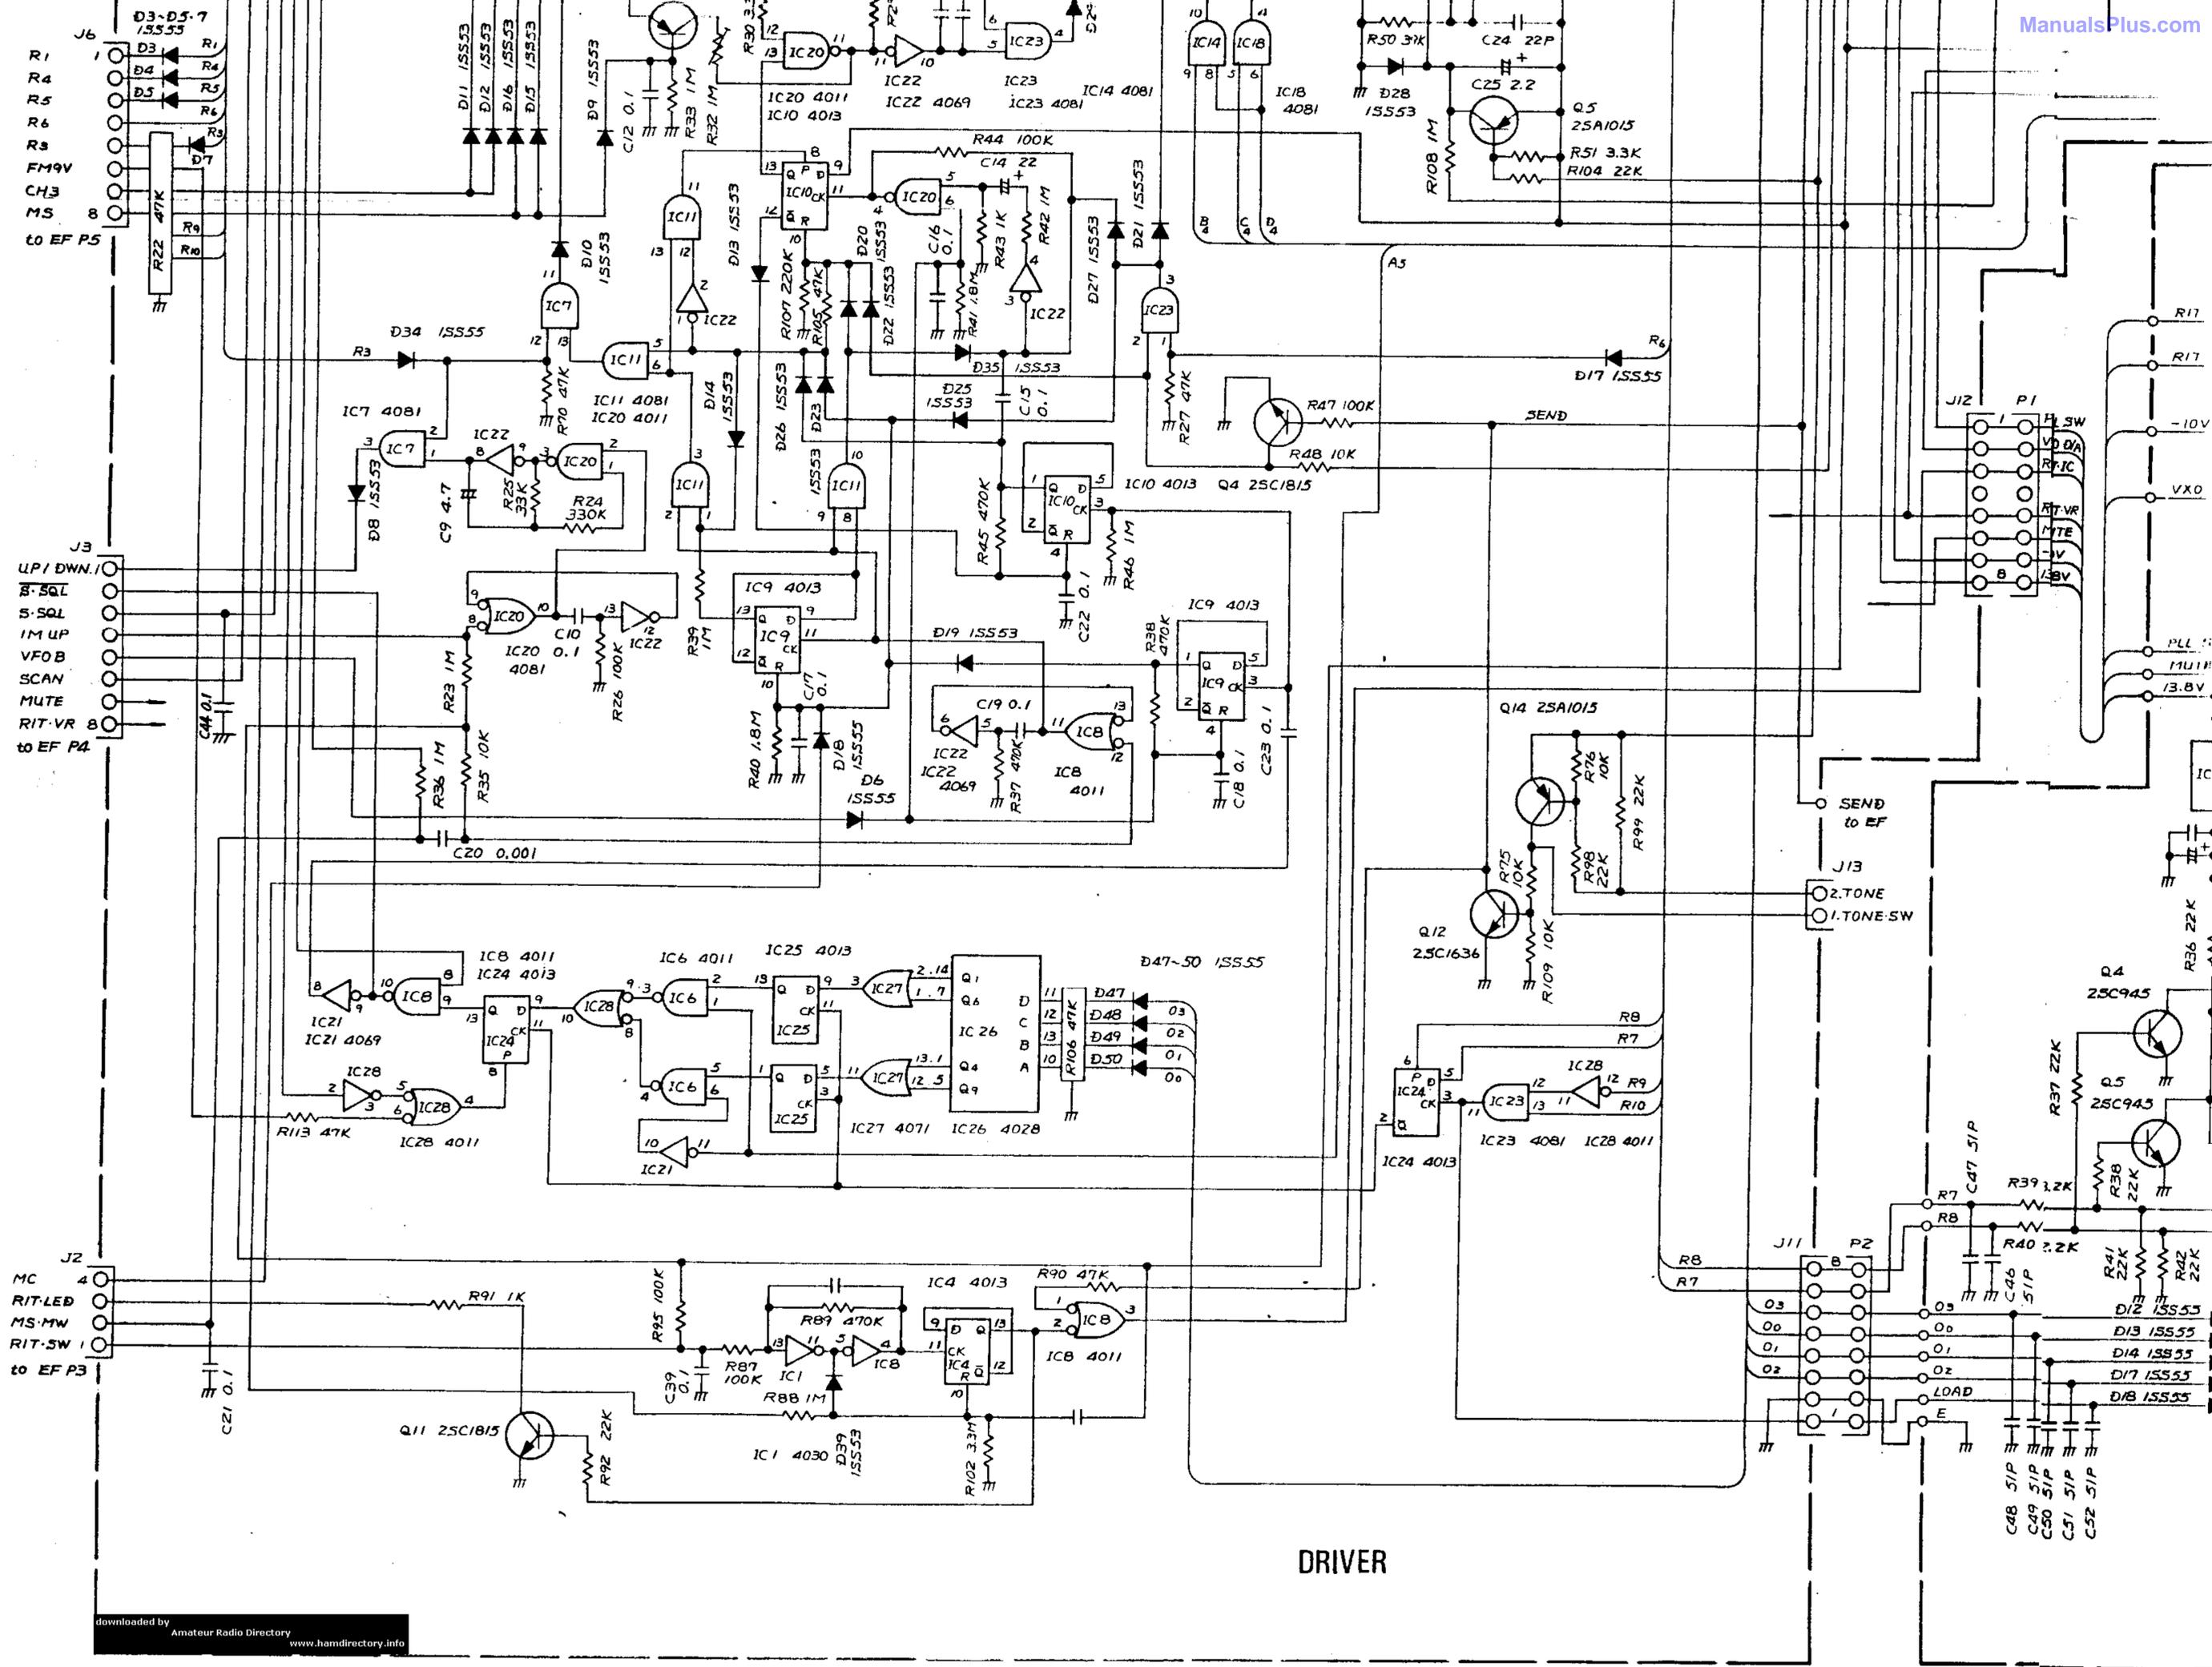

DRIVER

