


R&S® Universal Radio Network Analyzer

R&S® TSMW

R&S® TSMF

Operating Manual

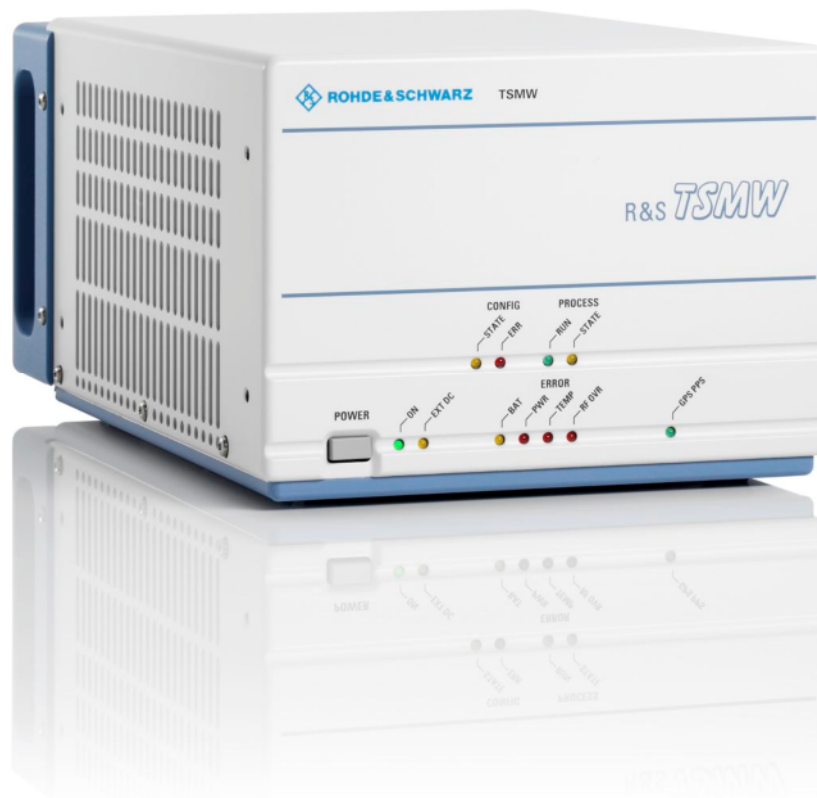

1171.5960.32 – 05

The Operating Manual describes the following R&S® Universal Radio Network Analyzer models and options:

- R&S® TSMW Universal Radio Network Analyzer (1503.3001.03)
- R&S® TSMF Universal Radio Network Analyzer (1503.3001.04)
- Options:
 - R&S® TSMW-K1 R&S® ROMES Digital IQ Interface(1503.3960.02)
 - R&S® TSMW-K21 R&S® ROMES GSM & WCDMA Scan Option (1503.4514.02)
 - R&S® TSMW-K22 R&S® ROMES CDMA2000 & EV-DO Scan Option (1503.4520.02)
 - R&S® TSMW-K26 R&S® ROMES TETRA Scan Option (1510.8792.02)
 - R&S® TSMW-K26Q ROMES TEDS Scan Option 1510.8792.02
 - R&S® TSMW-K27 R&S® ROMES Spectrum Scan Option (1503.4537.02)
 - R&S® TSMW-K28 R&S® ROMES WiMAX Scan Option (1503.4543.02)
 - R&S® TSMW-K29 R&S® ROMES LTE Scan Option (1503.4550.02)
 - R&S® TSMW-K30 LTE MIMO Option (1514.4085.02)
 - R&S® TSMW-B1 R&S® Digital I/Q Interface (1514.4004.02)

The firmware of the instrument makes use of several valuable open source software packages. the most important of them are listed below, together with their corresponding open source license. The verbatim license texts are provided on the user documentation CD-ROM (included in delivery).

Package	Link	License
OpenSSL	http://www.openssl.org/	OpenSSL / SSLeay

Rohde&Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2011 Rohde & Schwarz GmbH & Co. KG
81671 Munich, Germany

Printed in Germany – Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual:

R&S® Universal Radio Network Analyzer is abbreviated as R&S Universal Radio Network Analyzer.

R&S® TSMW is abbreviated as R&S TSMW.

R&S® TSMF is abbreviated as R&S TSMF.

R&S® ROMES is abbreviated as R&S ROMES.

R&S® Digital I/Q Interface is abbreviated as R&S Digital I/Q Interface

R&S® Digital I/Q SW is abbreviated as R&S Digital I/Q SW

R&S® IQR is abbreviated as R&S IQR

Basic Safety Instructions

Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the attached EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any purpose other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and, in some cases, a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories. For product-specific information, see the data sheet and the product documentation.

Symbols and safety labels

Symbol	Meaning	Symbol	Meaning
	Notice, general danger location Observe product documentation		ON/OFF supply voltage
	Caution when handling heavy equipment		Standby indication
	Danger of electric shock		Direct current (DC)

Basic Safety Instructions

Symbol	Meaning	Symbol	Meaning
	Warning! Hot surface		Alternating current (AC)
	Protective conductor terminal		Direct/alternating current (DC/AC)
	Ground		Device fully protected by double (reinforced) insulation
	Ground terminal		EU labeling for batteries and accumulators For additional information, see section "Waste disposal/Environmental protection", item 1.
	Be careful when handling electrostatic sensitive devices		EU labeling for separate collection of electrical and electronic devices For additional information, see section "Waste disposal/Environmental protection", item 2.
	Warning! Laser radiation For additional information, see section "Operation", item 7.		

Signal words and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.



Indicates the possibility of incorrect operation which can result in damage to the product.

In the product documentation, the word ATTENTION is used synonymously.

These signal words are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the signal words described here are always used only in connection with the related product documentation and the related product. The use of signal words in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Instrucciones de seguridad elementales

2. Waste electrical and electronic equipment must not be disposed of with unsorted municipal waste, but must be collected separately.
Rohde & Schwarz GmbH & Co. KG has developed a disposal concept and takes full responsibility for take-back obligations and disposal obligations for manufacturers within the EU. Contact your Rohde & Schwarz customer service center for environmentally responsible disposal of the product.
3. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
4. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

For additional information about environmental protection, visit the Rohde & Schwarz website.

Instrucciones de seguridad elementales

¡Es imprescindible leer y cumplir las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad adjunto de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

 
Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

Instrucciones de seguridad elementales


Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios. Los datos específicos del producto figuran en la hoja de datos y en la documentación del producto.

Símbolos y definiciones de seguridad

Símbolo	Significado	Símbolo	Significado
	Aviso: punto de peligro general Observar la documentación del producto		Tensión de alimentación de PUESTA EN MARCHA / PARADA
	Atención en el manejo de dispositivos de peso elevado		Indicación de estado de espera (standby)
	Peligro de choque eléctrico		Corriente continua (DC)
	Advertencia: superficie caliente		Corriente alterna (AC)
	Conexión a conductor de protección		Corriente continua / Corriente alterna (DC/AC)
	Conexión a tierra		El aparato está protegido en su totalidad por un aislamiento doble (reforzado)
	Conexión a masa		Distintivo de la UE para baterías y acumuladores Más información en la sección "Eliminación/protección del medio ambiente", punto 1.

 Instrucciones de seguridad elementales

Símbolo	Significado	Símbolo	Significado
	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)		Distintivo de la UE para la eliminación por separado de dispositivos eléctricos y electrónicos Más información en la sección "Eliminación/protección del medio ambiente", punto 2.
	Advertencia: rayo láser Más información en la sección "Funcionamiento", punto 7.		

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.



PELIGRO identifica un peligro inminente con riesgo elevado que provocará muerte o lesiones graves si no se evita.



ADVERTENCIA identifica un posible peligro con riesgo medio de provocar muerte o lesiones (graves) si no se evita.



ATENCIÓN identifica un peligro con riesgo reducido de provocar lesiones leves o moderadas si no se evita.



AVISO indica la posibilidad de utilizar mal el producto y, como consecuencia, dañarlo.
En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

Instrucciones de seguridad elementales

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal. Categoría de sobrecarga eléctrica 2, índice de suciedad 2.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, se pueden causar lesiones o, en determinadas circunstancias, incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, o bien si el interruptor existente no resulta apropiado para la desconexión de la red, el enchufe del cable de conexión se deberá considerar como un dispositivo de desconexión. El dispositivo de desconexión se debe poder alcanzar fácilmente y debe estar siempre bien accesible. Si, p. ej., el enchufe de conexión a la red es el dispositivo de desconexión, la longitud del cable de conexión no debe superar 3 m). Los interruptores selectores o electrónicos no son aptos para el corte de la red eléctrica. Si se integran productos sin interruptor en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.

Instrucciones de seguridad elementales

6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión $U_{\text{eff}} > 30 \text{ V}$ se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.
12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Qualitätszertifikat

Certificate of quality

Certificat de qualité

Certified Quality System
ISO 9001

Certified Environmental System
ISO 14001

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde&Schwarz-Produktes entschieden. Sie erhalten damit ein nach modernsten Fertigungsverfahren hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde&Schwarz-Qualitätsmanagementsystem ist unter anderem nach ISO 9001 und ISO 14001 zertifiziert.

Der Umwelt verpflichtet

- Energie-effiziente, RoHS-konforme Produkte
- Kontinuierliche Weiterentwicklung nachhaltiger Umweltkonzepte
- ISO 14001-zertifiziertes Umweltmanagementsystem

Dear customer,

You have decided to buy a Rohde&Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards. The Rohde&Schwarz quality management system is certified according to standards such as ISO 9001 and ISO 14001.

Environmental commitment

- Energy-efficient products
- Continuous improvement in environmental sustainability
- ISO 14001-certified environmental management system

Cher client,

Vous avez choisi d'acheter un produit Rohde&Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité. Le système de gestion qualité de Rohde&Schwarz a été homologué, entre autres, conformément aux normes ISO 9001 et ISO 14001.

Engagement écologique

- Produits à efficience énergétique
- Amélioration continue de la durabilité environnementale
- Système de gestion de l'environnement certifié selon ISO 14001





Certificate No.: 2011 – 01

This is to certify that:

Equipment type	Stock No.	Designation
TSMW	1503.3001.02	Radio Network Analyzer
	1503.3001.03	
	1503.3001.04	

complies with the provisions of the Directive of the Council of the European Union on the approximation of the laws of the Member States

- relating to electromagnetic compatibility
(2004/108/EC)
- relating to radio interference of vehicles
(72/245/EEC last adapted by 2009/19/EC)

Conformity is proven by compliance with the following standards:

EN 61326 - 1 : 2006
EN 61326 - 2 - 1 : 2006
EN 55011 : 2007 + A2 : 2007
EN 50498 : 2010

For the assessment of electromagnetic compatibility, the limits of radio interference for Class B equipment as well as the immunity to interference for operation in industry have been used as a basis.

ROHDE & SCHWARZ GmbH & Co. KG
Mühldorfstr. 15, D-81671 München

Munich, 2011-01-31

Central Quality Management GF-QP / Radde



이 기기는 가정용(B급) 전자파
적합기기로서 주로 가정에서
사용하는 것을 목적으로 하며,
모든 지역에서 사용할 수
있습니다

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com



Content

1.	System Overview and Operating Concept	5
	Introduction	5
	Feature Overview:.....	5
	R&S TSMF Special Solution	6
	General Setup	6
	Prerequisites.....	7
	System Requirements	8
2.	Setting up the Instrument	9
	Unpacking.....	9
	Mounting in a 19" Rack.....	9
3.	Front and Rear Panel Description	10
	Front Panel	10
	Rear Panel.....	14
4.	Safety Instructions	18
	General Precautions	18
	Protection against Electrostatics	18
	Cleaning the Outside and Storing	19
	EMC Safety Precautions	19
5.	Connecting the Instrument	20
	Connecting the Instrument to the External Devices	20
	Connecting the LAN Interface.....	22
	Dedicated Network Connection	22
	Non Dedicated Network Connection	27
	Connecting the Instrument to the DC Power Supply	28
	Different Power Cable Connections	29
6.	Switch On or OFF	30
	Switch On	30
	Switch OFF and Standby Mode	31
7.	Checking the Instrument.....	32
	Browser Application	32
	Recalling Instrument Setup.....	33

Overview Instrument Modes	34
Standby Mode.....	35
Idle Mode	35
Connected Mode	36
Measuring Mode	36
Boot / Self test Mode.....	36
System Warning	36
System Error	36
Application Event	36
8. Basic Instrument Functions	37
R&S TSMW-K1 Digital I/Q SW Option	38
Requirements for R&S TSMW-K1 (Matlab®).....	39
Requirements for R&S TSMW-K1 (C++)	39
Preparations	39
Matlab® Functions.....	39
R&S TSMW-B1 Digital I/Q Interface	40
Transfer Mode	40
Requirements for R&S TSMW-B1.....	40
Preparations	40
R&S ViCom Programming Interface	41
General	41
Requirements.....	41
Installation.....	41
Scan Options for R&S ROMES and ViCom.....	43
Requirements for R&S ROMES.....	43
Preparation for R&S ROMES.....	43
Requirements for R&S ViCom	43
R&S TSMW-K21 GSM & WCDMA Option	43
R&S TSMW-K22 CDMA2000® 1xEVDO Option.....	44
R&S TSMW-K26 TETRA Option for R&S ROMES	44
R&S TSMW-K27 RF Power Scan Option.....	44
R&S TSMW-K28 WiMAX Option.....	44
R&S TSMW-K29 LTE Option	45
GPS Standalone via USB	46
Example with Windows Hyper Terminal.....	49

9.	Installed SW	51
	Option Key	51
	Program Requirements to install the Option Key	51
	Software Options	51
	Installation of Software Options	51
	Ordering Additional Software Options	52
10.	Maintenance	53
	Firmware Update - TSMW	53
	Requirements	53
	Instructions FW Update via Web Browser	53
	Configure IP Settings	54
	Firmware Update – GPS Receiver.....	56
11.	Troubleshooting	57
	Identifying the Hardware Revision	57
	Self test of the RF chain	57
	Identifying Error State via Front Panel LEDs	58
	Guide to solving Instrument Connection Problems	60
	Troubleshooting via RS 232	62
	RS-232-C Output	62
	Tracing Power On Sequence	63
12.	Index	65

General

1 POWER Button



The Power Button switches the instrument on or off.

NOTICE

Danger of instrument damage!


- ◆ The instrument must be set up in such a way that the operation of the power switch is not obstructed.
 - ◆ It is strongly recommended to shut down the operating system before switching off the instrument.
-

2 On - LED



On: The instrument is in operating mode.
Flashing: Does not have any functionality.
Reserved for future use.


3 EXT DC - LED

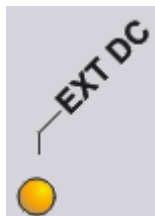

On: The instrument is in standby mode but supplied with external power via the DC port at the rear panel.

The LED is also illuminated if the instrument is switched off i.e. it is in standby mode.

ERROR LEDs

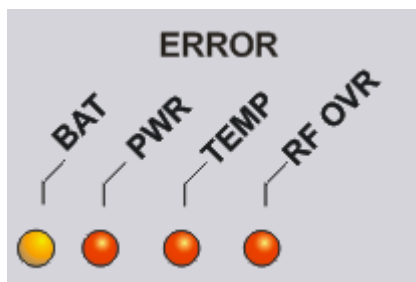

The Error LEDs indicate any failure in the system. The fault has to be diagnosed and resolved, if this is not possible stop measurements and contact R&S service.

4 ERR BAT – LED

Since R&S TSMW Var03 this LED is not used anymore.

5 ERR PWR - LED

On: At least one of the internal voltages is out of range.

This can damage the instrument and / or cause faulty measurements.

6 ERR TEMP - LED

On: System is overheated.

This can damage the instrument and / or cause faulty measurements.


7 ERR RF OVR - LED

On: Input of RF is too high.


Risk of fatal damage to the RF part of the instrument.

GPS

8 GPS PPS - LED

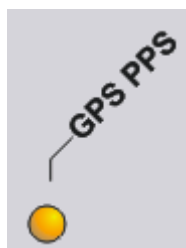

Flashing: The LED flashes once a second if the internal GPS delivers PPS (Pulse per Second) time sync signal.

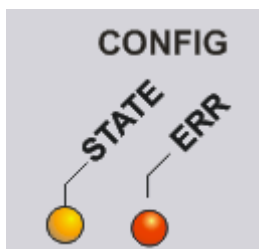CONFIGURATION LEDs

Indicate the internal FPGA configuration state.

9 CONFIGURATION STATE

Flashing: FPGA in process.

On: FPGA configuration finished.


For the different modes refer to [Figure 7-3: Modes and Interim States](#) on page 34.

10 CONFIGURATION ERROR

Flashing: No flashcard detected.

On: FPGA configuration files could not be read from flash.

If the configuration file cannot be loaded the system will shut down.

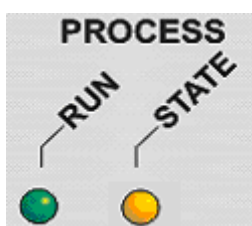PROCESS LEDs

Indicate the operating mode of the instrument.

11 PROCESS RUN

On: Connected Mode, device is configured for a specific measurement.

Off: Idle, device is booted, but not connected.

Flashing (slowly):

Measuring mode, measurement is running.

Flashing (fast):

Special application event, for future use.

12 PROC STATE – LED

On: Booting and self-test finished successfully.

Flashing (slowly):

System warning, minor problem detected.

Flashing (fast):

System error, major problem detected.

1 DC IN

The instrument is supplied with an external power supply and a separate power cable.

Power supply:

Snap and lock jack, "2-pin" power supply input 9 V to 18 V DC with 10A max.

2 RS232

The RS232 serial port, 9-pin D-Sub (male) connector can be connected with the RS-232-C interface on the PC or notebook via a null-modem cable (necessary only for service purposes and troubleshooting).

NOTICE**Danger of instrument damage!**

Before switching on the instrument for the first time, check whether the correct DC supply voltage is present.

3 REF

Input/output for reference signal (SW controlled):

Output (Default):

- Output of internal 10 MHz reference signal (approx. sine wave / source impedance 50 R / output level ~ 0 dBm)

Input:

- Input for external 10 MHz reference (valid range: 0 to 10 dBm / input impedance 50R)

NOTE: if this connector is labeled "Ext. REF" then it is for reference signal input only (earlier TSMW models did not support the REF in/out feature).

4 Smart Card

Slot for Compact Flash Card.

**Warranty!**

Device will loose warranty if seal is broken.

5 PULSE IN/OUT 1 and 2

Input/output for configurable signals for triggering and control

 
Modes:

a) PPS IN: applied GPS PPS (Pulse per second) signal is used for synchronization

b) Trigger IN: applied trigger pulses used for cycle pulse recording (input 5V TTL, max. 200 Hz)

c) PPS out: output of internal PPS pulse of GPS receiver

NOTE: the functions listed above were introduced with FW 1.11

6 GPS ANT

SMA Connector for the external active or passive GPS antenna.

Antenna power: 3V max. 25mA

7 LAN

High speed Gigabit Ethernet interface with RJ 45 connector using IPv4.

8 GPS

This USB port can be used to output a GPS signal to an external device. The internal GPS is working as a standalone GPS instrument even if the instrument is not powered. Power supply for the GPS receiver will be done via the USB connection.

9 IQ Digital OUTPUT




R&S Digital I/Q Interface for R&S TSMW(Var03)

Output connector for digital I/Q data. An appropriate cable is not part of the package. Ask R&S for ordering information.

The interface is supported by many Rohde & Schwarz instruments.

10 RF 1 / RF2

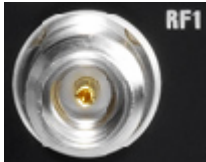

Input for the RF Signal.

N female, input impedance 50 Ω ,
VSWR type. 2.0

NOTICE

Danger of instrument damage!

Do not inject more than the maximum rated RF input power, otherwise, the input stage can be severely damaged.

Max. input power: +5dBm/ 0V DC

11 CAL




QMA input of carrier signal used for phase calibration of the two RF front ends (optional).

NOTICE

Danger of instrument damage!


In all operation modes of the instrument keep attention that no cable is connected with the CAL connector.

12 TEST

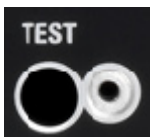


SMP port used for self test of the RF chain. Cable for test purposes is included in the delivery.
Self test is not implemented. For future use.

2. Select the LAN Connection which is connected to the instrument and open the "Properties" dialog via right mouse click.

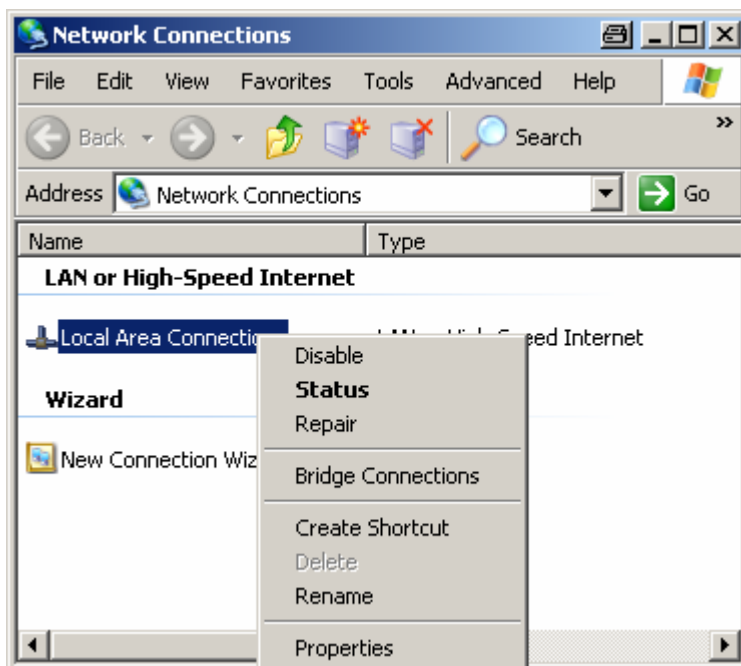


3. Select Properties for Internet Protocol (TCP/IP).

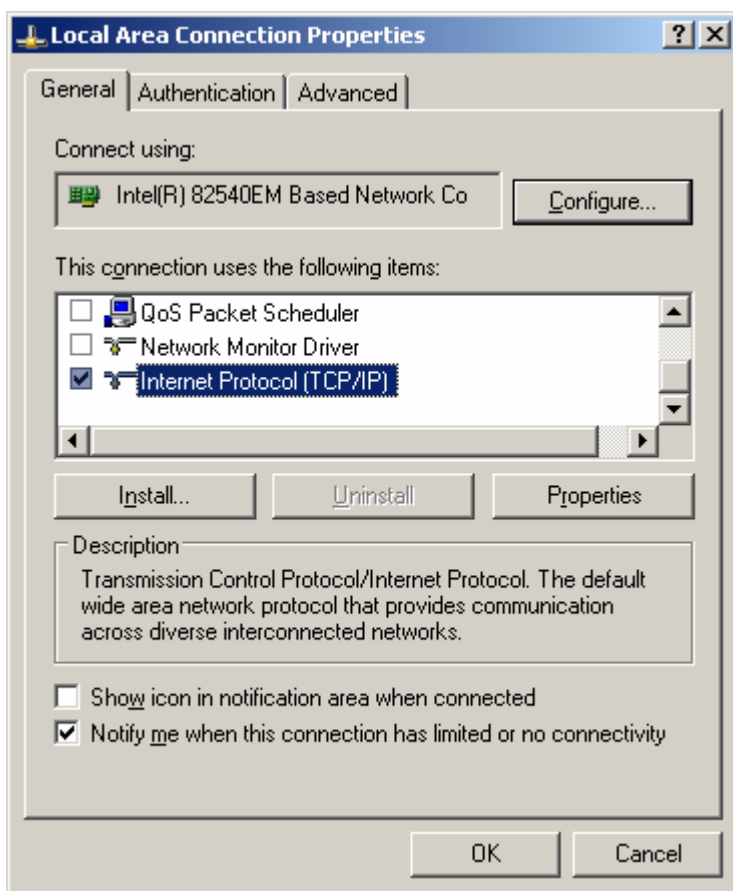


4. Use following TCP/IP settings:


IP address: 192.168.0.1
Subnet mask: 255.255.255.0
No Default Gateway

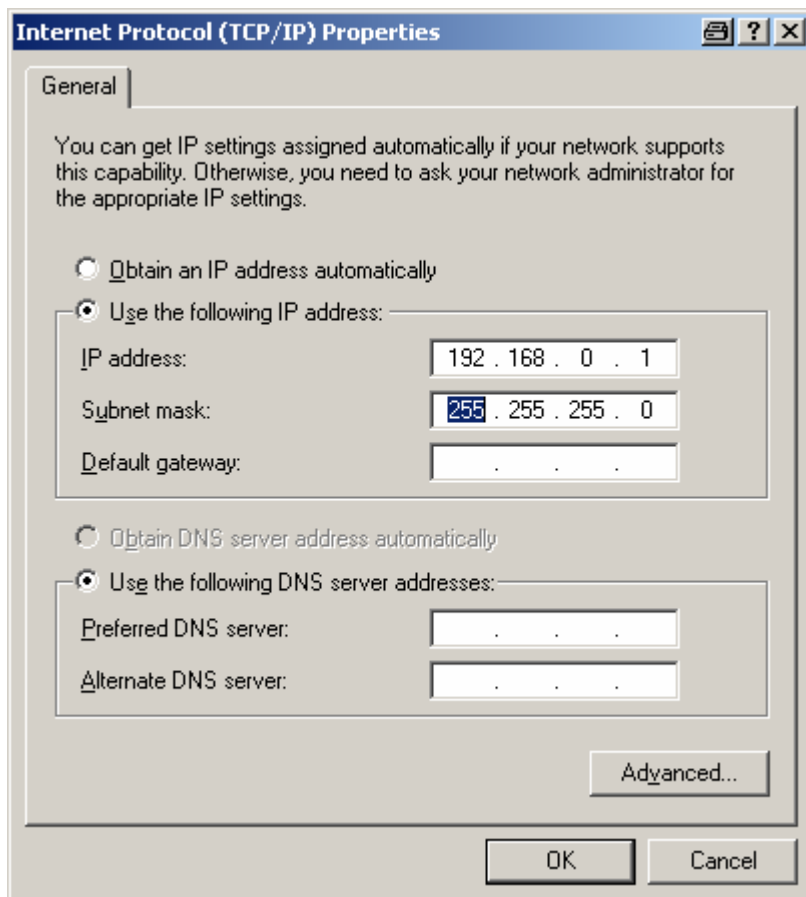


5. Open "Advanced Settings" window and deactivate NetBIOS over TCP/IP in the WINS tab.

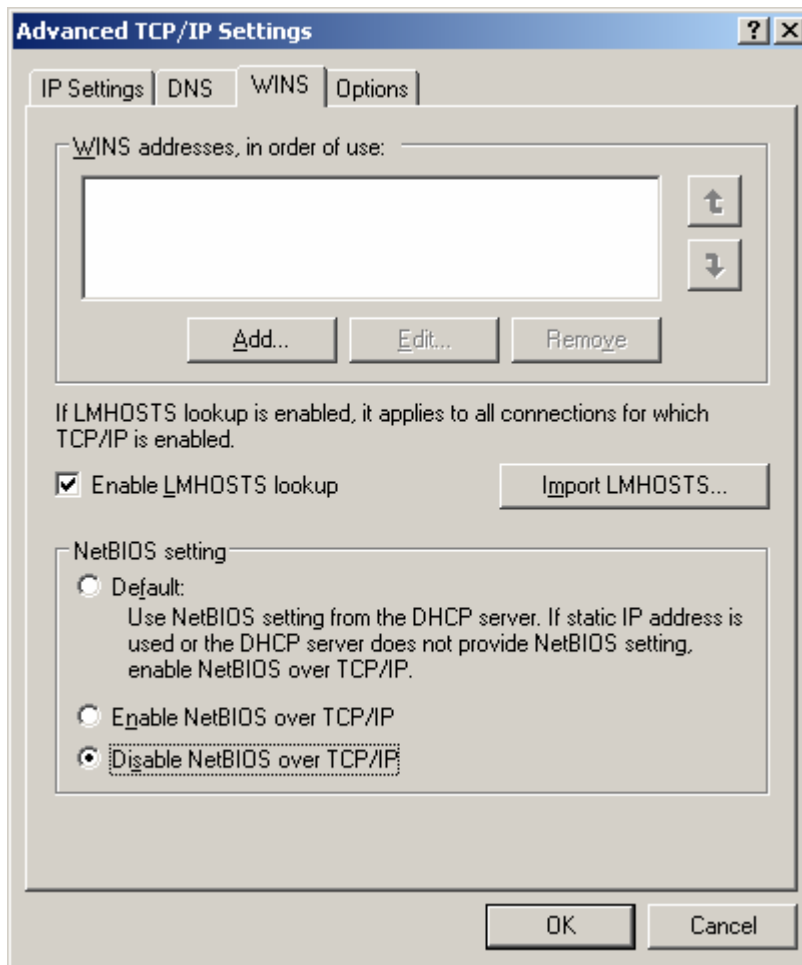


6. For optimal data throughput you should open the "device manager".

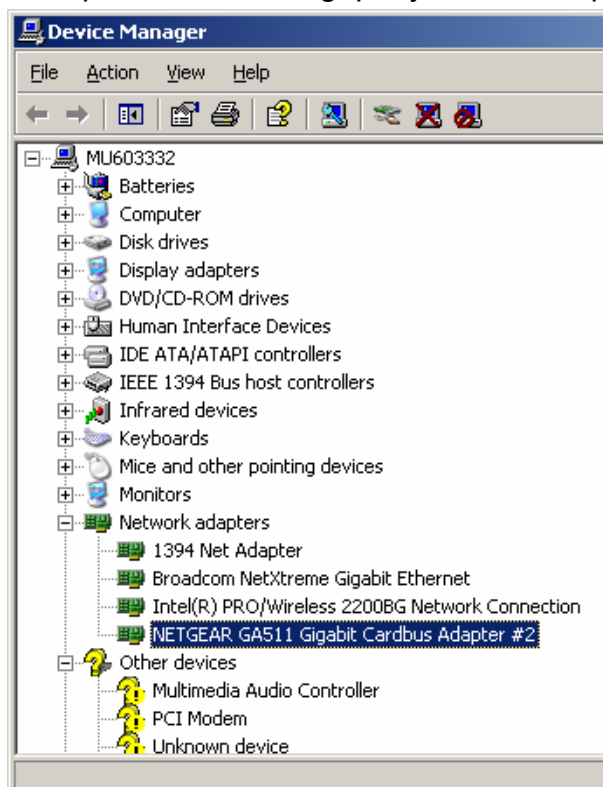

7. Enable "Jumbo Frames" with 9k if possible.

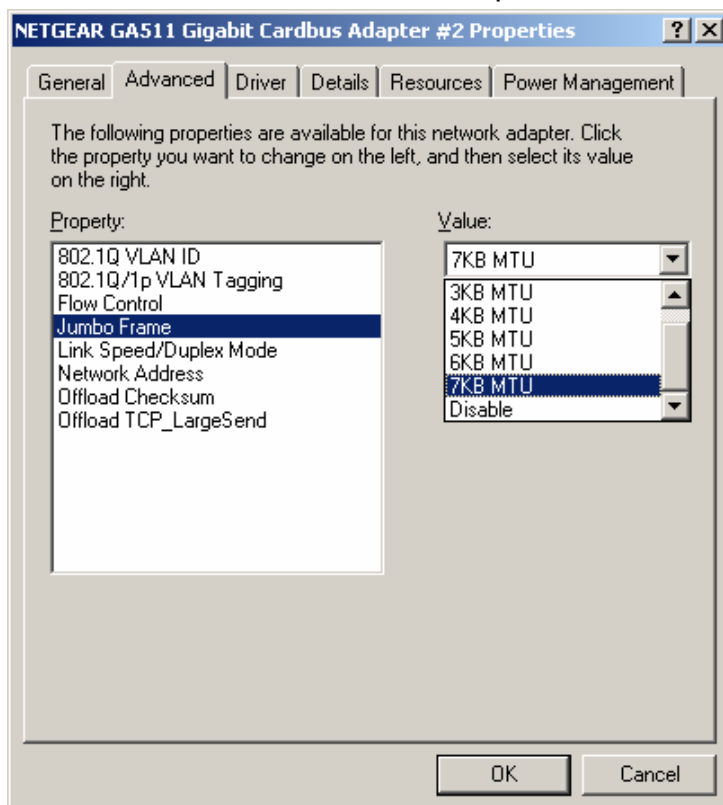

8. Enable "Flow Control".

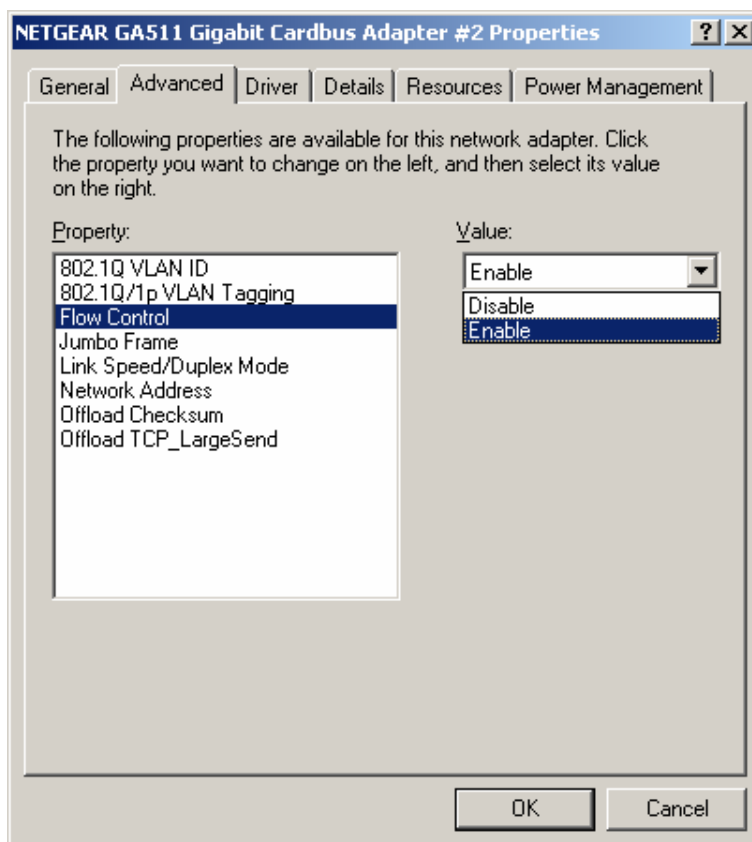

- ◆ After booting the instrument double check via ping command if the connection is successfully established (see [Ping Command](#)).

The ViCom installation adds a shortcut entry in the Windows start menu

“Rohde & Schwarz -> ViCom <version no.>” from where you have a convenient access to all the R&S ViCom specific data (demo applications, debug utilities, tools and manuals, etc.).

GPS Standalone via USB

Prerequisite for the GPS Standalone operation is, that the internal GPS receiver is not used by R&S ROMES resp. R&S ViCom or R&S TSMW-K1 software.

The USB connection (port GPS) to the PC must be established and the USB antenna must be connected (GPS port ANT).



GPS Standalone


The "Standalone" operation is only necessary if the instrument is not acting with the R&S ROMES / ViCom software or a firmware update of the GPS receiver is necessary.

From the R&S ROMES / ViCom software the GPS module is accessible via the LAN interface and the USB connection is not necessary.

When connecting the USB port the first time Windows is looking for the applicable driver.




The applicable driver is delivered with the CD, insert the CD and select *Search removable media floppy*.

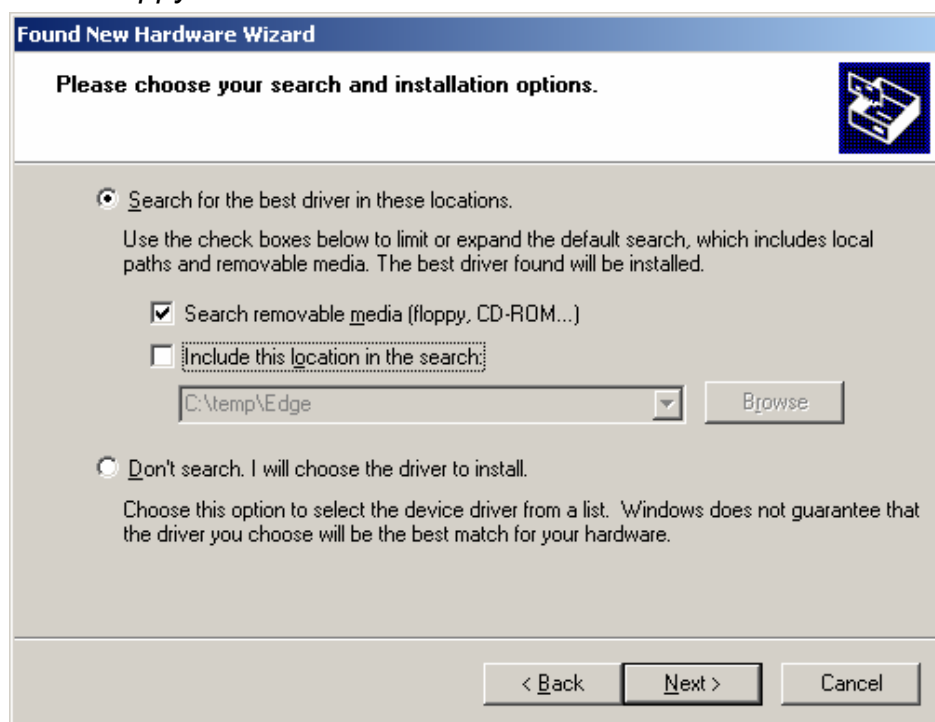

If the appropriate driver is chosen press *Finish*.



After successful installation you can find in the Device Manager> Control Panel following entry: ANTRARIS(r) 4 associated with the emulated COM port.

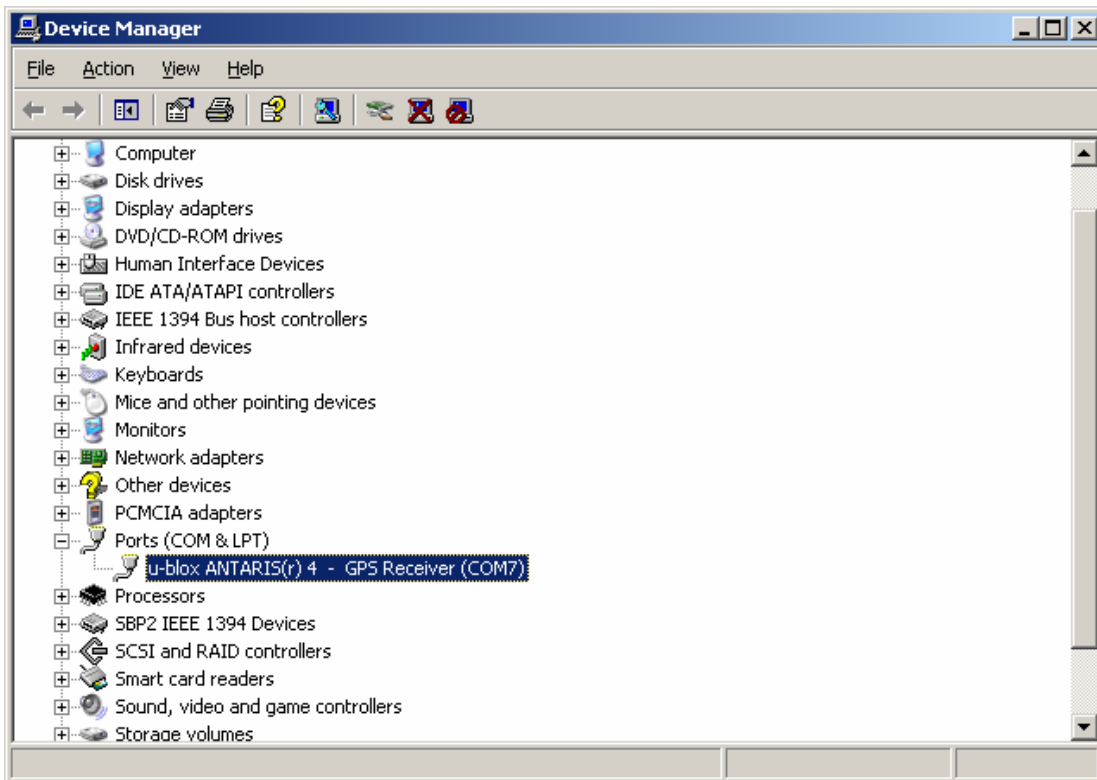

Any terminal program, which is connected with this COM interface, can access GPS data in NMEA format.



u-Blox

The module is using the u-Blox LEA-4H chipset. For further details and applications, contact the manufacturer uBlox www.u-blox.de.

Network Configuration

IP Address	IP Netmask	
192.168.0.2	255.255.255.0	(currently active)
192.168.0.2	255.255.255.0	Change IP Setting

Please carefully verify IP address und netmask settings in the corresponding input fields before pressing "Change IP Setting"!!!
IP address and netmask settings of the host PC LAN adapter potentially need to be adapted in order to reconnect with the R&S® TSMW successfully.

The old and also the new IP address and subnet mask after rebooting will be shown.

Network Configuration

IP Address	IP Netmask	
192.168.0.2	255.255.255.0	(currently active)
192.168.0.4	255.255.255.0	(currently configured, active after next reboot)
192.168.0.4	255.255.255.0	Change IP Setting

Please carefully verify IP address und netmask settings in the corresponding input fields before pressing "Change IP Setting"!!!
IP address and netmask settings of the host PC LAN adapter potentially need to be adapted in order to reconnect with the R&S® TSMW successfully.

- ◆ Trigger a reboot and access the instrument web interface with the new IP address.

Network Configuration

IP Address	IP Netmask	
192.168.0.4	255.255.255.0	(currently active)
192.168.0.4	255.255.255.0	Change IP Setting

Please carefully verify IP address und netmask settings in the corresponding input fields before pressing "Change IP Setting"!!!
IP address and netmask settings of the host PC LAN adapter potentially need to be adapted in order to reconnect with the R&S® TSMW successfully.

IP Configuration via RS232

Changing the IP Setting via the RS232 is exceptionally necessary if wrong *Settings* are done via the web interface and the instrument is not accessible any more.

- ◆ Enter the command `ipconfig` to see the current IP settings.
- ◆ With `ipconfig [IPv4Address] [IPv4Netmask]` you can change the address.
 - IPv4Address (Format 123.456.789.012)
 - IPv4Netmask (Format 123.456.789.012)

Config Error

The instrument configuration data and the boot sequence are read from the internal compact flash (CF) card. If the CONFIG ERROR LED indicates "Flash Card Missing" (LED blinking fast) immediately after the analyzer has been powered on, the configuration data cannot be read from the CF card.

If the CONFIG ERR LED indicates "Flash Card Error" (LED on), the flash card may also contain erroneous or corrupt files. After five seconds indicating a Configuration Error the device will switch to Standby mode.

The reason for the Flash Card Error during ordinary R&S ROMES measurements is usually a program failure in the instrument itself. At this stage, the instrument will no longer respond to the R&S ROMES application. You can check this by monitoring the RS-232-C output (see Tracing R&S ROMES Measuring mode) and the PROCESS LEDs on the front panel (see R&S ROMES Measuring mode). If an error occurs, the blinking of the LEDs stops!

In this case, shut down the R&S ROMES application from the Windows Task Manager and reset the instrument. Wait for the instrument to complete the power on sequence and then set up a new R&S ROMES measurement.

If the error persists, contact Rohde & Schwarz support.

NOTICE**Device Warranty!**

You will lose any kind of warranty if you open the cover of the flash card on the rear panel and remove the flash card.

For information on how to perform R&S ROMES measurements, refer to the R&S ROMES documentation.)

Power Failure

At least one internal voltage rail is out of range. Return the device to Rohde & Schwarz service.

R&S TSMW

TCP/IP settings, 24

Temperature, 58

TETRA, 44

Transfer Rate Hard disk, 8

TSMF, 6

TSMW Modes, 35

WCDMA, 43

WiMAX, 44

Wiring Diagram, 21