

DYNA-QUIK MODEL 675 TUBE CHART ManualPlus.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
1A5	1	54		75		
1A7	1	54		72		
1AF4	1	55		68		
1AJ4	1	55	1	68		
1AX2	1	9		87		
1B3	1	10		51		
1B7	1	54		66		
1C1	1	55	1	70		
1C5	1	54		64		
1D8	1	54		64		
1DN5	1	55		72		
1F1	1	55	1	68		
1F2	1	55		67		
1F3	1	55		67		
1FD9	1	55		68		
1G3	1	10		51		
1G6	1	54		63		
1H2	1	9		60		
1H5	1	54		70		
1J3	1	10		87		
1K3	1	10		87		
1L4	1	55		67		
1N2-A	1	10	1	48		
1N5	1	54		75		
1P5	1	54		74		
1P10	3	55		65		
1P11	3	55	1	63		
1Q5	1	54		63		
1R5	1	55		70		
1S2	1	9		35		
1S4	1	55		64		
1S5	1	55		68		
1T4	1	55		67		
1U4	1	55		68		
1U5	1	55		72		
1V2	1	49		56		
1X2	1	9		48		
2AF4	2	29		77	55R	6500
2B3	2	10		29		
2BN4	2	22		51	20R	6800
2CY5	2	1		55	30R	8000
2EA5	2	1		67	53R	8000
2EN5	2	13	1	60		
			2	60		
2EV5	2	1		51	30R	8800
2FV6	2	1	1	52	30R	8000
2T4	2	29		78	59R	7000
3A2	3	9		25		
3A3	3	10		55		
3A4	3	55		63		
3A8	3	54		65		
3AF4	3	29		77	55R	6500
3AL5	3	13	1	57		
			2	57		
3AU6	3	1		72	52R	5200
3AV6	3	35	1	90	57	1600
			2	65		
			3	65		
3B2	3	10		69		
3BA6	3	1		74	76	4400
3BC5	3	1		71	50R	5700
3BE6	3	1		91		
3BN4	3	22		51	20R	6800
3BN6	3	23		90		
3BU8	3	48		92		
3BY6	3	1		91	62	1900
3BZ6	3	1		61	31R	6100
3C2	3	10		20		
3CB6	3	1		62	36R	6200
3CE5	3	1		62	36R	6200
3CF6	3	1		62	37R	6200
3CS6	3	1		95	45	1100
3CY5	3	1		55	30R	8000
3DK6	3	1		62	55R	9800
3DT6	3	1		92		
3EA5	3	1		67	53R	8000
3EV5	3	1		51	30R	8800
3GS8	3	48	1	98		
			2	98		
3L35	3	55	1	63		
3Q4	3	55		63		
3Q5	3	54		65		
3S4	3	55		65		
3V4	3	55		63		
4AU6	4	1		72	52R	5200
4AU8	4	16	1	54	19R	7000
			2	60	63	4900
4BA6	4	1		74	76	4400
4BC5	4	1		71	50R	5700
4BC8	4	2	1	54	17R	6200
			2	54	17R	6200
4BE6	4	1		91		
4BL8	4	15	1	63	39R	6200
			2	53	17R	5000
4BN4	4	22		51	20R	6800
4BN6	4	23		90		
4BQ7	4	2	1	51	21R	6400
			2	51	21R	6400
4BS8	4	2	1	55	25R	7200
			2	55	25R	7200
4BU8	4	48	1	92		
			2	92		
4BZ6	4	1		61	33R	6100
4BZ7	4	2	1	48	17R	6800
			2	48	17R	6800
4BZ8	4	2	1	54	33R	8000
			2	54	33R	8000
4CB6	4	1		62	36R	6200
4CE5	4	1		62	36R	7600
4CS6	6	1		95	45	1100
4CY5	4	1		55	30R	8000
4DE6	4	1		60	34R	6200
4DK6	4	1		60	54R	9800
4DT6	4	1		92		
4ES8	4	2	1	32		
			2	32		
4EW6	4	1		68	72R	14000
4GM6	4	1	1	58	60R	13000
4GS8	4	48	1	98		
			2	98		
5AM8	5	44	1	60	39R	7000
			2	57		
5AN8	5	45	1	62	38R	6200
			2	62	54	3300
5AQ5	5	31		74	69	4100
5AR4	5	3	1	10		
			2	10		
5AS4	5	3	1	16		
			2	16		
5AS8	5	39	1	63	35R	6200
			2	58		
5AT8	5	18	1	78	41R	4600
			2	60	22R	4000
5AV8	5	58A	1	58	32R	6200
5AV8	5	58B	1	81	72	3300
5AZ4	5	3	1	26		
			2	26		
5B8	5	58A	1	58	32R	6200
5B8	5	58B	1	81	72	3300
5BE8	5	18	1	73	40R	5200
			2	55	41R	8500
5BK7	5	2	1	55	42R	9300
			2	55	42R	9300
5BQ5	5	61	1	52	46R	11300
5BQ7	5	2	1	51	21R	6400
			2	51	21R	6400
5BR8	5	18	1	72	44R	5200
			2	53	34R	8500
5BS8	5	2	1	55	25R	7200
			2	55	25R	7200
5BZ7	5	2	1	48	17R	6800
			2	48	17R	6800
5CG8	5	18	1	70	35R	4600
			2	55	18R	5800

DYNA-QUIK MODEL 675 TUBE CHART

ManualsPlus.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True Gm	Stand. Gm
5CL8	5	18	1	71	52R	5800
			2	52	27R	8000
5CM6	5	41		63	61	4100
5CQ8	5	15	1	66	41R	5800
			2	55	33R	8000
5CZ5	5	41		58	21R	4800
5DB4	5	3	1	13		
			2	13		
5DH8	5	18	1	60	53R	8600
			2	66	27R	4400
5EA8	5	15	1	69	52R	8000
			2	55	40R	5000
5EH8	5	16	1	70	51R	6000
			2	53	25R	7500
5ES8	5	2	1	32		
			2	32		
5FV8	5	18	1	66		
			2	53		
5GH8	5	15	1	64	51R	7500
			2	53	38R	8500
5GM6	5	1	1	58	60R	13000
5J6	5	12	1	57	28R	5300
			2	57	28R	5300
5N1039A	6	1	1	60	25R	5100
5R4	5	3	1	23		
			2	23		
5T4	5	3	1	14		
			2	14		
5T8	5	37	1	92	54	1200
			2	58		
			3	58		
5U4	5	3	1	13		
			2	13		
5U8	5	15	1	71	41R	5200
			2	53	28R	8500
5V3	5	3	1	16		
			2	16		
5V4	5	3	1	12		
			2	12		
5V6	5	14		74	74	4100
5W4	5	3	1	29		
			2	29		
5X8	5	16	1	70	73	4600
			2	55	20R	5800
5Y3	5	3	1	21		
			2	21		
5Z4	5	3	1	15		
			2	15		
5Z10	5	3	1	13		
			2	13		
6AB4	6	21		66	35R	5500
6AB7	6	25		70	42R	5000
6AC7	6	25		56	50R	9000
6AF3	5	47		13		
6AF4	6	29		77	55R	6500
6AG5	6	1		72	52R	5000
6AG7	6	25		34	31R	11000
6AH4	6	24		62	64	4500
6AH6	6	1		58	50R	9000
6AJ4	6	40		45	28R	10000
6AJ7	6	25	1	56	50R	9000
6AK5	6	1		60	25R	5100
6AK6	6	1		77	57	2300
6AK7	6	25	1	34	31R	11000
6AK8	6	37	1	92	54	1200
			2	58		
			3	58		
6AL5	6	13	1	57		
			2	57		
6AM4	6	40		67	57R	9800
6AM8	6	44	1	60	39R	7000
			2	57		
6AN4	6	30		60	54R	10000
6AN5	6	1		30	15R	8000
6AN8	6	45	1	62	38R	6200
			2	62	54	3300
6AQ5	6	31		74	69	3700

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True Gm	Stand. Gm
6AQ6	6	35	1	83	42	1200
			2	79		
			3	79		
6AQ7	6	46	1	92	60	1600
			2	76		
			3	76		
6AQ8	6	2	1	65	40R	5900
			2	65	40R	5900
6AR5	6	31		87	67	2300
6AS5	6	32		55	20R	5600
6AS6	6	1		77	66	3200
6AS8	6	39	1	63	35R	6200
			2	58		
6AT6	6	35	1	90	55	1300
			2	62		
			3	62		
6AT8	6	18	1	78	41R	4600
			2	60	22R	5800
6AU4	6	8		9		
6AU5	6	20		57	24R	5600
6AU6	6	1		72	52R	5200
6AU7	6	2	1	69	53	2200
			2	69	53	2200
6AU8	6	16	1	54	19R	7000
			2	60	63	4900
6AV5	6	20		53	16R	5500
6AV6	6	35	1	90	57	1600
			2	65		
			3	65		
6AW8	6	16	1	43	25R	9000
			2	75	74	4000
6AX2	6	9	1	87		
6AX4	6	8		10		
6AX5	6	3	1	27		
			2	27		
6AX7	6	2	1	90	58	1600
			2	90	58	1600
6AX8	6	15	1	63	26R	4800
			2	52	33R	8500
6AZ8	6	50	1	62	35R	6000
			2	57	52	3300
6B31	6	13	1	57		
			2	57		
6B32	6	13	1	57		
			2	57		
6BA6	6	1		74	76	4400
6BA7	6	59		70		
6BA8	6	16	1	41	25R	9000
			2	56	37	2700
6BC5	6	1		71	50R	5700
6BC8	6	2	1	54	17R	6200
			2	54	17R	6200
6BC32	6	35	1	90	57	1600
			2	65		
			3	65		
6BD5	6	20		87	57R	5000
6BD6	6	1		83	60	2000
6BE6	6	1		91		
6BE8	6	18	1	73	40R	5200
			2	55	41R	8500
6BF5	6	31		45	20R	7500
6BF6	6	35	1	82	57	1900
			2	70		
			3	70		
6BG6	6	5		53	18R	6000
6BH6	6	1		88	91	4600
6BH8	6	16	1	57	35R	7000
			2	53	34	3300
6BJ6	6	1		81	75	3600
6BJ8	6	60	1	60		
			2	60		
			3	60		
6BK5	6	38		42	21R	8500
6BK6	6	35		83	40	1600
6BK7	6	2	1	55	42R	9300
			2	55	42R	9300
6BL4	6	8		10		

DYNA-QUIK MODEL 675 TUBE CHART

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
6BL7	6	4	1	60	40R	7000
			2	60	40R	7000
6BL8	6	15	1	63	39R	6200
			2	53	17R	5000
6BN4	6	22		51	20R	6800
6BN5	6	61	1	72		
6BN6	6	23		90		
6BN8	6	60	1	74	58	2500
			2	60		
			3	60		
6BQ5	6	61		52	46R	11300
6BQ6	6	7		69	45R	5500
6BQ7	6	2	1	51	21R	6400
			2	51	21R	6400
6BR8	6	18	1	72	44R	5200
			2	53	34R	8500
6BS8	6	2	1	55	25R	7200
			2	55	25R	7200
6BT6	6	35	1	90	55	1300
			2	62		
6BU6	6	35	3	62		
			1	82	57	1900
			2	70		
			3	70		
6BU8	6	48	1	92		
			2	92		
6BX7	6	4	1	54	26R	7600
			2	54	26R	7600
6BY6	6	1		91	62	1900
6BY8	6	62	1	83	52R	4500
			2	60		
6BZ6	6	1		61	33R	6100
6BZ7	6	2	1	48	17R	6800
			2	48	17R	6800
6BZ8	6	2	1	54	33R	8000
			2	54	33R	8000
				70	53	2200
6C4	6	21		70	53	2200
6C5	6	14		95	71	2000
6CA5	6	32		55	40R	9200
6CA7	6	14		53	51R	11000
6CB5	6	6		32	15R	8800
6CB6	6	1		62	36R	6200
6CC10	6	4	1	92	76	2600
			2	92	76	2600
6CD6	6	6		35	19R	7700
6CE5	6	1		62	36R	6200
6CF6	6	1		62	37R	6200
6CG7	6	2	1	70	56	2600
			2	70	56	2600
6CG8	6	18	1	70	35R	4600
			2	55	18R	5800
6CH8	6	63	1	60	36R	6200
			2	57	13R	3300
6CK4	6	24		59	32R	6500
6CL5	6	6		40	15R	6500
6CL6	6	19		35	32R	11000
6CL8	6	18	1	71	52R	5800
			2	52	27R	8000
6CM6	6	41		63	61	4100
6CM7	6	36	1	75	75	4400
			2	88	62	2000
6CN7	6	43	1	92	55	1200
			2	60		
			3	60		
6CQ4	6	8	1	11		
6CQ8	6	15	1	66	41R	5800
			2	55	33R	8000
6CS6	6	1		95	45	1100
6CS7	6	51	1	62	23R	4500
			2	92	68	2200
6CU5	6	32		45	21R	7500
6CU6	6	7		69	45R	5500
6CU8	6	64A	1	60	35R	6200
6CU8	6	64B	1	84	76	3300
6CW5	6	61		20	16R	10000
6CX8	6	16	1	45	34R	10000
			2	61	23R	4600

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
6CY5	6	1		55	30R	8000
6CY7	6	65A	1	65	36R	5400
6CY7	6	65B	1	90	55	1300
6CZ5	6	41		58	21R	4800
6D2	6	13	1	57		
			2	57		
6DA4	6	8		9		
6DB5	6	41		34	22R	8000
6DB6	6	1		84		
6DC6	6	1		64	36R	5500
6DE4	6	8		11		
6DE6	6	1		60	34R	6200
6DE7	6	66A	1	66	51R	6500
6DE7	6	66B	1	88	62	2000
6DG6	6	14		35	20R	8000
6DJ8	6	2	1	25		
			2	25		
6DK6	6	1		62	55R	9800
6DL5	6	31	1	84		
6DN6	6	6		34	20R	9000
6DN7	6	4	1	56	37R	7700
			2	93	76	2500
6DQ5	6	6		42	29R	10500
6DQ6	6	7		66	47R	6600
6DS5	6	31		72	51R	5800
6DT5	6	41		45	16R	6200
6DT6	6	1		92		
6DT8	6	2	1	67	39R	5500
			2	67	39R	5500
6DW5	6	41		25	10R	5500
6EA5	6	1		67	53R	8000
6EA8	6	15	1	69	52R	6400
			2	55	40R	8500
6EB5	6	13	1	69		
			2	69		
6EB8	6	16	1	38	38R	12500
			2	98	86	2700
6EH5	6	32		54	55R	14600
6EH8	6	16	1	71	51R	6000
			2	54	29R	7500
6EM5	6	41		53	17R	5100
6ES8	6	2	1	32		
			2	32		
6EV5	6	1		51	30R	8800
6EV7	6	2	1	76	51R	5200
			2	76	51R	5200
6EW6	6	1		68	72R	14000
6EW7	6	66A	1	68		
		66B	1	92		
		6	1	42		
6EX6	6	6		1		
6EY6	6	14	1	65		
6EZ5	6	14		63	24R	4100
6F6	6	14		90	71	2500
6F10	6	25	1	56	50R	9000
6F31	6	1	1	74	76	4400
6F33	6	1	1	77	66	3200
6F36	6	1	1	58	50R	9000
6FE5	6	14		33	21R	9500
6FV6	6	1		52	30R	8000
6FV8	6	18	1	66		
			2	53		
6FW8	6	2	1	28		
			2	28		
6G6	6	14		95	77	2300
6GC5	6	41	1	26		
6GC6	6	6		51	22R	6600
6GH8	6	15	1	64	51R	7500
			2	53	38R	8500
6GJ8	6	15	1	64		
			2	53		
6GM6	6	1		58	60R	13000
6GN8	6	16	1	32	27R	11500
			2	97	52R	2700
6GS8	6	48	1	98		
			2	98		
6H31	6	1	1	91		
6J5	6	14		89	73	2600

DYNA-QUIK MODEL 675 TUBE CHART

ManualsPlus.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
6J6	6	12	1	57	28R	5300
			2	57	28R	5300
6K6	6	14		86	67	2300
6L6	6	14		63	36R	6000
6L10	6	25	1	34	31R	11000
6L12	6	2	1	65	40R	5900
			2	65	40R	5900
6L43	6	19	1	35	32R	11000
6LD12	6	37	1	92	54	1200
			2	58		
			3	58		
6NK7GT	6	25	1	81	56	2000
6P5	6	14		94	58	1450
6P15	6	61	1	52	46R	11300
6R8	6	37	1	83	57	1900
			2	58		
			3	58		
6S2	6	9	1	35		
6S4	6	41		56	57	4500
6SA7	6	26		100		
6SB7Y	6	26		95		
6SD7	6	25		68	27R	4250
6SG7	6	25		72	70	4000
6SH7	6	25		75	79	4900
6SJ7	6	25		79	51	1650
6SK7	6	25		81	56	2000
6SL7	6	52	1	100	65	1600
			2	100	65	1600
6SN7	6	4	1	92	76	2600
			2	92	76	2600
6SQ7	6	27	1	98	53	1175
			2	90		
			3	90		
6SR7	6	27	1	84	58	1900
			2	87		
			3	87		
6SS7	6	25		88	61	1850
6ST7	6	27	1	95	70	1900
			2	90		
			3	90		
6SU7	6	52	1	93	60	1600
			2	93	60	1600
6SZ7	6	27	1	91	54	1200
			2	92		
			3	92		
6T4	6	29		78	59R	7000
6T8	6	37	1	92	54	1200
			2	58		
			3	58		
6U4	6	8		11		
6U6	6	14		54	20R	6200
6U8	6	15	1	71	41R	5200
			2	53	28R	8500
6V3	6	47		10		
6V6	6	14		74	74	4100
6W4	6	8		9		
6W6	6	14		45	22R	8000
6X4	6	34	1	15		
			2	15		
6X5	6	3	1	16		
			2	16		
6X8	6	16	1	70	73	4600
			2	58	20R	5800
6Y6	6	14		50	21R	7100
6Z31	6	34	1	15		
			2	15		
6ZY5	6	3	1	21		
			2	21		
7A4	6	56		70	56	2600
7A5	6	56		40	15R	5800
7A7	6	56		84	60R	2000
7AD7	6	56	1	55		
7AF7	6	57	1	73	54	2100
			2	73	54	2100
7AG7	6	56		92	91	4200
7AH7	6	56		95	85	3300
7AK7	6	56	1	58		

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
7AU7	7	2	1	69	53	2200
			2	69	53	2200
7B5	6	56		84	63	2100
7B7	6	56		86	59	1750
7C5	6	56		61	22R	3750
7C7	6	56		82	52	1300
7DJ8	7	2	1	25		
			2	25		
7ES8	7	19	1	23	21R	12500
			2	23	21R	12500
7EY6	7	14		65	66	4400
7F7	6	57	1		78	1600
			2		78	1600
7G7	6	56	1	63		
7H7	6	56		74	33R	4000
7L7	6	56	1	81		
7N7	6	57	1	72	57	2600
			2	72	57	2600
7V7	6	56		65	39R	5800
7W7	6	56	1	68		
8A8	8	15	1	63	39R	6200
			2	53	17R	5000
8AU8	8	16	1	54	19R	7000
			2	60	63	4900
8AW8	8	16	1	43	25R	9000
			2	75	74	4000
8BA8	8	16	1	41	25R	9000
			2	56	37	2700
8BH8	8	16	1	57	35R	7000
			2	53	34	3300
8BN8	8	60	1	74	58	2500
			2	60		
			3	60		
8BQ5	8	61		52	46R	11300
8BQ7	8	2	1	51	21R	6400
			2	51	21R	6400
8CG7	8	2	1	70	56	2600
			2	70	56	2600
8CH8	8	63	1	60	36R	6200
			2	57	13R	3300
8CM7	8	36	1	75	75	4400
			2	88	62	2000
8CN7	8	43	1	92	55	1200
			2	60		
			3	60		
8CS7	8	51	1	62	23R	4500
			2	92	68	2200
8CU8	8	64A	1	60	35R	6200
8CU8	8	64B	1	84	76	3300
8CW5*	8	61		20	16R	10000
8CX8	8	16	1	45	34R	10000
			2	61	23R	4600
8CY7	8	65A	1	65	36R	5400
8CY7	8	65B	1	90	55	1300
8DE7	8	66A	1	66	51R	6500
8DE7	8	66B	1	88	62	2000
8EB8	8	16	1	38	38R	12500
			2	98	86	2700
8EM5	8	41		53	17R	5100
8GN8	8	16	1	32	27R	11500
			2	97	52R	2700
8SN7	8	4	1	92	76	2200
			2	92	76	2200
9A8	9	15	1	63	39R	6200
			2	53	17R	5000
9AK8	9	37	1	92	54	1200
			2	58		
			3	58		
9AQ8	9	2	1	65	40R	5900
			2	65	40R	5900
9AU7	9	2	1	69	53	2200
			2	69	53	2200
9BR7	9	42	1	71	45R	5500
			2	59		
			3	59		
9BR8	9	18	1	72	44R	5200
			2	53	34R	8500

* or Δ Cards available in Accessory Package ASM-10
 □ Cards available in Accessory package ASM-54
 R Where R appears read Red Scale

DYNA-QUIK MODEL 675 TUBE CHART

ManualsPlus.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
9CL8	9	18	1	71	52R	5800
			2	52	27R	8000
9J6	9	12	1	57	28R	5300
9U8	9	15	1	71	41R	5200
			2	53	28R	8500
9X8	9	16	1	70	73	4600
			2	58	20R	5800
10BQ5	10	61	1	52	46R	11300
10C8	10	45	1	58	42R	8000
			2	64	64	4400
10D2	10	13	1	57		
			2	57		
10DE7	10	66A	1	66	51R	6500
10DE7		66B	1	88	62	2000
10E312	25	14	1	9		
10E349	6	14	1	74	74	4100
10E11448	6	14	1	89	73	2600
10E11533	6	14	1	63	36R	6000
10EB8	10	16	1	38	38R	12500
			2	98	86	2700
10EW7	10	66A	1	68		
		66B	1	92		
11C5	35	32	1	53	19R	5800
11CY7	10	65A	1	66	51R	6500
11CY7		65B	1	88	62	2000
12A6	12	14	1	87	75	3000
12AB5	12	41	1	65	63	4100
12AC6	12	*201	2	60		
12AD6	12	*205	2	59		
12AD7	12	53	1	90	58	1600
			2	90	58	1600
12AE6	12	*204	1	89		
			2	89		
			3	62		
12AE7	12	Δ212	1	57		
			2	57		
12AF3	12	47	1	13		
12AF6	12	*201	2	58		
12AG6	12	Δ205	2	57		
12AJ6	12	*204	1	86		
			2	86		
			3	60		
12AL5	12	13	1	57		
			2	57		
12AL8	12	*206	2	59		
			3	63		
12AQ5	12	31	1	74	69	4100
12AS5	12	32	1	55	20R	5600
12AT6	12	35	1	90	55	1200
			2	62		
			3	62		
12AT7	12	2	1	69	44R	5500
			2	69	44R	5500
12AU5	12	20	1	57	24R	5600
12AU6	12	1	1	72	52R	5200
12AU7	12	2	1	69	53	2200
			2	69	53	2200
12AV5	12	20	1	53	16R	5500
12AV6	12	35	1	90	57	1600
			2	65		
			3	65		
12AV7	12	2	1	54	33R	8500
			2	54	33R	8500
12AW6	12	1	1	77	51R	5000
12AW8	12	16	1	43	25R	9000
			2	75	74	4000
12AX4	12	8	1	10		
12AX7	12	53	1	90	58	1600
			2	90	58	1600
12AY7	12	2	1	91	60	1750
			2	91	60	1750
12AZ7	12	2	1	71	44R	5500
			2	71	44R	5500
12B4	12	17	1	66	40R	6300
12B7	12	56	1	84	60R	2000
12BA6	12	1	1	74	76	4400

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
12BA7	12	59	1	70		
12BC32	12	35	1	90	57	1600
			2	65		
			3	65		
12BD6	12	1	1	83	60	2000
12BE6	12	1	1	91		
12BF6	12	35	1	82	57	1900
			2	70		
			3	70		
12BH7	12	2	1	54	35	3100
			2	54	35	3100
12BK5	12	38	1	42	21R	8500
12BK6	12	35	1	83	40	1600
12BL6	12	*201	2	59		
12BN6	12	23	1	90		
12BQ6	12	7	1	69	45R	5500
12BR7	12	42	1	71	45R	5500
			2	59		
			3	59		
12BT6	12	35	1	90	55	1300
			2	62		
			3	62		
12BU6	6	12	1	82	57	1900
			2	70		
			3	70		
12BV7	12	11	1	37	38R	12000
12BX7	12	4	1	54	26R	7600
			2	54	26R	7600
12BY7	12	11	1	44	39R	11000
12BZ6	12	1	1	61	33R	6100
12BZ7	12	2	1	86	41R	3200
			2	86	41R	3200
12C5	12	32	1	45	20R	7500
12CA5	12	32	1	55	40R	9200
12CM6	12	41	1	63	61	4100
12CN5	12	*203	2	58		
12CS6	12	1	1	95	45	1100
12CT8	12	45	1	54	25R	7000
			2	62	22R	4900
			2	45	21R	7500
12CU5	12	32	1	45		
12CU6	12	7	1	69	45R	5500
12CX6	12	*201	2	58		
12D4	12	8	1	9		
12DB5	12	41	1	34	22R	8000
12DE8	12	□214	2	56		
			3	57		
12DF7	12	53	1	90	58	1600
			2	90	58	1600
12DK7	12	□215	1	80		
			2	80		
			3	56		
12DL8	12	*202	1	85		
			2	85		
			3	59		
12DN6	12	6	1	34	20R	9000
12DQ6	12	7	1	66	47R	6600
12DQ7	12	11	1	41	31R	10500
12DS7	12	Δ202	1	82		
			2	82		
			3	55		
12DT5	12	41	1	45	16R	6200
12DT7	12	53	1	90	58	1600
			2	90	58	1600
12DT8	12	2	1	67	39R	5500
			2	67	39R	5500
12DU7	12	□216	1	98		
			2	98		
			3	55		
12DV7	12	□217	1	60		
			2	95		
			3	95		
12DV8	12	*202	1	81		
			2	81		
			3	59		
12DW5	12	41	1	25	10R	5500
12DW7	12	53	1	69		
			2	71		

* or Δ Cards available in Accessory Package ASM-10
 □ Cards available in Accessory package ASM-54
 R Where R appears read Red Scale

DYNA-QUIK MODEL 675 TUBE CHART

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
12DW8	12	□218	1	60		
			2	100		
			3	55		
12DY8	12	*209	2	59		
			3	58		
12DZ6	12	*201	2	58		
12E5	12	14	1	94	58	1450
12EA6	12	*201	2	58		
12EC8	12	*213	2	57		
			3	57		
12ED5	12	32	2	55	46R	8500
12EG6	12	Δ205	2	57		
12EH5	12	32	2	54	55R	14600
12EK6	12	*201	2	57		
12EL6	12	*210	1	88		
			2	88		
			3	59		
12EM6	12	*207	2	60		
			3	94		
12EN6	12	14	2	45	24R	8000
12EZ6	12	*201	2	56		
12F8	12	*208	1	84		
			2	84		
			3	60		
12F31	12	1	1	74	76	4400
12FK6	12	Δ204	1	88		
			2	88		
			3	62		
12FM6	12	Δ204	1	87		
			2	87		
			3	56		
12FR8	12	□219	1	59		
			2	83		
			3	59		
12FT6	12	Δ204	1	89		
			2	89		
			3	62		
12FX8	12	□220	2	59		
			3	59		
12G4	12	21	2	72	57	2600
12GA6	12	Δ205	2	60		
12GC6	12	6	2	51	22R	6600
12H4	12	21	2	72	57	2600
12H31	12	28	1	91		
12J5	12	14	2	89	73	2600
12J8	12	*211	1	60		
			2	60		
			3	58		
12K5	12	*203	2	58		
12L6	12	14	2	42	21R	8000
12R5	12	32	2	51	22R	7000
12SA7	12	26	2	100		
12SG7	12	25	2	72	70	4000
12SH7	12	25	2	75	79	4900
12SJ7	12	25	2	79	51	1650
12SK7	12	25	2	81	56	2000
12SL7	12	52	1	100	65	1600
			2	100	65	1600
12SN7	12	4	1	92	76	2600
			2	92	76	2600
			3	98	53R	1175
12SQ7	12	27	2	90		
			3	90		
12SR7	12	27	1	84	58	1900
			2	87		
			3	87		
12SS7	12	25	1	88	61	1850
12SW7	12	27	1	83	57	1900
			2	88		
			3	88		
12SX7	12	52	1	69	56	2600
			2	69	56	2600
12SY7	12	26	2	94		
12U7	12	*212	2	61		
			3	61		
12V6	12	14	2	74	74	4100

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	G _m Stand.
12W6	12	14	2	45	22R	8000
12X4	12	34	1	15		
			2	15		
13D1	12	4	1	92	76	2600
			2	92	76	2600
13DE7	12	66A	1	66	51R	6500
13DE7	12	66B	1	88	62	2000
13SJ7	12	25	1	79	51	1650
14A4	12	56	2	70	56	2600
14A7	12	56	2	84	60R	2000
14AF7	12	57	1	73	54	2100
			2	73	54	2100
14C5	12	56	2	61	22R	3750
14C7	12	56	2	82	52	1575
14F7	12	57	1	78	78	1600
			2	78	78	1600
14H7	12	56	2	74	33R	4000
14N7	12	57	1	72	57	2600
			2	72	57	2600
14V7	12	56	1	65	39R	5800
			2	65	39R	5800
14W7	12	56	1	65	39R	5800
15EW6	15	1	1	68	72R	14000
16CL8	16	18	1	71	52R	5800
			2	52	27R	8000
17AV5	17	20	2	53	16R	5500
17AX4	17	8	2	10		
17BQ6	17	7	2	69	45R	5500
17C5	17	32	2	45	20R	7500
17CA5	17	32	2	54	36R	9200
17CU5	17	32	2	45	21R	7500
17D4	17	8	2	9		
17DE4	17	8	2	11		
17DQ6	17	7	2	66	47R	6600
17EW8	17	2	1	62		
			2	62		
17H3	17	47	2	11		
17L6	17	14	2	42	21R	8000
17R5	17	32	2	51	22R	7000
18A5	18	20	2	55	16R	4800
18AK5	18	1	1	60	25R	5100
18AQ5	18	31	1	74	69	3700
18FW6	18	1	1	79	41R	4100
18FX6	18	1	1	93		
18FY6	18	35	1	84	51	1300
			2	75		
18J6	18	12	3	75		
			1	57	28R	5300
			2	57	28R	5300
19AQ5	19	31	2	74	69	3700
19AU4	19	8	2	9		
19BE6	19	1	1	91		
19BG6	19	5	2	53	18R	6000
19C8	19	37	2	91	54	1250
19CL8-A	19	18	1	67	51R	6500
			2	52	27R	8000
19DE7	19	66A	1	66	51R	6500
19DE7	19	66B	1	88	62	2000
19DN6	19	6	2	34	20R	9000
19EA8	19	15	1	69	52R	6400
			2	55	40R	8500
19J6	19	12	1	57	28R	5300
			2	57	28R	5300
19T8	19	37	1	92	54	1200
			2	58		
			3	58		
19X8	19	16	1	70	73	4600
			2	55	20R	5800
20D1	9	13	2	57		
			3	57		
21EX6	22	6	1	42		
22DE4	22	8	2	11		
25A6	25	14	2	76	56	2375
25AV5	25	20	2	53	16R	5500
25AX4	25	8	2	10		
25B6	25	14	1	50		
25BK5	25	38	2	42	21R	8500
25BQ6	25	7	2	69	45R	5500

DYNA-QUIK MODEL 675 TUBE CHART

ManualsLib.us.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
25C5	25	32		45	20R	7500
25C6	25	14		52	21R	7100
25CA5	25	32		55	40R	9200
25CD6	25	6		35	19R	7700
25CU6	25	7		69	45R	5500
25D4	25	8		9		
25DN6	25	6		34	20R	9000
25DQ6	25	7		66	47R	6600
25DT5	25	41		45	16R	6200
25EC6	25	6		48	25R	7500
25EH5	25	32		54	55R	14600
25F5	25	32		54	22R	5800
25L6	25	14		42	21R	8000
25SN7	25	4	1	92	76	2600
			2	92	76	2600
25U4	25	8		11		
25W4	25	8		9		
25W6	25	14		45	22R	8000
26A6	25	1	1	75		
26A7	25	1	1	58		
			2	58		
26BK6	25	35	1	83	40	1600
26C6	25	35	1	90		
			2	70		
			3	70		
26D6	25	1	1	95		
30C1	9	15	1	63	39R	6200
			2	53	17R	5000
32ET5	30	32		55	24R	5500
34GD5	35	32	1	56		
35A5	35	56		41	16R	6000
35B5	35	31		55	19R	5800
35C5	35	32		53	19R	5800
35CD6	35	6		35	19R	7700
35EH5	35	32		54	55R	14600
35L6	35	14		54	21R	5800
35W4	35	33		9		
35Z5	35	28		9		
36AM3	35	33		11		
45B5	50	61	1	20	16R	10000
50A5	50	56		27	16R	8000
50B5	50	31		37	18R	7500
50BK5	50	38	1	42	21R	8500
50C5	50	32		45	20R	7500
50C6	50	14		52	21R	7100
50CA5	50	32		55	40R	9200
50CD6	50	6		35	19R	7700
50DC4	50	33		10		
50EH5	50	32		54	55R	14600
50FE5	50	14		33	21R	9500
50FK5	50	32	1	80		
50L6	50	14		42	21R	8000
53KU	5	3	1	10		
			2	10		
60EH5	50	32	1	54	55R	14600
60FX5	50	32	1	62		
403B	6	1	1	60	25R	5100
1232	6	56	1	63		
1273	6	56		82	52	1575
1280	12	56		82	52	1575
1611	6	14	1	90	71	2500
1614	6	14	1	65		
1621	6	14		90	71	2500
1622	6	14		63	36R	6000
1631	6	14	1	63	36R	6000
1632	12	14	1	42	21R	8000
1852	6	25	1	56	50R	9000
1853	6	25	1	70	42R	5000
5591	6	1		60	25R	5100
5654	6	1		60	25R	5100
5659	12	14	1	87	75	3000
5661	12	25	1	81	56	2000
5691	6	4	1	100	65	1600
			2	100	65	1600
5692	6	4	1	92	76	2200
			2	92	76	2200
5693	6	25		79	51	1650
5725	6	1		77	66	3200

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
5726	6	13	1	57		
			2	57		
5749	6	1		74	76	4400
5750	6	1		91		
5751	12	53	1	90	58	1600
			2	90	58	1600
5814	12	2	1	69	53	2200
			2	69	53	2200
5814A	12	2	1	69	53	2200
			2	69	53	2200
5824	25	14	1	50		
5871	6	14		74	74	3750
5881	6	14		63	36R	6100
5915	6	1	1	90		
5920	6	12	1	50		
			2	50		
5931	5	3	1	13		
			2	13		
5932	6	14		63	36R	6000
5961	6	26		100		
5964	6	12	1	61		
			2	61		
5965	12	2	1	55		
			2	55		
5992	6	14		74	74	4000
6005	6	31		74	69	3700
6006	6	25		72	70	4000
6042	6	4	1	92	76	2600
			2	92	76	2600
6046	25	14		72	21R	8000
6057	12	53	1	90	58	1600
6058	6	13	1	57		
			2	57		
6060	12	2	1	69	44R	5500
			2	69	44R	5500
6066	6	35	1	90	55	1300
			2	62		
			3	62		
6067	12	2	1	69	53	2200
			2	69	53	2200
6069	6	1	1	60	25R	5100
6072	12	2	1	69	53	2200
			2	69	53	2200
6085	12	2	1	77		
			2	77		
6087	5	3	1	21		
6095	6	1	1	60	25R	5100
6096	6	1	1	60	25R	5100
6100	6	21	1	70	53	2200
6101	6	12	1	57	28R	6000
			2	57	28R	6000
6113	6	4	1	100	65	1600
			2	100	65	1600
6134	6	25		56	50R	9000
6135	6	21		70	53	2200
6136	6	1		72	52R	5200
6137	6	25		81	56	2000
6147	6	14	1	63	36R	6100
6180	6	4	1	92	76	2500
			2	92	76	2500
6186	6	1		72	52R	5000
6187	6	1	1	77	66	3200
6188	6	52	1	93	60	1600
6189	12	2	1	69	53	2200
			2	69	53	2200
6197	6	19		35	32R	11000
6198	12	2	1	69	53	2200
			2	69	53	2200
6201	12	2	1	69	44R	6500
			2	69	44R	6500
6202	6	34	1	15		
			2	15		
6211	12	2	1	53		
6265	6	1		88	91	4600
6485	6	1		58	50R	9000
6550	6	14		53	50R	11000
6660	6	1		74	76	4400
6661	6	1		88	91	4600

* or Δ Cards available in Accessory Package ASM-10
 □ Cards available in Accessory package ASM-54
 R Where R appears read Red Scale

DYNA-QUIK MODEL 675 TUBE CHART

ManualsPlus.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
6662	6	1		81		
6663	6	13	1	57	75	3600
			2	57		
6669	6	31		74	69	3700
6677	6	19		35	32R	11000
6678	6	15	1	71	41R	5200
			2	53	28R	8500
6679	12	2	1	69	44R	5500
			2	69	44R	5500
6680	12	2	1	69	53	2200
			2	69	53	2200
6681	12	53	1	90	58	1600
			2	90	58	1600
6829	12	2	1	55		
			2	55		
6887	6	13	1	57		
			2	57		
6919	6	13	1	61		
			2	61		
6973	6	41		62	26R	4800
7025	12	53	1	90	58	1600
			2	90	58	1600
7054	12	11		44	39R	11000
7055	12	13	1	57		
			2	57		
7056	12	1		62	36R	6200
7057	12	2	1	48	17R	6800
			2	48	17R	6800
7058	12	53	1	90	58	1600
			2	90	58	1600
7059	12	15	1	71	41R	5200
			2	53	28R	8500
7060	12	16	1	54	19R	7000
			2	60	60	4900
7061	12	41		65	63	4100
7167	12	1		55	30R	8000
7189-A	6	61		33	25R	11300
7247	12	53	1	69	52	2200
			2	90	58	1600
7258	12	45	1	62	38R	6200
			2	62	54	3300
7408	6	14	1	74	74	4100
7543	6	1		80	51R	4500
7581	6	14		63	36R	6000
7687	6	15	1	73		
			2	65		
8016	1	10	1	51		
9001	6	1	1	90		
9003	6	1	1	99		
ARP17	6	14	1	90	71	2500
ARP32	6	14	1	74	74	4100
ARP33	6	14	1	74	74	4100
AU13	5	3	1	21		
AZ32	4	3	1	21		
B36	12	4	1	92	76	2600
			2	92	76	2600
B65	6	4	1	92	76	2600
			2	92	76	2600
B152	12	2	1	69	44R	5500
			2	69	44R	5500
B309	12	2	1	69	44R	5500
			2	69	44R	5500
B329	12	2	1	69	53	2200
			2	69	53	2200
B339	12	53	1	90	58	1600
			2	90	58	1600
B719	6	2	1	65	40R	5900
BPM04	6	31		74	69	3700
CV133	6	21	1	70	53	2200
CV283	6	13	1	57		
			2	57		
CV452	6	35	1	90	55	1300
			2	62		
			3	62		
CV453	6	1	1	91		
CV454	6	1	1	74	76	4400
CV455	12	2	1	69	44R	5500
			2	69	44R	5500

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
CV491	12	2	1	69	53	2200
			2	69	53	2200
CV492	12	53	1	90	58	1600
CV493	6	34	1	15		
			2	15		
CV511	6	14	1	74	74	4100
CV538	12	26	1	100		
CV544	12	25	1	81	56	2000
CV547	12	27	1	98	53R	1175
			2	90		
CV551	25	14	1	52	21R	7100
CV552	25	14	1	42	21R	8000
CV553	25	14	1	42	21R	8000
CV561	35	14	1	54	21R	5800
CV562	35	14	1	54	21R	5800
CV567	35	28	1	9		
CV568	35	28	1	9		
CV571	50	14	1	42	21R	8000
CV572	6	3	1	16		
			2	16		
CV573	6	3	1	16		
			2	16		
CV574	6	3	1	16		
			2	16		
CV575	5	3	1	13		
			2	13		
CV581	6	14	1	95	71	2000
CV582	6	14	1	95	71	2000
CV583	6	14	1	95	71	2000
CV586	6	14	1	63	36R	6000
CV590	6	25	1	81	56	2000
CV591	6	25	1	79	51	1650
CV592	6	25	1	79	51	1650
CV593	5	3	1	12		
			2	12		
CV594	6	25	1	75	79	4900
CV595	6	25	1	75	79	4900
CV660	6	25	1	56	50R	9000
CV661	6	25	1	70	42R	5000
CV665	6	1	1	99		
CV694	12	25	1	72	70	4000
CV697	12	25	1	79	51	1650
CV698	12	25	1	79	51	1650
CV700	12	27	1	84	58	1900
			2	87		
CV717	5	3	1	23		
			2	23		
CV728	1	54	1	74		
CV729	5	3	1	12		
			2	12		
CV731	6	14	1	90	71	2500
CV732	6	8	1	9		
CV747	6	25	1	56	50R	9000
CV753	2	1	1	92		
CV755	1	54	1	75		
CV756	1	54	1	75		
CV760	1	54	1	66		
CV772	1	54	1	63		
CV773	1	54	1	63		
CV782	1	55	1	70		
CV783	1	55	1	64		
CV784	1	55	1	68		
CV785	1	55	1	67		
CV807	3	55	1	63		
CV818	3	55	1	63		
CV819	3	54	1	65		
CV820	3	55	1	65		
CV841	5	3	1	13		
			2	13		
CV842	5	3	1	29		
			2	29		
CV846	6	25	1	56	50R	9000
CV848	6	1	1	72	52R	5000
CV849	6	25	1	56	50R	9000
CV850	6	1	1	60	25R	5100
CV852	6	21	1	70	53	2200
CV858	6	12	1	57	28R	5300
CV865	6	25	1	68	27R	4250

* or Δ Cards available in Accessory Package ASM-10
 □ Cards available in Accessory package ASM-54
 R Where R appears read Red Scale

DYNA-QUIK MODEL 675 TUBE CHART

ManualsLib.com

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
CV866	6	25	1	79	51	1650
CV867	6	27	1	84	58	1900
			2	87		
			3	87		
CV873	6	3	1	21		
			2	21		
CV877	6	56	1	84	60R	2000
CV880	6	56	1	84	63	2100
CV881	6	56	1	84	63	2100
CV885	6	56	1	61	22R	3750
CV886	6	56	1	61	22R	3750
CV893	6	57	1		78	1600
CV894	6	56	1	63		
CV895	6	56	1	74	33R	4000
CV898	6	57	1	72	57	2600
			2	72	57	2600
CV922	12	25	1	75	79	4900
CV924	12	52	1	100	65	1600
			2	100	65	1600
CV925	12	4	1	92	76	2600
			2	92	76	2600
CV930	12	57	1	78	78	1600
			2	78	78	1600
CV939	25	14	1	50		
CV1067	6	14	1	89	73	2600
CV1071	5	3	1	13		
			2	13		
CV1268	5	3	1	21		
CV1377	5	3	1	10		
			2	10		
CV1633	12	2	1	69	44R	5500
			2	69	44R	5500
CV1649	6	14	1	95	71	2000
CV1741	6	14	1	53	51R	11000
CV1753	35	56	1	41	16R	6000
CV1757	6	1	1	90		
CV1758	1	55	1	67		
CV1762	6	1	1	77	57	2300
CV1777	6	56	1	82	52	1300
CV1784	6	25	1	34	31R	11000
CV1800	1	54	1	75		
CV1802	1	54	1	75		
CV1803	1	54	1	64		
CV1805	1	54	1	64		
CV1811	1	54	1	64		
CV1818	1	54	1	70		
CV1819	6	14	1	94	58	1450
CV1820	1	54	1	70		
CV1821	1	54	1	75		
CV1823	1	54	1	75		
CV1824	1	54	1	63		
CV1826	1	54	1	63		
CV1846	5	3	1	14		
			2	14		
CV1849	5	3	1	29		
			2	29		
CV1854	5	3	1	21		
CV1856	5	3	1	21		
CV1862	6	31	1	74	69	3700
CV1863	5	3	1	15		
			2	15		
CV1864	5	3	1	15		
			2	15		
CV1873	6	25	1	70	42R	5000
CV1876	6	25	1	56	50R	9000
CV1882	6	25	1	34	31R	11000
CV1911	6	14	1	90	71	2500
CV1912	6	14	1	90	71	2500
CV1926	6	14	1	95	77	2300
CV1928	12	1	1	74	76	4400
CV1932	6	14	1	89	73	2600
CV1933	6	14	1	89	73	2600
CV1934	6	14	1	89	73	2600
CV1938	6	14	1	86	67	2300
CV1940	6	14	1	86	67	2300
CV1947	6	14	1	63	36R	6000
CV1948	6	14	1	63	36R	6000
CV1959	50	32	1	45	20R	7500

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True G _m	Stand. G _m
CV1961	12	1	1	72	52R	5200
CV1966	6	26	1	100		
CV1967	6	26	1	100		
CV1976	6	26	1	100		
CV1978	6	25	1	72	70	4000
CV1981	6	25	1	81	56	2000
CV1982	6	25	1	81	56	2000
CV1985	6	52	1	100	65	1600
			2	100	65	1600
CV1988	6	4	1	92	76	2600
			2	92	76	2600
CV1990	6	27	1	98	53R	1175
CV1991	6	27	1	98	53R	1175
CV1993	6	25	1	88	61	1850
CV1995	6	27	1	95	70	1900
			2	90		
			3	90		
CV1996	6	27	1	95	70	1900
			2	90		
			3	90		
CV2370	3	55	1	65		
CV2390	3	55	1	63		
CV2507	1	55	1	68		
CV2522	6	1	1	77	66	3200
CV2524	6	1	1	72	52R	5200
CV2526	6	35	1	90	57	1600
			2	65		
			3	65		
CV2534	50	14	1	42	21R	8000
CV2714	6	14	1	65		
CV2748	5	3	1	15		
			2	15		
CV2938	6	14	1	53	51R	11000
CV2975	6	61	1	52	46R	11300
CV2983	3	55	1	63		
CV4007	6	13	1	57		
			2	57		
CV4010	6	1	1	60	25R	5100
CV4024	12	2	1	69	44R	6500
			2	69	44R	5500
D2M9	6	13	1	57		
			2	57		
D77	6	13	1	57		
			2	57		
D152	6	13	1	57		
			2	57		
DAC32	1	54	1	70		
DAF91	1	55		68		
DAF92	1	55		72		
DD6	6	13	1	57		
			2	57		
DF33	1	54		75		
DF91	1	55		67		
DF92	1	55		67		
DF96	1	55		68		
DF904	1	55		68		
DH77	6	35	1	90	55	1300
			2	62		
			3	62		
DH107	6	35	1	90	55	1300
			2	62		
			3	62		
DH710	6	37	1	92	54	1200
			2	58		
			3	58		
DH719	6	37	1	92	54	1200
			2	58		
			3	58		
DK91	1	55		70		
DL33	3	54		65		
DL35	1	54	1	64		
DL36	1	54	1	63		
DL91	1	55	1	64		
DL92	3	55		65		
DL93	3	55		63		
DL94	3	55		63		
DL95	3	55		63		

DYNA-QUIK MODEL 675 TUBE CHART

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True Gm	Stand. Gm
DP61	6	1		60	25R	5100
DY30	1	10		51		
DY80	1	9	1	87		
DY86	1	9		35		
DY87	1	9	1	35		
E80CC	12	2	1	77		
			2	77		
E90CC	6	12	1	50		
			2	50		
E91AA	6	13	1	57		
			2	57		
EEA91	6	13	1	57		
			2	57		
EABC80	6	37	1	92	54	1200
			2	58		
			3	58		
EB91	6	13	1	57		
			2	57		
EBC90	6	35	1	90	55	1300
			2	62		
			3	62		
EBC91	6	35	1	90	57	1600
			2	65		
			3	65		
EC90	6	21		70	53	2200
EC92	6	21		66	35R	5500
EC95	6		1	60	55	
ECC35	6	27	1	98	53R	1175
ECC81	12	2	1	69	44R	5500
			2	69	44R	5500
ECC82	12	2	1	69	53	2200
			2	69	53	2200
ECC83	12	53	1	90	58	1600
			2	90	58	1600
ECC85	6	2	1	65	40R	5900
			2	65	40R	5900
ECC88	6	2	1	25		
			2	25		
ECC91	6	12	1	57	28R	5300
			2	57	28R	5300
ECC189	6	2	1	32		
			2	32		
ECC801S	12	2	1	69	44R	5500
			2	69	44R	5500
ECC802S	12	2	1	69	53	2200
			2	69	53	2200
ECC960	6	12	1	50		
			2	50		
ECF80	6	15	1	63	39R	6200
			2	53	17R	5000
ECF82	6	15	1	71	41R	5200
			2	53	28R	8500
ED2	6	13	1	57		
			2	57		
EF22	6	56	1	63		
EF93	6	1		74	76	4400
EF94	6	1		72	52R	5200
EF95	6	1		60	25	5100
EF96	6	1		72	52R	5000
EH90	6	1		95	45	1100
EK90	6	1		91		
EL34	6	14		53	51R	11000
EL37	6	14		63	36R	6000
EL84	6	61		52	46R	11300
EL85	6	61	1	72		
EL86	6	61		20	16R	10000
EL90	6	31		74	69	3700
EL95	6	31	1	84		
EY86	1	9	1	35		
EZ35	6	3	1	16		
			2	16		
EZ90	6	34	1	15		
			2	15		
GZ30	5	3		15		
GZ32	5	3	1	12		
			2	12		
GZ34	5	3	1	10		
			2	10		

TUBE TYPE	HEATER	CARD No.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True Gm	Stand. Gm
HABC80	19	37	1	92	54	1200
			2	58		
HBC90	12	35	1	90	55	1200
HBC91	12	35	1	90	57	1600
			2	65		
			3	65		
HCC85	17	2	1	62		
			2	62		
HD14	1	54	1	70		
HF93	12	1	1	74	76	4400
HF94	12	1	1	72	52R	5200
HK90	12	1	1	91		
HL90	19	31		74	69	3700
HL92	50	32		45	20R	7500
HMO4	6	1		91		
HY90	35	33		9		
KT32	25	14		42	21R	8000
KT63	6	14		90	71	2500
KT66	6	14		63	36R	6000
KT88	6	14		52		
L63	6	14	1	89	73	2600
L77	6	21		70	53	2200
LZ319	9	15	1	63	39R	6200
			2	53	17R	5000
M8081	6	12	1	57	28R	5300
M8100	6	1	1	60	25R	5100
N14	1	54	1	64		
N17	3	55	1	65		
N18	3	55	1	63		
N19	3	55	1	63		
N77	6	13	1	57		
			2	57		
N709	6	61	1	52	46R	11300
NR78	6	14	1	95	71	2000
NR78-A	6	14	1	89	73	2600
NR85	6	14	1	90	71	2500
NR95	25	14	1	42	21R	8000
NU20	5	3	1	21		
			2	21		
OBC3	12	27	1	98	53R	1175
			2	90		
OSW2190	6	25	1	56	50R	9000
OSW2192	6	25	1	34	31R	11000
OSW2600	6	25	1	56	50R	9000
OSW2601	6	25	1	34	31R	11000
OSW3105	6	27	1	98	53R	1175
OSW3106	6	14	1	74	74	4100
OSW3108	6	14	1	63	36R	6000
OSW3111	6	25	1	81	56	2000
OSW3112	6	14	1	89	73	2600
PABC80	9	37	1	92	54	1200
			2	58		
			3	58		
PCC85	9	2	1	65	40R	5900
			2	65	40R	5900
PCC88	7	2	1	25		
			2	25		
PCF80	9	15	1	63	39R	6200
			2	50	17R	5000
PCF82	9	15	1	71	41R	5200
			2	53	28R	8500
PL84	15	61	1	20	16R	10000
PM04	6	1	1	74	76	4400
PM05	6	37	1	92	54	1200
			2	58		
			3	58		
QA2404	6	13	1	57		
			2	57		
QA2406	12	2	1	69	44R	5500
			2	69	44R	5500
QA2407	6	34	1	15		
			2	15		
QA2408	6	4	1	92	76	2600
			2	92	76	2600
R52	5	3	1	15		
			2	15		
SN7	1	10	1	51		
T2M05	6	12	1	57	28R	5300

DYNA-QUIK MODEL 675 TUBE CHART

ManualsPlus.com

TUBE TYPE	HEATER	CARD NO.	TEST POS.	SENSITIVITY SETTING		
				Good-Bad	True Gm	Stand. Gm
TS51	6	1	1	60	25R	5100
TS52	6	12	1	57	28R	5300
U50	5	3	1	21		
			2	21		
U52	5	3	1	13		
			2	13		
U54	5	3	1	10		
			2	10		
U78	6	34	1	15		
			2	15		
U147	6	3	1	16		
			2	16		
UAA91	19	13	1	57		
			2	57		
UABC80	30	37	1	92	54	1200
			2	58		
			3	58		
UCC85	25	2	1	65	40R	5900
			2	65	40R	5900
UCF80	25	15	1	63	39R	6200
			2	53	17R	5000
UL84	50	61	1	52	46R	11300
UU12	6		2	10		
			3	10		
V2M70	6	34	1	15		
			2	15		
VT52	6	14	1	86	67	2300
VT65	6	14	1	95	71	2000
VT66	6	14	1	90	71	2500
VT74	5	3	1	15		
			2	15		
VT94	6	14	1	89	73	2600
			2	89		
			3	89		
VT97	5	3	1	29		
			2	29		
VT102	6	14	1	86	67	2300
VT103	6	27	1	98	53R	1175
VT104	12	27	1	98	53R	1175
			2	90		
			3	90		
VT107	6	14	1	74	74	4100
VT112	6	25	1	56	50R	9000
VT114	5	3	1	14		
			2	14		
VT115	6	14	1	63	36R	6000
VT116	6	25	1	79	51	1650
VT117	6	25	1	81	56	2000
VT124	1	54	1	75		
VT125	1	54	1	64		
VT126	6	3	1	16		
			2	16		
W17	1	55	1	67		
W149	6	56	1	86	59	1750
W727	6	1	1	74	76	4400
X107	19	1	1	91		
X155	6	2	1	54	33R	8000
			2	54	33R	8000
X727	6	1	1	91		
XCC189	4	2	1	32		
			2	32		
XL84	8	61	1	52		
XXD	12	57	1	73	54	2100
			2	73	54	2100
XXL	6	56	1	70	56	2600
Z14	1	54	1	75		
ZD17	1	55	1	64		

ACCESSORY PACKAGES OF CARDS ARE AVAILABLE AS FOLLOWS

ASM-10—Consists of 13 pre-punched cards to test

Hybrid Auto Radio Tubes\$1.95

12AC6	12AL8	12DV8	12EK6	12FM6
12AD6	12BL6	12DY8	12EL6	12FT6
12AE6	12CN5	12DZ6	12EM6	12GA6
12AE7	12CX6	12EA6	12EZ6	12J8
12AF6	12DL8	12EC8	12F8	12K5
12AG6	12DS7	12EG6	12FK6	12U7
12AJ6				

ASM-54—Consists of 7 pre-punched cards to test

Hybrid Auto Radio Tubes\$1.50

12DE8	12DV7	12FR8
12DK7	12DW8	12FX8
12DU7		

ASM-21—Consists of 12 blank cards for future use

.....\$1.75

K4XL's  **BAMA**

This manual is provided **FREE OF CHARGE** from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>