

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.			
0A3	50	38	*70	2	11	3	5	1	107G	2	38	54	7	2	12	5	1	1P11	3	41	45	7	1	5	6	1			
*Normally shows short on position 11.									108	2	38	53	7	2	12	5	1	1Q5	2	38	40	7	2	12	5	1			
*Normally shows grid emission.												55	7	2	12	10	1	1R-K23	1	24	35					1			
0A3A	50	38	*70	2	11	3	5	1	1013	2	41	*70	7	1	2	6	1	1R-K41	1	24	*53					1			
*Normally shows short on position 11.									*Tube good if it reads 40 or more.									1R4	2	37	60	8	1	12	4	1			
*Normally shows grid emission.									1DG3	1	38	*95	3	8	5	10	1	1R5	2	41	53	7	1	5	4	1			
0B3	50	38	*69	2	11	3	5	1	*Normally shows short position 5-11.									1S2-A	1	24	35						1		
*Normally shows short on position 11.									*Tube good if it reads 20 or more.									1S4	2	41	*44	7	1	5	3	1			
*Normally shows grid emission.									10-K1	1	40	*75	4	5	1	10	1	*Normally shows short position 2-6.											
0C3	50	38	*85	2	11	3	5	1	*Insert leads into pins 4 & 5 of socket 40.									1S5	2	41	54	7	1	5	6	1			
*Normally shows short on position 11.									*Top cap goes to top lead.									1T4	2	41	50	7	1	5	6	1			
*Normally shows grid emission.									*Tube good if it reads 20 or more.									1T5	2	38	54	7	2	12	5	1			
0C3A	50	38	*85	2	11	3	5	1	1DK29	1	40	*75	4	5	1	10	1	1U4	2	41	49	7	1	5	6	1			
*Normally shows short on position 11.									*Insert leads into pins 4 & 5 of socket 40.									1U5	2	41	54	7	1	12	6	1			
*Normally shows grid emission.									Top cap goes to top lead.									1U6	2	41	56	7	1	12	4	1			
0D3	50	38	*99	2	11	3	5	1	1DN5	2	41	54	7	1	12	6	1	1V2	1	40	99	5	4	12	1	1			
*Normally shows short on position 11.									*Tube good if it reads 20 or more.									1X2	1	24	56						1		
*Normally shows grid emission.									10Y4	1	41	*24	4	3	2	6	1	2AF4	2	41	*24	4	3	2	6	1			
*Tube good if it reads 60 or more.									*Normally shows short position 1-7.									*Normally shows short position 1-7.											
0Z4	6	31	8					1	1E5	2	38	54	7	2	12	10	1	2AH2	2	45	99	1	12	12	10	1			
			8					2	1F1	1	41	58	7	1	5	6	1	2AS2	2	45	99	1	12	12	10	1			
1A3	2	41	*70	7	1	2	6	1	1F2	1	41	55	7	1	5	6	1	2AV2	2	40	*99	4	5	12	1	1			
*Normally shows short on position 5-11.									1F3	1	41	55	7	1	5	6	1	*Tube good if it reads 55 or more.											
1A5	2	38	53	7	2	12	5	7	1F5	2	38	48	7	2	12	5	1	2AZ2	2	24	35					1			
1A7	2	38	54	7	2	12	5	1	1F7	2	38	54	7	2	12	10	1	2B3	2	32	30					1			
1AB6	1	41	54	7	1	12	4	1				64	7	2	12	4	1	2BA2	2	40	88	4	5	12	1	1			
1AC6	1	41	48	7	1	12	4	1	1FD1	1	41	58	7	1	12	6	1	2BJ2	2	24	52					1			
1AD2	1	45	*99	1	12	10	1	1				70	7	1	12	3	1	2BN4	2	41	*33	4	3	2	7	1			
*Tube good if it reads 20 or more.									1FD9	1	41	56	7	1	12	6	1	*Normally shows short position 1-6.											
1AF4	1	41	50	7	1	5	6	1				95	7	1	12	3	1	2BU2	2	45	*80	1	12	12	10	1			
1AH5	1	41	58	7	1	12	6	1	1G3	1	32	55						*Tube good if it reads 30 or more.											
1AJ4	1	41	70	7	1	12	3	1	1G4G	2	38	35	7	2	12	5	1	2C51	6	39	29	9	1	12	3	1			
1AN5	1	41	40	7	1	5	6	1	1G5G	2	38	48	7	2	12	5	1				29	9	1	12	7	1			
1AS5	2	41	54	7	1	12	6	1	1G6	1	38	55	7	2	12	4	1	2CN3A	2	32	30					1			
			75	7	1	12	4	1	1H2	1	24	58						2CW4	2	43	*87	10	12	12	2	1			
1AU2	1	40	*100	5	4	12	1	1	1H4G	2	38	54	7	2	12	5	1	*For grid emission, Turn D Switch to position 4.											
*Tube good if it reads 20 or more.									1H5	1	38	55	7	2	12	10	1	2CY5	2	1	54					1			
1AU3	1	32	95					1	1H6	2	38	54	7	2	12	6	1	2D21	6	41	32	4	3	5	1	1			
1AX2	1	24	93					1				65	7	2	12	4	1	2DL4	2	39	*85	4	5	7	8	1			
1AY2	1	*39	95	1	9	12	10	1	1H35	1	41	54	7	1	12	4	1	*Normally shows short position 1-3-6-9.											
*Connect two leads from 1AY2 bottom pins to pin holes No. 1 and 9 of Socket No. 39.									1J3	1	32	88						2DS4	2	43	*87	10	12	12	2	1			
1B3	1	32	55					1				65	7	2	12	5	1	*For grid emission, Turn D Switch to position 4.											
1B7	1	38	55	7	2	12	5	1	1J5G	2	38	35	7	2	12	5	1	2DX4	2	41	*62	3	4	1	7	1			
1BC2	1	24	57					1	1J6	2	38	53	7	2	12	4	1	*Normally shows short position 2-6.											
1BG2	1	40	*75	4	5	1	10	1	1K3	1	32	90						2DY4	2	41	*24	4	3	2	6	1			
*Insert leads into pins 4 & 5 of socket 40.									*Tube good if it reads 20 or more.									*Normally shows short position 1-7.											
Top cap goes to top lead.									1K5G	2	38	54	7	2	12	10	1	2DZ4	2	41	*31	3	4	6	2	1			
*Tube good if it reads 20 or more.									1L4	2	41	52	7	1	5	6	1	*Normally shows short position 1-7.											
1BH2	1	*39	95	1	9	12	10	1	1L6	2	41	56	7	1	12	4	1	*Normally shows short position 4-6.											
*Connect two leads from solder lugs of the 1BH2 to pin holes No. 1 and 9 of Socket No. 39.									1LA4	2	37	53	8	1	12	6	1	2EA5	2	1	80								1
1BK2	1	24	*53					1	1LA6	2	37	58	8	1	12	4	1	2EG4	2	43	*72	10	12	12	2	1			
*Tube good if it reads 40 or more.									1LB4	2	37	53	8	1	12	6	1	*For grid emission, Turn D Switch to position 4.											
1BQ2	1	24	56					1	1LC5	1	37	54	8	1	5	6	1	2ENS5	2	41	35	3	4	12	2	1			
1BX2	1	24	56					1	1LC6	2	37	59	8	1	12	4	1	2ER5	2	41	33	4	3	1	2	1			
1BY2	1	45	*99	1	12	7	10	1	1LD5	2	37	53	8	1	12	6	1	2ES5	2	41	33	4	3	1	2	1			
*Tube good if it reads 20 or more.									1LE3	1	37	55	8	1	12	6	1	2EV5	2	1	57					1			
1C1	1	41	57	7	1	5	4	1	1LG5	2	37	50	8	1	5	6	1	2FH5	2	41	33	4	3	1	2	1			
1C2	1	41	48	7	1	12	4	1	1LH4	2	37	52	8	1	12	6	1	2FS5	2	1	99					1			
1C3	1	41	54	7	1	12	4	1	1LN5	2	37	50	8	1	5	6	1	2FQ5	2	41	33	4	3	1	2	1			
1C5	2	38	48	7	2	12	5	1	1N2-A	1	32	53						2FQ5A	2	41	31	4	3	1	2	1			
1C7	2	38	54	7	2	12	5	1	1N5	2	38	53	7	2	12	10	1	2FV6	2	1	54					1			
1D5GT	2	38	54	7	2	12	10	1	1P5	2	38	53	7	2	12	10	1	2FY5	2	41	33	4	3	1	2	1			
									1P10	3	41	*48	7	1	5	3	1	2GK5	2	41	25	4	3	1	2	1			
									*Normally shows short position 2-6.									2GU5	2	41	27	3	4	2	1	1			
																		2GW5	2	41	29	3	4	6	2	1			

\*Normal Shorts Refer to Position of "D" Switch.

**0A3-2GW5**

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.									
2HA5	2	5	56					1	3CV3	3	32	*40					1	3JC6A	3	9	59					1									
2HK5	2	5	56					1	*Tube good if it reads 40 or more.									3JD6	3	9	61					1									
2HM5	2	5	57					1	3CX3	3	38	*88	3	8	4	10	1	3KF8	3	21	92					1									
2HQ5	2	5	55					1	*Ignore all shorts.									3KT6	3	9	92					2									
2HR8	2	39	33	4	5	2	9	1	3CY3	3	32	60					1	3L35	3	9	52					1									
2T4	2	41	*33	4	3	2	6	1	3CY5	3	1	54					1	*Normally shows short position 2-6.									3LE4	3	37	43	8	1	7	6	1
*Normally shows short position 1-7.									3CZ3	3	32	35					1	JLF4	3	37	43	8	1	7	6	1									
2V2	2	32	22					1	3U6	2	3/	43	8	1	7	6	1	3M-P26	3	7	81					1									
3A2	3	24	35					1	3DA3	3	38	*88	3	8	5	10	1	3M-R24	3	1	51					1									
3A3	3	32	54					1	*Ignore all shorts except position 10.									3M-V7	3	1	61					1									
3A3A	3	32	54					1	3DB3	3	32	60					1	3Q4	3	41	*42	7	1	5	3	1									
3A4	3	41	*36	7	1	5	4	1	3DC3	3	32	*13					1	*Normally shows short position 2-6.									3Q5	3	38	45	7	2	8	5	1
*Normally shows short position 2-6.									3DF3	3	38	*75	3	8	5	10	1	3S4	3	41	*48	7	1	5	3	1									
3A5	3	41	45	7	1	4	3	1	*Tube good if it reads 20 or more.									3V4	3	41	45	7	1	5	6	1									
			45	7	1	4	5	1	3DG4	3	38	26	1	3	12	5	1	4AB8	4	39	37	5	4	12	9	1									
3A8	3	38	54	7	2	1	10	1	*No short test.									4A6	4	1	82					1									
			55	7	2	1	5	1	3DH3	3	38	*90	3	8	5	10	1	4A8	4	12	59					1									
			92	7	2	1	8	1	*Tube good if it reads 40 or more.									4AV6	4	6	91					1									
3AB4	3	2	83					1	3DJ3	3	32	*30					1	4BE6	4	1	91					1									
3AF4	3	41	*24	4	3	2	6	1	*No short test.									4BL8	4	11	66					1									
*Normally shows short position 1-7.									3DK6	3	1	61					1	4BN4	4	41	*33	4	3	2	7	1									
3AJ8	3	39	85	5	4	12	1	1	3DR3	3	38	*90	3	8	5	10	1	4BN6	4	7	75					1									
			38	5	4	12	9	1	*Tube good if it reads 30 or more.									4BQ7	4	8	54					1									
3AL5	3	41	33	3	4	12	2	1	3DS3	3	38	*90	3	8	5	10	1	4BS8	4	8	54					1									
			33	3	4	12	7	1	*Ignore all shorts except position 10.									4BU8	4	21	92					1									
3AT2	3	45	96	1	12	12	10	1	3DY4	3	41	*24	4	3	2	6	1	4BX6	4	9	76					1									
3AU6	3	1	82					1	*Tube good if it reads 40 or more.									4BX8	4	39	33	5	4	12	2	1									
3AV6	3	6	88					1	3DZ4	3	41	*31	3	4	6	2	1	4BZ6	4	1	61					1									
			78					2	*Normally shows short position 2-6.									4BZ7	4	8	53					1									
3AW2	3	45	91	1	12	12	10	1	3E5	3	41	48	7	1	5	6	1	4BZ8	4	8	55					1									
3AW3	3	32	55					1	3EA5	3	1	80					1	4CB6	4	1	64					1									
3B2	3	32	72					1	3EH7	3	9	40					1	4CE5	4	1	62					1									
3B7	3	37	45	8	1	4	3	1	3EJ7	3	9	58					1	4CFG	4	1	61					1									
			45	8	1	4	6	1	3ER5	3	41	33	4	3	1	2	1	4CM4	4	40	29	4	5	3	6	1									
3BA6	3	1	78					1	3ES5	3	41	33	4	3	1	2	1	4CS6	4	1	94					1									
3BC5	3	1	74					1	3EV5	3	1	57					1	4CY5	4	1	54					1									
3BE6	3	1	91					1	3FH5	3	41	33	4	3	1	2	1	4DE6	4	1	61					1									
3BH2♦	3	44	*94	4	5	4	10	1	3FQ5	3	41	33	4	3	1	2	1	4DK6	4	1	61					1									
*No short test.									3EA5	3	1	80					1	4DL4	4	39	*85	4	5	7	8	1									
3BL2	3	45	85	1	12	12	10	1	3EH7	3	9	40					1	*Normally shows short position 1-3-6-9.									4DL5	4	3	88					1
3BM2	3	45	85	1	12	12	10	1	3EJ7	3	9	58					1	4DT6	4	1	91					1									
3BN2	3	45	*99	1	12	12	10	1	3ER5	3	41	33	4	3	1	2	1	4EH7	4	9	40					1									
*Tube good if it reads 50 or more.									3ES5	3	41	33	4	3	1	2	1	4EJ7	4	9	58					1									
3BN4	3	41	*33	4	3	2	7	1	3EV5	3	1	57					1	4ER5	4	41	33	4	3	1	2	1									
*Normally shows short position 1-6.									3FH5	3	41	33	4	3	1	2	1	4ES8	4	8	30					1									
3BN6	3	7	75					1	3FQ5	3	41	33	4	3	1	2	1	4EW6	4	1	77					1									
3BS2	3	45	87	1	12	12	10	1	3FQ5A	3	41	31	4	3	1	2	1	4FS7	4	39	25	4	5	3	2	1									
3BS2A	3	45	87	1	12	12	10	1	3FS5	3	1	99					1	4FW6	4	1	77					1									
3BT2	3	45	*80	1	12	12	10	1	3FY5	3	41	33	4	3	1	2	1	4FW7	4	39	25	4	5	3	2	1									
*Tube good if it reads 30 or more.									3GK5	3	41	25	4	3	1	2	1	4FW8	4	39	25	4	5	3	2	1									
3BU8	3	21	92					1	3GX6	3	9	40					1	4FW9	4	39	25	4	5	3	2	1									
			92					2	3GS8	3	21	95					1	4FW10	4	39	25	4	5	3	2	1									
3BW2	3	45	*80	1	12	12	10	1	3GU5	3	41	27	3	4	2	1	1	4FW11	4	39	25	4	5	3	2	1									
*Tube good if it reads 30 or more.									3GW5	3	41	29	3	4	6	2	1	4FW12	4	39	25	4	5	3	2	1									
3BX6	3	9	76					1	3GY5	3	36	*25	1	12	5	9	1	4FW13	4	39	25	4	5	3	2	1									
3BY6	3	1	91					1	*Normally shows short position 1-3-4-7-10.									4FW14	4	39	25	4	5	3	2	1									
3BY7	3	9	62					1	3HA5	3	5	56					1	4FW15	4	39	25	4	5	3	2	1									
3BZ6	3	1	61					1	3HE7	3	36	27	1	12	10	2	1	4FW16	4	39	25	4	5	3	2	1									
3C2	3	32	22					1	*Normally shows short position 3-4-6-8-10-11.									4FW17	4	39	25	4	5	3	2	1									
3C4	2	41	48	7	1	5	6	1	3HF5	3	36	*25	1	12	9	5	1	4FW18	4	39	25	4	5	3	2	1									
3C5GT	3	38	45	7	2	8	5	1	*Normally shows short position 3-4-6-8-10-11.									4FW19	4	39	25	4	5	3	2	1									
3CA3	3	32	55					1	3HK5	3	5	56					1	4FW20	4	39	25	4	5	3	2	1									
3CB6	3	1	64					1	3HM5	3	5	57					1	4FW21	4	39	25	4	5	3	2	1									
3CE5	3	1	62					1	3HM6	3	9	68					1	4FW22	4	39	25	4	5	3	2	1									
3CF6	3	1	60					1	3HQ5	3	5	55					1	4FW23	4	39	25	4	5	3	2	1									
3CN3	3	32	30					1	3HS8	3	21	99					1	4FW24	4	39	25	4	5	3	2	1									
3CN3A	3	32	30					1	*Normally shows short position 3-4-6-8-10-11.									4FW25	4	39	25	4	5	3	2	1									
3CS6	3	1	94					1	3HT6	3	9	60					1	4FW26	4	39	25	4	5	3	2	1									
3CU3	3	32	20					1	3JC6	3	9	65					1	4FW27	4	39	25	4	5	3	2	1									

\*Normal Shorts refer to position of "D" Switch. ♦Use TC-80 Adapter.

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
4GJ7	4	22	62					1	5AS4	5	33	17					1	5EH8	5	12	71					1
			78					2				17					2				54					2
4GK5	4	41	25	4	3	1	2	1	5AS8	5	39	31	5	4	12	2	1	5ES8	5	8	30					1
4GM5	4	1	64					1				32	5	4	12	6	1				30					2
4GS7	4	14	80					1	5AT4	5	33	12					1	5EU8	5	39	32	5	4	12	7	1
			53					2	5AT8	5	14	77					1				32	5	4	12	2	1
4GS8	4	21	95					1				55					2	5FW6	5	1	77					1
			95					2	5AU4	5	33	16					1	5FG7	5	14	68					1
4GW5	4	41	29	3	4	6	2	1				16					2	5FV8	5	14	65					2
4GX6	4	1	85					1	5AV8	5	39	40	4	5	6	2	1				54					2
4GX7	4	22	76					1				34	4	5	1	6	1	5GH8	5	11	68					2
			73					2	5AW4	5	33	17					1				56					2
4GZ5	4	41	26	3	4	2	5	1				17					2	5GH8A	5	11	68					1
4HA5	4	5	50					1	5AX4	5	33	16					1				56					2
4HA7	4	36	35	1	12	5	9	1				16					2	5GJ7	5	22	62					1
			35	1	12	5	11	1	5AZ4	5	37	53	8	2	12	4	1				78					2
4HC7	4	36	*35	1	12	5	9	1				53	8	2	12	6	1	5GM6	5	1	64					1
			*35	1	12	5	11	1	5B8	5	39	30	4	5	6	2	1	5GS7	5	14	80					1
*Normally shows short position 7-10.									5BC3	5	44	*33	1	3	6	5	1				53					2
4HG8	4	39	25	4	5	3	2	1				**33	1	3	8	9	1	5Gx6	5	1	85					1
			25	4	5	1	6	1	*Normally shows short position 2-3-8-9.									5Gx7	5	22	76					1
4HK5	4	5	56					1	**Normally shows short position 2-3-5-6.												73					2
4HM5	4	5	57					1	5BE8	5	14	72					1	5HA7	5	36	35	1	12	5	9	1
4HM6	4	9	68					1				55					2				35	1	12	5	11	1
4HQ5	4	5	55					1	5BK7	5	8	55					1	5HB7	5	22	75					1
4HR8	4	39	33	4	5	2	9	1				55					2				75					2
4HS8	4	21	99					1	5BQ5	5	23	68					1	5HC7	5	36	*35	1	12	5	9	1
			99					2	5BQ7	5	8	54					1				*35	1	12	5	11	1
4HT6	4	9	60					1				54					2	*Normally shows short position 7-10.								
4JC6	4	9	65					1	5BR8	5	14	72					1	5HG8	5	39	24	4	5	3	2	1
4JCGA	4	9	59					1				55					2				25	4	5	1	6	1
4JD6	4	9	61					1	5BS8	5	8	54					1	5HZ6	5	1	83					1
4JH6	4	1	64					1				54					2	5J6	5	2	60					1
4JK6	4	1	61					1	5BT8	5	39	33	5	4	12	8	1				60					2
4JL6	4	1	23					1				54	5	4	12	1	1	5JK6	5	1	61					1
4JW8	4	11	80					1				54	5	4	12	2	1	5JL6	5	1	23					1
			85					2	5BW8	5	39	33	5	4	2	6	1	5JW8	5	11	80					1
4KE8	4	11	88					1				34	5	4	7	1	1				85					2
			53					2				34	5	4	7	3	1	5KD8	5	11	68					1
4KF8	4	21	92					1	5BZ7	5	8	53					1				52					2
			92					2				53					2	5KE8	5	11	88					1
4KN8	4	39	86	4	5	12	1	1	5CG4	5	33	10					1				53					2
			90	4	5	12	6	1				10					2	5KZ8	5	39	26	4	5	12	2	1
4KT6	4	9	52					1	5CG8	5	14	73					1				26	4	5	12	9	1
4LJ8	4	14	85					1				57					2	5LJ8	5	14	85					1
			60					2	5CL8	5	14	69					1				60					2
4LU6	4	1	52					1				51					2	5MB8	5	14	84					1
4MK8	4	21	98					1	5CM6	5	16	64					1				61					2
			98					2	5CM8	5	39	33	5	4	12	2	1	5MF8	5	36	35	1	12	6	7	1
4M-P12	4	1	60					1				38	5	4	12	9	1				34	1	12	6	10	1
4M-P26	4	7	81					1	5CQ8	5	11	72					1	5M-HH3	5	2	56					1
4R-HH2	4	8	53					1				55					2				56					2
			53					2	5CR8	5	39	*32	5	4	12	2	1	5M-K9	5	41	30	3	4	12	5	1
4R-HH8	4	39	86	4	5	12	1	1				*34	5	4	12	9	1	5MQ8	5	11	65					1
			90	4	5	12	6	1	*Normally shows short position 8.												66					2
4RHH15	4	8	53					1	5CU4	5	38	28	8	2	12	4	1	5N1039A	6	1	63					1
			53					2				28	8	2	12	6	1	5P-29	6	29	*62					1
5AF4	5	41	*24	4	3	2	6	1	5CZ5	5	16	60					1	*For plate cap, use jack next to socket 26								
			*24	4	3	2	6	1	5DB4	5	33	16					1	5R4	5	33	22					1
5AF11	5	36	31	1	12	12	11	1				16					2				22					2
			31	1	12	12	6	1	5DH8	5	14	61					1	5RDDH1	5	39	41	5	4	12	8	1
			35	1	12	12	3	1				73					2				35	5	4	12	1	1
5AM8	5	39	30	5	4	12	2	1	5DJ4	5	33	16					1				33	5	4	12	6	1
			30	5	4	12	8	1				16					2	5R-HP1	4	11	66					1
5AN8	5	13	62					1	5DN4	5	33	16					1				55					2
			61					2				16					2	5R-HR1	5	11	52					1
5AQ5	5	3	77					1	5EA8	5	11	71					1				55					2
5AR4	5	33	10					1				56					2	5R-K16	5	39	27	4	5	12	1	1
			10					2									2				27	4	5	12	8	1

\*Normal Shorts refer to position of "D" Switch.

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
5T4	5	33	16					1	6AG9	6	36	30	1	12	12	5	1	6AR11	6	36	28	1	12	12	5	1
			16					2				28	1	12	12	11	1				28	1	12	12	10	1
5T8	5	17	90					1	6AG11	6	36	28	1	12	12	8	1	6AS4	6	34	11					1
			63					2				28	1	12	12	5	1	6AS5	6	4	55					1
5U4	5	33	16					1				33	1	12	12	10	1	6AS6	6	1	77					1
			16					2				33	1	12	12	3	1	6AS7	6	38	35	8	7	12	1	1
5U8	5	11	79					1	6AH4	6	38	33	7	2	12	1	1	6AS8	6	39	35	8	7	12	4	1
			55					2	6AH6	6	1	58					1	6AS11	6	36	31	5	4	12	2	1
5U9	5	42	28	5	6	12	3	1	6AH7	6	38	48	8	7	12	1	1				32	5	4	12	6	1
			32	5	6	12	10	1				48	8	7	12	5	1				28	1	12	12	11	1
5V3	5	33	15					1	6AH9	6	36	37	1	12	5	2	1				32	1	12	12	6	1
			15					2				30	1	12	5	6	1				32	1	12	12	3	1
5V4	5	33	12					1	6AJ4	6	39	*84	8	7	1	5	1	6AT6	6	6	85					1
			12					2				*Normally shows short position 3-4-6-9.						6AT8	6	14	78					2
5V6	5	29	79					1	6AJ5	6	41	36	4	3	2	1	1				77					1
5V9	5	42	31	5	6	12	3	1	6AJ7	6	30	60					1				55					2
			30	5	6	12	8	1	6AJ8	6	39	85	5	4	12	1	1	6AU4	6	34	10					1
5W4	5	33	32					1				38	5	4	12	9	1	6AU5	6	28	71					1
			32					2	6AJ9	6	42	29	5	6	12	3	1	6AU6	6	1	82					1
5X4	5	38	47	8	7	12	3	1				33	5	6	12	10	1	6AU7	6	8	75					1
			47	8	7	12	5	1	6AK5	6	1	63					1				75					2
5X8	5	12	73					1	6AK6	6	1	82					1	6AU8	6	12	56					1
			61					2	6AK7	6	30	38					1				72					2
5X9	5	42	30	5	6	12	3	1	6AK8	6	17	90					1	6AV5	6	28	62					1
			30	5	6	12	10	1				63					2	6AV6	6	6	91					1
5Y3	5	33	32					1	6AK9	6	36	33	1	12	6	10	1				78					2
			32					2				35	1	12	6	3	1	6AV11	6	36	30	1	12	12	7	1
5Y4	5	38	52	8	7	12	3	1				31	1	12	6	8	1				30	1	12	12	9	1
			52	8	7	12	5	1	6AK10	6	36	32	1	12	12	7	1				30	1	12	12	11	1
5Z4	5	33	12					1				32	1	12	12	9	1	6AW6	6	1	64					1
			12					2	6AL3*	6	40	30	5	4	7	3	1	6AW8	6	12	44					1
5Z10	5	33	16					1				*If no test, use alternate settings.									78					2
			16					2	6AL3	6	40	30	5	4	3	7	1	6AX2	6	24	88					1
6A8	6	38	45	7	2	1	5	1	6AL5	6	41	33	3	4	12	2	1	6AX3	6	36	30	1	12	10	4	1
6A8GT	6	38	45	7	2	12	5	1				33	3	4	12	7	1	6AX4	6	34	13					1
6AB4	6	2	83					1	6AL6G	6	27	69					1	6AX5	6	38	44	7	2	1	5	1
6AB7	6	30	74					1	6AL9	6	36	28	1	12	12	5	1	6AX6G	6	38	48	7	2	1	3	1
6AB8	6	39	37	5	4	12	9	1				28	1	12	12	11	1				48	7	2	1	5	2
			44	5	4	12	2	1	6AL11	6	36	31	1	12	12	3	1	6AX7	6	8	*85					1
6AB9	6	42	79	5	6	10	2	1				27	1	12	12	8	1				*85					2
			79	5	6	4	8	1	6AM4	6	39	*96	8	7	1	5	1				*Tube good if it reads 22 or more.					
6AC5	6	38	40	7	2	12	5	1				*Normally shows short position 3-4-6-9.						6AX8	6	11	73					1
6AC7	6	30	60					1	6AM5	6	41	34	4	3	12	1	1				54					2
6AC9	6	36	28	1	12	3	9	1	6AM6	6	41	30	4	3	12	1	1	6AY3	6	44	27	5	4	7	2	1
			45	1	12	3	2	1	6AM8	6	39	30	5	4	12	2	1	6AY3B	6	44	27	5	4	7	2	1
			35	1	12	2	3	1				30	5	4	12	8	1	6AY11	6	36	30	1	12	12	5	1
6AC10	6	36	32	1	12	12	7	1	6AN4	6	41	*30	4	3	2	6	1				30	1	12	12	8	1
			32	1	12	12	9	1				*May show short position 1-7.									30	1	12	12	3	1
			32	1	12	12	11	1	6AN5	6	1	26					1				30	1	12	12	10	1
6AD5G	6	38	40	7	2	12	5	1	6AN6	6	41	52	7	1	12	2	1	6AZ8	6	39	32	5	4	12	6	1
6AD7	6	38	54	7	2	12	5	1				52	7	1	12	3	1				36	5	4	12	9	1
			62	7	2	12	1	1				52	7	1	12	4	1	6B3	6	15	10					1
6AD8	6	39	37	5	4	12	2	1				52	7	1	12	5	1	6B4	6	38	35	7	2	12	5	1
			60	5	4	12	7	1	6AN8	6	13	62					1	6B6	6	38	37	7	2	12	10	1
			60	5	4	12	8	1				61					2				58	7	2	12	4	1
6AD10	6	36	30	1	12	12	3	1	6AQ4	6	41	*29	4	3	6	1	1				58	7	2	12	5	1
			33	1	12	12	8	1				*Normally shows short position 2-5.						6B8	6	38	55	7	2	12	10	1
6AE5G	6	38	40	7	2	12	5	1	6AQ5	6	3	77					1				65	7	2	12	4	1
6AF3	6	15	12					1	6AQ6	6	6	89					1				65	7	2	12	5	1
6AF4	6	41	*24	4	3	2	6	1				80					2	6B10	6	36	34	1	12	12	3	1
			*Normally shows short position 1-7.						6AQ7	6	38	45	8	7	12	4	1				34	1	12	12	5	1
6AF5G	6	38	38	7	2	12	5	1				58	8	7	12	1	1				34	1	12	12	8	1
6AF9	6	42	27	5	6	7	1	1				58	8	7	12	3	1				34	1	12	12	10	1
			27	5	6	2	8	1	6AQ8	6	8	70					1	6B31	6	41	33	3	4	12	2	1
6AF11	6	36	31	1	12	12	11	1				70					2				33	3	4	12	7	1
			31	1	12	12	6	1	6AR5	6	3	91					1	6B32	6	41	33	3	4	12	2	1
			35	1	12	12	3	1	6AR6	6	38	33	8	6	12	7	1				33	3	4	12	7	1
6AG5	6	1	80					1	6AR8	6	39	30	5	4	12	6	1	6BA3	6	44	33	4	5	7	2	1
6AG7	6	30	38					1										6BA6	6	1	78					1

\*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

**5T4-6BA6**

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.			
68A7	6	39	33	5	4	12	2	1	68M5	6	3	77					1	6C8	6	38	48	7	2	12	5	1			
68A8	6	12	53					2	68M8	6	39	33	5	4	12	3	1	6C9	6	39	48	7	2	12	10	1			
68A11	6	36	29	1	12	12	4	1	68N4	6	41	*33	4	3	2	7	1	6C9	6	39	28	5	4	6	1	1			
			37	1	12	12	9	1	*Normally shows short position 1-6.									6C9	6	39	28	5	4	10	7	1	1	1	
68-B14	6	44	*33	4			1	2	1	68N5	6	39	*39	5	4	1	2	1	6C10	6	36	42	1	12	12	11	1		
*Normally shows short position 3-6-7-8.									68N5	6	39	*39	5	4	1	2	1	6C16	6	11	42	1	12	12	7	1	1	1	1
68C4	6	40	30	5	4	3	7	1	68N6	6	7	75					1	6C18	6	39	30	4	5	8	7	1			
68C5	6	1	74					1	68N8	6	39	35	5	4	12	8	1	6C18	6	39	30	4	5	8	7	1			
68C7	6	39	32	5	4	12	2	1	68N8	6	39	35	5	4	12	1	1	6C31	6	41	*80	4	5	8	9	1			
			32	5	4	12	6	1	68N11	6	36	29	1	12	12	3	1	*Normally shows short position 5-6.											
68C8	6	8	53	5	4	12	8	1	68Q5	6	23	68					1	6CA4	6	39	34	5	4	12	1	1			
			53					2	68Q6	6	27	69					1	6CA4	6	39	34	5	4	12	7	1			
68C32	6	6	91					1	68Q7	6	8	54					1	6CA5	6	4	55					1			
			78					2	68R3	6	15	10					2	6CA7	6	29	53					1			
68D5	6	38	29	7	2	12	1	1	68R8	6	14	72					1	6CA11	6	36	35	1	12	8	3	1			
68D6	6	1	85					1	68R8	6	14	72					1	6CA11	6	36	35	1	12	8	3	1			
68D11	6	36	26	1	12	12	11	1	68R8	6	14	72					2	6CB5	6	26	43					1			
			31	1	12	12	3	1	68S3	6	44	27	4	5	2	7	1	6CB6	6	1	64					1			
68E3	6	36	26	1	12	4	10	1	68S3A	6	44	27	4	5	2	7	1	6CCYZ	6	39	29	9	1	12	3	1			
68E6	6	1	91					1	68S8	6	8	54					1	6CCYZ	6	39	29	9	1	12	3	1			
68E7	6	39	33	5	4	3	7	1	68S8	6	8	54					2	6CC31	6	2	60					1			
68E8	6	14	72					1	6BT6	6	6	85					1	6CC31	6	2	60					1			
			55					2	6BT8	6	39	33	5	4	12	8	1	6CD3	6	36	*27	1	12	4	10	1			
68F5	6	3	40					1	6BT8	6	39	33	5	4	12	1	1	*Some tubes may show short position 5-6-8-9.											
68F6	6	6	85					1	6BU6	6	6	85					1	6CD6	6	26	53					1			
			80					2	6BU6	6	6	85					1	6CE3	6	36	25	1	12	4	10	1			
68F8	6	39	25	4	5	12	1	1	6BU8	6	21	80					2	6CE5	6	1	62					1			
			25	4	5	12	2	1	6BU8	6	21	92					2	6CF6	6	1	60					1			
			25	4	5	12	7	1	6BV8	6	39	31	5	4	12	2	1	6CG3	6	36	30	1	12	4	10	1			
			25	4	5	12	8	1	6BV8	6	39	31	5	4	12	2	1	6CG6	6	1	82					1			
			25	4	5	12	9	1	6BV11	6	36	33	5	4	12	6	1	6CG7	6	8	76					1			
68F11	6	36	25	1	12	12	3	1	6BV11	6	36	30	1	12	12	6	1	6CG8	6	14	76					2			
			25	1	12	12	8	1	6BW3	6	36	28	1	12	4	10	1	6CG8	6	14	73					1			
68G6	6	26	66					1	6BW4	6	39	50	5	4	12	1	1	6CH3	6	44	29	4	5	7	2	1			
68H3	6	44	27	5	4	7	2	1	6BW6	6	39	50	5	4	12	1	1	6CH6	6	9	55					1			
68H3A	6	44	27	5	4	7	2	1	6BW6	6	39	42	4	5	1	2	1	6CH8	6	39	33	5	4	12	7	1			
68H6	6	1	89					1	6BW7	6	9	76					1	6CH8	6	39	33	5	4	12	7	1			
68H8	6	12	59					1	6BW8	6	39	33	5	4	2	6	1	6CJ3	6	44	25	4	5	7	2	1			
			54					2	6BW8	6	39	33	5	4	2	6	1	6CJ6	6	39	*32	5	4	7	2	1			
68H11	6	36	27	1	12	12	4	1	6BW8	6	39	33	5	4	7	1	1	*Normally shows short position 1-6-9.											
			27	1	12	12	6	1	6BW11	6	36	34	5	4	7	3	1	6CK3	6	44	25	4	5	7	2	1			
68J3	6	36	27	1	12	12	8	1	6BW11	6	36	30	1	12	12	3	1	6CK4	6	38	34	7	2	1	3	1			
68J6	6	1	81					1	6BX6	6	9	76	1	12	12	11	1	6CK6	6	39	30	5	4	12	2	1			
68J7	6	39	33	5	4	12	2	1	6BX7	6	25	55					1	6CL3	6	44	27	4	5	2	7	1			
			33	5	4	12	6	1	6BX8	6	39	55					2	6CL5	6	26	54					1			
68J8	6	39	33	5	4	12	8	1	6BX8	6	39	33	5	4	12	2	1	6CL6	6	39	*32	5	4	2	9	1			
			38	5	4	12	8	1	6BY5	5	38	38	7	2	12	4	1	*Normally shows short position 3-8.											
			34	5	4	12	1	1	6BY5	5	38	38	7	2	12	4	1	6CL8	6	14	69					1			
			34	5	4	12	6	1	6BY6	6	1	93					1	6CM3	6	44	30	4	5	2	7	1			
68K4A	6	38	78	7	2	6	5	1	6BY6	6	1	93					1	6CM4	6	44	30	4	5	2	7	1			
68K4AA	6	38	78	7	2	6	5	1	6BY7	6	9	62					1	6CM4	6	40	29	4	5	3	6	1			
68K4BA	6	38	78	7	2	6	5	1	6BY8	6	39	34	5	4	12	1	1	6CM5	6	27	58					1			
68K5	6	10	53					1	6BY8	6	39	34	5	4	12	1	1	6CM6	6	16	64					1			
68K6	6	6	86					1	6BY11	6	36	32	1	12	12	3	1	6CM7	6	19	80					1			
			70					2	6BY11	6	36	32	1	12	12	3	1	6CM7	6	19	80					1			
68K7	6	8	55					1	6BZ3	6	36	32	1	12	12	8	1	6CM8	6	39	33	5	4	12	2	1			
			55					2	6BZ6	6	1	61					1	6CM8	6	39	33	5	4	12	2	1			
68K11	6	36	35	1	12	12	7	1	6BZ7	6	8	53					1	6CN6	6	29	*62					1			
			35	1	12	12	9	1	6BZ7	6	8	53					1	*For Plate Cap Use Jack Next to Socket 26.											
			35	1	12	12	11	1	6BZ8	6	8	53					2	6CN7	6	18	94					1			
68L4	6	34	10					1	6BZ8	6	8	55					1	6CQ4	6	34	60					2			
68L7	6	25	57					2	6C4	6	41	41	4	3	1	6	1	6CQ6	6	41	35	4	3	12	1	1			
			57					2	6C5	6	29	99					1	6CQ8	6	11	72					1			
68L8	6	11	66					1									1	6CQ8	6	11	72					1			
			55					2									2									2			

▲ Use TC-75 Adapter

\*Normal Shorts refer to position of "D" Switch.

**6BA7-6CQ8**

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
6CR6	6	41	39	4	3	12	7	1	6DR8	6	39	31	5	4	12	2	1	6EM7	6	38	32	8	7	12	1	1
6CR8	6	39	*32	5	4	12	2	1				62	5	4	12	7	1				45	8	7	12	4	1
			*34	5	4	12	9	1	6DS4	6	43	*87	10	12	12	2	1	6EN4	6	38	*40	7	2	6	5	1
																					*Normally shows short position 1 3 4 & 8.					
																					*Tube good if it reads 40 or more.					
6CS6	6	1	94					1	6DS5	6	3	76						6EQ7	6	39	34	5	4	12	2	1
6CS7	6	20	96					1	6DS8	6	39	30	5	4	12	2	1				71	5	4	12	8	1
			95					2				34	5	4	12	9	1	6ERS	6	41	33	4	3	1	2	1
6CT3	6	39	32	4	5	6	2	1	6DT3	6	36	31	1	12	4	10	1	6ESS	6	41	33	4	3	1	2	1
6CU5	6	4	47					1	6DT4	6	34	11						6ES6	6	41	26	3	4	2	1	1
6CU6	6	27	69					1	6DT5	6	16	45						6ES8	6	8	30					1
6CU8	6	39	32	5	4	1	7	1	6DT6	6	1	91									30				2	
			33	5	4	6	8	1	6DT8	6	8	71						6ET6	6	41	30	4	3	12	1	1
6CW4	6	43	*87	10	12	12	2	1				71						6ET7	6	39	30	5	4	12	7	1
									6DU3	6	36	30	1	12	4	10	1				70	5	4	12	2	1
6CW5	6	23	58					1	6DW4	6	44	27	4	5	2	7	1	6EU7	6	39	35	2	1	12	5	1
6CW7	6	39	33	5	4	7	2	1	6DW5	6	16	30									35	2	1	12	8	1
			33	5	4	7	6	1	6DX4	6	41	*62	3	4	1	7	1	6EU8	6	39	32	5	4	12	7	1
6CX8	6	12	45					1													32	5	4	12	2	1
			67					2	6DX8	6	39	26	4	5	12	8	1									
6CY5	6	1	54					1				26	4	5	12	1	1	6EY5	6	1	57					1
6CY7	6	39	31	5	4	2	3	1	6DY4	6	41	*24	4	3	2	6	1	6EY7	6	8	78					1
			45	5	4	2	7	1													78					2
6CZ5	6	16	60					1	6DY5	6	23	68						6EW6	6	1	77					1
6D1	6	41	43	4	3	1	6	1	6DY7	6	38	40	7	2	12	1	1	6EW7	6	20	87					1
6D2	6	41	33	3	4	12	2	1				40	7	2	12	5	1				92					2
			33	3	4	12	7	1	6DZ4	6	41	*31	3	4	6	2	1	6EX6	6	26	42					1
6D4	6	41	43	4	3	12	1	1										6EY6	6	29	65					1
6D8	6	38	43	7	2	12	5	1	6DZ7	6	38	40	7	2	12	1	1	6EZ5	6	29	65					1
6D10	6	36	32	1	12	12	7	1				40	7	2	12	5	1	6EZ8	6	39	33	5	4	12	2	1
									6DZ8	6	39	27	4	5	8	3	1				33	5	4	12	7	1
			32	1	12	12	9	1				30	4	5	2	1	1	6F5	6	38	40	7	2	1	10	1
			32	1	12	12	11	1	6E8	6	38	45	7	2	1	5	1	6F6	6	29	91					1
6DA4	6	34	11					1	6EA4*	6	36	80	1	12	6	4	1	6F8	6	38	45	7	2	12	5	1
6DA6	6	9	80					1													45	7	2	12	10	1
6DB5	6	16	30					1																		
6DB6	6	1	87					1										6F10	6	30	60					1
6DC6	6	1	67					1										6F21	6	41	35	4	3	12	1	1
6DC8	6	39	33	5	4	12	2	1										6F22	6	39	40	5	4	2	9	1
			60	5	4	12	7	1	6EA5	6	1	80						6F29	6	9	40					1
			60	5	4	12	8	1	6EA7	6	38	35	8	7	12	1	1	6F31	6	1	78					1
6DE4	6	34	13					1				39	8	7	12	4	1	6F33	6	1	77					1
6DE6	6	1	61					1	6EA8	6	11	71						6F36	6	1	58					1
6DE7	6	20	81					1				56						6F40	6	39	39	5	4	2	9	1
			90					2	6EB5	6	41	53	3	4	12	2	1	6FA7	6	39	33	5	4	12	7	1
6DG6	6	29	38					1				53	3	4	12	7	1				65	5	4	12	3	1
6DJ8	6	39	31	5	4	12	2	1	6EB8	6	12	35						6FC7	6	39	29	4	5	7	2	1
			31	5	4	12	7	1				99									29	4	5	7	6	1
6DK3	6	44	31	4	5	2	7	1	6EC4	6	38	32	7	8	2	5	1	6FD6	6	41	26	3	4	2	1	1
6DK6	6	1	61					1	6EC7	6	9	76						6FD7	6	39	25	4	5	2	3	1
6DL3	6	44	29	4	5	7	2	1	6ED4	6	44	*52	4	5	12	8	1				32	4	5	2	7	1
6DL4	6	39	*85	4	5	7	8	1										6FE5	6	29	37					1
																		6FG5	6	41	31	4	3	2	1	1
									6EF4*	6	36	76	1	12	6	4	1	6FG7	6	14	72					1
6DL5	6	3	88					1													55					2
6DM4	6	34	11					1										6FH5	6	41	33	4	3	1	2	1
6DN3	6	44	31	4	5	2	7	1										6FH6	6	27	62					1
6DN6	6	26	47					1										6FH8	6	39	32	5	4	12	6	1
6DN7	6	25	56					1	6EH4*	6	36	80	1	12	6	4	1				32	5	4	12	2	1
			77					2																		
6DQ3	6	36	30	1	12	4	10	1										6FJ7	6	36	36	1	12	12	3	1
6DQ4	6	34	11					1													44	1	12	12	10	1
6DQ5	6	26	55					1										6FM7	6	36	25	1	12	3	8	1
6DQ6	6	27	65					1													36	1	12	3	10	1
6DQ6B	6	27	62					1	6EH5	6	4	57						6FM8								

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.		
6FR7	6	39	24	4	5	2	3	1	6GT5	6	35	63					1	6HR5	6	3	77					1		
			32	4	5	2	7	1	6GT5A	6	35	63					1	6HR6	6	1	71					1		
6FSS	6	1	99					1	6GU5	6	41	27	3	4	2	1	1	6HS5	6	36	*30	1	12	11	2	1		
6FY6	6	1	54					1	6GU7	6	8	56					2	*Normally shows short position 3-10.										
6FV8	6	14	65					1									1	6HS6	6	1	66					1		
			54					2	6GV5	6	36	*26	1	12	5	9	1	6HS8	6	21	99					1		
6FW5	6	28	57					1	*Normally shows short position 3-4-7-10-11.									6HT5	6	36	*52	1	12	2	6	1		
6FW8	6	8	30					1	6GV7	6	39	30	4	5	8	7	1	6HT6	6	9	60					1		
			30					2				33	4	5	8	9	1	*May show short position 4-7-9-11.										
6FY5	6	41	33	4	3	1	2	1	6GV8	6	39	25	4	5	12	9	1	6HU6	6	39	52	4	5	2	1	1		
6FY7	6	36	25	1	12	12	3	1				25	4	5	12	2	1	6HU8	6	39	29	4	5	12	2	1		
			42	1	12	12	10	1	6GW5	6	41	29	3	4	6	2	1				29	4	5	12	6	1		
6FY8	6	39	30	4	5	12	3	1	6GW6	6	27	62					1	6HV5	6	36	*33	1	12	2	11	1		
			39	4	5	12	1	1	6GW8	6	39	25	4	5	2	8	1	*Normally shows short position 3-10.										
6G6	6	29	94					1				35	4	5	7	1	1	6HW8	6	39	32	4	5	12	6	1		
6G11	6	36	33	1	12	12	3	1	6GX6	6	1	85					1	6HZ5	6	36	*30	1	12	2	11	1		
			31	1	12	12	8	1	6GX7	6	22	76					2	*Normally shows short position 3-10										
6GA8	6	8	76					1				73					1	6HZ6	6	1	83					1		
			76					2	6GY5	6	36	*25	1	12	5	9	1	6HZ8	6	12	28					1		
6G-B3A	6	27	65					1	*Normally shows short position 3-4-7-10-11.																			
6GB5♦	6	44	*25	4	5	2	1	1	6GY6	6	1	82					1				75					2		
*Normally shows short position 3-6-7-8.									6GY8	6	39	*32	5	4	12	1	1	6J4	6	41	*85	4	3	1	7	1		
6G-B6	6	27	64					1				*32	5	4	12	3	1	*Normally shows short position 5-6.										
6G-B7	6	27	58					1				*94	5	4	12	6	1	6J5	6	29	93					1		
6GB9	6	27	64					1	*Normally shows short position 4.									6J6	6	2	60						1	
6GC5	6	16	26					1	6GZ5	6	41	30	3	4	2	5	1				60					2		
6GC6	6	26	52					1	6H6	6	38	48	7	2	1	3	1	6J7	6	38	50	7	2	1	10	1		
6GD7	6	14	74					1				48	7	2	1	5	1	6J9	6	39	26	4	5	12	2	1		
			63					2	6H31	6	1	91					1				26	4	5	12	9	1		
6GE5	6	36	*24	1	12	11	3	1	6HA5	6	5	56					1	6J10	6	36	96	1	12	12	6	1		
*Normally shows short position 4-10.									6HA6	6	9	23					1				28	1	12	12	11	1		
6GE8	6	39	33	5	4	12	8	1	6HB5	6	36	*25	1	12	11	3	1	6J11	6	36	22	1	12	12	5	1		
			33	5	4	12	3	1	*Normally shows short position 4-10.									6JA5	6	36	*33	1	12	9	2	1		
6GF5	6	36	*24	1	12	11	3	1	6HB6	6	9	20					1	*Normally shows short position 3-4-10-11.										
*Normally shows short position 4-10.									6HB7	6	22	75					1	6JA8	6	39	25	4	5	12	7	1		
6GF7	6	44	27	4	5	12	2	1				75					2				95	4	5	12	3	1		
			38	4	5	12	9	1	6HC8	6	39	36	5	4	12	3	1	6JB5	6	36	*35	1	12	9	2	1		
6GF7A	6	44	27	4	5	12	2	1				38	5	4	12	1	1	*Normally shows short position 3-4-10-11.										
			38	4	5	12	9	1	6HD5	6	36	*27	1	12	3	11	1	6JB6	6	35	62					1		
6GH8	6	11	68					1	*Normally shows short position 4-5-9-10.									6JBEA	6	35	62					1		
			56					2	6HD7	6	39	30	4	5	1	2	1	6JC5	6	36	*32	1	12	9	2	1		
6GH8A	6	11	68					1				30	4	5	1	9	1	*Normally shows short position 3-4-10-11.										
			56					2	6HE5	6	36	*32	1	12	9	2	1	6JC6	6	9	65					1		
6GJ5	6	35	65					1	*Normally shows short position 3-4-10-11.									6JC6A	6	9	59					1		
6GJ5A	6	35	65					1	6HE7	6	36	27	1	12	10	2	1	6JC8	6	39	24	4	5	1	2	1		
6GJ7	6	22	62					1				27	1	12	10	9	1				24	4	5	1	8	1		
			78					2	6HF5	6	36	*25	1	12	9	5	1	6JD5	6	36	*30	1	12	2	11	1		
6GJ8	6	11	70					1	*Normally shows short position 3-4-6-8-10-11.									*Normally shows short position 3-10										
			53					2	6HF8	6	12	27					2	6JD6	6	9	61					1		
6GK5	6	41	25	4	3	1	2	1				80					1	6JEA	6	35	59					1		
			40					1	6HG5	6	3	85					1	6JEB	6	35	59					1		
6GK6	6	9	40					1	6HG8	6	39	25	4	5	3	2	1	6JEC	6	35	52					1		
6GK7	6	9	58					1				25	4	5	1	6	1	6JE8	6	12	56					1		
6G-K17	6	34	12					1	6HJ5	6	36	*27	1	12	3	11	1	*Normally shows short position 4-5-9-10.										
6GL7	6	25	54					1				30	4	5	1	7	1	6JF6	6	44	*26	4	5	2	6	1		
			98					2	6HJ7	6	39	*78	4	5	1	7	1	*Normally shows short position 1-7.										
6GM5	6	39	*26	4	5	2	6	1	*For grid emission turn D switch to position 2.									6JG5	6	12	29						1	
*May show short position 3-8.									6HJ8	6	39	29	5	4	12	2	1	6JG6	6	35	56					1		
6GM6	6	1	64					1				31	5	4	12	8	1	6JGA	6	35	56					1		
6GM8	6	39	33	5	4	12	2	1	6HK5	6	5	56					1	6JH5	6	36	*32	1	12	11	2	1		
			33	5	4	12	7	1	6HK8	6	8	54					2	*Normally shows short position 3-7-8-10.										
6GN7	6	9	21					1				54					1	6JH6	6	1	64					1		
6GN8	6	12	36					1	6HL5	6	39	30	4	5	1	2	1	6JH8	6	39	26	4	5	12	6	1		
			98					2	6HL8	6	11	60					1	6JK5	6	36	*32	1	12	11	2	1		
6GQ7	6	39	24	4	5	3	2	1				60					2	*Normally shows short position 3-7-8-10.										
			24	4	5	3	6	1	6HM5	6	5	57					1	6JK6	6	1	61					1		
6GS7	6	14	80					1	6HM6	6	9	68					1	6JK8	6	8	54					1		
			53					2	6HQ5	6	5	55					1				55					2		
6GS8	6	21	95					1	6HQ6	6	1	64					1											

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
6JL6	6	1	23					1	6KS6	6	7	83					1	6LV6	6	36	*31	1	12	5	9	1	
6JL8	6	12	40					1	6KS8	6	12	33					1	*May show short position 3-4-7-10-11									
			70					2	6KT6	6	9	52					1	6LW6	6	38	*31	7	8	1	5	1	
6JM6	6	36	28	1	12	4	5	1	6KTR	6	12	67					1	*Normally shows short position 2-6									
6JN6	6	36	27	1	12	4	11	1	6KU8	6	39	91	4	5	12	7	1	6LX6	6	27	47					1	
6JN8	6	14	67					1				22	4	5	12	7	1	6LX8	6	11	80					1	
			53					2	6KY6	6	44	30	4	5	1	2	1	6LY8	6	12	21					1	
6JQ6	6	39	*34	4	5	8	7	1	6KY8	6	12	22					1	*Tube good if it reads 28 or more.									
			*57	4	5	8	6	1	6KV8	6	12	82					2	6LZ6	6	35	53					1	
*May show short position 2-3.									6KW6	6	44	30	4	5	1	8	1	6M7	6	38	52	7	2	1	10	1	
6JR6	6	35	50					1	6KY6	6	9	20					1	6M11	6	36	25	1	12	12	2	1	
6JS6	6	36	*29	1	12	9	5	1	6KY8	6	44	27	4	5	12	2	1				25	1	12	12	5	1	
*Normally shows short position 3-4-10-11.									6KY8A	6	44	39	4	5	12	9	1				25	1	12	12	8	1	
6JT6	6	35	65					1	6KZ8	6	39	26	4	5	12	2	1	6MA6	6	38	*58	3	8	2	6	1	
6JT6A	6	35	65					1				26	4	5	12	9	1	*Tube good if it reads 40 or more.									
6JT8	6	12	20					1	6L5	6	38	53	7	2	8	5	1	*No short test.									
			*99					2	6L6	6	29	63					1	6MB6	6	36	*32	1	12	9	5	1	
*Tube good if reads 60 or more.									6L7	6	38	44	7	2	1	10	1	*Normally shows short position 3-4-10-11.									
6JU6	6	35	55					1	6L10	6	30	38					1	6MB8	6	14	84					1	
6JU8	6	39	*32	4	5	2	1	1	6L12	6	8	70					1	6MC6	6	35	46					1	
			**32	4	5	8	7	1	6L41	6	39	33	5	4	8	9	1	6MD8	6	44	35	4	5	12	6	1	
*Normally shows short position 8.									6L43	6	39	*32	5	4	2	9	1				35	4	5	12	8	1	
6JU8A	6	39	*32	4	5	2	1	1	*Normally shows short position 3-8.								6ME6	6	35	53					1		
			**32	4	5	8	7	1	6LB6	6	36	*30	1	12	9	5	1	6ME8	6	39	30	4	5	12	6	1	
*Normally shows short position 2.									*Normally shows short position 3-4-10-11.								6MF8	6	36	35	1	12	6	7	1		
6JW8	6	11	80					1	6LB8	6	12	21					1				34	1	12	6	10	1	
			85					2	6LC6A	6	38	78	7	2	12	5	1	6MG8	6	11	80					1	
6JX8	6	22	88					1	6LC8	6	39	24	4	5	3	6	1				59					2	
			93					2	6LD6	6	9	51	24	4	5	6	2	1	6M-H1	6	41	*85	4	3	1	7	1
6JY8	6	12	40					1	6LD12	6	16	90					1	*Normally shows short position 5-6									
			55					2	6LE8	6	39	29	4	5	12	9	1	6MH6	6	36	*31	1	12	5	9	1	
6JZ6	6	36	*31	1	12	9	5	1	6LF6	6	36	*31	1	12	5	9	1	*May show short position 3-4-7-10-11									
*Some tubes may show short position 3-4-10-11.									6LF8	6	12	55					1	6M-HH3	6	2	56					1	
6JZ8	6	36	29	1	12	8	7	1	6LG6	6	36	*32	1	12	9	5	1				56					2	
6K6	6	29	92					1	*May show short position 3-4-7-10-11.								6MJ6	6	35	52					1		
6K7	6	38	52	7	2	1	10	1	6LH6A	6	38	78	7	2	12	5	1	6MJ8	6	36	35	1	12	7	8	1	
6K8	6	38	35	7	2	1	5	1	6LJ6A	6	38	78	2	7	12	5	1				35	1	12	7	10	1	
6K11	6	36	38	1	12	12	7	1	6LJ8	6	14	85					1	6MK8	6	21	98					1	
			38	1	12	12	9	1	6LM8	6	11	68					1				98					2	
			38	1	12	12	11	1	6LN8	6	11	66					1	6M-L4	6	41	*24	4	3	2	6	1	
6KA8	6	39	26	4	5	12	6	1	6LP12	6	39	33	5	4	12	3	1	*Normally shows short position 1-7.									
			33	4	5	12	2	1	6LQ6	6	35	52					1	6ML8	6	39	34	4	5	12	6	1	
6KD6	6	36	*26	1	12	9	5	1	6LQ8	6	12	31					1				4	5	12	8	1		
*Normally shows short position 3-4-10-11.									6LR6	6	36	*32	1	12	9	5	1	.....	.....	.....	4	5	12	9	1		
6KD8	6	11	68					1	6LR8	6	44	31	4	5	12	2	1	6MN8	6	36	33	1	12	7	8	1	
			52					2	6LT8	6	39	27	4	5	7	9	1				33	1	12	7	10	1	
6KE8	6	11	88					1				32	4	5	1	8	1				33	1	12	7	11	1	
			53					2	6LU6	6	1	52					1	6M-P17	6	3	90					1	
6KF8	6	21	92					1	6LU8	6	36	27	1	12	6	7	1	6M-P18	6	41	34	3	4	7	1	1	
			92					2	*May show short position 3-4-7-10-11.								6MP20	6	1	43					1		
6KG6	6	44	*26	4	5	1	8	1	6LV6	6	36	*31	1	12	5	9	1	6MQ8	6	11	65					1	
*Normally shows short position 2-3-6-7.									6LW6	6	38	52					1				68					2	
6KL8	6	39	31	4	5	12	2	1	6LX6	6	27	47					1	6MU8	6	11	42					1	
			70	4	5	12	8	1	6LY8	6	12	21					1				60					2	
6KM6	6	35	53					1	6LZ6	6	35	53					1	6MV8	6	12	60					1	
6KM8	6	39	31	4	5	12	7	1	6M7	6	38	52	7	2	1	10	1				82					2	
			75	4	5	12	3	1	6M11	6	36	25	1	12	12	2	1	6MX8	6	44	27	4	5	12	2	1	
6KN6	6	36	*30	1	12	9	5	1	6MA6	6	38	*58	3	8	2	6	1				39	4	5	12	9	1	
*Normally shows short position 3-4-10-11.									6MB6	6	36	*32	1	12	9	5	1	6MY8	6	36	27	1	12	6	7	1	
6KN8	6	39	86	4	5	12	1	1	6MC6	6	35	46					1				27	1	12	6	10	1	
			90	4	5	12	6	1	6MD8	6	44	35	4	5	12	6	1	6M3	6	39	29	4	5	6	9	1	
6KR8	6	12	22					1	6ME6	6	35	53					1	6N7	6	38	47	7	2	1	4	1	
			59					2	6MF8	6	36	35	1	12	6	7	1				47	7	2	1	5	1	
6KR8A	6	12	22					1	6MG8	6	11	80					1				47	7	2	1	5	1	
			59					?	6M-H1	6	41	*85	4	3	1	7	1										

◆Use TC-80 Adapter

\*Normal Shorts refer to position of "D" Switch.

▲Use TC-70 Adapter.

**6JL6-6N7**

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.		
6N8	6	39	37	5	4	12	2	1	6S27	6	38	44	8	7	1	2	1	7AF7	6	37	41	8	1	12	4	1		
			64	5	4	12	7	1				72	8	7	1	4	1				41	8	1	12	5	1		
			64	5	4	12	8	1				72	8	7	1	5	1	7AG7	6	37	32	8	1	12	6	1		
6NK7GT	6	30	84					1	6T4	6	41	*33	4	3	2	6	1	7AH7	6	37	32	8	1	12	6	1		
6P5	6	29	93					1	*Normally shows short position 1-7.									7AJ7	6	37	37	8	1	12	6	1		
6P15	6	23	68					1	6T7G	6	38	37	7	2	12	10	1	7AK7	6	37	33	8	1	12	6	1		
6Q7	6	38	40	7	2	1	10	1				58	7	2	12	4	1	7AN7	7	39	33	5	4	7	2	1		
			63	7	2	1	4	1				58	7	2	12	5	1				33	5	4	7	6	1		
			63	7	2	1	5	1	6T8	6	17	90					1	7AU7	7	8	75					1		
6Q8	6	38	45	7	2	1	5	1				63				2					75					2		
6Q11	6	36	38	1	12	12	7	1	6T8A	6	17	90				1	7B4	6	37	40	8	1	12	6	1			
			38	1	12	12	9	1				63			2	7B5	6	37	52	8	1	12	6	1				
			38	1	12	12	11	1	6T9	6	36	27	1	12	12	8	1	7B6	6	37	40	8	1	4	3	1		
6R3	6	39	33	5	4	2	9	1				27	1	12	12	4	1				68	8	1	4	5	1		
6R4	6	39	30	4	5	12	1	1	6T10	6	36	28	1	12	12	3	1				68	8	1	4	6	1		
6R7	6	38	52	7	2	1	10	1				25	1	12	12	8	1	7B7	6	37	45	8	1	12	6	1		
			63	7	2	1	4	1				11				1	7B8	6	37	42	8	1	12	4	1			
			63	7	2	1	5	1	6U4	6	34	11				1	7C4	6	37	53	8	1	12	4	1			
6R8	6	17	86					1	6U6	6	29	54				1	7C5	6	37	38	8	1	12	6	1			
			62					2	6U7	6	38	35	7	2	12	10	1	7C6	6	37	50	8	1	4	3	1		
									6U8	6	11	79				1										1		
6RA6	6	40	34	4	5	9	7	1				55			2						68	8	1	4	5	1		
6R-A9	6	39	30	4	5	7	2	1	6U9	6	42	28	5	6	12	3	1				68	8	1	4	6	1		
6R-B11	6	39	32	4	5	6	3	1				32	5	6	12	10	1	7C7	6	37	37	8	1	12	6	1		
6R-HH2	6	8	53					1	6U10	6	36	32	1	12	12	7	1				6	9	55			1		
			53					2				32	1	12	12	9	1	7D10	6	9	55					1		
												32	1	12	12	11	1	7D18	7	39	31	5	4	12	2	1		
6R-HH8	4	39	86	4	5	12	1	1				10				1					31	5	4	12	7	1		
			90	4	5	12	6	1	6Y3	6	15	10				1	7E5	6	37	*33	8	2	1	5	1			
6R-K19	6	15	10					1	6Y4	6	39	40	5	4	12	1	1	*Normally shows short position 3-4-6-7.										
6R-P15	6	39	35	4	5	1	2	1				40	5	4	12	7	1	7E6	6	37	40	8	1	4	3	1		
6R-P22	6	39	*32	4	5	2	9	1	6Y6	6	29	79				1					69	8	1	4	5	1		
									6Y8	6	39	40	5	4	12	6	1									1		
												32	5	4	12	2	1	7E7	6	37	47	8	1	12	6	1		
												32	5	4	12	7	1				68	8	1	12	3	1		
6S2	6	24	35					1				61	5	4	12	9	1				68	8	1	12	4	1		
6S4	6	16	58					1	6Y9	6	42	31	5	6	12	3	1	7EK7	7	39	33	5	4	7	2	1		
6S7	6	38	47	7	2	1	10	1				30	5	6	12	8	1				33	5	4	7	6	1		
6S8	6	38	45	8	7	5	10	1				11				1	7ES8	7	8	30					1			
									6W4	6	34	11				1					30					2		
									6W5G	6	38	44	7	2	1	5	1	7EY6	7	29	65					1		
												44	7	2	1	3	1	7F7	6	37	45	8	1	12	4	1		
6SA7	6	38	37	7	2	1	5	1	6W6	6	29	51				1					45	8	1	12	4	1		
6SB7Y	6	38	34	7	2	1	5	1	6W7	6	38	50	7	2	12	10	1	7F8	6	37	30	7	2	12	1	1		
6SC7	6	38	48	8	7	1	3	1	6X4	6	41	44	4	3	12	1	1				30	7	2	12	1	1		
			48	8	7	1	4	1				44	4	3	12	6	1	7FC7	7	39	29	4	5	7	2	1		
6SD7	6	30	69					1	6X5	6	33	15				1	1				29	4	5	7	6	1		
6SE7	6	30	83					1				15			2		7G7	6	37	36	8	1	12	6	1			
6SF5	6	38	41	8	7	1	3	1	6X6	6	38	48	7	2	12	3	1	7GS7	7	14	80					1		
6SF7	6	38	46	8	7	1	2	1				48	7	2	12	5	1				53				2			
			69	8	7	1	5	1	6X8	6	12	73				1	7GV7	7	39	30	4	5	8	7	1			
6SG7	6	30	77					1				61			2						33	4	5	8	9	1		
6SH7	6	30	77					1	6X9	6	42	30	5	6	12	3	1	7H7	6	37	35	8	1	12	6	1		
6SJ7	6	30	83					1				30	5	6	12	10	1	7HG8	7	39	25	4	5	3	2	1		
6SK7	6	30	84					1	6Y6	6	29	40				1					25	4	5	1	6	1		
6SL7	6	25	*85					2	6Y9	6	42	27	5	6	12	1	1	7J7	6	37	35	8	1	12	6	1		
			*85									27	5	6	12	8	1				50	8	1	12	4	1		
									6Y10	6	36	29	1	12	4	3	1									1		
												29	1	12	4	8	1	7K7	6	37	45	8	1	12	4	1		
6SN7	6	25	78					1	6Z7G	6	38	47	7	2	1	4	1				65	8	1	12	5	1		
												47	7	2	1	5	1				65	8	1	12	6	1		
6SQ7	6	38	42	8	7	1	2	1	6Z10	6	36	30	1	12	12	11	1	7KY6	7	9	20					1		
			71	8	7	1	4	1				95	1	12	12	6	1	7KZ6	7	9	17					1		
			71	8	7	1	5	1										7L7	6	37	36	8	1	12	6	1		
6SR7	6	38	46	8	7	1	2	1																				

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
7T7	6	37	32	8	1	12	6	1	8CU8	8	39	32	5	4	1	7	1	8MU8	8	11	42					1
7Y7	6	37	32	8	1	12	6	1				33	5	4	6	8	1				60					2
7W7	6	37	31	8	1	4	6	1	8CW5	8	23	58					1	8R-HP1	8	39	33	4	5	12	3	1
7X6	6	37	35	8	1	12	3	1	8CX8	8	12	45					1				39	4	5	12	1	1
			35	8	1	12	6	1				67					2	8R-LP1	8	39	35	4	5	12	1	1
7X7	6	37	43	8	1	12	3	1	8CY5	8	1	54					1				32	4	5	12	3	1
			36	8	1	12	5	1	8CY7	8	39	31	5	4	2	3	1	8SN7	8	25	78					1
			35	8	1	12	6	1				45	5	4	2	7	1				78					2
7Y4	6	37	45	8	1	12	3	1	8D8	6	39	41	5	4	2	9	1	8U9	8	42	28	5	6	12	3	1
			45	8	1	12	6	1	8DE7	8	20	81					1				32	5	6	12	10	1
7Z4	6	37	50	8	1	12	3	1				90					2	8X9	8	42	30	5	6	12	3	1
			50	8	1	12	6	1	8DX8	8	39	26	4	5	12	8	1				30	5	6	12	10	1
8A8	8	11	66					1				26	4	5	12	1	1	9A8	9	11	66					1
8AC9	8	36	28	1	12	3	9	1	8EB8	8	12	35					1				55					2
			45	1	12	3	2	1				99					2	9AB4	9	2	83					1
8AC10	8	36	35	1	12	2	3	1	8EM5	8	16	53					1	9AH9	9	36	37	1	12	5	2	1
			32	1	12	12	7	1	8ET7	8	39	30	5	4	12	7	1				30	1	12	5	6	1
			32	1	12	12	11	1				70	5	4	12	2	1	9AK8	9	16	90					1
8AL9	8	36	28	1	12	12	5	1	8FQ7	8	8	68	5	4	12	3	1	9AK10	9	36	63					2
			28	1	12	12	11	1				68					1				32	1	12	12	7	1
8AR11	8	36	28	1	12	12	5	1	8GJ7	8	22	62					2				32	1	12	12	11	1
			28	1	12	12	10	1				78					2	9AM10	9	36	34	1	12	12	7	1
8AU8	8	12	56					1	8GM6	8	1	64					1				34	1	12	12	9	1
			72					2	8GM8	8	12	36					1				34	1	12	12	11	1
8AV11	8	36	30	1	12	12	7	1	8GU7	8	8	56					2	9AQ8	9	8	70					1
			30	1	12	12	9	1				56					2				70					2
			30	1	12	12	11	1	8GX7	8	22	76					1	9AU7	9	8	75					1
8AW8	8	12	44					1				73					2				75					2
			78					2				98					2	9BJ11	9	36	28	1	12	12	6	1
8B8	8	39	33	4	5	12	3	1	8HA6	8	9	23					1				28	1	12	12	11	1
			39	4	5	12	1	1	8HG8	8	39	25	4	5	3	2	1	9BR7	9	39	32	5	4	9	2	1
8B10	8	36	34	1	12	12	3	1				25	4	5	1	6	2				37	5	4	9	6	1
			34	1	12	12	5	1	8JE8	8	12	56					1				37	5	4	9	7	1
			34	1	12	12	8	1				78					2	9BR8	9	14	72					1
8BA8	8	12	53					1	8JK8	8	8	54					1				55					2
			59					2				55					2	9CG&A	9	14	73					1
8BA11	8	36	29	1	12	12	4	1	8JL8	8	12	40					1				57				2	
			37	1	12	12	9	1	8JT8	8	12	70					2	9CL8	9	14	69					1
8BH8	8	12	59					1				20					1				51					2
			54					2				*99					2	9DZ8	9	39	27	4	5	8	3	1
8BM11	8	36	30	1	12	12	6	1	8JU8A	8	39	*32	4	5	2	1	1				30	4	5	2	1	1
			30	1	12	12	11	1				**32	4	5	8	7	1	9EA8	9	11	71					1
8BN8	8	39	35	5	4	12	8	1				*Normally shows short position 8.					1				56					2
			35	5	4	12	1	1				**Normally shows short position 2.					1	9ED4◆	9	44	*52	4	5	12	8	1
8BN11	8	36	29	1	12	12	3	1	8JV8	8	12	55					1				*Normally shows short position 2-3-6-7-9.					1
			29	1	12	12	7	1				85					2	9GH8A	9	11	68					2
8BQ5	8	23	68					1	8K11	8	36	38	1	12	12	7	1				56					1
8BQ7	8	8	54					1				38	1	12	12	9	1	9GV8	9	39	25	4	5	12	9	1
			54					2				38	1	12	12	11	1				25	4	5	12	2	1
8BQ11	8	36	28	1	12	12	5	1	8KA8	8	39	26	4	5	12	6	1	9HS6	9	1	66					1
			28	1	12	12	10	1				33	4	5	12	2	1	9J6	9	2	60					1
8BU11	8	36	28	1	12	12	8	1	8KR8	8	12	22					1				60					2
			28	1	12	12	4	1				59					2	9JW8	9	11	80					1
8CB11	8	36	28	1	12	12	6	1	8KS8	8	12	33					1				85					2
			28	1	12	12	5	1				84					2	9KC6	9	39	25	4	5	12	2	1
8CG7	8	8	76					1	8KT8	8	12	67					1	9KG6◆	9	44	*26	4	5	1	8	1
			76					2				91					2				*Normally shows short position 2-3-6-7.					1
8CH8	8	39	33	5	4	12	7	1	8LC8	6	39	24	4	5	3	6	1	9KV8	9	12	22					1
			36	5	4	12	8	1				24	4	5	6	2	1				82					2
8CL8	8	14	69					1	8LE8	8	39	29	4	5	12	9	1	9KX6	9	9	16					1
			51					2	8LS6	8	9	44					1	9KZ8	9	39	26	4	5	12	2	1
8CM7	8	19	80					1	8LT8	8	39	27	4	5	7	9	1				26	4	5	12	9	1
			94					2				32	4	5	1	6	1	9LA6	9	9	21					1
8CN7	8	18	94					2				32	4	5	1	8	1	9M-HH3	9	2	56					1
			60					2	8MDS	8	44	35	4	5	12	6	1				56					2
8CS7	8	20	96					1				35	4	5	12	8	1	9ML8	9	39	34	4	5	12	6	1
			95					2	8MP12	8	1	60	4	5	12	9	1					4	5	12	8	1
								2									1					4	5	12	9	1

\*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

7T7-9ML8

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
9MN8	9	36	33	1	12	7	8	1	10Y8	10	12	36					1	12A4	12	40	32	5	4	3	7	1
			33	1	12	7	10	1				61					2	12A6	12	29	92					1
			33	1	12	7	11	1	10KR8	10	12	22					2	12A8	12	38	45	7	2	12	5	1
9M-P12	9	41	38	3	4	2	1	1				59					1	12AB5	12	16	67					1
9R-A6	9	40	34	4	5	9	7	1	10KU8	10	39	22	4	5	12	7	1	12AC6	12	41	42	4	3	12	1	1
9R-AL1	9	39	33	4	5	2	3	1				60	4	5	12	2	1	12AC10	12	36	32	1	12	12	7	1
9R-HR2	9	11	68					1				60	4	5	12	3	1				32	1	12	12	9	1
			56					2	10LB8	10	12	21					1	12AD6	12	41	35	4	3	12	1	1
9U8	9	11	79					1				71					2	12AD7	12	8	85					1
			55					2	10LD6	10	9	51					1				85					2
9V9	9	42	31	5	6	12	3	1	10LD12	10	17	90					1	12AE6	12	41	52	4	3	12	1	1
			30	5	6	12	8	1				63					2				66	4	3	12	5	1
9X8	9	12	73					1	10LE8	10	39	29	4	5	12	8	1				66	4	3	12	6	1
			61					2	10LW8	10	12	25					1	12AE7	12	39	32	5	4	9	2	1
10AF11	10	36	31	1	12	12	11	1				92					2				32	5	4	9	7	1
			31	1	12	12	6	1	10LY8	10	12	21					1	12AE10	12	36	30	1	12	12	8	1
			35	1	12	12	3	1				*99					2				31	1	12	12	3	1
10AL11	10	36	31	1	12	12	3	1				*Tube good if it reads 28 or more.					1	12AF3	12	15	12					1
			27	1	12	12	8	1	10LZ8	10	12	54					1	12AF6	12	41	37	4	3	12	1	1
10BQ5	10	23	68					1				*99					2				4	3	12	1	1	
10C8	10	13	59					1				*Tube good if it reads 40 or more.						12AF11	12	36	31	1	12	12	11	1
			73					2	10T10	10	36	28	1	12	12	3	1				31	1	12	12	6	1
10CW5	10	23	58					1				25	1	12	12	8	1	12AG6	12	41	35	4	3	12	1	1
10D2	19	41	33	3	4	12	2	1	10Z10	10	36	30	1	12	12	11	1	12AH7	12	38	48	8	7	12	1	1
			33	3	4	12	7	1				95	1	12	12	6	1				48	8	7	12	5	1
10DE7	10	20	81					1	11AF9	10	42	27	5	6	7	1	1	12AJ6	12	41	40	4	3	12	1	1
			90					2				27	5	6	2	8	1				66	4	3	12	5	1
10DR7	10	39	32	5	4	2	3	1	11AR11	12	36	28	1	12	12	5	1	12AJ7	12	39	32	5	4	12	2	1
			41	5	4	2	7	1				28	1	12	12	10	1				66	4	3	12	6	1
10DX8	10	39	26	4	5	12	8	1	11BM8	12	39	33	5	4	12	3	1	12AJ7	12	39	32	5	4	12	2	1
			26	4	5	12	1	1				39	5	4	12	1	1	12AL5	12	41	33	3	4	12	2	1
10/E/312	25	29	47					1	11BN11	10	36	29	1	12	12	3	1	12AL8	12	39	34	5	4	12	3	1
10/E/349	6	29	79					1				29	1	12	12	7	1				33	3	4	12	7	1
10/E/558	6	38	52	7	2	12	10	1	11BQ11	10	36	28	1	12	12	5	1	12AL8	12	39	34	5	4	12	3	1
10/E/11448	6	29	93					1				28	1	12	12	10	1	12AL11	12	36	31	1	12	12	3	1
10/E/11533	6	29	63					1	11BT11	10	36	27	1	12	6	11	1				27	1	12	12	8	1
10/E/11581	6	38	40	7	2	12	10	1				30	1	12	8	5	1	12AQ5	12	3	77					1
10EB8	10	12	35					1				26	1	12	8	9	1	12AS5	12	4	55					1
			99					2	11C5	12	4	54					1	12AT6	12	6	85					1
10EG7	10	38	32	8	7	12	1	1	11CA11	10	36	35	1	12	8	9	1				78					2
			45	8	7	12	4	1				33	1	12	8	6	1	12AT7	12	8	74					1
10EM7	10	38	32	8	7	12	1	1				33	1	12	7	8	1	12AT7	12	8	74					2
			45	8	7	12	4	1	11CF11	10	36	34	1	12	7	8	1	12AU5	12	28	71					1
10EW7	10	20	87					1				34	1	12	8	11	1	12AU6	12	1	82					1
			92					2				32	1	12	8	5	1	12AU7	12	8	75					1
10FD7	10	39	25	4	5	2	3	1	11CH11	10	36	31	1	12	6	11	1	12AU8	12	12	75					2
			32	4	5	2	7	1				34	1	12	8	5	1				56					1
10FR7	10	39	24	4	5	2	3	1				30	1	12	8	3	1	12AU8	12	12	72					2
			32	4	5	2	7	1	11CY7	12	39	31	5	4	2	3	1	12AV5	12	28	62					1
10GF7	10	44	27	4	5	12	2	1				45	5	4	2	7	1	12AV6	12	6	91					1
			38	4	5	12	9	1	11DS5	10	3	76					1	12AV7	12	8	78					2
10GH8	10	11	68					1	11FY7	12	36	25	1	12	12	3	1	12AV7	12	8	55					1
			56					6				42	1	12	12	10	1	12AV7	12	8	55					2
10GK6	10	9	40					1	11HM7	10	39	*29	4	5	6	2	1	12AW6	12	1	78					1
10GM8	10	39	33	5	4	12	2	1				*Normally shows short position 3-9.					12AW8	12	12	44					1	
			33	5	4	12	7	1	11JE8	10	12	56									78					2
10GN8	10	12	36					1				78					1	12AX3	12	36	30	1	12	10	4	1
			98					2	11KV8	10	12	22					1	12AX4	12	34	13					1
10GV8	10	39	25	4	5	12	8	1				82					2	12AX7	12	8	*85					1
			25	4	5	12	2	1	11LQ8	12	12	31					1				*85					2
10HA6	10	9	23					1				50					2				*Tube good if it reads 22 or more.					
10HF8	10	12	27					1	11L78	12	39	27	4	5	7	9	1	12AY3	12	44	27	5	4	7	2	1
			80					2																		

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
12BA7	12	39	33	5	4	12	2	1	12DA6	12	9	80						1	12EK6	12	41	31	4	3	12	1	1
12BA11	12	36	28	1	12	12	4	1	12OB5	12	16	30						1	12EL6	12	41	38	4	3	12	1	1
◆12B-B14	12	44	*33	4	5	1	2	1	12OE8	12	39	36	5	4	12	1	1				68	4	3	12	5	1	
*Normally shows short position 3-6-7-8.									12OF5	12	39	52	5	4	9	1	1				68	4	3	12	6	1	
12BC32	12	6	91					1	12DF7	12	8	*85	5	4	9	6	1	12EM6	12	39	34	5	4	12	1	1	
			78					2				*85									90	5	4	12	9	1	
12BD6	12	1	85					1	*Tube good if it reads 22 or more.									12EN6	12	29	36						1
12BE3	12	36	26	1	12	4	10	1	12DJ8	12	39	31	5	4	12	2	1	12EQ7	12	39	34	5	4	12	2	1	
12BE6	12	1	91					1				31	5	4	12	7	1				71	5	4	12	8	1	
12BF6	12	6	85					1	12DK5	12	9	42						12EZ6	12	41	32	4	3	12	1	1	
			80					2	12DK6	12	1	61						12F5	12	38	40	7	2	12	10	1	
12BF11	12	36	25	1	12	12	3	1	12DK7	12	39	33	5	4	8	1	1	12F8	12	39	40	5	4	12	8	1	
			25	1	12	12	8	1				80	5	4	8	6	1				62	5	4	12	1	1	
12BH7	12	8	56					1	12DL8	12	39	80	5	4	8	9	1	12F31	12	1	78						1
			56					2				35	5	4	12	3	1	12FK6	12	41	40	4	3	12	1	1	
12BK5	12	10	53					1				65	5	4	12	9	1				65	4	3	12	5	1	
12BK6	12	6	86					1				65	5	4	12	9	1				65	4	3	12	6	1	
			70					2	12DM4	12	34	11						12FM6	12	41	35	4	3	12	1	1	
12BL6	12	41	35	4	3	12	1	1	12DM5	12	4	57									68	4	3	12	6	1	
12BM5	12	3	77					1	12DM7	12	8	*85						12FQ7	12	8	68						1
12BN6	12	7	75					1				*85									68						2
12BQ6	12	27	69					1	*Tube good if it reads 22 or more.									12FQ8	12	39	39	5	4	12	2	1	
12BR3	12	15	10					1	12DN6	12	26	47									39	5	4	12	7	1	
12BR7	12	39	32	5	4	9	2	1				47						12FR8	12	39	*25	4	5	12	3	1	
			36	5	4	9	6	1	12DQ4	12	34	11									*37	4	5	12	1	1	
			36	5	4	9	7	1	12DQ6	12	27	65									*62	4	5	12	8	1	
12BS3	12	44	27	4	5	2	7	1	12DQ6B	12	27	62						*Normally shows short position 5.									
12BT3	12	36	27	1	12	4	10	1	12DQ7	12	9	36						12FS5	12	1	99						1
12BT6	12	6	85					1	12DS7	12	39	34	5	4	12	3	1	12FT6	12	41	52	4	3	12	1	1	
			78					2				*85	5	4	12	1	1				66	4	3	12	5	1	
12BU6	12	6	85					1	*Tube good if it reads 20 or more.												66	4	3	12	6	1	
			80					2	12DT5	12	16	45						12FY7	12	8	42						1
12BV7	12	9	39					1	12DT6	12	1	91									42						2
12BV11	12	36	30	1	12	12	6	1	12DT7	12	8	*85						12FX5	12	4	68						1
			30	1	12	12	7	1				*85						12FX8	12	39	32	5	4	12	2	1	
12BW4	12	39	50	5	4	12	1	1	*Tube good if it reads 22 or more.												28	5	4	12	6	1	
			50	5	4	12	7	1	12DT8	12	8	71						12FY8	12	39	30	4	5	12	3	1	
12BX6	12	9	76					1				71									39	4	5	12	1	1	
12BX7	12	25	55					1	12DU7	12	39	31	5	4	12	1	1	12G4	12	41	41	4	3	1	6	1	
			55					2				77	5	4	12	7	1	12G11	12	36	33	1	12	12	3	1	
12BY3	12	15	10					1				77	5	4	12	9	1				31	1	12	12	8	1	
12BY7	12	9	42					1	12DV7	12	39	49	5	4	9	7	1	12GA6	12	41	36	4	3	12	1	1	
12BZ6	12	1	61					1				78	5	4	9	2	1	12G-B3A	12	27	65						1
12BZ7	12	8	95					1	12DV8	12	39	78	5	4	9	3	1	12G-B7	12	27	61						1
			95					2				35	5	4	12	3	1	12GC5	12	16	26						1
12C5	12	4	44					1				58	5	4	12	9	1	12GC6	12	26	52						1
12C8	12	38	55	7	2	12	10	1				58	5	4	12	1	1	12GE5	12	36	*24	1	12	11	3	1	
			65	7	2	12	4	1	12DW4A	12	44	27	4	5	2	7	1	*Normally shows short position 4-10.									
			65	7	2	12	5	1	12DW5	12	16	30						12GJ5	12	35	65						1
12C8Y	12	38	55	7	2	12	10	1	12DW7	12	8	75						12G-K17	12	34	12						1
			65	7	2	12	4	1				*90						12GN7	12	9	21						1
			65	7	2	12	5	1	*Tube good if it reads 22 or more.									12GT5	12	35	63						1
12CA5	12	4	55					1	12DW8	12	39	32	5	4	12	2	1	12GT5A	12	35	63						1
12CK3	12	44	25	4	5	7	2	1				32	5	4	12	7	1	12GV5	12	36	*26	1	12	5	9	1	
12CL3	12	44	27	4	5	2	7	1				44	5	4	12	9	1	*Normally shows short position 3-4-7-10-11.									
12CM6	12	16	64					1	12DY8	12	39	30	5	4	12	1	1	12GW6	12	27	62						1
12CN5	12	41	33	4	3	2	5	1				35	5	4	12	9	1	12H4	12	40	44	4	3	2	6	1	
12CR6	12	41	39	4	3	12	7	1	12DZ6	12	41	33	4	3	12	1	1	12H6	12	38	48	7	2	12	3	1	
			61	4	3	12	2	1	12DZ8	12	39	27	4	5	8	3	1				48	7	2	12	5	1	
12CS5	12	16	30					1				30	4	5	2	1	1	12H31	12	1	91						1
12CS6	12	1	94					1	12E5	12	25	93						12HB25◆	12	44	*33	4	5	1	2	1	
12CT3	12	39	32	4	5	6	2	1	12E13	6	29	52						*Normally shows short position 3-6-7-8.									
12CT8	12	13	57					1	12EA6	12	41	32	4	3	12	1	1	12HE7	12	36	27	1	12	10	2	1	
			63					2	12EC8	12	39	30	5	4	12	9	1				27	1	12	10	9	1	
12CU5	12	4	47					1				32	5	4	12	1	1	12HG7	12	9	28						1
12CU6	12	27	69					1	12ED5	12	4	57						12HL5	12	39	30	4	5	1	2	1	
12CX6	12	41	30	4	3	12	1	1	12EG6	12	41	36	4	3	12	1	1	12HL7	12	39	*33	4	5	6	2	1	
12CY6	12	41	33	4	3	12	1	1	12EH5	12	4	57						*Normally shows short position 3-9.									
12D4	12	34	11					1																			

\*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

**12BA7-12HL7**

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	
12HU8	12	39	29	4	5	12	2	1	12SR7	12	38	46	8	7	12	2	1	14BL11	14	36	29	1	12	12	3	1	
12J5	12	29	93	4	5	12	6	1				68	8	7	12	4	1				31	1	12	12	5	1	
12J7	12	38	50	7	2	12	10	1	12SS7	12	30	97	8	7	12	5	1	14BQ11	14	36	29	1	12	12	11	1	
12J8	12	39	30	5	4	12	1	1	12SW7	12	38	52	8	7	12	2	1				28	1	12	12	5	1	
			35	5	4	12	8	1				70	8	7	12	4	1	14BR11	14	36	30	1	12	12	2	1	
			35	5	4	12	9	1	12SX7	12	25	78	8	7	12	5	1				31	1	12	12	8	1	
12JB6	12	35	62					1				78					1	14C5	12	37	38	8	1	12	6	1	
12JB6A	12	35	62					1	12SY7	12	38	39	7	2	12	5	1	14C7	12	37	37	8	1	12	6	1	
12JF5	12	36	*32	1	12	11	3	1	12T10	12	36	28	1	12	12	3	1	14E6	12	37	40	8	1	4	3	1	
			*Normally shows short position 4-10							12U7	12	39	40	5	4	9	2	1				69	8	1	4	5	1
12JM6	12	36	26	1	12	4	5	1	12V6	12	29	79					1	14E7	12	37	47	8	1	12	6	1	
12JN6	12	36	27	1	12	4	11	1				51					1				68	8	1	12	4	1	
12JN8	12	14	67					1	12W6	12	29	51					1	14F7	12	37	45	8	1	12	4	1	
			53					2	12X4	12	41	44	4	3	12	1	1				45	8	1	12	5	1	
12JQ6	12	39	*34	4	5	8	7	1				44	4	3	12	6	1	14F8	12	37	30	7	2	12	1	1	
			*57	4	5	8	6	1	13CM5	12	27	57					1				30	7	2	12	8	1	
			*May show short position 2-3							13CW4	14	43	*87	10	12	12	2	1	14GT8	14	39	52	5	4	12	8	1
12JS6	12	36	*29	1	12	9	5	1				78					1				35	5	4	12	2	1	
			*Normally shows short position 3-4-10-11							13DE7	12	20	81					1	14GW8	14	39	25	4	5	2	8	1
12JT6	12	35	65					1				90					2				35	4	5	7	1	1	
12JT6A	12	35	65					1	13DF7	12	8	*85					1	14H7	12	37	35	8	1	12	6	1	
12JZ8	12	36	29	1	12	6	7	1				*85					2	14J7	12	37	35	8	1	12	6	1	
			40	1	12	6	10	1				*Tube good if it reads 22 or more.										50	8	1	12	4	1
12JF5	12	36	*32	1	12	11	8	1	13DR7	12	39	32	5	4	2	3	1	14JG8	14	39	32	4	5	12	8	1	
			*Normally shows short position 4-10										41	5	4	2	7	1				27	4	5	12	2	1
12K5	12	41	35	4	3	5	6	1	13EM7	12	38	32	8	7	12	1	1	14N7	12	37	42	8	1	12	4	1	
12K7	12	38	52	7	2	12	10	1				45	8	7	12	4	1	14Q7	12	37	42	8	1	12	5	1	
12K8	12	38	35	7	2	12	5	1	13FD7	12	39	25	4	5	2	3	1	14R7	12	37	35	8	1	12	4	1	
12KA8	12	39	26	4	5	12	6	1				32	4	5	2	7	1				35	8	1	12	6	1	
			33	4	5	12	2	1	13FG7	12	14	68					1				72	8	1	12	3	1	
12KL8	12	39	31	4	5	12	2	1				56					2	14S7	12	37	72	8	1	12	4	1	
			70	4	5	12	8	1	13FM7	14	36	25	1	12	3	8	1				72	8	1	12	4	1	
12L6	12	29	47					1				36	1	12	3	10	1	14V7	12	37	38	8	1	12	6	1	
12MD8	12	44	35	4	5	12	6	1	13FR7	12	39	24	4	5	2	3	1	14W7	12	37	52	8	1	12	4	1	
			35	4	5	12	8	1				32	4	5	2	7	1	14X7	12	37	36	8	1	12	5	1	
			35	4	5	12	9	1	13GB5	12	44	*25	4	5	2	1	1				35	8	1	12	6	1	
12MX8	12	44	27	4	5	12	2	1				*Normally shows short position 3-6-7-8								35	8	1	12	6	1		
			39	4	5	12	9	1	13GF7	12	44	27	4	5	12	2	1	14Y4	12	37	45	8	1	12	3	1	
12Q7	12	38	40	7	2	12	10	1				38	4	5	12	9	1				45	8	1	12	6	1	
			63	7	2	12	4	1	13J10	12	36	96	1	12	12	6	1	15A6	15	39	30	5	4	12	2	1	
			63	7	2	12	5	1				28	1	12	12	11	1	15A8	15	38	36	7	2	12	4	1	
12R5	12	41	39	4	3	2	5	1	13JT8	12	12	20					1				40	7	2	12	3	1	
12R-K19	12	15	10					1				*99					2	15AB9	15	42	79	5	6	10	2	1	
12R-LL3	12	8	55					1				*Tube good if it reads 60 or more.									79	5	6	4	8	1	
			55					2	13JZ8	12	36	29	1	12	6	7	1	15AF11	15	36	31	1	12	12	11	1	
12R-LL5	12	8	68					1				40	1	12	6	10	1				31	1	12	12	6	1	
			68					2	13SJ7	12	30	83					1	15BD11	15	36	35	1	12	12	3	1	
12S8	12	38	45	8	7	5	10	1	13V10	12	36	33	1	12	12	3	1				26	1	12	12	11	1	
			62	8	7	5	1	1				33	1	12	12	8	1	15BD11A	15	36	31	1	12	12	3	1	
			63	8	7	5	4	1	14A4	12	37	41	8	1	12	6	1				31	1	12	12	6	1	
12SA7	12	38	37	7	2	12	5	1	14A5	12	37	34	8	1	12	6	1	15CW5	15	23	58					1	
12SC7	12	38	48	8	7	12	3	1	14A7	12	37	45	8	1	12	6	1	15DQ8	15	39	26	4	5	12	8	1	
			48	8	7	12	4	1	14AF7	12	37	41	8	1	12	4	1				26	4	5	12	1	1	
12SF5	12	38	41	8	7	12	3	1	14B6	12	37	40	8	1	4	3	1	15EA7	15	38	35	8	7	12	1	1	
12SF7	12	38	46	8	7	12	2	1				68	8	1	4	5	1				39	8	7	12	4	1	
			69	8	7	12	5	1	14A8	12	37	42	8	1	4	6	1	15EW6	15	1	77					1	
12SG7	12	30	77					1	14BF11	14	36	25	1	12	12	3	1	15EW7	15	20	87					1	
12SH7	12	30	77					1				25	1	12	12	8	1				92				2		
12SJ7	21	30	83					1				25	1	12	12	8	1	15FM7	15	36	25	1	12	3	8	1	
12SK7	12	30	84					1				25	1	12	12	8	1				36	1	12	3	10	1	
12SL7	12	25	*85					1																			
			*85																								

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
15FY7	15	36	25	1	12	12	3	1	17BH3	17	44	27	5	4	7	2	1	17KW6♦	17	44	30	4	5	1	8	1
15HA6	15	9	23	1	12	12	10	1	17BH3A	17	44	27	5	4	7	2	1	17L6	17	29	47					1
15HB6	15	9	20					1	17BJ6	17	1	81					1	17LD8	17	44	25	4	5	12	2	1
15KY8	15	44	27	4	5	12	2	1	17BQ6	17	27	69					1				33	4	5	12	9	1
									17BR3	17	15	10					1	17RS	17	4	50					1
15KY8A	15	44	39	4	5	12	9	1	17BS3	17	44	27	4	5	2	7	1	17R-HH2	17	8	65					1
									17BW3	17	36	28	1	12	4	10	1				65					2
15LE8	15	39	29	4	5	12	9	1	17BZ3	17	36	30	1	12	4	10	1	17R-K19	17	15	10					1
15MF8	15	36	35	1	12	6	7	1	17C5	17	4	44					1	17W6	17	29	52					1
									17C8	17	39	33	5	4	12	2	1	17X10	17	36	98	1	12	12	6	1
15MX8	15	44	34	1	12	6	10	1				65	5	4	12	7	1				28	1	12	12	11	1
									17C9	17	39	65	5	4	12	8	1	17Y9	17	42	27	5	6	12	1	1
16A5	16	23	39	4	5	12	9	1				28	5	4	6	1	1				27	5	6	12	8	1
16A8	16	39	68	5	4	12	3	1	17CA5	17	4	28	5	4	10	7	1	17Z3*	17	39	33	4	5	2	9	1
									17CK3	17	44	55					1	*If No Test use alternate settings below.								
16AK9	7	36	39	5	4	12	1	1	17CL3	17	44	25	4	5	7	2	1	17A5	17	40	33	4	5	2	3	1
									17CL3	17	44	27	4	5	2	7	1	18A5	18	28	69					1
16AQ3*	16	40	35	6	12	6	10	1	17CQ4	17	34	11					1	18AJ10	18	36	32	1	12	4	3	1
									17CT3	17	39	32	4	5	6	2	1				33	1	12	4	8	1
									17CU5	17	4	47					1	18AK5	18	1	63					1
									17D4	17	34	11					1	18AQ5	18	3	77					1
									17DE4	17	34	13					1	18C51	18	39	29	9	1	12	3	1
16AQ3	16	40	30	5	4	3	7	1	17DM4	17	34	11					1	18C51	18	39	29	9	1	12	7	1
16BQ11	16	36	28	1	12	12	5	1	17DQ4	17	34	11					1	18D28	18	39	27	4	5	8	3	1
16BX11	16	36	28	1	12	12	10	1	17DQ6	17	27	65					1				30	4	5	2	1	1
									17DQ6B	17	27	62					1	18FW6	18	1	79					1
16C-B28	16	36	31	1	12	12	8	1	17DW4A	17	44	27	4	5	2	7	1	18FX6	18	1	92					1
									17EW8	17	8	65					1	18FY6	18	6	84					1
												65					2				81					2
16CL8	16	14	69					1	17F7	17	36	25	1	12	12	3	1	18GB5♦	18	44	*25	4	5	2	1	1
												42	1	12	12	10	1	*Normally shows short position 3-6-7-8.								
16GK6	16	9	51					2	17GE5	17	36	*24	1	12	11	3	1	18GD6	18	1	80					1
16GY5	16	36	*25	1	12	5	9	1				*24	1	12	11	3	1	18GE6	18	6	78					1
																					85					2
16HB5	16	36	*25	1	12	11	3	1	17GJ5	17	35	65					1	18GV5	18	36	*26	1	12	5	9	1
									17GJ5A	17	35	65					1	*Normally shows short position 3-4-7-10-11.								
16K11	16	36	38	1	12	12	7	1	17GT5	17	35	63					1	18GV8	18	39	25	4	5	12	9	1
									17GT5A	17	35	63					1				25	4	5	12	2	1
									17GV5	17	36	*26	1	12	9	5	1	18HB8	18	39	36	5	4	12	9	1
16KA6	16	36	*30	1	12	9	5	1									1				33	5	4	12	1	1
									17GW6	17	27	62					1	18J6	18	6	60					1
									17GY5	17	36	*25	1	12	5	9	1				60					2
16LD6	16	9	51					1										18R-AL1	18	39	33	4	5	2	3	1
16LU8	16	36	27	1	12	6	7	1	17H3	17	15	13					1	19A3	19	41	32	3	4	6	5	1
16MY8	16	36	27	1	12	6	7	1	♦17H-B25	17	44	*33	4	5	1	2	1	19AJ8	6	39	85	5	4	12	1	1
																					38	5	4	12	9	1
16Y9	16	42	27	1	12	6	10	1	17HC8	17	39	36	5	4	12	3	1	19AQ5	19	3	77					1
												38	5	4	12	1	1	19AU4	19	34	10					1
17A8	17	11	27	5	6	12	1	1	17HG8	17	39	25	4	5	3	2	1	19BG6	19	26	66					1
												25	4	5	1	6	1	19BX6	19	9	76					1
17AB9	17	42	55					2	17JB6	17	35	62					1	19B7	19	9	62					1
									17JB6A	17	35	62					1	19C8	19	17	94					1
17AB10	17	36	79	5	6	4	8	1	17JF6	17	44	*28	4	5	2	6	1				62					2
																		19CG3	19	36	30	1	12	4	10	1
17AF3	17	15	95	1	12	12	6	1	17JG6	17	35	56					1	19CL8-A	19	14	74					1
									17JG6A	17	35	56					1				53					2
17AV5	17	28	12					1	17JK8	17	8	54					1	19D8	19	39	32	5	4	12	2	1
17AX3	17	36	62					1				55					2				35	5	4	12	9	1
17AX4	17	34	30	1	12	10	4	1	17JM6	17	36	26	1	12	4	5	1	19DE3●	19	27	47					1
17AY3	17	44	13					1	17JN6	17	36	27	1	12	4	11	1	19DE7	19	20	81					1
17AY3B	17	44	27	5	4	7	2	1	17JQ6	17	39	*34	4	5	8	7	1				90					2
																		19DK3	19	44	31	4	5	2	7	1
♦17B-B14	17	44	*33	4	5	1	2	1										19DN6	19	26	47					1
																		19DQ3	19	36	30	1	12	4	10	1
17BD11	17	36	26	1	12	12	11	1										19EA8	19	11	71					1
																					56					2
17BE3	17	36	31	1	12	12	3	1										19EW7	19	20	87					1
17BF11	17	36	31	1	12	12	6	1										19EZ8	19	39	33	5	4	12	2	1
																					33	5	4	12	7	1
17BF11A	17	36	25	1	12	12	3	1													33	5	4	12	9	1
																					33	5	4	12	9	1

\*Normal Shorts refer to position of "D" Switch.

♦Use TC-80 Adapter.

●Adapter kit required, contact B & K Service.



# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
30A5	30	41	27	3	4	5	2	1	35EH5	35	4	57					1	50Z6G	50	38	35	7	2	12	3	1
30AE3*	30	40	30	5	4	7	3	1	35GL6	35	41	39	4	3	6	2	1	50Z7G	50	38	35	7	2	12	5	1
*If no test, use alternate settings.									35H88	35	39	36	5	4	12	9	1	50Z7G	50	38	35	7	2	6	3	1
30AE3	30	40	30	5	4	3	7	1				33	5	4	12	1	1	53HK7	50	36	29	1	12	10	9	1
30AG11	30	36	28	1	12	12	8	1	35L6	35	29	54					1				29	1	12	10	2	1
			28	1	12	12	5	1	35LR6	35	36	*32	1	12	9	5	1	53KU	5	33	10					1
			33	1	12	12	10	1	*May show short position 3-4-7-10-11; 12-												10					2
			33	1	12	12	3	1	35W4	35	41	33	4	3	6	5	1	55N3	50	39	29	4	5	6	9	1
30C1	9	11	66					1	35Y4	35	37	31	8	1	4	2	1	58HE7	50	36	27	1	12	10	2	1
30CW5	30	23	58					1	35Z3	35	37	31	8	1	12	2	1				27	1	12	10	9	1
30HD5	30	36	*27	1	12	3	11	1	35Z4	35	38	33	7	2	12	5	1	60EH5	50	4	57					1
*Normally shows short position 4-5-9-10.									35Z5	35	38	33	7	2	3	5	1	60FX5	50	4	68					1
30HJ5	30	36	*27	1	12	3	11	1	36AM3	35	41	35	4	3	6	5	1	60HL5	50	39	30	4	5	1	2	1
*Normally shows short position 4-5-9-10.									36AM3-B	35	41	35	4	3	6	5	1	64SPT	6	39	33	5	4	1	2	1
30JZ6	30	36	*31	1	12	9	5	1	36KD6	35	36	*26	1	12	9	5	1	150C3	50	38	*99	2	11	3	5	1
*Some tubes may show short position 3-4-10-11.									*Normally shows short position 3-4-10-11.									*Tube good if it reads 60 or more.								
30KD6	30	36	*26	1	12	9	5	1	36LW6	35	38	*31	7	8	1	5	1	*Normally shows short position 11.								
*Normally shows short position 3-4-10-11.									*Normally shows short position 2-6.									*Normally shows grid emission.								
30KG6	30	44	*26	4	5	1	8	1	36MC6	35	35	46					1	213PEN	19	39	*32	5	4	7	2	1
*Normally shows short position 2-3-6-7.									38A3	35	40	30	4	5	1	6	1	*Normally shows short position 1-6-9.								
30L1	7	39	33	5	4	7	2	1	38E7	40	36	27	1	12	10	2	1	274	5	33	12					1
			33	5	4	7	6	1				27	1	12	10	9	1				12					2
30MB6	30	36	*32	1	12	9	5	1	38HK7	40	36	29	1	12	10	9	1	396-A	6	39	29	9	1	12	3	1
*Normally shows short position 3-4-10-11.												29	1	12	10	2	1				29	9	1	12	1	1
30M-P23	30	41	30	3	4	5	2	1	40FR5	40	4	54					1	403B	6	1	63					1
30M-P27	30	41	30	3	4	5	2	1	40KD	40	36	*26	1	12	9	5	1	407A	40	39	29	1	9	5	3	1
30PL12	16	39	33	5	4	12	3	1	*Normally shows short position 3-4-10-11.									407A	40	39	29	1	9	5	3	1
			39	5	4	12	1	1	40KG6	40	44	*26	4	5	1	8	1	408A	19	1	65					1
30P16	16	23	68					1	*Normally shows short position 2-3-6-8.									409A	6	1	77					1
31AL10	30	36	51	1	12	6	3	1	40Z5	50	38	31	7	2	3	5	1	502A	6	38	26	2	7	12	5	1
			33	1	12	6	8	1	42EC4	40	38	32	7	8	2	5	1	884	6	38	35	2	7	12	5	1
			38	1	12	6	11	1	42KN6	22	36	*30	7	12	9	5	1	1003	6	31	8					1
31JS6A	30	36	*29	1	12	9	5	1	*DO NOT turn D switch to position 1 and 12.												8					2
*Normally shows short position 3-4-10-11.									*Normally shows short position 3-4-10-11.									1201	6	37	*33	8	2	1	5	1
31LQ6	30	35	52					1	45B5	50	23	68					1	*Normally shows short position 3-4-6-7.								
31LR8	30	44	31	4	5	12	2	1	45Z3	50	41	32	7	1	6	2	1	1203	6	37	53	8	1	12	4	1
			31	4	5	12	9	1	45Z5	50	38	31	7	2	3	5	1	1217	6	1	92					1
31LZ6	30	35	53					1	50A5	50	37	35	8	1	12	6	1	1219	6	39	29	9	1	12	3	1
32A8	30	39	33	5	4	12	3	1	50AX6G	50	38	35	7	2	12	3	1				29	9	1	12	7	1
			39	5	4	12	1	1	50B5	50	3	38					1	1222A	6	38	25	1	6	12	4	1
32ET5	30	4	60					1	50BK5	50	10	53					1	1223	6	38	50	7	2	12	10	1
32HQ7	35	36	34	1	12	7	2	1	50BM8	50	39	33	5	4	12	3	1	1225	6	38	44	7	2	1	10	1
			34	1	12	7	9	1				39	5	4	12	1	1	1231	6	37	32	8	1	12	6	1
33GT7	30	36	*55	1	12	7	10	1	50C5	50	4	44					1	1232	6	37	36	8	1	12	6	1
			*26	1	12	7	2	1	50C6	50	29	45					1	1273	6	37	37	8	1	12	6	1
*Normally shows short position 9-11.									50C51	50	4	55					1	1274	6	37	45	8	1	12	3	1
33GY7	30	36	*56	1	12	7	11	1	50CA5	50	4	55					1	1280	12	37	37	8	1	12	6	1
			*26	1	12	7	2	1	50CD6	50	26	53					1	1282	6	37	35	8	1	4	6	1
*Normally shows short position 9-10.									50DC4	50	41	33	4	3	6	5	1	1288	3	37	45	8	1	4	3	1
33GY7A	30	36	*56	1	12	7	11	1	50E5	50	27	58					1	1291	3	37	45	8	1	4	3	1
			*26	1	12	7	2	1	50EH5	50	4	57					1	1292	3	37	45	8	1	4	3	1
*Normally shows short position 9-10.									50FA5	50	4	54					1	1294	2	37	60	8	1	4	6	1
33HE7	30	36	27	1	12	10	2	1	50FE5	50	29	37					1	1299	2	37	43	8	1	7	6	1
			27	1	12	10	9	1	50FK5	50	4	88					1	1611	6	29	91					1
33JR6	30	35	55					1	50FY8	50	39	30	4	5	12	3	1	1612	6	38	44	7	2	1	10	1
33JV6	30	36	28	1	12	4	11	1	50GY7	50	36	*55	4	5	12	1	1	1613	6	29	91					1
34CD3	35	36	*27	1	12	4	10	1	*30 1 12 7 11 1									1614	6	29	67					1
*Some tubes may show short position 5-6-8-9.									*Normally shows short position 9-10.									1619	3	38	39	7	2	12	5	1
34CE3	35	36	25	1	12	4	10	1	50HC6	50	41	26	3	4	6	2	1	1620	6	38	50	7	2	12	10	1
34CM3	35	44	30	4	5	2	7	1	50HK6	50	41	27	3	4	6	2	1	1621	6	29	91					1
34DK3	35	44	31	4	5	2	7	1	50HN5	50	39	30	4	5	1	2	1	1622	6	29	63					1
34GD5	35	4	57					1	50JY6	50	27	55					1	1626	12	29	82					1
34R3	35	39	33	5	4	2	9	1	50L6	50	29	47					1	1631	6	29	63					1
35A5	35	37	34	8	1	12	6	1	50X6	50	37	35	8	1	12	3	1	1632	12	29	47					1
35B5	35	3	55					1				35	8	1	12	6	1									1
35C5	35	4	54					1	50Y6	50	38	35	7	2	12	3	1									1
35CD6	35	26	53					1				35	7	2	12	5	1									1
35DZ8	35	39	27	4	5	8	3	1	50Y7	50	38	35	7	2	6	3	1									1
			30	4	5	2	1	1				35	7	2	6	5	1									1

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
1634	12	38	48	8	7	12	3	1	5910	2	41	54	7	1	12	6	1	6147	6	29	63					1
			48	8	7	12	4	1				75	7	1	12	4	1	6159	25	38	*38	7	2	1	5	1
1655	6	38	48	8	7	1	3	1	5915	6	1	92					1	*Normally shows short position 4-6.								
			48	8	7	1	4	1	5920	6	2	49					1	6180	6	25	78					1
1664	12	38	55	7	2	12	10	1				49					2				78					2
			65	7	2	12	4	1	5931	5	33	16					1	6185	6	39	29	9	1	12	3	1
			65	7	2	12	5	1				16					2				29	9	1	12	7	1
1665	6	41	32	4	3	5	1	1	5932	6	29	63					1	6186	6	1	80					1
1667	6	41	32	4	3	5	1	1	5961	6	38	37	7	2	12	5	1	6187	6	1	87					1
1852	6	30	60					1	5963	12	8	76					1	6188	6	25	*81					1
1853	6	30	74					1				76					2				*81					2
2013	12	8	54					1	5964	6	2	67					1	*Tube good if it reads 22 or more.								
			54					2				67					2	6189	12	8	75					1
2014	6	39	*32	5	4	2	9	1	5965	12	8	54					1				75					2
*Normally shows short position 3-8.												54					2	6197	6	39	*32	5	4	2	9	1
2050	6	38	34	7	2	12	5	1	5992	6	29	79					1	*Normally shows short position 3-8.								
5590	6	1	63					1	6005	6	3	77					1	6198	12	8	75					1
5591	6	1	63					1	6006	6	30	77					1				75					2
5649	12	29	92					1	6012	6	38	28	2	7	12	3	1	6201	12	8	74					1
5654	6	1	63					1	6028	19	1	63					1				74					2
5659	12	29	92					1	6042	6	25	78					1	6202	6	41	44	4	3	12	1	1
5660	12	39	55	7	2	12	10	1				78					2				44	4	3	12	6	1
			65	7	2	12	4	1	6046	25	29	47					1	6203	6	39	41	4	5	12	1	1
			65	7	2	12	5	1	6057	12	8	*85					1				41	4	5	12	9	1
5661	12	30	84					1				*85					2	6211	12	8	54					1
5663	6	41	25	3	4	12	1	1	*Tube good if it reads 22 or more.												54					2
5670	6	39	29	9	1	12	3	1	6058	6	41	33	3	4	12	2	1	6216	6	39	*29	4	5	3	2	1
			29	9	1	12	7	1				33	3	4	12	7	1	*Normally shows short position 1-6.								
5679	6	37	48	8	1	12	3	1	6060	12	8	74					1	6218	6	39	72	4	5	12	2	1
			48	8	1	12	6	1				74					2	6227	6	9	53					1
5686	6	23	87					1	6062	6	39	33	5	4	8	9	1	6265	6	1	89					1
5687	12	39	37	5	4	8	2	1	6063	6	41	44	4	3	12	1	1	6267	6	39	40	5	4	2	9	1
			37	5	4	8	7	1				44	4	3	12	6	1	6293	6	38	*38	7	2	1	5	1
5691	6	25	*85					1	6066	6	6	85					1	*Normally shows short position 4-6.								
			*85					2				78					2	6336	6	38	29	8	7	12	1	1
*Tube good if it reads 22 or more.									6067	12	8	75					1				29	8	7	12	4	1
5692	6	25	78					1				75					2	6350	12	39	31	4	5	9	3	1
			78					2	6069	6	1	63					1				31	4	5	9	8	1
5693	6	30	83					1	6072	12	8	93					1	6360	12	39	30	4	5	9	1	1
5696	6	41	34	4	3	5	6	1				93					2				30	4	5	9	3	1
5721	12	8	*85					1	6080	6	38	35	8	7	12	1	1	6384	6	38	33	8	6	12	7	1
			*85					2				35	8	7	12	4	1	6417	12	39	33	5	4	8	9	1
*Tube good if it reads 22 or more.									6082	25	38	35	8	7	12	1	1	6463	12	39	28	4	5	9	3	1
5725	6	1	77					1				35	8	7	12	4	1				28	4	5	9	8	1
5726	6	41	33	3	4	12	2	1	6084	6	39	39	4	5	7	9	1				28	4	5	9	8	1
			33	3	4	12	7	1				74					1	6485	6	1	58					1
5727	6	41	32	4	3	5	1	1	6085	12	8	74					1	6516	6	41	34	4	3	12	1	1
5749	6	1	78					1				74					2	6520	6	38	35	8	7	12	1	1
5750	6	1	91					1	6087	5	33	23					1				35	8	7	12	4	1
5751	12	8	*85					1				23					2	6525	6	41	32	4	3	5	1	1
			*85					2	6095	6	3	77					1	6550	6	29	52					1
*Tube good if it reads 22 or more.									6096	6	1	63					1	6660	6	1	78					1
5755	16	39	38	4	5	9	3	1	6097	6	41	33	3	4	12	2	1	6661	6	1	89					1
			38	4	5	9	6	1				33	3	4	12	7	1	6662	6	1	81					1
5763	6	39	33	5	4	8	9	1	6098	6	38	33	8	6	12	7	1	6663	6	41	33	3	4	12	2	1
5814-A	12	8	75					1	6099	6	2	60					1				33	3	4	12	7	1
			75					2				60					2	6664	6	2	83					1
5823	1	41	*85	5	6	5	4	1	6100	6	41	41	4	3	1	8	1	6669	6	3	77					1
*Ignore short lamp indication. *Normally shows grid emission.									6101	6	2	60					1	6676	6	1	64					1
5824	25	29	48					1				60					2	6677	6	39	*32	5	4	2	9	1
5844	6	2	67					1	6106	5	3	16					1	*Normally shows short position 3-8.								
			67					2				16					2	6678	6	11	79					1
5845	4	41	*100	3	4	7	1	1				*85					1				55					2
			*100	3	4	7	5	1	*Tube good if it reads 22 or more.									6679	12	8	79					1
*Tube good if it reads 10 or more									6134	6	30	60					1				79					2
5871	6	29	79					1				60					2	6680	12	8	75					1
5879	6	39	52	5	4	12	1	1	6135	6	41	41	4	3	1	6	1				75					2
5881	6	29	63					1	6136	6	1	82					1	6681	12	8	*85					1
								1	6137	6	30	84					1				*85					2
								1	6146	6	38	*38	7	2	1	5	1	*Tube good if it reads 22 or more.								
								1	*Normally shows short position 4-6.									6686	6	9	60					1

◆Use TC-80 Adapter.

\*Normal Shorts refer to position of "D" Switch.

1634-6686

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
6687	6	1	89					1	7318	12	39	32	5	4	9	2	1	7984	12	36	*59	1	12	7	11	1
6688	6	23	82					1				32	5	4	9	7	1				*Normally shows short position 2-3-4-5-6-8-9.					
6689	6	39	25	4	5	12	2	1	7320	6	23	68					1	8016	1	32	55					1
6829	12	8	54					1	7355	6	38	37	7	2	12	6	1	8032	12	38	*38	7	2	1	5	1
			54					2	7360	6	39	29	4	5	12	3	1				*Normally shows short position 4-6.					
6853	5	33	23					1	7370	40	39	24	4	5	8	2	1	8056	6	43	*63	10	12	12	2	1
			23					2				24	4	5	8	7	1				*For grid emission turn D switch to position 4.					
6883	12	38	*38	7	2	1	5	1	7408	6	29	80					1	8077	12	9	42					1
			*Normally shows short position 4-6.						7494	12	8	*85					1	8102	12	39	28	4	5	12	3	1
6887	6	41	33	4	3	12	2	1				*85					2				27	4	5	12	9	1
			33	4	3	12	7	1				*Tube good if it reads 22 or more.						8106	12	39	*24	4	5	3	7	1
6888	6	30	62					1	7543	6	1	85					1				*Normally shows short position 2-6-9.					
6913	12	8	*85					1	7551	15	39	*33	4	5	9	2	1	8113	6	1	58					1
			*85					2				*Normally shows short position 3-8.						8136	6	1	65					1
			*Tube good if it reads 22 or more.						7558	6	39	*26	4	5	3	2	1	8156	12	36	*32	1	12	9	10	1
6919	6	41	33	3	4	12	2	1				*Normally shows short position 1-9.									*Normally shows short position 2-3-4-5-6-7-8-11.					
			33	3	4	12	7	1	7581	6	29	64					1	8233	6	44	*24	4	5	7	8	1
6922	6	8	24					1	7586	6	43	*65	10	12	12	2	1				*Normally shows short position 2-6.					
			24					2				*For grid emission turn D switch to position 4.									*May show short in position 3.					
6939	12	39	34	4	5	9	1	1	7587	6	43	*67	10	12	12	2	1	8255	6	39	*85	4	5	7	8	1
			34	4	5	9	3	1				*For grid emission turn D switch to position 4.									*Normal Shorts 1-3-6-9					
6954	6	1	87					1	7591	6	38	34	7	2	4	6	1	8278	6	44	*31	4	5	3	7	1
6968	6	1	63					1	7607	6	38	*32	7	2	1	5	1				*Normally shows short position 1-2-6-8.					
6973	6	16	62					1				*Normally shows short position 4-6.						8327	6	23	65					1
7000	6	38	50	7	2	12	10	1	7643	6	11	72					1	8417	6	29	54					1
7025	12	8	*85					1				55					2	8425	6	1	87					1
			*85					2	7645	12	39	34	4	5	9	1	1	8446	6	14	72					1
			*Tube good if it reads 22 or more.									34	4	5	9	3	1				55					2
7027	6	38	*36	7	2	5	6	1	7687	6	11	77					1	8447	12	39	32	5	4	9	2	1
			*Normally shows short position 1-4.									67					2				36	5	4	9	6	1
7036	6	1	92					1	7693	6	1	93					1	8448	6	39	33	5	4	2	7	1
7044	12	39	30	4	5	8	2	1	7694	6	1	84					1				*Normally shows short position 1-3-6-9.					
			30	4	5	8	7	1	7695	50	39	34	5	4	12	6	1	8458	12	44	32	4	5	9	1	1
7054	12	9	42					1	7701	12	39	*38	5	4	1	2	1				32	4	5	9	3	1
7055	12	41	33	3	4	12	2	1				*Normally shows short position 3-7-8-9.						8532	6	41	*85	4	3	1	7	1
			33	3	4	12	7	1	7716	12	12	53					1				*Normally shows short position 5-6.					
7056	12	1	64					1				*97					2	8552	12	38	*38	7	2	1	5	1
7057	12	8	53					1				*Tube good if it reads 20 or more.									*Normally shows short position 4-6.					
			53					2	7719	12	40	29	4	5	1	7	1	8556	6	39	*73	5	4	7	8	1
7058	12	8	*85					1	7722	6	23	80					1				*Normally shows shorts position 1, 3, 6, 9					
			*85					2	7724	14	39	52	5	4	12	8	1	8908	6	38	*30	7	8	1	5	1
			*Tube good if it reads 22 or more.									35	5	4	12	2	1				*Normally shows short position 2-6.					
7059	12	11	79					1	7728	12	8	74					1	8950	12	36	*27	1	12	9	5	1
			55					2				74					2				*Normally shows shorts position 2, 3, 4, 6, 10, 11					
7060	12	13	55					1	7729	12	8	*85					1	9001	6	1	93					1
			75					2				*85					2	9002	6	41	*46	4	3	1	6	1
7061	12	16	67					1				*Tube good if it reads 22 or more.									*Normally shows short position 2-7.					
7062	12	8	54					1	7730	12	8	75					1	9003	6	1	*73					1
			54					2				75					2				*Tube good if it reads 23 or more.					
7105	12	38	35	8	7	12	1	1	7731	6	11	79					1	9006	6	41	*55	4	3	1	5	1
			35	8	7	12	4	1				*85					2				*Normally shows short position 2-7.					
7119	12	39	30	4	5	8	2	1	7732	6	1	64					1	A863	6	38	50	7	2	12	10	1
			30	4	5	8	7	1	7733	12	9	42					1	A1834	6	38	35	8	7	12	1	1
7167	12	1	54					1	7738	6	41	*33	4	3	2	6	1				35	8	7	12	4	1
7184	6	39	*33	5	4	1	2	1				*Normally shows short position 1-7.						A2900	12	8	74					1
			*Normally shows short position 1-3-6-9.						7751	6	38	30	2	7	4	5	1				74					2
7189	6	39	*33	5	4	1	2	1	7752	6	1	64					1	AGS512	6	41	32	4	3	5	1	1
			*Normally shows short position 1-3-6-9.						7754	6	39	34	5	4	12	6	1	AR18	6	38	40	7	2	12	10	1
7199	6	39	30	5	4	12	7	1	7755	6	1	93					1				63	7	2	12	4	1
			32	5	4	12	9	1	7756	6	38	33	8	6	12	7	1	ARDD3	6	38	48	7	2	12	5	1
7233	6	39	33	5	4	2	7	1	7788	6	39	*29	4	5	3	2	1				48	7	2	12	5	1
			*Normally shows short position 1-3-6-9.									*Normally shows short position 6-9.						ARH1	6	38	44	7	2	12	10	1
7247	12	8	75					1	7867	6	26	53					1	ARP15	6	38	52	7	2	12	10	1
			*90					2	7868	6	44	*27	4	5	2	6	1	ARP16	6	38	50	7	2	12	10	1
			*Tube good if it reads 22 or more.									*Normally shows short position 1-7.						ARP17	6	29	91					1
7258	12	13	62					1	7895	6	43	*85	10	12	12	2	1	ARP32	6	29	79					1
			61					2				*For grid emission turn D switch to position 4.						ARP33	6	29	79					1
7308																										

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
AU13	5	33	32					1	CV565	35	37	31	8	1	12	2	1	CV764	2	38	54	7	2	12	10	1
			32					2	CV567	35	38	33	7	2	3	5	1	CV768	2	38	48	7	2	12	5	1
A232	4	33	32					1	CV568	35	38	33	7	2	3	5	1	CV770	2	38	54	7	2	12	10	1
			32					2	CV571	50	29	47									64	7	2	12	4	1
B36	12	25	78					1	CV572	6	33	15									67	7	2	12	5	1
			78					2				15						CV772	1	38	55	7	2	12	4	1
B65	6	25	78					1	CV573	6	33	15									55	7	2	12	5	1
			78					2				15						CV773	1	38	55	7	2	12	4	1
B152	12	8	74					1	CV574	6	33	15									55	7	2	12	5	1
			74					2				15						CV775	1	37	62	8	1	12	4	1
B309	12	8	74					1	CV575	5	33	16									55	8	1	12	6	1
			74					2				16						CV776	1	37	55	8	1	12	6	1
B319	7	39	33	5	4	7	2	1	CV578	6	38	45	7	2	12	5	1	CV777	1	37	54	8	1	5	6	1
			33	5	4	7	6	1	CV579	6	38	45	7	2	12	5	1	CV778	1	37	68	8	1	12	4	1
B329	12	9	75					1	CV580	6	38	45	7	2	12	5	1	CV779	2	37	53	8	1	12	6	1
			75					2				63	7	2	12	4	1				63	8	1	12	4	1
B339	12	8	*85					1	CV581	6	29	99									60	8	1	12	4	1
			*85					2	CV582	6	29	99									53	8	1	5	6	1
								1	CV583	6	29	99									57	7	1	5	4	1
B349	7	39	33	5	4	7	2	1	CV586	6	29	63									*55	7	1	5	3	1
			33	5	4	7	6	1	CV587	6	38	40	7	2	12	10	1									
			70					1				63	7	2	12	4	1									
B719	6	8	70					1	CV588	6	38	40	7	2	12	10	1									
			70					2				63	7	2	12	4	1									
B729	6	8	76					1				63	7	2	12	4	1									
			76					2				63	7	2	12	5	1									
BA2	6	38	34	7	2	12	5	1	CV589	6	38	40	7	2	12	10	1									
BPM04	6	3	77					1				63	7	2	12	4	1									
CC86E	6	39	33	5	4	12	2	1	CV590	6	30	83														
			33	5	4	12	7	1	CV591	6	30	83														
CV131	6	41	35	4	3	12	1	1	CV592	6	30	83														
			41	4	3	1	6	1	CV593	5	33	12														
CV133	6	41	34	4	3	12	1	1				12														
CV136	6	41	30	4	3	12	1	1	CV594	6	30	77														
CV138	6	41	33	3	4	12	2	1	CV595	6	30	77														
CV140	6	41	33	3	4	12	7	1				77														
			33	3	4	12	7	1	CV657	6	38	50	7	2	12	10	1									
CV216	50	38	*99	2	1	3	5	1	CV660	6	30	60														
								1	CV661	6	30	74														
								2	CV664	6	41	*46	4	3	1	6	1									
CV283	6	41	33	3	4	12	2	1				*46	4	3	1	6	1									
			33	3	4	12	7	1																		
								1																		
CV450	6	29	*62					1	CV665	6	1	*73														
								2				*73														
CV452	6	6	85					1	CV686	50	38	*85	2	11	3	5	1									
			78					2				*85	2	11	3	5	1									
CV453	6	1	91					1																		
								1																		
CV454	6	1	78					1	CV692	6	31	8														
CV455	12	8	74					1				8														
			74					2	CV694	12	30	77														
CV491	12	8	75					1	CV697	12	30	83														
			75					2	CV698	12	30	83														
CV492	12	8	*85					1	CV700	12	38	46	8	7	12	2	1									
			*85					2				68	8	7	12	4	1									
								1				68	8	7	12	5	1									
CV493	6	41	44	4	3	12	1	1	CV703	6	38	35	7	2	12	5	1									
			44	4	3	12	6	1	CV706	6	38	48	7	2	12	10	1									
								1																		
CV511	6	29	79					1	CV717	5	33	22														
CV538	12	38	37	7	2	12	5	1				22														
CV544	12	30	84					1	CV723	3	38	39	7	2	12	5	1									
CV547	12	38	42	8	7	12	2	1	CV726	35	37	31	8	1	12	2	1									
			71	8	7	12	4	1	CV728	2	38	53	7	2	12	10	1									
								1				12														
CV551	25	29	45					1	CV729	5	33	12														
CV552	25	29	47					1				12														
CV553	25	29	47					1	CV731	6	29	91														
CV554	6	38	48	7	2	12	3	1	CV732	6	34	11														
								1	CV747	6	30	60			</											

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
CV883	6	37	42	8	1	12	4	1	CV1649	6	29	99					1	CV1928	12	1	78					1	
CV885	6	37	38	8	1	12	6	1	CV1741	6	29	53					1	CV1929	6	38	48	7	2	12	3	1	
CV886	6	37	38	8	1	12	6	1	CV1753	35	37	34	8	1	12	6	1				48	7	2	12	5	1	
CV887	6	37	50	8	1	4	3	1	CV1757	6	1	93					1	CV1930	6	38	48	7	2	12	3	1	
			68	8	1	4	5	1	CV1758	1	41	55	7	1	5	6	1				48	7	2	12	5	1	
CV890	6	37	*33	8	2	1	5	1	CV1762	6	1	82					1	CV1931	6	38	48	7	2	12	3	1	
CV891	6	37	40	8	1	4	3	1	CV1763	6	41	*85	4	3	1	7	1				48	7	2	12	5	1	
			69	8	1	4	5	1	CV1777	6	37	37	8	1	12	6	1	CV1932	6	29	93					1	
CV892	6	37	69	8	1	4	6	1	CV1784	6	30	38					1	CV1933	6	29	93					1	
			47	8	1	12	6	1	CV1790	6	37	50	8	1	12	3	1	CV1934	6	29	93					1	
CV893	6	37	68	8	1	12	3	1	CV1800	1	38	57	7	2	12	5	1	CV1935	6	38	50	7	2	12	10	1	
			68	8	1	12	4	1	CV1802	1	38	57	7	2	12	5	1	CV1936	6	38	50	7	2	12	10	1	
CV894	6	37	45	8	1	12	4	1	CV1803	1	38	54	7	2	12	5	1	CV1937	6	38	50	7	2	12	10	1	
CV895	6	37	45	8	1	12	5	1	CV1805	1	38	54	7	2	12	5	1	CV1938	6	29	92					1	
CV896	6	37	36	8	1	12	6	1	CV1811	1	38	58	7	2	12	5	1	CV1940	6	29	92					1	
			35	8	1	12	6	1				86	7	2	12	10	1	CV1941	6	38	52	7	2	12	10	1	
CV897	6	37	45	8	1	12	4	1				*99	7	2	12	8	1	CV1942	6	38	52	7	2	12	10	1	
CV898	6	37	65	8	1	12	6	1				*Tube good if it reads 30 or more.					CV1943	6	38	52	7	2	12	10	1		
			35	8	1	12	6	1	CV1818	1	38	55	7	2	12	10	1	CV1944	6	38	35	7	2	12	5	1	
CV899	6	37	50	8	1	12	4	1	CV1819	6	29	93					1	CV1945	6	38	35	7	2	12	5	1	
CV900	6	37	42	8	1	12	4	1	CV1820	1	38	55	7	2	12	10	1	CV1946	6	38	35	7	2	12	5	1	
			42	8	1	12	5	1				96	7	2	12	5	1	CV1947	6	29	63					1	
CV901	6	37	35	8	1	12	4	1	CV1821	2	38	53	7	2	12	10	1	CV1948	6	29	63					1	
CV910	12	38	72	8	1	12	3	1	CV1822	2	38	53	7	2	12	10	1	CV1949	6	41	43	4	3	12	1	1	
CV916	12	38	72	8	1	12	4	1	CV1823	2	38	53	7	2	12	10	1	CV1950	6	38	44	7	2	12	10	1	
CV917	12	38	48	7	2	12	5	1	CV1824	1	38	48	7	2	12	5	1	CV1951	6	38	44	7	2	12	10	1	
CV918	12	38	48	7	2	12	5	1	CV1826	1	38	48	7	2	12	5	1	CV1956	6	38	47	7	2	12	4	1	
CV919	12	38	45	8	1	12	6	1	CV1829	1	38	54	7	2	12	5	1				47	7	2	12	5	1	
CV920	12	38	45	8	1	12	6	1	CV1846	5	33	22					1	CV1957	6	38	47	7	2	12	4	1	
CV921	12	38	48	7	2	12	5	1	CV1849	5	33	32					2	CV1958	6	38	47	7	2	12	4	1	
CV922	12	30	48	7	2	12	5	1	CV1851	5	38	47	8	7	12	3	1	CV1959	50	4	44					1	
CV924	12	25	50	7	2	12	3	1	CV1852	5	38	47	8	7	12	3	1	CV1961	12	1	82					1	
			69	8	7	12	2	1	CV1854	5	33	32					1	CV1962	6	38	52	7	2	12	10	1	
CV925	12	25	69	8	7	12	5	1	CV1856	5	33	32					1				63	7	2	12	4	1	
			78					2	CV1857	5	38	52	8	7	12	3	1	CV1963	6	38	52	7	2	12	10	1	
CV930	12	37	*85					2	CV1862	6	3	77	8	7	12	5	1				63	7	2	12	5	1	
CV939	25	38	*85					2	CV1863	5	33	12					1	CV1964	6	38	52	7	2	12	10	1	
CV945	30	37	78					1	CV1864	5	33	12					1	CV1966	6	38	37	7	2	12	5	1	
CV946	30	37	40	8	1	12	7	1	CV1873	6	30	74					1	CV1967	6	38	37	7	2	12	5	1	
CV995	6	41	40	8	1	12	2	1	CV1876	6	30	60					1	CV1969	6	38	48	8	7	12	3	1	
CV1067	6	29	40	8	1	12	2	1	CV1878	6	38	54	7	2	12	5	1	CV1970	6	38	48	8	7	12	3	1	
CV1071	5	33	40	8	1	12	7	1	CV1882	6	30	38	62	7	2	12	1	1	CV1972	6	38	48	8	7	12	3	1
CV1074	6	38	40	8	1	12	7	1	CV1893	6	38	55	7	2	12	10	1	1	CV1973	6	38	41	8	7	12	3	1
CV1268	5	33	4	3	2	1	1	1	CV1894	6	38	55	7	2	12	10	1	1	CV1974	6	38	47	7	2	12	10	1
			32					2				65	7	2	12	4	1	1	CV1975	6	38	47	7	2	12	10	1
CV1280	6	38	32					2				65	7	2	12	5	1	1	CV1976	6	38	37	7	2	12	5	1
CV1285	6	38	32					2				65	7	2	12	5	1	1	CV1978	6	30	77					1
CV1301	6	38	48	7	2	12	3	1				65	7	2	12	4	1	1	CV1981	6	30	84					1
CV1375	6	9	48	7	2	12	5	1				65	7	2	12	5	1	1	CV1982	6	30	84					1
CV1377	5	33	48	7	2	12	5	1				65	7	2	12	5	1	1	CV1985	6	25	*85					1
CV1633	12	8	48	7	2	12	5	1				65	7	2	12	5	1	1				*85					2
			74					2				65	7	2	12	5	1	1				*Tube good if it reads 22 or more.					
			74					2	CV1895	50	38	*70	2	11	3	5	1	CV1988	6	25	78					1	
			74					2				*Normally shows short position 11.						CV1990	6	38	78					2	
			74					2	CV1902	6	38	45	7	2	12	5	1				42	8	7	12	2	1	
			74					2	CV1908	6	38	40	7	2	12	10	1				71	8	7	12	4	1	
			74					2	CV1909	6	38	40	7	2	12	10	1				71	8	7	12	5	1	
			74					2	CV1910	6	38	40	7	2	12	10	1				71	8	7	12	4	1	
			74					2	CV1911	6	29	91					1	CV1991	6	38	42	8	7	12	2	1	
			74					2	CV1912	6	29	91					1				71	8	7	12	4	1	
			74					2	CV1926	6	26	52					1	CV1993	6	30	92					1	

\*Normal Shorts refer to position of "D" Switch.

CV883-CV1993

# B & K DYNA-JET MODEL 707 TUBE CHART ManualsPlus.com

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.			
CV1995	6	38	52	8	7	12	2	1	DAF92	2	41	55	7	1	12	6	1	E88CC	6	8	24					1			
			72	8	7	12	4	1	DAF96	1	41	58	7	1	12	6	1	E90CC	6	2	49					2			
CV1996	6	38	52	8	7	12	2	1				70	7	1	12	3	1	E90F	6	1	82					1			
			72	8	7	12	4	1	DC90	1	41	*70	7	1	5	6	1	E91AA	6	41	33	3	4	12	2	1			
CV2128	6	39	72	8	7	12	5	1	*Normally shows short position 2-3.									E91AH	6	1	33	3	4	12	7	1			
			85	5	4	12	1	1	DCC90	3	41	45	7	1	4	3	1	E91M	6	41	32	4	3	5	1	1			
CV2129	6	39	38	5	4	12	9	1	DD6	6	41	33	3	4	12	2	1	E92CC	6	2	61					1			
CV2370	3	41	*48	7	1	5	3	1	DF33	2	38	53	7	2	12	10	1	E99F	6	1	61					2			
*Normally shows short position 2-6.									DF91	1	41	55	7	1	5	6	1	E180F	6	23	82					1			
CV2390	3	41	*36	7	1	5	4	1	DF92	1	41	55	7	1	5	6	1	E182CC	6	39	30	4	5	8	2	1			
*Normally shows short position 2-6.									DF96	1	41	58	7	1	5	6	1				30	4	5	8	7	1			
CV2500	35	38	33	7	2	12	5	1	DF97	1	41	40	7	1	5	6	1	E188CC	6	8	23					1			
CV2507	1	41	52	7	1	5	6	1	DF904	1	41	52	7	1	5	6	1				24					2			
CV2522	6	1	77					1	DH63	6	38	40	7	2	12	10	1	E235L	6	38	30	2	7	4	5	1			
CV2524	6	1	82					1				63	7	2	12	4	1	E280F	6	23	80					1			
CV2526	6	6	91					2	DH74	12	38	40	7	2	12	10	1	E810F	6	39	*29	4	5	3	2	1			
CV2534	50	29	78					1				63	7	2	12	4	1	*Normally shows short position 6-9.											
CV2704	6	37	*33	8	2	1	5	1	DH76	12	38	40	7	2	12	10	1	AAA91	6	41	33	3	4	12	2	1			
*Normally shows short position 3-4-6-7.												63	7	2	12	5	1				33	3	4	12	7	1			
CV2706	6	37	53	8	1	12	4	1				63	7	2	12	4	1	EABC80	6	17	90					1			
CV2714	6	29	67					1	DH107	19	6	85					1				63					2			
CV2716	6	38	48	8	7	12	3	1				78				2	EAF801	6	39	33	5	4	12	2	1				
CV2721	6	39	48	8	7	12	4	1	DH149	6	37	50	8	1	4	3	1				35	5	4	12	8	1			
*Normally shows short position 1-6-9.												68	8	1	4	5	1	EB34	6	38	48	7	2	1	3	1			
CV2748	5	33	12					1				68	8	1	4	6	1	EB91	6	41	33	3	4	12	2	1			
			12					2	DH710	6	17	90					1				33	3	4	12	7	1			
CV2769	6	41	*55	4	3	1	5	1				63				2	EBC90	6	6	85					1				
*Normally shows short position 2-7.									DH719	6	17	90					2				78					2			
CV2901	6	39	40	4	5	2	9	1				63				2	EBC91	6	6	91					1				
CV2938	6	29	53					1	DK91	1	41	57	7	1	5	4	1				78					2			
CV2975	6	23	68					1	DK92	1	41	48	7	1	12	4	1	EBF80	6	39	37	5	4	12	2	1			
CV2983	3	41	45	7	1	5	6	1	DK96	1	41	54	7	1	12	4	1				64	5	4	12	7	1			
CV2984	6	38	35	8	7	12	1	1	DL33	3	38	45	7	2	8	5	1	EBF83	6	39	31	5	4	12	7	1			
			35	8	7	12	4	1	DL35	1	38	54	7	2	12	5	1				64	5	4	12	8	1			
CV3512	6	41	34	4	3	5	6	1	DL36	1	38	48	7	2	12	5	1				62	5	4	12	7	1			
CV3523	6	38	*38	7	2	1	5	1	DL91	1	41	*55	7	1	5	3	1	EC81	6	39	30	4	5	12	1	1			
*Normally shows short position 4-6.									DL92	3	41	*48	7	1	5	3	1	EC86	6	40	29	4	5	3	6	1			
CV3798	50	38	*70	2	11	3	5	1	*Normally shows short position 2-6.									EC88	6	39	*85	4	5	7	8	1			
*Normally shows grid emission.									DL93	3	41	*36	7	1	5	4	1	*Normally shows short position 1-3-6-9.											
*Normally shows short position 11.									DL94	3	41	45	7	1	5	6	1	EC90	6	41	41	4	3	1	6	1			
*Normally shows grid emission.									DL95	3	41	*42	7	1	5	3	1	EC91	6	41	*29	4	3	6	1	1			
CV3799	50	38	*69	2	11	3	5	1	DL96	3	41	45	7	1	5	6	1	*Normally shows short position 2-5.											
*Normally shows short position 11.									DP61	6	1	63					1	EC92	6	2	83					1			
*Normally shows grid emission.									DY30	1	32	55					1	EC95	6	41	32	4	3	1	2	1			
CV4007	6	41	33	3	4	12	2	1	DY80	1	24	85					1	EC97	6	41	33	4	3	1	2	1			
			33	3	4	12	7	1	DY86	1	24	35					1	EC80GS	6	40	29	4	5	3	6	1			
CV4010	6	1	63					1	DY87	1	24	35					1	EC900	6	5	56					1			
CV4018	6	41	32	4	3	5	1	1	DY802	1	24	56					1	EC8010	6	39	*73	5	4	7	8	1			
CV4024	12	8	74					2	E55L	6	44	*25	4	5	7	8	1	*Normally shows shorts position 1, 3, 6, 9.											
			74					1	*Normally shows short position 2-6.									ECC35	6	25	*85						1		
D2M9	6	41	33	3	4	12	2	1	E80CC	12	8	74					2				*85					2			
D63	6	38	48	7	2	12	3	1	E80CF	6	11	72					1	*Tube good if it reads 22 or more.											
			48	7	2	12	5	1				55					1	ECC81	12	8	74					1			
D77	6	41	33	3	4	12	2	1	E80F	6	39	34	4	5	7	9	1				74					2			
			33	3	4	12	7	1	E80L	6	39	25	4	5	1	2	1	ECC82	12	8	75					1			
D152	6	41	33	3	4	12	2	1	E80T	6	39	72	4	5	12	2	1				75					1			
			33	3	4	12	7	1	E81CC	12	8	74					1	ECC83	12	8	*85					1			
D193	3	41	*36	7	1	5	4	1				74					2				*85					2			
*Normally shows short position 2-6.									E81L	6	9	60					1	*Tube good if it reads 22 or more.											
DA90	2	41	*70	7	1	2	6	1	E83F	6	39	25	4	5	12	2	1	ECC84	6	39	33	5	4	7	2	1			
*Normally shows short position 5-11.																								33	5	4	7	6	1
DAC32	1	38	55	7	2	12	10	1																					
DAF91	1	41	96	7	2	12	5	1																					
			56	7	1	12	6	1																					
			95	7	1	12	3	1																					

■ Use TC-628 Adapter.    ◆ Use TC-80 Adapter    \*Normal Shorts refer to position to "D" Switch.

**CV1995-ECC84**

## B &amp; K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
ECC85	6	8	70					1	EF85	6	9	62					1	EZ90	6	41	44	4	3	12	1	1	
			70					1	EF86	6	39	40	5	4	2	9	1					44	4	3	12	6	1
			70					2	EF89	6	9	80					1	G180/ZM	50	38	*99	2	11	3	5	1	
ECC86	6	39	33	5	4	12	2	1	EF91	6	41	30	4	3	12	1	1										
			33	5	4	12	7	1	EF92	6	41	35	4	3	12	1	1										
ECC88	6	39	31	5	4	12	2	1	EF93	6	1	78					1										
			31	5	4	12	7	1	EF94	6	1	82					1										
ECC89	6	39	29	4	5	7	2	1	EF95	6	1	63					1										
			29	4	5	7	6	1	EF96	6	1	80					1										
ECC91	6	2	60					1	EF98	6	41	30	4	3	12	1	1										
			60					2	EF183	6	9	40					1										
ECC189	6	8	30					1	EF184	6	9	58					1										
			30					2	EF804	6	39	39	5	4	2	9	1										
ECC801S	12	8	74					1	EF-806S	6	39	40	4	5	2	9	1										
			74					2	EFL200	6	42	27	5	6	12	1	1										
ECC802S	12	8	75					1	EH90	6	1	94					1										
			75					2	EH-900S	6	1	91					1										
ECC808	6	39	33	5	4	12	1	1	EK90	6	1	91					1										
			33	5	4	12	9	1	EL34	6	29	53					1										
ECC960	6	2	49					1	EL36	6	27	58					1										
			49					2	EL37	6	29	63					1										
ECF80	6	11	66					1	EL38	6	29	*62					1										
			55					2																			
ECF82	6	11	79					1	EL81	6	39	*32	5	4	7	2	1										
			56					2																			
ECF86	6	39	25	4	5	3	2	1																			
			25	4	5	1	6	1	EL82	6	23	68					1										
ECF200	6	42	30	5	6	12	3	1	EL83	6	39	30	5	4	12	2	1										
			30	5	6	12	10	1	EL84	6	23	68					1										
ECF201	6	42	28	5	6	12	3	1	EL85	6	39	*39	5	4	1	2	1										
			32	5	6	12	10	1																			
ECF202	6	42	29	5	6	12	3	1	EL86	6	23	58					1										
			33	5	6	12	10	1	EL90	6	3	77					1										
ECF801	6	22	62					1	EL91	6	41	34	4	3	12	1	1										
			78					2	EL95	6	3	88					1										
ECF802	6	11	80					1	EL500	6	44	*25	4	5	2	1	1										
			85					2																			
ECF-805	6	39	30	4	5	8	7	1	EL503	6	44	*31	4	5	3	7	1										
			33	4	5	8	9	1																			
ECH81	6	39	85	5	4	12	1	1	EL505	6	44	*26	4	5	1	8	1										
			38	5	4	12	9	1																			
ECH83	6	39	30	5	4	12	2	1	EL508	6	44	30	4	5	1	8	1										
			34	5	4	12	9	1	EL509	6	44	*26	4	5	1	8	1										
ECH84	6	22	88					1																			
			93					2	EL802	6	9	51					1										
ECH200	6	42	31	5	6	12	3	1	EL803	6	39	30	5	4	12	2	1										
			30	5	6	12	8	1	EL820	6	39	*32	5	4	7	2	1										
ECL80	6	39	37	5	4	12	9	1																			
			44	5	4	12	2	1	EL821	6	9	55					1										
ECL82	6	39	33	5	4	12	3	1	ELL80	6	39	29	4	5	12	2	1										
			39	5	4	12	1	1																			
ECL84	6	39	26	4	5	12	8	1	EM-87	6	39	52	4	5	2	1	1										
			26	4	5	12	1	1	EN93	6	41	43	4	3	12	1	1										
ECL85	6	39	25	4	5	12	9	1	E080	6	39	33	5	4	3	7	1										
			25	4	5	12	2	1	EY81	6	39	33	5	4	2	9	1										
ECL86	6	39	25	4	5	2	8	1	EY82	6	39	29	4	5	6	9	1										
			35	4	5	7	1	1	EY86	6	40	*95	5	4	1	10	1										
ECLL800	6	39	*99	4	5	12	1	1																			
			36	4	5	12	2	1																			
			36	4	5	12	6	1																			
									EY88*	6	40	30	5	4	7	3	1										
ED2	6	41	33	3	4	12	2	1																			
			33	3	4	12	7	1																			
ED500	6	44	*52	4	5	12	8	1	EY88	6	40	30	5	4	3	7	1										
									EY500	6	38	32	7	8	2	5	1										
									EZ35	6	33	15					1										
EF22	6	37	36	8	1	12	6	1				15					7										
EF37-A	6	38	37	2	7	1	10	1	EZ80	6	39	40	5	4	12	1	1										
EF80	6	9	76																								

# B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	
LL505♦	25	44	*26	4	5	1	8	1	PCC85	9	8	70					1	PY88*	30	40	30	5	4	7	3	1	
	*Normally shows short position 2-3-6-7.																		*If no test, use alternate settings.								
LL521♦	22	44	*29	4	5	1	8	1	PCC88	7	39	31	5	4	12	2	1	PY88	30	40	30	5	4	3	7	1	
	*Normally shows short position 2-3-6-7.																		PY500	40	38	32	7	8	2	5	1
LL802	10	9	51					1	PCC89	7	39	29	4	5	7	2	1	QA240	6	41	41	4	3	1	6	1	
LN152	6	39	37	5	4	12	9	1				29	4	5	7	6	1	QA2404	6	41	33	3	4	12	2	1	
			44	5	4	12	2	1	PCC189	7	8	30					1	QA2406	12	8	74					1	
LY81	10	39	33	5	4	2	9	1				30					2									1	
LY88*	22	40	30	5	4	7	3	1	PCF80	9	11	66					1	QA2407	6	41	44	4	3	12	1	1	
	*If no test, use alternate settings.											55					2										1
LY88	22	40	30	5	4	3	7	1	PCF82	9	11	79					1	QA2408	6	25	78	4	3	12	6	1	
LY500	30	38	32	7	8	2	5	1				55					2										1
LZ319	9	11	66					1	PCF86	7	39	25	4	5	3	2	1	QE03/10	6	39	33	5	4	8	9	1	
			55					2				25	4	5	1	6	1	QE05/40	6	38	*38	7	2	1	5	1	
LZ329	9	11	66					1	PCF200	8	42	30	5	6	12	3	1		*Normally shows short position 4-6.								
			55					2				30	5	6	12	10	1	QS150/40	50	38	*99	2	11	3	5	1	
M8081	6	2	60					1	PCF201	8	42	28	5	6	12	3	1		*Tube good if it reads 60 or more.								
			60					2				32	5	6	12	10	1		*Normally shows short position 1L.								
M8100	6	1	63					1	PCF801	8	22	62					1		*Normally shows grid emission.								
M14	1	38	54	7	2	12	5	1				78					2	QV03/12	6	39	33	5	4	8	9	1	
N17	3	41	*48	/	1	5	3	1	PCF802	9	11	80					1	QV06/20	6	38	*38	7	2	1	5	1	
	*Normally shows short position 2-6.											85					2		*Normally shows short position 4-6.								
N18	3	41	*42	7	1	5	3	1	PCF805	7	39	30	4	5	8	7	1	R52	5	33	12					1	
	*Normally shows short position 2-6.											33	4	5	8	9	1		12								
N19	3	41	45	7	1	5	6	1	PCH200	9	42	31	5	6	12	3	1	SM7	1	32	55					1	
♦M22LL	19	44	33	4	5	7	1	1				30	5	6	12	8	1	SP6	6	41	30	4	3	12	1	1	
M152	19	39	*32	5	4	7	2	1	PCL82	16	39	33	5	4	12	3	1	T2M05	6	41	34	4	3	12	5	1	
	*Normally shows short position 1-4-9.											39	5	4	12	1	1		34								
N329	16	23	68					1	PCL84	15	39	26	4	5	12	8	1		4								
N709	6	23	68					1				26	4	5	12	1	1	TJ880	6	39	*27	5	4	6	2	1	
NCC189	4	39	30	5	4	12	2	1	PCL85	18	39	25	4	5	12	9	1		*Normally shows shorts position 3, 9								
			30	5	4	12	7	1				25	4	5	12	2	1	TM12	6	41	*85	4	3	1	7	1	
NR67	6	38	44	7	2	12	10	1	PCL86	14	39	25	4	5	2	8	1		*Normally shows short position 5-6.								
NR78	6	29	99					1				35	4	5	7	1	1	TS51	6	1	63					1	
NR78A	6	29	93					1	PD500♦	9	44	*52	4	5	12	8	1	TS52	6	2	60					1	
NR81	6	38	52	7	2	12	10	1											60								
NR83	6	38	50	7	2	12	10	1				52	7	2	12	10	1	TS-876C	6	39	*28	4	5	1	2	1	
NR85	6	29	91					1	PF9	6	38	52	7	2	12	10	1	TT21	12	39	32	5	4	9	2	1	
NR95	25	29	47					1	PF86	4	39	33	4	5	2	9	1		32								
NU20	5	33	32					1	PFL200	17	42	27	5	6	12	1	1	U50	5	33	32	5	4	9	7	1	
								2				27	5	6	12	8	1		32								
OBC3	12	38	42	8	7	12	2	1	PH4	6	38	45	7	2	12	5	1	U52	5	33	16					1	
			71	8	7	12	4	1	PL36	25	27	58					1		16								
OF1	6	38	47	7	2	12	10	1	PL81	19	39	*32	5	4	7	2	1	U54	5	33	10					1	
OH4	12	38	45	7	2	12	5	1				68					1		10								
OSW2190	6	30	60					1	PL82	16	23	68					1	U78	6	41	44	4	3	12	1	1	
OSW2192	6	30	38					1	PL83	12	39	30	5	4	12	2	1	U147	6	33	15					1	
OSW2600	6	30	60					1	PL84	15	23	58					1	U149	6	37	45	8	1	12	3	1	
OSW2601	6	30	38					1	PL95	4	3	88					1		15								
OSW3105	6	38	42	8	1	12	2	1	PL500♦	30	44	*25	4	5	2	1	1	U152	19	39	29	5	4	12	9	1	
								2											45								
			71	8	1	12	4	1	PL504♦	30	44	*25	4	5	2	1	1	U153	17	39	33	4	5	2	9	1	
			71	8	1	12	5	1											29								
OSW3106	6	29	79					1	PL505♦	40	44	*26	4	5	1	8	1	U154	19	39	29	4	5	6	9	1	
								1											29								
OSW3108	6	29	63					1	PL508♦	17	44	30	4	5	1	8	1	U192	19	39	29	4	5	6	9	1	
OSW3109	6	38	48	7	2	12	3	1											29								
								1	PL-509♦	30	44	*26	4	5	1	8	1	U193*	17	39	33	4	5	2	9	1	
OSW3111	6	30	84					1											*If no test, use alternate setting below								
OSW3112	6	29	93					1	PL521♦	30	44	*29	4	5	1	8	1	U381	17	40	33	4	5	2	3	1	
PABC80	9	17	90					1											35								
			63					2	PL802	16	9	51					1	U707	6	41	44	4	3	12	1	1	
PC86	4	40	29	4	5	3	6	1											44								
PC88	4	39	*85	4	5	7	8	1	PL820	19	39	*32	5	4	7	2	1	U709	6	39	34	5	4	12	1	1	
	*Normally shows short position 1-3-6-9.																			34							
PC92	3	2	83					1	PM04	6	1	78					1	UAA91	19	41	33	3	4	12	2	1	
PC-95	4	41	33	4	3	1	2	1	PM05	6	1	63					1		33								
PC97	5	41	33	3	4	1	2	1	PY32	30	38	24	2	7	6	3	1	UABC80	25	17	90					1	
PC900	4	5	56					1											63								
PCC84	7	39	33	5	4	7	2	1	PY80	19	39	29	5	4	12	9	1										

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
UC92	9	2	83					1	VT103	6	38	42	8	7	12	2	1	XCH81	3	39	85	5	4	12	1	1
UCC84	22	39	33	5	4	7	2	1				71	8	7	12	4	1	XCL82	8	39	33	5	4	12	3	1
UCC85	25	8	70	5	4	7	6	1	VT104	12	38	42	8	7	12	2	1	XCL84	8	39	26	4	5	12	8	1
			70					2				71	8	7	12	4	1				26	4	5	12	1	1
UCF80	25	11	66					1	VT105	6	38	48	8	7	12	3	1	XCL85	18	39	25	4	5	12	9	1
			55					2				48	8	7	12	4	1				25	4	5	12	2	1
UCH81	19	39	32	5	4	12	2	1	VT107	6	29	79						XF80	3	9	76					
			35	5	4	12	9	1	VT112	6	30	60						XF85	3	9	62					
UCL82	50	39	33	5	4	12	3	1	VT114	5	33	16						XF86	2	38	33	4	5	2	9	1
			39	5	4	12	1	1				16						XF94	3	1	82					
UF80	19	9	76					1	VT115	6	29	63						XF183	3	9	40					
UF85	19	9	62					1	VT116	6	30	83						XF184	3	9	58					
UF86	12	39	40	5	4	2	9	1	VT117	6	30	84						XL36	12	27	57					
UF89	12	9	80					1	VT124	1	38	55	7	2	12	5	1	XL84	8	23	68					
UL84	50	23	58					1	VT125	1	38	54	7	2	12	5	1	XL86	8	23	58					
UU12	6	39	34	5	4	12	1	1	VT126	6	33	15						XL500*	12	44	*25	4	5	2	1	1
			34	5	4	12	7	1				15														
UY82	50	39	29	4	5	6	9	1	W17	1	41	55	7	1	5	6	1									
UY85	35	40	30	4	5	1	6	1				55	7	1	5	6	1	XXA91	3	5	62					
Y2M70	6	41	44	4	3	12	1	1	W77	6	41	35	4	3	12	1	1				62					2
			44	4	3	12	6	1	W149	6	37	45	8	1	12	6	1	XXD	12	37	41	8	1	12	4	1
V177	6	41	35	4	3	12	1	1	W719	6	9	62						XXFM	6	37	41	8	1	12	5	1
V741	6	41	41	4	3	1	6	1	W727	6	1	78									43	8	1	12	3	1
Y884	6	41	35	4	3	12	1	1	WD709	6	39	37	5	4	12	2	1				36	8	1	12	5	1
V886	6	41	34	4	3	12	1	1				64	5	4	12	7	1				35	8	1	12	6	1
YP6	6	41	35	4	3	12	1	1	WT210-0001	6	41	32	4	3	5	1	1	XXL	6	37	41	8	1	12	6	1
YP12D	12	38	55	7	2	12	10	1	WT606	6	41	32	4	3	5	1	1	XY88*	16	40	30	5	4	7	3	1
			65	7	2	12	4	1	X14	2	38	54	7	2	12	5	1									
			65	7	2	12	5	1	X17	2	41	53	7	1	5	4	1	XY88	16	40	30	5	4	3	7	1
YP1321	12	41	*55	4	3	1	5	1	X18	1	41	48	7	1	12	4	1									
									X20	1	41	48	7	1	12	4	1									
YR75	50	38	*70	2	11	3	5	1	X25	1	41	54	7	1	12	4	1									
									X63(M)	6	38	45	7	2	12	5	1									
									X64	6	38	44	7	2	1	10	1									
YR90	50	38	*69	2	11	3	5	1	X730M	6	38	45	7	2	12	5	1									
									X107	19	1	91														
YR105	50	38	*85	2	11	3	5	1	X119	19	39	32	5	4	12	2	1									
												35	5	4	12	9	1									
									X148	6	37	38	8	1	12	6	1									
YR150/30	50	38	*99	2	11	3	5	1				52	8	1	12	4	1									
									X150	6	36	42	1	12	12	7	1									
												42	1	12	12	9	1									
												42	1	12	12	11	1									
VT52	6	29	92					1	X155	6	8	55														
VT65	7	29	99					1				55														
VT66	6	29	91					1	X719	6	39	85	5	4	12	1	1									
VT74	5	33	12					1				38	5	4	12	9	1									
			12					2	X727	6	1	91														
VT86	6	38	52	7	2	12	10	1	XAA91	3	41	33	3	4	12	2	1									
VT87	6	38	44	7	2	12	10	1				33	3	4	12	7	1									
VT88	6	38	52	7	2	12	10	1	XB91	3	5	62														
			63	7	2	12	4	1				62														
			63	7	2	12	5	1	XB767A	6	38	34	7	2	12	5	1									
VT90	6	38	48	7	2	12	3	1	XC95	2	41	33	4	3	1	2	1									
			48	7	2	12	5	1	XC97	2	41	33	4	3	1	2	1									
VT91	6	38	50	7	2	12	10	1	XC900	2	5	56														
VT93	6	38	55	7	2	12	10	1	XCC82	7	8	75														
			65	7	2	12	4	1	XCC189	4	8	30														
VT94	6	29	93					1				30														
VT96	6	38	47	7	2	12	4	1	XCF80	4	11	66														
			47	7	2	12	5	1				65														
VT97	5	33	32					1	XCF82	5	11	79														
			32					2				55														
VT99	6	38	45	7	2	12	5	1	XCF86	5	39	24	4	5	3	2	1									
			45	7	2	12	10	1				25	4	5	1	6	1									
VT102	6	29	92					1	XCF801	4	22	62														