

# ADAPTER TC-62 – A & B

## For Model 600 Tube Tester

Some NOVAR Based Tubes will require the Plate Cap Lead to be connected to the Terminal on the side of the TC-62-B adaptor. There are no such tubes in the current listing. If the Novar tube has a Plate or Grid Cap on top of the tube, the Cap Lead is connected to it and there is no connection to the adaptor side terminal.

Tube Type	HTR	A	B	C	Adapter	Socket #
5BC3	5	35	6	4	TC-62-A	3
		35	6	6		
6AY3	6	30	5	2	TC-62-B	8
6BH3	6	30	5	2	TC-62-B	8
6GB5	6	*26	4	5	TC-62-B	8
		*Normally shows short position 1, 2.				
12AY3	12	30	5	2	TC-62-B	8
17AY3	17	30	5	2	TC-62-B	8
17BH3	17	30	5	2	TC-62-B	8
22BH3	22	30	5	2	TC-62-B	8
27GB5	27	*26	4	5	TC-62-B	8
		*Normally shows short position 1, 2.				
28GB5	28	*26	4	5	TC-62-B	8
		*Normally shows short position 1, 2.				
7868	6	*27	5	1	TC-62-B	8
		*Normally shows short position 2-4.				
EL500	6	*26	4	5	TC-62-B	8
		*Normally shows short position 1-2.				
PL500	28	*26	4	5	TC-62-B	8
		*Normally shows short position 1-2.				