

FREQUENCY RANGES.

- 1. 0.55 MC. TO 1.6 MC.
- 2. 1.6 MC. TO 3.0 MC
- 3. 3.0 MC. TO 5.8 MC
- 4. 5.8 MC. TO 11.0 MC
- 5. 11.0 MC. TO 21.0 MC.
- 6. 21.0 MC. TO 43.0 MC.

AVC - BFO SWITCH

	LEFT	CENTER	RIGHT
SW1	OPEN	CLOSED	CLOSED
SW6	OPEN	CLOSED	CLOSED
SW7	OPEN	CLOSED	CLOSED
SW2	OPEN	OPEN	CLOSED
AVC	ON	AVC OFF	BFO ON

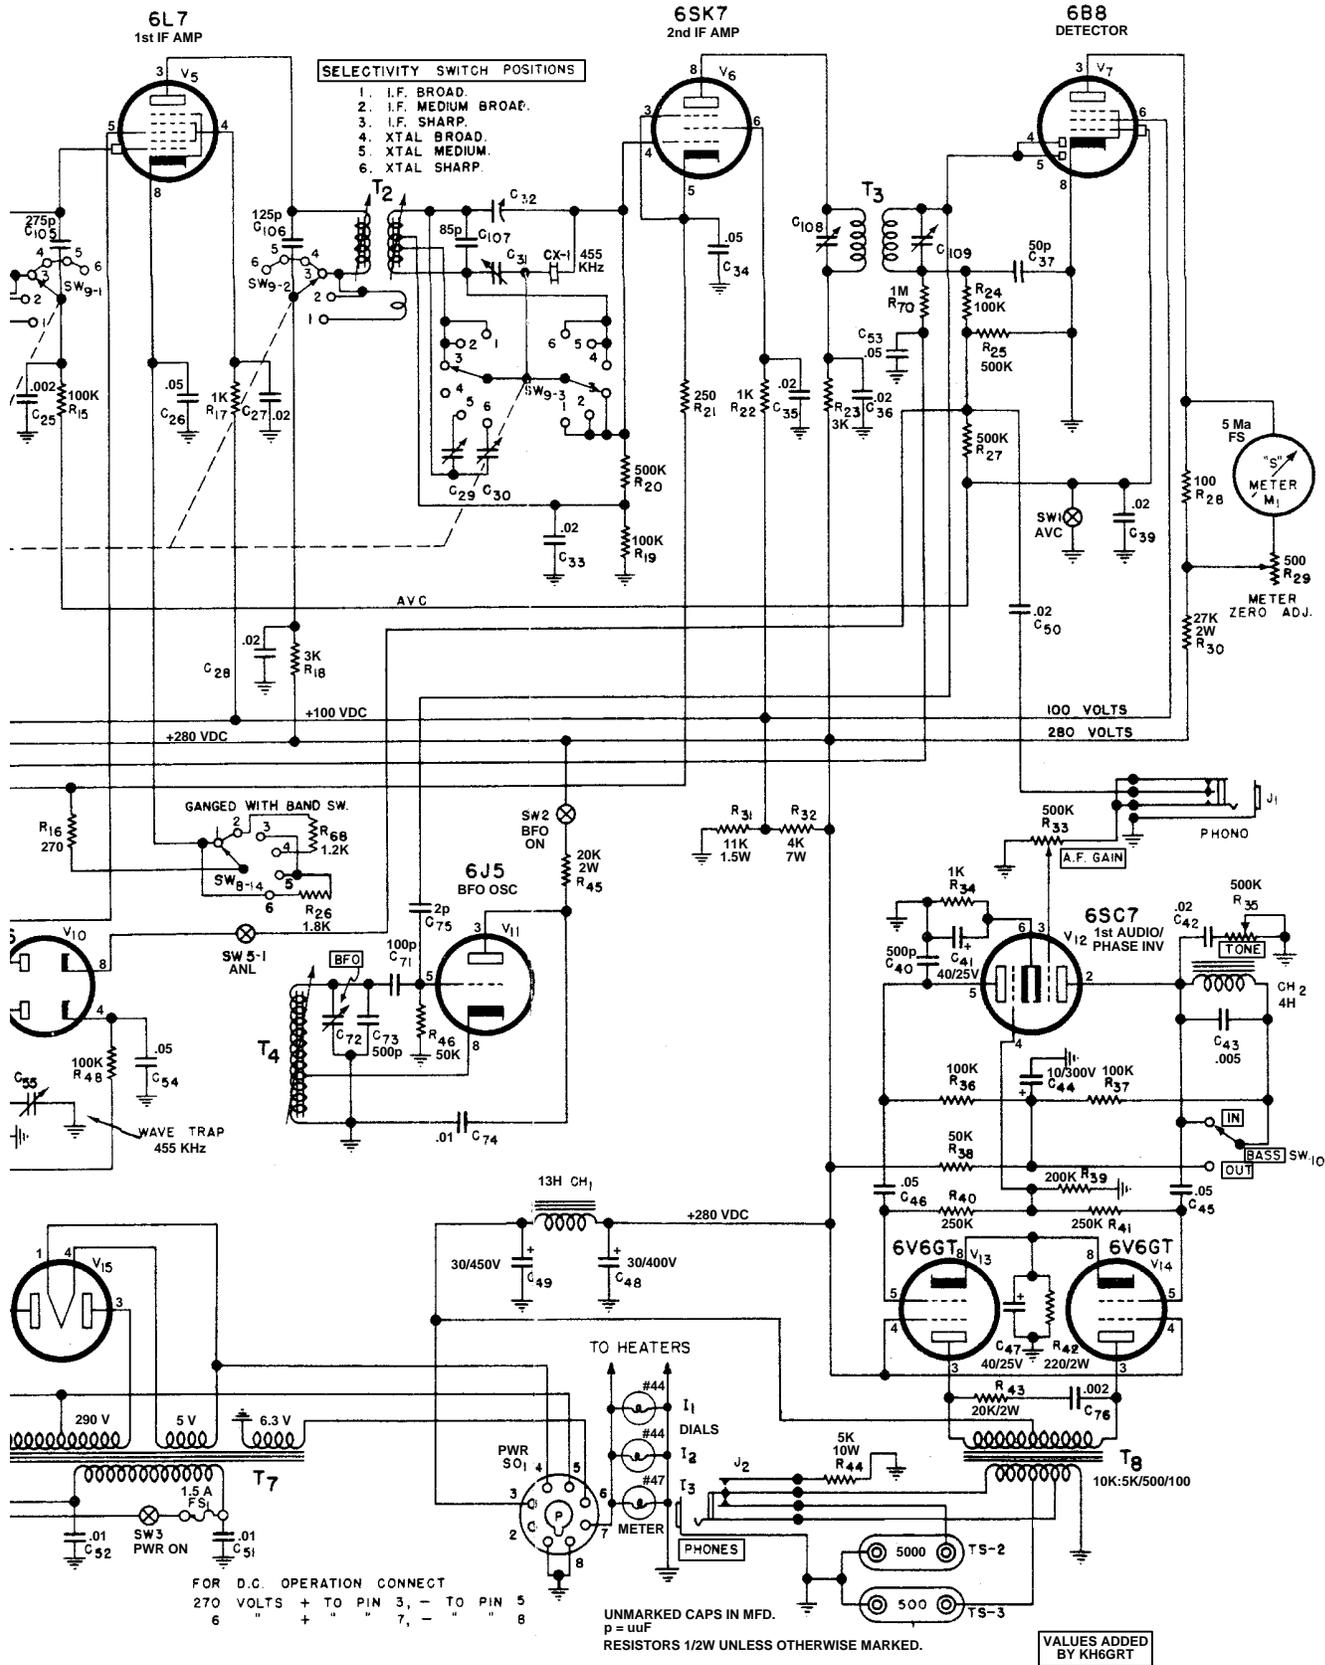


FIG. 13—SX28—SCHEMATIC

K4XL's  **BAMA**

This manual is provided **FREE OF CHARGE** from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>