



**the hallicrafters co.**

MANUFACTURERS OF ELECTRONIC EQUIPMENT, CHICAGO 24, U. S. A.

An automatic series noise limiter circuit, controlled by a switch on the front panel, reduces interference from electrical equipment, ignition noise, and other forms of pulse type noise.

An "S" meter is used when receiving AM signals to indicate the accuracy of tuning and the relative strength of received signals. The meter is calibrated in microvolts, "S" units from 1 to 9, and in decibels above S9 to + 60 DB.

The Receive-Standby switch on the front panel silences the receiver but leaves the heater and plate power on to provide instant reception between transmission periods. Provision has also

been made in the receiver for remote receive-standby control, and for transmitter switching from the front panel.

Audio output connections include terminals for a 3.2 ohm speaker and a 500/600 ohm output for line or speaker. A front panel jack for headphones is also provided and the speaker is automatically silenced when the headphone plug is inserted. A Phono input jack at the rear of the receiver permits attachment of a record player.

The receiver is designed to operate on 105 to 125 volt, 50/60 cycle AC current. Provision is also made in the receiver for operation from an external DC power supply or batteries in areas where AC power is not available.

## SECTION II INSTALLATION

### 2-1. UNPACKING.

After unpacking the receiver, examine it closely for damage which may have occurred in transit. Should any sign of damage be apparent, file a claim immediately with the carrier stating the extent of damage. Carefully check all shipping labels and tags for instructions before removing or destroying them.

### 2-2. LOCATION.

The receiver may be placed in any location that will permit free air circulation through the ventilation holes and openings in the cabinet. Avoid excessively warm locations such as those near radiators and heating vents. The external speaker may be located in any convenient position, although it is recommended that it not be placed on top of the receiver for reasons of ventilation.

### 2-3. ANTENNAS.

The RF input of the receiver is designed for operation from either a single-wire antenna, or a half-wave doublet or other tuned antenna with transmission line impedances from 52 to 600 ohms. Antenna connections are made to a three terminal strip at the rear of the receiver marked "A1", "A2", and "G". Mounting holes are also provided, adjacent to the antenna terminals, for installation of an AN type SO-239 connector for coaxial cable installations.

#### A. Single-Wire Antenna

The simplest antenna and one which will provide satisfactory results throughout the entire tuning range is a conventional single-wire antenna. In most localities, good results can be obtained with just the 15-foot length of antenna wire supplied

with the receiver. (See Fig. 2.) Simply attach one end of this wire to terminal "A1", connect the jumper link between terminals "A2" and "G", and then run the wire about the room in any convenient manner. If the receiver is operated in a steel constructed building or where receiving conditions are exceptionally poor, an outside antenna, 50 to 100 feet long, may be necessary. The outside antenna should be erected as high as possible and kept free from surrounding objects. In some locations, reception may be improved by connecting a ground wire (ordinary copper wire) from terminal "G" to a cold water pipe or outside ground

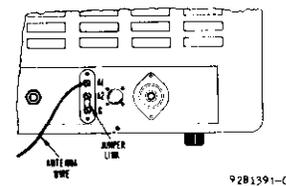


Figure 2. Single Wire Antenna

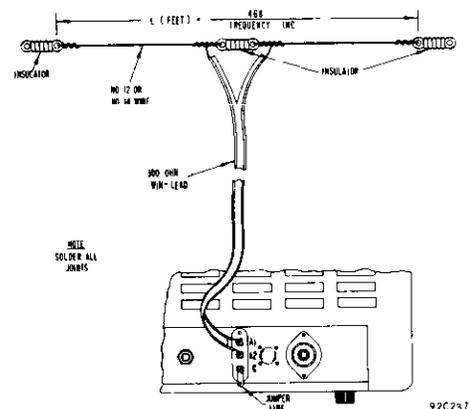


Fig. 3. Doublet Antenna Using Twin-Lead Transmission Line

rod. While the use of an outside ground rod installed in accordance with Insurance Underwriter's Laboratories requirements is adequate protection against lightning, we strongly recommend an additional connection to the nearest cold water pipe to eliminate any shock hazard.

### B. Half-Wave Doublet Antenna

For top performance, especially on the short-wave bands, the use of a half-wave doublet or other type of antenna employing a 52 to 600 ohm transmission line is recommended. A typical doublet antenna installation is shown in Fig. 3. The doublet antenna should be cut to the proper length for the most used frequency or band of frequencies. The overall length in feet of a doublet antenna is determined by the following formula:

$$\text{Length in feet} = \frac{468}{\text{Frequency in megacycles}}$$

The doublet antenna is directional and should be erected with its entire length facing a desired station for maximum signal pickup.

The doublet antenna may be fed with either a balanced or unbalanced transmission line. When a balanced line such as "twin-lead" or a twisted pair is used, the line connects to terminals "A1" and "A2" and the jumper link between "A2" and "G" is disconnected. (See Fig. 3.) When using an unbalanced line such as coaxial cable, the inner conductor connects to terminal "A1", the outer metal braid connects to terminal "A2", and the jumper link connects between terminals "A2" and "G". A ground wire may improve reception when using an unbalanced type line.

By feeding the doublet antenna with a transmission line having an impedance of 300 ohms, a broader frequency response is obtained than that possible with a 50-75 ohm line.

The doublet antenna provides optimum performance only at the frequency for which it is cut. Therefore, it may be desirable for reception on frequencies remote from the antenna frequency to utilize the antenna as a single-wire type. This is accomplished by connecting the two transmission line leads together and connecting them to terminal "A1". The jumper link in this case should be connected between terminals "A2" and "G".

In an installation where the receiver is used in conjunction with a transmitter, it may be advantageous to use the same antenna for receiving as for transmitting. This is especially true when a directive antenna is used since the directive effects and power gain of the transmitting antenna are the same for receiving as for transmitting. Switching of the antenna from the transmitter to the receiver may be accomplished with a double-pole, double-throw antenna changeover relay or knife switch connected in the antenna leads.

For further information regarding antennas, refer to the "Radio Amateur's Handbook" or the "A.R.R.L. Antenna Book", both published by the American Radio Relay League, West Hartford, Conn., U. S. A.

## 2-4. POWER SOURCE.

The receiver is designed to operate directly on 105 to 125 volt, 50-60 cycle AC current. Provision has also been made in the receiver for operation from an external DC power source for portable or emergency service in areas where AC power is not available. Connections to the DC source are made through the DC POWER SOCKET at the rear of the receiver. (See Fig. 4.)

### A. AC OPERATION

Insert the power cord into any convenient AC power outlet of the proper rating. If in doubt about your power source, contact your local power

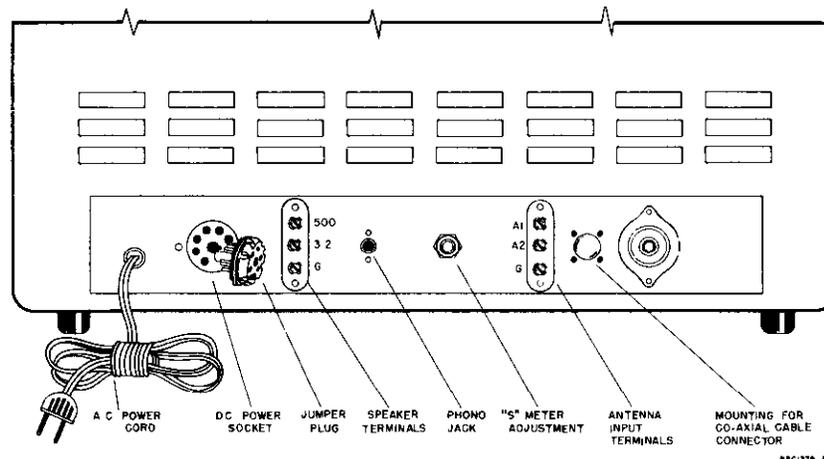


Fig. 4. Rear View of Receiver

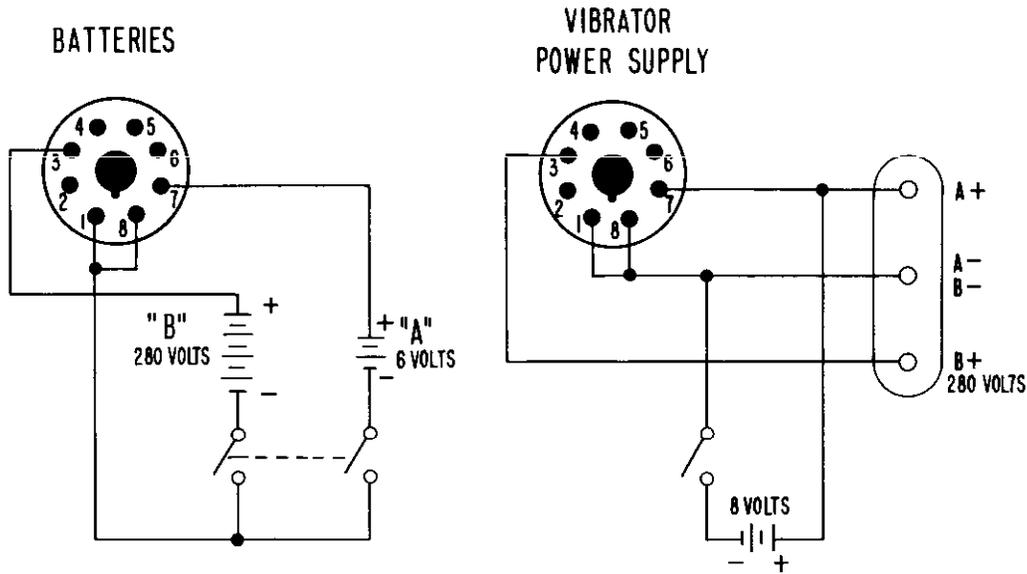


Fig. 5. Wiring Diagram for DC Operation

92B1388-A

company before plugging in the receiver. The wrong power source can cause serious damage.

**IMPORTANT:** The receiver will not operate from an AC source unless the JUMPER PLUG is inserted in the DC POWER SOCKET. (See Fig. 4.)

**B. DC OPERATION**

The receiver may be operated from an external DC source, such as a vibrator power supply or batteries by removing the JUMPER PLUG normally located in the DC POWER SOCKET

at the rear of the receiver and replacing it with a similar octal plug wired as shown in Fig. 5. This plug is available from your Hallicrafters dealer under Part No. 35A003. The voltage and current requirements for DC operation are as follows: "B" supply, 280 volts at 105 MA; "A" supply, 6.3 volts at 4.1 amps.

**2-5. SPEAKER.**

A three-terminal strip, marked "G", "3.2" and "500", is provided at the rear of the receiver for connecting the external speaker that is required with the receiver. (See Fig. 4.) Any permanent magnet speaker with a 3.2ohm voice coil can

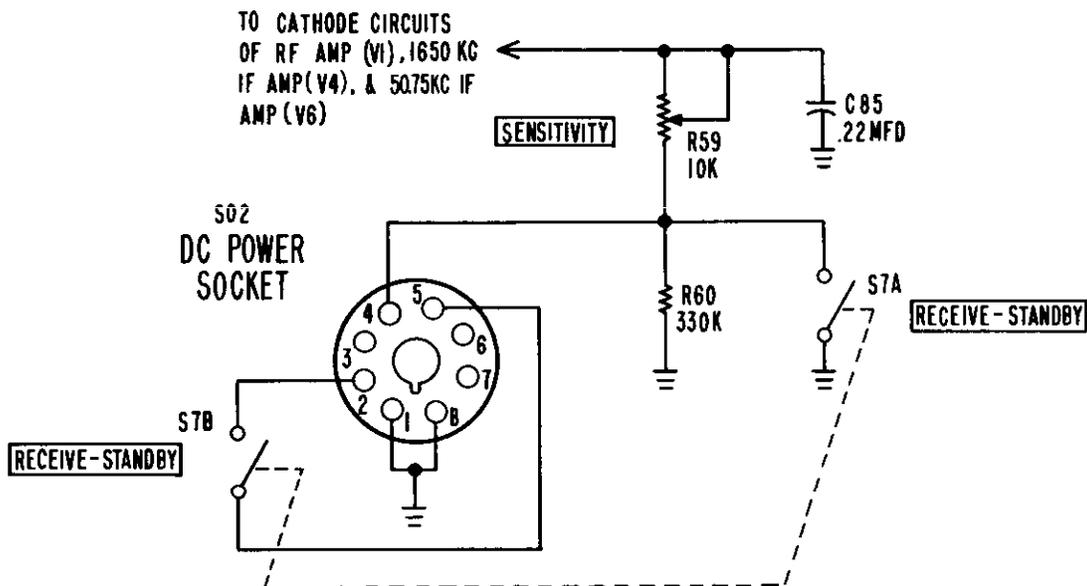


Figure 6. Schematic Diagram of Sensitivity and Receive-Standby Circuits.

be used by simply connecting the two leads from the speaker voice coil to the terminals marked "3.2" and "G". If it is desired to use a speaker with a voice coil impedance other than 3.2 ohms, a matching transformer should be employed to insure optimum performance. The transformer should be mounted on or near the speaker, and should have a 5 watt power rating, a 500 ohm primary impedance, and a secondary impedance to match the impedance of the speaker voice coil. Connect the primary of the transformer to the terminals marked "500" and "G" and the secondary to the speaker voice coil terminals.

The hallicrafters R-46B and R-47 speakers are both designed for use with your receiver. Either speaker may be connected to the terminals marked "3.2" and "G".

## 2-6. HEADPHONES.

The headphone jack, marked PHONE, is located on the front panel of the receiver and is wired so that the speaker is automatically silenced when the headphones are plugged in. The headphone output impedance is not critical, and any commercial low-impedance headphones ranging from 50 ohms to 5000 ohms will provide satisfactory performance.

## 2-7. RECORD PLAYER CONNECTIONS.

A phono jack is provided at the rear of your receiver for attaching a record player. (See Fig. 4.) Any record player using a crystal cartridge,


or a magnetic cartridge with a suitable pre-amplifier, will provide satisfactory results. For phono operation, insert the pin-plug from the record player or pre-amplifier into the phono jack and set the SELECTIVITY control on the front panel at "PHONO". Adjust the VOLUME control for the desired volume level and set the RESPONSE control at either "NORMAL" or "TREBLE CUT" for the desired tone. The remaining controls are inoperative and will have no effect on phono operation.

## 2-8. RELAY AND TRANSMITTER SWITCHING.

One half of the DPST RECEIVE-STANDBY switch on the front panel connects to pins 2 and 5 of the DC POWER SOCKET at the rear of the receiver, and is available for transmitter switching. (See Fig. 6.) This half of the switch is in the open position when the RECEIVE-STANDBY switch is set at "STANDBY" and closed when set at "RECEIVE".

## 2-9. REMOVE RECEIVE-STANDBY SWITCH.

The receiver may be disabled from a remote location by connecting a remote SPST switch between pins 1 and 4 of the JUMPER PLUG located in the DC POWER SOCKET at the rear of the receiver. (See Figs. 4 and 6.) To operate the receiver with the remote switch, the RECEIVE-STANDBY switch on the front panel must be left at "STANDBY".

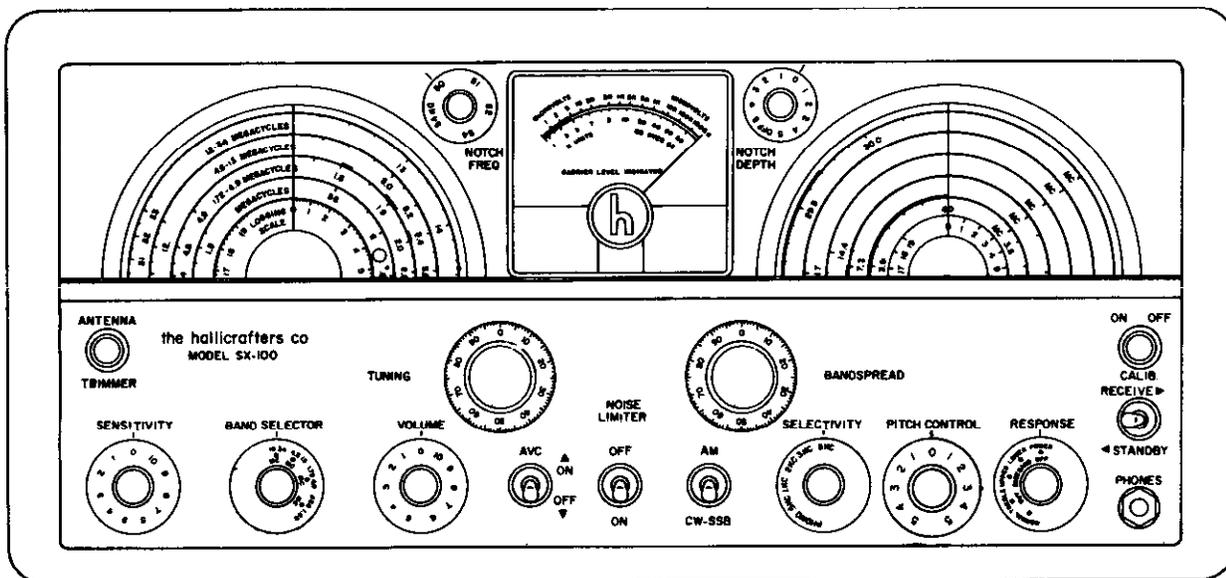

094-005017B

Figure 7. Operating Controls

**SECTION III****FUNCTION OF OPERATING CONTROLS****3-1. SENSITIVITY CONTROL.**

The SENSITIVITY control varies the gain of the RF amplifier, 1650 KC IF amplifier, and 50.75 KC IF amplifier stages. Maximum sensitivity is obtained with the control set at "10" (fully clockwise). In this position, the tubes being controlled are operated at maximum gain with minimum cathode bias. As the control is rotated counterclockwise, the bias on the tubes increases with a resultant decrease in gain.

**3-2. BAND SELECTOR CONTROL.**

The BAND SELECTOR control operates the band switch to place the proper set of coils and sections of the main and bandspread tuning capacitors into the circuit to cover the desired frequency range. The frequency range covered by each position of the BAND SELECTOR control is indicated directly on the control.

**3-3. ANTENNA CONTROL.**

The ANTENNA TRIMMER control operates a variable capacitor connected across the secondary of the antenna coil of the band in use. This capacitor adjustment compensates for loading effects of various types of antenna installations. The control is normally adjusted for maximum signal with the main TUNING control adjusted to the high end of the band in use. With most antenna systems, the ANTENNA TRIMMER control requires no further adjustment until the BAND SELECTOR control is operated to select another band.

**3-4. VOLUME CONTROL.**

The VOLUME control adjusts the audio level at the speaker terminals and PHONE jack. Clockwise rotation of the control increases the signal applied to the grid of the audio amplifier tube, thus increasing receiver volume; counterclockwise rotation decreases volume.

**3-5. AVC SWITCH.**

The AVC switch, when set at "ON", places the AVC circuit in operation to maintain the output level of the receiver constant regardless of normal input-signal variations. AVC voltage is applied to the RF amplifier stage and the 1650 KC IF amplifier stage.

**3-6. NOISE LIMITER SWITCH.**

This switch, when set at "ON", places the automatic series noise limiter circuit in operation to reduce pulse-type noise such as ignition noise and electrical interference. The limiter circuit allows the signal to pass through the receiver unaffected, but makes the receiver inoperative for noise amplitudes greater than those of the signal. It will work on AM signals only and is self-adjusting, i. e., it automatically adjusts itself to the signal level.

The noise limiter circuit "chops" noise peaks received at the detector by means of a biased diode which becomes non-conducting above a predetermined signal level. When the limiter circuit is in operation, the audio output of the detector must pass through the limiter diode to the grid of the audio amplifier. The limiter diode normally acts as a conductor for the audio signal as long as the diode plate is positive with respect to its cathode. When a noise peak is higher in amplitude than the signal, it instantaneously swings the cathode positive with respect to the plate, conduction ceases, and that portion of the signal is automatically cut off from the audio amplifier. The point at which the limiter diode becomes non-conducting is made sufficiently high so that the diode will not clip modulation peaks and thus impair intelligibility, but yet low enough to limit the noise peaks effectively.

**3-7. AM/CW-SSB SWITCH.**

This switch, when set at "CW-SSB", applies plate voltage to the beat frequency oscillator (BFO) to render it operative for the reception of CW or single-sideband signals. The beat frequency oscillator employs a Hartley oscillator circuit and is voltage-regulated to insure high stable operation. The "AM" position of the AM/CW-SSB switch disables the BFO for normal reception of standard broadcast and AM phone signals. This switch also changes the AVC time constant for CW-SSB reception. In the "CW-SSB" position the time constant is made longer, to provide better AVC operation for SSB.

**3-8. SELECTIVITY CONTROL.**

The SELECTIVITY control is used to vary the selectivity of the receiver to fit receiving conditions. Five degrees of selectivity are available, ranging from 500 cycles, for CW reception

3-9. "T" NOTCH FILTER

under crowded band conditions, to 5 kilocycles for maximum fidelity for broadcast reception. The five selectivity positions are shown on the SELECTIVITY control and indicate receiver selectivity at 6 DB down. A sixth position on the control, marked "PHONO", disables all the receiver circuits except the audio system for phonograph operation.

The receiver IF selectivity curves are shown in Fig. 8. Note that as the selectivity is varied from a sharp to a broader position, the IF passband not only increases but also centers about a higher frequency.

For broadcast reception, the SELECTIVITY control is normally set at "5 KC", the position affording broadest selectivity. Selectivity may be progressively increased by turning the control to the positions marked "3 KC", "2 KC", "1 KC", and "5 KC". For reception of the crowded short-wave bands, it is generally advisable to sacrifice fidelity for greater selectivity, since the added selectivity reduces both adjacent-channel interference and background noise by attenuating the higher audio frequencies. Too much selectivity on AM signals, however, will attenuate the high audio frequencies to such an extent that the signal may become unintelligible as a result of excessive side-band cutting. When receiving CW signals, the sharpest selectivity position may be used without the loss of intelligibility experienced in AM reception.

The notch filter circuit provides a means of eliminating or reducing the interfering effect of certain types of heterodynes or CW signals. To obtain maximum results from this feature of your receiver, the use of the two controls associated with the notch filter circuit are fully explained below.

GENERAL

The manner in which the notch filter will affect the IF selectivity of the receiver is illustrated in Fig. 9. The filter will suppress an extremely narrow band of frequencies within the IF passband range of the receiver. The effectiveness of this notch is many times greater than the notch of a quartz crystal filter at 400 KC to 2 MC. The NOTCH FREQ control will move the band of suppressed frequencies represented by the notch in the selectivity curve, to any point within the IF passband. The NOTCH DEPTH control will vary the depth of the notch in the selectivity curve to control the degree of rejection of the interfering signal.

Extensive field testing of this feature has shown that the notch filter is highly effective in suppressing the type of interference for which this type of circuit is intended. It must be appreciated, however, that any selective IF filter circuit, including the phasing notch of quartz crystal

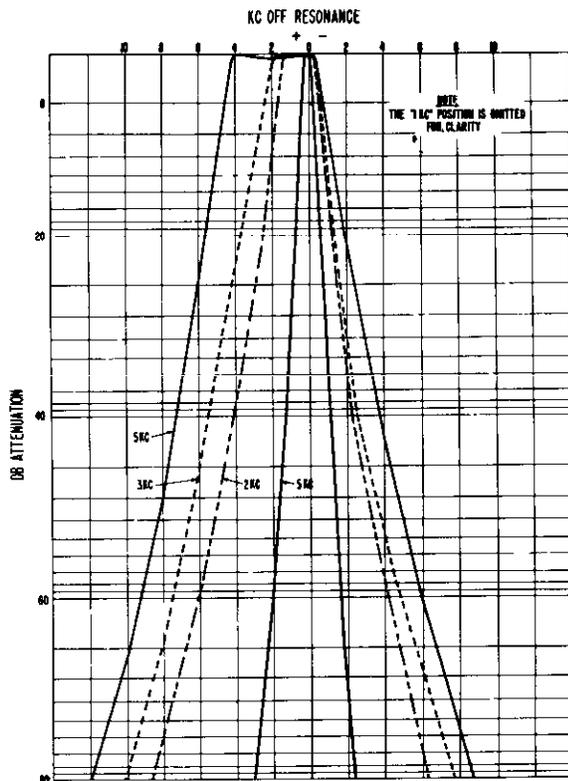


Fig. 8. IF Selectivity Curves

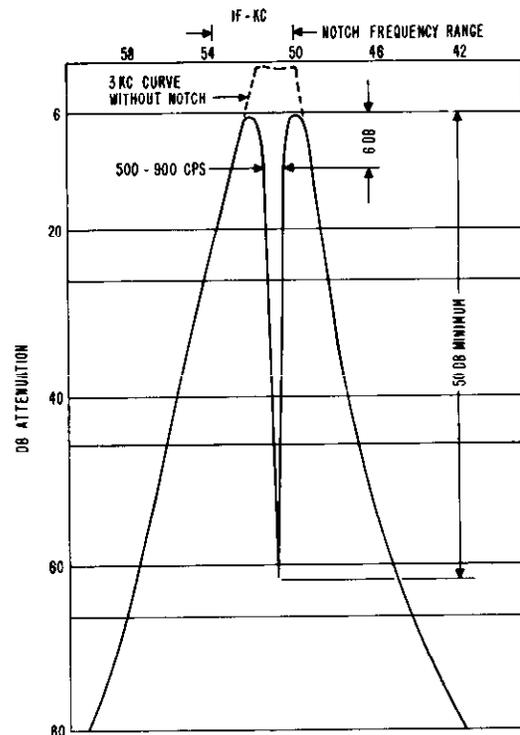


Fig. 9. IF Selectivity Curve with Notch

circuits, affects only a limited range of interfering frequencies. The effectiveness of the notch filter is therefore somewhat dependent upon the exact nature of the interfering signal. For example: a heterodyne within the IF range that is less than 900 cycles in width and has little harmonic content is readily notched out. If the same interfering heterodyne is rich in harmonics, it would only be possible to completely suppress the fundamental frequency and the remaining harmonic content may remain almost equally objectionable. It logically follows that if two interfering heterodynes should appear within the IF passband that are separated in frequency by more than 500 to 900 cycles, it would be possible to notch out only one of the heterodynes. The interfering signal may also vary in frequency beyond the range of the notch filter and thus reduce the effectiveness of the circuit. Under these conditions, increasing selectivity will generally eliminate its heterodyne. If this heterodyne interference varies in a frequency about some mean value, it may be necessary to offset the notch depth control to increase the broadness of the notch. It has been found, however, that the notch filter is sufficiently effective in many instances to make an otherwise useless signal entirely readable.

**3-10. NOTCH FREQ. AND NOTCH DEPTH CONTROLS.**

To activate the Notch Filter circuit advance the NOTCH DEPTH control from the "OFF" position.


**NOTCH FREQ CONTROL**—This control tunes the notch in the IF passband and may be set anywhere in the range of from 50 KC to 54 KC.

The approximate frequency is calibrated on the knob skirt. While tuning this control for maximum suppression of the interfering heterodyne with minimum distortion to the desired signal, try to visualize the notch moving across the selectivity curve (Fig. 9). It is then readily apparent that improper tuning may notch out the desired signal instead of the heterodyne. It may be necessary to move the notch across the desired signal in order to reach the heterodyne that you desire to suppress. The important consideration is to tune the NOTCH FREQ control for maximum heterodyne suppression with minimum distortion to the desired signal.

**NOTCH DEPTH CONTROL**—As the position of the NOTCH FREQ control is changed, the depth of the notch will vary. The NOTCH DEPTH control is provided to retune the notch for maximum depth at any setting of the NOTCH FREQ control. Maximum notching occurs at the "0" setting when the frequency is set to the center of the IF passband. The use of the NOTCH DEPTH control is simply a matter of tuning it for maximum suppression each time the position of the NOTCH FREQ control is changed.

**3-11. PITCH CONTROL.**

The PITCH CONTROL operates the tuning slug in the BFO coil to vary the frequency of the beat frequency oscillator approximately 2 KC each side of its center frequency of 50 KC. The primary function of the PITCH CONTROL is to vary the pitch of the audible beat note when receiving CW signals. It is also used when receiving single-sideband signals to vary the frequency of the re-inserted carrier in the receiver.

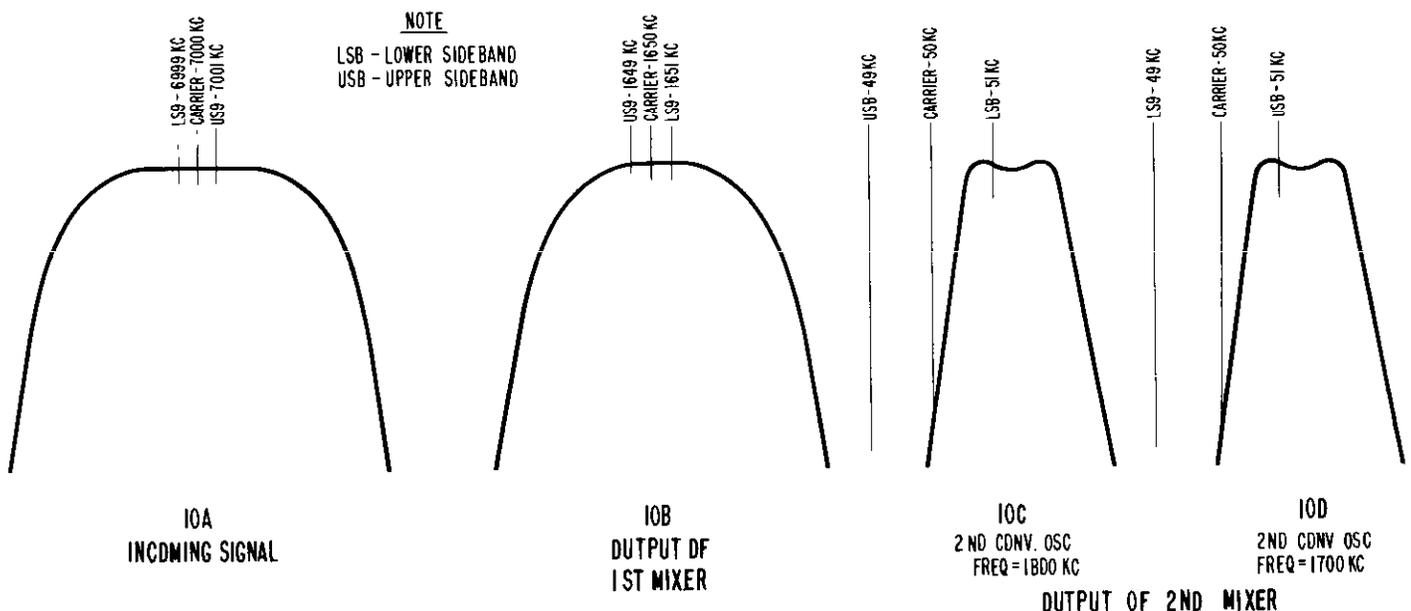

9202384-1

Figure 10. IF Selectable-Sideband Response Curves

### 3-12. RESPONSE CONTROL.

The RESPONSE control performs three functions: (1) it turns the receiver on and off, (2) it switches the 2nd conversion oscillator to operate at the required frequency for reception of CW, AM, and single-sideband signals (1600 KC in the "LOWER SIDEBAND" position and 1700 KC in the "UPPER SIDEBAND", "TREBLE CUT", and "NORMAL" positions", and (3) it serves as a two-position tone control for AM reception and phono operation.

In the "POWER OFF" position, the receiver is inoperative. As the control is turned clockwise to any of the other four positions, the receiver is turned on.

The "LOWER SIDEBAND" and "UPPER SIDEBAND" positions of the control are used when receiving single-sideband signals or when it is desired to receive only one sideband of an AM signal.

The "TREBLE CUT" and "NORMAL" positions are used for phono operation and for normal AM reception where both sidebands are received. In the "NORMAL" position, the audio response is essentially flat at the low and mid frequencies and slightly attenuated at the high frequencies. The response in the "TREBLE CUT" position is essentially the same except that the high frequencies are attenuated considerably more than in the "NORMAL" position.

For CW reception, the setting of the RESPONSE control is immaterial, although a slight improvement in signal-to-noise ratio will be obtained in the "LOWER SIDEBAND" and "UPPER SIDEBAND" positions.

To illustrate how selectable sideband reception is accomplished in the receiver, a numerical example is given. Consider an incoming signal at 7000 KC, modulated 1 KC. Since modulation of a carrier causes the generation of sideband frequencies numerically equal to the carrier frequency, plus or minus the modulation frequency, the incoming signal consists of the carrier at 7000 KC, a lower sideband at 6999 KC, and an upper sideband at 7001 KC. (See Fig. 10A.)

The incoming signal is first heterodyned with the output of the 1st conversion oscillator in the 1st mixer stage. The 1st conversion oscillator operates at a frequency higher than the incoming signal by an amount equal to the first intermediate frequency of 1650 KC. As a result of the frequency conversion process, three new lower frequencies are produced in the output of the 1st mixer: the carrier at 1650 KC, the lower sideband at 1651 KC, and the upper sideband at 1649 KC. (See Fig. 10B.) These signals are amplified by the 1650 KC IF amplifier stage and

then heterodyned with the output of the 2nd conversion oscillator in the 2nd mixer stage. The 2nd conversion oscillator is crystal controlled and can be set to operate at either 1600 KC for reception of the lower sideband or 1700 KC for the reception of the upper sideband, selection being made by means of the RESPONSE control. When the RESPONSE control is set at "LOWER SIDEBAND", the 1600 KC signal from the 2nd conversion oscillator is heterodyned with the incoming signal at the first intermediate frequency of 1650 KC to produce three new frequencies: the carrier at 50 KC, the lower sideband at 51 KC, and the upper sideband at 49 KC. By referring to Fig. 10C, it can be seen that the lower sideband falls within the IF passband and the upper sideband falls outside of the passband. Thus the lower sideband is accepted and the upper sideband is rejected. When the RESPONSE control is set at "UPPER SIDEBAND", the 1700 KC signal from the 2nd conversion oscillator is heterodyned with the incoming signal. In the frequency conversion process, the carrier still remains at 50 KC, but now the upper sideband appears at 51 KC, and the lower sideband appears at 49 KC. (See Fig. 10D.) Thus, the upper sideband is accepted and the lower sideband is rejected.

### 3-13. CALIB. ON-OFF SWITCH.

The CALIB. ON-OFF switch controls the operation of the built-in crystal calibrator. When the switch is set at "ON", the crystal calibrator is turned on to provide marker signals at every 100 KC on the dial. The crystal calibrator employs a crystal controlled, pentode oscillator circuit. The output of the crystal calibrator is capacitively coupled to the antenna input circuit. A trimmer capacitor, adjustable by the CRYSTAL ADJ control on the top of the calibrator unit, permits adjustment of the calibrating crystal to exactly 100 KC by comparison with the frequencies transmitted by WWV. This capacitor has been set at the factory and should normally not require periodic readjustment unless extreme calibration accuracy is required. If adjustment is required, proceed as outlined in Section 4-6.

### 3-14. RECEIVE-STANDBY SWITCH.

The RECEIVE-STANDBY switch, normally set at "RECEIVE", permits disabling of the receiver during transmission periods, at the same time maintaining the heater and plate supplies operative for instant use when reception is again resumed. The receiver is disabled by setting the RECEIVE-STANDBY switch at "STANDBY".

One section of the RECEIVE-STANDBY switch is available for relay or transmitter switching. For connections and details, refer to Section 2-8.

### 3-15. TUNING AND BANDSPREAD CONTROLS

The TUNING and BANDSPREAD controls are used in conjunction with one another to tune in the desired signal. Wide tuning is performed with the TUNING control and fine tuning with the BANDSPREAD control.

#### Main Tuning Dial.

The main tuning or left-hand dial is operated by the TUNING control. This dial has four calibrated scales, one for each of the four frequency bands covered by the receiver. It also contains a hundredths scale, used with the unit scale on the main TUNING knob, for accurately logging and relocating stations of special interest. The logging number is the logging number on the dial plus the number on the knob scale. For example; if the main tuning dial logging scale reads 12, and the main TUNING control knob scale reads 25, the logging number is 1225. For normal tuning, the main tuning dial is set for the desired station frequency after the BANDSPREAD control has been set fully counterclockwise (bandspread tuning capacitor set at minimum capacity).

#### IMPORTANT

The readings on the main tuning dial will correspond to the station frequencies only if the BANDSPREAD control is set fully counterclockwise. If it is set at any other setting, the additional bandspread capacity added to the main tuning capacity will throw off the main tuning dial calibration because the receiver has been calibrated with the bandspread tuning capacitor set at minimum capacity.

The dial settings for the 60, 40, 20, 15, and 10 meter bands are indicated on the main tuning dial by white dots. When tuning with the bandspread dial, the main tuning dial must be set at the dot corresponding to the desired band. The 160 meter band is indicated on the dial by three short double-weight lines.

#### NOTE

The broadcast band is marked with a "CD" emblem and a dot at .64 and 1.24

megacycles to indicate the two official Civil Defense frequencies. In a Civil Defence emergency, tune to either of these two frequencies for official defense news, instructions, and information.

#### Bandspread Dial.

The bandspread or right-hand dial is operated by the BANDSPREAD control. This dial contains five scales calibrated for the 60, 40, 20, 15, and 10 meter bands. These five scales are calibrated to read receiver frequency directly when the main tuning dial has been set to the index dot of the desired band. It also contains a hundredths scale for logging purposes. The logging procedure for the bandspread dial is the same as for the main tuning dial. For convenience in tuning, the AM phone bands are indicated on the bandspread dial by double-weight lines.

The bandspread dial may also be utilized as a fine tuning adjustment over any portion of the receiver tuning range. Two methods of fine tuning are described below.

a. The first method of fine tuning is used when it is desired to tune in a single signal with precision accuracy. First the BANDSPREAD control is set a few degrees from its fully counterclockwise position, then the desired signal is located with the TUNING control, and finally the signal is accurately tuned in by "rocking" the BANDSPREAD control (turning it slightly to the left and right) until the signal is loudest and clearest.

b. The second method of fine tuning is used when it is desired to tune through a range of frequencies, such as a group of shortwave stations. Set the BANDSPREAD control fully counterclockwise, set the TUNING control for the high end of the selected range of frequencies, and then tune through the range with the BANDSPREAD control. Turning the BANDSPREAD CONTROL clockwise tunes the receiver progressively lower in frequency.

## SECTION IV OPERATION

### 4-1. AM RECEPTION.

1. Set the front panel controls to their starting positions as outlined below.

SENSITIVITY            10 (maximum sensitivity)  
BAND SELECTOR            At the desired band.  
VOLUME                    0 (minimum volume)

AVC	ON
NOISE LIMITER	OFF
AM/CW-SSB	AM
SELECTIVITY	5 KC
RESPONSE	POWER OFF
RECEIVE-STANDBY	RECEIVE
NOTCH DEPTH	OFF
CALIB.	OFF

2. Turn the receiver on by rotating the RESPONSE control clockwise and set it at either the "NORMAL" or "TREBLE CUT" position. The tuning dials will light up, indicating the receiver is operative. Rotate the VOLUME control clockwise for the desired volume level.

3. Set the bandspread tuning gang at minimum capacity by rotating the BANDSPREAD control fully counterclockwise. To utilize the BANDSPREAD control as a fine tuning adjustment for the shortwave bands, refer to Section 3-15.

### IMPORTANT

The calibration on the main tuning (left-hand) dial will be correct only if the bandspread tuning gang is set at minimum capacity. If it is set at any other setting, the additional bandspread capacity added to the main tuning capacity will throw off the main tuning dial calibration because the receiver has been calibrated with the bandspread tuning gang set at minimum capacity.

4. Tune in the desired signal with the TUNING control, tuning for maximum indication on the "S" meter. After the signal has been accurately tuned in, readjust the VOLUME control as desired.

### NOTE

The "S" meter indications will be correct only when the AVC switch is set at "ON", and the SENSITIVITY control is set at "10" (maximum sensitivity). Setting the SENSITIVITY control at a setting other than "10" will also somewhat restrict AVC action. *C.A. A-*

5. Set the SELECTIVITY control for the desired degree of selectivity. For standard broadcast reception (Band 1), the control is normally set to "5 KC" for maximum fidelity. The positions marked "3 KC", "2 KC", "1 KC", ".5 KC" provide progressively increasing steps of selectivity. Note that as the selectivity of the receiver is increased, the background noise and interference from adjacent signals is reduced. Too much selectivity, however, may cause excessive side-band cutting. While side-band cutting reduces fidelity, it may be frequently preferable to sacrifice naturalness of reproduction in favor of communications effectiveness. When changing the position of the SELECTIVITY control from a broad to a narrower response (for example: from "2 KC" to "1 KC"), a slight readjustment of the tuning controls may be necessary to recenter the signal in the IF passband.

6. Set the RESPONSE control at either "NORMAL" or "TREBLE CUT" for the desired tonal quality.

7. If it is desired to operate with AVC off, set the AVC switch at "OFF", set the VOLUME control to a well advanced position, and vary the receiver volume level by means of the SENSITIVITY control, taking care not to advance the control to a point where strong signals will cause "blocking".

8. If severe electrical disturbances, or ignition, or other types of pulse-type noise interfere with reception, set the NOISE LIMITER switch at "ON" to place the automatic noise limiter circuit in operation.

9. The receiver may be disabled without turning it off by setting the RECEIVE-STANDBY switch at "STANDBY". In this position, the RF and 50.75KC IF stages are cut off but the heater and plate supplies remain operative for instant reception. To resume reception, simply return the switch to the "RECEIVE" position.

10. An undesired signal close in frequency to a desired signal will heterodyne with it to produce an audible beat note equal to their frequency difference. This type of heterodyne interference can be eliminated by utilizing the selectable sideband feature of the receiver to position the undesired signal out of the IF passband. The detailed procedure for eliminating heterodyne interference is as follows:

a. Set the AM/CW-SSB switch at "CW-SSB", the PITCH CONTROL to "0", and the RESPONSE control at either "LOWER SIDEBAND" or "UPPER SIDEBAND".

b. Carefully tune in the desired signal for "zero beat". Then set the AM/CW-SSB switch at "AM".

c. If the RESPONSE control has been set to the proper sideband position, the heterodyne interference will be eliminated. If the interference is still present, simply switch the RESPONSE control to the opposite sideband position.

11. An alternate method of eliminating an interfering signal is to use the notch filter circuit. Simply rotate the NOTCH DEPTH control clockwise to "0" and adjust the NOTCH FREQ control to "notch out" the interfering signal. Readjust the NOTCH DEPTH control as necessary to obtain maximum rejection of the interfering signal.

### CAUTION

It is possible to eliminate the heterodyne by notching out the desired carrier in place of the undesired signal or carrier. When this occurs an AM signal will sound like a single sideband suppressed carrier transmission.

12. In shortwave reception, it frequently happens that transmission conditions are different for waves of slightly different frequencies. As a result, in the case of voice modulated transmissions, which involve sideband frequencies differing slightly from the carrier frequency, the carrier and sideband components may not be received in the same relative amplitude and phases they had at the transmitter. This effect, known as selective fading, causes severe distortion of the signal. This type of distortion can be reduced somewhat by tuning the receiver to accept only one of the two sidebands being transmitted as outlined in Steps 10(a) and (b) above. After tuning is completed, switch the RESPONSE control from "LOWER SIDEBAND" to "UPPER SIDEBAND" and leave it in the position providing the least distortion.

#### 4-2. CW RECEPTION.

For CW reception, the receiver may be operated with AVC on or off, as desired. Operation of the receiver with AVC on is highly desirable since it not only minimizes fading but also prevents blasting when tuning from a weak to a strong signal. To operate with AVC on, set the AVC switch at "ON", set the SENSITIVITY control to a well advanced position, and regulate the receiver volume level by means of the VOLUME control. To operate with AVC off, set the AVC switch at "OFF", set the VOLUME control at a well advanced position, and vary the receiver volume level by means of the SENSITIVITY control, taking care not to advance the control to a point where strong signals cause excessive "thumping" (overloading).

CW signals are made audible by the heterodyning action of the beat oscillator with the incoming signal. The beat oscillator is set at a frequency slightly different from the second intermediate frequency of 50.75 KC, the difference being equal to the pitch of the audible note desired.

For the reception of CW signals, set the AM/CW-SSB switch at "CW-SSB", set the SELECTIVITY control at ".5 KC" (the sharpest selectivity position), set the RESPONSE control at "UPPER SIDEBAND", and set the PITCH CONTROL at any setting from "2" to "4" on either side of zero, and then tune in the signal for a pleasing beat note. The beat oscillator may be set on either the high or low frequency side of zero beat. (The oscillator operates on the low side when the PITCH CONTROL is set at a position to the left of zero and on the high side when the PITCH CONTROL is set at a position to the right of zero.) It may be necessary, after setting the PITCH CONTROL, to readjust the receiver tuning slightly to properly position the signal in the IF passband. Alternately adjust the PITCH CONTROL and the receiver tuning for a maximum audible signal. With the receiver in the sharpest selectivity position, CW signals will drop in and out rapidly and a slow rate of tuning is

recommended. Once the PITCH CONTROL has been set, it need not be reset for each CW signal.

#### NOTE

If a CW signal is tuned in with the SELECTIVITY control at a setting other than ".5 KC", it may be necessary to slightly readjust the receiver tuning when changing to a narrower selectivity position in order to properly position the signal in the IF passband.

The setting of the SELECTIVITY control for CW reception is generally best determined by receiving conditions. Note, that as the selectivity of the receiver is increased (SELECTIVITY control varied from the "5 KC" to the ".5 KC" position), the background noise and adjacent channel interference is considerably reduced. For CW reception, the sharpest selectivity position may be used without the loss of intelligibility experienced in AM reception.

The automatic noise limiter circuit can be used to great advantage on CW reception, just as on AM reception, to reduce the effects of background noise and electrical interference. To place the noise limiter circuit in operation, set the NOISE LIMITER switch at "ON". The notch filter may be used to eliminate or attenuate an interfering signal during CW reception.

#### 4-3. SINGLE SIDEBAND RECEPTION.

Single-sideband signals are transmitted with little or no carrier, and it is necessary to reinsert the carrier in the receiver before proper reception is obtained. In the SX-100 receiver, this is accomplished in the 50.75 KC IF system by injecting the beat oscillator signal at the input of the second detector. A single-sideband signal can be identified by its unintelligibility and by a severe variation in the "S" meter indication corresponding to the speech modulation.

For the reception of single-sideband signals, set the PITCH control at "0", AVC switch at "ON", AM/CW-SSB switch at "CW-SSB", and SELECTIVITY control at either "2 KC" or "3 KC", depending upon adjacent channel interference and noise. Set the SENSITIVITY control at a well advanced position and vary the receiver volume level by means of the VOLUME control, taking care not to advance the SENSITIVITY control to a point where strong signals will cause distortion (overloading). Set the RESPONSE control at either "LOWER SIDEBAND" or "UPPER SIDEBAND". The single-sideband signal will be intelligible in only one of these two positions, the proper position depending upon the sideband being transmitted. If the signal is not intelligible after tuning is completed as outlined below, set the RESPONSE control to the other sideband setting and repeat the

tuning procedure. It is suggested that the RESPONSE control be initially set at "LOWER SIDE-BAND" since most single-sideband transmissions are of this type.

After the controls have been properly set as outlined in the preceding paragraph, very carefully tune in the single-sideband signal for maximum intelligibility. It will be noticed that with incorrect tuning of a single-sideband signal, the speech will sound high or low pitched, or very distorted, but no trouble should be had in tuning once a little experience has been gained.

The "1 KC" position of the SELECTIVITY control permits reception of modulation frequencies up to about 1000 cycles. For reception of modulating frequencies higher than 1000 cycles, set the SELECTIVITY control to the positions marked "2 KC", "3 KC", and "5 KC", depending on the degree of fidelity desired; maximum fidelity is obtained in the "5 KC" position. It is not necessary to retune the receiver when receiver selectivity is varied. The notch filter is especially useful during reception of single-sideband signals. An undesired AM or CW signal close in frequency to the desired signal will heterodyne with the beat oscillator to produce an audible beat. The undesired signal will heterodyne with the beat oscillator to produce an audible beat. The undesired signal may be "notched out" with the notch filter, just as in AM or CW reception.

#### 4-4. USE OF CRYSTAL CALIBRATOR.

The built-in 100 KC crystal calibrator permits accurate checking of dial calibration over any portion of the main and bandspread tuning dials by a comparison of the dial calibrations with the marker signals which appear at every multiple of 100 KC on the dial.

##### A. CALIBRATION OF THE BANDSPREAD DIAL

1. Set the bandspread tuning dial at a convenient multiple of 100 KC at the high frequency end of the band in use. For example: 2000 KC on 160M, 4000 KC on 60M, 7300 KC on 40M, 14,400 KC on 20M, 21,500 KC on 15M, and 29,600 KC on 10M. (The bandspread tuning dial is calibrated in KC.)

2. Set the main tuning dial to the index dot of the desired band.

3. Set the AM/CW-SSB switch at "CW", the PITCH control at "0", and the CALIB. switch at "ON".

4. Very carefully adjust the main TUNING control for exact frequency as indicated by "zero beat". The bandspread tuning dial is now accurate-

ly calibrated and a "zero beat" should be obtained at every multiple of 100 KC on the band in use. For example, on the 60 meter band, a "zero beat" should be obtained at or close to 3500, 3600, 3700, 3800, 3900, and 4000 KC.

5. The procedure outlined in Steps 1 through 4 above provides average calibration accuracy over the entire frequency range of the band in use. For precise calibration accuracy over a particular section of the band, the procedure is identical except that the bandspread dial is set at a multiple of 100 KC near the desired frequency or range of frequencies, instead of at the high end of the band as in Step 1.

##### B. CALIBRATION OF THE MAIN TUNING DIAL

1. Turn the BANDSPREAD tuning control counterclockwise until the dial pointer is aligned with the index marks at the high frequency end of the dial.

2. Set the main tuning dial at a convenient multiple of 100 KC near the desired frequency or range of frequencies. (The main tuning dial is calibrated in MC.) To determine the nearest 100 KC multiple, simply remember that 100 KC is equal to one-tenth MC. For example, from 2.0 to 3.0 MC on band 2, the 100 KC multiples are 2.0 MC, 2.1 MC, 2.2 MC, 2.3 MC, etc.

3. Set the AM/CW-SSB switch at "CW", and the PITCH control to "0". Then set the CALIB. switch at "ON" and very carefully adjust the main TUNING control for a "zero beat". The main dial pointer should index with a 100 KC multiple on the dial.

4. If calibration is required, refer to steps 5 through 6 of the alignment procedure, Section 5-3.

#### 4-5. USE OF "S" METER.

The "S" meter provides a visual means of determining whether or not the receiver is properly tuned, as well as an indication of the relative signal strength. The "S" meter circuit consists of a DC milliammeter connected in series with the plate lead to the 1650 KC IF amplifier tube (V-4), the grid of which is controlled by AVC voltage. Since the plate current of this tube varies with the strength of the incoming signal, the meter will indicate relative signal strength. The "S" meter is calibrated in microvolts, "S" units from 1 to 9, and in decibels above S-9 to +60 DB. The indications on the "S" meter will be correct only when the SENSITIVITY control is set at "10" (maximum sensitivity), and the AVC switch is set at "ON".

The limitations of the microvolt scale should be fully appreciated before any assumption as to the indicated signal voltage is accepted. The meter indicates approximate microvolts of signal strength as developed at the antenna input terminals when terminated in a 50 ohm load, at 5.1 MC. This approximation will have a variation of  $\pm 5$  DB on a new receiver and, obviously, as the tubes age the variations may be greater. The indicated microvolt readings at 30, 7, and 3.5 MC will vary approximately  $\pm 3$  DB from that at 5.1 MC. Also, all readings 50 microvolts or less will be more accurate and correlate more closely than those higher.

Variations in the microvolt indications between receivers is not indicative of the overall sensitivity but is caused by normal tolerances in vacuum tube conductances which are reflected as variations in the AVC/'S' Meter curve. Thus, two receivers with identical sensitivities could, under the same signal conditions indicate signal levels of 5 microvolts and 25 microvolts and yet each be a perfect receiver.

#### 4-6. BFO FREQUENCY CHECK.

The beat frequency oscillator (BFO) has been carefully adjusted at the factory so that its frequency is 50 KC when the PITCH CONTROL knob is set at '0'. Readjustment of the BFO will normally not be required unless the 6SC7 BFO tube (V-8) or components in the BFO circuit have been replaced. A slight readjustment may sometimes be necessary as a result of normal aging of the BFO tube. A simple check can be made to determine if adjustment is necessary as follows:

With the AM/CW-SSB switch at 'CW-SSB', SELECTIVITY control at '5 KC', RESPONSE control at 'UPPER SIDEBAND', and PITCH CONTROL at '0', very carefully tune in an AM signal for "zero beat". (See Note A below.) Leaving the receiver tuning unchanged, switch the RESPONSE control to the 'LOWER SIDEBAND' position. If the beat oscillator frequency is correct, a "zero beat" will be obtained in both the 'UPPER SIDEBAND' and 'LOWER SIDEBAND' positions. If, however, the beat oscillator is slightly off frequency, a beat note will be heard when switching from the 'UPPER SIDEBAND' to the 'LOWER SIDEBAND' position. Adjustment of the beat frequency oscillator is necessary only if the frequency of the audible beat note exceeds 200 cycles.

Note A - In instances where the beat oscillator is considerably off frequency, it may not be possible to obtain a "zero beat" when tuning in the signal. In this case, it will be necessary to first "roughly" set the beat oscillator to operate at approximately 50 KC as follows: With the AM/CW-SSB

switch at 'CW-SSB', SELECTIVITY control at '5 KC', and RESPONSE control at 'UPPER SIDEBAND', tune the receiver to a noisy part of the band (not to a signal). Remove the PITCH CONTROL knob and adjust the BFO slug for minimum noise on the noise signal. Then set the SELECTIVITY control at '5 KC' and make the BFO frequency check as outlined in the preceding paragraph.

If the BFO frequency check indicates adjustment is necessary, proceed as follows:

Remove the PITCH CONTROL knob and turn the BFO slug a few degrees to the left or right so as to lower the beat note frequency, and repeat the BFO frequency check. If the beat note obtained is higher in frequency than that obtained originally, it is an indication that the slug is being turned in the wrong direction. Continue varying the setting of the slug in small steps and repeating the BFO frequency check until "zero beat" is obtained in both the 'UPPER SIDEBAND' and 'LOWER SIDEBAND' positions. After the correct slug setting is determined, replace the PITCH CONTROL knob with '0' in the top center position, being careful not to disturb the slug setting.

#### 4-7. NOTCH FREQUENCY CHECK.

Readjustment of the notch filter circuit is not normally necessary unless the components in the notch filter circuit are replaced. To check the circuit, proceed as follows:

Check the BFO frequency as instructed in Section 4-6. Set the PITCH CONTROL at '0', AVC to 'ON' and the SELECTIVITY control at '3 KC'. Tune in an unmodulated carrier, from a station or a signal generator, for a "zero beat". Place the AM/CW-SSB switch in the AM position to de-energize the BFO. Rotate the NOTCH DEPTH control to '0'. Tune the NOTCH FREQ for a minimum reading on the 'S' meter. The NOTCH FREQ dial should be set at '50 KC'.

If the notch frequency check indicates that an adjustment is necessary, proceed as follows:

Loosen the NOTCH FREQ knob and reset it to indicate '50 KC'. Rotate the control to approximately '51 KC'. Tune across an unmodulated carrier while observing the 'S' meter. (Use an approximate S-9 signal.) The meter will indicate two peaks. Readjust the NOTCH FREQ control as necessary to approximately equalize the peaks. Then tune the receiver for a minimum reading on the 'S' meter between the two peaks. Adjust

R75, located on the side of the notch filter chassis, for a minimum reading on the "S" meter. Refer to Fig. 11 for the location of R75.

#### 4-8. CRYSTAL CALIBRATOR CHECK.

The CRYSTAL ADJ control on the calibrator chassis operates a trimmer capacitor connected across the 100 KC calibrating crystal. This trimmer capacitor permits adjustment of the calibrating crystal. This trimmer capacitor permits adjustment of the calibrating crystal at exactly 100 KC by comparison with the frequencies transmitted by station WWV. This capacitor has been set at the factory and should not require periodic readjustment unless extreme calibration accuracy is desired. If adjustment is required, proceed as follows.

Set the RESPONSE switch to "NORMAL", the CALIB. switch at "OFF", and all other front panel controls as for normal AM reception. Tune in station WWV on any one of its operating frequencies (2.5, 5, 10, 20, or 25 MC) and wait for the period during which the signal from WWV is unmodulated. Then switch on the crystal calibrator by setting the CALIB. switch at "ON" and adjust its frequency, by means of the CRYSTAL ADJ control, until the crystal calibrator signal "zero beats" with the signal received from WWV. If the adjustment is attempted during periods that WWV is modulated, an erroneous zero beat may be obtained with the modulating frequency instead of the desired carrier frequency.

#### 4-9. SERVICE OR OPERATING QUESTIONS.

For any further information regarding operation or servicing of your receiver, contact your Hallicrafters dealer. The Hallicrafters Company maintains an extensive system of Authorized Service Centers where any required service will be performed promptly and efficiently at a nominal charge. All Hallicrafters Authorized Service Centers display the sign shown below. For the location of the one nearest you, consult your local dealer or telephone directory.

Do not make any service shipments to the factory unless instructed to do so by letter. The Hallicrafters Company will not accept the responsibility of any unauthorized shipment.

The Hallicrafters Company reserves the privilege of making revisions in current production of equipment and assumes no obligation to incorporate these revisions in earlier models.



92X1401-C

## SECTION V ALIGNMENT

This receiver has been carefully aligned at the factory by specially trained personnel using precision equipment. Alignment of the receiver should not be attempted until all other possible causes of faulty operation have been investigated. Alignment should not be required unless the receiver has been tampered with or component parts have been replaced in the RF or IF stages. Alignment should be made only by persons familiar with communications receivers and experienced in their alignment. Refer to Figs. 11 and 12 for location of all alignment adjustments.

#### 5-1. EQUIPMENT REQUIRED.

1. Signal generator covering 50 KC to 30 MC.
2. Vacuum tube voltmeter (VTVM) or other high impedance DC voltmeter.

3. Output meter (or AC scale of VTVM). Connect output meter to appropriate speaker output terminals. If a VTVM is used, connect it to terminals "500" and "G" and terminate the output with a dummy load.

#### 5-2. INITIAL CONTROL SETTINGS.

Band Selector . . . . . As indicated in chart  
 Sensitivity and Volume . . . . . 10 (maximum)  
 AVC and Noise Limiter . . . . . Off  
 AM/CW-SSB . . . . . AM  
 Selectivity . . . . . As indicated in chart  
 Response . . . . . Lower Sideband  
 Receive-Standby . . . . . Receive  
 Tuning and Bandsread .Gangs half meshed  
 Notch Depth . . . . . Off

## 5-3. ALIGNMENT PROCEDURE.

Step	Signal Generator Connections	Signal Generator Frequency	Band Selector Setting	Output Connections	Selectivity Setting	Remarks
<b>50.75 KC IF ALIGNMENT</b>						
1	High side directly to alignment point "A" (terminal 1 of T2). See Fig. 12. Low side to chassis.	50.75 KC (unmod.)	.538 - 1.58 MC	VTVM DC probe to alignment point "B" (junction of R48, R49, and C81). See Fig. 12. Common to chassis.	.5 KC	Remove 1st conv. oscillator tube V3 from its socket to prevent signal interference. Adjust top slug of T3, T4, T5, and T8 (50.75 KC IF's) for maximum indication, maintaining approx. 1 volt reading on VTVM.
<b>ALIGNMENT OF 1600 KC 2nd CONV. OSC. &amp; 1650 KC IF'S</b>						
2	High side directly to alignment point "C" (stator of section C1B of main tuning gang). Low side to frame of gang.	1650 KC (mod)	"	Output meter across appropriate speaker terminals. (VTVM to alignment point "B" if it is desired to monitor detector voltage.)	5 KC	Replace V3 removed in Step 1. Tune generator slowly thru 1850 KC to determine IF passband. Then set generator to center of passband, using sufficient generator output to obtain approx. 1/2 watt receiver output. If no output is obtained, the 1600 KC crystal oscillator
<p>may not be oscillating and it will be necessary to turn up the generator output and adjust the 1800 KC crystal activity adjustment (top slug of T9) until output is obtained. Adjust for maximum output by adjusting the signal generator frequency, crystal activity (top slug of T9) and the 1850 KC IF's (top and bottom slugs of T1 and T2). Note that the signal suddenly disappears when the crystal activity slug is turned into the coil and gradually drops in level when the slug is backed out of the coil. Set the crystal activity adjustment (top of slug of T9) for half output on the gentle slope side of maximum response. Then set the generator as near the center of the IF passband as possible and adjust the top and bottom slugs of T1 and T2 for maximum response. Tune through the passband and observe the shape of the response. If it is symmetrical, the adjustment is completed; if not, reset the generator frequency near the center of the passband and repeat T1 and T2.</p>						
<b>ALIGNMENT OF 1700 KC 2nd CONV. OSC.</b>						
3	"	"	"	"	"	Set RESPONSE control at "UPPER SIDEBAND".
<p>Tune generator slowly thru 1850 KC to determine IF passband. Then set generator to center of passband, using sufficient generator output to obtain approx. 1/2 watt receiver output. If no output is obtained, the 1700 KC crystal oscillator may not be oscillating and it will be necessary to turn up the generator output and adjust the 1700 KC crystal activity adjustment (bottom slug of T9) until output is obtained. Adjust for maximum output by adjusting the signal generator frequency and the crystal activity (bottom slug of T9). Note that the signal suddenly disappears when the crystal activity slug is turned into the coil and gradually drops in level when the slug is backed out of the coil. Set the crystal activity adjustment (bottom slug of T9) for half output on the gentle slope side of maximum response.</p>						

### IF SENSITIVITY CHECK

- 4 With the generator modulated 30% at 400 cycles and connected thru a .05 mfd capacitor to the grid (pin 1) of the 1st mixer tube V2, the IF input required for 1/2 watt receiver output should be approximately 20 microvolts. This assumes the crystal activity is set for half of maximum response as outlined in Steps 2 and 3 above.

### RF ALIGNMENT

- Before proceeding with the RF alignment, check the tuning dials for proper indexing. Both dials should index on the marks at the low frequency end with the gang fully closed.
- Use an amplitude modulated signal.
- Set the SENSITIVITY and VOLUME at "10" (maximum), AVC and NOISE LIMITER at "OFF", SELECTIVITY at "2 KC", RESPONSE at "LOWER SIDEBAND", RECEIVE-STANDBY at "RECEIVE", and BANDSPREAD" fully counterclockwise.
- Connect the output meter across the appropriate speaker terminals. (Connect the VTVM to alignment point "B" if it is desired to monitor the detector voltage.) Maintain a 1/2 watt receiver output.
- Connect high side of generator thru 330 ohm carbon resistor to antenna terminal "A1". Low side to "A2". Connect jumper between "A2" and "G".
- The oscillator frequency is higher than the signal frequency on all bands.

	Band Selector Setting	Generator & Receiver Frequency	Adjust For Maximum
5	12 - 34 MC	30.0 MC	C66 (osc. trimmer), C40 (mixer trimmer), and C110 (antenna trimmer)
	"	14.0 MC	L11 (osc. slug), L8 (mixer slug), and L1 (antenna slug)
6	4.6 - 13 MC	11.5 MC	C59 (osc. trimmer), C42 (mixer trimmer), and C110 (antenna trimmer)
	"	5.1 MC	L12 (osc. slug), L9 (mixer slug), and L2 (antenna slug)
7	1.72 - 4.9 MC	4.6 MC	C56 (osc. trimmer), C44 (mixer trimmer), and C110 (antenna trimmer)
	"	1.925 MC	L13 (osc. slug)
6	.538 - 1.56 MC	1.4 MC	C50 (osc. trimmer), C45 (mixer trimmer), and C110 (antenna trimmer)
	"	.6 MC	C52 (osc. padder)

### BFO ADJUSTMENT

Refer to Section 4-6.

### NOTCH FILTER ADJUSTMENT

Refer to Section 4-7.

"S" METER CALIBRATION

- Make both the mechanical and the electrical "S" meter zero adjustments. See section 6-5.
- Connect the signal generator as for RF ALIGNMENT above. Use a 5.1 MC, 50 UV, unmodulated signal.
- Set the receiver controls for AM reception on band 3 and accurately tune in the signal.
- Set SENSITIVITY to "10" (maximum), AVC to "ON" and SELECTIVITY to "5 KC".

STEP	RESPONSE CONTROL POSITION	ADJUST FOR 50 UV READING ON THE "S" METER
1	UPPER SIDEBAND	Bottom of T9
2	LOWER SIDEBAND	Top of T9

**NOTE**

Some interaction may occur between the two adjustments. Recheck the readings and touch up both adjustments as required to give the 50 UV reading for both Upper and Lower Sideband response.

**SECTION VI  
SERVICE DATA**

**6-1. TECHNICAL SPECIFICATIONS.**

TUBES . . . 12 plus voltage regulator and rectifier  
 SPEAKER OUTPUT . . . . . 3.2 and 500 ohms  
 HEADPHONE OUTPUT . . . . . Low impedance  
 ANTENNA INPUT . . . . . 52 to 600 ohms  
 PHONO INPUT . . . . . High impedance  
 POWER SOURCE . . . 105-125 volts, 50/60 cycles  
 POWER CONSUMPTION . . . . . 88 watts

RECEPTION . . . . . AM, CW, and SSB  
 INTERMEDIATE FREQUENCIES. . (Double Conversion): 50.75 KC and 1650 KC  
 DIMENSIONS (overall). 8-7/8" x 16-1/2" x 11" deep  
 SHIPPING WEIGHT . . . . . 41-1/2 lb.  
 NET WEIGHT . . . . . 34-1/2 lb.

\*Provisions are also included for operation from an external DC power source. (See Section 2-4.)

Band	Frequency Range	Calibrated Band Spread
1	.536 - 1.58 MC	-
2	1.72 - 4.9 MC	80M
3	4.6 - 13.0 MC	40M
4	12.0 - 34.0 MC	20, 15, 10M

**6-3. CHASSIS REMOVAL.**

The chassis and front panel assembly are removable from the cabinet as a unit by removing two screws at each side of the front panel and the six screws on the underside of the cabinet. When removing the chassis from the cabinet, care should be taken not to damage the brass adjusting screws on the oscillator slugs (L-11-12-13-14). Refer to Figure 12 for location.

**6-2. 50.75 KC IF SYSTEM.**


Fig. 13 shows the type of coupling used in the 50.75 KC IF system. Note that inductive coupling is avoided by careful shielding of the IF coils and signal transfer occurs only through capacitance and resistance. By increasing the value of "C" and "R", the selectivity is made broader while by decreasing their values, the selectivity is made sharper. The proper values of "C" and "R" are switched in the circuit by means of the SELECTIVITY control. "R" varies the "Q" of the tuned circuit and "C" varies the coupling. This R-C coupling arrangement affords a more accurate means of selectivity control than that readily obtainable by any other method.

**6-4. TUBE AND DIAL LAMP REPLACEMENT.**

To gain access to the tubes and dial lamps, raise the hinged top cover of the cabinet. The tube locations and their functions are shown in Fig. 11.


**6-5. "S" METER ADJUSTMENTS.**

The "S" meter has two adjustments, one electrical and the other mechanical. The mechanical adjustment is accessible by rotating the "h" insignia on the front of the "S" meter to one side. (The insignia pivots at the top.) The mechanical adjustment has been accurately set at the factory and will normally not require any further

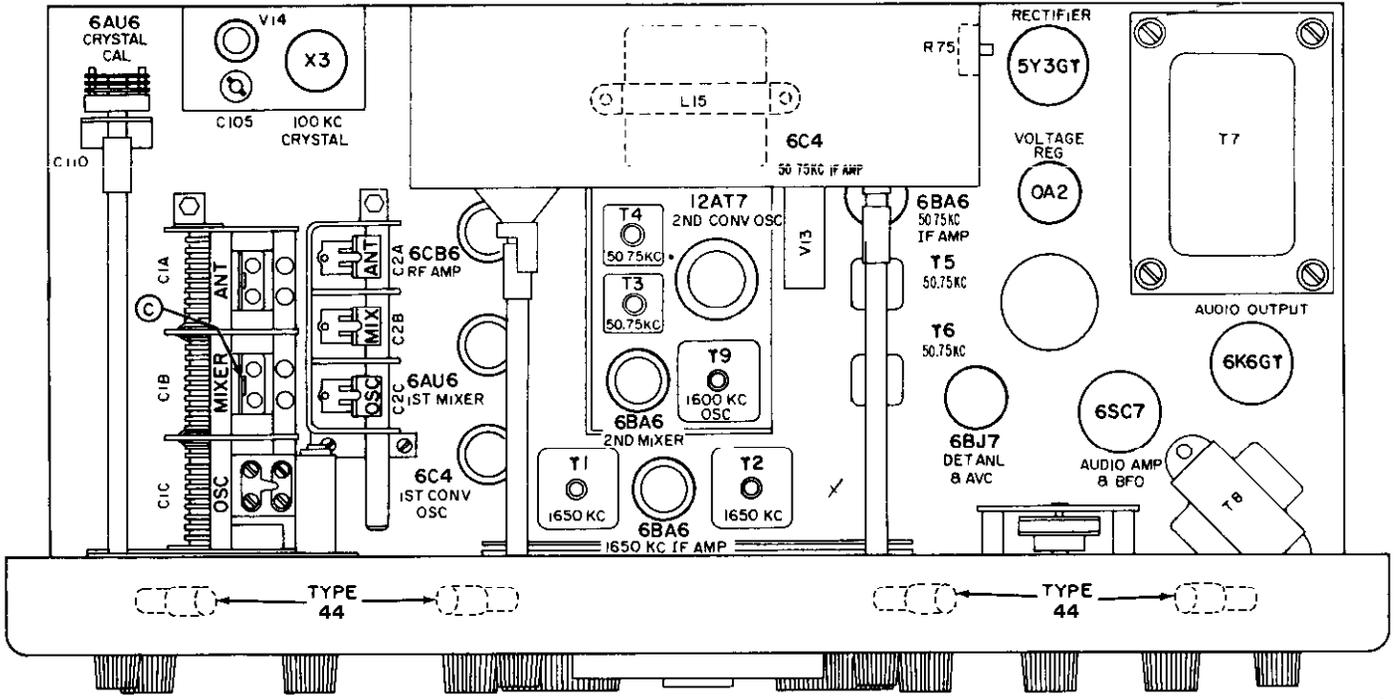


092 005018B

Figure 11. Top View of Chassis Showing Location of Alignment Adjustments, Tubes and Dial Lamps

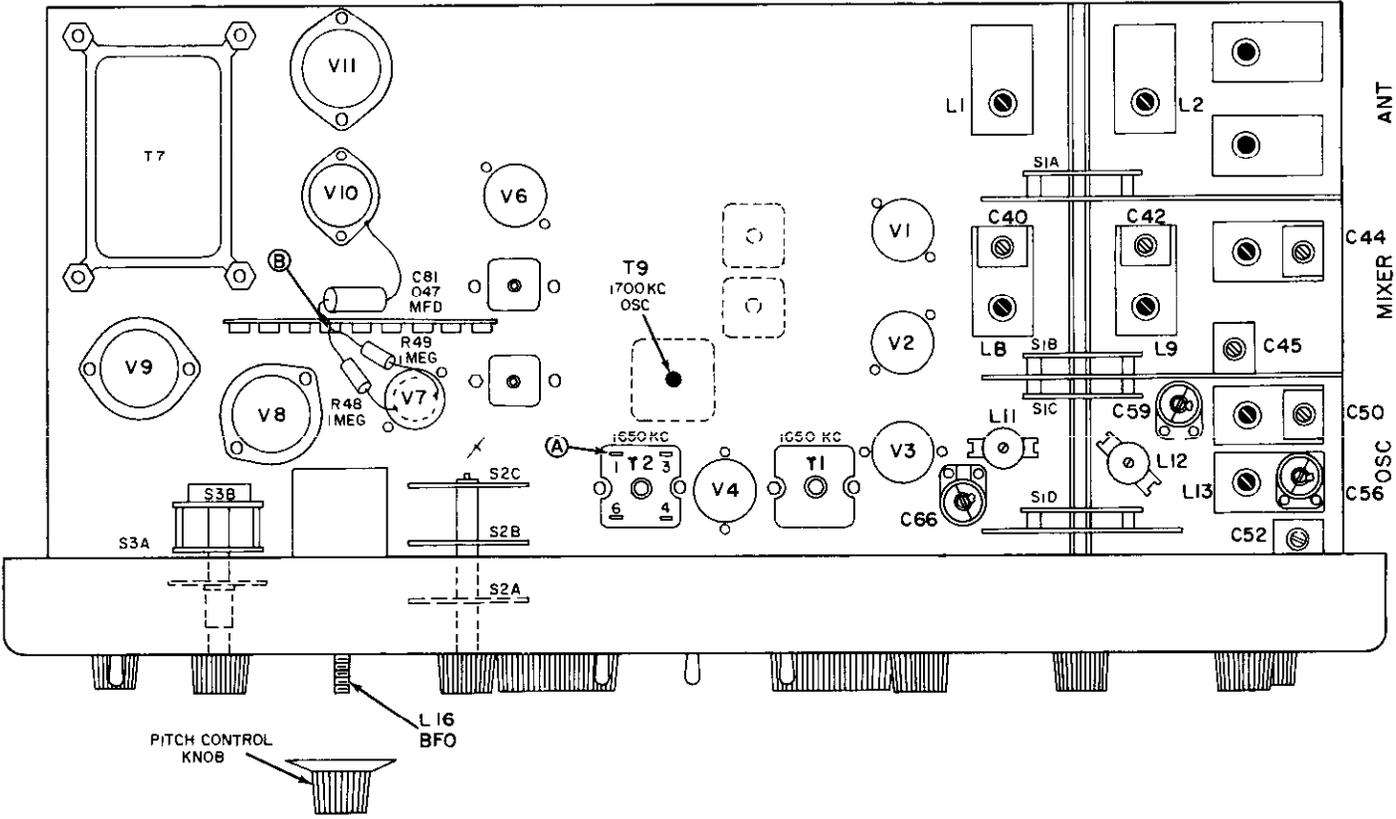

92C5019

Figure 12. Bottom View of Chassis Showing Location of Alignment Adjustments and Tubes

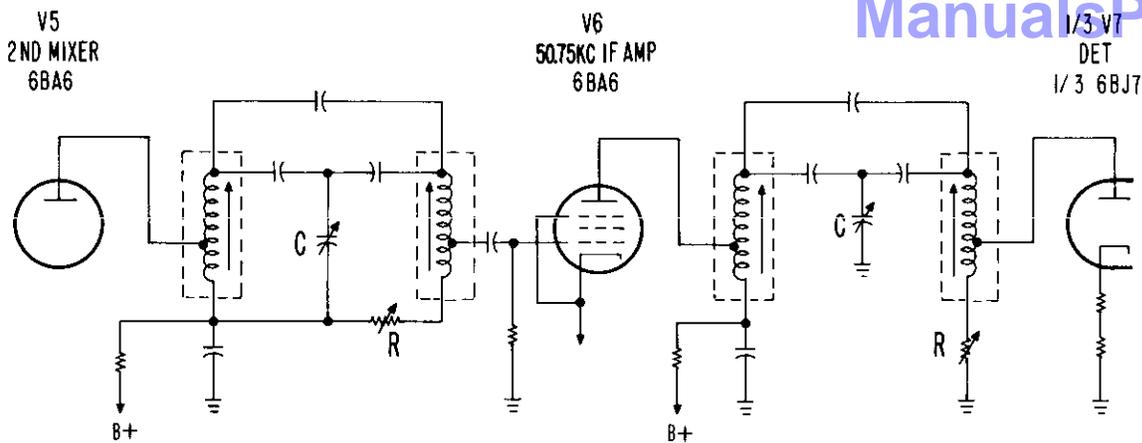

092-002378B

Figure 13. Equivalent Schematic Diagram of 50.75 KC IF System

adjustment. Adjustment can be made, if required, by turning off the receiver and carefully rotating the adjustment screw until the meter pointer is in line with the right-hand index mark.

The electrical adjustment is made by carefully turning the "S" METER ADJ control at the rear of the receiver (Fig. 4), until the pointer is in line with the left-hand index mark. The electrical adjustment should be made with the receiver on, antenna terminals shorted, SENSITIVITY at "10", AM/CW-SSB switch at "AM", AVC switch at "ON", and RECEIVE-STANDBY switch at "RECEIVE". The settings of the remaining controls do not affect the "S" meter reading.

#### 6-6. DIAL CABLE RESTRINGING.

To restring the bandspread dial cable, first remove the front panel from the cabinet by removing the control knobs, the toggle switch and Phones jack mounting nuts, the Sensitivity control mounting nut, the two screws at each side of the front panel, and three screws on the underside of the front panel. Leave the bandspread dial in place but remove the main tuning dial to gain access to the pulley on the bandspread gang. This is accomplished as follows (Refer to Fig. 15.): (1) Remove the two screws at the front of the dial, (2) Loosen the pointed set screw to the right of the dial, (3) Disengage the idler gear from the dial by lifting upward on the idler gear mounting plate and (4) Carefully remove the dial.

Before restringing the dial cable, attach the tension springs to the cable, rotate the Bandspread control fully clockwise, and set the bandspread gang in its fully closed position. Attach the spring at one end of the cable to position "1" on the bandspread gang pulley as shown in Fig. 14 and follow the stringing sequence "1" through "10".

After stringing is completed, rotate the Bandspread control fully clockwise and check the position of the bandspread gang and the index marks at the low-frequency end of the dial. The gang should be fully closed and the index marks should be vertical.

If the bandspread gang is not fully closed with the Bandspread control set fully clockwise:

1. Loosen the two set screws that secure the pulley on the bandspread gang shaft.
2. Holding the Bandspread control fully clockwise, set the gang in its fully closed position by turning the gang shaft, and then tighten the set screws.

If the index marks at the low end of the bandspread dial are not vertical with the Bandspread control set fully clockwise: (Refer to Fig. 15)

1. Check the position of the gang as outlined above and make the adjustment if required.
2. Loosen the two set screws at the rear of the dial mounting collar.
3. Loosen the pointed set screw to the left of the bandspread dial.
4. With the right hand, hold the cam assembly in the position shown in Fig. 15. With the thumb of the left hand, lift the idler gear mounting plate upward to disengage the dial, and with the index finger of the left hand, carefully rotate the dial until the index

marks at the low-frequency end are vertical. After the dial is properly positioned, release the idler gear and tighten the two set screws on the collar.


5. Turn down the pointed set screw until it just touches the idler gear mounting plate. If the screw is turned down too far, the dial will not rotate freely; if not turned down far enough, the idler gear will not engage the dial properly and the dial will have a tendency to slip.
6. Rotate the Bandspread control fully clockwise and check the position of the index marks at the low-frequency end. If they are still not vertical, it will be necessary to repeat Steps 2 through 5.

To replace the main tuning dial: (Refer to Fig. 15)

1. Rotate the main tuning gang to its fully closed position.


2. Lift the idler gear mounting plate upward, replace the dial with the index marks at the low-frequency end facing upward, and fasten it in place by means of the two front screws.
3. With the index finger of the left hand, hold the main tuning gang in its fully closed position, with the right hand lift the idler gear mounting plate upward to disengage the dial, and with the thumb of the left hand carefully rotate the dial until the index marks at the low-frequency end are exactly vertical. When the dial is properly positioned, release the idler gear and tighten the two set screws at the rear of the dial mounting collar.
4. Same as Step 5 on page 19.
5. Rotate the Tuning control fully clockwise and check the position of the index marks at the low-frequency end. If they are not exactly vertical, it will be necessary to repeat Steps 3 and 4.

**NOTE**  
BAND SPREAD GANG  
FULLY CLOSED

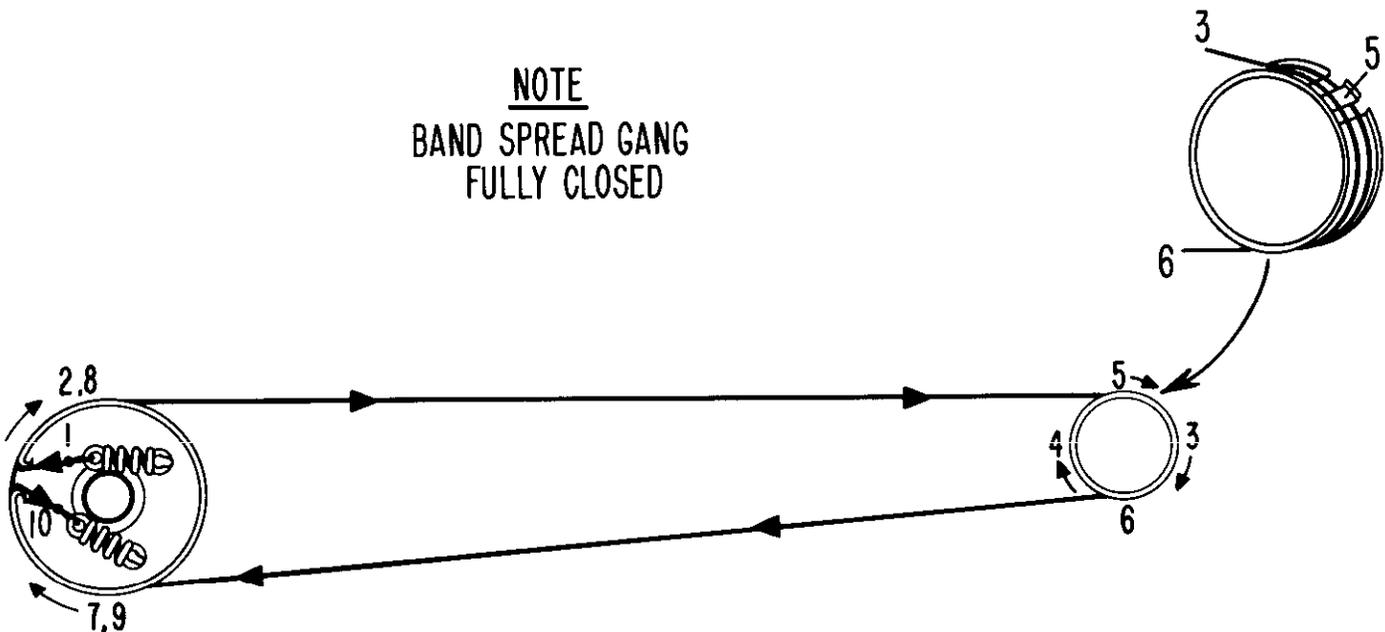


9282383

Figure 14. Dial Cord Stringing Diagram

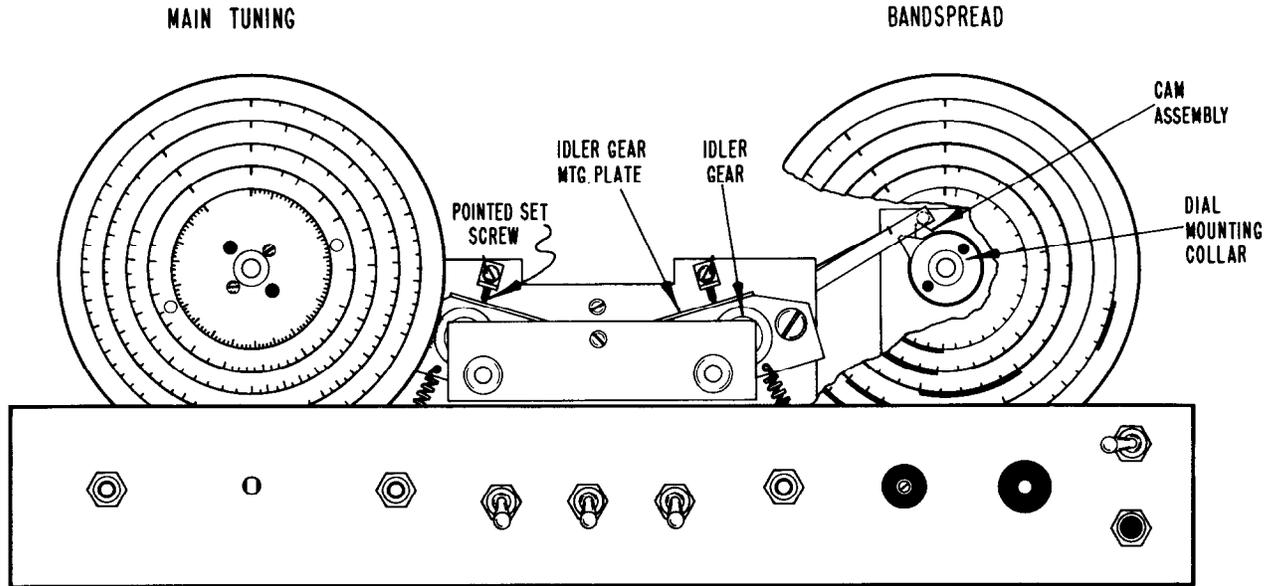

92C2395

Fig. 15. Front View of Gear Drive Tuning Mechanism

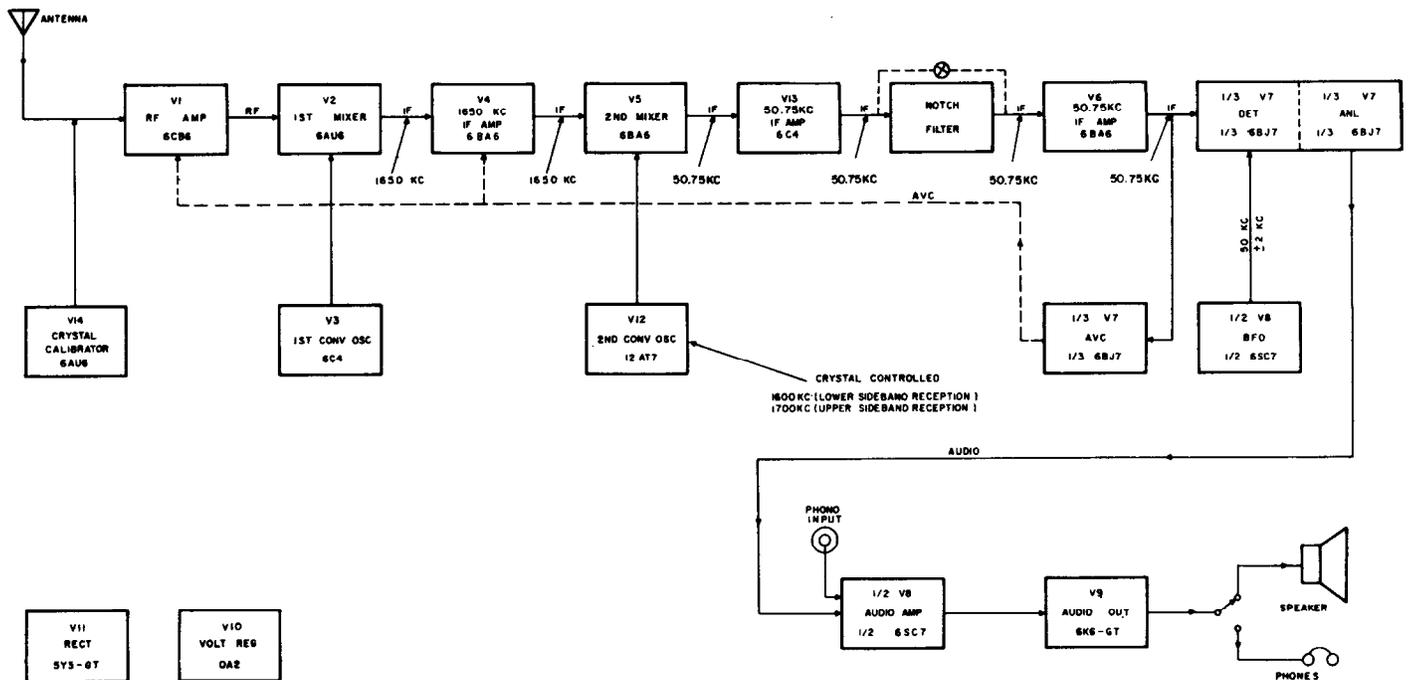

092-00801B

Figure 16. Block Diagram of Receiver

## SERVICE PARTS LIST

Schematic Symbol	Description	Hallcrafters Part Number	Schematic Symbol	Description	Hallcrafters Part Number	Schematic Symbol	Description	Hallcrafters Part Number
CAPACITORS			CAPACITORS (CON'T.)			SWITCHES (CONT.)		
C1	Main Tuning, 3 Section (Inc. Gears), Variable	048-400389	C95	10 mmf, $\pm 0.5$ mmf, N4700, 500V; Ceramic	479-042100	S4,6	Switch, SPST Toggle; AVC and Noise Limiter	060-100138
C2	Bandspread Tuning, 3 Section (Inc. Gears), Variable	048-300347	C97,98,101	0.001 mfd, 20%, 600V; Molded Paper	499-034102	S5	Switch, DPST Toggle; AM/CW-SSB	060-100265
C7,46,76,79,66	220 mmf, 10%, 500V; Ceramic	478-026221	C100	10 mfd, 50V; Elect.	045-200211	S7	Switch, DPST Toggle; Receive-Standby	060-100192
C6,22,24,25,26	0.02 mfd, $\pm 60-20\%$ , 500V; Ceramic Disc.	047-100242	C103,104	7500 mmf, 5%, 500V; Mica	470-422752	S6	Part of R76	
C9,14,15,16,17,47	0.005 mfd, 500V, GMV; Ceramic Disc.	047-100168	C105	8-50 mmf, N750, Trimmer	044-200437	S9	Switch, Rotary, Calib. On-Off	060-100742
C10,27,46,70,111	100 mmf, 10%, 500V; Ceramic	491-026101-94	C107	62 mmf, 10%, 500V; Mica	470-213820	***COILS AND TRANSFORMERS		
C11,12,13,72	0.005 mfd, 20%, 1000V; Ceramic Disc.	047-200523	C110	3-25 mmf, Antenna Trimmer	046-000368	L1	Coil, Antenna Band 4	051-202027
C19,20,23,106,108	0.01 mfd, $\pm 60-20\%$ , 450V; Ceramic	047-100224	C112	0.5 mfd, 20%, 200V; Molded Paper	499-014504	L2	Band 3	051-202026
C28,29,34,35	390 mmf, 5%, 500V; Mica	470-232391	C114	0.01 mfd, Fixed, GMV; 1400 W.V.D.C.	047-200752	L3	Band 2	051-202025
C30,36,38,41,43,109	2.2 mmf, 10%, 500V; Ceramic	047-200403-04	N: Negative Temp. Coefficient NPO: Zero Temp. Coefficient GMV: Guaranteed Minimum Value			L4	Band 1	051-202024
C31,96,102	470 mmf, 10%, 500V; Mica	470-213471	*RESISTORS			L7	Choke, RF; 540 mh; 10 ohms DC	053-100107
C32,85	0.22 mfd, 20%, 200V; Molded Paper	499-014224	R1	22 ohms	451-252220	** L6,C40	Coil, Mixer Band 4	051-201327
C33,37,113	0.047 mfd, 20%, 600V; Molded Paper	499-034473	R2,27,44	1 megohm	451-252105	** L9,C42	Band 3	051-201326
C39,64	25 mmf, 10%, 500V; Ceramic	491-008250-95	48,71			** L10,C44	Bands 1 and 2	051-201319
C40	4-80 mmf, Mica Trimmer	044-100395	R3,7,13	15 ohms	451-252150	L11	Coil, Oscillator Band 4	051-201321
C42,44,50	3-30 mmf, Mica Trimmer	044-100396	R4,41,56	160 ohms	451-252161	L12	Band 3	051-201833
C45	1.5-15 mmf, Mica Trimmer	044-200399	R6,29	39K ohms, 1 watt	451-352393	** L13,C56,	Band 2	051-201921
C49,60	5 mmf, $\pm 0.25$ mmf, N3300, 500V; Ceramic	479-031050	R6,45	2.2 megohms	451-252225	C57		
C51	10 mmf, $\pm 0.5$ mmf, N3300, 500V; Ceramic	479-032100	R9,25,70	2.2K ohms	451-252222	** L14,C50	Band 1	051-201326
C52	120-220 mmf, Mica Padder	044-200396	R10,63	220K ohms	451-252224	L15	Choke, Filter; 6 HY 85 MA; 310 ohms DC	056-100216
C53	10 mmf, 10%, NPO, 500V; Ceramic	491-006100-22	R11,30	3.3K ohms	451-252332	L16	Coil, BFO	054-200053
C54	220 mmf, 5%, N330, 500V; Ceramic	491-065221-73	R12,19,20	100K ohms	451-252104	L17,16	Choke, RF	053-200008
C55	240 mmf, 5%, 500V; Mica	044-200451	R13,26,36	100 ohms	451-252101	L19	Coil, T-Bridge	051-202026
C56	4.5-25 mmf, NPO; Ceramic Trimmer	479-015110	R15	6.2K ohms	451-252622	T1,2	Transformer, 1st and 2nd IF (1650 KC)	050-200468
C57	11 mmf, $\pm 0.25$ mmf, N1500, 500V; Ceramic	044-200452	R16,34	3.3K ohms	451-352332	T3,4,5,6	Transformer, 1F (50.75 KC)	050-200489
C59	2.5-13 mmf, Ceramic Trimmer	491-065321-94	R17	500 ohms (Variable), "S" Meter Adj.	025-200022	T7	Transformer, Power	052-300221
C61	320 mmf, 5%, N750, 500V; Ceramic	470-232661	R18	270 ohms	451-252271	T8	Transformer, Audio Output	055-000264
C62	660 mmf, 5%, 500V; Mica	491-056101-22	R24,35	22K ohms	451-252223	T9	Transformer, 2nd Conversion Oscillator	050-300669
C63	100 mmf, 10%, NPO, 500V; Ceramic	479-011070	R26,50	120K ohms	451-252124	** Trimmers and Capacitors indicated above are supplied with the coils but may also be ordered separately if desired. See "Capacitors" section.		
C65	7 mmf, $\pm 0.25$ mmf, N1500, 500V; Ceramic	044-200453	R33	6.6K ohms, 1 watt	451-352662	*** Coils are supplied less tuning slug. See "Miscellaneous" section for part numbers of slugs.		
C66	4.5-25 mmf, Ceramic Trimmer	470-442132	R36	10K ohms, 1 watt	451-352103	TUBES AND LAMPS		
C67	1300 mmf, 5%, 500V; Mica	047-200441	R37	4.5K ohms, 10 watts wire-wound	453-062452	V1	6CB6; RF Amplifier	080-901115
C68	1000 mmf, 5%, N2200, 500V; Ceramic	479-220010	R39	470 ohms	451-252471	V2,14	6AU6; 1st Mixer Crystal Calibrator	090-900806
C69	1 mmf, $\pm 0.1$ mmf, N2200, 500V; Ceramic	491-006010-94	R40,67	470K ohms	451-252474	V3,13	6C4; 1st Conversion Oscillator 50.5 KC IF Amplifier	090-900630
C71	1 mmf, 10%, N750, 500V; Ceramic	499-031472	R42,57	220 ohms	451-252221	V4,5,6	6BA6; 1650 KC IF Amplifier; 2nd Mixer; and 50.5 KC IF Amplifier	090-901112
C73,82	4700 mmf, 10%, 600V; Molded Paper	499-031103	R43,56	390 ohms	451-252391	V7	6BJ7; Detector, AVC, and Noise Limiter	090-901113
C74,83	0.01 mfd, 10%, 600V; Molded Paper	499-031223	R47	47 ohms, 1 watt	451-252824	V6	6SC7; Audio Amplifier and BFO	090-900874
C75,64	0.022 mfd, 10%, 600V; Molded Paper	491-006270-94	R49	820K ohms	451-252824	V9	6K6GT; Audio Output	090-900656
C76	27 mmf, 10%, 500V; Ceramic	499-014473	R51,52	6.6 ohms	451-252088	V10	OA2; Voltage Regulator	090-900001
C77,81	0.047 mfd, 20%, 200V; Molded Paper	045-200113	R53	270K ohms	451-252274	V11	5Y3GT; Rectifier	090-901111
C87A,B,C	60 mfd, 450V; 20mfd, 450V; 20 mfd, 400V; Electrolytic	499-034223	R54,65,66	47K ohms	451-252473	V12	12AT7; 2nd Conversion Oscillator	090-900034
C89,90,91,92,99	0.022 mfd, 20%, 600V; Molded Paper	470-223301	R59	10K ohms (Variable) "Sensitivity"	025-201160	LM1,2,3,4	Lamp, Pilot; Type 44	039-100003
C93	300 mmf, 10%, 500V; Mica	470-232561	R60	330K ohms	451-252334	CR1	1N295; Diode	019-201980
C94	560 mmf, 5%, 500V; Mica		R61	10K ohms	451-252103	JACKS, PLUGS, AND SOCKETS		
			R62	500K ohms (Variable), "Volume"	025-200534	SO1	Jack, Phono	036-100041
			R64	15 megohms	451-252156	SO2	Socket, Octal	006-200296
			R68	390 ohms, 1 watt	451-352391	SO3	Jack, Phono	036-200046
			R69	560 ohms, 1 watt	451-352561	SO4	Socket, 5-Pin	006-100186
			R72	12K ohms	451-252123	PL1	Line Cord and Plug	067-201869-02
			R73	33K ohms, 1 watt	451-352333	PL2	Plug, Octal; Jumper	035-100003-01
			R74	1K ohm	451-252102		Plug, 5-Pin	035-100036
			R75	15K ohms (Variable), "Notch Adj."	025-201231		Socket, Crystal	008-200673
			R76	5K ohms (Variable), "Notch Depth", W/SW	025-201224		Socket, Dial Lamp	068-100226
			R77,60	220K ohms	451-252224		Socket, Tube; Min. 7-Pin	006-100347
			R76	4.7K ohms	451-252472			
			* All resistors are 10%, 1/2 watt, carbon type unless otherwise specified.					
			SWITCHES					
			Switch Wafers, Band Selector					
			S1A	Antenna Section	062-200053			
			S1B	Mixer Section	062-200053			
			S1C	Oscillator Grid Section	062-200054			
			S1D	Oscillator Plate Section	062-200055			
			Detent and Shaft for Band Selector Switch					
			S2	Switch, Selectivity	060-200673			
			S3	Switch, Response	060-00872			

## SERVICE PARTS LIST (Cont.)

Schematic Symbol	Description	Hallicrafters Part Number	Schematic Symbol	Description	Hallicrafters Part Number	Schematic Symbol	Description	Hallicrafters Part Number
JACKS, PLUGS, AND SOCKETS (CONT.)			MISCELLANEOUS (CONT.)			MISCELLANEOUS (CON'T.)		
	Socket, Tube, Min. 9-Pin Mica	006-200500		Cam Assembly, Main Tuning	077-200914		Control Shaft	
	Socket, Tube, Min. 7-Pin Mica	006-200505		Collar, Switch Shaft	077-100043		Pulley and Bushing Assembly (Band Spread Gang Shaft)	028-200203
	Socket, Min. 7-Pin	006-100644		Core, Iron (RF Osc.)	003-101543		Rubber Channel (Escutecheon)	016-100118-02
	Socket, Tube, Min. 7-Pin, JAN type	006-200633		Core, Iron (For L1,2,6, 9 and 13)	077-100068		"S" Meter Assembly (Complete)	082-000280
	Socket, Min. 7-Pin, J type	006-100759		Core, Iron (For L16)	003-103289	M1	Front Cover, "S" Meter (Part of "S" Meter Assembly)	
KNOB AND KNOB SKIRT ASSEMBLIES				Coupler, Flexible	029-100051		Set Screw, 8-32 x 3/8"	003-103186
	Knob, Sensitivity or Volume	015-001474	X1,2	Coupler, Solid	029-000264		Bristol Head	
	Knob, Pitch Control	015-001474		Coupler, T-Bridge Coil	029-100301		Set Screw, 10-32 x 21/64"	003-101712
	Knob, Selectivity	015-001474		Shaft			Slotted Head	
	Knob, Response	015-001472		Cover, Bottom	063-201752		Set Screw, 8-32 x 3/16"	003-103182
	Knob, Notch Frequency	015-000936		Matched Crystal Pair; consists of one 1600 KC crystal and one 1700 KC crystal	019-301902		Bristol Head	
	Knob, Notch Depth	015-000936	X3	Crystal Marker, 100 KC	019-202351		Shaft, Notch Freq. and Notch Depth	074-101052
	Knob, Main Tuning or Band Spread	015-001499		Dial Cable Assembly	036-100029		Shaft, Band Spread	074-100835
	Knob, Antenna Trimmer or Calib. On/Off	015-000936		Dial Scale (Band Spread)	063-000502		Shaft, Pinion	074-200600
	Knob, Band Selector	015-001472		Dial Scale (Main Tuning)	063-000503		Medallion, "h" (Part of "S" Meter Assembly)	007-100592
MISCELLANEOUS				Foot, Mounting (Cabinet)	016-100007		Shield, Cover	069-200643
	Ball Bearing, 1/8" Dia.	077-100505		Flywheel	071-000210		Shield, Tube (7-Pin)	069-100306
	Ball Bearing, .093" Dia.	077-101099		Rubber Channel	016-101245		Shield, Tube (9-Pin)	069-100519
	Bracket, Gear Adj.	067-104315		Gear, Drive	026-200258		Shield, Tube (9-Pin Osc.)	069-100097
	Bushing, BFO Stop	077-101023		Gear, 99-Tooth 48-Pitch (Fixed)	026-200514		Spring, Anti-backlash	075-100231
	Bushing, Dial (Band Spread)	077-200906		Gear, 99-Tooth 48-Pitch (Loose)	026-200515		Spring, Dial Cord Tension	075-100139-00
	Cabinet, Bottom Section	066-401067		Gear, 55-Tooth 48-Pitch	026-200516		Spring, Compression	075-200332
	Cabinet, Front Panel	066-400426		Insulator, Bakelite; .156" id., .5" od, 1/4" th.	008-100723		Spring, Flywheel	075-100345
	Cabinet, Top Cover	066-401066		Lock, Line Cord (Male)	076-100397-01	TS1	Spring, Take-up	075-100326
	Cam Assembly, Band Spread	077-200916		Lock, Line Cord (Female)	076-100397-02	TS2	Terminal Strip, Antenna	066-100032
				Pad, Brake	008-102866		Terminal Strip, Speaker	066-100576
				Panel, Front	066-400429		Window, Band Spread	022-000500
				Pilot Light Assembly	086-100226		Dial	
				Post, Latch	011-100226		Window, Main Tuning	022-000499
				Pulley and Bushing Assembly (Band Spread)	028-200201		Dial	
							100 KC Marker Xtal Assembly	001-902508

**NOTES**

1. Resistor values in ohms and capacitor values in MMF unless otherwise specified. K=1000.
2. Resistors are 1/2 watt and 10% unless otherwise specified.
3. Band Selector switch S1 shown in ".538-1.58 MC" position (fully counterclockwise). Switch sections are shown as viewed from rear of set.
4. Selectivity switch S2 shown in "5 KC" position (fully counterclockwise). Switch sections are shown as viewed from front of set.
5. Response switch S3 shown in "Lower Sideband" position. Section S3B is open in the "Power Off" position and closed in all other positions.
6. See Fig. 11 for location of all switch sections.
7. Values and tolerances are nominal and variations may be found. It is recommended that the value of any replacement correspond to the nominal value of the part being replaced.

⊥ Chassis

**VOLTAGES**

Voltage readings taken under the following conditions:


1. Line voltage—117 volts, 60 cycles AC.
  2. Antenna terminals shorted, Sensitivity at "10", Receive-Standby at "Receive", AM/CW-SSB switch at "AM", AVC at "On", Noise Limiter at "Off", Response at "Lower Sideband", and Selectivity at "5 KC".
  3. All voltages measured between tube socket terminals and chassis unless otherwise specified. See Fig. 11 for location of tubes.
  4. All voltages are DC and positive unless otherwise specified. DC voltages measured with VTVM; AC voltages with 1000 ohms-per-volt meter.
  5. Voltages shown for V12 are with Response control at "Lower Sideband". In the "Upper Sideband", "Treble Cut", and "Normal" positions, the voltages of the two triode sections are reversed. The grid voltage will vary with crystal activity.
  6. Voltages for pins 2 and 3 of V8 are taken with AM/CW-SSB switch at "CW-SSB".
- ⊙ Voltage varies with setting of tuning gang.

**▲ "S" METER ZERO ADJUSTMENT**

Alternate values of resistance were used in some receivers for R-17 ("S" meter zero adjustment) and R-18 (The associated current limiting resistor). The alternate values were as follows:

SYMBOL	VALUE	HALLICRAFTERS PART NUMBER
R-17	200 ohms	25B714
R-18	56 ohms	23X20X560K

Either the alternate values or the original values as shown in your service parts list may be used for replacement. It is important however that if one of the alternate values is used the other must also be used.

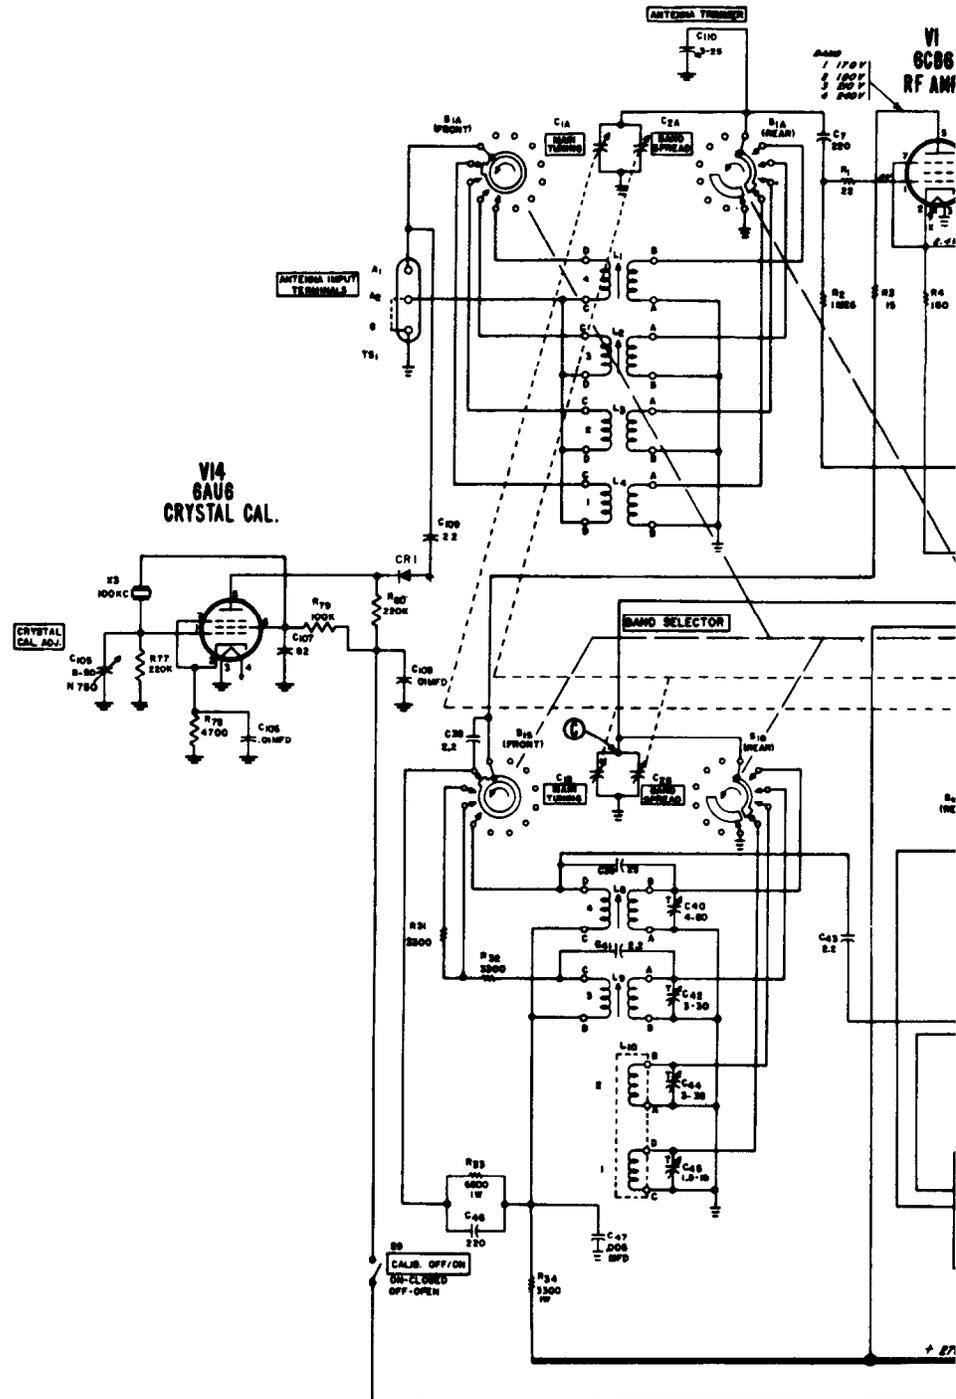

1 ST IF = 1650 KC  
2 ND IF = 50.75KC

