


# MAIN CIRCUIT BOARD

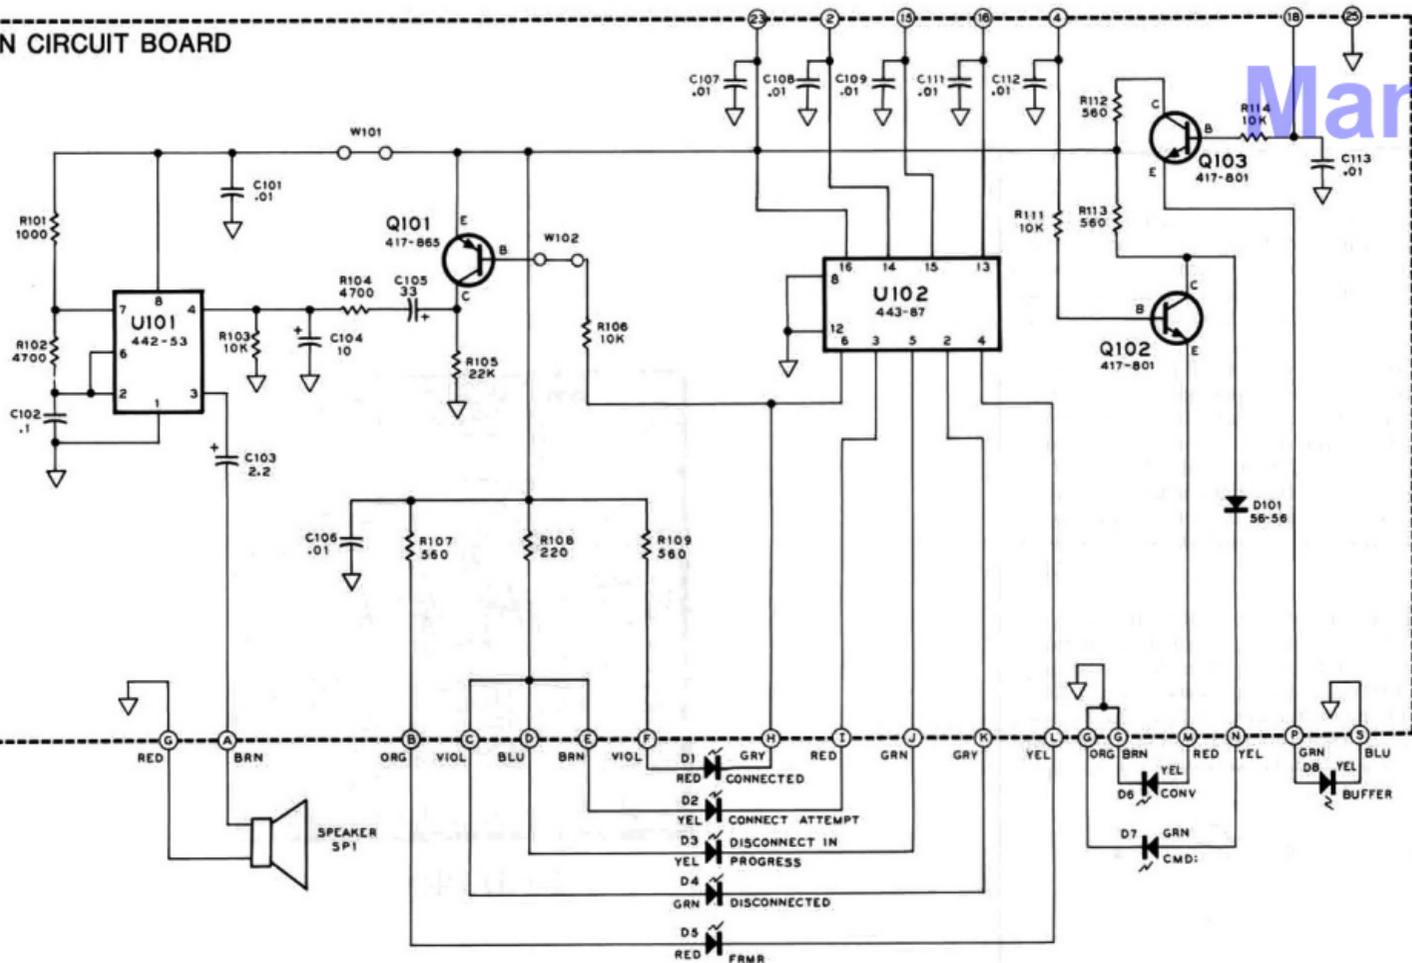

ManualsPlus.com

## SCHEMATIC OF THE HEATHKIT® TNC STATUS INDICATOR MODEL HDA-4040-1

### NOTES:

- All resistors are rated at 1/4-watt, and have a 5% tolerance unless otherwise noted (K = 1000).
- Capacitor values are in  $\mu\text{F}$  (microfarads).
- The following symbols are used on this schematic diagram:
  - ▽ Circuit board ground.
  - (A) (Lettered) A circuit board wire connection to a chassis-mounted component.
  - (18) (Numbered) A circuit board wire connector to a like number on TNC parallel port P1.
  - A DC voltage reading taken with a high input impedance digital voltmeter from the point indicated to chassis ground. Voltages may vary  $\pm 10\%$ .
- Refer to the "Circuit Board X-Ray View" on Manual Page 23 for the physical locations of parts.