

Serial No. _____

INSTRUCTION MANUAL
MODEL 147
HF SWEEP GENERATOR

WAVETEK
Box 651, San Diego, Calif., 714-279-2200

1R-10/73

WARRANTY

All Wavetek instruments are warranted against defects in material and workmanship for a period of one year after date of manufacture. Wavetek agrees to repair or replace any assembly or component (except batteries) found to be defective, under normal use, during this period. Wavetek's obligation under this warranty is limited solely to repairing any such instrument which in Wavetek's sole opinion proves to be defective within the scope of the warranty when returned to the factory or to an authorized service center. Transportation to the factory or service center is to be prepaid by purchaser. Shipment should not be made without prior authorization by Wavetek.

This warranty does not apply to any products repaired or altered by persons not authorized by Wavetek, or not in accordance with instructions furnished by Wavetek. If the instrument is defective as a result of misuse, improper repair, or abnormal conditions or operations, repairs will be billed at cost.

Wavetek assumes no responsibility for its product being used in a hazardous or dangerous manner either alone or in conjunction with other equipment. High voltage used in some instruments may be dangerous if misused. Special disclaimers apply to these instruments. Wavetek assumes no liability for secondary charges or consequential damages and, in any event, Wavetek's liability for breach of warranty under any contract or otherwise, shall not exceed the purchase price of the specific instrument shipped and against which a claim is made.

Any recommendations made by Wavetek for use of its products are based upon tests believed to be reliable, but Wavetek makes no warranty of the results to be obtained. This warranty is in lieu of all other warranties, expressed or implied, and no representative or person is authorized to represent or assume for Wavetek any liability in connection with the sale of our products other than set forth herein.

CONTENTS

SECTION 1	INTRODUCTION	
	1.1 PURPOSE OF THE EQUIPMENT	1-1
	1.2 GENERAL PHYSICAL DESCRIPTION	1-1
	1.3 SPECIFICATIONS	1-1
SECTION 2	INSTALLATION AND OPERATION	
	2.1 MECHANICAL INSTALLATION	2-1
	2.2 ELECTRICAL INSTALLATION	2-1
	2.3 OPERATING CONTROLS	2-1
	2.4 INSTALLATION CHECKS	2-4
	2.5 OPERATING PROCEDURE	2-6
SECTION 3	CALIBRATION	
	3.1 SIMPLIFIED BLOCK DIAGRAM ANALYSIS	3-1
SECTION 4	MAINTENANCE	
	4.1 ACCESS INSTRUCTIONS	4-1
	4.2 CALIBRATION INSTRUCTIONS	4-2
SECTION 5	DIAGRAMS, ADDENDUMS AND PARTS LISTS	
	5.1 DIAGRAMS	5-1
	5.2 ADDENDUMS	5-1
	5.3 PARTS LISTS	5-1
	5.4 RECOMMENDED SPARE PARTS LIST	5-2

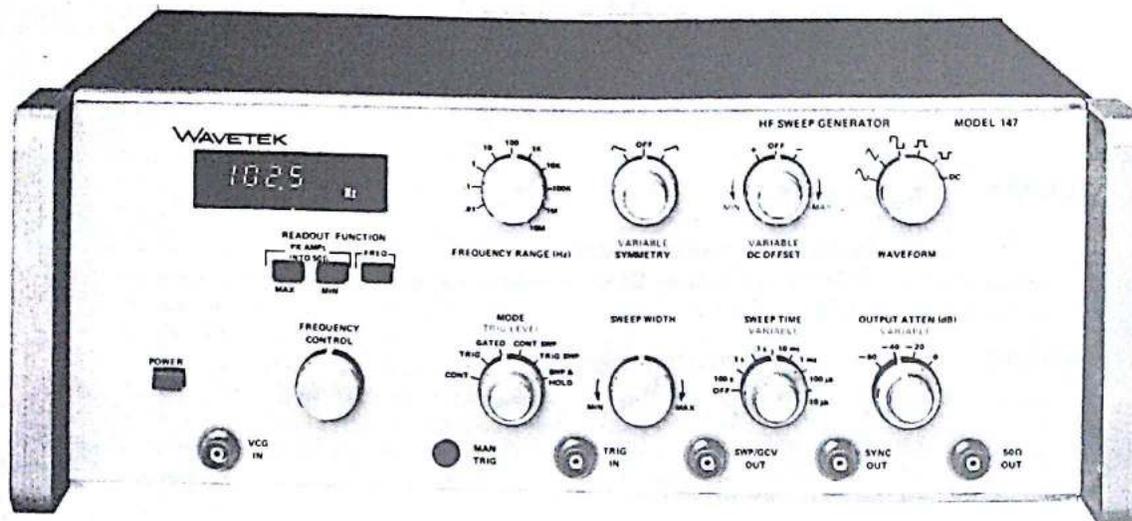


Figure i – Model 147 HF Sweep Generator

SCOPE OF THIS MANUAL

This manual provides descriptive material and instructions for the installation, operation, maintenance, and repair of this instrument. Wavetek's product improvement program ensures that the latest electronic developments are incorporated in all Wavetek instruments by the addition of circuit and component changes as rapidly as development and testing permit. Due to the time required to document and print instruction manuals, it is not always possible to incorporate the more recent changes in the released manual. In this case, data will be found on engineering change sheets at the rear of the manual. If no change sheets are included, the manual is correct as printed.

SECTION 1

INTRODUCTION

1.1 PURPOSE OF THE EQUIPMENT

The Model 147 HF Sweep Generator is a precision 0.0005 Hz to 10 MHz source of sine, triangle, square, positive pulse, and negative pulse waveforms, each with variable amplitude, dc offset, and symmetry. Frequency range selection is provided in 10 decades, with a 3½ digit LED readout and vernier control which permits accurate adjustment to the least significant digit of the readout. The 3½ digit readout is 3 digits plus a fourth (the most significant) digit of 0 or 1. DC voltage output is also selectable with an adjustable range of ±10 Vdc into an open circuit (±5 Vdc into 50Ω) with 150 mA short circuit current.

Maximum output amplitude is 30 V p-p into an open circuit (15 V p-p into 50Ω) with a 60 dB calibrated step attenuator and a 20 dB vernier attenuator (80 dB overall) allowing signal levels as low as 1.5 mV p-p. Both the output waveform and the dc offset are attenuated by the 60 dB calibrated step attenuator. Maximum and minimum output peak voltages are displayed on the 3½ digit LED readout and are accurate to the specification when the output has been properly terminated with 50Ω load.

The Model 147 has six operational modes (continuous, triggered, gated, continuous sweep, triggered sweep, and sweep and hold) plus tone burst capability. The main output can be internally swept over approximately a 1000:1 ratio at sweep times from 10 μs to 100 s, or it can be frequency modulated, dc programmed, or externally swept over a greater than 1000:1 ratio by applying an external control signal to the front panel VCG IN connector. A single cycle of output, or one full sweep of the output, can be obtained by manual trigger or an external trigger signal applied to the front panel TRIG IN connector.

In addition to the 50Ω main output and sync output, the Model 147 also has sweep and generator control voltage (GCV) outputs. When the main output is not internally swept (i.e., operating in continuous, triggered, or gated modes without sweeping), the fixed amplitude sawtooth output of the internal sweep generator appears at the SWP/GCV OUT connector. When the main output is internally swept, an output voltage proportional to the instantaneous frequency of the main generator will appear at the SWP/GCV OUT connector. This GCV output can be used to

drive X-Y recorders or the vertical and horizontal deflection circuits of oscilloscopes, video monitors, etc.

Varying the triangle symmetry produces a sawtooth signal with a rise or fall time as fast as 50 ns at a recurring rate of up to 1 MHz. Pulse outputs as narrow as 50 ns (duty cycles from 19:1 to 1:19) with repetition rates as high as 1 MHz can be generated in either polarity. Even the sine wave symmetry may be varied over this 1:19 to 19:1 range if desired. When the output symmetry is not 1:1, the frequency range setting is divided by approximately 10; however, the actual output frequency is displayed on the LED readout.

With this instrument it is possible to internally or externally sweep the output frequency, select the output symmetry desired, and manually vary the dc offset. The output frequency, positive peak amplitude and negative peak amplitude are displayed on a digital readout. DC offset or dc output voltage can be set by digital readout. These capabilities coupled with the variety of waveforms available and precision output amplitude control make the Model 147 an extremely versatile instrument.

1.2 GENERAL PHYSICAL DESCRIPTION

The Model 147 weighs approximately 12 lb (5.45 kg) net and 16 lb (7.26 kg) when shipped. It is 14½ in. (368 mm) wide, 5½ in. (133 mm) high, and 14¼ in. (362 mm) deep, and is housed in a compact, ruggedized, portable case. The Model 147 is normally shipped with a 10 foot, 3 wire, detachable line cord and one copy of this instruction manual.

1.3 SPECIFICATIONS

1.3.1 Waveforms

Waveforms that may be selected are sine , square , triangle , positive pulse , and negative pulse . DC voltage may also be selected. Symmetry of all outputs are continuously adjustable from 1:19 to 19:1. Varying the triangle symmetry produces sawtooth  or  output. The Model 147 has a SWP/GCV OUTput and a SYNC OUTput with variable symmetry as described below. Signal frequency and maximum and minimum peak signal voltages are indicated by a 3½ digit LED readout.

1.3.2 Operating Frequency Range

The FREQUENCY RANGE (Hz) switch selects from 0.0005 Hz to 10 MHz in the following ranges:

0.01	0.0005 Hz to 0.01 Hz
0.1	0.005 Hz to 0.1 Hz
1	0.05 Hz to 1 Hz
10	0.1 Hz to 10 Hz
100	1 Hz to 100 Hz
1K	10 Hz to 1 kHz
10K	100 Hz to 10 kHz
100K	1 kHz to 100 kHz
1M	10 kHz to 1 MHz
10M	100 kHz to 10 MHz

The FREQUENCY CONTROL adjusts the frequency to the least significant digit of the readout.

1.3.3 Main Output

The 50 Ω OUT is the output for the selectable waveform and dc voltage output. Maximum output is 30 V p-p into an open circuit; 15 V p-p into 50 Ω . There is a precision output attenuator calibrated in 20 dB steps to -60 dB with an overlapping vernier for an overall attenuation of -80 dB. Output impedance is 50 Ω . Short circuit current is 150 mA.

1.3.4 Sync Output

The SYNC OUT connector provides TTL compatible output level sync signal. Rise and fall times are less than 50 ns. The sync signal is a square waveform for symmetrical outputs and rectangular for asymmetrical outputs. Sync pulse polarity is 180° out of phase with the selectable output square wave and 90° out of phase with the sine and triangle waveforms.

1.3.5 DC Offset and DC Output

DC offset and dc output are controlled manually by a front panel control. The adjustable range is ± 10 Vdc into an open circuit (± 5 Vdc into 50 Ω) with peak signal and offset amplitude limited to ± 15 Vdc into an open circuit (± 7.5 Vdc into 50 Ω). Display will flash when peak amplitude plus offset exceeds generator limits. DC offset and output waveform are attenuated proportionately by the 60 dB step output attenuator.

1.3.6 Sweep/GCV Output

Sweep output is a 0 to nominal +5 V sawtooth when in continuous, triggered or gated mode, and runs at a frequency determined by the SWEEP TIME control. GCV (Generator Control Voltage) output is a 0 to nominal +5 V signal pro-

portional to the instantaneous frequency output. This GCV signal is present when the Model 147 is in any of the sweep modes.

1.3.7 Operational Modes

Continuous (CONT)

The Model 147 operates as a standard VCG (Voltage Controlled Generator). Frequency at the 50 Ω OUT connector is determined by front panel control settings in conjunction with the VCG input signal. Output of the internal sweep generator appears at the SWP/GCV OUT connector in this mode.

Triggered (TRIG)

Only one complete cycle of output appears at the 50 Ω OUT connector for each pulse applied to the TRIG IN connector or push of the MAN TRIG control. The cycle begins and ends at zero phase angle, which is zero volt or the offset base line voltage level. At least 1 V peak (and up to 50 V peak) is required for the trigger signal. TRIG IN is 10 k Ω , dc coupled.

GATED

Gated mode is the same as triggered mode except that output oscillations continue for the duration of the gating signal applied to the TRIG IN connector or push of the manual trigger. The output will be an integral number of cycles beginning and ending at zero phase angle, which is approximately zero volt.

Continuous Sweep (CONT SWP)

In continuous sweep, the main generator is swept by the internal sweep generator so that the signal frequency at the 50 Ω OUT connector is swept from a low frequency established by the front panel frequency controls to a high frequency determined by the SWEEP WIDTH control setting. Sweep width can be up to approximately 1000:1. Sweep rate, determined by the SWEEP TIME control, is 10 μ s to 100 s. GCV appears at the SWP/GCV connector.

Triggered Sweep (TRIG SWP)

Triggered sweep is the same as continuous sweep mode except that the output is swept only once for each pulse applied to the TRIG IN connector. During the time between sweeps, the main generator oscillates at a low frequency determined by the FREQUENCY CONTROL settings.

Sweep and Hold (SWP & HOLD)

In this mode, a gate signal at the TRIG IN connector causes the Model 147 to begin a frequency sweep. After sweeping to the high frequency (set by the SWEEP WIDTH control), the output holds at the high frequency as long as the gate signal is present. When the gate signal drops, the output returns to the frequency set by the front panel frequency controls.

Tone Burst

A tone burst can be accomplished in the gated mode by connecting the ramp output of the SWP/GCV OUT to TRIG IN. Tone burst rate, frequency and duration can be independently controlled.

1.3.8 Voltage Controlled Generator

VCG Control Range

The generator frequency can be controlled by an external voltage; e.g., five volts can vary the frequency 1000:1. Restrictions for linear operation are: frequency range selection is the upper frequency and the lower frequency is 1000 times below the frequency range selection; the required external signal for full voltage control is ± 5 V. Either restriction may be exceeded for nonlinear operation, but operation is not specified. Input impedance is 5 k Ω .

VCG Input Frequency

VCG Bandwidth 100 kHz
 VCG Slew Rate 2% of range per μ s

VCG Linearity

10 Hz to 100 kHz $\pm 0.2\%$
 0.001 Hz to 1 MHz $\pm 0.5\%$

1.3.9 Horizontal Precision

Frequency Readout Accuracy

0.01 Hz to 10 kHz $\pm(0.3\%$ of range ± 1 digit)
 10 kHz to 10 MHz $\pm(0.2\%$ of range ± 1 digit)

Time Symmetry

10 Hz to 100 kHz $\pm 0.5\%$
 0.01 Hz to 500 kHz $\pm 1.0\%$

1.3.10 Vertical Precision

Amplitude Readout Accuracy

1 Hz to 100 kHz $\pm(3\%$ of full output ± 1 digit)
 100 kHz to 10 MHz $\pm(5\%$ of full output ± 1 digit)

Sine Wave Frequency Response

Amplitude change with frequency is less than:

- 0.1 dB to 100 kHz
- 0.2 dB to 1 MHz
- 2.0 dB to 10 MHz

Step Attenuator Accuracy

± 0.25 dB per 20 dB step

Stability

Short Term $\pm 0.05\%$ for 10 minutes
 Long Term $\pm 0.25\%$ for 24 hours
 Percentages apply to amplitude, frequency, and dc offset.

Amplitude Symmetry

All waveforms (except pulse) are symmetrical about ground within $\pm 1\%$ of maximum peak to peak amplitude.

1.3.11 Purity

Sine Wave Distortion

10 Hz to 100 kHz Less than 0.5% (typically 0.25%)
 100 kHz to 1 MHz Less than 1.0%
 1 MHz to 10 MHz All harmonics are at least 28 dB down

Triangle Linearity

0.0005 Hz to 100 kHz Greater than 99%

Square Wave Rise and Fall Time

Less than 30 ns when terminated in 50 Ω load.

Total Aberrations

Less than 5%.

1.3.12 Environmental

Temperature

All specifications listed, except for stability, are for 25 $^{\circ}$ C $\pm 5^{\circ}$ C. For operation from 0 $^{\circ}$ C to 55 $^{\circ}$ C, derate all specifications by a factor of 2.

1.3.13 Mechanical

Dimensions

14 $\frac{1}{2}$ in. (368 mm) wide; 5 $\frac{1}{4}$ in. (133 mm) high; 14 $\frac{1}{2}$ in. (362 mm) deep.

Weight

12 lb (5.45 kg) net; 16 lb (7.26 kg) shipping.

Power

90 to 110 V, 105 to 125 V, 180 to 220 V or 210 to 250 V;
 50 to 400 Hz switchable; less than 50 watts.

SECTION 2

INSTALLATION AND OPERATION

2.1 MECHANICAL INSTALLATION

After unpacking the instrument, visually inspect all external parts for possible damage to knobs, connectors, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the unit. The shipping container and packing material should be saved in case reshipment is required.

2.2 ELECTRICAL INSTALLATION

2.2.1 Power Connection

Connect the ac line cord to the mating connector at the rear of the unit.

NOTE

Unless otherwise specified at the time of purchase, this instrument was shipped from the factory with the power transformer connected for operation on a 105 - 125 Vac line supply and with 1/2 amp, 115 V line fuse.

Conversion for 90 to 110 V, 180 to 220 V or 210 to 250 V operation requires resetting two switches on the inside of the rear panel. To reset the switches, unscrew the four captive screws securing the rear panel, and remove the rear panel. Set the two switches and select the fuse for the ac line voltage according to the following table.

AC Line Voltage	Switch A	Switch B	Fuse (SB)
90 - 110	115	LO	½ amp
105 - 125	115	HI	½ amp
180 - 220	230	LO	¼ amp
210 - 250	230	HI	¼ amp

2.2.2 Signal Connections

Use 50Ω shielded cables equipped with female BNC connectors to distribute all signals when connecting this instrument to associated equipment.

2.3 OPERATING CONTROLS

The operating controls and electrical connections for the Model 147 are shown in Figure 2-1. The listing below discusses each control and its function.

- POWER Switch** – Power is on when this push button switch is in, and off when extended.
- READOUT FUNCTION FREQ Push Button** – When this push button is depressed, it causes the signal frequency at the 50Ω output to be displayed.
- READOUT FUNCTION PK AMPL, MAX/MIN Push Buttons** – MAX push button, when depressed, causes the maximum peak signal voltage to be displayed; MIN causes the minimum peak voltage to be displayed.
- Display and Readout Functions** – A fully automatic, direct reading display of the generator frequency and peak voltage outputs. When PK AMPL MAX or MIN push button is depressed, maximum or minimum peak voltage, respectively, is displayed. When the FREQ push button is depressed, the frequency is displayed. This is a 3½ digit display with sign, decimal point, and unit of measure. The decimal point is automatically positioned and the correct unit of measure automatically displayed. The three least significant digits each can be 0 through 9 while a fourth digit, the most significant, can be 0 or 1 only. The display is updated three times a second. The voltmeter is updated once every cycle.

NOTE

- Display voltage is output voltage when the 50Ω output connector is properly terminated with a 50Ω load.*
- For operation in the 0.01 Hz or 0.1 Hz range, amplitude display is instantaneous voltage value in a tracking mode rather than peak voltage. To set peak amplitudes, select a higher frequency range, set the peaks, then*

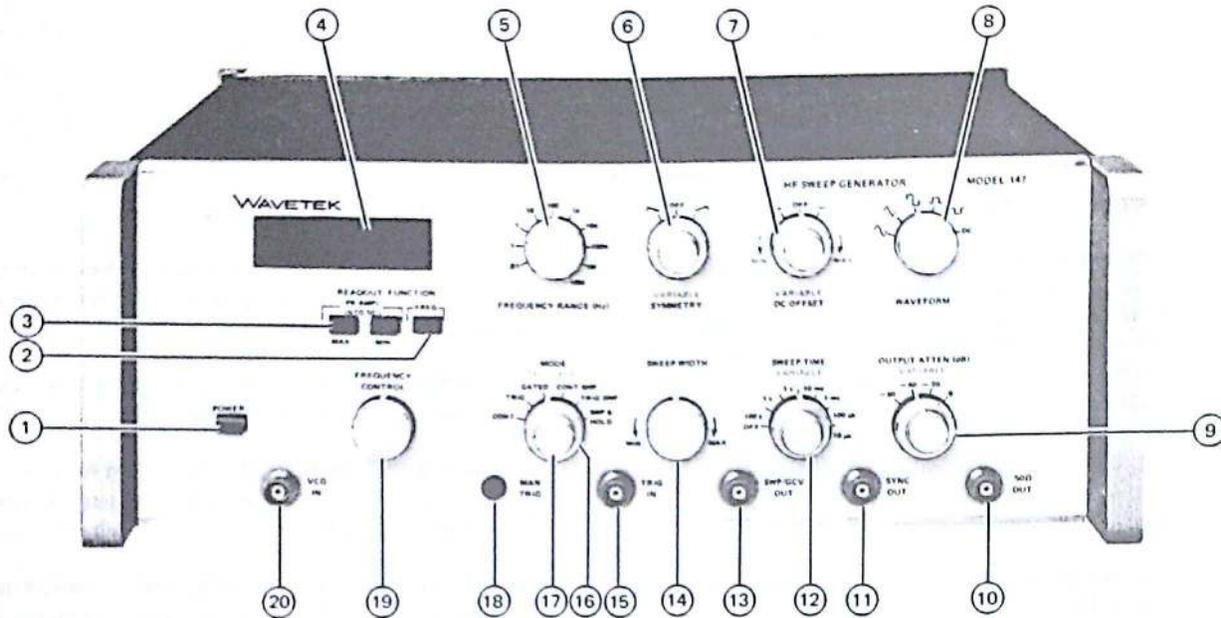


Figure 2-1. Operating Controls

return to the lower frequency range. In the 1 Hz through 10 MHz ranges, the amplitude display is updated once every cycle.

5. **FREQUENCY RANGE (Hz) Switch** – Selects one of the 10 frequency ranges. The range number represents the maximum frequency obtainable for the selected range. Some overranging exists.
6. **SYMMETRY Control** – The large knob selects a right-hand or left-hand waveform time-symmetry. The small VARIABLE knob varies the waveform time-symmetry up to 19:1 or 1:19. When these controls are used, the frequency range is divided by approximately ten; however, the readout shows actual output frequency.
7. **DC OFFSET Control** – Adjusts dc base line offset above (+) or below (–) signal ground; or, when DC is selected on the WAVEFORM switch, adjusts dc voltage at the 50Ω output. The large knob selects polarity, and the small VARIABLE knob adjusts voltage up to

± 10 Vdc into an open circuit (± 5 Vdc into 50Ω load).

Peak circuit output is limited to ± 15 Vdc into an open circuit (± 7.5 Vdc into a 50Ω load). (The OUTPUT ATTEN (dB) switch (9) affects dc offset as well as waveform amplitude.)

8. **WAVEFORM Selector** – This selects the waveform that appears at the 50Ω output. The waveforms are sine \sim , triangle ∇ , square \square , positive going pulse $\text{—} \uparrow$, negative going pulse $\text{—} \downarrow$, and DC voltage. See Figure 2-2 for phase and polarity relationships.
9. **OUTPUT ATTEN (dB) Control** – The large knob attenuates the 50Ω output from 0 dB (15 V p-p max into 50Ω load) to –60 dB (15 mV p-p into 50Ω) in 20 dB steps. The small VARIABLE knob may be used to continuously change the amplitude between the detented steps up to 40 dB. Maximum attenuation is –80 dB (1.5 mV p-p into 50Ω). The OUTPUT ATTEN (dB) VARIABLE control is inoperative when DC is selected on the WAVEFORM switch.

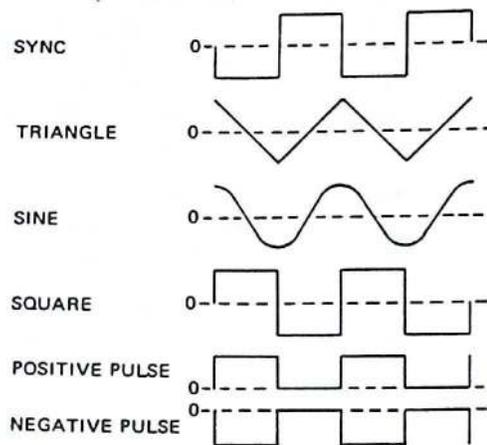


Figure 2-2.


 Selectable and Sync Signal Phase and Polarity Relationships

10. **50Ω OUT** — This is the selected waveform output for the main generator or a dc voltage. The Model 147 operating into an open circuit provides 30 V maximum, or into a 50Ω load provides a 15 V p-p output. The displayed amplitude is correct for the 50Ω termination.
11. **SYNC OUT** — This is a square wave (or rectangular if SYMMETRY control is in use) with the same frequency and opposite polarity of the selectable square wave at the 50Ω output. Amplitude into an open circuit is greater than 4 V p-p (2 V p-p into 50Ω). Rise and fall times are less than 50 ns. See Figure 2-2 for phase and polarity relationships.
12. **SWEEP TIME Control** — When in any of the sweep modes, this control determines the duration of the sweep cycle by controlling the frequency of the sweep generator, which is independent of the frequency of the main generator. The large knob selects the range, which is bounded by the time values printed on the panel on either side of the detent setting. The small VARIABLE knob varies the time throughout the range; when full cw, the sweep time is equal to the time printed to the right of the detent line; rotating the VARIABLE knob ccw increases the sweep time at least by 10:1 and up to 100:1. The full ccw position is not calibrated.
13. **SWP/GCV OUT** — When the generator is in CONT, TRIG, or GATED mode, this output provides a fixed 0 to nominal +5 V sawtooth. The frequency of this sawtooth is controlled by SWEEP TIME. When the generator is in CONT SWP, TRIG SWP, or SWP & HOLD mode, the output becomes the generator control voltage (GCV) that is proportional to main generator frequency.

This voltage may be used to drive the X-axis of an oscilloscope in the X-Y mode or the X-axis of an X-Y recorder, thus converting the recording device from the time to the frequency domain.
14. **SWEEP WIDTH Control** — Determines the amount of sweep when in one of the sweep modes by varying the amplitude of the sweep signal.
15. **TRIG IN** — A dc coupled input with 10 kΩ input impedance. The TRIG LEVEL control adjusts the sensitivity of the generator to this input signal. Sensitivity can be varied to accept signals greater than 1 V to greater than 7.5 V, positive or negative voltage. Maximum voltage is 50 V.
16. **MODE Switch** — Selects the operating mode of the main generator (50Ω OUT) as follows:
 - a. **CONT Mode** — The generator operates at the selected frequency and runs continuously. (The SWP/GCV output is a fixed 0 to 5 V ramp in this and the following two modes.)
 - b. **TRIG Mode** — The generator will give one complete cycle of output when the MAN TRIG is pressed or for each pulse applied to TRIG IN. The cycle begins and ends at zero phase, which is zero volts or dc voltage level offset. Since the internal sweep operates independently it can be used to provide a repetitive trigger signal by connecting the SWP/GCV OUT to TRIG IN.
 - c. **GATED Mode** — Operates the same as TRIG MODE except that the generator will continue to have output for the full time that the MAN TRIG switch is held down or the gate signal at TRIG IN exceeds the gating level set by the TRIG LEVEL control.
 - d. **CONT SWP Mode** — The main generator operates continuously and repetitively sweeps from the minimum to maximum frequency as determined by the sweep controls. See Figure 2-3. (In this mode as in the following two sweep modes, SWP/GCV OUT becomes the generator control voltage (GCV) which is proportional to the instantaneous frequency of the generator.)
 - e. **TRIG SWP Mode** — The main generator oscillates at the start or low frequency until a trigger signal

is applied. The frequency then sweeps to the maximum frequency as determined by SWEEP WIDTH and then returns to the low frequency until another trigger is applied. See Figure 2-3.

- f. **SWP & HOLD Mode** – When gated, the generator sweeps to the high frequency and remains at the high frequency for the duration of the gate signal. When the gate falls, the generator returns to the low frequency. See Figure 2-3.

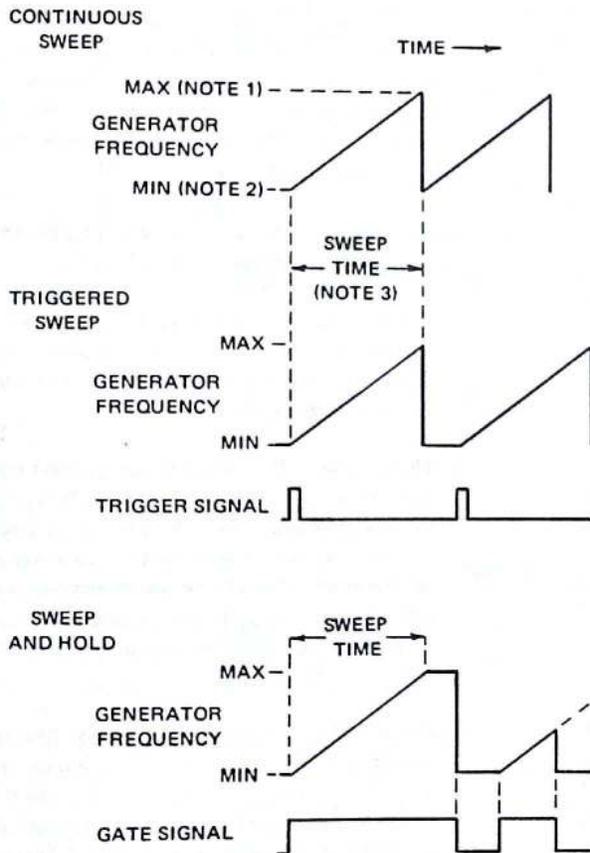

NOTES

1. Set by SWEEP WIDTH control.
2. Set by FREQUENCY control.
3. Set by SWEEP TIME control.

Figure 2-3. Sweep Modes

17. **TRIG LEVEL Control** – Adjusts the sensitivity of the TRIG IN circuitry. When full ccw, approximately +7.5 V or greater voltage is required for triggering.

2-4

In the full cw position, approximately -7.5 V or greater voltage is required for triggering. By rotating the knob, it is possible to manually trigger the generator. In the GATED mode, the generator will begin to run continuously as the control is rotated cw past the midpoint. When using the MAN TRIG, this control must be ccw of the midpoint.

18. **MAN TRIG** – When in TRIG mode, pressing this switch causes one cycle of the selected waveform to appear at the 50Ω output. When in GATED mode, the waveform is continuous while the switch is pressed. The TRIG LEVEL control must be ccw from midpoint for proper MAN TRIG operation.
19. **FREQUENCY CONTROL** – A combination coarse and fine control used in conjunction with the FREQUENCY RANGE switch and the display to select the desired frequency. The fine or vernier portion of the FREQUENCY CONTROL covers approximately 30 degrees of knob rotation. After the knob has been rotated through the vernier range, further rotation is in the coarse control range. Reversing the direction of rotation immediately places the knob back in the 30 degrees of vernier range again. The usual procedure is to rotate the knob just past the desired frequency, reverse the direction of rotation, and use the fine control range to accurately select the desired frequency.
20. **VCG IN** – This connector allows external control of frequency. With 0 volt in, the generator frequency (50Ω OUT) is determined by the frequency range selected and the FREQUENCY CONTROL setting and is displayed on the LED readout. A positive VCG voltage will increase this frequency, and a negative voltage will decrease the frequency. Input impedance is $5\text{ k}\Omega$. Restrictions for linear operation are (1) FREQUENCY RANGE selection is the upper frequency and the lower frequency is 1000 times below the FREQUENCY RANGE selection and (2) 5 V is the maximum voltage input. Either restriction may be exceeded for nonlinear operation, but operation is not specified.

2.4 INSTALLATION CHECKS

The following procedures are used to determine that the instrument is operating properly. Field calibration and check-out instructions are given in Section 4 to ensure that the instrument complies with the specifications. If the instrument is not operating properly or within specifications, refer to the warranty on the back of the title page.

Use a Tektronix Model 454 oscilloscope or equivalent when performing these installation checks.

1. After connecting the line cord to the ac line, set the front panel controls and switches as follows:

POWER	In
FREQUENCY RANGE	1K
SYMMETRY	OFF
DC OFFSET	OFF
WAVEFORM	
OUTPUT ATTEN (dB)	0
OUTPUT ATTEN (dB) VARIABLE	Fully Clockwise
SWEEP TIME	OFF
MODE	CONT
READOUT FUNCTION FREQ	In
2. Connect the 50Ω OUT connector with a shielded cable terminated in a 50 ohm load to the oscilloscope and set FREQUENCY CONTROL to obtain a 1 kHz reading on the 147 display.
3. Press the PK AMPL MAX push button. Approximately +7.5 V should be displayed. Press MIN; approximately -7.5 V should be displayed. Observe the oscilloscope and verify the 1 kHz sine wave and peak voltages.
4. Set the OUTPUT ATTEN (dB) VARIABLE control full ccw. Approximately -0.7 V should be displayed. Compare with oscilloscope values.
5. Check minimum and maximum amplitudes of sine  and triangle  waveforms. They should be approximately plus and minus 7.5 V at 0 dB.
6. Check minimum and maximum amplitudes of positive and negative pulse waveforms  and . They should be approximately +7.5 V, 0 V and 0 V, -7.5 V, respectively at 0 dB.
7. Set the OUTPUT ATTEN (dB) VARIABLE control full clockwise and the WAVEFORM switch to  and press the FREQ push button. Adjust the FREQUENCY CONTROL for a 1 kHz readout.
8. Switch the FREQUENCY RANGE control to check range-to-range tracking accuracy. The 147 should read approximately the FREQUENCY RANGE value. Verify the frequencies with the oscilloscope.
9. Select the square waveform and rotate the SYMMETRY switch to  and the VARIABLE control full clockwise. Waveform asymmetry should be approximately 19:1. Rotate the VARIABLE control full ccw; the waveform should be symmetrical. Verify that the other switch position and VARIABLE control give approximately 1:19 waveform asymmetry.
10. Turn the SYMMETRY switch to OFF; press the PK AMPL MAX push button and select DC on the WAVEFORM switch.
11. Set the DC OFFSET switch to + and rotate the VARIABLE control full clockwise. The readout should be approximately +5 V. Verify the reading with the oscilloscope.
12. Set the DC OFFSET switch to -. Readout should be approximately -5 V. Verify the reading with the oscilloscope.
13. Rotate the OUTPUT ATTEN (dB) switch through each position. Verify the attenuation on the oscilloscope. (The VARIABLE control is inoperative for DC.)
14. Turn the DC OFFSET switch to OFF and connect the SWP/GCV OUT to the oscilloscope without a load. With the SWEEP TIME switch set to 10 ms/1 ms and the VARIABLE control set full clockwise (1 ms sweep), verify that the SWP/GCV OUT waveform is approximately a 1 kHz sawtooth. Set the VARIABLE control full ccw. The SWP/GCV OUT waveform should be approximately 100 Hz.
15. Check the SWP/GCV OUT frequency in all positions of the SWEEP TIME switch and at both the cw and ccw ends of the VARIABLE control.
16. Use a shielded cable equipped with BNC connectors to connect SWP/GCV OUT to TRIG IN and connect the oscilloscope to 50Ω OUT. Set the MODE switch to TRIG, the WAVEFORM switch to  and the SWEEP TIME to 1 s/0.1 s. Rotate the TRIG LEVEL control while observing the oscilloscope. One cycle of the waveform should be displayed each time the sweep output triggers the main generator.
17. Set the MODE switch to GATED and rotate the TRIG LEVEL control while observing the oscilloscope. The multiple cycles of the selected output waveform should appear when the TRIG LEVEL control is rotated full cw and disappear when the control is turned full ccw.
18. This step sets low and high frequencies of the sweep range. Disconnect the cable to TRIG IN. Set the MODE switch to SWP & HOLD, the SWEEP WIDTH control full clockwise, the TRIG LEVEL control to 9 o'clock and the FREQUENCY RANGE switch to 10K. Set the SWEEP TIME switch to 100 s/1 s and the SWEEP TIME VARIABLE control full clockwise. Set the output frequency to 0.1 kHz with the FREQUENCY CONTROL. Rotate the TRIG LEVEL control to 3 o'clock and set the SWEEP WIDTH control

for a 10 kHz readout. Repeat the low and high frequency settings because of interaction. Set the MODE switch to CONT SWP. Set the SWEEP TIME VARIABLE control full ccw. The displayed output should sweep from 100 Hz to 10 kHz.

19. Set the MODE switch to TRIG SWP and press the MAN TRIG switch while observing the oscilloscope. Displayed output should sweep once from 100 Hz to 10 kHz.
20. Connect the SWP/GCV OUT connector to the oscilloscope input without a load. Set the MODE switch to CONT, SWEEP TIME switch to 10 ms/1 ms and the SWEEP TIME VARIABLE control full clockwise. The oscilloscope should display approximately a 1 kHz sawtooth waveform.
21. Set the MODE switch to TRIG and then to GATED. The same 1 kHz sawtooth waveform should be present in these modes.
22. Set the MODE switch to CONT SWP, then TRIG SWP, then SWP & HOLD. The SWP/GCV OUT signal should be a GCV signal proportional to the instantaneous frequency of the main generator.

2.5 OPERATING PROCEDURE

No preparation for operation is required beyond the completion of the initial installation checks given in Paragraph 2.4. A one-half hour warm-up period should be allowed for the associated equipment to reach a stabilized operating temperature, and for the Model 147 to attain stated accuracies.

2.5.1 Operation as a Function Generator

1. Properly terminate the 50Ω OUT connector for accurate voltage readings.
2. Select desired output waveform using the WAVEFORM switch.
3. Set MODE switch to CONT.
4. Press the FREQ push button; set the FREQUENCY RANGE switch to the desired range, and set FREQUENCY CONTROL for the desired frequency. (For frequency readout press the READOUT FUNCTION FREQ push button.)
5. Set the OUTPUT ATTN (dB) switch for the desired output level and amplitude. (For amplitude readout, press the READOUT FUNCTION AMPL MAX or MIN push button.) For reference, Table 2-1 gives the approximate output amplitude levels at attenuator

settings. The output levels of the positive and negative pulse waveforms are one half of these levels. The maximum amplitude voltage is ± 7.5 volts.

Table 2-1

Attenuator Position	Peak to Peak Output into 50Ω Load	
	Maximum (variable full cw)	Minimum (variable full ccw)
0 dB	15 V	1.5 V
-20 dB	1.5 V	150 mV
-40 dB	150 mV	15 mV
-60 dB	15 mV	1.5 mV

6. With the DC OFFSET and SYMMETRY controls turned to OFF, the output waveform should be a symmetrical waveform oscillating around a zero dc reference point (except when a positive or negative pulse has been selected).
7. To add dc offset, first set the DC OFFSET control for the polarity of dc offset desired. Next, change the WAVEFORM switch to DC position and, using the readout display, adjust the DC OFFSET VARIABLE control until the desired amount is read on the display. Return the WAVEFORM switch to the selected waveform position. If an excessive amount of dc offset is used, waveform clipping may be observed and the display will flash. The sum of peak waveform voltage and the dc offset cannot exceed the maximum rated output of the generator. For example, on the 0 dB attenuator setting, the maximum output is 15 V peak-to-peak or 7.5 V peak above and below zero volt. Therefore, offset plus the peak voltage cannot exceed 7.5 V peak. See Figure 2-4.

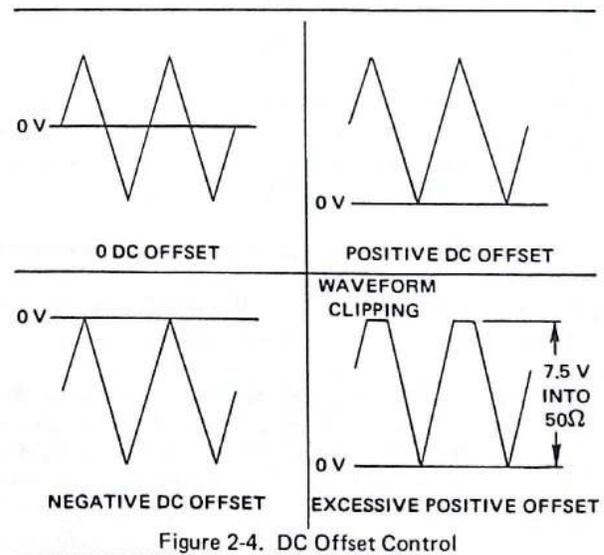


Figure 2-4. DC Offset Control

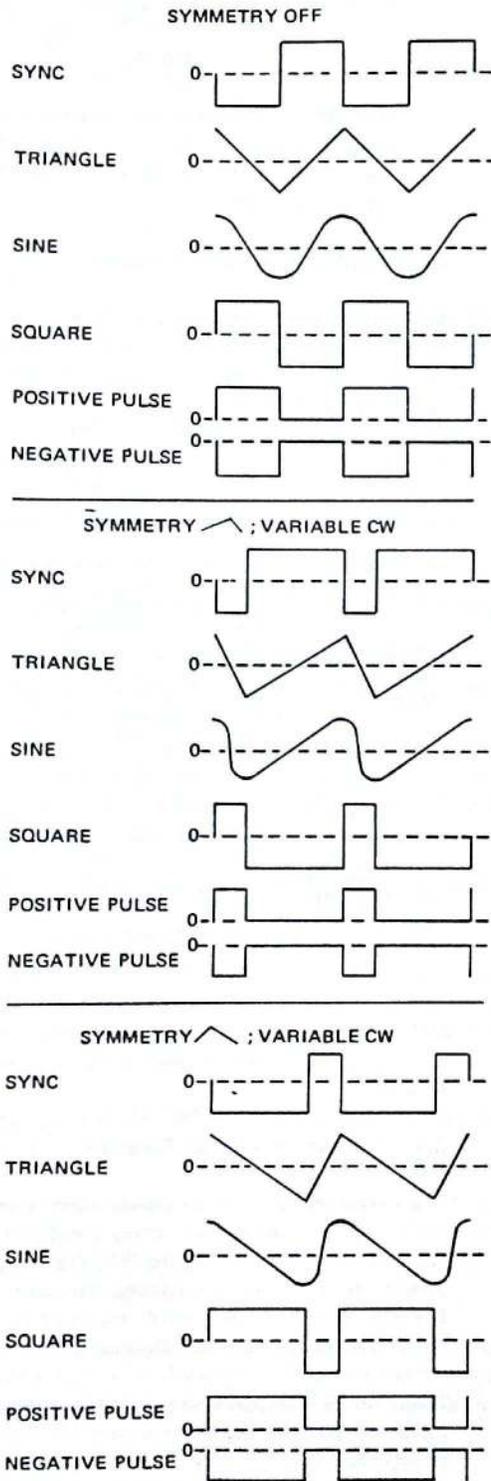


Figure 2-5. Waveform Phasing and Symmetry Control

- Set SYMMETRY control for desired symmetry or asymmetry. The symmetry control can be used to develop ramp waveforms with variable rise/fall ratios and single or multiple pulses with variable duty cycles. By using the sine wave with asymmetry, controllable sine distortion can be developed. Figure 2-5 shows the effect of this control on output waveforms. The frequency of an asymmetrical waveform will be approximately a factor of 10 lower than the symmetrical waveform frequency output.

2.5.2 Operation as a Voltage Controlled Generator

The VCG input connector can be used to externally control the frequency of the generator. If a positive voltage is applied to the VCG input terminal, the frequency will increase from the FREQUENCY CONTROL setting. A negative voltage will cause the frequency to decrease from the FREQUENCY CONTROL setting.

A 5 V excursion in VCG voltage can vary the frequency up to 1000:1 in each range as follows:

Range	Limits for Linear Operation	
	Lower	Upper
0.01	0.01 mHz	0.01 Hz
0.1	0.1 mHz	0.1 Hz
1	1 mHz	1 Hz
10	10 mHz	10 Hz
100	100 mHz	100 Hz
1K	1 Hz	1 kHz
10K	10 Hz	10 kHz
100K	100 Hz	100 kHz
1M	1 kHz	1 MHz
10M	10 kHz	10 MHz

As shown, the range setting is the upper limit. This limit may be exceeded as there is a 10 to 20% overranging capability; however, overranging will be nonlinear and the operation is unspecified. Operation below the lower limit of any range setting is not recommended.

The nomograph of Figure 2-6 shows the characteristics of the VCG circuit. Column A gives a factor which is multiplied by the FREQUENCY RANGE to give the frequency shown in the readout. (Example: Column A X FREQUENCY RANGE = Readout Frequency or 0.3 X 100 = 30.0 Hz.) Column B is the voltage applied to the VCG IN. Column C (like A) is the factor which is multiplied by the FREQUENCY RANGE to give the frequency shown in the readout after the VCG voltage has been applied.

EXAMPLE:

Freq Range	Readout	Column A	Column B	Column C	Readout
100	30.0 Hz	0.3	+3.5 V	1	100 Hz
100	30.0 Hz	0.3	-1.5 V	0.001	0.1 Hz

NOTE

A further increase in VCG voltage will cause nonlinear operation as the range value will be exceeded.

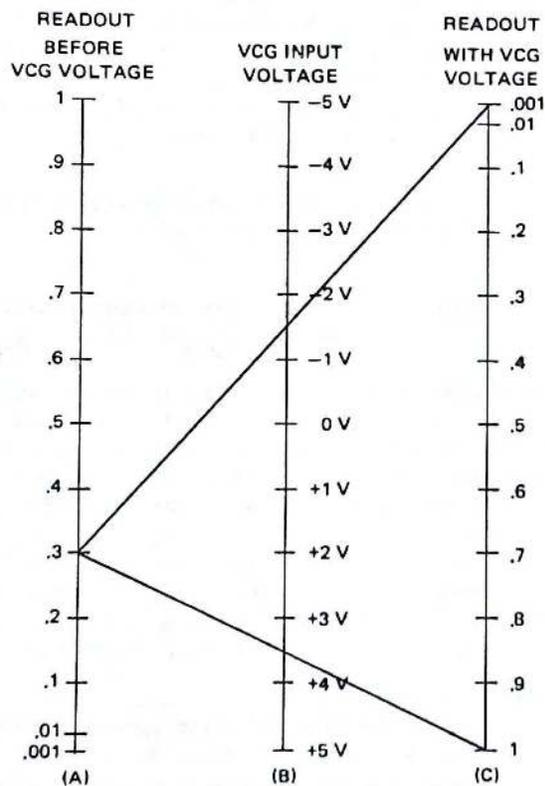


Figure 2-6. VCG Voltage-to-Frequency Nomograph

2.5.3 Operation as a Triggered Generator

1. Adjust the generator as for continuous operation (Paragraph 2.5.1); then set the MODE switch to TRIG.
2. If manual triggering is desired, set the TRIG LEVEL control (small knob) to the 11 o'clock position. For external triggering, set the TRIG LEVEL control to exclude undesirable trigger levels.

3. Operate the MAN TRIG switch or apply a 1 to 50 V signal to the TRIG IN connector.

NOTE

The SWP/GCV output may be used as a repetitive trigger source. In this case, the SWEEP TIME control determines the repetition rate of the triggered output signal.

2.5.4 Gated or Tone Burst Operation

With the generator adjusted as in trigger operation, change the MODE control to GATED position. The generator output will then be a burst of cycles. If the trigger is the SWP/GCV OUT sawtooth waveform, the duration of the burst is adjustable by the TRIG LEVEL control (see Figure 2-7). Notice that the last cycle gated is completed even if the gate signal is removed. In manual gating, the tone burst continues as long as the manual switch is pressed.

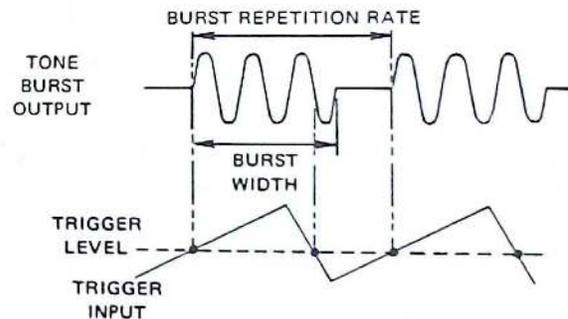


Figure 2-7. Gated Operation

The generator can be made to free run in this mode at certain settings of the trigger level control. By resetting the TRIG LEVEL control, normal gated operation can be re-established.

2.5.5 Operation as a Sweep Generator

The operation of the three sweep modes (continuous with sweep, triggered sweep, and sweep and hold) can be visualized by the graphs in Figure 2-3. Operation consists of proper terminations, and setting the low and high end frequencies, sweep time, signal amplitude and sweep mode. All are covered in the following example.

These modes together with the GCV output can be used to perform frequency response tests and drive an X-Y recorder or oscilloscope for display of the frequency response. As an example, Figure 2-8 shows a circuit under test which is to be swept and the frequency response of the circuit displayed

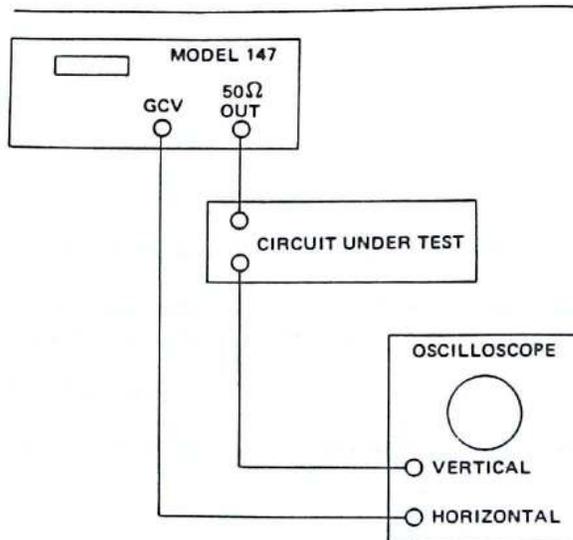


Figure 2-8. Frequency Response Test
Using an Oscilloscope in the X-Y Mode

on the oscilloscope. Figure 2-9 shows a similar setup using an X-Y recorder. The following procedure is used to set up the Model 147 as a sweep generator.

1. Terminate the 50Ω output with 50Ω . Setup as in Figure 2-8 or 2-9 except bypass the circuit under test for this setup procedure.
2. Set the MODE switch to SWP & HOLD, the SWEEP TIME switch to OFF, and TRIG LEVEL to 9 o'clock.
3. Depress the READOUT FUNCTION FREQ push button and use the FREQUENCY RANGE switch and the FREQUENCY CONTROL switch to obtain the desired low frequency on the display.
4. Set the SWEEP TIME controls for the desired sweep time.
5. Rotate the TRIG LEVEL control to 3 o'clock. The frequency sweeps to the top and holds. Then rotate the SWEEP WIDTH control until the desired top frequency is displayed.
6. Rotate the TRIG LEVEL control back to 9 o'clock and reset the low frequency. Check the top frequency again and return the TRIG LEVEL control back to 9 o'clock.

7. Use the READOUT FUNCTION PK AMPL push buttons and the display and the OUTPUT ATTEN (dB) controls to obtain the desired signal amplitude.
8. With the circuit under test bypassed, and the oscilloscope, if used, in the external horizontal mode, adjust the horizontal position so that the trace is positioned on the left reticle on the screen or chart.
9. Rotate the TRIG LEVEL control to 3 o'clock and adjust the horizontal gain of the oscilloscope or recorder so that the waveform is positioned on the extreme right hand reticle, or any convenient reticle of the screen or chart for proper scaling.
10. Set the SWEEP TIME controls as desired for sweep duration. Sweep fast for the best oscilloscope presentation and sweep slow if the X-Y recorder is used.
11. For continuous sweep, rotate the MODE switch to TRIG. For triggered sweep or sweep and hold operation, adjust the TRIG LEVEL control to 9 o'clock for manual triggering or gating, or adjust as desired for external triggering or gating.
12. Insert the circuit to be tested as in Figures 2-8 or 2-9 and observe the frequency response characteristics shown on the oscilloscope or recorder.

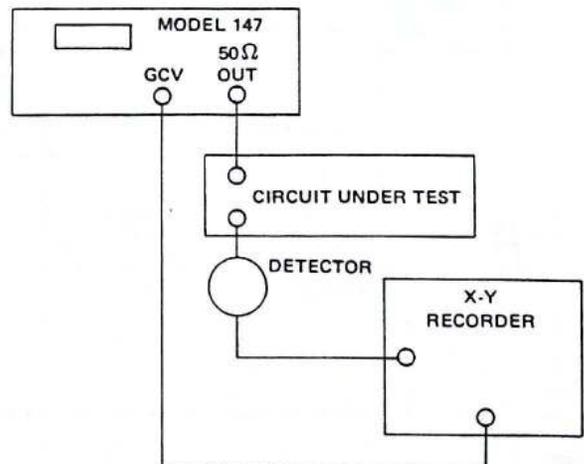


Figure 2-9. Frequency Response Test Using an X-Y Recorder

SECTION 3

CIRCUIT DESCRIPTION

3.1 SIMPLIFIED BLOCK DIAGRAM ANALYSIS

This paragraph describes, briefly, the major circuit elements and their relationship to one another.

3.1.1 Main Generator

Refer to Figures 3-1 and 3-2 when reading this description.

As shown in Figure 3-1, the VCG summing amplifier sums the currents from the FREQUENCY CONTROL, vernier, and VCG IN connector. The VCG summing amplifier is an inverting amplifier whose output voltage is used to control a positive current source and a negative current source. For symmetrical output waveforms, the currents from the two current sources are equal and directly proportional to the voltage of the VCG summing amplifier output. The diode

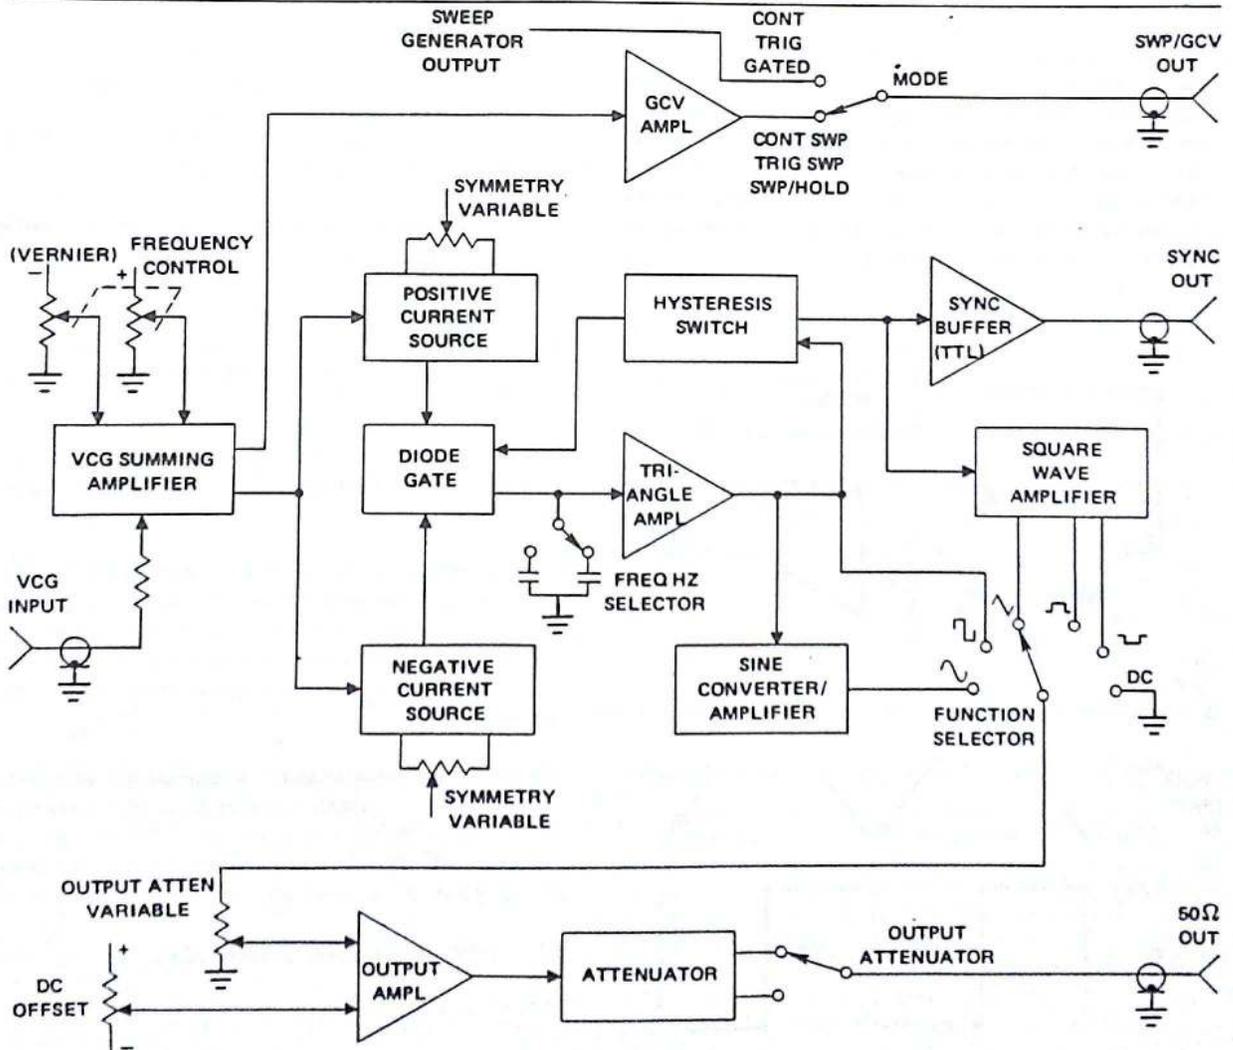


Figure 3-1. Main Generator Block Diagram

gate, which is controlled by the hysteresis switch, is used to switch the positive current or the negative current to the timing capacitor selected by the FREQUENCY RANGE (Hz) selector. If the positive current is switched into the timing capacitor, the voltage across the capacitor will rise linearly to generate the triangle rise transition. If the current is negative, the voltage across the timing capacitor will fall linearly to produce the fall transition.

The triangle amplifier is a unity gain amplifier whose output is fed to the hysteresis switch as well as to the sine converter. The hysteresis switch has two voltage limit points (+1.25 V and -1.25 V).

During the time the output voltage of the triangle amplifier is rising, the output voltage of the hysteresis switch is positive. But when the output voltage of the triangle amplifier reaches +1.25 V, it triggers the hysteresis switch causing the switch output to go negative. Once the control voltage into the diode gate becomes negative, it will switch the positive current out and switch the negative current in to the timing capacitor, so that the voltage across the capacitor will reverse, starting a linear decrease of the waveform. When the decreasing voltage reaches -1.25 V, the output of the hysteresis switch will switch back to positive, reversing the process. This action generates the triangle waveform as

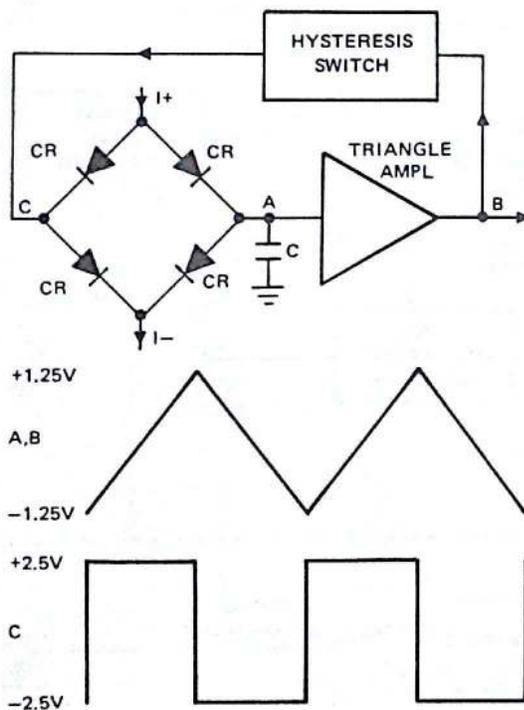


Figure 3-2. Basic Generator Timing Diagram

shown in Figure 3-2. Since the output of the hysteresis switch is a square wave, the result is simultaneous generation of a square wave and a triangle wave at the same frequency.

The output frequency is determined by the magnitude of the capacitor selected by the FREQUENCY RANGE (Hz) selector and the magnitude of the positive and negative current sources. Since the current sources are linearly proportional to the control voltage of the VCG circuit, the output frequency will also be linearly proportional to the control voltage.

If the current of the negative current source is decreased by 19 times, the fall time of the triangle will be 19 times longer than the rise time of the triangle, resulting in an unsymmetrical waveform and a division of the frequency by a factor of 10. Gradually increasing the current from the negative current source and decreasing the current from the positive current source in such a way that the period for the triangle to complete one cycle remains constant, the symmetry of the output waveform can be continuously varied while the frequency is held constant.

The output of the hysteresis switch is fed to the sync buffer and also the square wave amplifier. The square wave amplifier consists of a shaping circuit which limits the output swing to ± 1.25 volts. For positive pulse outputs, it limits the output voltage swing from -1.25 V to 0 V; and for negative pulse outputs, it limits the output swing from 0 V to +1.25 V.

The output signal from the triangle amplifier is applied to the sine converter, consisting of a sine shaping circuit and a sine amplifier.

The sine, triangle, square, positive pulse, or negative pulse is fed to the output amplifier through the WAVEFORM selector switch and the OUTPUT ATTEN (dB) VARIABLE control. The output amplifier is an inverting amplifier whose output is fed into a step attenuator and then to the output BNC connector.

The attenuator consists of three pi attenuators, each having a 50 ohm input impedance and a 50 ohm output impedance. There is one -20 dB attenuator, one -40 dB attenuator, and one -60 dB attenuator. These attenuators provide 20 dB steps of attenuation, from 0 dB to -60 dB.

3.1.2 Sweep Generator and Trigger Logic

CONTINUOUS MODE

In this mode, both the main generator and the sweep generator operate independently. As shown in Figure 3-3,

the sweep generator is a passive integrator with a voltage controlled current source. The output of the sawtooth amplifier changes the states of both the peak and zero detectors when either the peak or the zero limit is reached, thus switching on and off the current source output. The result of this charging and discharging of the timing capacitor is a continuous generation of a sawtooth waveform.

The charging and discharging rate of the timing capacitor, and also the repetition rate of the sawtooth waveform, are proportional to the amount of current fed into the capacitor and the size of the capacitor. The amount of current output is proportional to the controlling voltage and the current programming resistor. Thus, the repetition rate is controlled by the SWEEP TIME VARIABLE control and the SWEEP TIME range selector switch.

The current source switch provides a shunt path to signal ground for the timing capacitor when the sawtooth waveform is in the negative slope region. Switching action is activated by the peak detector and the zero detector outputs. The sawtooth amplifier is a non-inverting, high input impedance, high slew rate amplifier providing low output impedance and complete isolation for the passive integrator.

The peak and zero detectors accomplish detection of both extremes of the sawtooth waveform. The outputs of these two detectors, in conjunction with other transistor switches, cause the current source switch to place a shunt path across the timing capacitor or remove the shunt path. Thus, the operational loop is completed for the continuous mode operation of the sweep generator.

TRIGGERED OR GATED MODE

Refer to Figure 3-4. In both the triggered and the gated modes, the main generator and the sweep generator operate independently.

When this instrument is in the TRIG mode and ready, the main generator diode gate is switched off by the trigger gate control, and the timing capacitor is discharged through the shunt path. When a trigger signal arrives at the trigger gate control, the control flip-flop changes the state, opening the diode gate. Current flows into the timing capacitor, allowing the passive integrator to generate a triangle waveform. The control flip-flop is reset by the square wave from the sync amplifier when the proper phase triggers the flip-flop. The flip-flop output, in conjunction with the level-

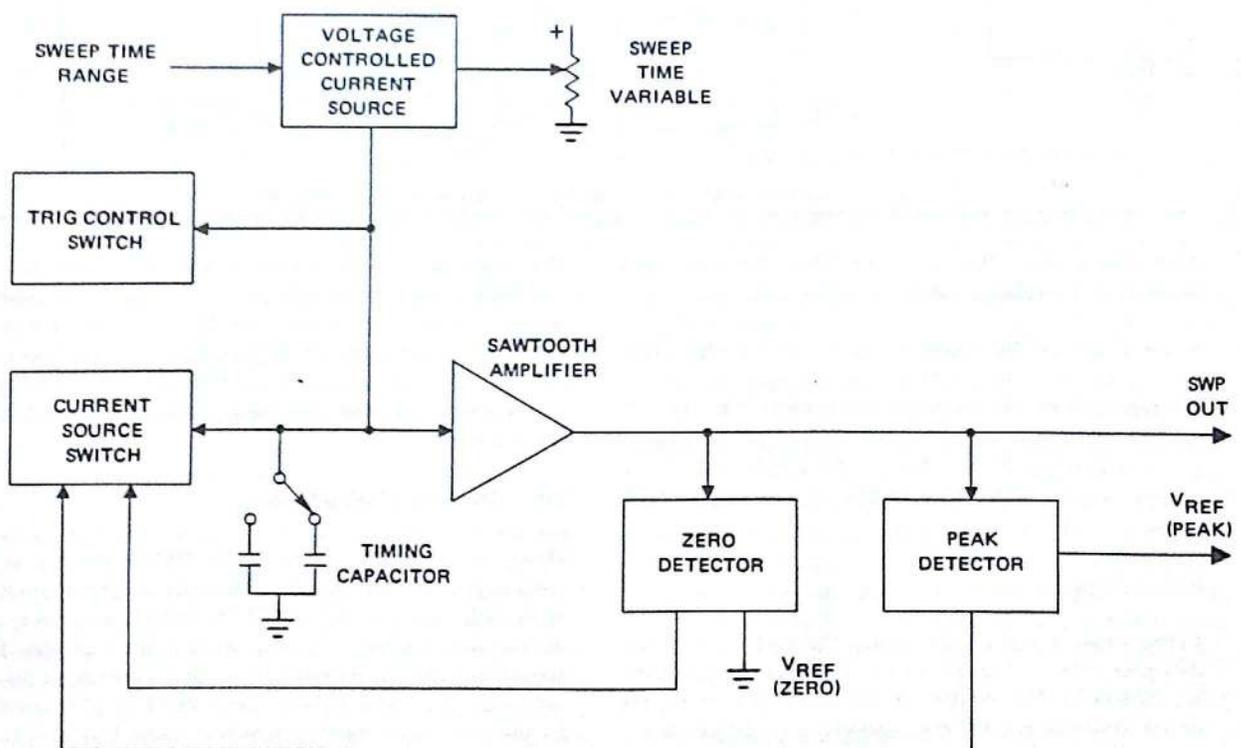


Figure 3-3. Sweep Generator Block Diagram

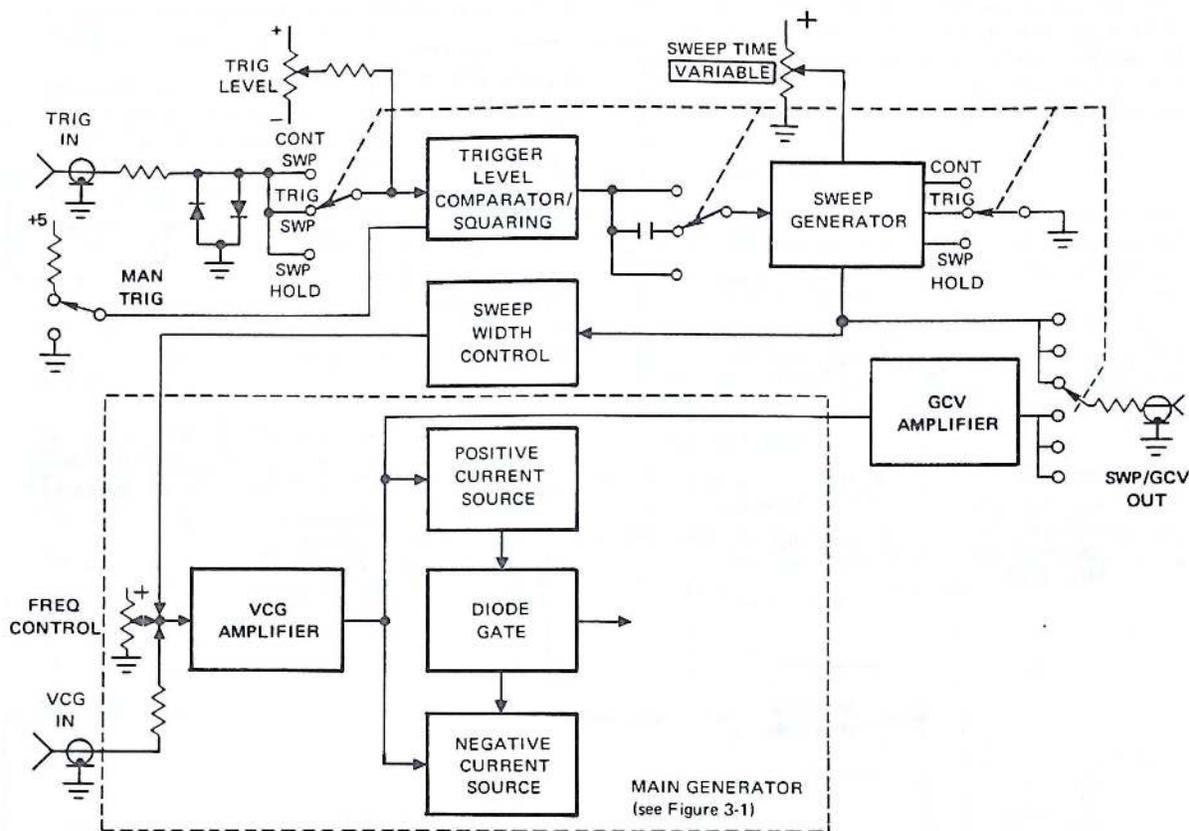


Figure 3-5. Sweep Generator Continuous Sweep, Triggered Sweep, and Sweep and Hold Mode Block Diagram

the basic frequency is set to less than 1/100 of the maximum frequency in the selected range. The swept output waveform repeats for as long as the MODE switch is set to CONT SWP, SWEEP TIME switch and SWEEP TIME VARIABLE control determine the sweep repetition rate.

(b) Triggered Sweep Mode

Refer to Figure 3-5. In the TRIG SWP mode, the main generator runs continuously at the minimum frequency set by the FREQUENCY CONTROL and the FREQUENCY RANGE (Hz) selector. The sweep generator is, initially, in a standby condition. When an input trigger signal is applied at the TRIG IN connector, or the MAN TRIG is depressed, the output of the trigger level comparator/squaring circuit changes the state of the trigger/gate control circuit. The output of the trigger level comparator/squaring circuit is coupled through a capacitor to release the sweep generator clamp for a single cycle. Thus, a single sweep of the main

generator is accomplished. The operation of the SWEEP WIDTH control is the same as in the CONT SWP mode.

(c) Sweep and Hold Mode

Refer to Figure 3-5. In the SWP HOLD mode, the main generator continuously generates the minimum frequency set by the FREQUENCY CONTROL and FREQUENCY RANGE (Hz) selector. When the TRIG IN is gated, or MAN TRIG depressed, the sweep generator will ramp up and hold at its maximum until the gate signal is removed from TRIG IN or MAN TRIG is released. The operation of the SWEEP WIDTH control is the same as in the CONT SWP mode.

3.1.3 Measurement Circuitry

Refer to Figure 3-6. The main board contains the necessary circuit for frequency counting and displays. The frequency

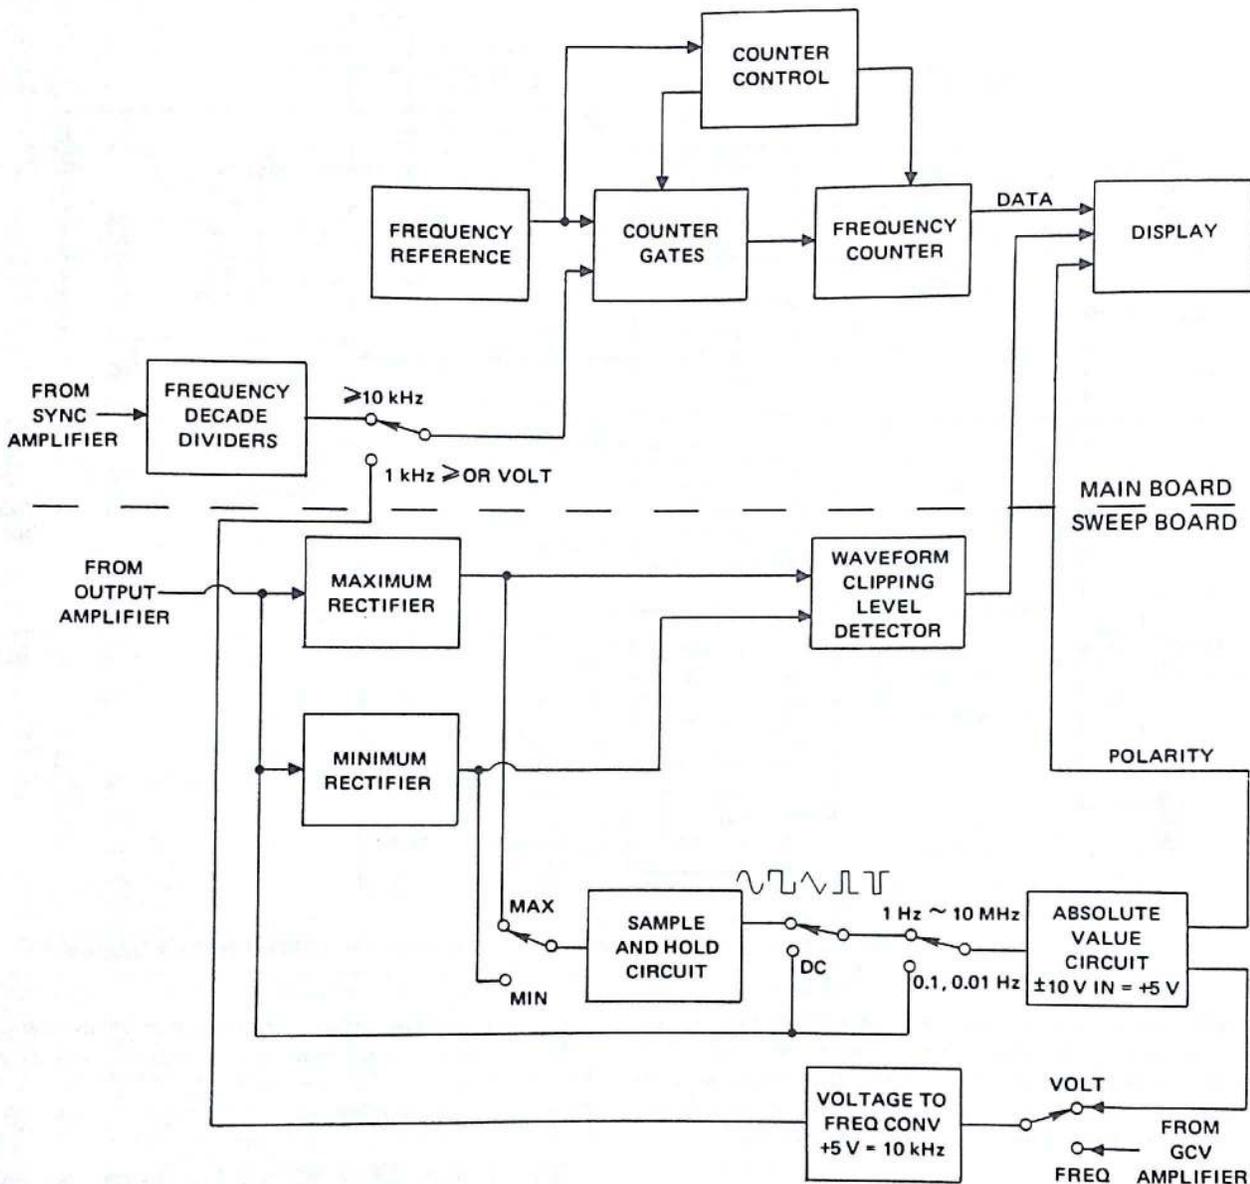


Figure 3-6. Measurement (Voltage and Frequency) Circuit Block Diagram

reference is a stable fixed frequency generator set precisely at 40 Hz.

The counter gate opens precisely for 200 ms and the frequency counter counts the number of pulses which went through the gate during the interval.

In order to normalize the maximum digits (3½ digits) displayed, the frequency decade dividers are provided in front of the counter gates. Thus, the counter gates receive

the full scale frequency of 10 kHz, whether 10 MHz or 10 kHz range measurements, by dividing the sync amplifier output by 1000 or none.

The sweep board contains the necessary circuits for peak reading and low frequency measurement (less than 1 kHz range).

The output of the output amplifier is fed to four circuits: the output attenuator network, the dc voltage divider, and two rectifiers.

The dc voltage divider is used in the 0.1 Hz, 0.01 Hz and dc modes. The amplifier voltage is divided in half and fed directly to the absolute value circuit.

The minimum and maximum rectifiers use a trim cap in their divider circuits to compensate for high frequency roll-off. The 741 operational amplifier is a gain of one buffer, compensating for the voltage drop on the rectifying diode. At higher frequencies, the output from the buffer is a flat dc; at lower frequencies, the output tries to follow the input, but the waveform peaks are rectified enabling the sample and hold circuit to sample accurately. For the extreme low frequency, the sampled data is stored in digital form until the next sampling signal occurs. Thus, the inaccuracy caused by the discharging of capacitor in the sample and hold circuit is eliminated.

Pressing the MIN or MAX switch will connect the corresponding rectifier to the sample and hold circuit. The FET gate is pulsed once a cycle at the peak of a selected waveform and the capacitor is charged to the peak value.

The sampling sync pulse is controlled by the sync logic circuitry on the main board.

The WAVEFORM switch and FREQUENCY RANGE (Hz) switch will connect the dc divider output (dc, 0.01 Hz, 0.1 Hz) or the sample and hold output to the absolute value circuit. This circuit will invert a negative voltage, so the output is positive voltage. It also generates the polarity indicator for the display logic circuit on the main board.

When the instrument is in the minimum or maximum position, the output of the absolute value circuit is connected to the voltage to frequency converter. The voltage to frequency circuit gives an output of 10 kHz for an input of +5.00 volts. In the frequency position, the output from the GCV amplifier is fed to the voltage to frequency converter. The GCV is scaled to give an output of +5.00 volts to the maximum frequency of the range, when adjusted.

The waveform clipping detector is a simple voltage limit detector whose input is set to approximately ± 7.6 volts. If the limit is exceeded, the signal is sent to the display logic and the display will indicate the condition by blinking the data readout (whatever is displayed).

SECTION 4

MAINTENANCE

4.1 ACCESS INSTRUCTIONS

The Model 147 is packaged so that it can be quickly disassembled to afford access to the majority of components within the unit, while allowing the instrument to be operated.

4.1.1 Removing the Dust Cover

To remove the dust cover (case) from the Model 147, the following procedure should be followed:

1. Unplug the ac line cord and unscrew the four captive screws on the rear panel.
2. Remove the rear panel and power supply.
3. Unplug power supply connector from power supply board. Slide dust cover off slowly.
4. At this time, the power supply can be remounted and the Model 147 may be operated normally.

4.1.2 Disassembly for Troubleshooting or Repair

1. Complete Steps 1 through 3 of Paragraph 4.1.1.
2. Remove the six screws which hold the main board in place.
3. Remove the top row of knobs off the front panel by pulling on them slowly.
4. To remove the main board, have the front panel facing you. Place your finger between the two boards at the connectors and lift the top connectors up until they come free of the pins. With the back of the board slightly raised, carefully slide the control shafts out of the front panel.

CAUTION

THE SWEEP BOARD (BOTTOM BOARD) MUST BE SUPPORTED WHILE PUSHING THE CONNECTOR ONTO THE PINS.

CAUTION

5. To put the main board in the maintenance position (see Figure 4-1), stand the main board up and slowly lower it onto the pin.

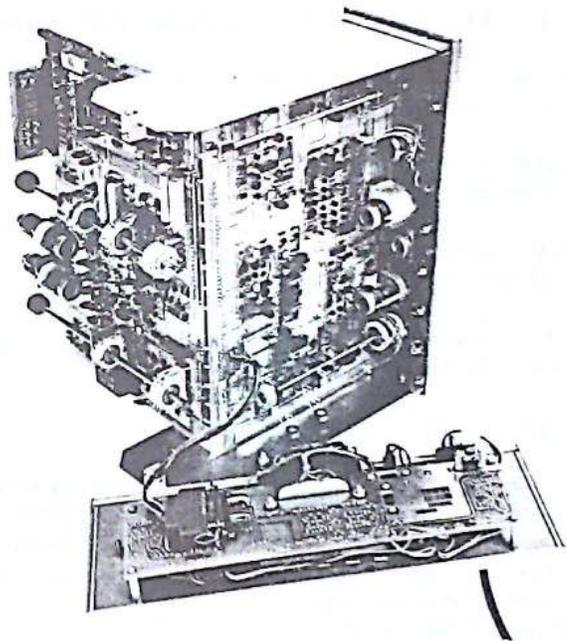


Figure 4-1. Model 147 in the Maintenance Position

6. Plug the power supply connector into the power supply board and plug in the ac line cord.
7. The power switch located on the power supply board will control the power to the instrument while in this configuration.

4.1.3 Reassembly Procedure

1. Turn off power switch on power supply board; unplug the ac line cord; and disconnect power connector from power supply.
2. Lift main board off connector pins.

- With the back end of the main board slightly raised, guide the control shafts just into the front panel. Then lower the back and slide forward checking the three READOUT FUNCTION buttons. When they are through the front panel, raise the back and mate the pins and connector.

CAUTION

THE SWEEP BOARD (BOTTOM BOARD) MUST BE SUPPORTED WHILE PUSHING THE CONNECTOR ONTO THE PINS.

CAUTION

- Replace the six screws which hold down the main board.
- Replace knobs on front panel.
- Slide the dust cover on slowly, making sure it is seated into the groove on the front panel.
- Reconnect the power supply connector to the power supply board.
- Replace the rear panel and power supply; tighten the four captive screws.

4.2 CALIBRATION INSTRUCTIONS

This paragraph provides complete sequential calibration instructions for this instrument. The instructions are concise and are written for the experienced electronics technician or field engineer having a working knowledge of this type of instrument.

WAVETEK maintains a factory repair department for those customers not possessing the necessary test equipment or personnel to maintain this type of instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached. This will hasten turnaround time.

4.2.1 Preliminary Procedures

- Complete precalibration checkout procedure as necessary.
- Perform the following front panel settings:

FREQUENCY CONTROL fully cw
 READOUT FUNCTION FREQ
 FREQUENCY RANGE (Hz) 1K
 SYMMETRY OFF

SYMMETRY VARIABLE fully ccw
 DC OFFSET OFF
 DC OFFSET VARIABLE fully ccw
 WAVEFORM \wedge
 MODE CONT
 TRIG LEVEL fully ccw
 SWEEP WIDTH fully ccw
 SWEEP TIME OFF
 SWEEP TIME VARIABLE fully ccw
 OUTPUT ATTEN (dB) 0
 OUTPUT ATTEN (dB) VARIABLE fully cw
 POWER depressed (ON)

- Install the unit in the cover and allow 30 minutes warm-up time.

4.2.2 Power Supply Board

POWER SUPPLY REGULATION

- Connect ac power to the instrument and connect the voltmeter leads to TP1 (common) and TP2 (+15 V) on the main board.
- Adjust R10 (power supply board) for a reading of +15 Vdc \pm 20 mV on the voltmeter.
- Check the voltage at TP3 for -15 Vdc \pm 50 mV, at TP4 for +24 Vdc \pm 400 mV, at TP5 for -24 Vdc \pm 400 mV, and at TP6 for +5 Vdc \pm 200 mV.

4.2.3 Main Board

TRIANGLE AMPLITUDE ADJUSTMENT

NOTE

Fold out Page 4-7 for calibration adjustment and test point locations.

- Connect the oscilloscope probe (a peak reading plug-in module should be used with the scope) to (\wedge) TP7 (WAVEFORM selector wafer, yellow wire).

- Adjust the triangle amplitude to \pm 1.25 V \pm 5 mV using R90 and R100.

FREQUENCY AND TIME SYMMETRY CALIBRATION

- Set FREQUENCY RANGE (Hz) to 100K, WAVEFORM selector to \square , FREQUENCY CONTROL fully ccw; and adjust R10 for approximately 1/1250 of full scale (80 Hz) and R22 for time symmetry within 1%.

- Turn FREQUENCY CONTROL to 1/100 of full scale (1 kHz) and adjust R12 for minimum frequency shift while opening and shorting the VCG IN.

NOTE

If Step 2 cannot be accomplished, center R12 and repeat Step 1.

- Turn FREQUENCY CONTROL fully cw, and adjust time symmetry within 0.1% with R23.
 - Repeat Steps 1 and 3 as necessary for accurate time symmetry at full scale to 1/1000 of full scale.
 - Turn FREQUENCY CONTROL fully cw, FREQUENCY RANGE (Hz) to 100K, and adjust R4 to obtain 105.0 kHz.
 - Set FREQUENCY RANGE (Hz) to 10M and adjust C17 to obtain an output frequency of 10.50 MHz.
 - Set FREQUENCY RANGE (Hz) to 1M and adjust C26 to obtain 1.050 MHz at the output.
 - Set FREQUENCY RANGE (Hz) to 10K and adjust R5 to obtain 10.50 kHz.
- NOTE
- 1.050 in frequency equals 0.952381 in time.
- Set FREQUENCY RANGE (Hz) to 1K and adjust R6 to obtain 1.050 kHz.
 - Set FREQUENCY RANGE (Hz) to 100 and adjust R7 to obtain 105.0 Hz.
 - Set FREQUENCY RANGE (Hz) to 10 and adjust R39 to obtain 10.50 Hz. (95.0 ms)
 - Adjust R66 for 0.1% time symmetry.
 - Readjust R39 for optimum frequency on 10, 1, 0.1, and 0.01 of FREQUENCY RANGE (Hz) selector.
 - Set FREQUENCY RANGE (Hz) to 10K, FREQUENCY CONTROL fully cw; and connect counter to SYNC OUT.
 - Adjust R235 to read same frequency on the readout as the counter (10.50 kHz). Note: R111 Adjusts lower range readout
 - Connect DVM to pin 12; set FREQUENCY RANGE (Hz) to 1K; adjust FREQUENCY CONTROL for

Adjust For Nominal 5V and 1000 on Readout

1.000 on counter; adjust R47 for 5.00 V on DVM; adjust FREQUENCY CONTROL for 50 Hz on counter; adjust R45 for 0.25 V on DVM; and recheck for 5.00 V at 1.000 kHz. R43

SINE DISTORTION AND AMPLIFIER ADJUSTMENTS

- Set FREQUENCY RANGE (Hz) to 1K, FREQUENCY CONTROL fully cw, and WAVEFORM selector to \sim .
- Connect oscilloscope probes to (\sim) TP7 (WAVEFORM selector wafer).
- Adjust R149 so that the dc offset of the sine amplifier is zero.
- Adjust R143, R139 and R140 for minimum sine wave distortion.
- Set FREQUENCY RANGE (Hz) to 10K and readjust R143, R139 and R140 for optimum sine distortion.
- Alternately perform Steps 4 and 5 until the least amount of sine wave distortion is obtained on both ranges (typically 0.14%).
- Adjust R167 for a 2.5 V p-p ± 5 mV sine wave.
- Readjust R149 so that the dc offset of the sine wave amplifier is 0 V ± 5 mV.

SQUARE WAVE AMPLITUDE ADJUSTMENT

- Set WAVEFORM selector to \square .
- Adjust the square wave amplitude to ± 1.25 V ± 5 mV using R184 and R175.

4.2.4 Sweep Board

OUTPUT AMPLIFIER ADJUSTMENT

NOTE

Fold out Page 4-9 for calibration adjustment and test point locations.

- With the 50 Ω OUT connected to the oscilloscope using a 50 Ω $\pm 1\%$ termination, set FREQUENCY RANGE (Hz) to 1K, FREQUENCY CONTROL fully cw, WAVEFORM selector to \sim , OUTPUT ATTEN (dB) to 0, and OUTPUT ATTEN (dB) VARIABLE fully ccw.

- Adjust R132 for amplitude symmetry about ground.
- Set OUTPUT ATTEN (dB) VARIABLE fully cw and adjust R134 for 15 V p-p ± 25 mV output amplitude.

HIGH FREQUENCY RESPONSE ADJUSTMENT

- Set FREQUENCY RANGE (Hz) to 10M, FREQUENCY CONTROL to read 1 MHz and WAVEFORM selector to \square .
- Adjust C81 for best square wave, without peaking, at full amplitude with 50 Ω load.
- Set WAVEFORM selector to \sim and FREQUENCY CONTROL fully cw.
- Adjust C53 (main board) to obtain approximately 15 V p-p output amplitude at full amplitude with 50 Ω load.
- If clipping occurs as waveforms are varied from 1M to 10M, readjust C53 to correct this occurrence.

VOLTAGE TO FREQUENCY CONVERTER ADJUSTMENTS

- Connect counter to SYNC OUT; set FREQUENCY RANGE (Hz) to 1K; set FREQUENCY CONTROL fully cw.
- Adjust R111 to match counter on 147 readout.

SAMPLE AND HOLD CIRCUIT ZERO

- Set READOUT FUNCTION to PK AMPL MAX.
- Ground the input (pin 27); connect a DVM to sample and hold output (pin 28).
- Set R191 for 0.000 volt. *Bottom Board*

ABSOLUTE VALUE CIRCUIT

- Adjust R237 for 0.00 volt at summing node of absolute value circuit (TP1).
- Adjust R230 for 0.00 volt at output of absolute value circuit (pin 6).
- Remove ground jumper on pin 27; set WAVEFORM selector to DC.
- Connect 50 Ω OUT to a 50 Ω load and a DVM.

4-4

- Use - DC OFFSET control to set 5.50 V to 6.00 V on the DVM; set the readout to match the DVM with R227.
- Switch to + DC OFFSET; set the readout to match the DVM with R224.
- Repeat Steps 5 and 6 until both + and - readings match the DVM.

RECTIFIER CALIBRATION

- Set WAVEFORM selector to \sim , DC OFFSET to OFF, FREQUENCY RANGE (Hz) to 100K.
- Connect 50 Ω OUT (loaded with 50 Ω) to scope.
- Use OUTPUT ATTEN (dB) VARIABLE to set a 14.00 V peak-to-peak waveform.
- Select PK AMPL MAX; set the + peak waveform to exactly +7.00 V on the scope using a peak comparator; and set the readout to +7.00 V with R217.
- Select PK AMPL MIN; set the - peak waveform to exactly -7.00 V on the scope using a peak comparator; and set the readout to -7.00 V with R206.
- Set FREQUENCY RANGE (Hz) to 10M.
- Set the - peak waveform to exactly -7.00 V on the scope; and set the readout to -7.00 V with C70.
- Select PK AMPL MAX; set the + peak waveform to exactly +7.00 V on the scope; set the readout to +7.00 V with C74.
- Repeat Steps 4 through 8 if necessary.

NOTE

The peak comparator should not be used to check voltmeter settings above 100 kHz.

SWEEP/GCV ADJUSTMENTS

- Set FREQUENCY RANGE (Hz) to 1K and connect oscilloscope to the sweep output (TP13).
- Adjust R21 to set the output to 0 \pm 5 mV.
- Set SWEEP TIME selector to 0.1 s/10 ms and the SWEEP TIME VARIABLE fully cw.

4. Adjust R46 to set the lower peak of the sawtooth wave for 0 V (+0, -5 mV) and R238 to set the upper peak of the sawtooth wave for +5 V \pm 20 mV at the SWP/GCV OUT connector (unloaded).
5. Reset R46 to assure at least 1000:1 operation in the SWP/HOLD MODE.

TRIGGER BASELINE ADJUSTMENT

1. Set MODE selector to TRIG, FREQUENCY RANGE (Hz) to 10K, FREQUENCY CONTROL fully cw, DC OFFSET to OFF, WAVEFORM selector to \wedge , OUTPUT ATTEN (dB) to 0, and OUTPUT ATTEN (dB) VARIABLE fully cw.
2. Adjust R84 for 0 V \pm 20 mV and 50 Ω OUT (loaded with 50 Ω).
3. Set FREQUENCY CONTROL fully ccw and adjust R60 to set baseline to 0 V \pm 20 mV.
4. Check that the baseline remains within \pm 50 mV at all frequency settings.

SYMMETRY ADJUSTMENT


1. Set FREQUENCY RANGE (Hz) to 1K, MODE to CONT, FREQUENCY CONTROL fully cw.
2. Adjust R20 for 1/10 of reading from SYMMETRY switch OFF to SYMMETRY switch \wedge or \wedge .

READOUT ZERO FLICKER ADJUSTMENT

1. Set SYMMETRY switch to OFF, FREQUENCY CONTROL fully ccw.
2. Adjust R191 until no flicker is seen in the blanked out decimal points and zeros. *TOP BOARD*


4.2.5 Post Operational Checkout

1. Check the MODE switch, SYMMETRY switch and SYMMETRY VARIABLE, WAVEFORM switch, SWEEP WIDTH potentiometer, SWEEP TIME switch and SWEEP TIME VARIABLE, and OUTPUT ATTEN (dB) switch and OUTPUT ATTEN (dB) VARIABLE for proper operation.
2. Verify that the readout functions properly in all functions of the READOUT FUNCTION controls at all frequency ranges.

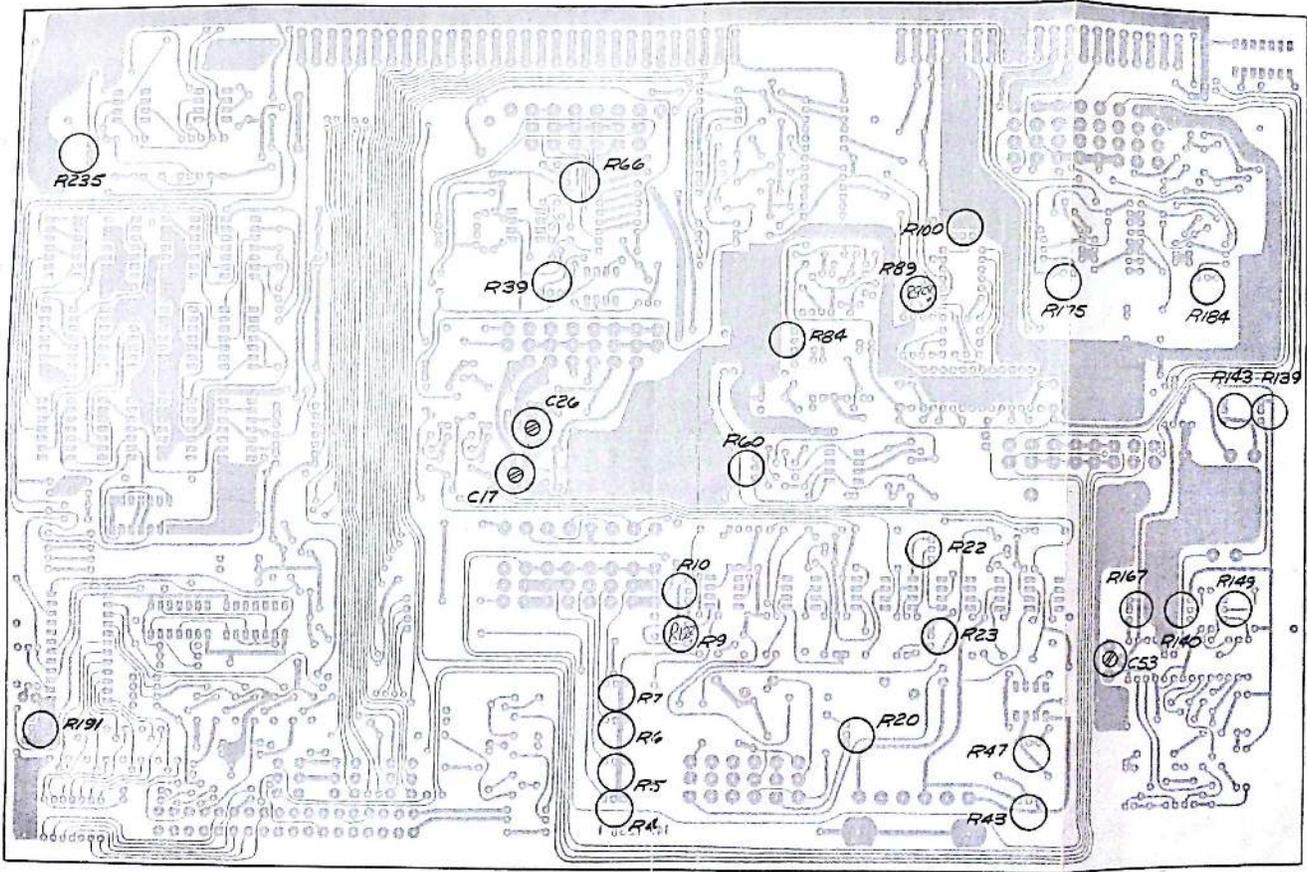

147-010 MAIN BOARD CALIBRATION POINTS.

Generated by CamScanner from intsig.com

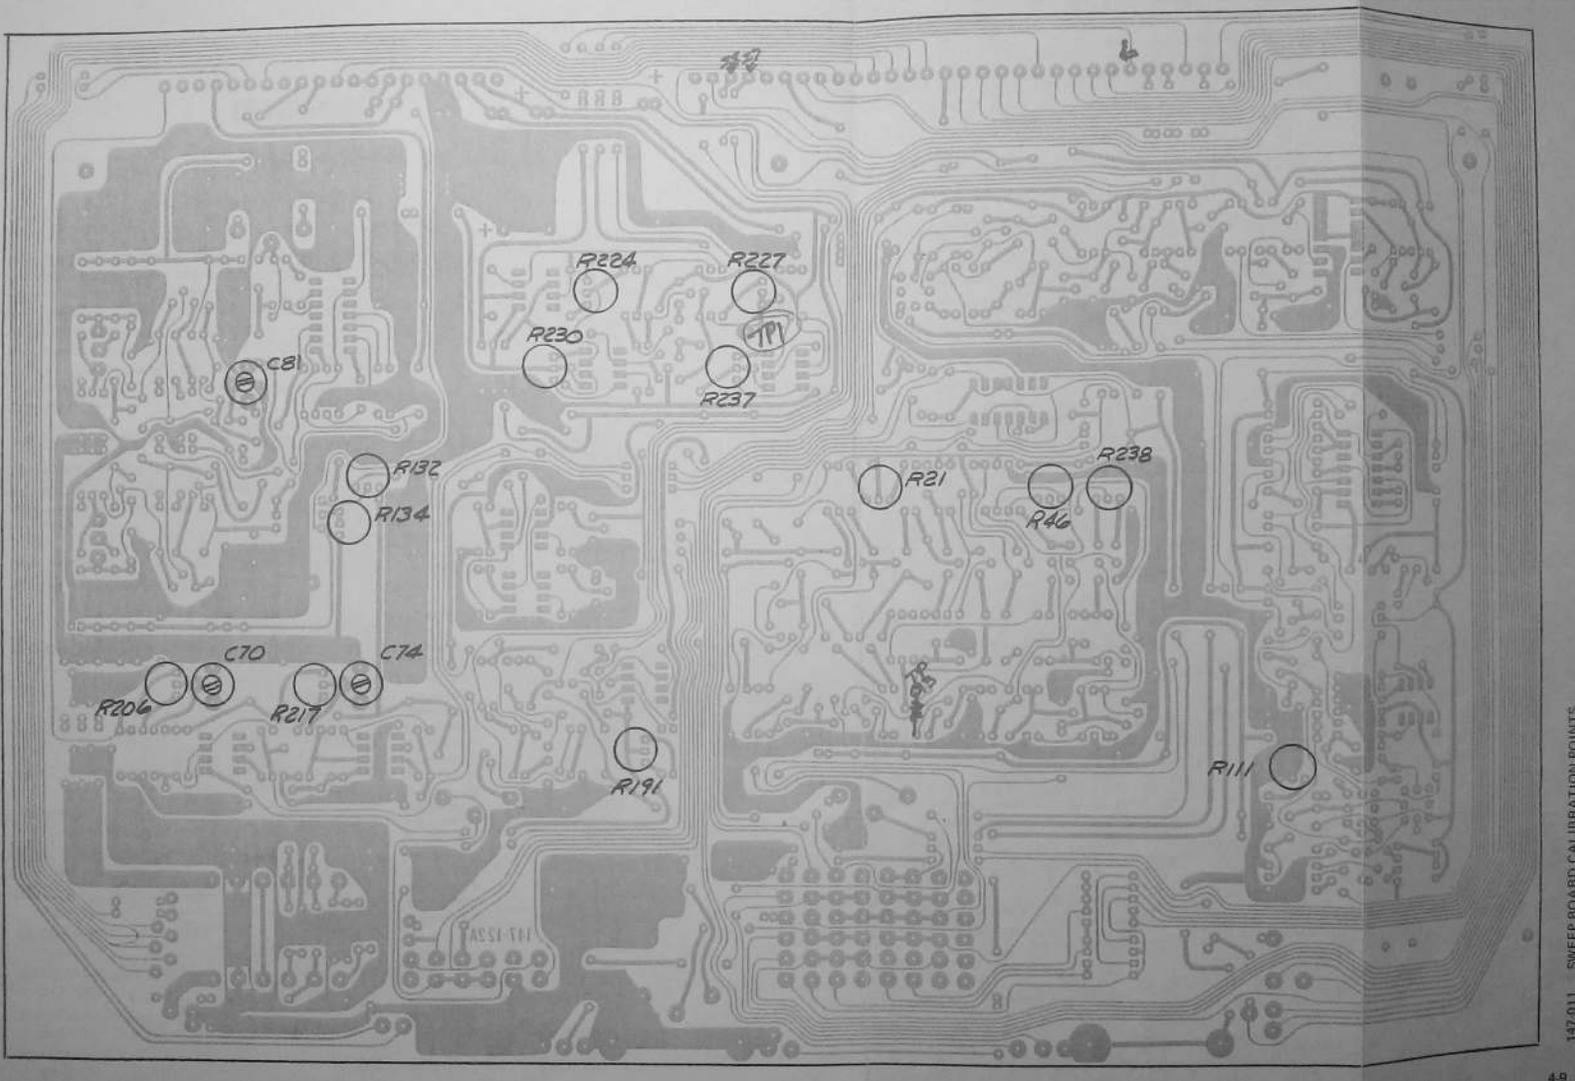

147-011 SWEEP BOARD CALIBRATION POINTS

SECTION 5

DIAGRAMS ADDENDUMS AND PARTS LISTS

5.1 DIAGRAMS

The schematic diagrams within this manual are, wherever possible, arranged in the sequence followed in the circuit description. Whenever assembly drawings are included, they are positioned adjacent to the schematics for maximum information presentation and minimum page flipping. Additional voltage or waveform information, beyond that given in the circuit description, may be shown on the schematic diagrams, at test points and key locations throughout the instrument.

5.2 ADDENDUMS

Under WAVETEK's product improvement program, the latest electronic designs and circuits are incorporated into each WAVETEK instrument as quickly as development and

testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, addendum pages are prepared to summarize the changes made under a WAVETEK Engineering Change Notice (ECN) and these ECN pages are inserted immediately inside the rear cover. If no such pages exist, the manual should be correct as printed.

5.3 PARTS LISTS

Whenever possible, an assembly drawing and the associated parts list are kept to one piece of paper or are positioned for maximum information presentation. When ordering spare parts, please specify part number, circuit reference, board, serial number of unit, and if applicable, the function performed.

DRAWINGS

The following assembly drawings (with parts lists) and schematics will be included at the rear of this manual, in the arrangement shown below.

LEFT PAGE	RIGHT PAGE
CHASSIS ASSEMBLY D147 000 1 of 2	CHASSIS ASSEMBLY D147 000 2 of 2
CHASSIS SCHEMATIC D147 200	REAR PANEL ASSEMBLY D147 001
MAIN BOARD ASSEMBLY D147 023 1 of 4	MAIN BOARD ASSEMBLY D147 023 2 of 4
MAIN BOARD ASSEMBLY D147 023 3 of 4	MAIN BOARD ASSEMBLY D147 023 4 of 4
MAIN BOARD SCHEMATIC D147 223 1 of 4	MAIN BOARD SCHEMATIC D147 223 2 of 4
MAIN BOARD SCHEMATIC D147 223 3 of 4	MAIN BOARD SCHEMATIC D147 223 4 of 4
READOUT BOARD ASSEMBLY D147 021	READOUT BOARD SCHEMATIC D147 221
SWEEP BOARD ASSEMBLY D147 022 1 of 4	SWEEP BOARD ASSEMBLY D147 022 2 of 4
SWEEP BOARD ASSEMBLY D147 022 3 of 4	SWEEP BOARD ASSEMBLY D147 022 4 of 4
SWEEP BOARD SCHEMATIC D147 222 1 of 2	SWEEP BOARD SCHEMATIC D147 222 2 of 2
POWER SUPPLY BOARD ASSEMBLY D147 020 1 of 2	POWER SUPPLY BOARD ASSEMBLY D147 020 2 of 2
POWER SUPPLY BOARD SCHEMATIC D147 220	


5.4 RECOMMENDED SPARE PARTS LIST

Information is provided to maintain the instrument on a board or component level. Price and delivery information should be obtained from the Wavetek representative in your area or directly from the factory.



DESCRIPTION	MFG	PART NO.	QTY
BOARD LEVEL			
COMPLETE REAR PANEL ASSEMBLY	WAVETEK	147 001	1
READOUT BOARD	WAVETEK	147 021	1
SWEEP BOARD	WAVETEK	147 022	1
MAIN BOARD	WAVETEK	147 023	1
COMPONENT LEVEL			
DIODE TUNNEL	GE	1N3716	1
DIODE	SEMTECH	SCE 1	2
DIODE	FAIRCHILD	FD777	5
*DIODE SET	WAVETEK	142 501 58	1
DIODE	HEWLETT-PACKARD	HP 2811	3
DIODE	FAIRCHILD	FD606	5
DIODE ZENER	WAVETEK	100 506	2
FUSE 1/2A 115 V	LITTELFUSE	313 500	2
FUSE 1/2A 230 V	LITTELFUSE	313 250	2
INTEGRATED CIRCUIT	FAIRCHILD	7805	1
INTEGRATED CIRCUIT	FAIRCHILD	µ8741C	5
INTEGRATED CIRCUIT	FAIRCHILD	LM-301	1
INTEGRATED CIRCUIT	NAT SEMI CONDUCTOR	CA3228A	1
INTEGRATED CIRCUIT	RCA	CA3200	1
INTEGRATED CIRCUIT	RCA	CA3049	1
INTEGRATED CIRCUIT	MOTOROLA	MC 3050	1
INTEGRATED CIRCUIT	RCA	CA3054	1
INTEGRATED CIRCUIT	RCA	CA3080	2
INTEGRATED CIRCUIT	MOSTEK	8035 P	1
LED	OPCOA	OSL-6L-1	2
LED READOUT	FAIRCHILD	FND 70	1
LED READOUT	FAIRCHILD	FND 71	1
*TRANSISTOR SET	WAVETEK	142 501 52	1
*TRANSISTOR SET	WAVETEK	142 501 53	1
*TRANSISTOR SELECTED	WAVETEK	142 501 55	2
TRANSISTOR	MOTOROLA	2N229A	2
TRANSISTOR	FAIRCHILD	2N2905A	2
TRANSISTOR	FAIRCHILD	2N3563	1
TRANSISTOR	FAIRCHILD	2N3565	5
TRANSISTOR	FAIRCHILD	2N3638	1
TRANSISTOR	FAIRCHILD	2N3638A	5
TRANSISTOR	FAIRCHILD	2N3640	5
TRANSISTOR	FAIRCHILD	2N3642	1
TRANSISTOR	FAIRCHILD	2N3646	10
TRANSISTOR	FAIRCHILD	2N4248	1
TRANSISTOR	FAIRCHILD	2N5139	5
TRANSISTOR	MOTOROLA	2N5485	1
TRANSISTOR	FAIRCHILD	2N4647	1
TRANSISTOR	FAIRCHILD	2N5160	1
TRANSISTOR	MOTOROLA	MPS L08	2
TRANSISTOR	TECH PROD	T0308	1
TRANSISTOR	TECH PROD	T0401	1
TRANSISTOR	SILICONIX	1223	1
TRANSISTOR	NATIONAL	NF 510	1
TRANSISTOR	TEXAS INST	TIP 29	2
TRANSISTOR	TEXAS INST	TIP 30	2

* Denotes special selected parts and should be ordered from Wavetek.

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND IS LOANED TO YOU BY THE INSTRUMENT DIVISION OF WAVETEK CORPORATION. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

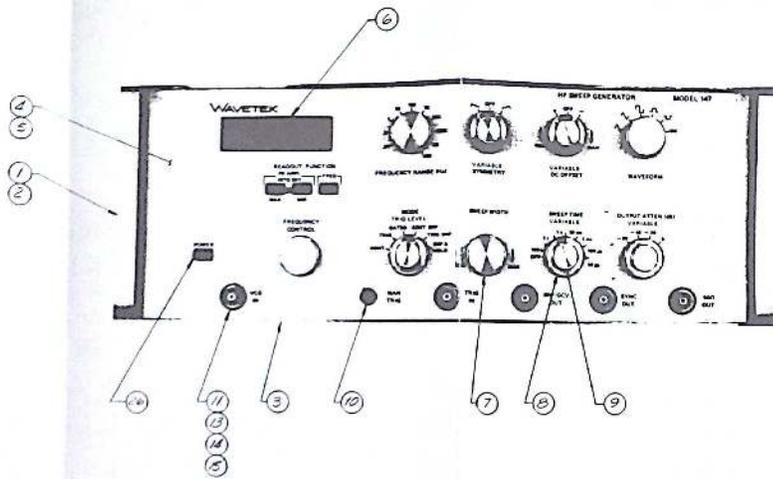



PARTS LIST				
QTY	DESCRIPTION	ASSEMBLY	MANUFACTURER	QTY
1	HANDLE TRIM (MAG. TYP.)	23330	WAVETEK	2
2	HANDLE (COPPER BODY)	23330	WAVETEK	2
3	TRIM (MAG. TYP.)	23330	WAVETEK	2
4	SUB PANEL	23319	WAVETEK	1
5	FRONT PANEL	23328	WAVETEK	1
6	READOUT WINDOW	23318	WAVETEK	1
7	KNOB	23318	WAVETEK	4
8	KNOB COAK	23318	WAVETEK	5
9	KNOB SMALL	23318	WAVETEK	5
10	SWITCH (IMMEDIATE)	C-X	CR555	1
11	END CONNECTOR	KING	1036	5
12	CLAMP (MAG. TYP.)	23318	WAVETEK	4
13	SHOULDER WASHER	N.H. SMITH	83330	5
14	FEET WASHER	N.H. SMITH	83330	5
15	SOLDER LUG	N.H. SMITH	83330	5
16	SWEEP CO	WAVETEK	23328	1
17	ARM 80	WAVETEK	23328	1
18	READOUT CO	WAVETEK	23328	1
19	SLIP PLATE	WAVETEK	23328	2
20	SUPPORT BAR	WAVETEK	23328	1
21	SPACER SLITS	SUNCO	14022	4
22	FRONT PANEL (RIBBED ALUM.)	WAVETEK	23318	1
23	COVER	WAVETEK	23328	1
24	SHIL KIT (WITH FEET)	WAVETEK	23330	1
25	COVER SUPPORT (MAG. TYP.)	WAVETEK	23328	1
26	SLIP BUTTON (PRED.)	GR	75990	1
27	CHESSIE BRIDGE	23320	WAVETEK	4
28	NUT WASHER	N.H. SMITH	83330	8
29	SHOULDER WASHER	N.H. SMITH	83330	2
30				
31				
32				
33				
34				
35				

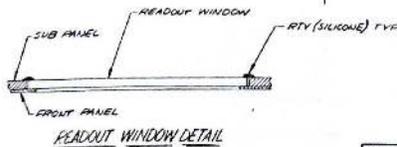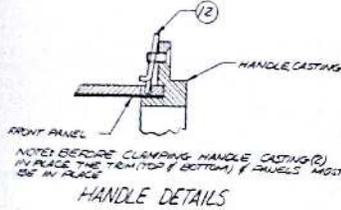


FORM NO. 100-1000	DATE	REV.	WAVETEK
REV. 1	1/16/73	1	ASSEMBLY CHASSIS
147	D147-000	A	
23330			


1/4 INDICATES ITEMS NOT SHOWN
 475 147-000-000-000

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND SHOULD BE KEPT STRICTLY CONFIDENTIAL. IT IS THE PROPERTY OF WAVE TEK AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

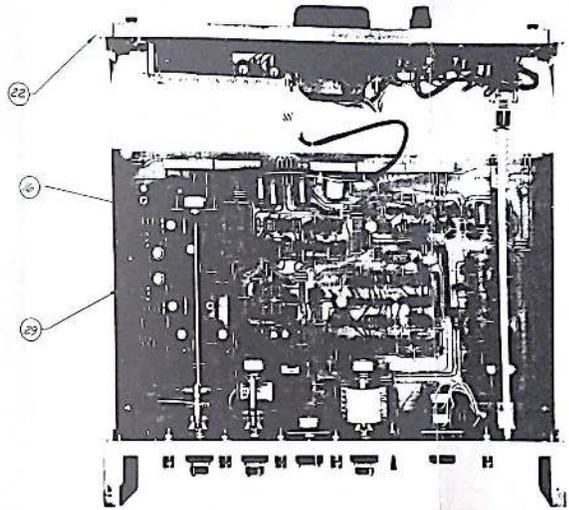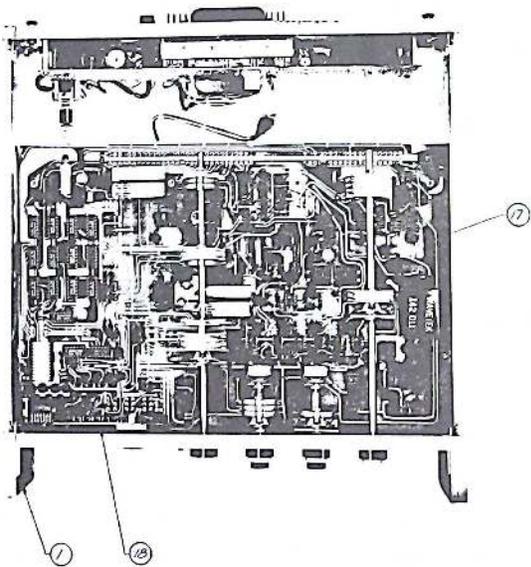





WAVE TEK		CORPORATION		1487	
1487		D147-000 A		SHEET 2 OF 2	
1487		D147-000 A		SHEET 2 OF 2	
1487		D147-000 A		SHEET 2 OF 2	

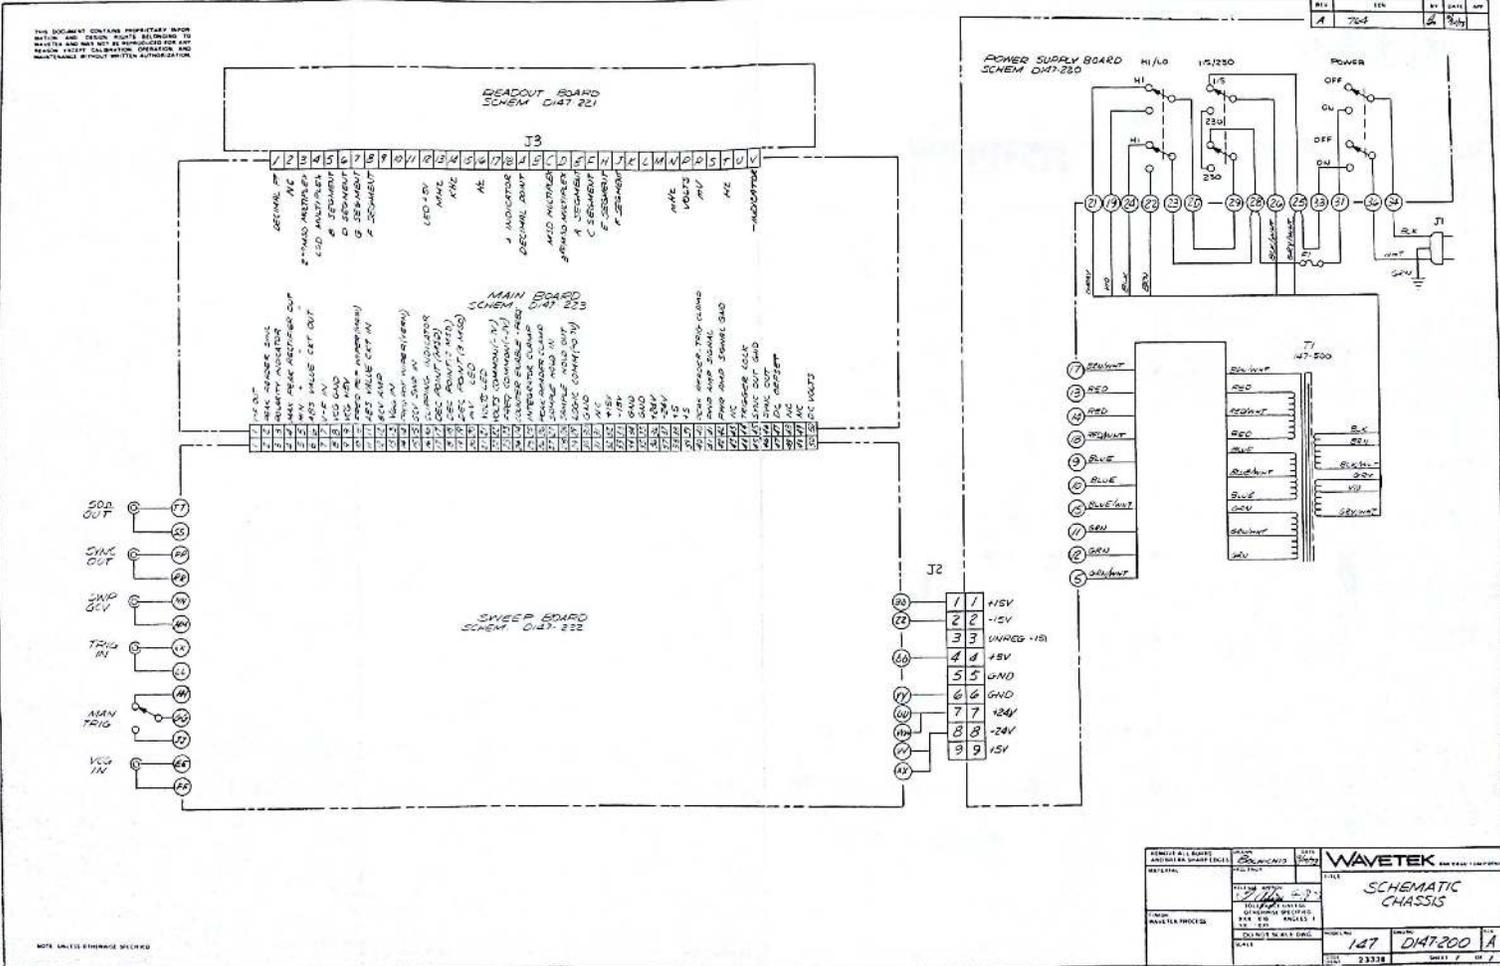

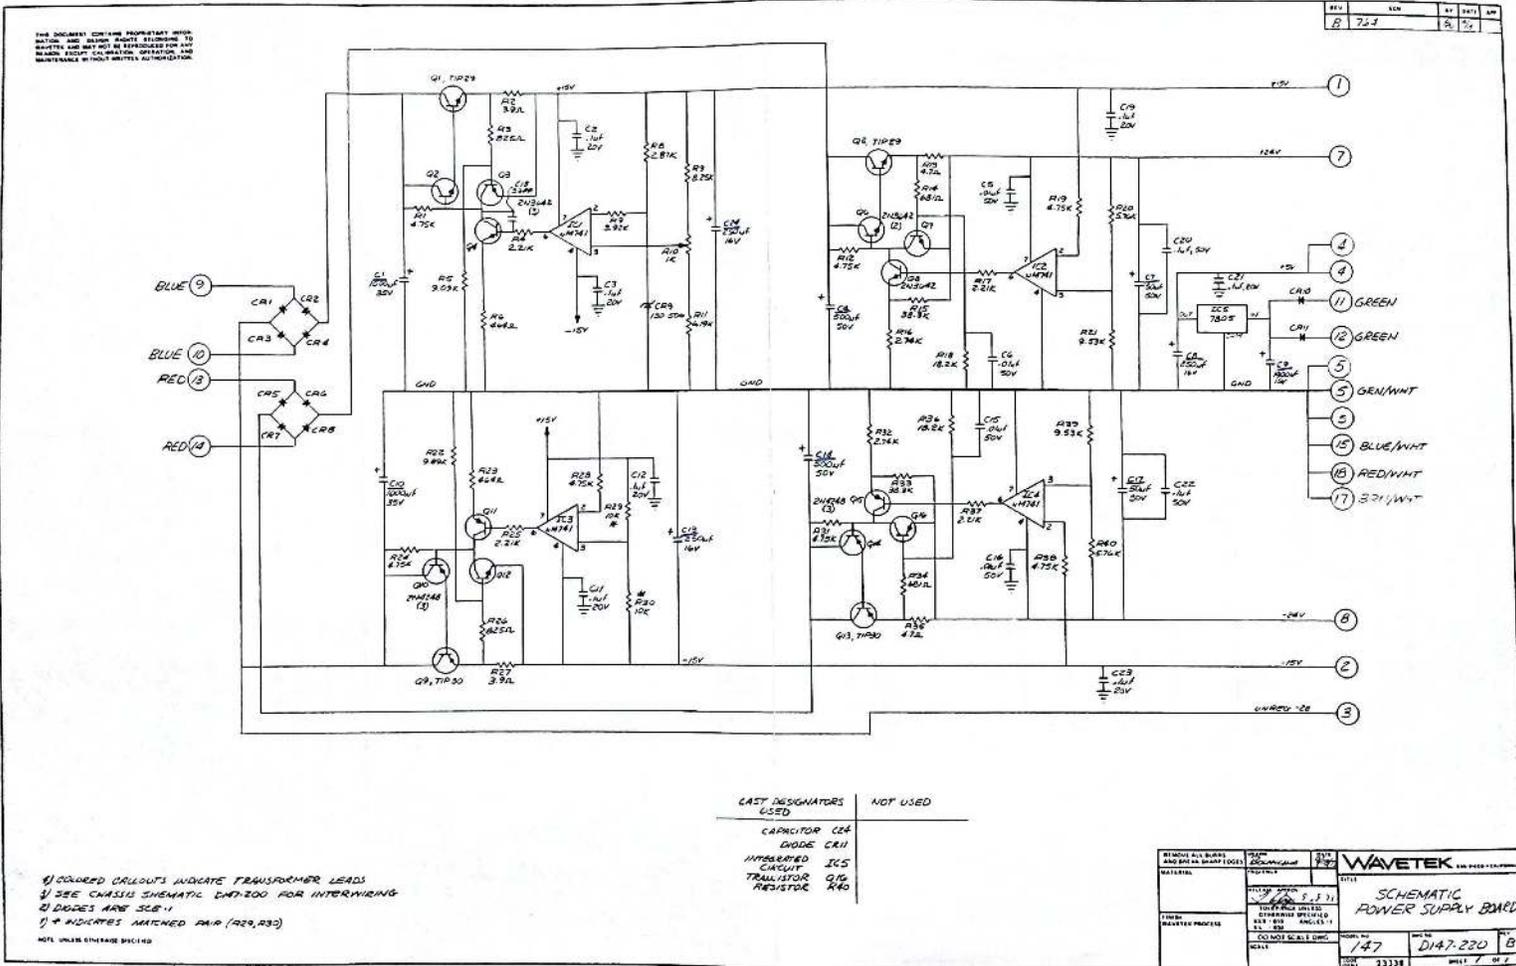

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON WITHOUT THE WRITTEN AUTHORIZATION OF WAVETEK.


REV	REV	REV	REV
A	REV 7-65	A	7-66

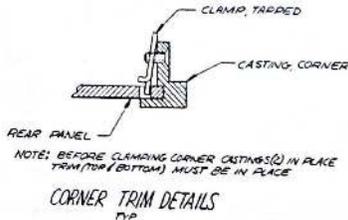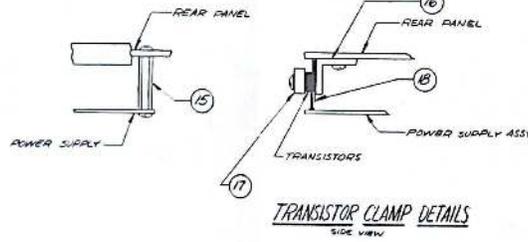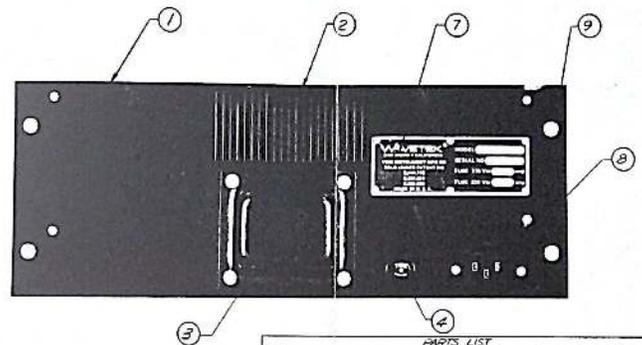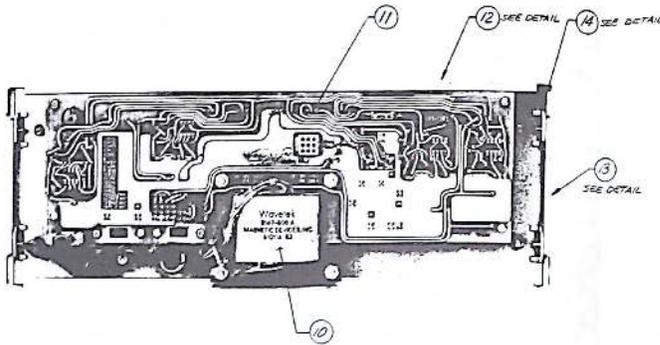

PARTS LIST					
QTY	DESCRIPTION	WAVE	TECH	WAVE	QTY
1	REAR PANEL	WAVE	2338	CM7-302	1
2	HEADPIN	WAVE	2338	AM7-312	1
3	TRANSFORMER END BELL	WAVE	2338	AM7-352	1
4	FUSE HOLDER	LITELAGE	75915	34202	1
5	FUSE WAMP (15V)	LITELAGE	75915	313-500	1
6	FUSE WAMP (250V)	LITELAGE	75915	313-280	1
7	METAL (SERIAL NO.)	WAVE	2338	AM7-334	1
8	POWER CONNECTOR	SMITHSON	24309	24C-301	1
9	CAPTIVE SCREWS	DELTA	—	DM733-04-2	4
10	TRANSFORMER	WAVE	2338	DM7-500	1
11	POWER SUPPLY BO ASSY	WAVE	2338	DM7-020	1
12	TRIM (HOLE DIA 0.015)	WAVE	2338	DM7-317	2
13	CORNER CASTING (HOLE DIA 0.015)	WAVE	2338	DM7-361	2
14	CLAMP TRIMMED (HOLE DIA 0.015)	WAVE	2338	AM7-354	4
15	STANDOFFS	WAVE	2338	AM7-333	4
16	BRACKET, POWER TRANS.	WAVE	2338	DM7-351	1
17	CLAMPING BAR	WAVE	2338	DM7-303	1
18	INDICATOR (TRANSISTOR)	WAVE	2338	DM7-342	1
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					

1) FOR CHASSIS WIRING SEE CHASSIS SCHEMATIC DM7-200
NOTE: UNLESS OTHERWISE SPECIFIED

REVISIONS	DATE	BY	WAVE
1	7-65	WAVE	2338
TITLE		ASSEMBLY REAR PANEL (POWER SUPPLY)	
PART NUMBER		DM7-302	
DRAWN BY		WAVE	
CHECKED BY		WAVE	
DATE		7-65	
SCALE		1:1	
SHEET NO.		147	
SHEET TOTAL		DM7-001 A	

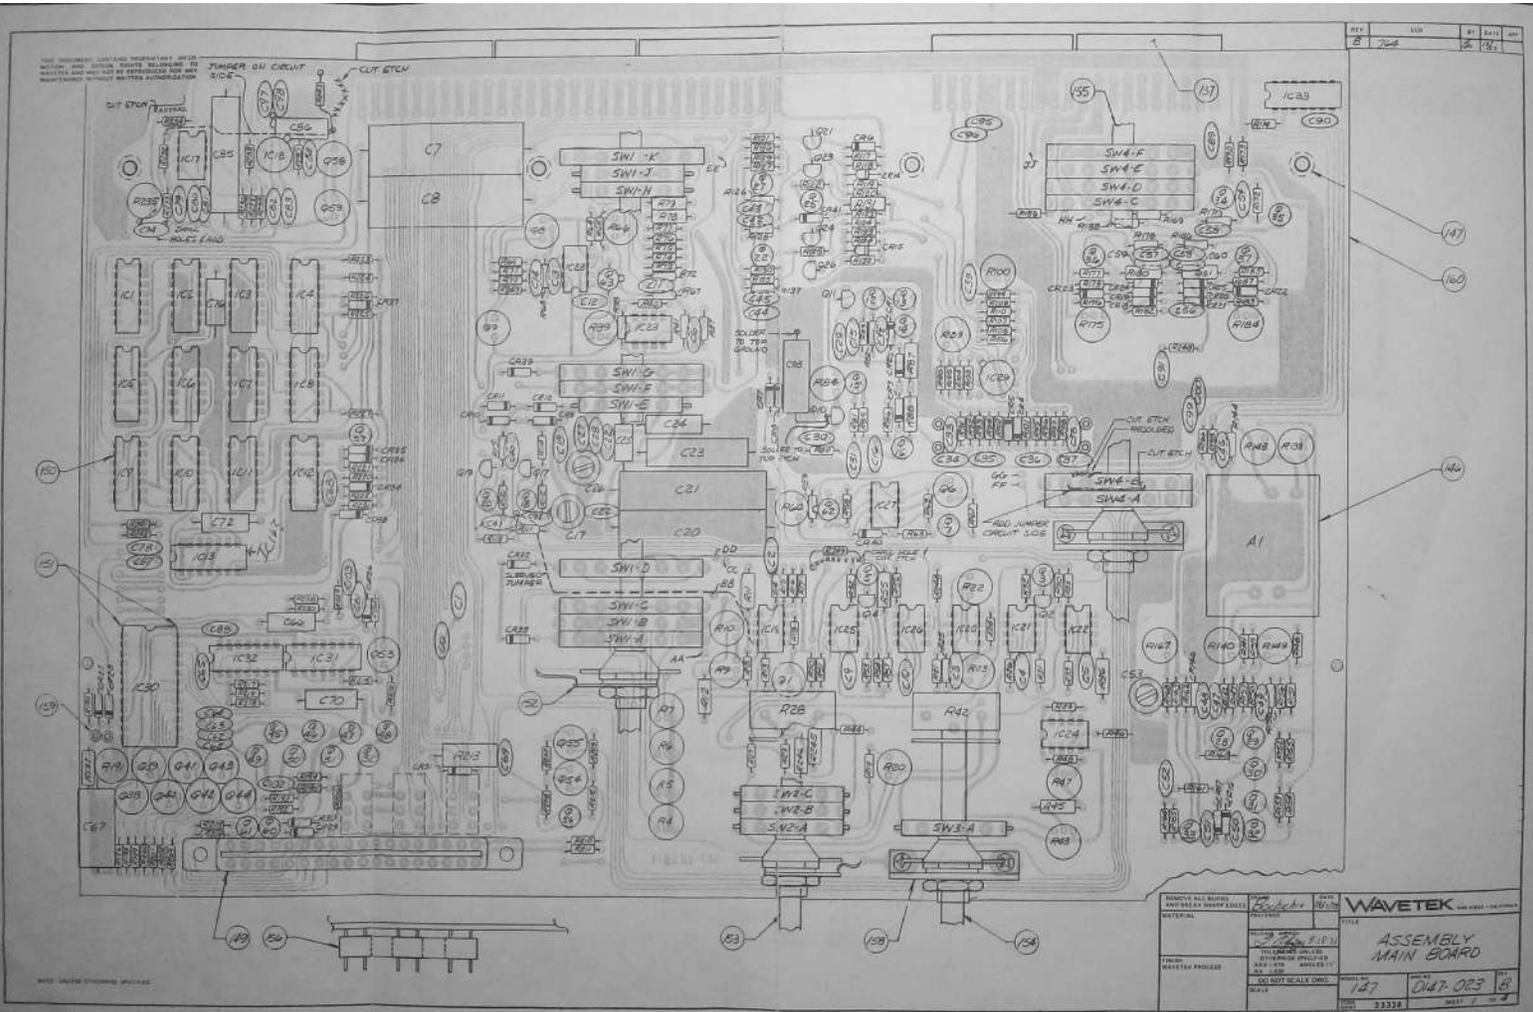

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN DATA BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED OR ANY MANNER, EXCEPT AS AUTHORIZED BY WAVETEK AND MAINTAINED WITHOUT WRITTEN AUTHORIZATION.

REV. 104 104 104 104

PARTS LIST					
QTY	DESCRIPTION	MANUFACTURER	ITEM NO.	DESCRIPTION	QTY
1	CAPACITOR				
2	CERAMIC DISC 100V 100P	DEL	10550	10103	1
3	CERAMIC DISC 100V 200P	DEL	10550	10123	1
4	SILVER MICA 100V 1K 30P	ELMENDO	72176	DM1-1002	1
5	CERAMIC DISC 100V 47P	DEL	10550	10473	1
6	SILVER MICA 100V 500P	ELMENDO	72176	DM1-5002	2
7	CERAMIC DISC 100V 500P	DEL	10550	DM1-510	2
8	SILVER MICA 100V 1000P	ELMENDO	72176	DM1-1002	2
9	SILVER MICA 100V 1000P	ELMENDO	72176	DM1-1002	4
10	CERAMIC DISC 100V 220P	DEL	10550	10223	1
11	CERAMIC DISC 100V 220P	DEL	10550	10223	2
12	SILVER MICA 100V	ELMENDO	72176	DM1-1002	1
13	SILVER MICA 100V	ELMENDO	72176	DM1-1002	1
14	CERAMIC DISC 50V 100UF	DEL	72150	10100	1
15	CERAMIC DISC 100V 100UF	DEL	72150	10100	2
16	CERAMIC DISC 25V 10UF	DEL	72150	1020-100	18
17	POLYSTYRENE 200V 1K 1/2W	ELECTROBOND	10000-1311		1
18	MILAM 100V 5UF	WAVEFEK	72150	100-100	100P
19	METALFILM 100V 1/2W	SPRAGUE	10200	10000000000	5
20	ELECTROLYTIC 10V 100UF	SPRAGUE	10200	10000000000	1
21	ELECTROLYTIC 10V 100UF	SPRAGUE	10200	10000000000	1
22	MATCHED SET 1/2W	WAVEFEK	72150	100-100	100P
23	MATCHED SET 1/2W				REF
24	MATCHED SET 1/2W				REF
25	MATCHED SET 1/2W				REF
26	VARICAP 100V	STERN	72-1000-02-010		1
27	CERAMIC DISC 100V 100P	DEL	72150	10473	2

PARTS LIST					
QTY	DESCRIPTION	MANUFACTURER	ITEM NO.	DESCRIPTION	QTY
27	DIODE 100V	FAIRCHILD	11800	10077	8
28	DIODE MATCHED 100V	WAVEFEK	11570	102-511-58	100
29	DIODE MATCHED 100V	FAIRCHILD	11800	10485	20
30	DIODE MATCHED 100V	FAIRCHILD	11800	10485	20
31	DIODE MATCHED 100V	GENERAL ELECTRIC		10077	2
32	DIODE MATCHED 100V	PHILIPS		10077	2
33	DIODE MATCHED 100V	WAVEFEK	21510	1010-100	3
34					
35	INTEGRATED CIRCUIT 04208	WAVEFEK	33330	100-500-10	1
36	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	13
37	INTEGRATED CIRCUIT 10101	DEL	30000	10101	1
38	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
39	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
40	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	2
41	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	3
42	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
43	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
44	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
45	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
46	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
47	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
48	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
49	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
50	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
51	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
52	INTEGRATED CIRCUIT 10101	FAIRCHILD	31830	10101	1
53	TRANSISTORS 100V	MOTOROLA	10077	10077	4
54	TRANSISTORS 100V	PHILIPS	10077	10077	2
55	TRANSISTORS 100V	FAIRCHILD	11800	10077	2
56	TRANSISTORS 100V	WAVEFEK	21510	100-500-10	100
57	TRANSISTORS 100V	FAIRCHILD	11800	10077	4
58	TRANSISTORS 100V	FAIRCHILD	11800	10077	1


PARTS LIST					
QTY	DESCRIPTION	MANUFACTURER	ITEM NO.	DESCRIPTION	QTY
59	TRANSISTORS 100V	FAIRCHILD	11800	10077	10
60	TRANSISTORS 100V	FAIRCHILD	11800	10077	3
61	TRANSISTORS 100V	FAIRCHILD	11800	10077	10
62	TRANSISTORS 100V	FAIRCHILD	11800	10077	1
63	TRANSISTORS 100V	FAIRCHILD	11800	10077	10
64	TRANSISTORS 100V	WAVEFEK	21510	100-500-10	2
65	TRANSISTORS 100V	MOTOROLA	10077	10077	2
66	TRANSISTORS 100V	WAVEFEK	21510	100-500-10	100
67					
68					
69					
70					
71					
72					
73					
74					
75					
76					
77					
78					
79					
80					
81					
82					
83					
84					
85					
86					
87					
88					
89					
90					
91					
92					
93					
94					
95					

APPROVE ALL BILLS AND DRAWING BOARD DATE: 10/10/70 BY: [Signature]	CHECKED BY: [Signature] DATE: 10/10/70	WAVEFEK 10000000000 TITLE: ASSEMBLY MAIN BOARD PART NO: 100-500-10 REV: B DATE: 10/10/70
--	---	--

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND SHOULD BE KEPT CONFIDENTIAL. IT IS THE PROPERTY OF WAVE TEK AND MAY NOT BE REPRODUCED FOR ANY REASON WITHOUT WRITTEN AUTHORIZATION.

LINE ITEM REFERENCE LIST


Ref. Description	P/L Line	Ref. Description	P/L Line	Ref. Description	P/L Line
C1	13	C82	37	C3	42
C2	13	C83	37	C4	43
C3	13	C84	37	C5	44
C4	13	C85	37	C6	45
C5	13	C86	37	C7	46
C6	13	C87	37	C8	47
C7	13	C88	37	C9	48
C8	13	C89	37	C10	49
C9	13	C90	37	C11	50
C10	13	C91	37	C12	51
C11	13	C92	37	C13	52
C12	13	C93	37	C14	53
C13	13	C94	37	C15	54
C14	13	C95	37	C16	55
C15	13	C96	37	C17	56
C16	13	C97	37	C18	57
C17	13	C98	37	C19	58
C18	13	C99	37	C20	59
C19	13	C100	37	C21	60
C20	13	C101	37	C22	61
C21	13	C102	37	C23	62
C22	13	C103	37	C24	63
C23	13	C104	37	C25	64
C24	13	C105	37	C26	65
C25	13	C106	37	C27	66
C26	13	C107	37	C28	67
C27	13	C108	37	C29	68
C28	13	C109	37	C30	69
C29	13	C110	37	C31	70
C30	13	C111	37	C32	71
C31	13	C112	37	C33	72
C32	13	C113	37	C34	73
C33	13	C114	37	C35	74
C34	13	C115	37	C36	75
C35	13	C116	37	C37	76
C36	13	C117	37	C38	77
C37	13	C118	37	C39	78
C38	13	C119	37	C40	79
C39	13	C120	37	C41	80
C40	13	C121	37	C42	81
C41	13	C122	37	C43	82
C42	13	C123	37	C44	83
C43	13	C124	37	C45	84
C44	13	C125	37	C46	85
C45	13	C126	37	C47	86
C46	13	C127	37	C48	87
C47	13	C128	37	C49	88
C48	13	C129	37	C50	89
C49	13	C130	37	C51	90
C50	13	C131	37	C52	91
C51	13	C132	37	C53	92
C52	13	C133	37	C54	93
C53	13	C134	37	C55	94
C54	13	C135	37	C56	95
C55	13	C136	37	C57	96
C56	13	C137	37	C58	97
C57	13	C138	37	C59	98
C58	13	C139	37	C60	99
C59	13	C140	37	C61	100
C60	13	C141	37	C62	101
C61	13	C142	37	C63	102
C62	13	C143	37	C64	103
C63	13	C144	37	C65	104
C64	13	C145	37	C66	105
C65	13	C146	37	C67	106
C66	13	C147	37	C68	107
C67	13	C148	37	C69	108
C68	13	C149	37	C70	109
C69	13	C150	37	C71	110
C70	13	C151	37	C72	111
C71	13	C152	37	C73	112
C72	13	C153	37	C74	113
C73	13	C154	37	C75	114
C74	13	C155	37	C76	115
C75	13	C156	37	C77	116
C76	13	C157	37	C78	117
C77	13	C158	37	C79	118
C78	13	C159	37	C80	119
C79	13	C160	37	C81	120
C80	13	C161	37	C82	121
C81	13	C162	37	C83	122
C82	13	C163	37	C84	123
C83	13	C164	37	C85	124
C84	13	C165	37	C86	125
C85	13	C166	37	C87	126
C86	13	C167	37	C88	127
C87	13	C168	37	C89	128
C88	13	C169	37	C90	129
C89	13	C170	37	C91	130
C90	13	C171	37	C92	131
C91	13	C172	37	C93	132
C92	13	C173	37	C94	133
C93	13	C174	37	C95	134
C94	13	C175	37	C96	135
C95	13	C176	37	C97	136
C96	13	C177	37	C98	137
C97	13	C178	37	C99	138
C98	13	C179	37	C100	139
C99	13	C180	37	C101	140
C100	13	C181	37	C102	141
C101	13	C182	37	C103	142
C102	13	C183	37	C104	143
C103	13	C184	37	C105	144
C104	13	C185	37	C106	145
C105	13	C186	37	C107	146
C106	13	C187	37	C108	147
C107	13	C188	37	C109	148
C108	13	C189	37	C110	149
C109	13	C190	37	C111	150
C110	13	C191	37	C112	151
C111	13	C192	37	C113	152
C112	13	C193	37	C114	153
C113	13	C194	37	C115	154
C114	13	C195	37	C116	155
C115	13	C196	37	C117	156
C116	13	C197	37	C118	157
C117	13	C198	37	C119	158
C118	13	C199	37	C120	159
C119	13	C200	37	C121	160
C120	13	C201	37	C122	161
C121	13	C202	37	C123	162
C122	13	C203	37	C124	163
C123	13	C204	37	C125	164
C124	13	C205	37	C126	165
C125	13	C206	37	C127	166
C126	13	C207	37	C128	167
C127	13	C208	37	C129	168
C128	13	C209	37	C130	169
C129	13	C210	37	C131	170
C130	13	C211	37	C132	171
C131	13	C212	37	C133	172
C132	13	C213	37	C134	173
C133	13	C214	37	C135	174
C134	13	C215	37	C136	175
C135	13	C216	37	C137	176
C136	13	C217	37	C138	177
C137	13	C218	37	C139	178
C138	13	C219	37	C140	179
C139	13	C220	37	C141	180
C140	13	C221	37	C142	181
C141	13	C222	37	C143	182
C142	13	C223	37	C144	183
C143	13	C224	37	C145	184
C144	13	C225	37	C146	185
C145	13	C226	37	C147	186
C146	13	C227	37	C148	187
C147	13	C228	37	C149	188
C148	13	C229	37	C150	189
C149	13	C230	37	C151	190
C150	13	C231	37	C152	191
C151	13	C232	37	C153	192
C152	13	C233	37	C154	193
C153	13	C234	37	C155	194
C154	13	C235	37	C156	195
C155	13	C236	37	C157	196
C156	13	C237	37	C158	197
C157	13	C238	37	C159	198
C158	13	C239	37	C160	199
C159	13	C240	37	C161	200
C160	13	C241	37	C162	201
C161	13	C242	37	C163	202
C162	13	C243	37	C164	203
C163	13	C244	37	C165	204
C164	13	C245	37	C166	205
C165	13	C246	37	C167	206
C166	13	C247	37	C168	207
C167	13	C248	37	C169	208
C168	13	C249	37	C170	209
C169	13	C250	37	C171	210
C170	13	C251	37	C172	211
C171	13	C252	37	C173	212
C172	13	C253	37	C174	213
C173	13	C254	37	C175	214
C174	13	C255	37	C176	215
C175	13	C256	37	C177	216
C176	13	C257	37	C178	217
C177	13	C258	37	C179	218
C178	13	C259	37	C180	219
C179	13	C260	37	C181	220
C180	13	C261	37	C182	221
C181	13	C262	37	C183	222
C182	13	C263	37	C184	223
C183	13	C264	37	C185	224
C184	13	C265	37	C186	225
C185	13	C266	37	C187	226
C186	13	C267	37	C188	227
C187	13	C268	37	C189	228
C188	13	C269	37	C190	229
C189	13	C270	37	C191	230
C190	13	C271	37	C192	231
C191	13	C272	37	C193	232
C192	13	C273	37	C194	233
C193	13	C274	37	C195	234
C194	13	C275	37	C196	235
C195	13	C276	37	C197	236
C196	13	C277	37	C198	237
C197	13	C278	37	C199	238
C198	13	C279	37	C200	239
C199	13	C280	37	C201	240
C200	13	C281	37	C202	241
C201	13	C282	37	C203	242
C202	13	C283	37	C204	243
C203	13	C284	37	C205	244
C204	13	C285	37	C206	245
C205	13	C286	37	C207	246
C206	13	C287	37	C208	247
C207	13	C288	37	C209	248
C208	13	C289	37	C210	249
C209	13	C290	37	C211	250
C210	13	C291	37	C212	251
C211	13	C292	37	C213	252
C212	13	C293	37	C214	253
C213	13	C294	37	C215	254
C214	13	C295	37	C216	255
C215	13	C296	37	C217	256
C216	13	C297	37	C218	257
C217	13	C298	37	C219	258
C218	13	C299	37	C220	259
C219	13	C300	37	C221	260
C220	13	C301	37	C222	261
C221	13	C302	37	C223	262
C222	13	C303	37	C224	263
C223	13	C304	37	C225	264
C224	13	C305	37	C226	265
C225	13	C306	37	C227	266
C226	13	C307	37	C228	267
C227	13	C308	37	C229	268
C228	13	C309	37	C230	269
C229	13	C310	37	C231	270
C230	13	C311	37	C232	271
C231	13	C312	37	C233	272
C232	13	C313	37	C234	273
C233	13	C314	37	C235	274
C234	13	C315	37	C236	275
C235	13	C316	37	C237	276
C236	13	C317	37	C238	277
C237	13	C318	37	C239	278
C238	13	C319	37	C240	279
C239	13	C320	37	C241	280
C240	13	C321	37	C242	281
C241	13	C322	37	C243	282
C242	13	C323	37	C244	283
C243	13	C324	37	C245	284
C244					

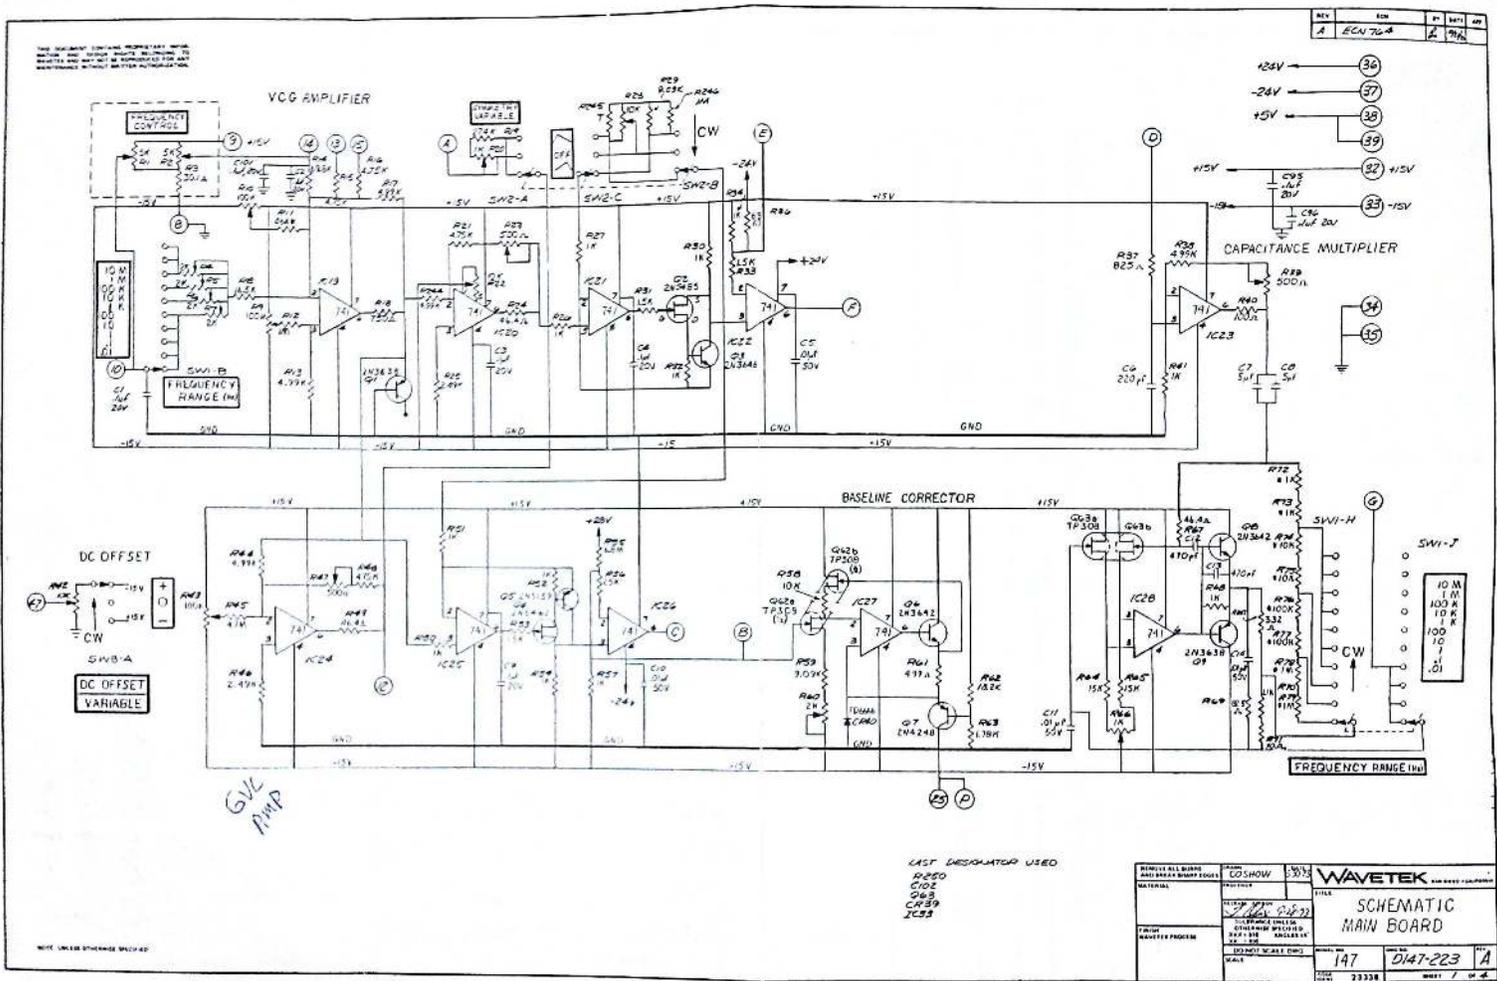


REV	DATE	BY	CHKD
A	ECN 76-A	A	7/6


REVISIONS	DATE	BY	CHKD
1	7/6/72	A	7/6

WAVETEK	
SCHEMATIC MAIN BOARD	
147	D147-223
23338	7 OF 8

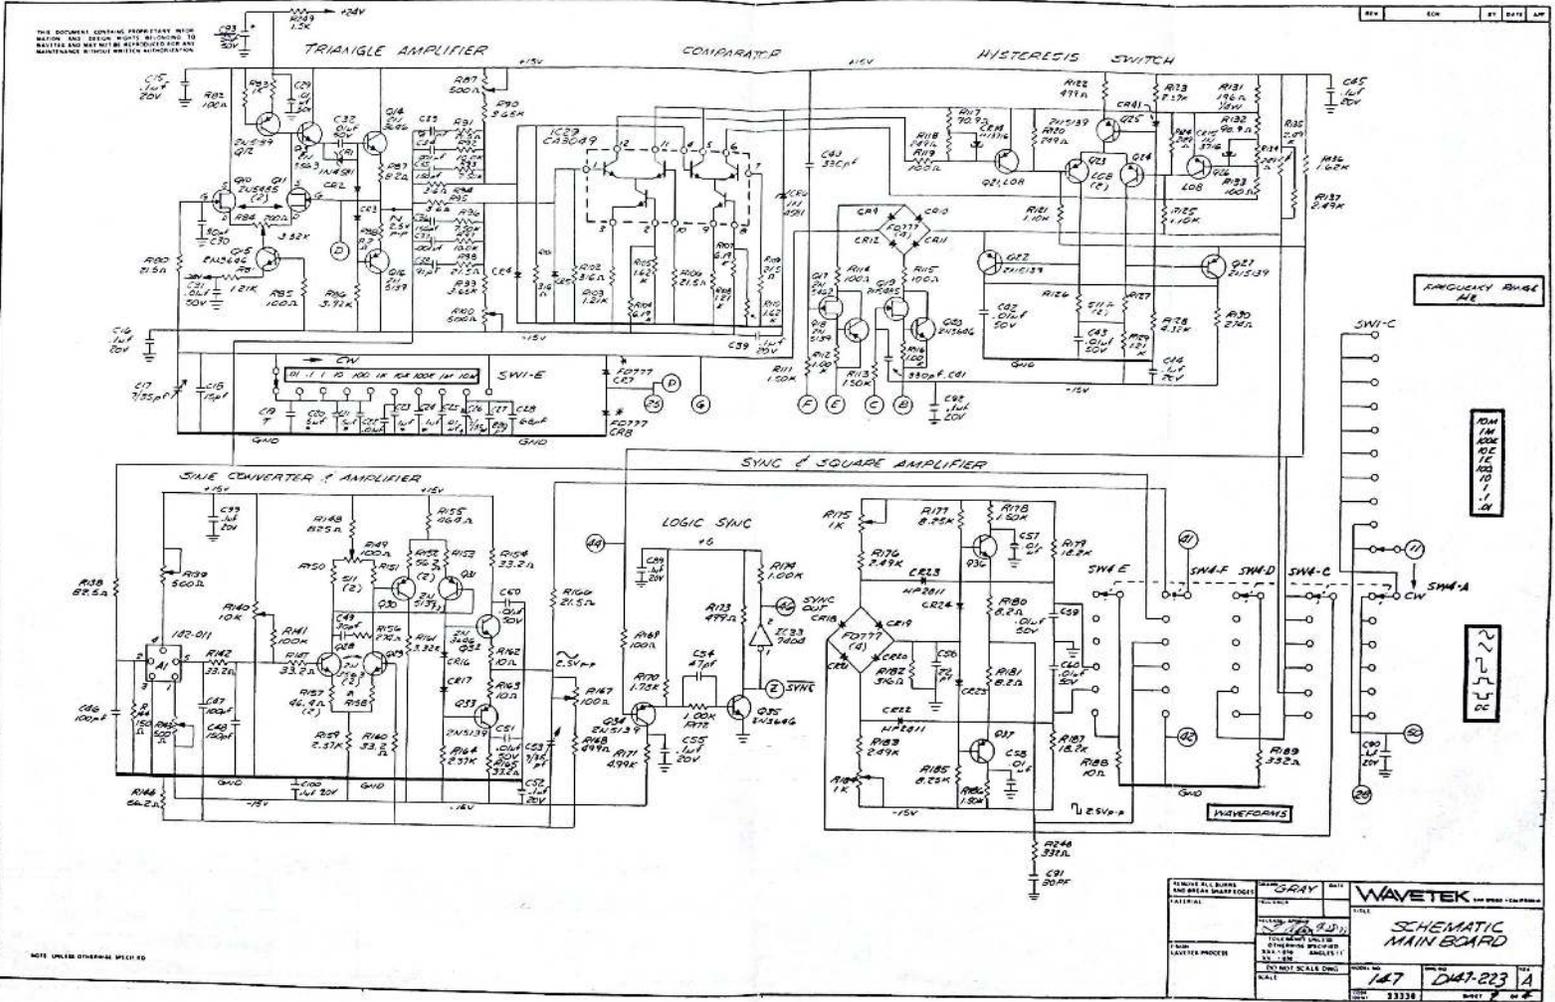



THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND SHOULD BE KEPT CONFIDENTIAL. REPRODUCTION OR TRANSMISSION IN ANY FORM OR BY ANY MEANS IS PROHIBITED WITHOUT WRITTEN AUTHORIZATION.

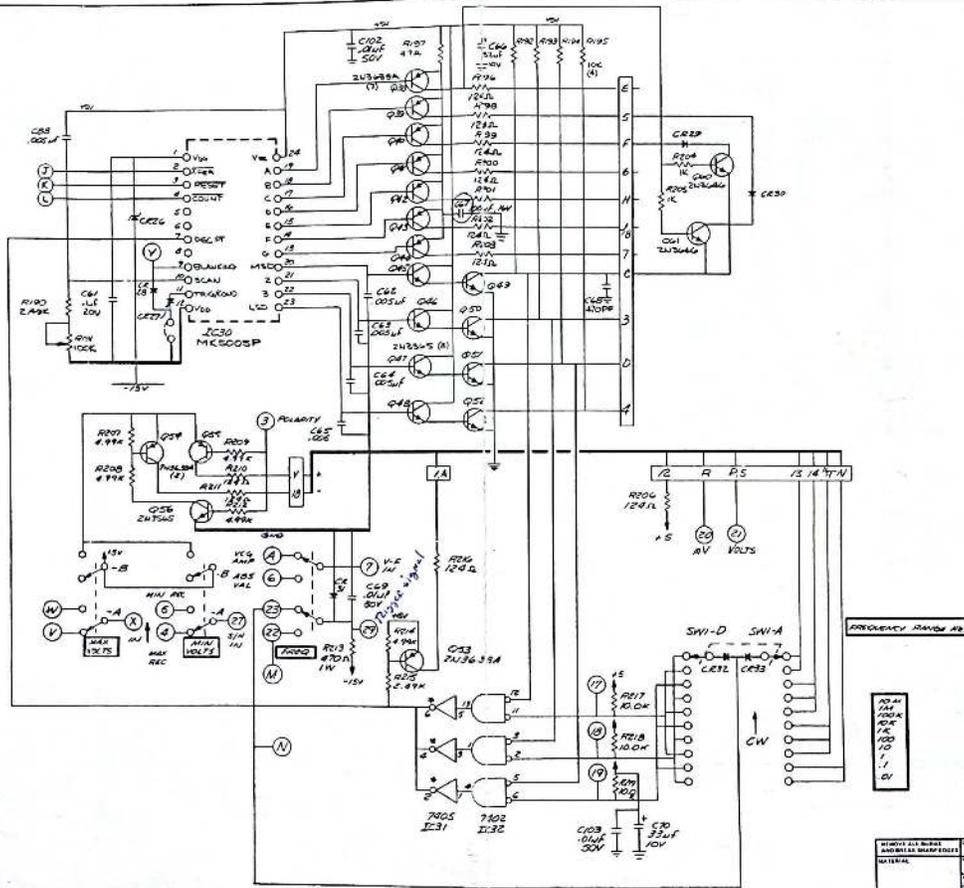

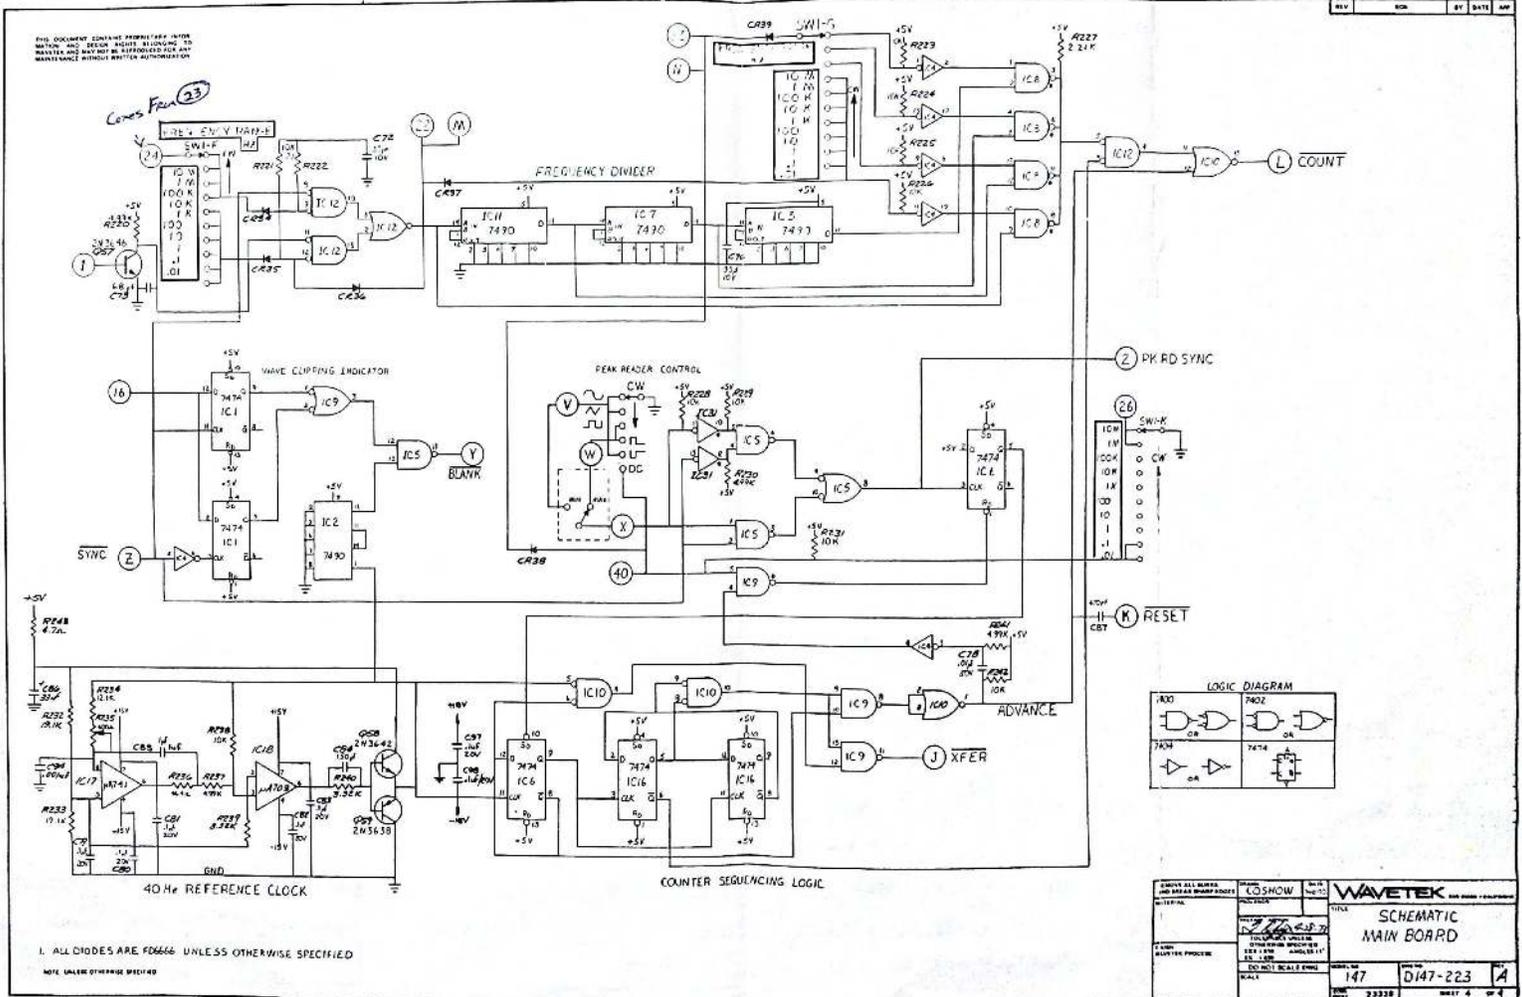

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON WITHOUT WRITTEN PERMISSION.

REV 009 BY 0410 AW

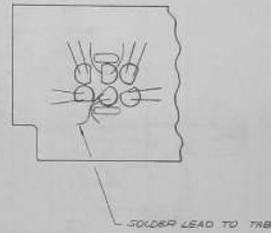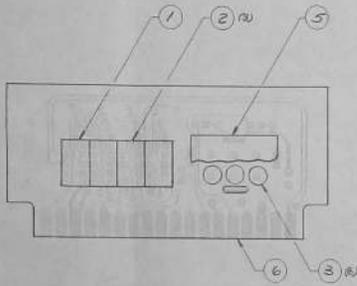

BOM LIST


ITEM	DESCRIPTION	MFG#	QTY	MFG#	QTY
1	READOUT	FANUC 3380	1	FND-71	1
2	DIGIT	FANUC 3360	3	FND-70	3
3	LED	OSL-8L-1	6		
4	DISPLAY CAP	WAVETEK 0230	1	INT-507	1
5	CIRCUIT BOARD	WAVETEK 0230	1	INT-121	1
6					
7					
8					

REPORT ALL DEFECTS AND REPAIR DEFECTS MATERIALS	DATE: 1/10/81 BY: J. J. JONES	WAVE 2-53	WAVETEK SAN JOSE - CALIFORNIA
FROM: WAVETEK PRODS	TO: WAVE 12100 WILSON BLVD SAN JOSE, CALIF 95131	TITLE:	ASSEMBLY READOUT BO
DO NOT SCALE DIMS	SCALE:	PART NO: 147	REV: D147-021
DATE: 03/31/81	BY:	DESIGNED BY:	CHECKED BY:


REV. 1	REV. 2	REV. 3	REV. 4	REV. 5	REV. 6	REV. 7	REV. 8	REV. 9	REV. 10
1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48	49	50
51	52	53	54	55	56	57	58	59	60
61	62	63	64	65	66	67	68	69	70
71	72	73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100
101	102	103	104	105	106	107	108	109	110
111	112	113	114	115	116	117	118	119	120
121	122	123	124	125	126	127	128	129	130
131	132	133	134	135	136	137	138	139	140
141	142	143	144	145	146	147	148	149	150
151	152	153	154	155	156	157	158	159	160
161	162	163	164	165	166	167	168	169	170
171	172	173	174	175	176	177	178	179	180
181	182	183	184	185	186	187	188	189	190
191	192	193	194	195	196	197	198	199	200
201	202	203	204	205	206	207	208	209	210
211	212	213	214	215	216	217	218	219	220
221	222	223	224	225	226	227	228	229	230
231	232	233	234	235	236	237	238	239	240
241	242	243	244	245	246	247	248	249	250
251	252	253	254	255	256	257	258	259	260
261	262	263	264	265	266	267	268	269	270
271	272	273	274	275	276	277	278	279	280
281	282	283	284	285	286	287	288	289	290
291	292	293	294	295	296	297	298	299	300
301	302	303	304	305	306	307	308	309	310
311	312	313	314	315	316	317	318	319	320
321	322	323	324	325	326	327	328	329	330
331	332	333	334	335	336	337	338	339	340
341	342	343	344	345	346	347	348	349	350
351	352	353	354	355	356	357	358	359	360
361	362	363	364	365	366	367	368	369	370
371	372	373	374	375	376	377	378	379	380
381	382	383	384	385	386	387	388	389	390
391	392	393	394	395	396	397	398	399	400
401	402	403	404	405	406	407	408	409	410
411	412	413	414	415	416	417	418	419	420
421	422	423	424	425	426	427	428	429	430
431	432	433	434	435	436	437	438	439	440
441	442	443	444	445	446	447	448	449	450
451	452	453	454	455	456	457	458	459	460
461	462	463	464	465	466	467	468	469	470
471	472	473	474	475	476	477	478	479	480
481	482	483	484	485	486	487	488	489	490
491	492	493	494	495	496	497	498	499	500
501	502	503	504	505	506	507	508	509	510
511	512	513	514	515	516	517	518	519	520
521	522	523	524	525	526	527	528	529	530
531	532	533	534	535	536	537	538	539	540
541	542	543	544	545	546	547	548	549	550
551	552	553	554	555	556	557	558	559	560
561	562	563	564	565	566	567	568	569	570
571	572	573	574	575	576	577	578	579	580
581	582	583	584	585	586	587	588	589	590
591	592	593	594	595	596	597	598	599	600
601	602	603	604	605	606	607	608	609	610
611	612	613	614	615	616	617	618	619	620
621	622	623	624	625	626	627	628	629	630
631	632	633	634	635	636	637	638	639	640
641	642	643	644	645	646	647	648	649	650
651	652	653	654	655	656	657	658	659	660
661	662	663	664	665	666	667	668	669	670
671	672	673	674	675	676	677	678	679	680
681	682	683	684	685	686	687	688	689	690
691	692	693	694	695	696	697	698	699	700
701	702	703	704	705	706	707	708	709	710
711	712	713	714	715	716	717	718	719	720
721	722	723	724	725	726	727	728	729	730
731	732	733	734	735	736	737	738	739	740
741	742	743	744	745	746	747	748	749	750
751	752	753	754	755	756	757	758	759	760
761	762	763	764	765	766	767	768	769	770
771	772	773	774	775	776	777	778	779	780
781	782	783	784	785	786	787	788	789	790
791	792	793	794	795	796	797	798	799	800
801	802	803	804	805	806	807	808	809	810
811	812	813	814	815	816	817	818	819	820
821	822	823	824	825	826	827	828	829	830
831	832	833	834	835	836	837	838	839	840
841	842	843	844	845	846	847	848	849	850
851	852	853	854	855	856	857	858	859	860
861	862	863	864	865	866	867	868	869	870
871	872	873	874	875	876	877	878	879	880
881	882	883	884	885	886	887	888	889	890
891	892	893	894	895	896	897	898	899	900
901	902	903	904	905	906	907	908	909	910
911	912	913	914	915	916	917	918	919	920
921	922	923	924	925	926	927	928	929	930
931	932	933	934	935	936	937	938	939	940
941	942	943	944	945	946	947	948	949	950
951	952	953	954	955	956	957	958	959	960
961	962	963	964	965	966	967	968	969	970
971	972	973	974	975	976	977	978	979	980
981	982	983	984	985	986	987	988	989	990
991	992	993	994	995	996	997	998	999	1000

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200

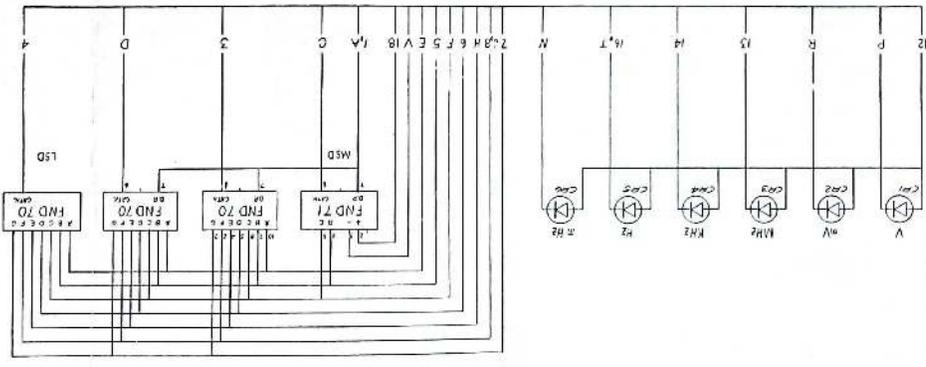

NOTICE: THIS DRAWING IS THE PROPERTY OF WAVE TEK CORPORATION. IT IS TO BE USED ONLY FOR THE PROJECT AND MODEL SPECIFICALLY IDENTIFIED HEREON. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.

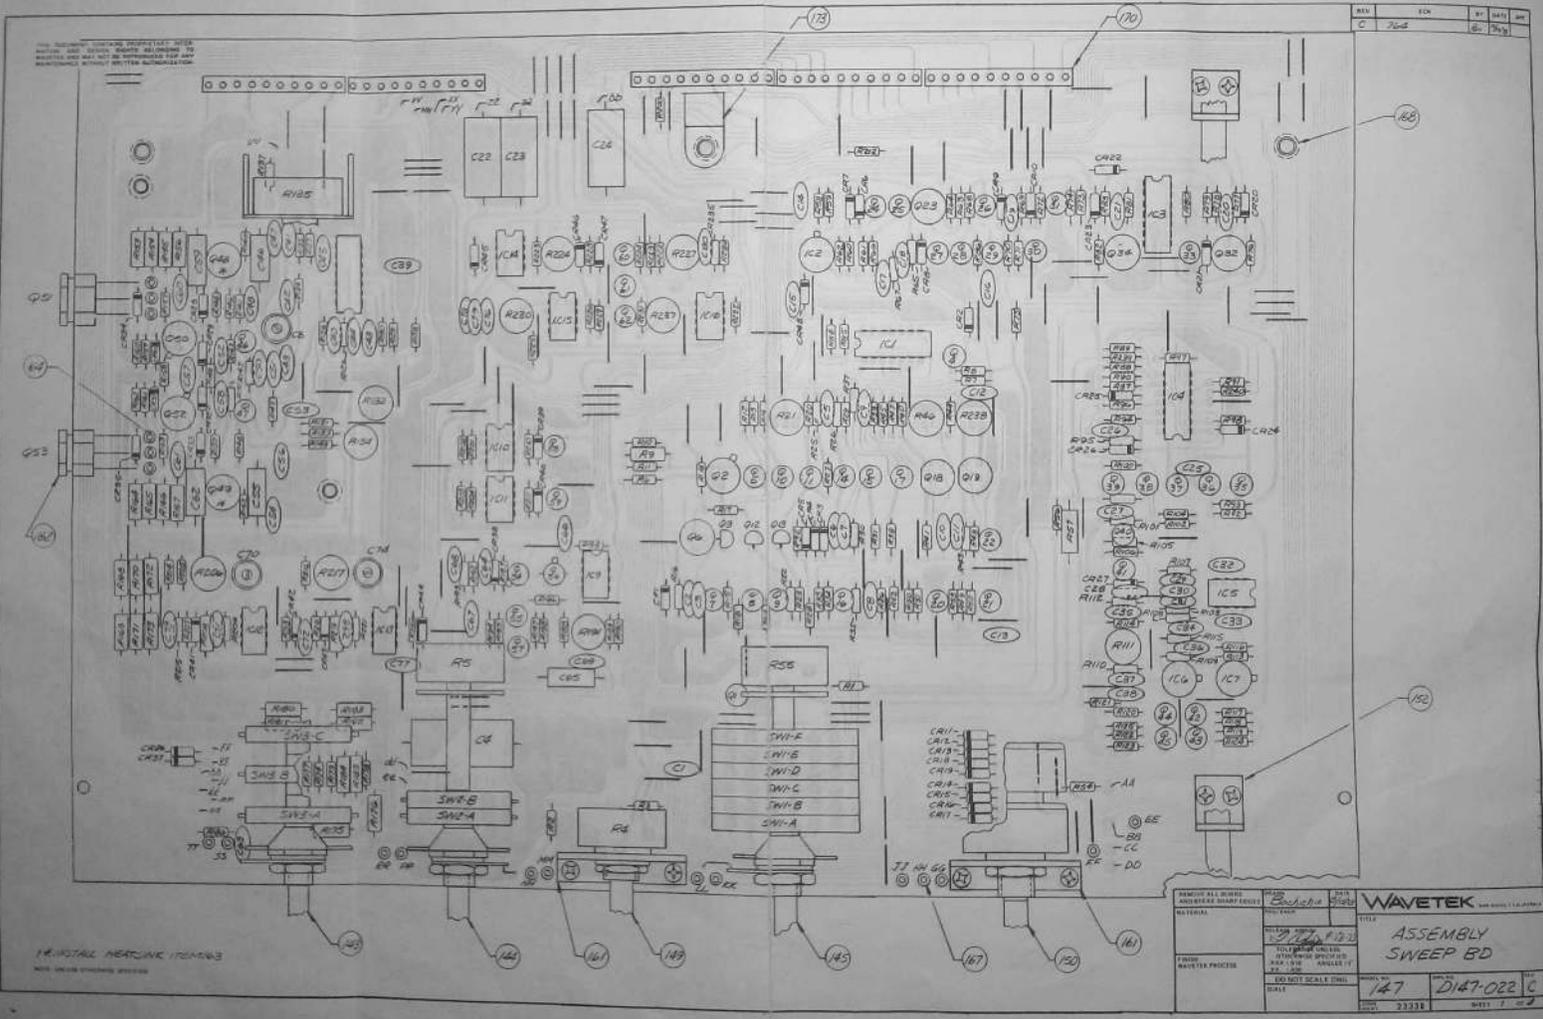

THIS DRAWING IS THE PROPERTY OF WAVE
TECHNOLOGY. IT IS TO BE KEPT IN CONFIDENCE BY
RECEIVING OFFICES AND NOT BE REPRODUCED OR
TRANSMITTED IN ANY FORM OR BY ANY MEANS
WITHOUT THE WRITTEN PERMISSION OF WAVE
TECHNOLOGY.

INSTALL HEAT-SINK (IF NEEDED)
WAVE TECHNOLOGY 02/11/77

WAVETEK	
TITLE ASSEMBLY SWEEP BD	
PART NO. 147	
DRAWING NO. D147-022 C	
DATE 2/11/77	
REV. 1	

REV. EOM. BY DATE AM

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, REPAIRATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


LINE ITEM REFERENCE LIST

LINE ITEM REFERENCE LIST

LINE ITEM REFERENCE LIST

LINE ITEM REFERENCE LIST

QTY	Part No.	Part Name	QTY	Part No.	Part Name	QTY	Part No.	Part Name	QTY	Part No.	Part Name	QTY	Part No.	Part Name	QTY	Part No.	Part Name
43	14	245	21	CA1	31	CA4	32	CA5	36	258	53	417	108	PA4	118	R124	104
42	4	249	15	CA2	37	CA3	33	CA6	38	259	54	418	109	PA5	119	R125	105
41	5	248	15	CA3	38	CA4	34	CA7	39	260	55	419	110	PA6	120	R126	106
40	6	247	15	CA4	39	CA5	35	CA8	40	261	56	420	111	PA7	121	R127	107
39	7	246	10	CA5	40	CA6	36	CA9	41	262	57	421	112	PA8	122	R128	108
38	8	245	10	CA6	41	CA7	37	CA10	42	263	58	422	113	PA9	123	R129	109
37	9	244	10	CA7	42	CA8	38	CA11	43	264	59	423	114	PA10	124	R130	110
36	10	243	10	CA8	43	CA9	39	CA12	44	265	60	424	115	PA11	125	R131	111
35	11	242	10	CA9	44	CA10	40	CA13	45	266	61	425	116	PA12	126	R132	112
34	12	241	10	CA10	45	CA11	41	CA14	46	267	62	426	117	PA13	127	R133	113
33	13	240	10	CA11	46	CA12	42	CA15	47	268	63	427	118	PA14	128	R134	114
32	14	239	10	CA12	47	CA13	43	CA16	48	269	64	428	119	PA15	129	R135	115
31	15	238	10	CA13	48	CA14	44	CA17	49	270	65	429	120	PA16	130	R136	116
30	16	237	10	CA14	49	CA15	45	CA18	50	271	66	430	121	PA17	131	R137	117
29	17	236	10	CA15	50	CA16	46	CA19	51	272	67	431	122	PA18	132	R138	118
28	18	235	10	CA16	51	CA17	47	CA20	52	273	68	432	123	PA19	133	R139	119
27	19	234	10	CA17	52	CA18	48	CA21	53	274	69	433	124	PA20	134	R140	120
26	20	233	10	CA18	53	CA19	49	CA22	54	275	70	434	125	PA21	135	R141	121
25	21	232	10	CA19	54	CA20	50	CA23	55	276	71	435	126	PA22	136	R142	122
24	22	231	10	CA20	55	CA21	51	CA24	56	277	72	436	127	PA23	137	R143	123
23	23	230	10	CA21	56	CA22	52	CA25	57	278	73	437	128	PA24	138	R144	124
22	24	229	10	CA22	57	CA23	53	CA26	58	279	74	438	129	PA25	139	R145	125
21	25	228	10	CA23	58	CA24	54	CA27	59	280	75	439	130	PA26	140	R146	126
20	26	227	10	CA24	59	CA25	55	CA28	60	281	76	440	131	PA27	141	R147	127
19	27	226	10	CA25	60	CA26	56	CA29	61	282	77	441	132	PA28	142	R148	128
18	28	225	10	CA26	61	CA27	57	CA30	62	283	78	442	133	PA29	143	R149	129
17	29	224	10	CA27	62	CA28	58	CA31	63	284	79	443	134	PA30	144	R150	130
16	30	223	10	CA28	63	CA29	59	CA32	64	285	80	444	135	PA31	145	R151	131
15	31	222	10	CA29	64	CA30	60	CA33	65	286	81	445	136	PA32	146	R152	132
14	32	221	10	CA30	65	CA31	61	CA34	66	287	82	446	137	PA33	147	R153	133
13	33	220	10	CA31	66	CA32	62	CA35	67	288	83	447	138	PA34	148	R154	134
12	34	219	10	CA32	67	CA33	63	CA36	68	289	84	448	139	PA35	149	R155	135
11	35	218	10	CA33	68	CA34	64	CA37	69	290	85	449	140	PA36	150	R156	136
10	36	217	10	CA34	69	CA35	65	CA38	70	291	86	450	141	PA37	151	R157	137
9	37	216	10	CA35	70	CA36	66	CA39	71	292	87	451	142	PA38	152	R158	138
8	38	215	10	CA36	71	CA37	67	CA40	72	293	88	452	143	PA39	153	R159	139
7	39	214	10	CA37	72	CA38	68	CA41	73	294	89	453	144	PA40	154	R160	140
6	40	213	10	CA38	73	CA39	69	CA42	74	295	90	454	145	PA41	155	R161	141
5	41	212	10	CA39	74	CA40	70	CA43	75	296	91	455	146	PA42	156	R162	142
4	42	211	10	CA40	75	CA41	71	CA44	76	297	92	456	147	PA43	157	R163	143
3	43	210	10	CA41	76	CA42	72	CA45	77	298	93	457	148	PA44	158	R164	144
2	44	209	10	CA42	77	CA43	73	CA46	78	299	94	458	149	PA45	159	R165	145
1	45	208	10	CA43	78	CA44	74	CA47	79	300	95	459	150	PA46	160	R166	146
0	46	207	10	CA44	79	CA45	75	CA48	80	301	96	460	151	PA47	161	R167	147
0	47	206	10	CA45	80	CA46	76	CA49	81	302	97	461	152	PA48	162	R168	148
0	48	205	10	CA46	81	CA47	77	CA50	82	303	98	462	153	PA49	163	R169	149
0	49	204	10	CA47	82	CA48	78	CA51	83	304	99	463	154	PA50	164	R170	150
0	50	203	10	CA48	83	CA49	79	CA52	84	305	100	464	155	PA51	165	R171	151
0	51	202	10	CA49	84	CA50	80	CA53	85	306	101	465	156	PA52	166	R172	152
0	52	201	10	CA50	85	CA51	81	CA54	86	307	102	466	157	PA53	167	R173	153
0	53	200	10	CA51	86	CA52	82	CA55	87	308	103	467	158	PA54	168	R174	154
0	54	199	10	CA52	87	CA53	83	CA56	88	309	104	468	159	PA55	169	R175	155
0	55	198	10	CA53	88	CA54	84	CA57	89	310	105	469	160	PA56	170	R176	156
0	56	197	10	CA54	89	CA55	85	CA58	90	311	106	470	161	PA57	171	R177	157
0	57	196	10	CA55	90	CA56	86	CA59	91	312	107	471	162	PA58	172	R178	158
0	58	195	10	CA56	91	CA57	87	CA60	92	313	108	472	163	PA59	173	R179	159
0	59	194	10	CA57	92	CA58	88	CA61	93	314	109	473	164	PA60	174	R180	160
0	60	193	10	CA58	93	CA59	89	CA62	94	315	110	474	165	PA61	175	R181	161
0	61	192	10	CA59	94	CA60	90	CA63	95	316	111	475	166	PA62	176	R182	162
0	62	191	10	CA60	95	CA61	91	CA64	96	317	112	476	167	PA63	177	R183	163
0	63	190	10	CA61	96	CA62	92	CA65	97	318	113	477	168	PA64	178	R184	164
0	64	189	10	CA62	97	CA63	93	CA66	98	319	114	478	169	PA65	179	R185	165
0	65	188	10	CA63	98	CA64	94	CA67	99	320	115	479	170	PA66	180	R186	166
0	66	187	10	CA64	99	CA65	95	CA68	100	321	116	480	171	PA67	181	R187	167
0	67	186	10	CA65	100	CA66	96	CA69	101	322	117	481	172	PA68	182	R188	168
0	68	185	10	CA66	101	CA67	97	CA70	102	323	118	482	173	PA69	183	R189	169
0	69	184	10	CA67	102	CA68	98	CA71	103	324	119	483	174	PA70	184	R190	170
0	70	183	10	CA68	103	CA69	99	CA72	104	325	120	484	175	PA71	185	R191	171
0	71	182	10	CA69	104	CA70	100	CA73	105	326	121	485	176	PA72	186	R192	172
0	72	181	10	CA70	105	CA71	101	CA74	106	327	122	486	177	PA73	187	R193	173
0	73	180	10	CA71	106	CA72	102	CA75	107	328	123	487	178	PA74	188	R194	174
0	74	179	10	CA72	107	CA73	103	CA76	108	329	124	488	179	PA75	189	R195	175
0	75	178	10	CA73	108	CA74	104	CA77	109	330	125	489	180	PA76	190	R196	176
0	76	177	10														

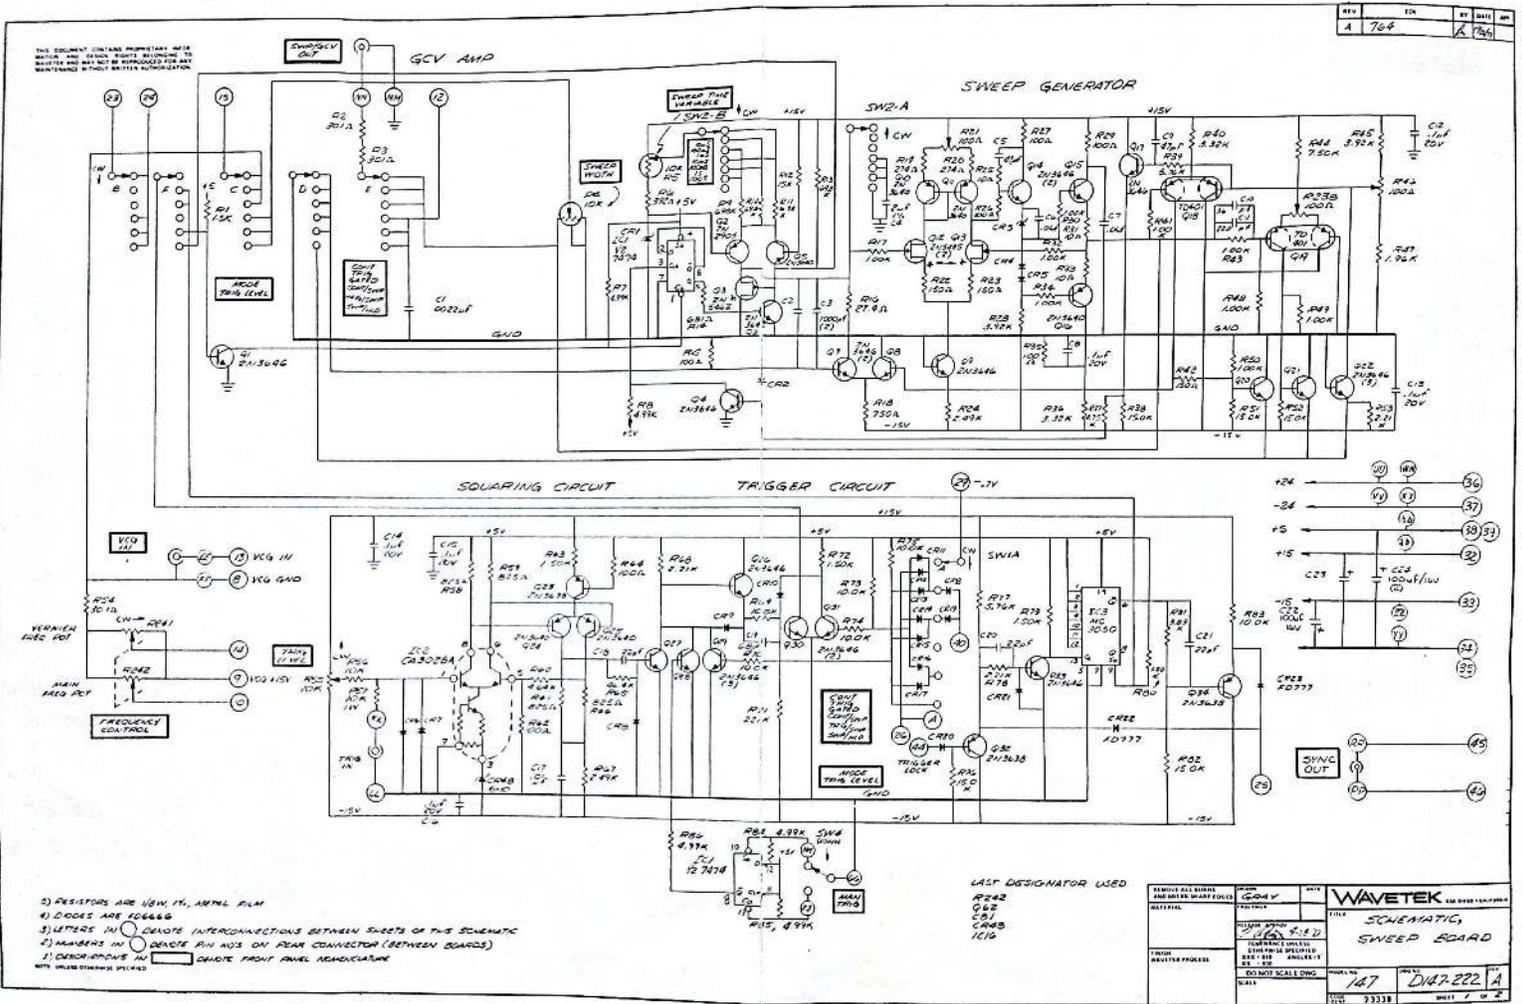

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND SHOULD BE KEPT CONFIDENTIAL TO THE EXTENT POSSIBLE. REPRODUCTION OR TRANSMISSION OF THIS DOCUMENT IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION IS PROHIBITED.

REV. 100 100 100 100

PARTICLE					
LINE NO.	DESCRIPTION	MFG.	FORM	QUANTITY	
1	CAPACITOR				
2	SILVER WIRE 500G 1/4 3000 FT	EDWARDS	72114	0404-0224	1
3	SILVER WIRE 100G 1/4 3000 FT	EDWARDS	72114	0404-0224	1
4	SILVER WIRE 100G 1/4 3000 FT	EDWARDS	72114	0404-0224	1
5	SILVER WIRE 100G 1/4 3000 FT	EDWARDS	72114	0404-0224	1
6	SILVER WIRE 100G 1/4 3000 FT	EDWARDS	72114	0404-0224	1
7	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
8	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
9	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
10	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
11	SILVER WIRE 500G 1/4 3000 FT	EDWARDS	72114	0404-0224	1
12	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
13	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
14	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
15	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
16	POLYETHYLENE 100V 1/4	IBB	50876	PA23107	1
17	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
18	CERAMIC DISC 1000V 1ST 1/4	CEL	71530	0404-0224	1
19	WELDER 100 200V 1/4	WORLDWIDE	50000	2000-0200	1
20	TAPE 1/4 1/4 1/4	CEL	71530	0404-0224	1
21	ELECTRONIC 100 1/4	CEL	71530	0404-0224	1
22
23
24
25
26
27
28
29
30
31
32

PARTICLE					
LINE NO.	DESCRIPTION	MFG.	FORM	QUANTITY	
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64

PARTICLE					
LINE NO.	DESCRIPTION	MFG.	FORM	QUANTITY	
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86

NON UNICO STRUMENTO RIFERITO

WAVE TEK	ASSEMBLY	SWEET BOARD
147	0147-0224	32338

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND TECHNICAL DATA BELONGING TO WAVETEK AND USE HEREIN IS RESTRICTED TO THE REPAIR, RECALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

PARTS LIST					
LINE NO	DESCRIPTION	MFG	FIGM	MFG P/N	QTY
97	METALFILM 1/2W 15 1.82K	CORNING	16299	W550	1
98	METALFILM 1/2W 15 1.95K	CORNING	16299	W550	1
99	METALFILM 1/2W 15 2K	CORNING	16299	W550	2
100	METALFILM 1/2W 15 2.15K	CORNING	16299	W550	5
101	METALFILM 1/2W 15 2.49K	CORNING	16299	W550	5
102	METALFILM 1/2W 15 2.79K	CORNING	16299	W550	3
103	METALFILM 1/2W 15 3.15K	CORNING	16299	W550	3
104	METALFILM 1/2W 15 3.57K	CORNING	16299	W550	5
105	METALFILM 1/2W 15 4.02K	CORNING	16299	W550	4
106	METALFILM 1/2W 15 4.53K	CORNING	16299	W550	4
107	METALFILM 1/2W 15 5.09K	CORNING	16299	W550	4
108	METALFILM 1/2W 15 5.72K	CORNING	16299	W550	13
109	METALFILM 1/2W 15 6.43K	CORNING	16299	W550	3
110	METALFILM 1/2W 15 7.22K	CORNING	16299	W550	3
111	METALFILM 1/2W 15 8.11K	CORNING	16299	W550	2
112	METALFILM 1/2W 15 9.12K	CORNING	16299	W550	1
113	METALFILM 1/2W 15 10.3K	CORNING	16299	W550	4
114	METALFILM 1/2W 15 11.7K	CORNING	16299	W550	2
115	METALFILM 1/2W 15 13.3K	CORNING	16299	W550	1
116	METALFILM 1/2W 15 15.1K	CORNING	16299	W550	12
117	CARBON 1/2W 15 15K	STACKPOLE	29834	PC66P22L	1
118	METALFILM 1/2W 15 17.1K	CORNING	16299	W550	1
119	METALFILM 1/2W 15 19.5K	CORNING	16299	W550	6
120	METALFILM 1/2W 15 22.3K	CORNING	16299	W550	1
121	METALFILM 1/2W 15 25.5K	CORNING	16299	W550	3
122	METALFILM 1/2W 15 29.2K	CORNING	16299	W550	1
123	METALFILM 1/2W 15 33.4K	CORNING	16299	W550	1
124	METALFILM 1/2W 15 38.1K	CORNING	16299	W550	1
125	METALFILM 1/2W 15 43.4K	CORNING	16299	W550	1
126	METALFILM 1/2W 15 49.3K	CORNING	16299	W550	1
127	METALFILM 1/2W 15 55.8K	CORNING	16299	W550	1

PARTS LIST					
LINE NO	DESCRIPTION	MFG	FIGM	MFG P/N	QTY
128	METALFILM 1/2W 15 63K	CORNING	16299	W550	5
129	METALFILM 1/2W 15 70K	CORNING	16299	W550	1
130	METALFILM 1/2W 15 78K	CORNING	16299	W550	1
131	CARBON 1/2W 5W 32W	STACKPOLE	29834	PC66P22L	1
132					
133	POTENTIOMETER 100K	BECKMAN	80740	984930	3
134	POTENTIOMETER 200K	BECKMAN	80740	984930	2
135	POTENTIOMETER 500K	BECKMAN	80740	984930	2
136	POTENTIOMETER 1K	BECKMAN	80740	984930	2
137	POTENTIOMETER 10K	BECKMAN	80740	984930	2
138	POTENTIOMETER 100K	BECKMAN	80740	984930	1
139					
140	SWITCH ASSEMBLY (ATTEND)	WAVETEK	23328	2147-1004	1
141	SWITCH ASSEMBLY (SWEET TIME)	WAVETEK	23328	2147-089	1
142	SWITCH ASSEMBLY (CHORD)	WAVETEK	23328	2147-1056	1
143					
144	POTENTIOMETER	WAVETEK	23328	4497-401	1
145	POTENTIOMETER	WAVETEK	23328	4497-414	1
146	POTENTIOMETER DUAL	WAVETEK	23328	4497-101	1
147					
148	POWER ROD ASSEMBLY	WAVETEK	23328	2147-1032	1
149					
150	O-RING (DETAILED)	WOLFE'S BROS	-	D-19	1
151					
152					
153					
154					
155					
156					
157					
158					
159					

PARTS LIST					
LINE NO	DESCRIPTION	MFG	FIGM	MFG P/N	QTY
160					
161	SWITCH BRACKET	WAVETEK	23318	8139-905	2
162	HEATING	THEMOLLY	13103	2828A	2
163	TERMINALS (TALL BIF)	WAVEFIELD	05820	80-122	2
164	TERMINALS (TALL)	WAVECO	88245	20058-1	6
165	CONNECTOR PINS	MILTON ROSS	27042	10113W	1
166	CONNECTOR PINS	MILTON ROSS	27047	10160	2
167	CONNECTOR PINS	AMP	98779	61182-1	15
168	CONNECTOR PINS	AMP	98779	61182-2	15
169	CONNECTOR PINS	AMP	98779	61182-3	15
170	CONNECTOR PINS	AMP	98779	61182-4	15
171	CONNECTOR PINS	AMP	98779	61182-5	15
172	CONNECTOR PINS	AMP	98779	61182-6	15
173	CONNECTOR PINS	AMP	98779	61182-7	15
174	CONNECTOR PINS	AMP	98779	61182-8	15
175	CONNECTOR PINS	AMP	98779	61182-9	15
176	CONNECTOR PINS	AMP	98779	61182-10	15
177	CONNECTOR PINS	AMP	98779	61182-11	15
178	CONNECTOR PINS	AMP	98779	61182-12	15
179	CONNECTOR PINS	AMP	98779	61182-13	15
180	CONNECTOR PINS	AMP	98779	61182-14	15
181	CONNECTOR PINS	AMP	98779	61182-15	15
182	CONNECTOR PINS	AMP	98779	61182-16	15
183	CONNECTOR PINS	AMP	98779	61182-17	15
184	CONNECTOR PINS	AMP	98779	61182-18	15
185	CONNECTOR PINS	AMP	98779	61182-19	15
186	CONNECTOR PINS	AMP	98779	61182-20	15
187	CONNECTOR PINS	AMP	98779	61182-21	15
188	CONNECTOR PINS	AMP	98779	61182-22	15
189	CONNECTOR PINS	AMP	98779	61182-23	15
190	CONNECTOR PINS	AMP	98779	61182-24	15
191	CONNECTOR PINS	AMP	98779	61182-25	15
192	CONNECTOR PINS	AMP	98779	61182-26	15
193	CONNECTOR PINS	AMP	98779	61182-27	15
194	CONNECTOR PINS	AMP	98779	61182-28	15
195	CONNECTOR PINS	AMP	98779	61182-29	15
196	CONNECTOR PINS	AMP	98779	61182-30	15
197	CONNECTOR PINS	AMP	98779	61182-31	15
198	CONNECTOR PINS	AMP	98779	61182-32	15
199	CONNECTOR PINS	AMP	98779	61182-33	15
200	CONNECTOR PINS	AMP	98779	61182-34	15
201	CONNECTOR PINS	AMP	98779	61182-35	15
202	CONNECTOR PINS	AMP	98779	61182-36	15
203	CONNECTOR PINS	AMP	98779	61182-37	15
204	CONNECTOR PINS	AMP	98779	61182-38	15
205	CONNECTOR PINS	AMP	98779	61182-39	15
206	CONNECTOR PINS	AMP	98779	61182-40	15
207	CONNECTOR PINS	AMP	98779	61182-41	15
208	CONNECTOR PINS	AMP	98779	61182-42	15
209	CONNECTOR PINS	AMP	98779	61182-43	15
210	CONNECTOR PINS	AMP	98779	61182-44	15
211	CONNECTOR PINS	AMP	98779	61182-45	15
212	CONNECTOR PINS	AMP	98779	61182-46	15
213	CONNECTOR PINS	AMP	98779	61182-47	15
214	CONNECTOR PINS	AMP	98779	61182-48	15
215	CONNECTOR PINS	AMP	98779	61182-49	15
216	CONNECTOR PINS	AMP	98779	61182-50	15
217	CONNECTOR PINS	AMP	98779	61182-51	15
218	CONNECTOR PINS	AMP	98779	61182-52	15
219	CONNECTOR PINS	AMP	98779	61182-53	15
220	CONNECTOR PINS	AMP	98779	61182-54	15
221	CONNECTOR PINS	AMP	98779	61182-55	15
222	CONNECTOR PINS	AMP	98779	61182-56	15
223	CONNECTOR PINS	AMP	98779	61182-57	15
224	CONNECTOR PINS	AMP	98779	61182-58	15
225	CONNECTOR PINS	AMP	98779	61182-59	15
226	CONNECTOR PINS	AMP	98779	61182-60	15
227	CONNECTOR PINS	AMP	98779	61182-61	15
228	CONNECTOR PINS	AMP	98779	61182-62	15
229	CONNECTOR PINS	AMP	98779	61182-63	15
230	CONNECTOR PINS	AMP	98779	61182-64	15
231	CONNECTOR PINS	AMP	98779	61182-65	15
232	CONNECTOR PINS	AMP	98779	61182-66	15
233	CONNECTOR PINS	AMP	98779	61182-67	15
234	CONNECTOR PINS	AMP	98779	61182-68	15
235	CONNECTOR PINS	AMP	98779	61182-69	15
236	CONNECTOR PINS	AMP	98779	61182-70	15
237	CONNECTOR PINS	AMP	98779	61182-71	15
238	CONNECTOR PINS	AMP	98779	61182-72	15
239	CONNECTOR PINS	AMP	98779	61182-73	15
240	CONNECTOR PINS	AMP	98779	61182-74	15
241	CONNECTOR PINS	AMP	98779	61182-75	15
242	CONNECTOR PINS	AMP	98779	61182-76	15
243	CONNECTOR PINS	AMP	98779	61182-77	15
244	CONNECTOR PINS	AMP	98779	61182-78	15
245	CONNECTOR PINS	AMP	98779	61182-79	15
246	CONNECTOR PINS	AMP	98779	61182-80	15
247	CONNECTOR PINS	AMP	98779	61182-81	15
248	CONNECTOR PINS	AMP	98779	61182-82	15
249	CONNECTOR PINS	AMP	98779	61182-83	15
250	CONNECTOR PINS	AMP	98779	61182-84	15
251	CONNECTOR PINS	AMP	98779	61182-85	15
252	CONNECTOR PINS	AMP	98779	61182-86	15
253	CONNECTOR PINS	AMP	98779	61182-87	15
254	CONNECTOR PINS	AMP	98779	61182-88	15
255	CONNECTOR PINS	AMP	98779	61182-89	15
256	CONNECTOR PINS	AMP	98779	61182-90	15
257	CONNECTOR PINS	AMP	98779	61182-91	15
258	CONNECTOR PINS	AMP	98779	61182-92	15
259	CONNECTOR PINS	AMP	98779	61182-93	15
260	CONNECTOR PINS	AMP	98779	61182-94	15
261	CONNECTOR PINS	AMP	98779	61182-95	15
262	CONNECTOR PINS	AMP	98779	61182-96	15
263	CONNECTOR PINS	AMP	98779	61182-97	15
264	CONNECTOR PINS	AMP	98779	61182-98	15
265	CONNECTOR PINS	AMP	98779	61182-99	15
266	CONNECTOR PINS	AMP	98779	61182-100	15

NOTE: UNLESS OTHERWISE SPECIFIED

REPEAT ALL BUREAU AND BUREAU QUANTITIES	DATE	BY	33328
NATIONAL	DATE	BY	33328
WAVETEK	ASSEMBLY SWEEP BOARD		
WAVETEK	147		
WAVETEK	D/147-002		
WAVETEK	33328		