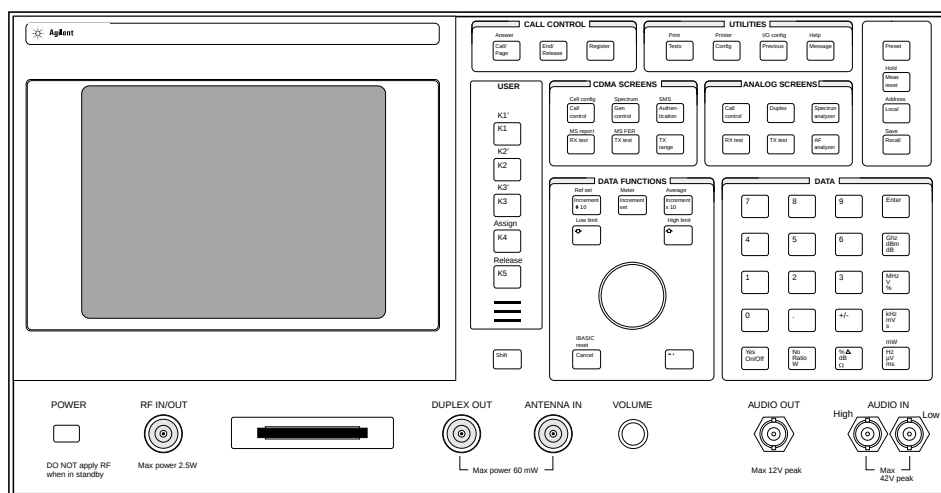


Agilent Technologies E8285A CDMA Mobile Station Test Set

Assembly Level Repair

Firmware Version: A.01.29 to A.02.04 (100-1000, 1700-2000 MHz)

Firmware Version: A.04.53 and above (800-1000, 1700-2000 MHz)



Agilent Part Number E8285-90033

Revision C

Printed in U.S.A.

June 2000



Agilent Technologies
Innovating the HP Way

Notice

Information contained in this document is subject to change without notice.

All Rights Reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

This material may be reproduced by or for the U.S. Government pursuant to the Copyright License under the clause at DFARS 52.227-7013 (APR 1988).

© Copyright 2000 Agilent Technologies

Manufacturer's Declaration

This statement is provided to comply with the requirements of the German Sound Emission Directive, from 18 January 1991.

This product has a sound pressure emission (at the operator position) < 70 dB(A).

- Sound Pressure $L_p < 70 \text{ dB(A)}$.
- At Operator Position.
- Normal Operation.
- According to ISO 7779:1988/EN 27779:1991 (Type Test).

Herstellerbescheinigung

Diese Information steht im Zusammenhang mit den Anforderungen der Maschinenlärminformationsverordnung vom 18 Januar 1991.

- Schalldruckpegel $L_p < 70 \text{ dB(A)}$.
- Am Arbeitsplatz.
- Normaler Betrieb.
- Nach ISO 7779:1988/EN 27779:1991 (Typprüfung).

Safety Considerations

GENERAL

This product and related documentation must be reviewed for familiarization with safety markings and instructions before operation.

This product has been designed and tested in accordance with IEC Publication 1010, "Safety Requirements for Electronic Measuring Apparatus," and has been supplied in a safe condition. This instruction documentation contains information and warnings which must be followed by the user to ensure safe operation and to maintain the product in a safe condition.

SAFETY EARTH GROUND

A uninterruptible safety earth ground must be provided from the main power source to the product input wiring terminals, power cord, or supplied power cord set.

CHASSIS GROUND TERMINAL

To prevent a potential shock hazard, always connect the rear-panel chassis ground terminal to earth ground when operating this instrument from a dc power source.

SAFETY SYMBOLS



Indicates instrument damage can occur if indicated operating limits are exceeded. Refer to the instructions in this guide.



Indicates hazardous voltages.



Indicates earth (ground) terminal

WARNING

A WARNING note denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

CAUTION

A CAUTION note denotes a hazard. It calls attention to an operation procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond an CAUTION note until the indicated conditions are fully understood and met.

Safety Considerations for this Instrument

WARNING

This product is a Safety Class I instrument (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the product is likely to make the product dangerous. Intentional interruption is prohibited.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

If this instrument is to be energized via an autotransformer (for voltage reduction), make sure the common terminal is connected to the earth terminal of the power source.

If this product is not used as specified, the protection provided by the equipment could be impaired. This product must be used in a normal condition (in which all means for protection are intact) only.

No operator serviceable parts in this product. Refer servicing to qualified personnel. To prevent electrical shock, do not remove covers.

Servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.

The opening of covers or removal of parts is likely to expose dangerous voltages. Disconnect the product from all voltage sources while it is being opened.

Adjustments described in the manual are performed with power supplied to the instrument while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.

The power cord is connected to internal capacitors that may remain live for 5 seconds after disconnecting the plug from its power supply.

For Continued protection against fire hazard, replace the line fuse(s) only with 250 V fuse(s) or the same current rating and type (for example, normal blow or time delay). Do not use repaired fuses or short circuited fuseholders.

CAUTION

Always use the three-prong ac power cord supplied with this product. Failure to ensure adequate earth grounding by not using this cord may cause product damage.

This product is designed for use in Installation Category II and Pollution Degree 2 per IEC 1010 and IEC 664 respectively. For indoor use only.

This product has autoranging line voltage input, be sure the supply voltage is within the specified range.

Ventilation Requirements: When installing the product in a cabinet, the convection into and out of the product must not be restricted. The ambient temperature (outside the cabinet) must be less than the maximum operating temperature of the product by 4° C for every 100 watts dissipated in the cabinet. If the total power dissipated in the cabinet is greater than 800 watts, then forced convection must be used.

Product Markings

CE - the CE mark is a registered trademark of the European Community. A CE mark accompanied by a year indicated the year the design was proven.

CSA - the CSA mark is a registered trademark of the Canadian Standards Association.

Agilent Technologies Warranty Statement for Commercial Products

E8285A CDMA Mobile Station Test Set

Duration of Warranty: One Year

1. Agilent warrants Agilent hardware, accessories and supplies against defects in materials and workmanship for the period specified above. If Agilent receives notice of such defects during the warranty period, Agilent will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.
2. Agilent warrants that Agilent software will not fail to execute its programming instructions, for the period specified above, due to defects in material and workmanship when properly installed and used. If Agilent receives notice of such defects during the warranty period, Agilent will replace software media which does not execute its programming instructions due to such defects.
3. Agilent does not warrant that the operation of Agilent products will be uninterrupted or error free. If Agilent is unable, within a reasonable time, to repair or replace any product to a condition as warranted, customer will be entitled to a refund of the purchase price upon prompt return of the product.
4. Agilent products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.
5. The warranty period begins on the date of delivery or on the date of installation if installed by Agilent. If customer schedules or delays Agilent installation more than 30 days after delivery, warranty begins on the 31st day from delivery.
6. Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by Agilent, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.
7. TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL IS EXPRESSED OR IMPLIED AND AGILENT SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OR MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.

8. Agilent will be liable for damage to tangible property per incident up to the greater of \$300,000 or the actual amount paid for the product that is the subject of the claim, and for damages for bodily injury or death, to the extent that all such damages are determined by a court of competent jurisdiction to have been directly caused by a defective Agilent product.
9. TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL AGILENT OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.

FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND: THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

DECLARATION OF CONFORMITY

according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name:

Agilent Technologies

Manufacturer's Address:

**Spokane Division
24001 E. Mission Avenue
Liberty Lake, Washington 99019-9599
USA**

declares that the product

Product Name:

CDMA Mobile Station Test Set

Model Number:

Agilent Technologies E8285A

Product Options:

All

conforms to the following Product specifications:

Safety: IEC 61010-1:1990+A1+A2 / EN 61010-1:1993+A2

EMC: CISPR 11:1990/EN 55011:1991- Group 1, Class A

IEC 61000-3-2:1995 / EN 61000-3-2: 1995

EN 50082-1:1992

IEC 801-3:1984 3V/m

IEC 801-4:1988 0.5 kV Sig. Lines, 1 kV Power Lines

Supplementary Information:

This product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE-marking accordingly.



Spokane, Washington USA

November 20, 1998

Vince Roland
Reliability & Regulatory
Engineering Manager

European Contact: Your local Agilent Technologies and Service Office or Agilent Technologies GmbH
Department ZQ/Standards Europe, Herrenberger Strasse 130, D-71034 Böblingen, Germany (FAX+49-7031-14-3143)

Table 1

United States of America: Agilent Technologies Test and Measurement Call Center P.O. Box 4026 Englewood, CO 80155-4026 (tel) 1 800 452 4844	Canada: Agilent Technologies Canada Inc. 5159 Spectrum Way Mississauga, Ontario L4W 5G1 (tel) 1 877 894 4414	Europe: Agilent Technologies European Marketing Organization P.O. Box 999 1180 AZ Amstelveen The Netherlands (tel) (3120) 547 9999
Japan: Agilent Technologies Japan Ltd. Measurement Assistance Center 9-1 Takakura-Cho, Hachioji-Shi, Tokyo 192-8510, Japan (tel) (81) 456-56-7832 (fax) (81) 426-56-7840	Latin America: Agilent Technologies Latin America Region Headquarters 5200 blue Lagoon Drive, Suite #950 Miami, Florida 33126 U.S. A. (tel) (305) 267 4245 (fax) (305) 267 4286	Australia/New Zealand: Agilent Technologies Australia Pty Ltd 347 Burwood Highway Forest Hill, Victoria 3131 (tel) 1 800 629 485 (Australia) (fax) (61 3) 9272 0749 (tel) 0 800 738 378 (New Zealand) (fax) (64 4) 802 6881
Asia Pacific: Agilent Technologies 19/F, Cityplaza One, 111 Kings Road, Taikoo shing, Hong Kong, SAR (tel) (852) 2599 7899 (fax) (852) 2506 9233		

Agilent Technologies E8285A Support Contacts

The documentation supplied with your Test Set is an excellent source of reference, application, and service information. Please use these manuals if you are experiencing technical problems:

Table 2

Support Documentation

User's Guide	Quick Reference Guide
Application Guide	Assembly Level Repair
Reference Guide	CD-ROM

If you have used the manuals and still have *application* questions, contact your local Agilent Technologies Sales Representative.

Repair assistance is available for the Agilent E8285A CDMA Mobile Station Test Set from the factory by phone and e-mail. External and internal Agilent users can contact the factory via email. Parts information is also available from Agilent.

When calling or writing for repair assistance, please have the following information ready:


- Instrument model number (E8285A)
- Instrument Serial Number (tag located on the rear panel).
- Installed options - if any (tag located on the rear panel).
- Instrument firmware revision (displayed at the top of the screen when the Test Set is powered up, and is also displayed on the CONFIGURE screen).

Support Telephone Numbers:

- 1 800 827 3848 (RF Comms Service Assistance, U.S. only)
- 1 509 921 3848 (RF Comms Service Assistance, International)
- 1 800 227 8164 (Agilent Direct Parts Ordering, U.S. only)
- 1 800 403 0801 (Agilent Instrument Support Center, U.S. only)
- 1 916 783 0804 (Agilent Service Parts Identification, U.S. & Intl.)

Power Cables

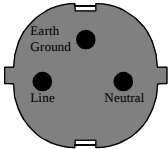Table 3

Plug type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	Straight/Straight Straight/90°	8120-1689 8120-1692	79 inches, mint gray 79 inches, mint gray
Used in the following locations:			
Bangladesh, Belgium, Benin, Bolivia, Bosnia-Herzegovina, Bulgaria, Burkina Faso, Burma, Burundi, Byelarus			
Cameroon, Canary Islands, Central African Republic, Chad, Chile, Comoros, Congo, Croatia, Czech Republic, Czechoslovakia			
Denmark, Djibouti			
East Germany, Egypt, Estonia, Ethiopia			
Finland, France, French Guiana, French Indian Ocean Areas			
Gabon, Gaza Strip, Georgia, Germany, Gozo, Greece			
Hungary			
Iceland, Indonesia, Iran, Iraq, Israel, Italy, Ivory Coast			
Jordan			
Kazakhstan, Korea, Kyrgystan			
Latvia, Lebanon, Libya, Lithuania, Luxembourg			
Macedonia, Madeira Islands, Malagasy Republic, Mali, Malta, Mauritania, Miquelon, Moldova, Mongolia, Morocco, Mozambique			
Nepal, Netherlands, Netherlands Antilles, Niger, Norway			
Oman			
Pakistan, Paraguay, Poland, Portugal			
Rep. South Africa, Romania, Russia, Rwanda			
Saudi Arabia (220V), Senegal, Slovak Republic, Slovenia, Somalia, Spain, Spanish Africa, Sri Lanka, St. Pierce Islands			

Plug type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
Sweden, Syria			
Tajikistan, Thailand, Togo, Tunisa, Turkey, Turkmenistan			
USSR, Ukraine, Uzbekistan			
Western Africa, Western Sahara			
Yugoslavia			
Zaire			

Table 4

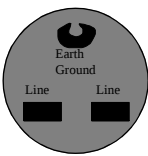
Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	Straight/Straight Straight/90°	8120-0698	90 inches, black
Used in the following locations:			
Peru			

Table 5


Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	Straight/Straight Straight/90°	8120-2104 8120-2296	79 inches, gray 79 inches, gray
Used in the following locations:			
Switzerland			

Table 6

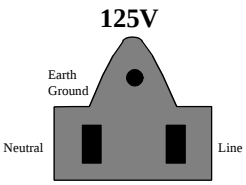
Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	Straight/Straight Straight/90° Straight/Straight	8120-1378 8120-1521 8120-1751	90 inches, jade gray 90 inches, jade gray 90 inches, jade gray
Used in the following locations:			
American Samoa			
Bahamas, Barbados, Belize, Bermuda, Brazil			
Caicos, Cambodia, Canada, Cayman Islands, Columbia, Costa Rica, Cuba			
Dominican Republic			
Ecuador, El Salvador			
French West Indies			
Guam, Guatemala, Guyana			
Haiti, Honduras			
Jamaica			
Korea			
Laos, Leeward and Windward Islands, Liberia			
Mexico, Midway Islands			
Nicaragua			
Other Pacific Islands			
Panama, Philippines, Puerto Rico			
Saudi Arabia (115V, 127V), Suriname			
Taiwan, Tobago, Trinidad, Trust Territories of Pacific Islands			
Turks Island			
United States			
Venezuela, Vietnam, Virgin Islands of the U.S.			
Wake Island			

Table 7

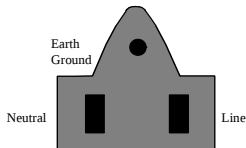
Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
JIS C 8303, 100 V 	Straight/Straight Straight/90°	8120-4753 8120-4754	90 inches, dark gray 90 inches, dark gray
Used in the following locations:			
Japan			

Table 8

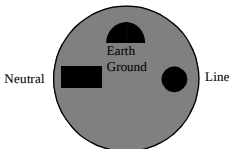
Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	90°/Straight 90°/90° Straight/Straight	8120-2956 8120-2957 8120-3997	79 inches, gray 79 inches, gray 79 inches, gray
Used in the following locations:			
Denmark			
Greenland			

Table 9

Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Description
	Straight/Straight Straight/90°	8120-4211 8120-4600	79 inches, mint gray 79 inches, mint gray
Used in the following locations:			
Botswana			
India			
Lesotho			
Malawi			
South-West Africa (Namibia), Switzerland			
Zambia, Zimbabwe			

Table 10


Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	Straight/Straight Straight/Straight Straight/90° Straight/90°	8120-1860 8120-1575 8120-2191 8120-4379	60 inches, jade gray 30 inches, jade gray 60 inches, jade gray 15.5 inches, jade gray
Used in the following locations:			
System Cabinets			

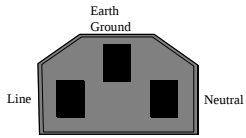Table 11


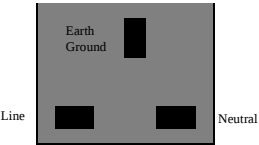
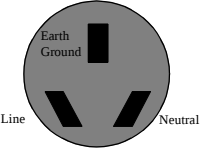
Plug Type (Male)	Plug Descriptions male/female	Agilent Part # (cable and plug)	Cable Descriptions
	90°/Straight 90°/90°	8120-1351 8120-1703	90 inches, mint gray 90 inches, mint gray
Used in the following locations:			
Bahrain, British Indian Ocean Terr., Brunei			
Canton, Cyprus			
Enderbury Island, Equatorial Guinea			
Falkland Islands, French Pacific Islands			
Gambia, Ghana, Gibraltar, Guinea			
Hong Kong			
Ireland			
Kenya, Kuwait			
Macao, Malaysia, Mauritius			
Nigeria			
Qatar			
Seychelles, Sierra Leone, Singapore, Southern Asia, Southern Pacific Islands, St. Helena, Sudan			
Tanzania			
Uganda, United Arab Emirates, United Kingdom			
Yeman (Aden & Sana)			

Table 12

Plug Type	Plug Descriptions male/female	Agilent Part # (cable & plug)	Cable Descriptions
	Straight/Straight Straight/90°	8120-1369 8120-0696	79 inches, gray 80 inches, gray
Used in the following locations:			
Argentina, Australia			
China (People's Republic)			
New Zealand			
Papua New Guinea			
Uruguay			
Western Samoa			

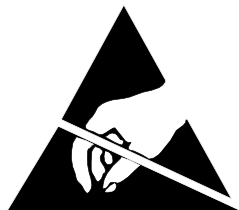

ATTENTION

Static Sensitive Devices

This instrument was constructed in an ESD (electro-static discharge) protected environment. This is because most of the semi conductor devices used in this instrument are susceptible to damage by static discharge.

Depending on the magnitude of the charge, device substrates can be punctured or destroyed by contact or mere proximity of a static charge. The result can cause degradation of device performance, early failure, or immediate destruction.

These charges are generated in numerous ways such as simple contact, separation of materials, and normal motions of persons working with static sensitive devices.

When handling or servicing equipment containing static sensitive devices, adequate precautions must be taken to prevent device damage or destruction.

Only those who are thoroughly familiar with industry accepted techniques for handling static sensitive devices should attempt to service circuitry with these devices.

In all instances, measures must be taken to prevent static charge build-up on work surfaces and persons handling the devices.

1. Introduction	
Test Set Description	26
Product Description	28
Troubleshooting Strategy	36
Repair Process	37
Calibration and Performance Verification	38
System Power Calibration Program	39
Test Equipment Needed for the System Power Calibration Program	40
E8285A Support Contacts	41
Hardware and Firmware Enhancements	42
Ordering New Manuals	43
2. Troubleshooting	
How to Troubleshoot the Test Set	46
Self-Test Diagnostics	48
Functional Diagnostics	58
AF, RF, and CDMA Diagnostics	64
Frequently Encountered Diagnostic Messages	68
Manual Troubleshooting Procedures	70
Service Screen	79
3. Disassembly and Replaceable Parts	
Before You Start	84
Disassembly Procedures	87
Parts List	105
4. Functional Verification	
5. Periodic Adjustments/Calibration	
Periodic Adjustments	126
Storing Calibration Factors	129
Running the Periodic IQ, or IQ Demod Path Calibration Programs.	130
Periodic Calibration Menu Descriptions	131
Setting the Timebase Latches	135
IQ Calibration Program Description	137
IQ Demod Path Calibration Program Description	139
6. Performance Tests	
Procedure and Equipment	142
RF Generator FM Distortion	
Performance Test 1	146
RF Generator FM Accuracy	
Performance Test 2	149
RF Generator FM Flatness	
Performance Test 3	152
RF Generator Residual FM	
Performance Test 4	155
RF Generator Level Accuracy	

Performance Test 5	158
RF Generator Harmonics Spectral Purity	
Performance Test 6	163
RF Generator Spurious Spectral Purity	
Performance Test 7	165
AF Generator AC Level Accuracy	
Performance Test 8	167
AF Generator DC Level Accuracy	
Performance Test 9	168
AF Generator Residual Distortion	
Performance Test 10	169
AF Generator Frequency Accuracy	
Performance Test 11	170
AF Analyzer AC Level Accuracy	
Performance Test 12	171
AF Analyzer Residual Noise	
Performance Test 13	172
AF Analyzer Distortion and SINAD Accuracy	
Performance Test 14	173
AF Analyzer DC Level Accuracy	
Performance Test 15	174
AF Analyzer Frequency Accuracy to 100 kHz	
Performance Test 16	175
AF Analyzer Frequency Accuracy at 400 kHz	
Performance Test 17	176
Oscilloscope Amplitude Accuracy	
Performance Test 18	177
RF Analyzer Level Accuracy	
Performance Test 19	179
RF Analyzer FM Accuracy	
Performance Test 20	180
RF Analyzer FM Distortion	
Performance Test 21	182
RF Analyzer FM Bandwidth	
Performance Test 22	184
RF Analyzer Residual FM	
Performance Test 23	186
Spectrum Analyzer Image Rejection	
Performance Test 24	188
CDMA Generator RF IN/OUT Amplitude Level Accuracy	
Performance Test 25	190
CDMA Generator DUPLEX OUT Amplitude Level Accuracy	
Performance Test 26	192
CDMA Generator Modulation Accuracy	
Performance Test 27	194
CDMA Analyzer Average Power Level Accuracy	
Performance Test 28	196
CDMA Analyzer Channel Power Level Accuracy	
Performance Test 29	198

7. Performance Test Records

RF Generator FM Distortion	
Performance Test 1 Record	202
RF Generator FM Accuracy	
Performance Test 2 Record	204
RF Generator FM Flatness	
Performance Test 3 Record	206
RF Generator Residual FM	
Performance Test 4 Record	208
RF Generator Level Accuracy	
Performance Test 5 Record	210
RF Generator Harmonics Spectral Purity	
Performance Test 6 Record	218
RF Generator Spurious Spectral Purity	
Performance Test 7 Record	221
AF Generator AC Level Accuracy	
Performance Test 8 Record	223
AF Generator DC Level Accuracy	
Performance Test 9 Record	225
AF Generator Residual Distortion	
Performance Test 10 Record	226
AF Generator Frequency Accuracy	
Performance Test 11 Record	228
AF Analyzer AC Level Accuracy	
Performance Test 12 Record	229
AF Analyzer Residual Noise	
Performance Test 13 Record	230
AF Analyzer Distortion and SINAD Accuracy	
Performance Test 14 Record	231
AF Analyzer DC Level Accuracy	
Performance Test 15 Record	232
AF Analyzer Frequency Accuracy to 100 kHz	
Performance Test 16 Record	233
AF Analyzer Frequency Accuracy at 400 kHz	
Performance Test 17 Record	234
Oscilloscope Amplitude Accuracy	
Performance Test 18 Record	235
RF Analyzer Level Accuracy	
Performance Test 19 Record	236
RF Analyzer FM Accuracy	
Performance Test 20 Record	238
RF Analyzer FM Distortion	
Performance Test 21 Record	239
RF Analyzer FM Bandwidth	
Performance Test 22 Record	240
RF Analyzer Residual FM	
Performance Test 23 Record	241
Spectrum Analyzer Image Rejection	
Performance Test 24 Record	242

CDMA Generator RF IN/OUT Amplitude Level Accuracy	
Performance Test 25 Record	243
CDMA Generator DUPLEX OUT Amplitude Level Accuracy	
Performance Test 26	244
CDMA Generator Modulation Accuracy	
Performance Test 27 Record	245
CDMA Analyzer Average Power Level Accuracy	
Performance Test 28 Record	246
CDMA Analyzer Channel Power Level Accuracy	
Performance Test 29 Record	247

8. Block Diagrams

Signal Flow and Interconnections	250
RF Input/Output Section.....	253
RF Analyzer Section	255
Spectrum Analyzer	264
Audio Analyzer Section	266
CDMA Analyzer Section	271
CDMA Generator Section	275
Audio Generator Section	277
RF Generator Section	279
Reference/Regulator Section	284
Instrument Control Section.....	287
GPIB Serial	291

9. Service Screen

Troubleshooting with the SERVICE Screen	294
---	-----

1 Introduction

This manual explains how to repair and calibrate the Agilent Technologies E8285A CDMA/PCS Mobile Station Test Set; called the “Test Set” throughout this manual.

Throughout this manual you will see this note:

NOTE


Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

The purpose of this note is to bring attention to RF frequency band coverage provided by firmware revision A.04.5X and above. Test Sets with firmware revision A.02.XX and below can operate at RF frequencies from 100 (usable to 30 MHz) to 1000 and 1700 to 2000 MHz.

Test Set Description

Several analog and digital test instruments are integrated into the E8285A CDMA Mobile Station Test Set to test Code Division Multiple Access (CDMA) digital cellular, PCS, and several types of analog mobile phones, such as AMPS, NAMPS, and TACS.

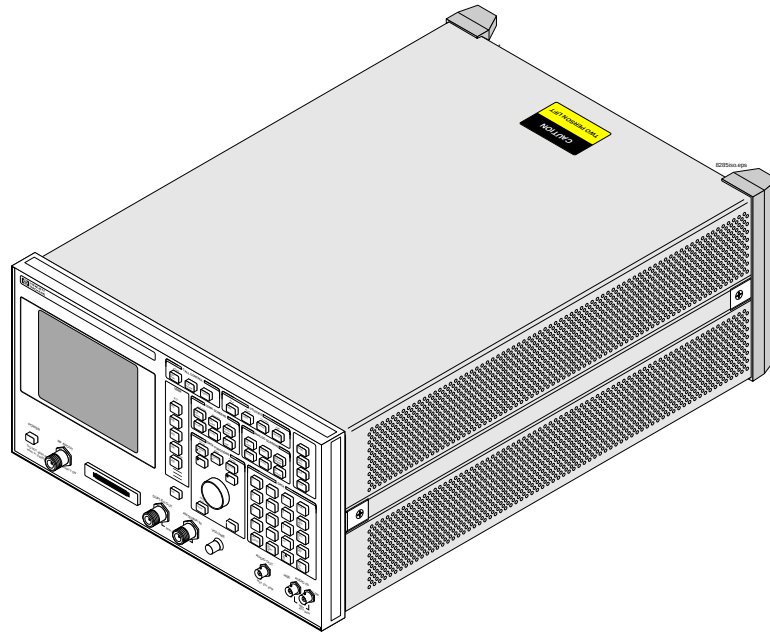Figure 1-1 **The E8285A CDMA Mobile Station Test Set**



Some of the instrument functions in the Test Set include:

- Synthesized AM, FM, and IQ modulation signal generator
- AM, FM and IQ modulation analyzer
- Duplex offset signal generator
- SSB demodulator
- RF power meter
- Audio and RF frequency counter and RF frequency error meter
- AC and DC voltmeter
- Distortion, SINAD, and signal-to-noise-ratio meters
- Two variable audio sources
- Oscilloscope
- Spectrum analyzer and tracking generator (optional)
- Signaling encoder and decoder
- DC current meter

Some of these functions are directly replaceable assemblies (such as the spectrum analyzer); some functions are digitally derived from other assemblies (such as the oscilloscope). Most of the replaceable assemblies are plug-in components.

Most instrument functions can be controlled by front-panel (local) controls and by remote commands (using a connected controller). Power on/off, volume, and squelch controls cannot be accessed remotely. Controls are grouped together on display screens that are usually associated with a specific task (such as making a call to a CDMA mobile phone).

An Instrument BASIC (IBASIC) controller is also built into the Test Set to allow automated operation without using an external controller. This computer also has the ability to be a system controller to other test system instruments. Refer to the Test Set's user's guide for information on using the IBASIC computer (also referred to as the IBASIC controller).

Product Description

The E8285A CDMA Mobile Test Set is designed to meet the needs of Cellular Provider Point of Sale Retailers, manufacturing customers, and other customers who require CDMA Mobile Phone test capability. The Test Set is very similar to its predecessor, the Agilent Technologies 8924C with the addition of newly designed RF I/O module, upconverter and downconverter assemblies. These assemblies extend the Test Set frequency range to cover the 1800-1900 MHz PCS Cellular band as well as providing standard 800 MHz cellular band coverage.

Internal Operating System

A Motorola® 68020 – 33 MHz microprocessor acts as the host processor of the Test Set. It receives commands from the front-panel controls and communicates directly with almost every assembly inside the Test Set. The host is also in constant communication with several other microprocessors located throughout the Test Set.


Communications to the GPIB, serial, and parallel ports are through the control interface assembly to the host processor.

This processor is also the core for the internal IBASIC computer. The IBASIC computer is used to load and run various software packages for automated radio tests. It is also responsible for executing the internal diagnostic routines used to troubleshoot a failing instrument.

Instrument Frequency References

The Test Set reference timebase path consists of two assemblies, an ovenized high stability reference assembly and a CDMA reference assembly. These two assemblies provide all frequency, phase, and timing signals used to accurately synthesize all of the Test Set's source and analysis signals. A master reference signal can originate from either an external source at the 10 MHz input on the rear panel, or from the internal 10 MHz phase locked loop oscillator located on the high stability reference assembly. The high stability reference assembly provides timebase references for the analog assemblies and a 10 MHz reference signal to the CDMA reference assembly. The CDMA reference assembly uses this signal to generate clock and timing signals for internal CDMA assemblies, provide the 10 MHz output signal to the rear panel, and generate the AWGN (Additive White Gaussian Noise) I & Q noise source signals.

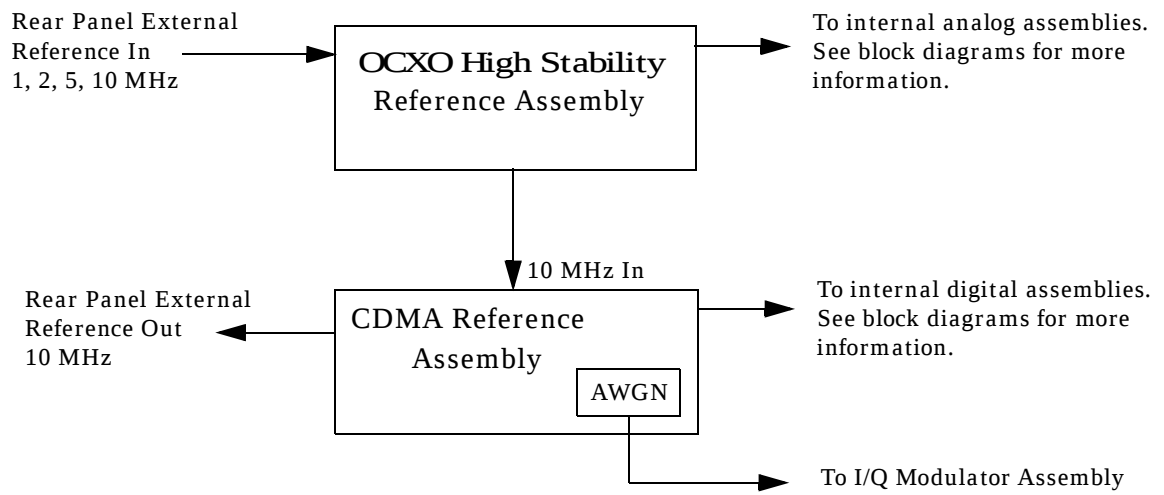Figure 1-2 Reference Signal Generation



RF Analysis

RF signals connected to the front panel RF IN/OUT connector or ANTENNA IN connector go to the RF I/O module. The signal level and RF frequency are measured, and the level is adjusted using fixed step and variable attenuators in the separate downconverter module.

CAUTION


Over-Power Damage

The ANTENNA IN connector is only used for very low level signals (60 mW or less), and cannot be used for Transmitter (TX) Power measurements. Exceeding this limit may destroy the RF I/O module. The RF IN/OUT connector is used to measure direct mobile transmitter power up to 2.5 Watts continuous.

The downconverter mixes the input signal with a local oscillator signal from the Receiver Synthesizer assembly to produce a 114.3 MHz, 614.3, or 385.7 MHz IF signal (depending on the frequency of the received signal). The signal goes through a bandpass filter and then on to the Receiver assembly.

If the IF is 614.3 or 385.7 MHz, the Receiver assembly mixes the signal with a 500 MHz local oscillator (LO) signal from the Reference assembly to obtain the 114.3 MHz IF. If the IF is 114.3 MHz, the signal bypasses this downconversion. The 114.3 MHz signal divides into two paths.

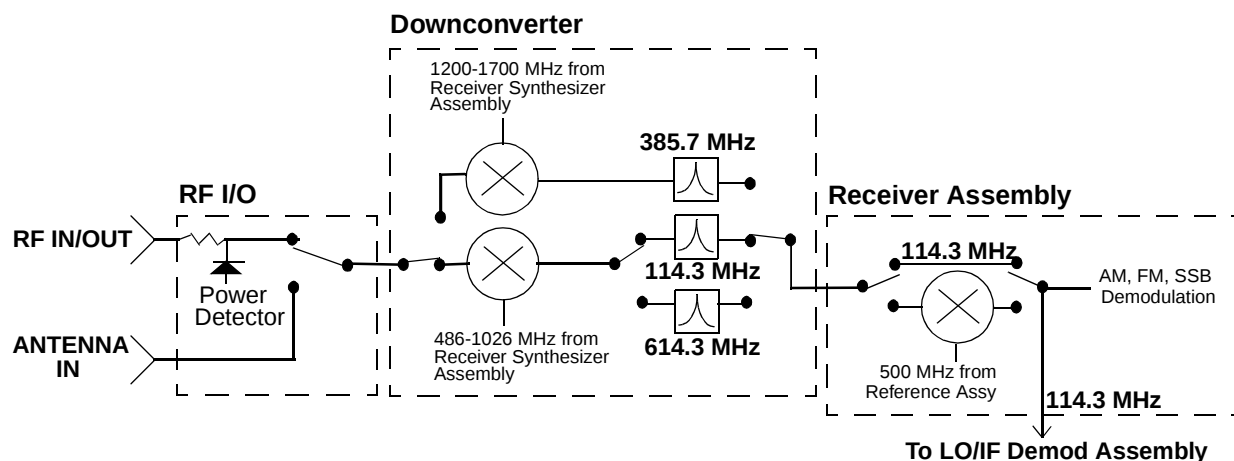Figure 1-3 Received Signal Downconversion




AM, FM, or SSB Modulation Analysis

For AM, FM, or SSB signals, the 114.3 MHz signal is downconverted to 10.7 MHz and routed through a user-selected IF bandpass filter (15 kHz or 230 kHz) that is centered around the 10.7 MHz IF. AM and SSB signals are demodulated at this point; FM signals are downconverted to a 700 kHz IF before demodulation. The demodulated signal is routed to the Audio Analyzer 1 assembly for audio frequency filtering. This assembly is also connected to the front-panel AUDIO IN connector for direct audio measurements. Several low pass and high pass filters can be selected, as well as a C-Message or optional CCITT bandpass filter. Frequency and voltage measurements are then made on this signal by the Measurement assembly. The signal is then routed to the Audio Analyzer 2 assembly.

The Audio Analyzer 2 assembly routes the signal through a user-selectable detector. A variable frequency notch filter may also be selected for SINAD and distortion measurements. The detector's signal is then sent to several other assemblies:

- The Measurement assembly measures and displays the modulation level (such as FM deviation) and provide the input to the oscilloscope.
- The Signaling Source Analyzer assembly for signaling decoding.
- The rear-panel AUD MONITOR OUTPUT connector for external use of the demodulated signal.
- The front-panel VOLUME control and internal speaker to listen to the demodulated signal.

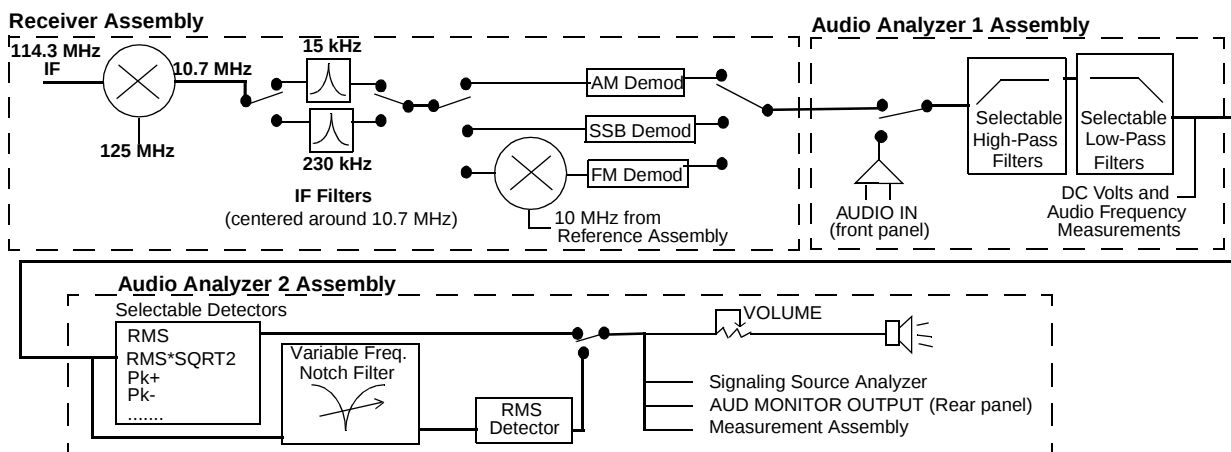Figure 1-4 AM, FM, and SSB Signal Demodulation and Filtering



CDMA Signal Analysis

The 114.3 MHz IF also goes to the CDMA LO/IF Demodulation assembly. This assembly provides a through path to the spectrum analyzer (Option 102) for all RF signals, and also provides down conversion for CDMA signals, measurements and call processing.


To downconvert the CDMA signal, the 114.3 MHz IF is mixed with a 117.9864 MHz local oscillator (LO) signal to produce a 3.6864 MHz IF. (The LO signal is from an oscillator that is phase locked to a 10 MHz signal from the CDMA Reference module.)

The 3.6864 MHz signal is split and goes to the Receiver DSP assembly, and also through a variable-gain IF amplifier before IQ demodulation. The demodulated I and Q baseband signals are then routed to the Digital Cellsite assemblies.

Under control from the Protocol Processor assembly, the Digital Cellsite assemblies use the demodulated IQ information to set up and maintain calls to CDMA phones. The Digital Cellsite 1 assembly also supplies feedback to the CDMA LO/IF Demodulation assembly to control the level of the variable-gain IF amplifier into the demodulator.

The Receive DSP assembly converts, digitizes, and provides final analysis on the 3.6864 MHz signal to make measurements, such as rho, timing accuracy, carrier feedthrough, and phase error.

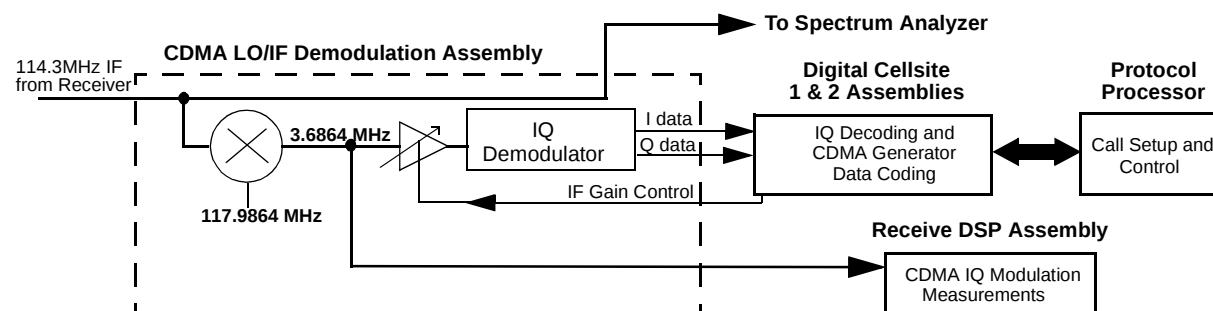Figure 1-5 Analyzing CDMA Signals



RF Signal Generation

The Signal Generator Synthesizer assembly creates a 500 to 1000 MHz signal. The reference signal for the synthesizer is supplied by the High Stability Reference assembly. The synthesizer's frequency is varied using a divider network in the feedback circuit of the phase locked loop. Any FM modulation signal (from the Modulation Distribution assembly), and the frequency sweep signal for the spectrum analyzer and tracking generator, are integrated into this feedback loop. If a CDMA signal is not being generated, the 500-1000 MHz signal is passed through the I/Q Modulator assembly, bypassing the I/Q modulator.

IQ Modulation

If a CDMA signal is being generated, the signal is I/Q modulated in the I/Q Modulator assembly, using data from the Analog Cellsite assembly. The Analog Cellsite assembly gets its data from the two Digital Cellsite assemblies, which are controlled by the Protocol Processor assembly. Up to eight code channels of CDMA modulation data and noise may be summed into the IQ modulator at one time. These channels provide phone paging, synchronization, voice (traffic) transmission, and other CDMA system functions.

Final Frequency Conversion and Leveling

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

The RF Output assembly performs three tasks:

- Mixes or divides the 500 to 1000 MHz signal to produce signals below 500 MHz (down to 30 MHz). A 1 GHz LO from the Reference assembly is used for mixing.
- Provides AM modulation (when selected).
- Controls the signal level out of the assembly using an Automatic Level Control (ALC) loop.

The signal from the RF Output assembly is sent to one of two paths in the Upconverter assembly. RF frequencies from 30 MHz to 1 GHz route through the bypass path. PCS frequencies are upconverted to supply frequencies from 1700 to 2000 MHz. The user-selected frequency contains desired modulation (AM, FM, or CDMA), or a continuous wave (CW) signal. The level has been adjusted to provide the required level (after going through RF I/O assembly).

RF and Duplex Outputs


NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

The RF I/O assembly receives the signal from the Upconverter assembly and routes it to the selected output connector: RF IN/OUT or DUPLEX OUT. The signal first goes to a variable attenuator for level control.

If the DUPLEX OUT connector is selected, the signal then goes directly to that connector without additional attenuation. If the RF IN/OUT connector is used as an output, the signal passes through additional attenuation before reaching the connector. This is why a greater signal level can be output through the DUPLEX OUT connector than through the RF IN/OUT connector.

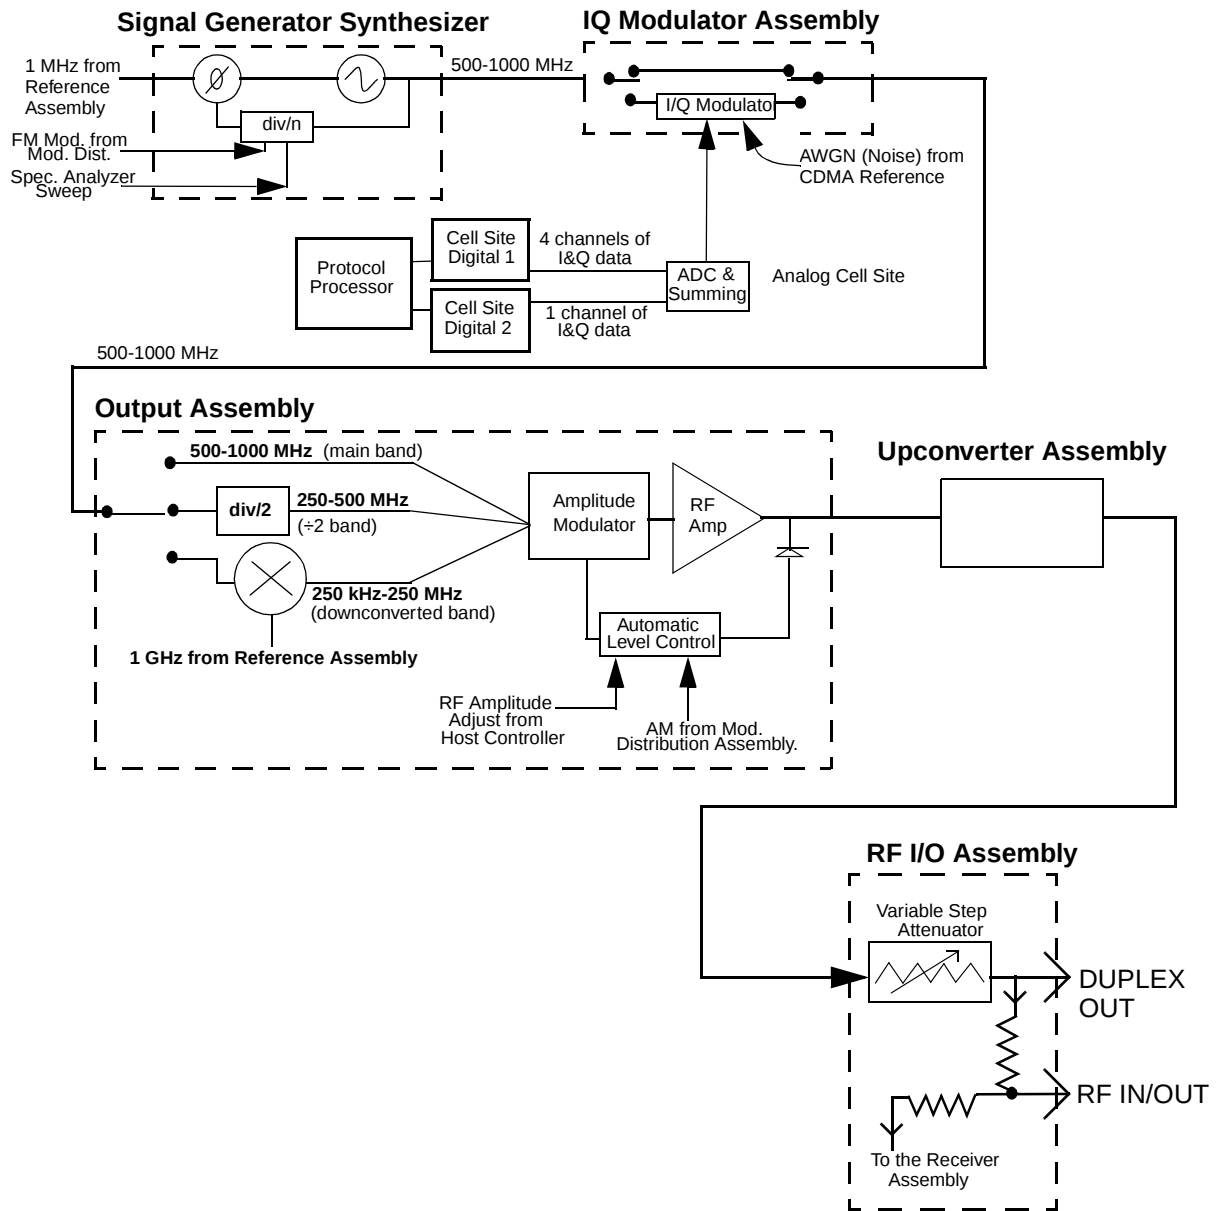Figure 1-6 RF Generation Path Overview



Troubleshooting Strategy

You can repair the Test Set yourself or send it to your local Agilent Technologies Instrument Support Center. Before starting a repair, you should become familiar with basic Test Set operation using the user's guide.

Troubleshooting relies on built-in diagnostics. Because some diagnostic results may be ambiguous, further interpretation and testing may be required. There are several diagnostic routines built into the Test Set:

- Power-up self-test diagnostics to test controller functioning. These are automatically run when the instrument is turned on, and can also be run after the instrument has been on.
- RF (Radio Frequency) assembly diagnostics.
- AF (Audio Frequency) assembly diagnostics.
- Digital assembly diagnostics for CDMA signals.

Troubleshooting hints in this manual include:

- Instructions on how to begin troubleshooting (see [chapter 2, "Troubleshooting"](#)).
- Block diagrams and theory of operation (this chapter and [chapter 8, "Block Diagrams"](#)).
- Detailed information about the built-in diagnostics (see [chapter 2, "Troubleshooting"](#)).
- Error message explanations (see [chapter 10, "Error Messages"](#)).

Repair Process

Repairing the Test Set consists of:

- Identifying the faulty assembly – see [chapter 2, "Troubleshooting"](#)
- Ordering a replacement assembly – see [chapter 3, "Disassembly and Replaceable Parts"](#)
- Replacing the faulty assembly – see [chapter 3, "Disassembly and Replaceable Parts"](#)
- Downloading calibration data – see [chapter 2, "Troubleshooting"](#) and regenerating calibration data – see [See "System Power Calibration Program" on page 39.](#)
- Performing periodic calibration – see [chapter 5, "Periodic Adjustments/Calibration"](#)
- Functional Verification – see [chapter 4, "Functional Verification"](#)

Calibration and Performance Verification

The Test Set periodically requires some maintenance to verify that it meets its published specifications. See [“Periodic Adjustments” on page 126](#). Periodic Adjustments (calibration) consists of running several built-in calibration programs. The recommended interval for periodic adjustments is 12 months. An external frequency counter and dc voltmeter are required. See [Chapter 5, “Periodic Adjustments/Calibration” on page 5](#).

NOTE

The recommended Test Set calibration interval is 24 months. This is accomplished by performing the performance tests (see [Chapter 6, “Performance Tests,” on page 141](#)) or sending the Test Set to an Agilent Calibration Center or other qualified calibration lab.

The performance tests verify that the Test Set performs as indicated in the Specifications. These tests should be performed if the Test Set's operation is suspect, even though it passes all internal diagnostic checks. This identifies whether a problem actually exists in the Test Set, or if an application problem exists outside of the Test Set.

Several assemblies, when replaced, require running specific periodic calibration procedures to create calibration factors for that assembly. In other cases, the calibration data will be included with the replacement assembly on a memory card. Instructions that come with the replacement assembly explain how to download the calibration data. (This is not considered part of periodic calibration.)

NOTE

When troubleshooting the Test Set, it is sometimes desirable to swap a known-good assembly (perhaps from another Test Set) for a suspected-faulty assembly. If the swapped assembly requires calibration data, most assemblies will operate well enough with the original assembly's calibration data to troubleshoot and run the diagnostics. However, do not expect the Test Set to meet its specifications. Also, some assemblies may appear to fail because of the incorrect calibration data.

System Power Calibration Program

This adjustment program is not found in ROM of the Test Set. This program resides on a PCMCIA Memory Card, part-number E6380-61811. It has to be downloaded from the memory card.

This program generates system power calibration factors for the Test Set. The purpose of this program is to generate calibration factors for the RF Input/Output Section. This assures that the Test Set will meet its power measurement accuracy specifications after repair.

An RF signal generator and a power splitter produce two signals with the same power level. One signal is measured by the power meter, the other is applied to the input of the Test Set. The program measures these levels at selected frequencies and then generates calibration factors so the Test Set readings match the power readings. These calibration factors are stored in the Test Set.

Communication between the active instrument(s) is through the Test Set's GPIB port. An optional printer can be connected to the Test Set's GPIB, serial, or parallel port. Typically this is done from the Printer Setup field of the SOFTWARE menu screen.

To run the System Power Calibration program:

1. Connect GPIB cables from the Test Set to the signal generator and power meter.
2. Insert the PCMCIA Memory Card, p/n E6380-61811, into the Test Set's memory card slot.
3. Press the Tests key to access the TESTS (Main Menu) screen.
4. Select the field under **Select Procedure Location:**
5. Select **Card** under the **Choices:** menu.
6. Select the field under **Select Procedure Filename:**
7. Select **SYSPWR0**
8. Select **Run Test** (K1 key).
9. Follow the instructions on the screen.

Test Equipment Needed for the System Power Calibration Program

For the **System Power Calibration** program you will need the equipment listed in [table 1-1](#). Because this calibration program is written specifically for this equipment, no substitutions are possible.

Table 1-1 Equipment List for System Power Calibration Program

Equipment Type	Agilent Technologies Model Number
Signal Generator	8648B Option 1EA
Power Meter	436A 437B 438A EPM-441A EPM-442A 8901B 8902A
Power Sensor	8482A ECP-E18A 11722A
Power Splitter	11667A
GPIB Cables (2 cables required, 3 if GPIB printer is used.)	Any GPIB cable
Printer (optional)	Any serial, parallel, or GPIB printer

E8285A Support Contacts

The documentation supplied with your Test Set is an excellent source of reference, applications, and service information. Please use these manuals if you are experiencing technical problems:

- Application information is located in the E8285 Application Guide (p/n E8285-90019) and the GPIB Condensed Programming Reference Guide (p/n E8285-90020).
- Operation and reference information are included in the E8285A CDMA Mobile Station Test Set User's Guide (p/n E8285-90018).
- Calibration and repair information in this manual.

If you have used the manuals and still have application questions, contact your local representative.

Repair assistance is available from the factory by phone and email. Internal Agilent Technologies users can contact the factory through email. Parts information is also available from Agilent Technologies. When calling or writing for repair assistance, please have the following information ready:

- Instrument model number
- Instrument serial number; tag located on the rear panel.
- Installed options - if any; tag located on the rear panel.
- Instrument firmware revision; displayed at the top of the screen when the Test Set is powered up, and is also displayed on the CONFIGURE screen.

Support Telephone Numbers and Email Address

- Call Center 1-800-922-8920
- Instrument Support Center 1-800-403-0801
- RF Comms Service Assistance,
International 1-509-921-3848
U.S. only 1-800-827-3848
- Service Parts Identification,
U.S. & International 1-916-783-0804
Direct Parts Ordering,
U.S. only 1-800-227-8164
- Email Spokane_Service@agilent.com

Hardware and Firmware Enhancements

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

The hardware and firmware of the Test Set are enhanced on a continuous basis. If an assembly is replaced, it is recommended that the firmware be upgraded at the same time. This is important if an assembly-level repair is performed because exchange assemblies, which may be of a later revision than the one being replaced, may require a later revision of the firmware to function correctly.

Ordering New Manuals

The Test Set is designed to allow future upgrades to hardware and firmware which may obsolete some of the material in this manual. For the latest document revisions and information, call the Direct Parts Ordering office (U.S. only), 1-800-227-8164.

For local and remote operating information, including descriptions of all controls, connectors, and programming syntax, refer to the E8285 User's Guide, part number E8285-90018.

For application information refer to the E8285 Application Guide, p/n E8285-90019. Also, all manuals are available on CD-ROM, p/n E8285-10003.

2 Troubleshooting

This chapter explains how to isolate a problem to the defective assembly. Troubleshooting uses the Test Set's built-in diagnostics. If diagnostics can't identify the faulty assembly, supplementary information in the form of manual troubleshooting procedures is provided.

How to Troubleshoot the Test Set

Document the result of each step in case you need to contact Agilent Technologies for service assistance. General troubleshooting steps are illustrated in [figure 2-2 on page 47](#).

NOTE

Periodic Adjustment Interval

The calibration programs Periodic Calibration, IQ Calibration and IQ Demod Path Calibration should be performed after the replacement of any assembly referred to in [table 5-1, "Assembly Calibration Information" on page 127](#), or at least every 24 months. See [Chapter 5, "Periodic Adjustments/Calibration" on page 125](#) for details.

On power-up, the Test Set runs the Self-Test Diagnostic. Most of the Test Set's digital control functions are tested. The outcome of the test appears on the display (if operating) and on four (DIAG) LEDs 0,1,2, 3, and 4 viewable digital controller unit, see [figure 2-1](#) (you must remove the external and top-internal covers to view the LEDs).

Figure 2-1 LEDs


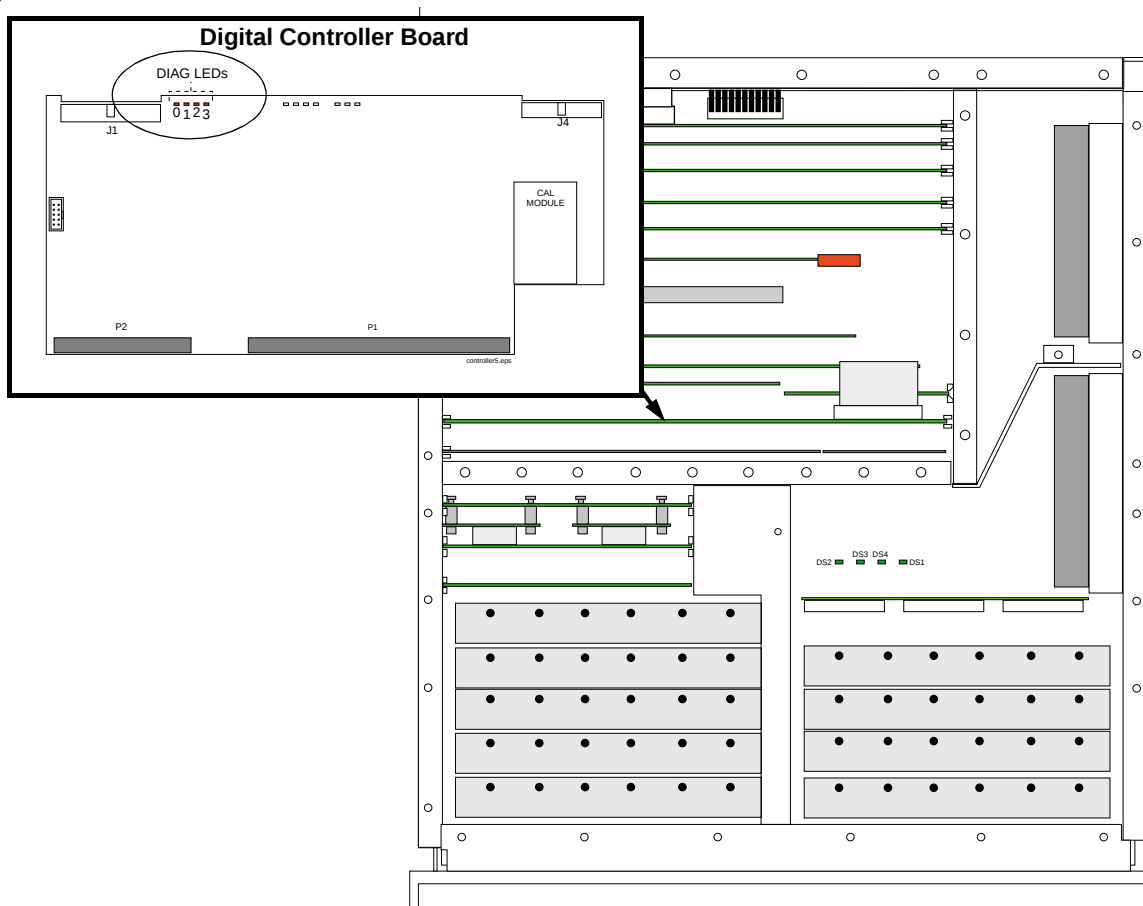


Figure 2-2 Agilent E8285A Test Set Troubleshooting Flowchart

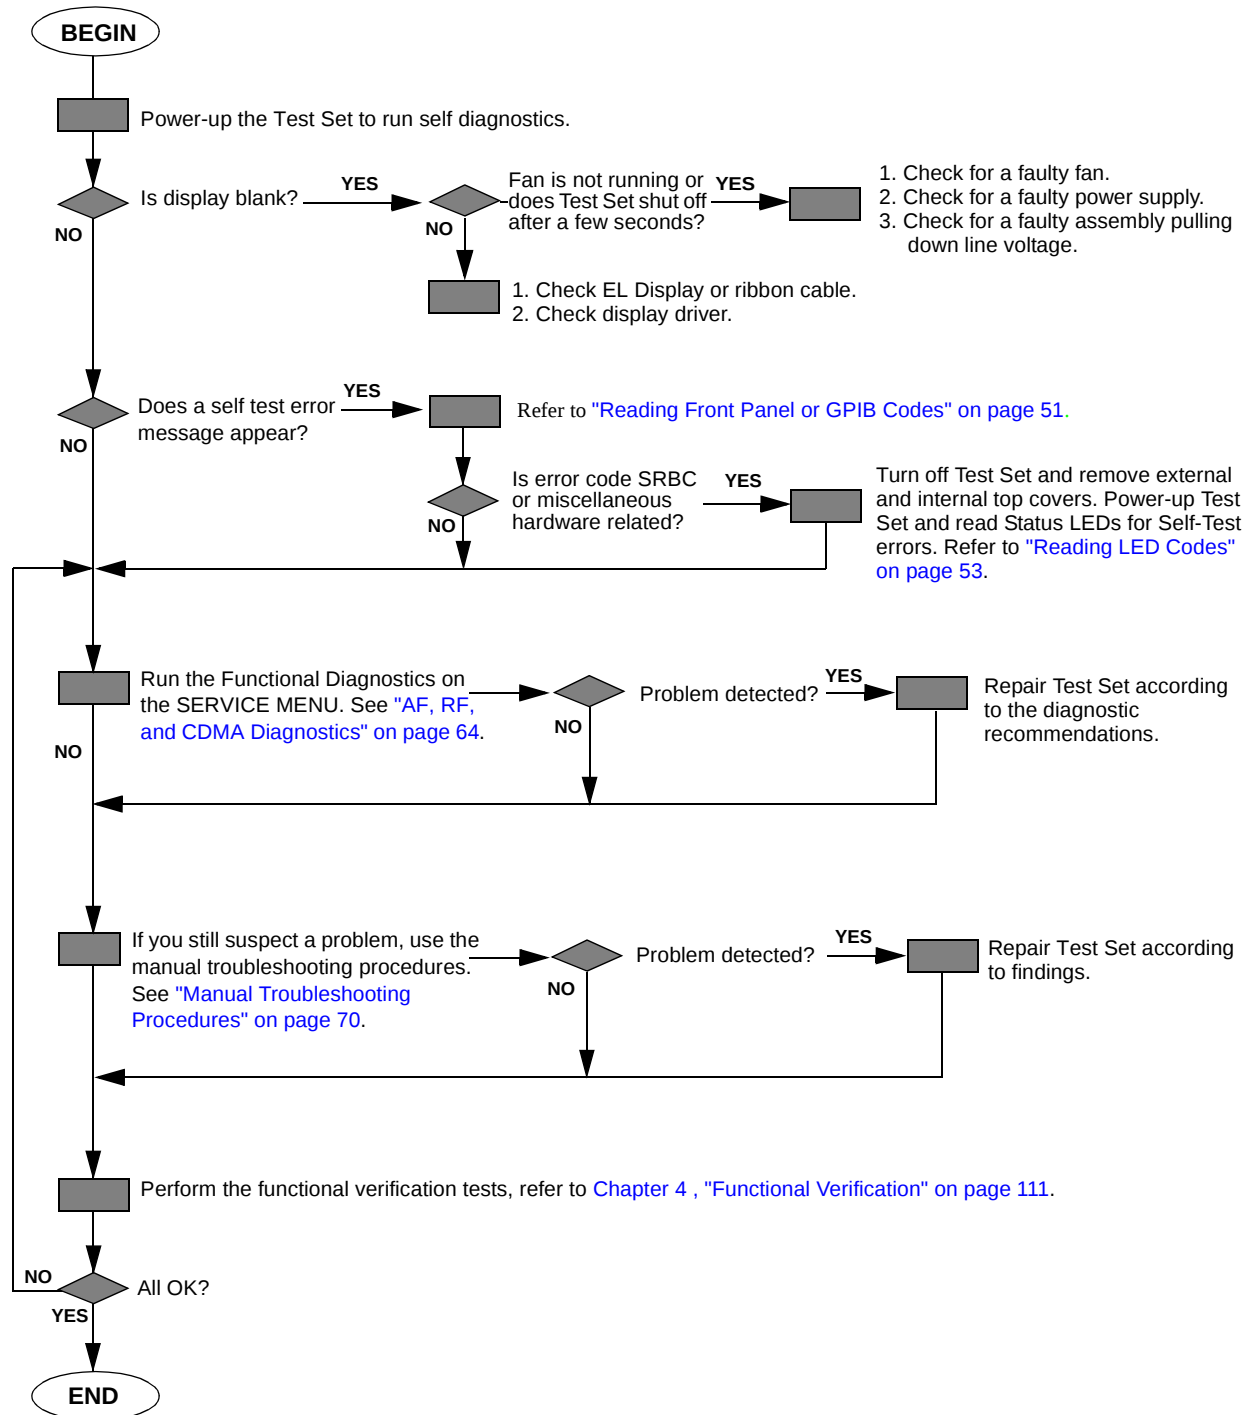

Self-Test Diagnostics

On power-up the Test Set runs a diagnostic self-test. Most of the Test Set's digital functions are tested. The outcome of the test appears on the display (if operating) and on four LEDs viewable and the digital controller board (you must remove the external and top-internal covers to view the LEDs).

The self-test diagnostic can be run three ways:

1. The test runs automatically when the Test Set is turned on. After the Test Set powers up, a message appears at the top of the display. If one or more tests fail, the message reports the failure with a hexadecimal code.

During the test, coded failure information is displayed on four LEDs on the top of the controller board, see [figure 2-1 on page 46](#). The Test Set's cover must be removed to view these LEDs. See [Chapter 3, "Disassembly and Replaceable Parts," on page 83](#) for disassembly and replacement instructions.

2. The test runs when the Test Set receives the query ***TST?** over GPIB. The resultant decimal code can be read over the bus.
3. The test runs when the **Self Test** menu item of the Functional Diagnostics menu is selected.

To Start Troubleshooting

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

1. Turn on the Test Set to automatically run the self test diagnostics.
 - If the Test Set does not power up, see ["If the Test Set Fails to Power-up" on page 49](#).
 - If all self-test diagnostics pass, and the front-panel keys and knob work, you can assume that the digital control assemblies work.
2. After power-up, the top line of the Test Set's display should show copyright information and the firmware revision code. The second line should display **All self tests passed**.
 - If the Test Set powers-up with **"One or more self-tests failed. Error code:<hexadecimal error code>:"**, see ["Reading Front Panel or GPIB Codes" on page 51](#).
 - See ["Frequently Encountered Diagnostic Messages" on page 68](#) for other error messages that might appear on the second line of the display.
3. The CDMA CALL CONTROL screen should be displayed. Two conditions cause a different screen to be displayed on power-up:

- o A SAVE/RECALL register named POWERON was saved to automatically power-up the Test Set in a different state. Press the Preset key before proceeding; this will restore the Test Set to the factory power-up condition.
- o The **Autostart Test Procedure on Power-Up**: field (of the “TESTS [Execution Conditions]” screen) is set to **On** to automatically run a loaded program. Press the Shift key, then press the Cancel key to stop the program. Press the Preset key to restore the Test Set to the factory power-up condition.


To turn the autostart function off, press the **Tests** key, then select **Execution Cond** (under the **SET UP TEST SET:** heading). The autostart function is at the bottom of the screen; turn it **Off**.

If the Test Set Fails to Power-up

1. Is the Test Set plugged in? Listen for fan operation. If you don't hear it, check the line fuse, see [figure 2-3](#).

Figure 2-3

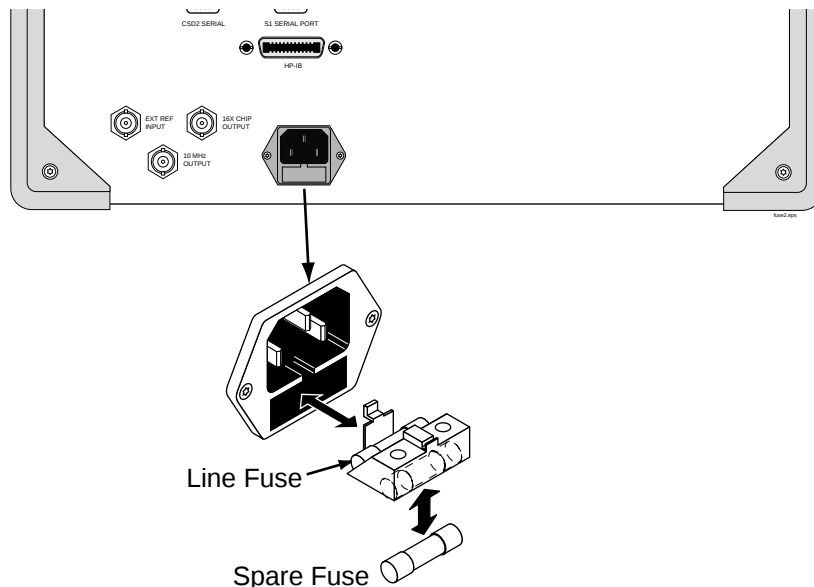Fuse



2. If there is no image on the display, remove the Test Set's covers and check the power supply LEDs: +5V, -12V, +12V (see [figure 2-5 on page 51](#)). If one is out, the power supply or regulator board is faulty. If no LEDs are lit, confirm that the Test Set is connected to the main power source. (Also, see step 5.)
3. Check the LEDs on the Controller assembly, see [figure 2-5 on page 51](#). The LEDs should all light up immediately on power-up, and then go off several seconds after a beep is heard. If the LEDs do not light when the Test Set is powered-up, either the Controller or the Memory/SBRC assembly is faulty.

4. If the Test Set does not power-up properly, but the fan operates and the power supply voltages are correct on the Power Supply Regulator outputs, the Controller may be failing. Check TP2 on the Controller for +5V. If +5V is present, the Controller assembly is faulty.
5. If there is no display, but VIDEO OUT port on the rear panel has the signal shown in [figure 2-4](#), then the Display assembly is faulty. If the signal is not present, then Display Drive assembly is faulty.

Figure 2-4 VIDEO OUT Signal


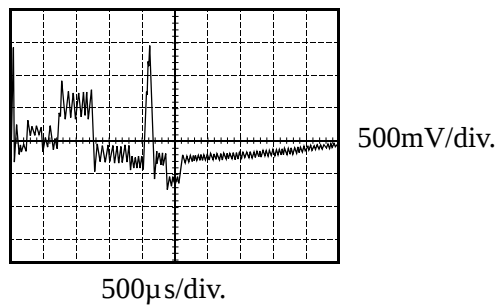


Figure 2-5 Diagnostic and Power Supply LEDs

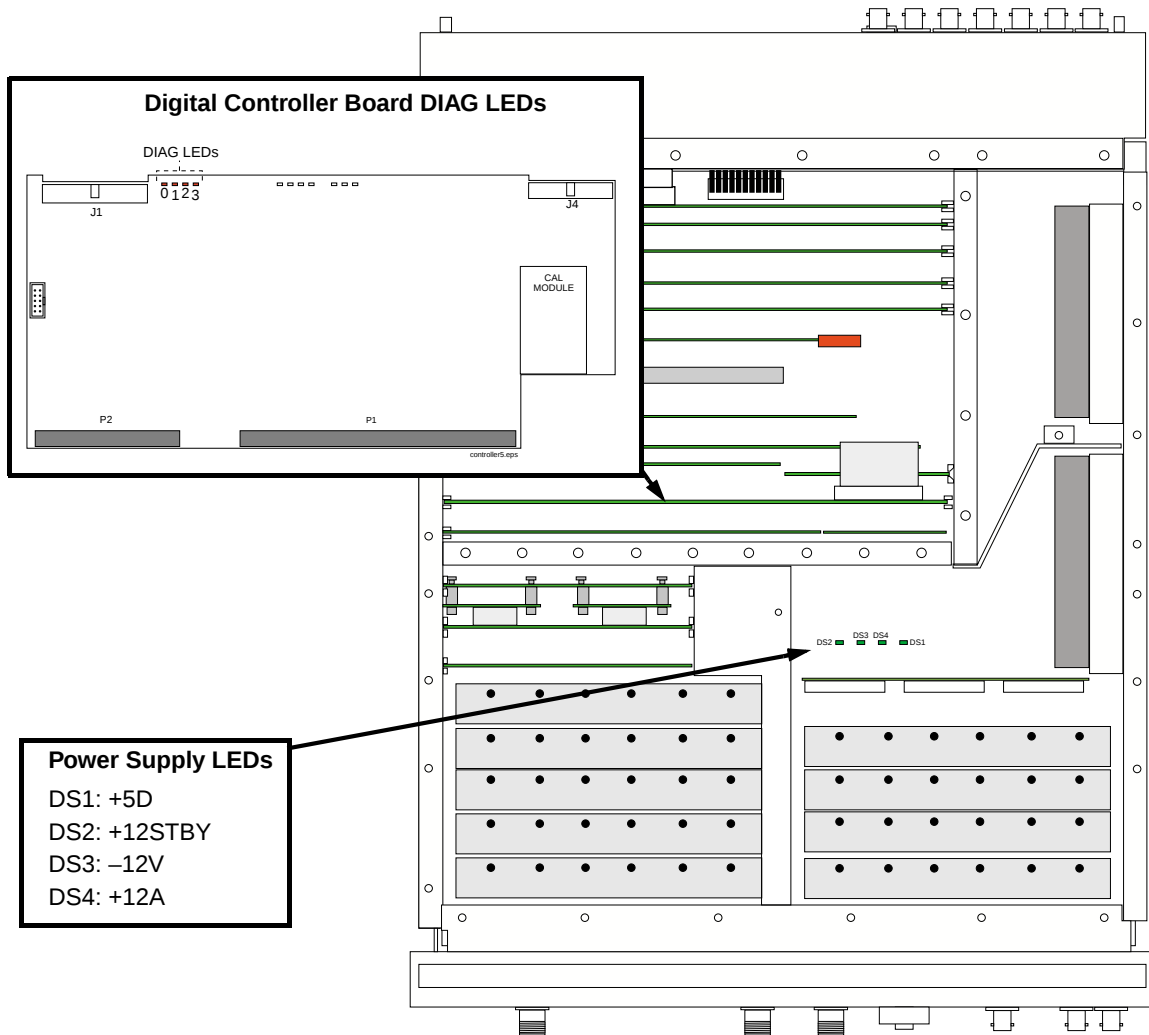

Reading Front Panel or GPIB Codes

Failure codes are listed in the table below. If more than one failure occurs, the failure code will be the sum of the individual failure codes. The nature of the failure and the assembly most-likely at fault is also listed.

Table 2-1 **Return Values for Self-Test Diagnostic Failures**

Detected Failure Failed Assembly		Returned Error Code	
		Hexadecimal (displayed)	Decimal (GPIB)
Microprocessor	Digital Controller	0002	2
ROM	Digital Controller	0004	4
RAM	Memory/SBRC	0008	8
RAM	Memory/SBRC	0010	16
Timer	Controller	0020	32
Real-Time Clock	Memory	0040	64
Keyboard (stuck key)	Keypad ^a	0080	128
RS-232 I/O	Memory/SBRC	0100	256
Serial Bus Communication	Any Non-Optional assembly ^b	0200	512
Signaling Board Self-Test	Signaling Source/Analyzer	0400	1024
Display Drive Self-Test	Display Drive	0800	2048
Miscellaneous Hardware	Several Possible Assemblies ^c	1000	4096

a. Could also be the digital controller with a faulty key-down detector.

b. This checks the ability of the digital controller to communicate with any hardware on the bus.

c. This message occurs if expected hardware is absent or not responding to the digital controller.

Reading LED Codes

When the self-test diagnostic reports a failure, more information about the failure may be available inside the Test Set. This additional information is output to the four LEDs on the top of the digital controller assembly. The failure codes are sent out as code sequences. [Figure 2-6, "Reading the Self-Test Diagnostic. The Internal LEDs," on page 54](#) and the tables following it document some of the more useful code sequences. You may need to run the Self-Test Diagnostic several times to decode a particular LED sequence.

NOTE

The LEDs output self-test diagnostic codes only when the Test Set is powering up. The LEDs remain off when the self-test diagnostic is initiated through programming or when running the functional diagnostics. To read the LED codes, the Test Set's cover must be removed.

If the Test Set has no faults that can be detected by the Self-Test Diagnostic, the four LEDs on the Controller assembly will light and remain on for about ten seconds. During that period, a short beep will be heard. Then the LEDs will extinguish and remain off.

If a fault is detected during the test:

1. The four LEDs will go on for about four seconds.
2. The LEDs will blink a failure code which corresponds to the error listed in [table 2-1, "Return Values for Self-Test Diagnostic Failures" on page 52](#). [Figure 2-7, "First LED Patterns," on page 55](#) shows the blinking LED codes.
3. Two non-blinking LED codes will follow. The interpretation of these codes depends on the preceding blinking code. Two sets of the non-blinking codes are listed: see [figure 2-8, "Non-blinking LED Codes For Serial Bus Communication Failure," on page 56](#) and [figure 2-9, "Non-Blinking LED Codes for Miscellaneous Hardware Failure," on page 57](#).
4. If there is more than one failure, the test will loop back to step 2 and repeat until the last failure is reported.

The pattern generated by the LEDs can be interpreted as a binary-weighting code. The LED (labeled 0) is the least-significant bit (see [figure 2-6 on page 54](#)).

For example if the LEDs blinking pattern is Off, On, On, On (reading left-to-right or LEDs "3 2 1 0"), the binary number is 0111 or decimal 7. The error codes shown in [table 2-1, "Return Values for Self-Test Diagnostic Failures" on page 52](#) are weighted by the binary value. The weighted value for this example is decimal 27 = 128 or hexadecimal 80. (This failure is easy to simulate; simply power-up the Test Set while holding down a key.)

Figure 2-6 Reading the Self-Test Diagnostic. The Internal LEDs

1. Remove the Test Set's external cover.
2. Turn power on.
3. Read the LED sequence on the digital controller board (see below) and compare with the patterns below.

NOTE


For multiple failures, the failure patterns described below will repeat for all failures detected.

LED Legend	
●	= off
☼	= rapid blink
☼	= steady on or slow blink

LED Sequences


No Failures...

- The LEDs will light for approximately 10 seconds, then all will turn off.




Failures... three patterns are displayed:

- The first blinks rapidly and indicates the type of failure.



See the following tables.
(This example indicates a Serial Bus Communication problem.)

- The second and third patterns blink slowly and indicate failure details.



(This example indicates a faulty Audio Analyzer 1 assembly.)

Digital Controller Board

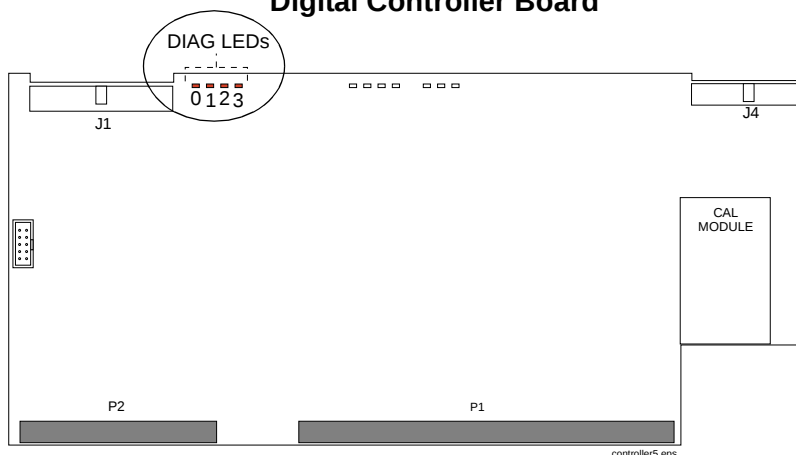


Figure 2-7 First LED Patterns

If the first LED pattern displayed is... Then the failure is...

0	1	2	3	
				Microprocessor
				ROM Checksum (See note 1.)
				RAM (See note 2.)
				RAM (See note 3.)
				Timer
				Real-Time Clock
				Keyboard (stuck key or faulty key-down detector)
				Control Interface (See note 4.)
				Serial Bus Communication (see figure 2-8 on page 56)
				Signaling Board Self Test
				Display Drive Self Test
				Miscellaneous Hardware (see figure 2-9 on page 57)

LED Legend

-  = off
-  = rapid blink
-  = steady on or slow blink

NOTES

1. Second and third LED failure patterns:
0001 and 0001 for any main ROM failure
0001 and 0002 for boot ROM failure
2. Second and third LED failure patterns:
0001 and 0001 for Memory/SBRC board RAM failure
0001 and 0002 for Controller board RAM failure
3. Second and third LED failure patterns:
0001 and 0001 for Memory/SBRC board RAM failure
0001 and 0010 for Memory/SBRC board RAM failure
4. Second and third LED failure patterns for Control Interface:
0001 and 0001 for Serial Port 9 failure
0001 and 0010 for Serial Port 10 failure
0001 and 0011 for Serial Port 11 failure
0001 and 0100 for Serial Port 14 failure
0001 and 1101 for Parallel Port 15 failure
0001 and 1110 for Parallel Port 16 failure

Figure 2-8 Non-blinking LED Codes For Serial Bus Communication Failure

If the second and third LED patterns displayed are....				Then the failure is...				
0	1	2	3	0	1	2	3	
								Modulation Distribution
								Output Section
								Audio Analyzer 1
								Audio Analyzer 2
								Reference
								RF Input/Output
								Downconverter
								Receiver
								Spectrum Analyzer
								Signal Generator Synthesizer
								Receiver Synthesizer
								Upconverter
								LO IF/IQ Modulator
								CDMA Generator Reference
								Digital Cellsite

LED Legend

- = off
- = rapid blink
- = steady on or slow blink

Figure 2-9 Non-Blinking LED Codes for Miscellaneous Hardware Failure

If the second and third LED patterns displayed are....				Then the failure is...				
0	1	2	3	0	1	2	3	
								Reference
								Audio Filter 1 - C-Message Filter
								Audio Filter 2 - 6 kHz BPF
								Receive DSP
								Digital Cellsite 1 and 2

LED Legend	
	= off
	= rapid blink
	= steady on or slow blink
	= don't care

Functional Diagnostics

The Diagnostics (of the SERVICE7 MENU, shown in [figure 2-13 on page 61](#)) check whether or not major portions of the Test Set are functioning. They may pinpoint faults in the circuitry to the faulty assembly, or they may direct the use of any or all of the AF, RF, CDMA diagnostics to more extensively test the circuitry.

Accessing the Diagnostic Tests

CAUTION

A fifteen minute warm up is required. The measurement limits of the SERVICE7 diagnostic tests are valid only at room temperature; that is, 20° to 25°C (65° to 75°F).

1. Press the Preset key.
2. Press the Tests key. The TEST (Main Menu) screen appears, see [figure 2-10 on page 58](#).
3. Set the **Select Procedure Location:** field to **ROM**.
4. Set the **Select Procedure Filename:** field to **SERVICE7**.

Figure 2-10 TESTS (Main Menu) Screen

TESTS (Main Menu)	
SERVICE7	
LOAD TEST PROCEDURE:	
Select Procedure Location:	ROM
Select Procedure Filename:	SERVICE7
Library:	[NO LIB]
Program:	ROM
Description: Launches diagnostic and calibration programs.	
CUSTOMIZE TEST PROCEDURE:	SET UP TEST SET:
Freq Channel Information	Exec Execution Cond
Param Test Parameters	Cnfg External Devices
Seam Order of Tests	Print Printer Setup
Spec Pass/Fail Limits	IBASIC IBASIC Cntrl
Proc Save/Delete Procedure	
1 Run Test	
2 Continue	
4 Help	
To Screen	
● CDMA	
REV SPEC	
○ Analog	
RX TEST	
Config	
CONFIG	

5. To define test conditions, see ["Define Test Conditions" on page 59](#). To configure the Test Set for a printer, see ["Configuring a Printer" on page 60](#).
6. On the Tests (Main Menu), select the **Run Test** field (or press K1), and wait for the SERVICE MENU to appear, see [figure 2-13 on page 61](#).
7. Choose the diagnostic test (Functional, AF, RF, or CDMA) to run by turning the knob to move the pointer and then pressing the knob to select the test.
8. Follow the instructions on the screen.

As some of the tests run, you may be offered the options to alter test execution conditions by selecting:

- **Loop** to run the test continuously
- **Pause** to pause the tests
- **Stp Fail** (stop-failure) to stop on a failure
- **Sgl Step** (single-step) to pause the test after each measurement

For descriptions of the diagnostic options, refer to:

- "Functional Diagnostics Menu" on page 62.
- "AF Diagnostics" on page 64
- "RF Diagnostics" on page 65
- "CDMA Diagnostics" on page 67

Define Test Conditions

1. On the TESTS (Main Menu) screen (see [figure 2-13](#)), select **Exec Execution Cond** to access the TESTS (Execution Conditions) screen.

Figure 2-11 TESTS (Execution Conditions)

TESTS (Execution Conditions)	
Output Results To: <u>Crt/Printer</u>	1 <u>Run Test</u>
Output Results For: <u>All/Failures</u>	2 <u>Continue</u>
Output Heading: [REDACTED]	
If Unit-Under-Test Fails: <u>Continue/Stop</u>	4 <u>Help</u>
Test Procedure Run Mode: <u>Continuous/Single Step</u>	<u>Main Menu</u>
Autostart Test Procedure on Power-Up: <u>Off/On</u>	

2. Set up the **Output Results To:** field. Select:
 - Crt to view measurements only on the display.
 - Select Printer to print the test results as well as display them on the CRT.
3. Set the **Output Results For:** field to All
4. Set up the **If Unit-Under-Test Fails:** field.
 - Select Continue to continue to the next test point.
 - Select Stop to pause testing at that point.

5. Set up the **Test Procedure Run Mode:** field.
 - Select **Continuous** to run the tests continuously.
 - Select **Single Step** to pause after each measurement.
6. Verify that the **Autostart Test Procedure on Power-Up:** setting is **Off**.

Configuring a Printer

Only perform the following steps if you want to print test results to a printer.

1. Press the Tests key.
2. On the TESTS (Main Menu) select **Print Printer Setup**. The TESTS (Printer Setup) screen appears.

Figure 2-12 TESTS (Execution Conditions)

TESTS (Printer Setup)		
Output Results To: Crt/Printer		1 Run Test
Output Results For: All/Failures		2 Continue
Output Heading: 		
PRINT SETUP: Model DeskJet Printer Port Serial 9 PAGE CONTROL: Lines/Page 60 FF at Start Yes/No FF at End Yes/No		4 Help Main Menu

3. Under **PRINT SETUP:**, select **Model:** and the printer of your choice.
4. Set the **Printer Port:** for the side-panel connector your printer is connected to (Parallel 15, Serial 9, or GPIB).

 If an GPIB printer is used, you need to enter the printer's two-digit bus address when the **Printer Adrs** field appears (Example; enter **1** or **01** for bus address 701). Also, press the **shift** key, then the **INST CONFIG** key to access the I/O CONFIGURE screen, and set the **Mode** field to **Control**.
5. Under **PAGE CONTROL:**, set the **Lines/Page:** and Form Feed (**FF at Start:**, and **FF at End:**) parameters if necessary.

Figure 2-13 SERVICE7 Program Screens

TESTS (Mani Menu)

TESTS (Main Menu)

SERVICE7

LOAD TEST PROCEDURE:
Select Procedure Location:
ROM
Select Procedure Filename: Library: Program:
SERVICE7 [NO LIB] ROM

Description:
Launches diagnostic and calibration programs.

CUSTOMIZE TEST PROCEDURE: SET UP TEST SET:

Freq Channel Information	Exec Execution Cond
Param Test Parameters	Cnfg External Devices
Seam Order of Tests	Print Printer Setup
Spec Pass/Fail Limits	IBASIC IBASIC Cntrl
Proc Save/Delete Procedure	

1 Run Test
2 Continue
3 Help
4 To Screen
5 CDMA
6 REV SPEC
7 Analog
8 RX TEST
9 Config
10 CONFIG

RF Diagnostics

TESTS (IBASIC Controller)

1 []
2 []
3 []
4 Serv Menu
5 Exit

Move the pointer to the desired test using the knob then press the knob. Press Serv Menu to go to the Service Menu; Exit to abort.

=> RF Modules
Analog Modulation
CDMA Loopback
Self Test
Power Supplies

SERVICE MENU

TESTS (IBASIC Controller)

1 []
2 []
3 []
4 Help
5 Exit

SERVICE MENU

Move pointer to the desired program using the knob then press the knob. Press Help for information on the tests. Press Exit to abort.

=> Functional Diagnostics
RF Diagnostics
CDMA Diagnostics
Edit Diagnostic Limits
Periodic Calibration
IQ Calibration
IQ Demod Path Calibration

Audio Diagnostics

TESTS (IBASIC Controller)

1 []
2 []
3 []
4 Serv Menu
5 Exit

Move the pointer to the desired test using the knob then press the knob. Press Serv Menu to go to the Service Menu; Exit to abort.

=> All Audio Tests
Audio Frequency Generators 1 and 2
Preliminary Audio Paths
Mod Distribution Internal Paths
Mod Distribution External Paths
Audio Analyzer 1 Internal Paths
Audio Analyzer 1 External Paths
Audio Analyzer 2

CDMA Diagnostics

TESTS (IBASIC Controller)

1 []
2 []
3 []
4 Serv Menu
5 Exit

Move the pointer to the desired test using the knob then press the knob. Press Serv Menu to go to the Service Menu; Exit to abort. Run at room temperature after 15 minute warmup.

=> All CDMA Tests
CDMA Reference Test
Analog Cell Site Test
IQ Modulator Test
LO/IF Demodulator Test

Run the Functional, RF, and Audio Frequency Diagnostics first.

RF Diagnostics

TESTS (IBASIC Controller)

1 []
2 []
3 []
4 Serv Menu
5 Exit

Move the pointer to the desired test using the knob then press the knob. Press Service Menu to go to the Service Menu; Exit to abort. Run at room temperature after 15 minute warmup.

=> All RF Tests
Reference
Signal Generator Synthesizer
Receiver Synthesizer
Output
Upconverter
RF Input/Output
Down Converter
Spectrum Analyzer
Receiver

Functional Diagnostics Menu

To run the Functional Diagnostics, see ["Accessing the Diagnostic Tests" on page 58](#).


NOTE

The diagnostics are intended to help in locating the source of catastrophic failures. Occasionally, a test will fail with the test results being only slightly out of limits. Such failures do not necessarily indicate that the Test Set is operating outside of its published specifications or that it is otherwise faulty. Further testing (such as running the performance tests) will be required in such cases.

NOTE

Many of the internal diagnostic and calibration procedures use low-level latch commands to control the instrument settings. Many latch settings persist even through a preset. They can only be reset by an instrument power down or by explicitly resetting each latch. This phenomenon is the reason the message **"Direct latch write occurred. Cycle power when done servicing."** is displayed the first time a latch is written to. Because latch settings persist, problems can arise in running these programs. For example, prematurely terminating a test in a diagnostic (using the Pause and Exit keys) and restarting another test may cause failures in that test because of improper latch settings. It is best to run tests to completion before starting another one. Also, be sure to cycle the power off and on when done servicing the Test Set.

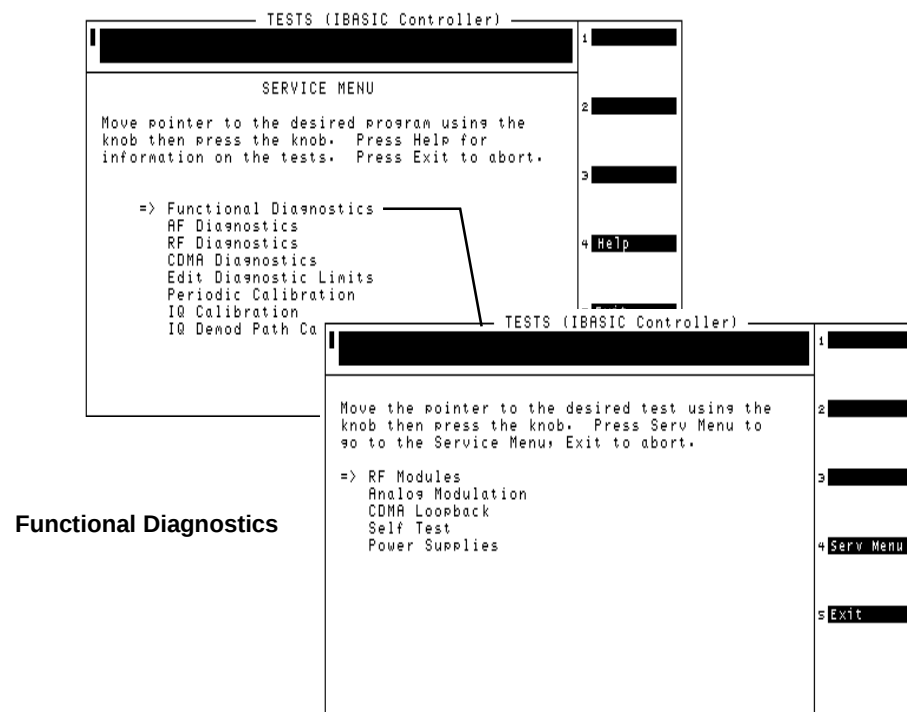Figure 2-14 Functional Diagnostics Screen



RF Modules

The Average and TX power meters, Channel Power Meter, RF analyzer, IF analyzer and spectrum analyzer are used to test the signal generator. Both the internal and external paths of the RF/IO assembly are used in the tests.

Analog Modulation

The demodulator in the RF analyzer, and the spectrum analyzer are used to check the accuracy, distortion, and residuals of the FM and AM frequencies. The counter is used to measure the audio frequency.

CDMA Loopback

CDMA Analyzer is used to measure Test Mode Rho on a signal from the CDMA Generator. This test is only a rough indicator of CDMA functionality.

Self Test

The power-up Self-Test Diagnostics are run. Refer to "[Self-Test Diagnostics](#)" on [page 48](#).

Power Supplies

The different levels of the power supply are measured with the internal voltmeter.

AF, RF, and CDMA Diagnostics

NOTE The diagnostics are intended to help in locating the source of catastrophic failures. Occasionally, a test will fail with the test results being only slightly out of limits. Such failures do not necessarily indicate that the Test Set is operating outside of its published specifications or that it is otherwise faulty. Further testing (such as running the performance tests) will be required in such cases.

NOTE Many of the internal diagnostic and calibration procedures use low-level latch commands to control the instrument settings. Many latch settings persist even through a preset. They can only be reset by an instrument power down or by explicitly resetting each latch. This phenomenon is the reason the message **“Direct latch write occurred. Cycle power when done servicing.”** is displayed the first time a latch is written to. Because latch settings persist, problems can arise in running these programs. For example, prematurely terminating a test in a diagnostic (using the Pause and Exit keys) and restarting another test may cause failures in that test because of improper latch settings. It is best to run tests to completion before starting another one. Also, be sure to cycle the power off and on when done servicing the Test Set.

AF Diagnostics


This program tests the audio functions of the following assemblies:

- Audio Analyzer 2
- Audio Analyzer 1
- Modulation Distribution
- Signaling Source/Analyzer (AF Generators 1 and 2 only)
- Measurement (only a few selected inputs)

After initial cabling, all tests can be run in a loop mode without further intervention. This makes it easier to catch intermittent failures. To run the AF diagnostics, see ["Accessing the Diagnostic Tests" on page 58](#).

NOTE A fifteen minute warm up is required. The measurement limits of the SERVICE7 diagnostic tests are valid only at room temperature; that is, 20° to 25°C (65° to 75°F).

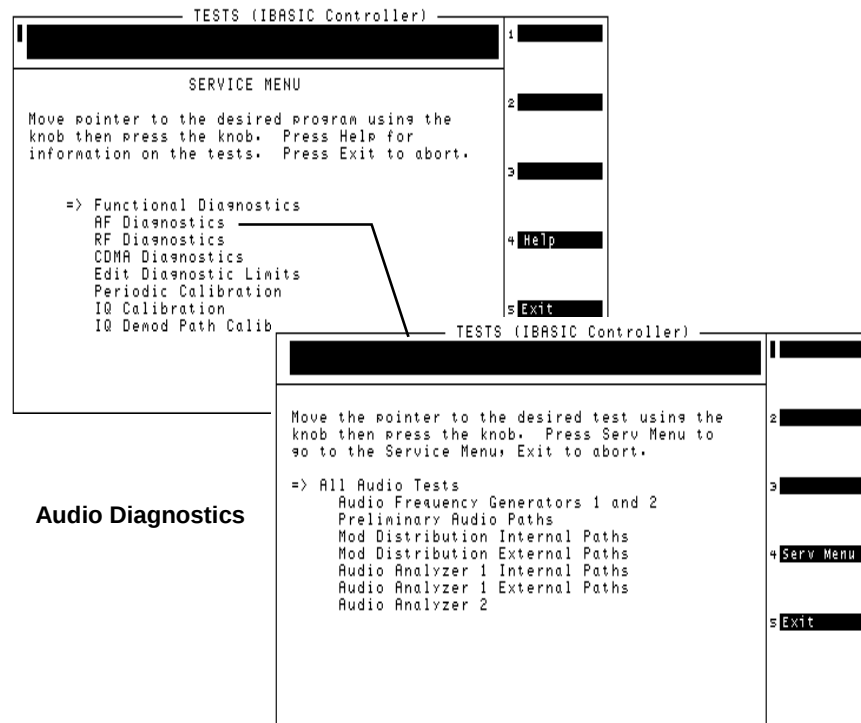Figure 2-15 AF Diagnostics Screen



When a test fails, a diagnosis is given in three parts:

- A diagnostic code.
- The name of the assembly or assemblies most likely to have failed.
- A rating of the confidence (high, medium, or low) of the diagnosis.

RF Diagnostics

This program tests the RF functions of the following assemblies:


- Downconverter
- RF Output
- Signal Generator Synthesizer
- Reference
- Receiver
- Receiver Synthesizer
- Spectrum Analyzer (optional)
- RF I/O
- Upconverter

Some tests require cabling before the RF Diagnostics can be run; but all tests can be run in a loop mode without further intervention. Running in loop mode makes it easier to catch intermittent failures. To run these diagnostics, see ["RF Diagnostics" on page 65](#).

NOTE A fifteen minute warm up is required. The measurement limits of the SERVICE4 diagnostic tests are valid only at room temperature; that is, 20° to 25°C (65° to 75°F).

NOTE Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

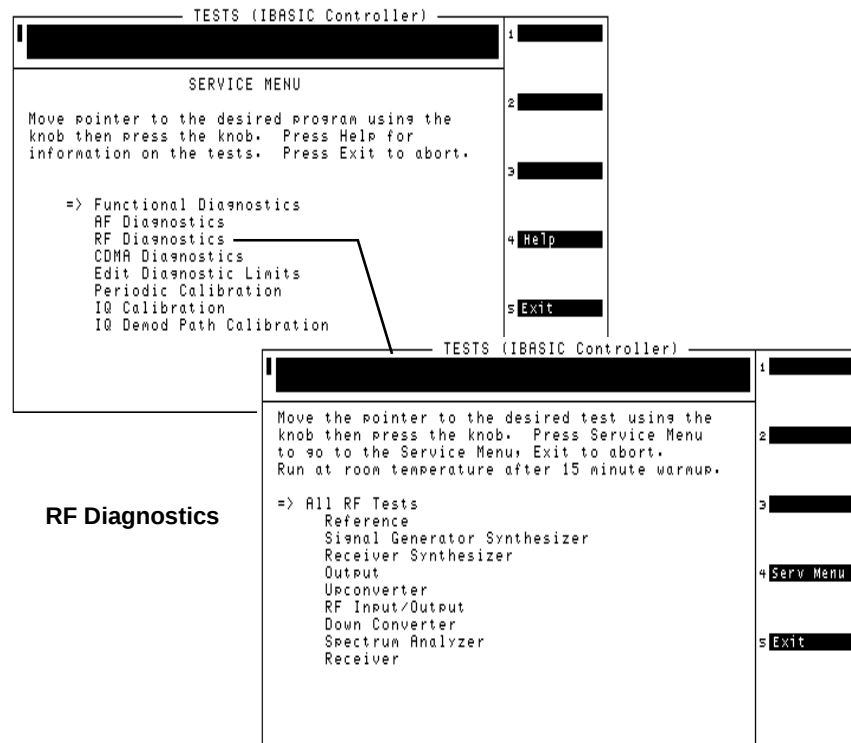Figure 2-16 RF Diagnostics Screen



When a test fails, a diagnosis is given as:

- Sometimes a diagnostic code.
- The name of the assembly or assemblies most likely to have failed.
- Sometimes a rating (high, medium, or low) of the confidence of the diagnosis.

CDMA Diagnostics

The Digital Diagnostics test the assemblies required for CDMA-formatted IQ modulation.

These assemblies include:

- CDMA Reference
- LO/IF Demod
- I/Q Modulator
- Cell Site Analog

The CDMA Reference, LO/IF Demod, and I/Q Modulator are also used when generating or analyzing analog signals.


NOTE

Before ordering a replacement assembly...

Before ordering an assembly based on the results of the diagnostics, you should verify the diagnostics by other means if possible. This could include using manual troubleshooting procedures and descriptions of the AF, RF, and CDMA diagnostics in this chapter, and/or block diagrams in [Chapter 8, “Block Diagrams,” on page 249](#). If you still lack confidence in troubleshooting or diagnosing the problem or faulty assembly, call the Agilent Call Center (1-800-922-8920) for troubleshooting assistance.

Figure 2-17

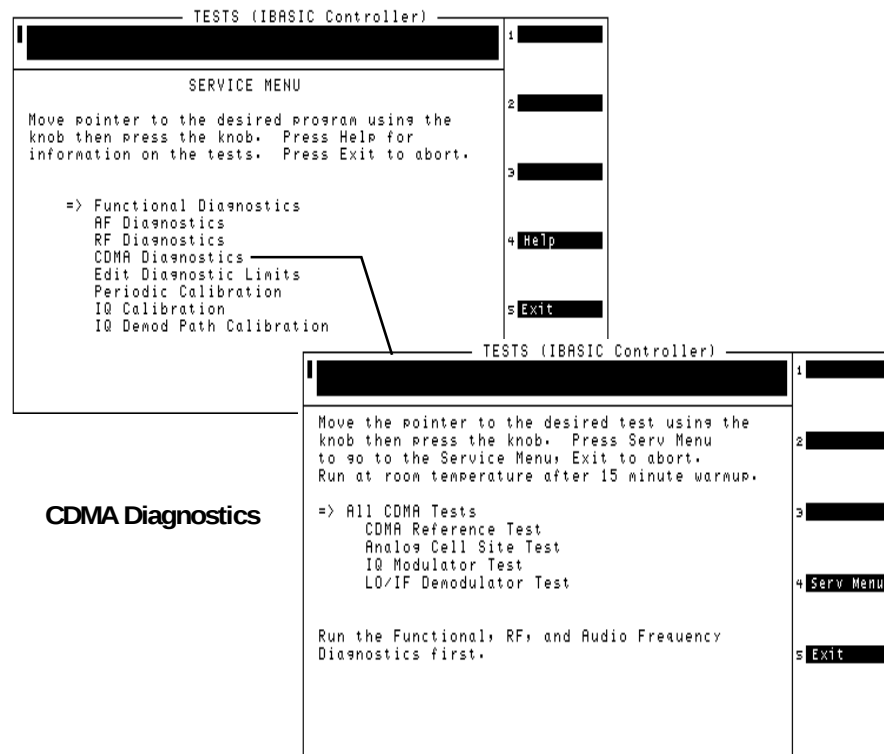CDMA Diagnostics Screen



Frequently Encountered Diagnostic Messages

Warning/Error Messages

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Error messages that appear on the second line of the Test Set's display frequently occur while any of the SERVICE7 program diagnostic tests are running. The most complete and general list of error messages is in the "Error Messages" chapter of the Test Set's *Reference Guide*. (Some messages relating specifically to troubleshooting can be found in [Chapter 10, "Error Messages" on page 291](#).) Some of the messages you can expect to occur while running the SERVICE7 program diagnostic tests are as follows:

- **Direct latch write occurred. Cycle power when done servicing.** The SERVICE7 program commonly generates this message. This message appears the first time the diagnostic program directly addresses a latch. The message should be ignored and cleared when you make a normal (not a diagnostic) measurement with the Test Set. To clear this message the Test Set should be turned off and back on again.
- **Change Ref Level, Input Port or Attenuator (if using "Hold").** This message, and similar messages, can be generally ignored.
- **Printer does not respond.** This usually indicates that one or more settings on the TESTS (Printer Setup) screen are set incorrectly for your printer. Also, check that the printer's power is on and that it is correctly cabled. For GPIB printers make sure the printer is correctly addressed. If a serial printer is used, you may have to change the serial communication settings on the I/O CONFIGURE screen (press **Shift** then **Inst Config** to get to this screen). The message times out after a few seconds, and the output destination is changed to CRT by the program.
- **ERROR 173 IN XXXX Active/system controller req'd** (where "XXXX" represents a line number). Indicates that the Test Set's internal IBASIC computer must be set as a system controller for some reason. This usually indicates that the **Printer Port** field of the TESTS (Printer Setup) screen was set to **Agilent -IB** but the **Mode** field on the I/O CONFIGURE screen is set to **Talk&Lstn** instead of **Control**. Change the mode setting to **Control** and run the diagnostic again.

Time-outs

Certain failures may cause a frequency or voltage reading to time out, that is, the time required for the measurement will be unreasonably long. If a timeout occurs, measurement execution will stop and an error message will be displayed.

- If frequency or voltage readings have been successfully made before the timeout, the assembly currently being tested or a multiplexer on the Measurement assembly may be at fault.
- If most measurements fail, the Reference assembly may be supplying faulty clock signals to the Measurement assembly.
- Re-run the test to see if the timeout is intermittent.

Manual Troubleshooting Procedures

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

If you are not sure a problem exists, you should attempt to duplicate the suspected problem. This is especially important if the Test Set is being used in a new application where misapplication, or incorrect operation of the Test Set may be involved.

An Agilent 8924C Mobile Station Test Set combined with an Agilent 83236B Cellular Adapter can be used to simulate a high performance CDMA base station and may be useful in attempting to duplicate the problem.

Refer to following table to determine which diagnostic tests, performance tests, and periodic self calibration adjustments apply to an assembly. Downloading calibration data is discussed in [Chapter 6, "Performance Tests" on page 141](#).

Table 2-2 Relating Assemblies to Troubleshooting Aids

Assembly Name	SERVICE7 Program Diagnostic Test: Sub-Test	Performance Test to Perform ^a	Periodic Calibration ^b Program	Cal.-Data Needed ^c
Keypad	Functional Diagnostics: Self Test			No
Display				No
RF I/O	RF Diagnostics: RF Input/Output	RF Generator: Level Accuracy	PCMCIA Program System Power E6380-61811	Yes
Digital Cellsite 1 & 2	Functional Diagnostics: CDMA Loopback		SERVICE7: IQ Modulator	Yes
Upconverter	RF Diagnostics: Upconverter			Yes
RPG Assembly				No
Front Panel				No
Receive DSP	Functional Diagnostics: CDMA Loopback			No
PCMCIA				No
Signaling Source/Analyzer	AF Diagnostics: Audio Frequency Generators 1 and 2			No
Controller	Functional Diagnostics: Self Test			No
Memory/SBRC	Functional Diagnostics: Self Test			No
Downconverter	RF Diagnostics: Downconverter			Yes
Power Supply Regulator	Functional Diagnostics: Self Test			No
Fans				No

Assembly Name	SERVICE7 Program Diagnostic Test: Sub-Test	Performance Test to Perform ^a	Periodic Calibration ^b Program	Cal.-Data Needed ^c
Display Drive	Functional Diagnostics: Self Test			No
Power Supply	Functional Diagnostics: Self Test			No
Signal Generator Synthesizer	RF Diagnostics: Signal Generator Synthesizer	RF Generator: Harmonic and Spurious Spectral Purity		Yes
LO-IF/IQ Modulator	CDMA Diagnostics LO_IF/IQ Mod.		SERVICE7: IQ Modulator	Yes
RF Output	RF Diagnostics: Output			Yes
Reference	RF Diagnostics: Reference	RF Generator: Residual FM		Yes
Receiver Synthesizer	RF Diagnostics: Receiver Synthesizer	RF Analyzer: Residual FM		Yes
CDMA Generator Reference	CDMA Diagnostics: CDMA Gen. Ref.		SERVICE7: IQ Modulator	Yes
Receiver	RF Diagnostics: Receiver	RF Analyzer: FM Accuracy		Yes
Power Supply				No
Spectrum Analyzer (optional)	RF Diagnostics: Spectrum Analyzer	Spectrum Analyzer		Yes ^d
Control Interface	Functional Diagnostics: Self Test			No
Modulation Distribution	AF Diagnostics: Mod Distribution Internal Paths	AF Generator: AC Level Accuracy	SERVICE7: Periodic Calibration: AF Gen Gain, EXT Mod Path Gain	Yes
Audio Analyzer 1	AF Diagnostics: Audio Analyzer 1 Internal Paths		SERVICE7: Periodic Calibration: Audio Analyzer Offset	Yes
Audio Analyzer 2	AF Diagnostics: Audio Analyzer 2	AF Analyzer: AC Voltage Accuracy	SERVICE7: Periodic Calibration: VFN	Yes
Measurement ^e	Functional Diagnostics: Self Test	Oscilloscope	SERVICE7: Periodic Calibration: Voltmeter Reference	Yes ^f
Motherboard				No

a. See [Chapter 6, "Performance Tests" on page 141.](#)

b. See [Chapter 5, "Periodic Adjustments/Calibration" on page 125.](#)

c. See [table 5-1, "Assembly Calibration Information" on page 127](#) of [Chapter 5, "Periodic Adjustments/Calibration."](#)

d. PCMCIA smart card supplied with kit.

e. Measurement checked indirectly by all diagnostics.

f. PCMCIA smart card supplied with kit.


Verify Test Set's Reference Path

Out-of-Lock (OOL) LEDs

Out-of-lock (OOL) LEDs light when a phase-locked loop inside an assembly is failing. The signal generator synthesizer and the receiver synthesizer assemblies have these LEDs mounted close to the top of the modules. The location of each LED is labeled on the assembly.

Verify that the CDMA generator reference and the reference are working before troubleshooting the receiver synthesizer and/or the signal generator synthesizer assemblies.

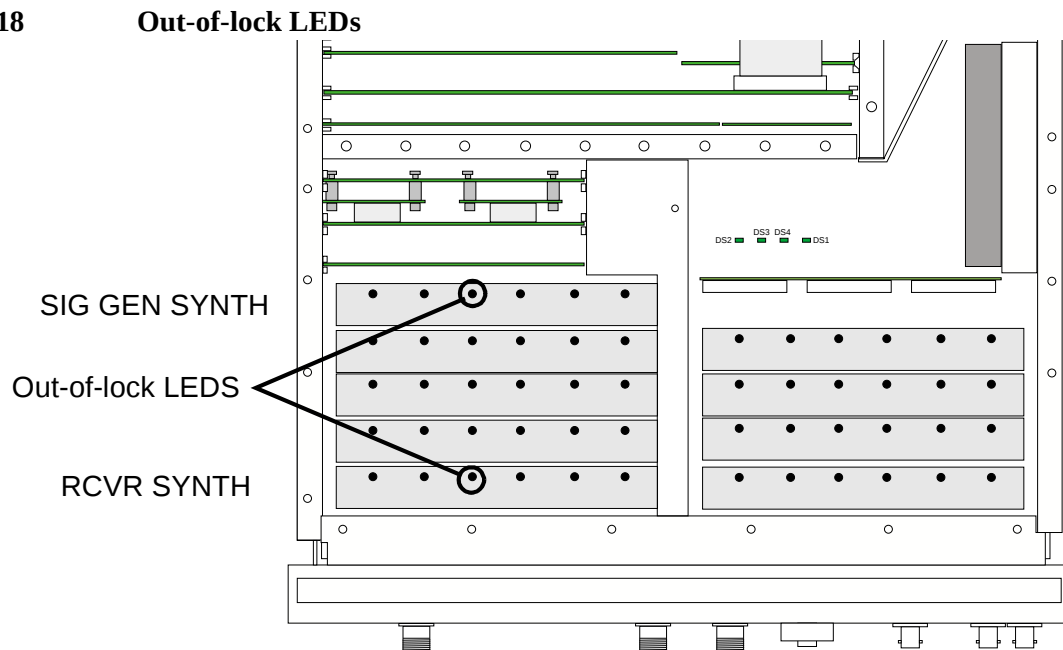Figure 2-18



CDMA Generator Reference Assembly Verification

1. Turn the Test Set off and remove the external cover.
2. Remove the bottom cover and verify that the cable is connected between the EXT REF IN connector and J17 on the CDMA Generator Reference assembly.
3. Turn the Test Set on and verify that a 10 MHz signal is present on J15 of the CDMA Generator Reference assembly.

If no signal or a poor signal appears at this connector, then the CDMA Generator Reference assembly is faulty.

4. Remove the Reference assembly.
5. Turn the Test Set on and verify that a 10 MHz signal is present on pin 20 of J63 and pin 19 of J18. This is the reference signal from the CDMA Generator Reference assembly.

If the 10 MHz signal is not present at all, then the CDMA Generator Reference assembly is faulty.

If the signal is present on pin 20 but not pin 19, then the Motherboard assembly is faulty (open or short).

Reference Verification

1. Turn the Test Set off and re-install the Reference assembly.
2. Remove the Receiver Synthesizer assembly.
3. Turn the Test Set on and verify that a 1 MHz signal of approximately -1 dBm is present on pin 3 of J21. This is the reference signal from the Reference assembly.
4. If the 1 MHz signal is not present, then the Reference assembly is probably faulty.

It is also possible that an open or shorted trace on the motherboard assembly exists. Check the motherboard for continuity between J21 pin 3 under the Receiver Synthesizer assembly and J18 pin 2 under the Reference assembly, and verify that the trace is not shorted to ground.

Receiver Synthesizer Unlocked

If the 1 MHz signal is present on pin 3 of J21, then the Receiver Synthesizer assembly is faulty.

Signal Generator Synthesizer Unlocked

1. Turn the Test Set off and remove the Signal Generator Synthesizer assembly.
2. If the signal is present, then the Signal Generator Synthesizer assembly is faulty.
3. Turn the Test Set on and verify that a 1 MHz signal of about -20 dBm is present on pin 3 of J12. This is the reference signal from the Reference assembly.

If the 1 MHz signal is not present, then the Reference assembly is probably faulty.

It is also possible that an open or shorted trace on the Motherboard assembly exists. Check the motherboard for continuity between J12 pin 3 (under the Signal Generator Synthesizer assembly) and J34 pin 1 (under the Reference assembly), and verify that the trace is not shorted to ground.

Swapping Known-Good Assemblies

Most swapped assemblies which use calibration data will operate well enough with the original assembly's calibration data to troubleshoot and to run the diagnostics; do not expect the Test Set to meet its specifications. Some assemblies may appear to fail because of incorrect calibration data. It is also important to keep track of the original assemblies in the Test Set. If calibration data is lost, the assembly will have to be sent back to the factory.

Calibration data is generally stored in a daughter board's socketed EEPROM on the digital controller assembly. If the controller is replaced or swapped, the original EEPROM must be put in the new Test Set's controller. Should the EEPROM lose its data, the entire instrument will require factory restoration.

The assemblies that require downloaded calibration data from a memory card are:

- Spectrum Analyzer (optional)
- Measurement

Swapping these assemblies may cause some performance specification failures if the swapped in assembly's calibration data cannot be downloaded.

The assemblies that require on-board calibration loaded at the factory are:

- Downconverter
- Upconverter
- RF I/O
- Output Section
- Receiver
- Signal Generator Synthesizer
- Receiver Synthesizer
- Reference

Swapping these assemblies should not cause a performance problem, as their calibration data resides with the assembly.

The assemblies that require a periodic calibration procedure are:

- CDMA Reference
- RF Input/Output
- LO IF/IQ Modulator
- Audio Analyzer 1
- Audio Analyzer 2
- Measurement
- Modulation Distribution

Generally, these assemblies can be swapped without an immediate need of recalibration. In some cases though, a recalibration may be necessary to properly troubleshoot the instrument.

Further Isolating RF Failures

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Isolating failures in the RF assemblies of the Test Set can be difficult. One problem occurs when the diagnostics use the built-in RF analyzer to test the built-in RF source, and vice versa. This is necessary to make the diagnostics self-contained, that is, they run without external equipment.

Some general-purpose, RF test equipment will be needed:


- RF signal generator
- RF modulation analyzer or spectrum analyzer.

Isolating the RF Analyzer

The RF Analyzer function uses the following assemblies. Refer to [figure 2-19](#) and the block diagrams in [chapter 8, "Block Diagrams"](#).

- Downconverter
- Receiver
- Receiver Synthesizer
- Spectrum Analyzer (optional)

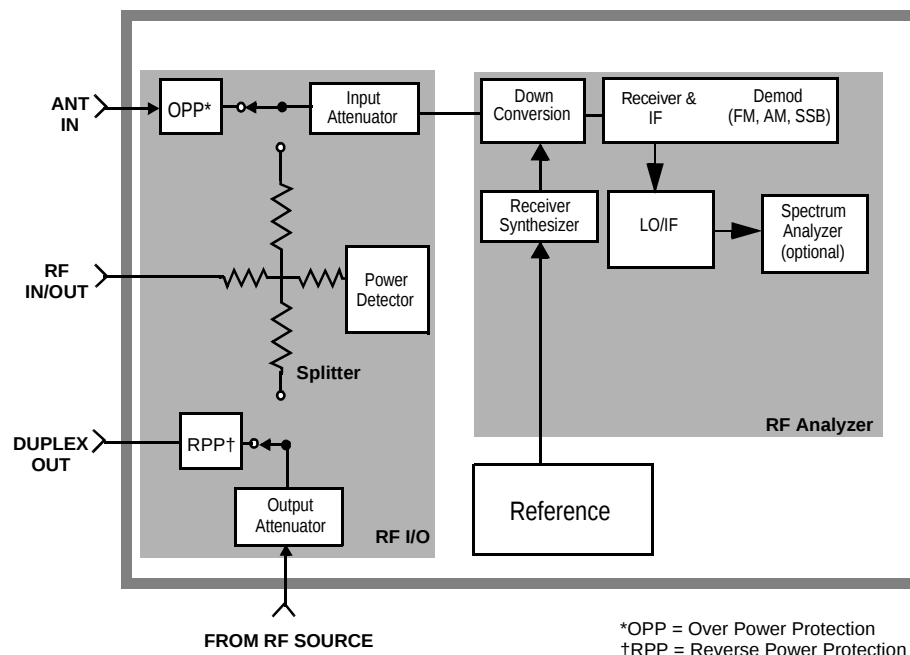Figure 2-19 Isolating the RF Analyzer



To isolate an RF analyzer problem:


1. On the Test Set:
 - a. Press **Preset**.
 - b. Press the **Config** to access the CONFIGURE screen.
 - Set the **RF Display** field to **Freq**.
 - Set the **RF Offset** field to **Off**.
 - c. Rotate the knob to the field under analog, press the knob and select RF ANL (to go to the analog RF ANALYZER screen).
 - Set the **Tune Freq** to **900 MHz**.
 - Set the **Input Port** to **RF IN**.
2. On the external RF signal generator:
 - a. Set the frequency to 900 MHz CW.
 - b. Set the amplitude to 0 dBm.
 - c. Connect the output to the Test Set's RF IN/OUT connector.
3. Set the RF signal generator's frequency to 900 and then 1800 MHz. For each frequency reset the **Tune Freq** to that frequency. The Test Set's measurements should read as follows:
 - a. **TX Power** should read approximately 0.001 W for each frequency.
 - b. **Frequency** should read 900 and 1800 MHz respectively.
 - c. If the Test Set has the optional spectrum analyzer, press the Spec Anl key to access the analog spectrum analyzer. Observe the level and frequency of the signal.

Isolating the RF Source

The RF generator function uses the following assemblies. Refer to [figure 2-20](#) and the block diagrams in [chapter 8, "Block Diagrams"](#).

- LO IF/IQ Modulator
- Signal Generator Synthesizer
- Output Section
- Upconverter

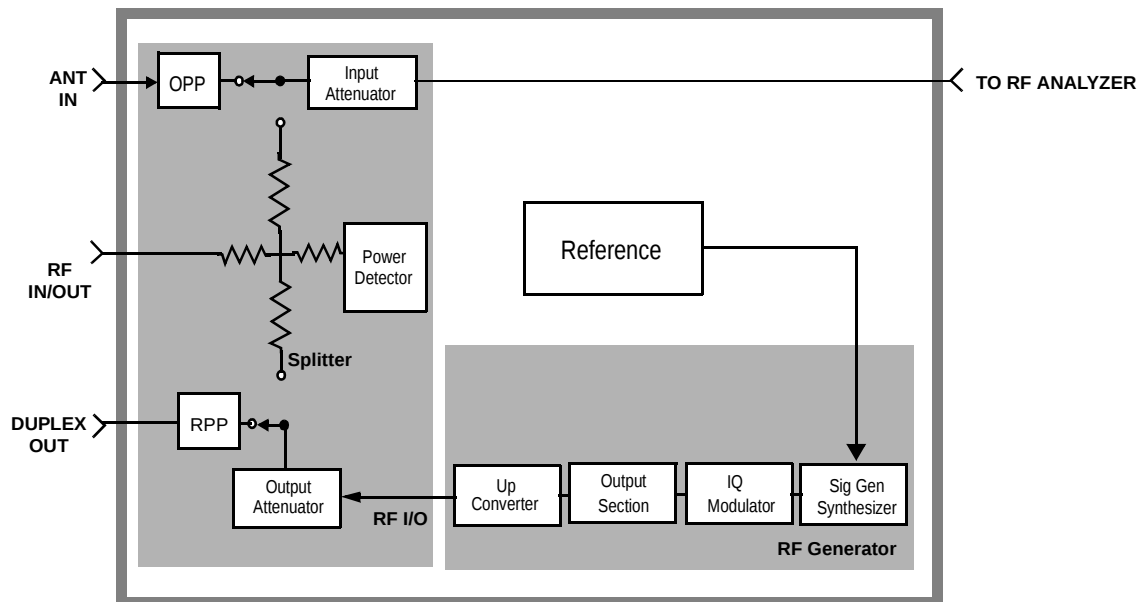Figure 2-20 **Isolating the RF Source**



To isolate the RF Source:

1. On the Test Set:
 - a. Press **Preset**.
 - b. Press the **Config** key to access the CONFIGURE screen.
 - Set the **RF Display** field to **Freq**.
 - Set the **RF Offset** field to **Off**.
 - c. Press the **RF Gen** key (to go to the analog RF GENERATOR screen).
 - d. Set **RF Gen Freq** to **1800 MHz**.
 - e. Set **Amplitude** to **0 dBm**.
 - f. Set **Output Port** to **Dup1**.
2. On the external RF modulation analyzer or spectrum analyzer:
 - a. Set the tuning for the signal generated by the Test Set.
 - b. Connect the analyzer's input to the Test Set's DUPLEX OUT connector.
3. Set the Test Set's **RF Gen Freq** to 1800 MHz and then 900 MHz. For each frequency, the external RF analyzer should read as follows:
 - a. Power should read approximately 0.001 W for each frequency.
 - b. Frequency should read 1800 and 900 MHz respectively.

Service Screen

A large number of latch and DAC settings used throughout the Test Set can also be read and/or set to alter standard operation. The SERVICE screen uses the internal voltmeter and frequency counter functions to monitor specific nodes in most assemblies. These functions are primarily intended to allow the automated internal diagnostic routines to verify proper instrument operation, and to allow the internal periodic adjustment routines to modify Test Set operation.

Use these functions for further troubleshooting when the diagnostics cannot isolate a failure to a specific assembly. To do this, you must understand how to operate the Test Set and, especially, understand how the assemblies in the Test Set work together.

To Access the SERVICE Screen

1. Press the Config key on the Test Set.
2. On the CONFIGURE screen, rotate the Test Set's selector knob and select **SERVICE**, see [figure 2-21](#).

The SERVICE screen appears. For field descriptions, see "[Field Names and Descriptions](#)".

Field Names and Descriptions

Voltmeter Connection

This field selects the desired circuit node for voltage measurements. To change the voltmeter connection, use the knob to select the **Voltmeter Connection** field. A **Choices** menu will appear. Move the cursor to the desired circuit node in the list and push the cursor control knob. The reading is displayed in the **Voltage** measurement field at the top- left of the display.

Because the nodes being measured must be in the range of 0 to ± 5 volts, the measurement of some points are scaled to that measurement range. For example; the +12 Volt reference (**MEAS_12V_REF**) should measure about +5volts. The -12 Volt reference (**MEAS_NEG_12V_REF**) should measure about -5 volts. Many of the voltage measurements are only valid after a number of instrument settings are changed.

When run, the diagnostic routines make the necessary circuit changes and measurements automatically, comparing the measurements to known limits for each node.

Counter Connection

This field selects the desired circuit node to connect to the Test Set's internal frequency counter. The reading is displayed in the **Frequency** measurement field at the top right of the display.

To change the counter connection, use the knob to select the **Counter Connection** field. A **Choices** menu will appear. Select the desired circuit node.

Figure 2-21 Service Screen

CONFIGURE			
Range Hold Auto All Hold All State:Auto	Date 92799 MMDDYY Time 18.16 HH.MM Beeper Quiet Display User Msgs Yes/No	RF Display Freq/Chan RF Chan Std MS AMPS	RF Level Offset On/Off Output Port RF Out/Dupl RF Out 0.0 dB Input Port RF In/Ant RF In 0.0 dB
Notch Coupl RFGen1/None RFGen Volts 50 ohm/enf Input Atten Auto/Hold 10 dB	TimeBase Auto/Int Internal Frame Clock 2.00 s	Alt Pwr Ms Cal Bands None	Firmware A.01.26 Total RAM 896 kB Serial No. US39090053 To Screen ● CDMA REV SPEC ○ Analog RX TEST Config CONFIG SERVICE

SERVICE	
Voltage	4.90483 V
Frequency	1.44521 kHz
Voltmeter Connection MEAS_12V_REF Counter Connection AUDI_COUNT Gate Time 50.0 ms	
Module Audio Analyzer 1 Latch audi_input_select Value 2 hex	
RAM Initialize Clear all RAM and restart	
To Screen ● CDMA REV SPEC ○ Analog RX TEST Config CONFIG	

Gate Time

This field is used to adjust the Test Set's internal frequency counter's gate time. A shorter gate time may enable you to see frequency fluctuations that might not be seen using a longer gate time.

To change the gate time, use the knob to select the Gate Time field. When you select the field a flashing >> cursor is displayed. Rotate the cursor control knob until the desired gate time (10 to 1000 ms in 10 ms increments) is displayed, then press the cursor control knob.

Module

This field is used to manually select the module that contains the circuit latches to be selected.

Latch

This field is used to manually select the circuit latches in the module selected in the Module field above. The latches control switch, DAC, and gain settings within the Test Set. The value of the selected latch is displayed and changed in the Value field. Some settings are read only.

To set a latch:

1. Use the knob to select the **Module** . A **Choices** menu will appear.
2. Move the cursor to the desired module name and press the knob to select it.
3. Use the knob to select the **latch** field. A **Choices** menu will appear.
4. Move the cursor to the desired latch name and press the knob to select it.
5. Use the knob to select the **Value** field. A flashing >> cursor is displayed.
6. Rotate the cursor control knob or key in a number on the keypad to modify the value (hexadecimal).

Value (hex)

This field displays and changes the hexadecimal value for the latch shown in the **Latch** field.

RAM Initialize

Selecting this field clears all SAVE registers and test programs, and any initialized RAM disk(s), that may be in RAM. It also resets all latches to their factory power-up configuration. If you have saved one or more instrument setups using the SAVE function, using this function will permanently remove them.

3 Disassembly and Replaceable Parts

This chapter contains information for the removal and replacement of the assemblies in the Test Set. Illustrations and a parts list are provided for parts identification.

Before You Start

CAUTION

Perform the procedures in this chapter only at a static-safe work station. The printed circuit assemblies in this instrument are sensitive to static electricity damage. Wear an anti-static wrist strap that is connected to earth ground.

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Recommended Torque

- Screws: Tighten until just snug, use care not to strip threads.
- RF connectors –
 - SMA type: 9.0 lb-in. (102 N-cm)
 - SMC type: 6.0 lb-in. (68 N-cm)

Tools

One or more of the following tools may be required to access and remove Test Set's assemblies.

- TX-10 Torx screwdriver
- TX-15 Torx screwdriver
- Flat-blade screwdriver
- 7-mm socket wrench
- 1/16-inch allen wrench
- 3/16-inch socket wrench
- 1/4 -inch open-end wrench
- 5/16-inch open-end wrench
- 29-mm socket

Ordering Replacement Parts and Support

Repair assistance is available from the factory by phone and email. When calling or writing for repair assistance, please have the following information ready:

- Instrument model number
- Instrument serial number (tag located on the rear panel).
- Installed options - if any (tag located on the rear panel).
- Instrument firmware revision - displayed at the top of the screen when the Test Set is powered up, and is also displayed on the CONFIGURE screen.

Telephone Numbers and Email

- 1-800-922-8920 Agilent Technologies Call Center
- 1-800-827-3848 (Spokane Division Service Assistance, U.S. only)
- 1-509-921-3848 (Spokane Division Service Assistance, International)
- 1-800-227-8164 (Agilent Technologies Direct Parts Ordering, U.S. only)
- 1-916-783-0804 (Agilent Technologies Service Parts Identification, U.S. & International)
- 1-800-403-0801 (Agilent Technologies Instrument Support Center)
- Email: spokane_service@agilent.com

Downloading Calibration Data

Most assemblies in the Test Set require calibration data. To ensure that the Test Set remains calibrated after an assembly is replaced, new calibration data must be downloaded. When required, calibration data is provided on a PCMCIA memory card that is included with the replacement assembly. Refer to [Table 2-2, “Relating Assemblies to Troubleshooting Aids,”](#) on page 70 of Chapter 2, “Troubleshooting,” to see which modules require calibration.

Calibration Data Download Procedure

1. Switch the Test Set's power off.
2. Remove the faulty assembly.
3. Install the replacement assembly.
4. Switch the Test Set's power on.
5. Insert the memory card.
6. Press the Tests key.
7. Set the **Select Procedure Location:** field to **Card**.
8. Set the **Select Procedure Filename:** field to: **DNLDCAL**.
9. Press the K1 key to run the test.
10. Follow the instructions on the screen.

Disassembly Procedures

This section provides instructions for disassembling the Test Set. The procedures provided in this chapter are mainly organized in sequential order of Test Set disassembly. For component and assembly part numbers refer to the ["Parts List" on page 105](#). The callouts for the parts used in the following illustrations are the same as their descriptions in the parts list.

External and Internal Covers

1. Remove the rear bumpers – two screws secure each bumper. See [Figure 3-1](#).
2. Remove the strap handles (STRAP_HANDLE) from the Test Set.
3. Slide the external cover from the front frame.
4. To access the top-side assemblies remove the screws securing the top internal covers and remove it. See [Figure 3-2 on page 88](#).
5. To access the bottom-side assemblies remove the screws securing the bottom internal cover and remove it. See [Figure 3-2 on page 88](#).

Figure 3-1 Cover Removal


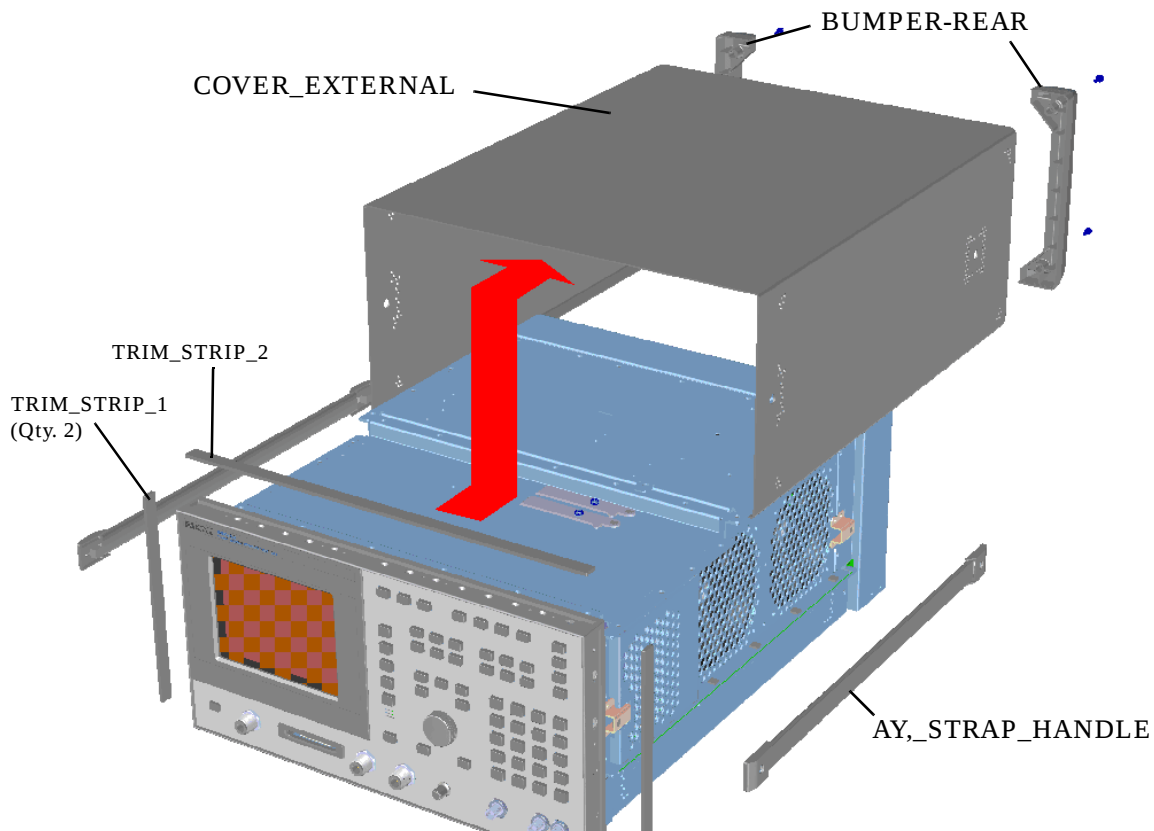
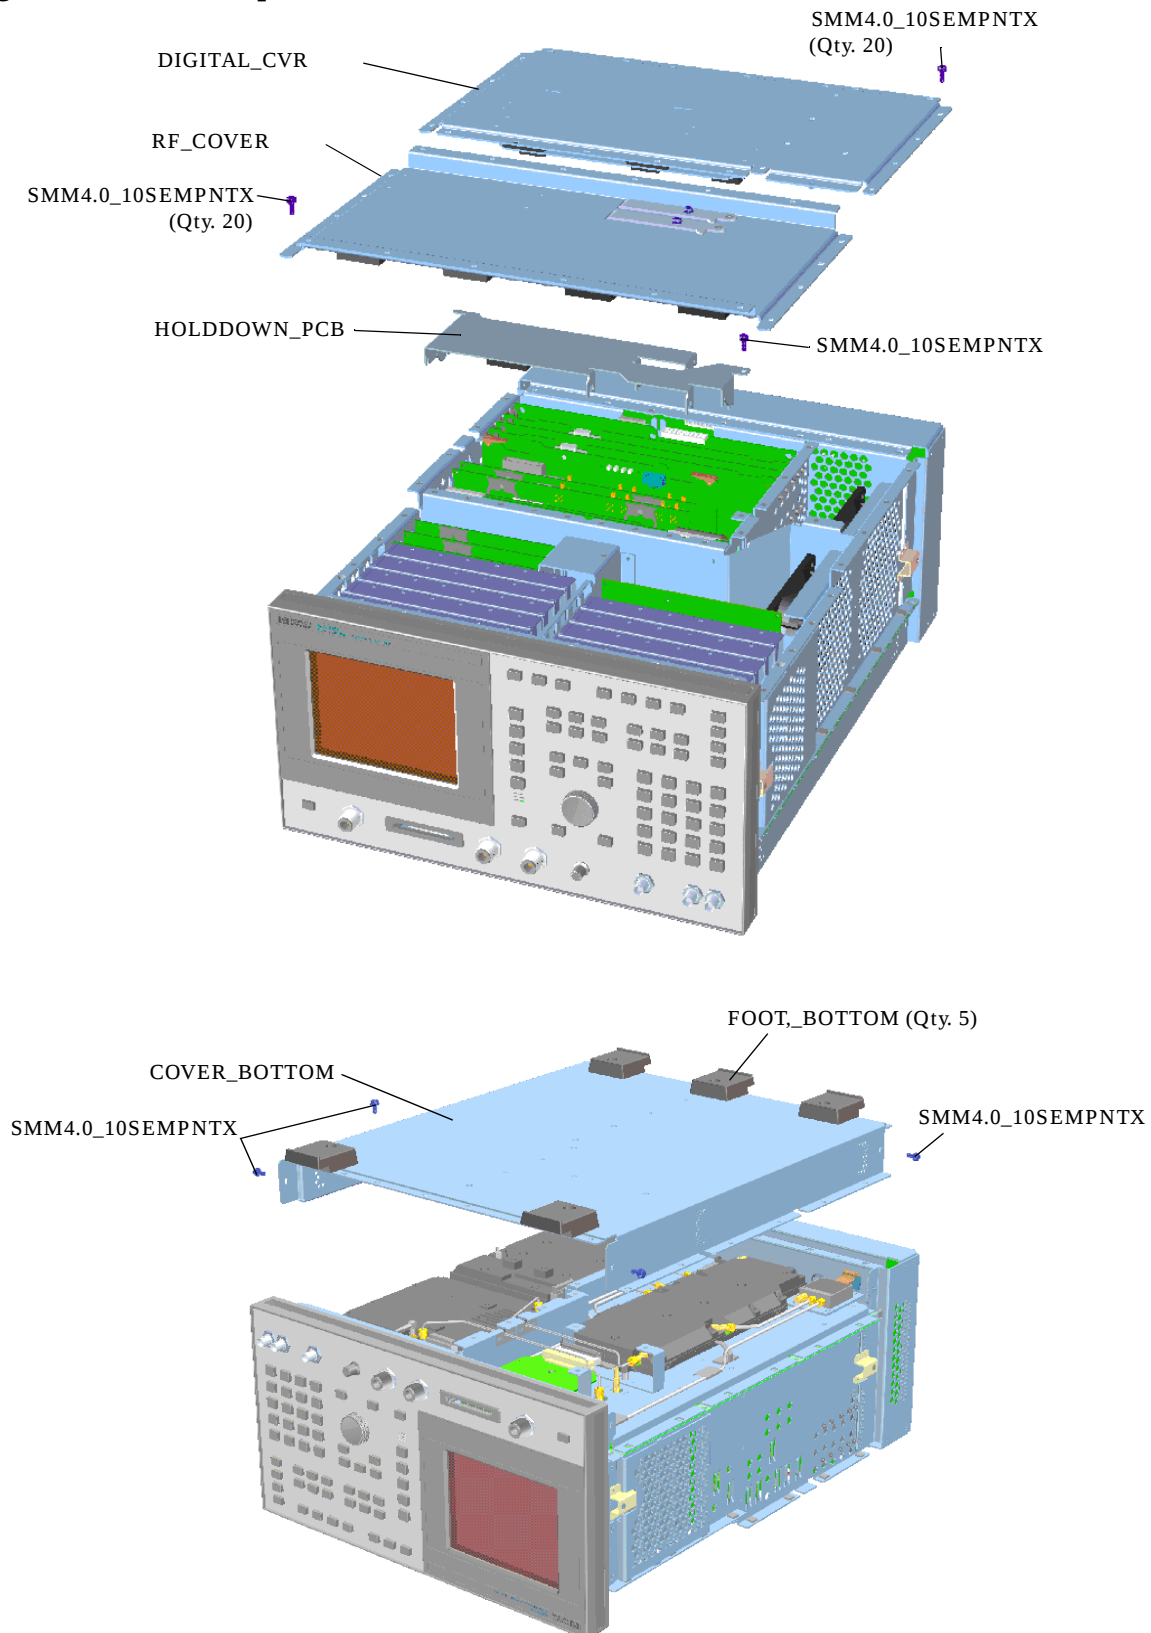



Figure 3-2 Top and Bottom Internal Covers

Top-Side Assemblies

1. Remove the external and internal covers, see "[External and Internal Covers](#)" on page 87.
2. Using [Figure 3-3](#), identify the module or board assembly you want to remove and lift the module or board assembly from the mother board.

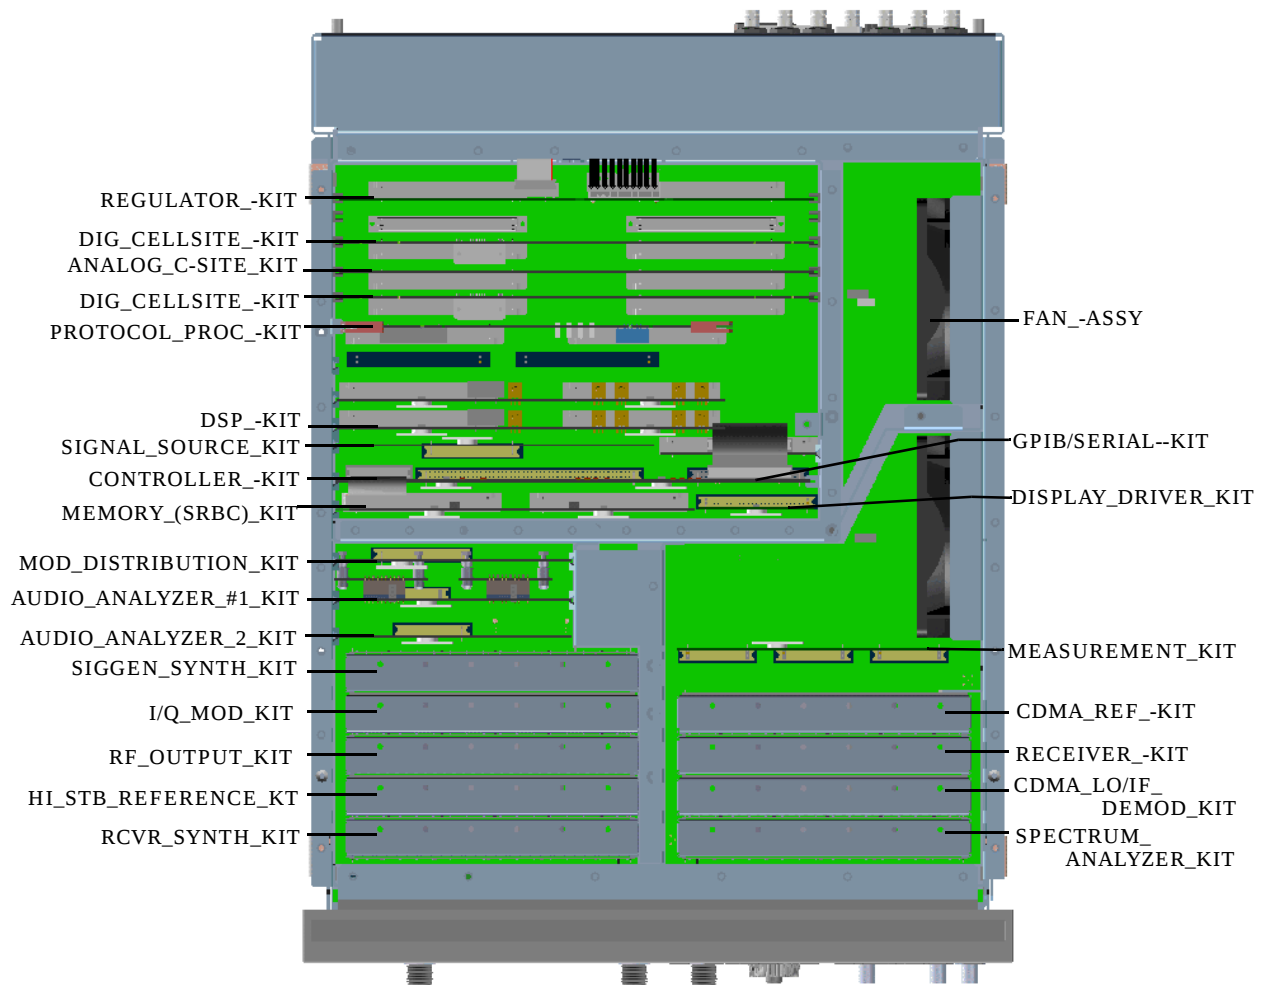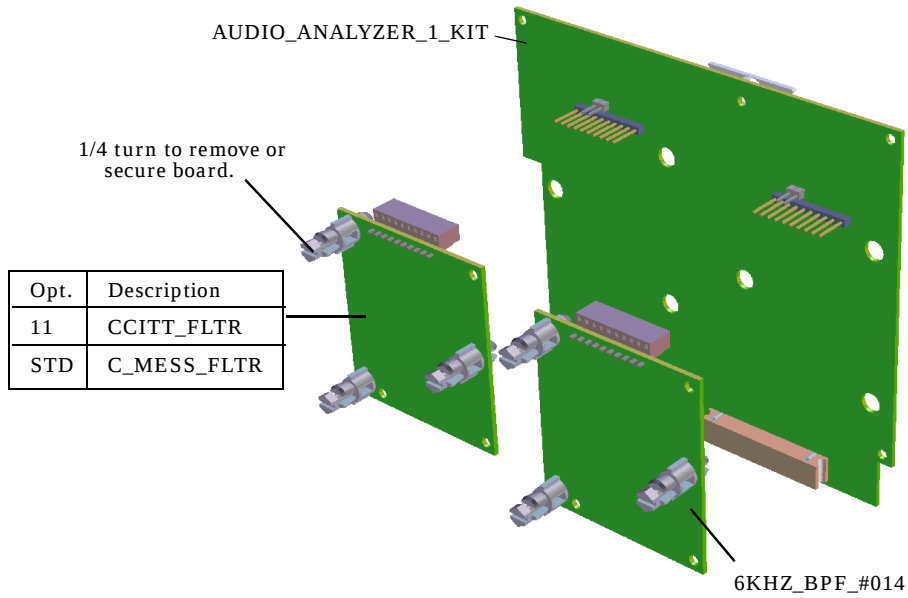Figure 3-3 Top-Side Assemblies



Audio Analyzer and Filter Assemblies**Figure 3-4 Audio Analyzer and Filter Assemblies**

Replacing the Controller

NOTE

Restoring Calibration Data in Controller Assembly


Calibration data for the entire Test Set is stored in EEPROM on the controller (CONTROLLER_KIT) assembly, see [Figure 3-5](#). When replacing the controller assembly, you must remove the “CAL MODULE” daughter-board from the old controller assembly and install it onto the replacement controller assembly to preserve the calibration data for the instrument.

“Boot Code” is the firmware that initializes the Test Set on power-up. It also is used at power-up to see if a firmware revision card has been inserted in the PCMCIA card port. This code is stored in the “CAL MODULE” daughter-board on the controller (CONTROLLER_KIT) assembly. If a new version of boot code needs to be installed, carefully remove the old daughter-board and insert the new one, being careful of the orientation. To replace the controller assembly:

1. Remove the external and internal covers, see ["External and Internal Covers" on page 87](#)
2. Locate the controller board (see [Figure 3-3 on page 89](#)), disconnect the ribbon cables (see [Figure 3-5](#)), and pull it out from the Test Set.
3. Carefully remove the CAL MODULE daughter-board from the original assembly and install it on the replacement.

Figure 3-5

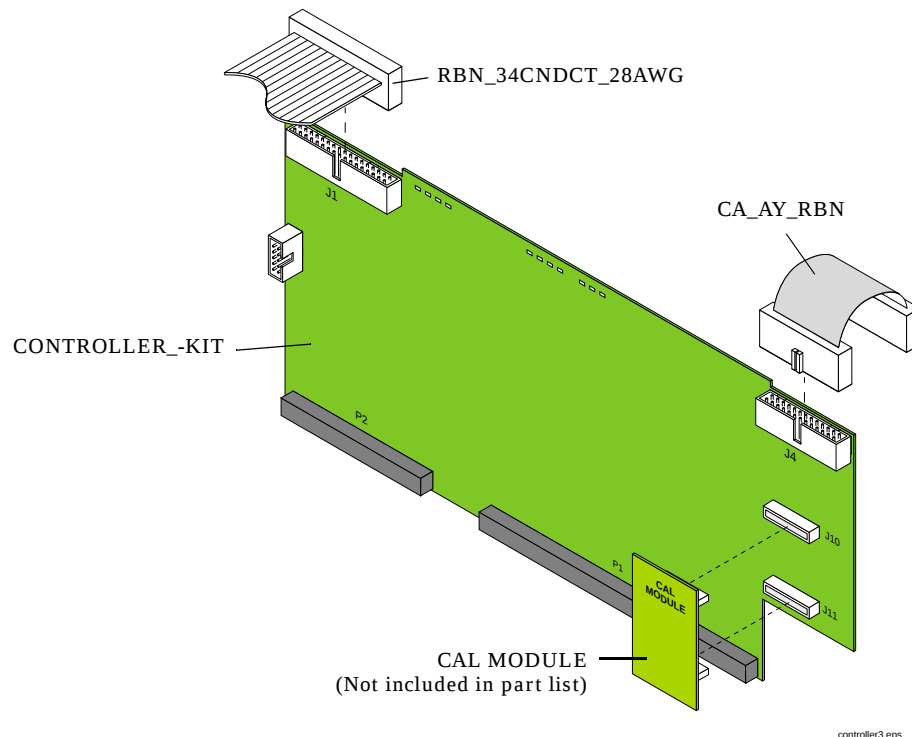Controller and “CAL MODULE” Assemblies



Batteries (Memory and Regulator Assemblies)

Figure 3-6 MEMORY_(SRBC)_KIT Assembly


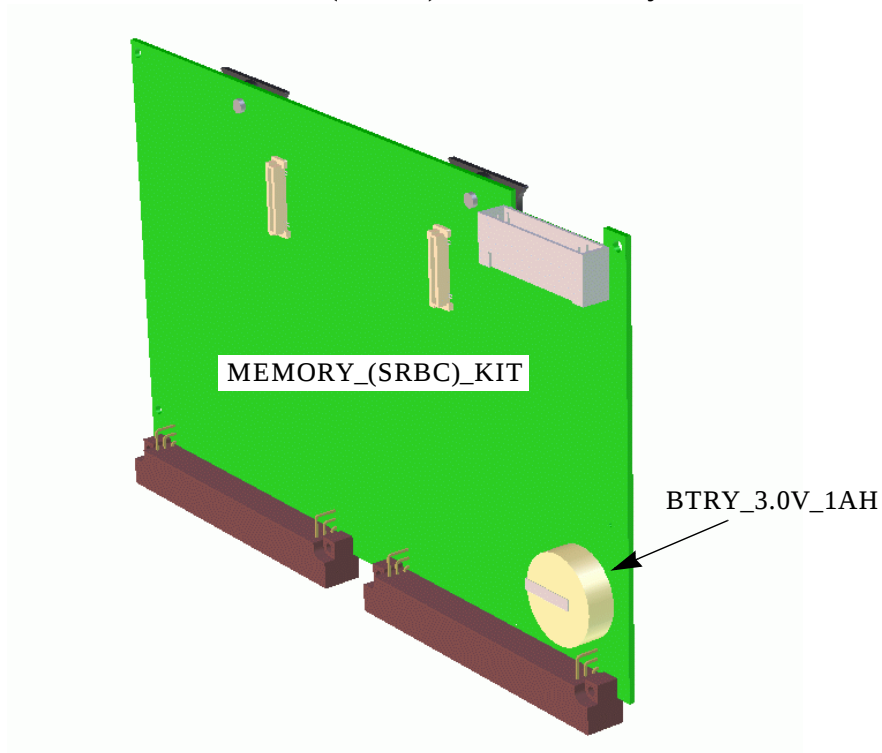


Figure 3-7 REGULATOR_KIT Assembly

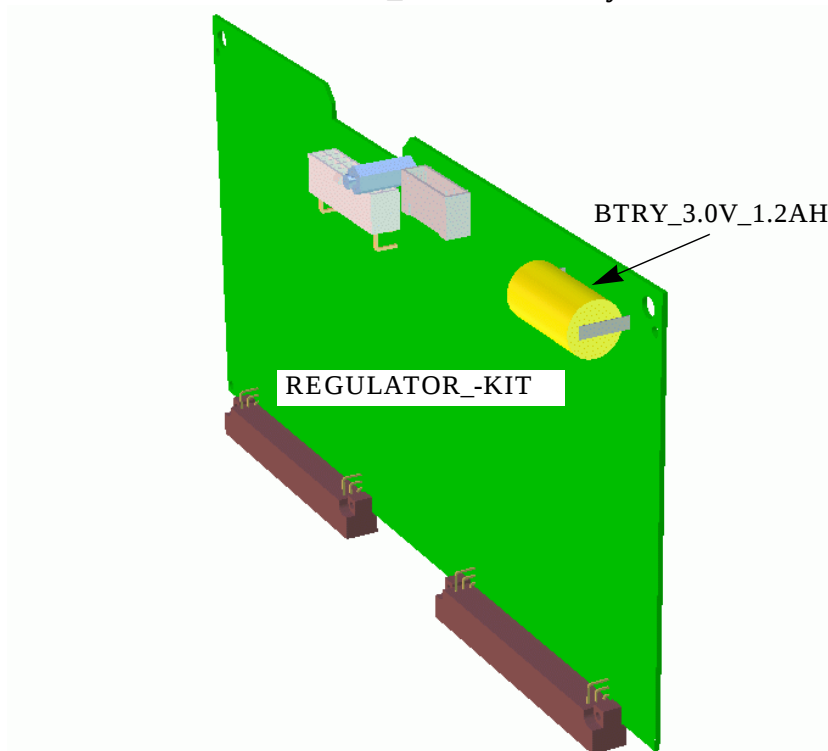

Bottom-Side Assemblies

1. Remove the external and internal cover, see "[External and Internal Covers](#)" on page 87.
2. Use [Figure 3-8](#) through [Figure 3-13](#) to identify and remove the assembly desired.

Figure 3-8 Bottom-Side Assemblies

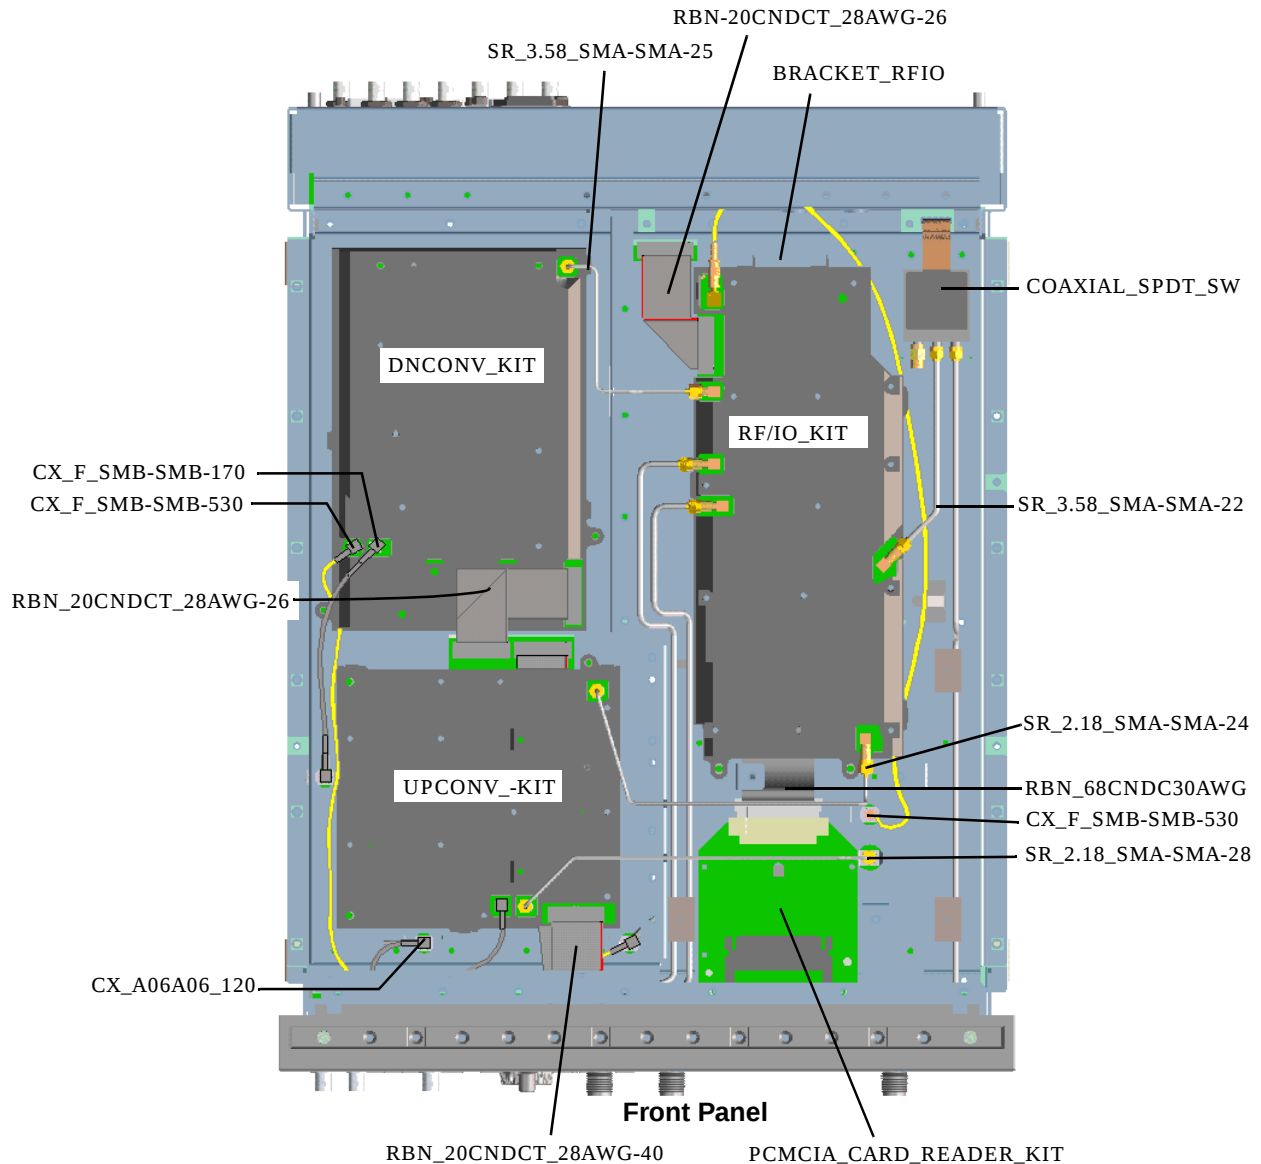
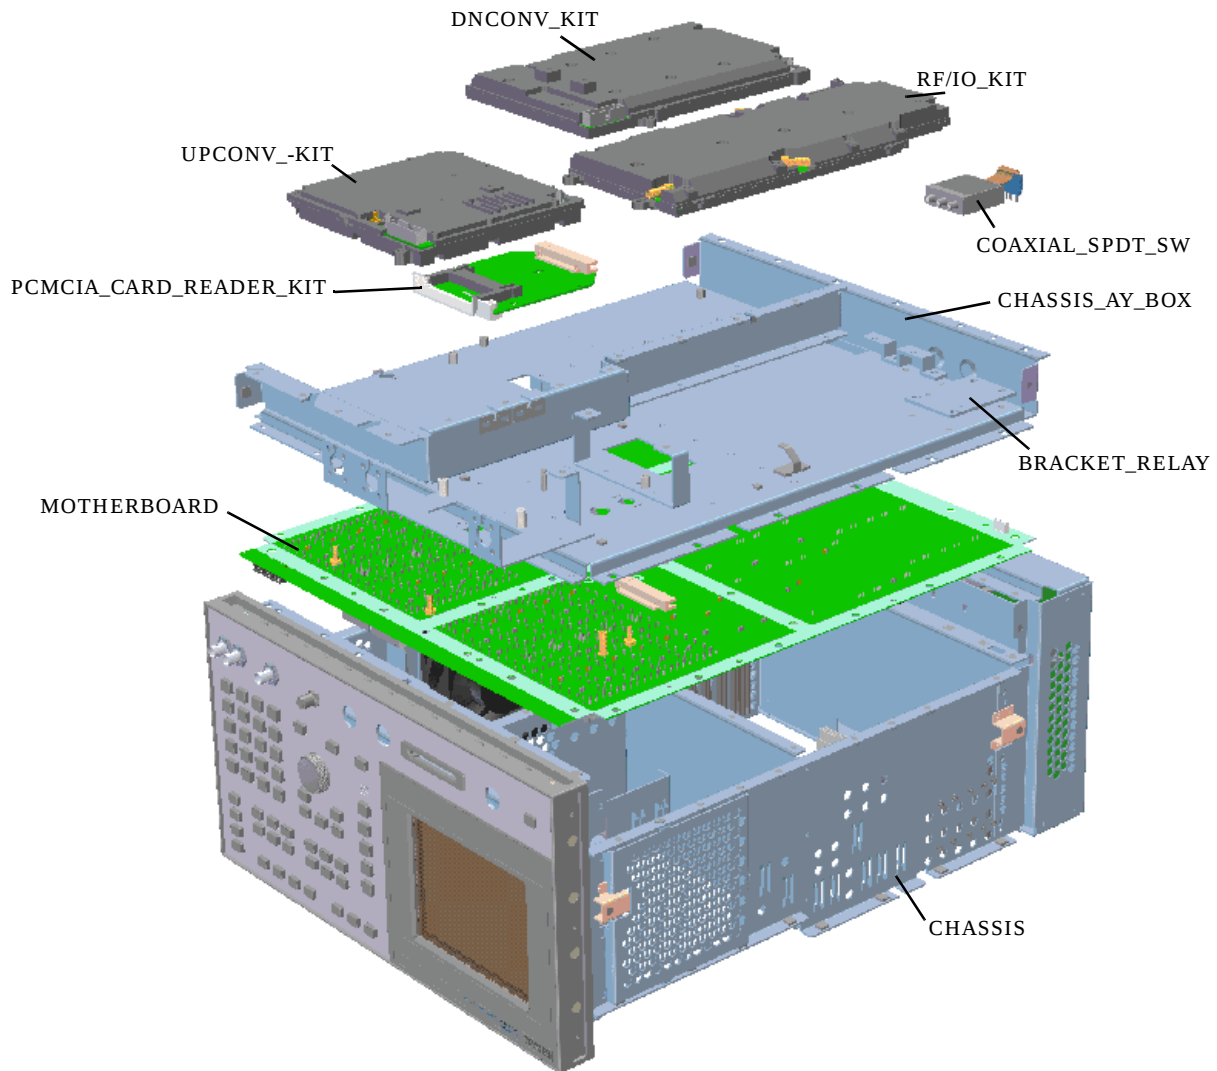



Figure 3-9 Bottom-side Subassemblies

NOTE: There is a combined MOTHERBOARD/CHASSIS KIT.

Downconverter Assembly

To remove this assembly disconnect the cables, connectors, and 4 screws shown in [Figure 3-10](#).

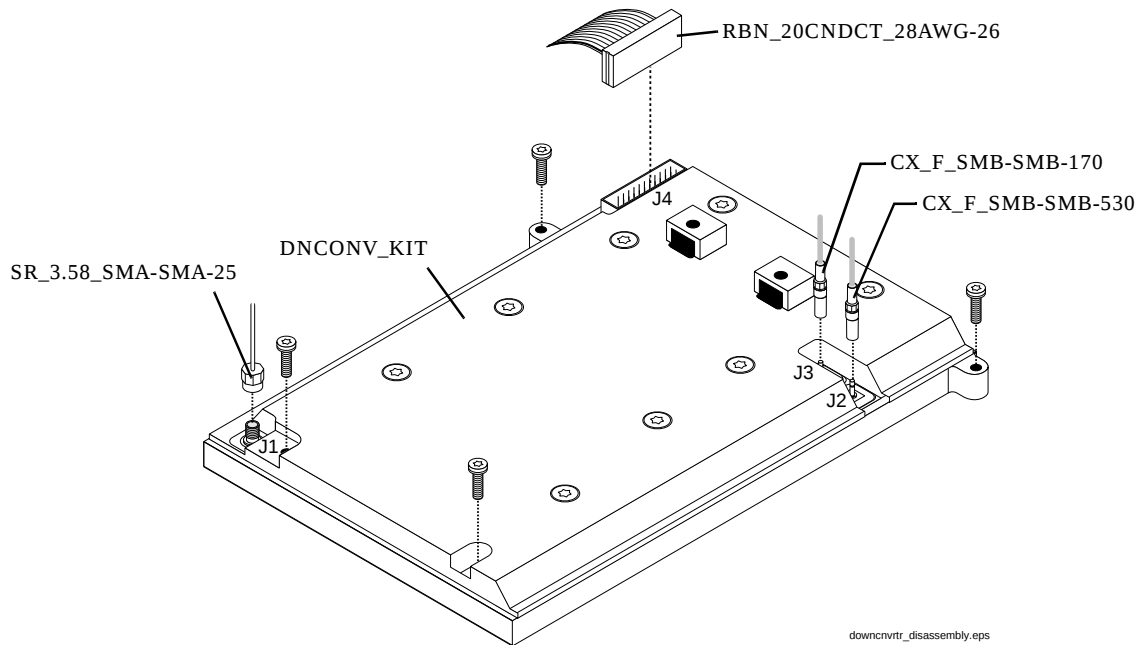
Figure 3-10 Downconverter Removal



Upconverter Assembly

To remove this assembly disconnect the cables, connectors, and 4 screws shown in [Figure 3-11](#).

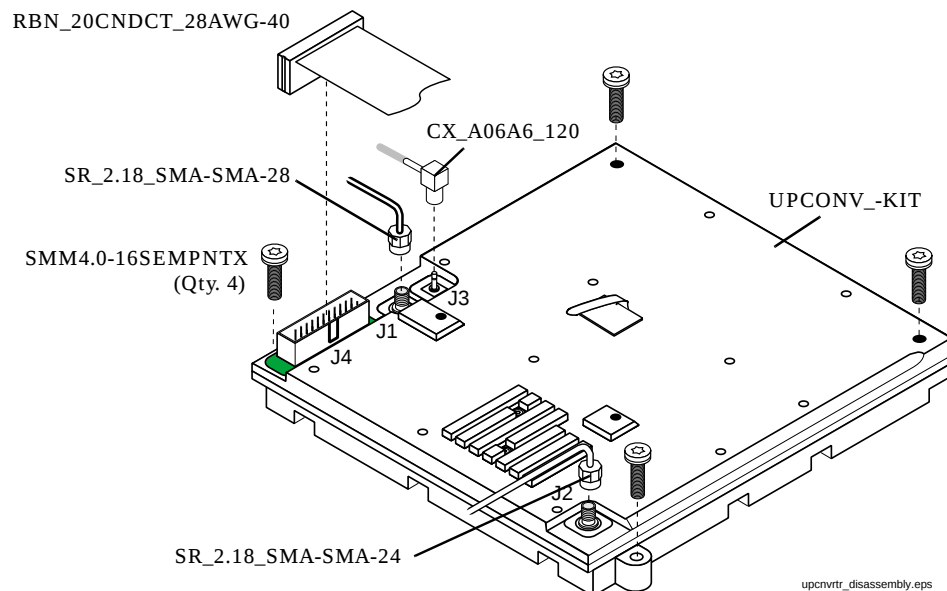
Figure 3-11 Upconverter Removal



RF I/O and Coaxial Switch Assemblies

To remove the RF I/O or coaxial switch assembly, or other associated components, see [Figure 3-12](#).

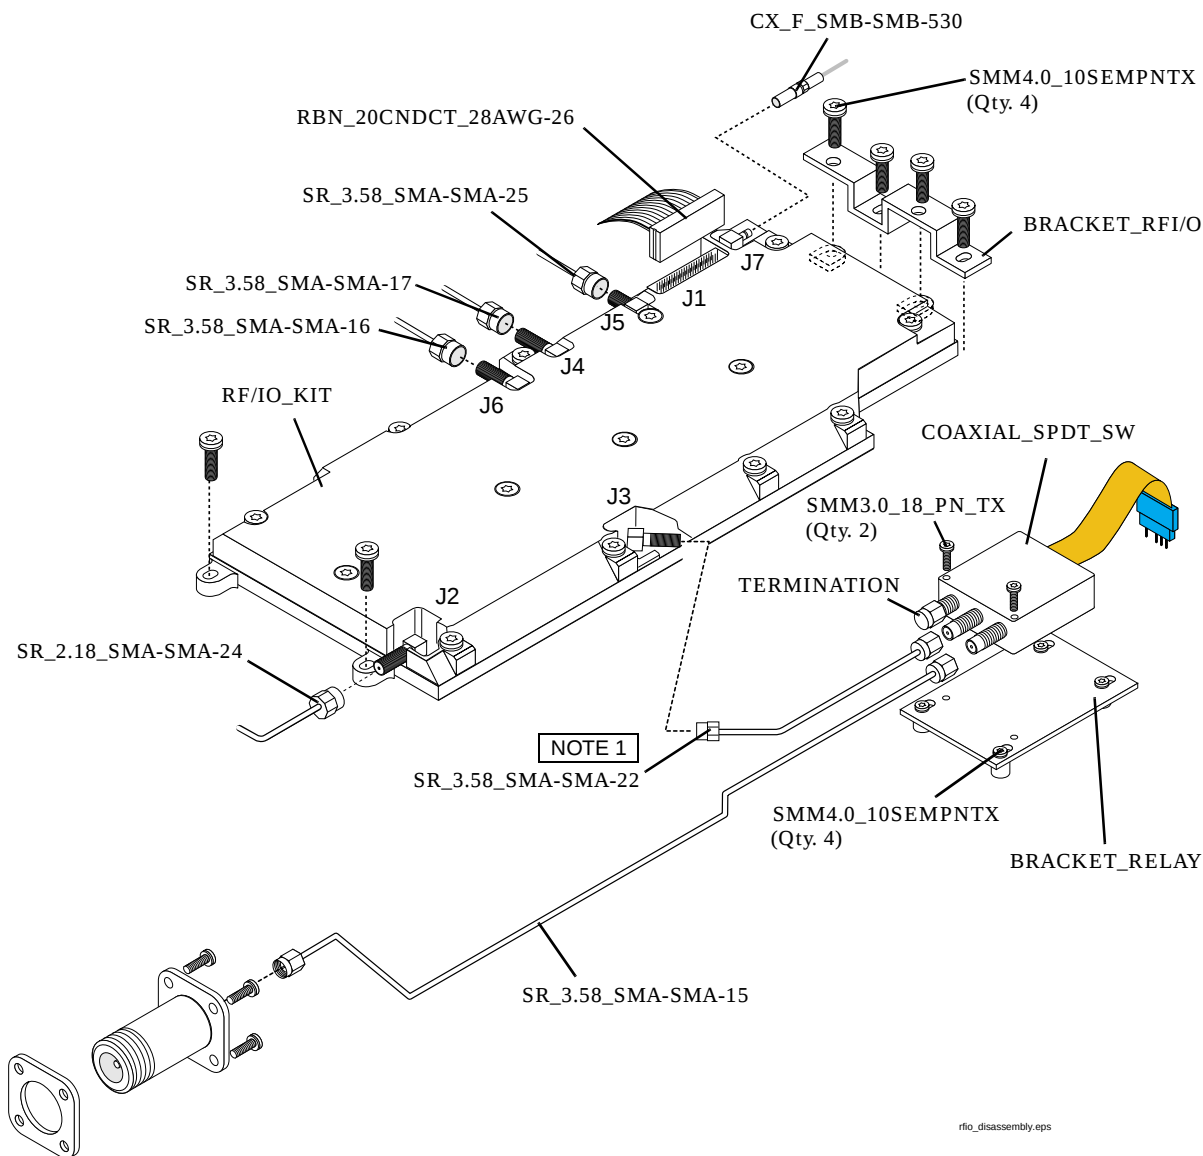Figure 3-12 RF I/O and Coaxial Switch Assemblies Removal




NOTE 1: To remove this cable, it is necessary to loosen the coaxial switch.

PCMCIA Assembly

To remove this assembly, disconnect the ribbon cable and 2 screws securing the assembly.

Figure 3-13

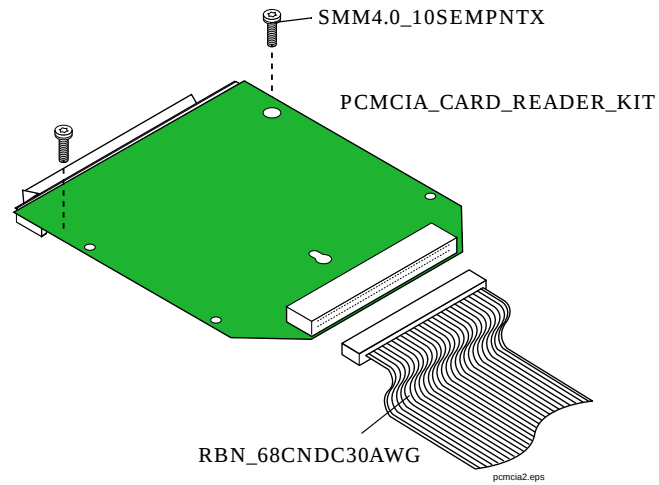
PCMCIA Assembly Removal



Motherboard Assembly

1. Remove the external and internal covers, see ["External and Internal Covers" on page 87](#).
2. Remove all top and bottom side subassemblies from the Test Set (see previous disassembly procedures).
3. Remove the bracket relay from the chassis, see [Figure 3-14](#).
4. Remove the screws securing the motherboard to the chassis.

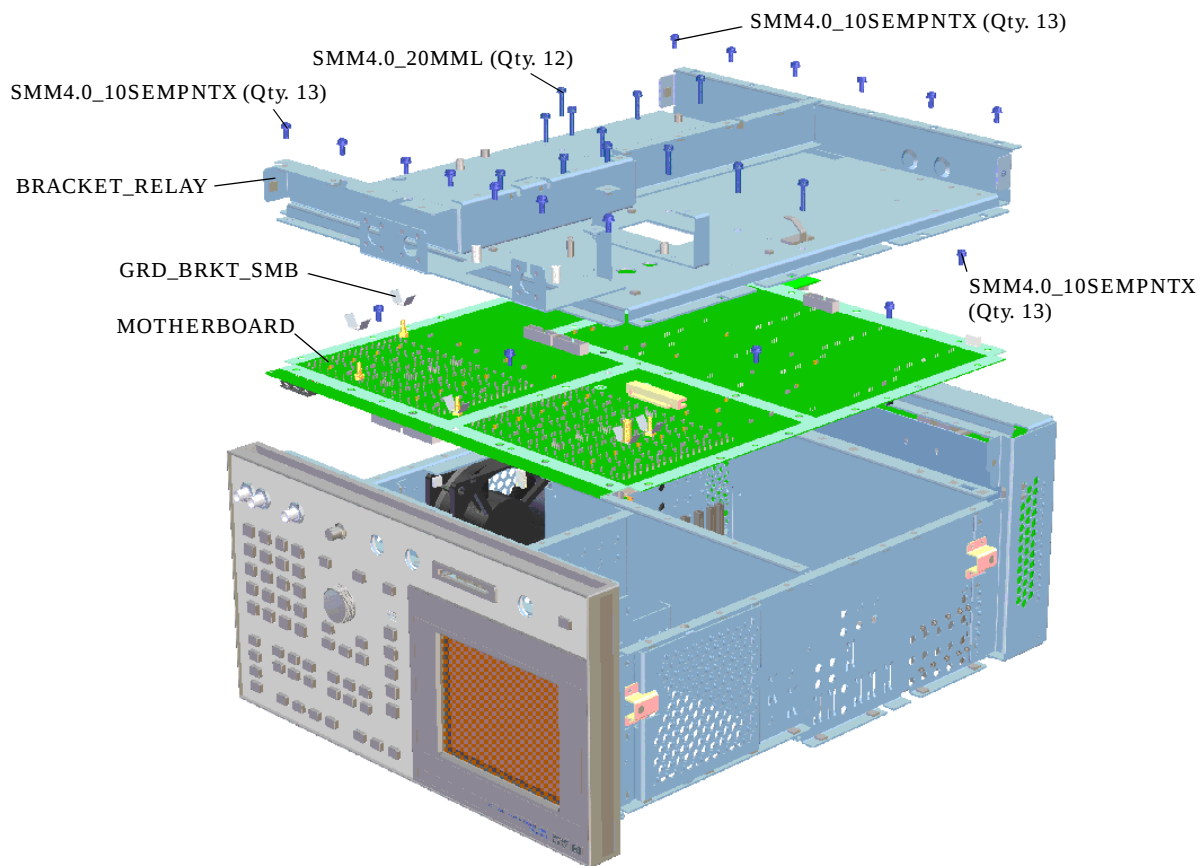Figure 3-14 **Motherboard Disassembly**



Front Panel Assembly

The front-panel assembly must be removed from the Test Set's chassis before any of the front panel subassemblies can be removed.

1. Remove the external and internal covers, see ["External and Internal Covers"](#) on page 87.
2. Remove the cables, BNC nuts, and 6 screws securing the front panel frame to the Test Set's chassis, see [Figure 3-15](#).
3. See [Figure 3-16 on page 100](#) to identify the desired subassembly for removal.

Figure 3-15 **Front Panel Assembly**


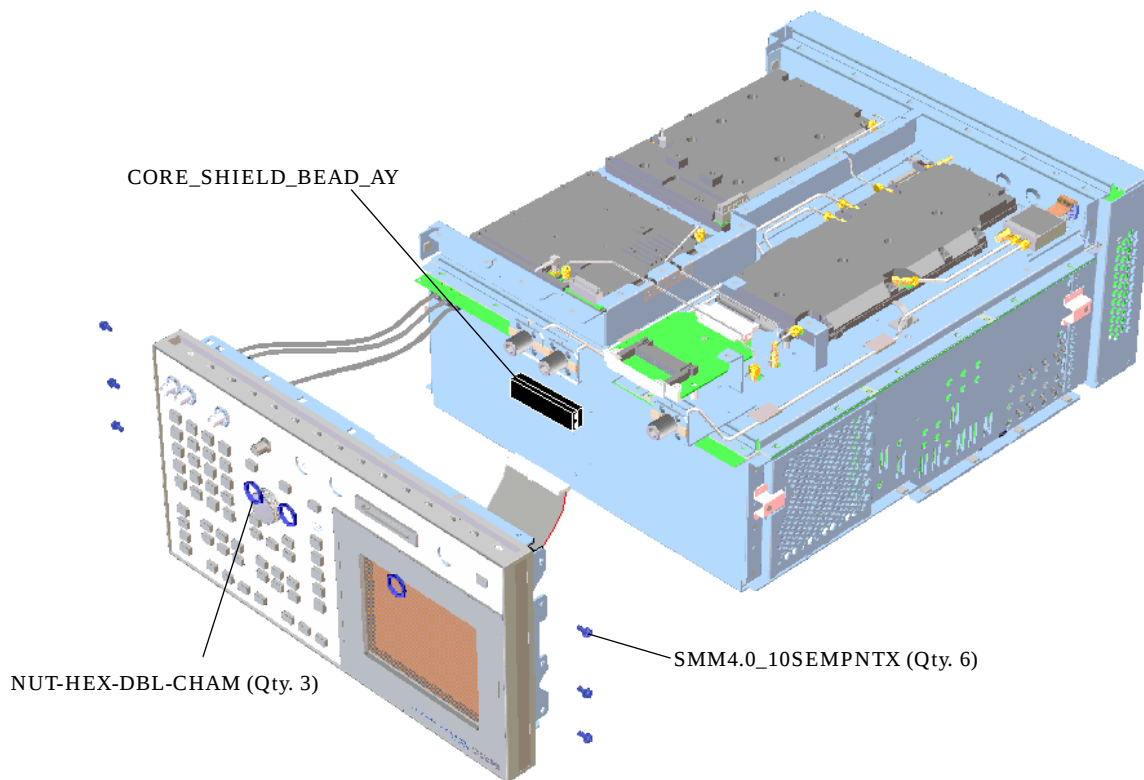
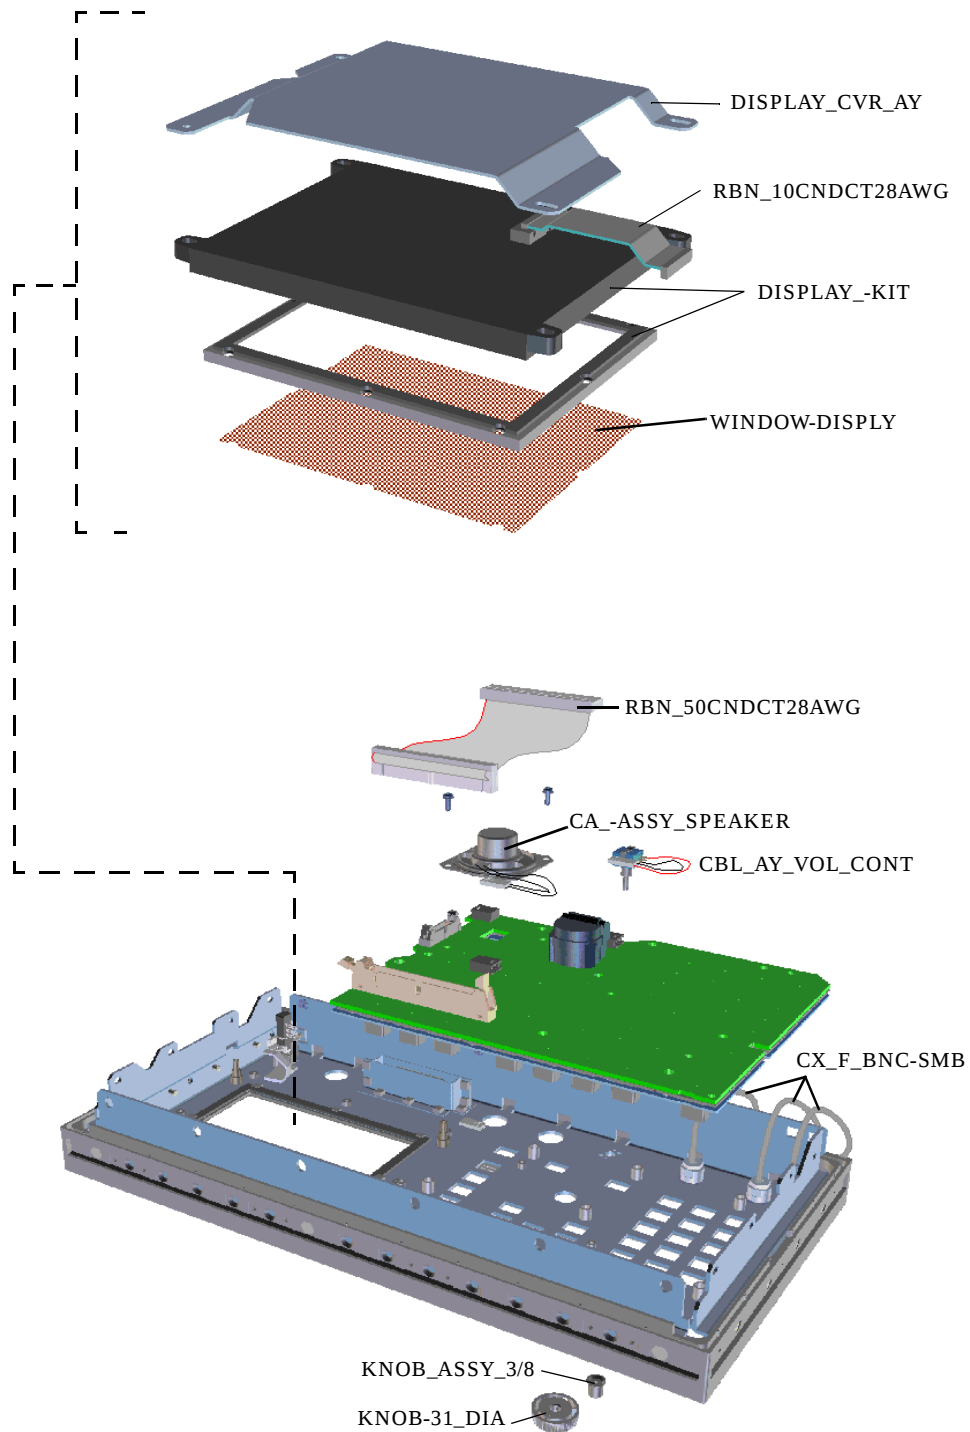


Figure 3-16 Front Panel Subassemblies

Fan

1. Remove the external and internal-top covers. See "[External and Internal Covers](#)" on page 87.
2. To remove either fan (see [Figure 3-17](#)) disconnect its power connector to the motherboard, and remove the 4 screws securing the fan to the Test Set chassis.

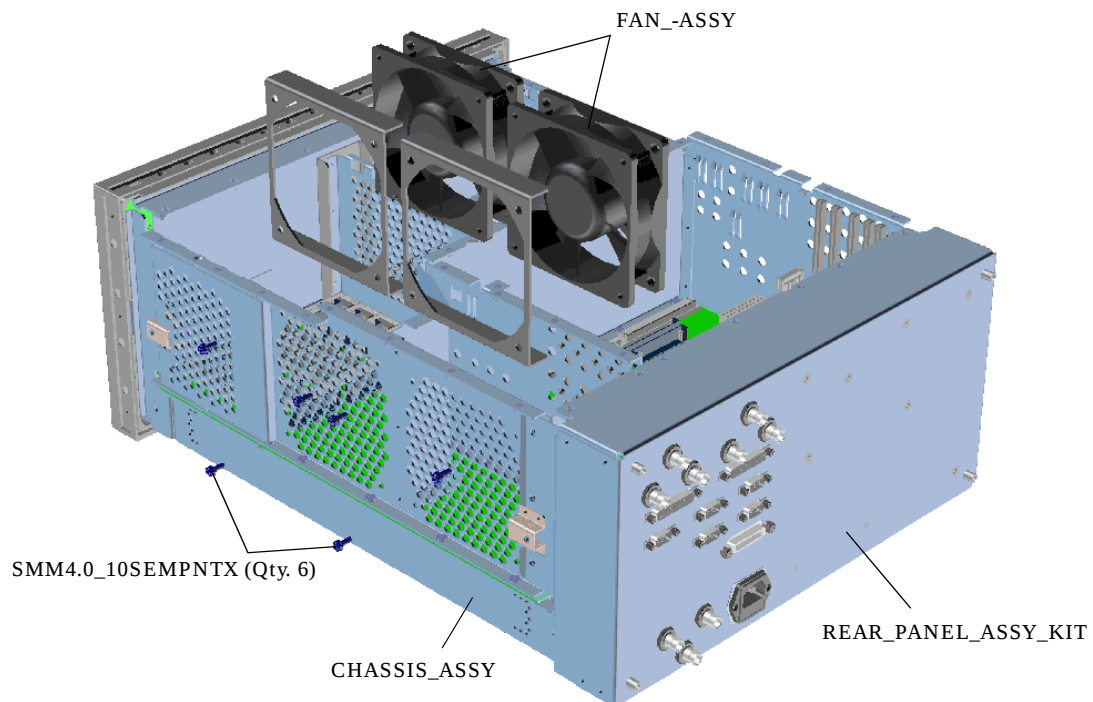Figure 3-17 Fan Removal



Power Supply

1. Remove the external and internal top and bottom cover, see [Figure 3-2 on page 88](#).
2. Remove the 6 screws securing the power supply assembly to the Test Set's chassis, see [Figure 3-18](#).
3. Refer to [Figure 3-19, "Power Supply Subassemblies," on page 103](#) and [Figure 3-20, "Power Supply Assembly Rear Panel," on page 104](#) to identify the desired subassembly for removal.

Figure 3-18 **Power Supply Assembly**

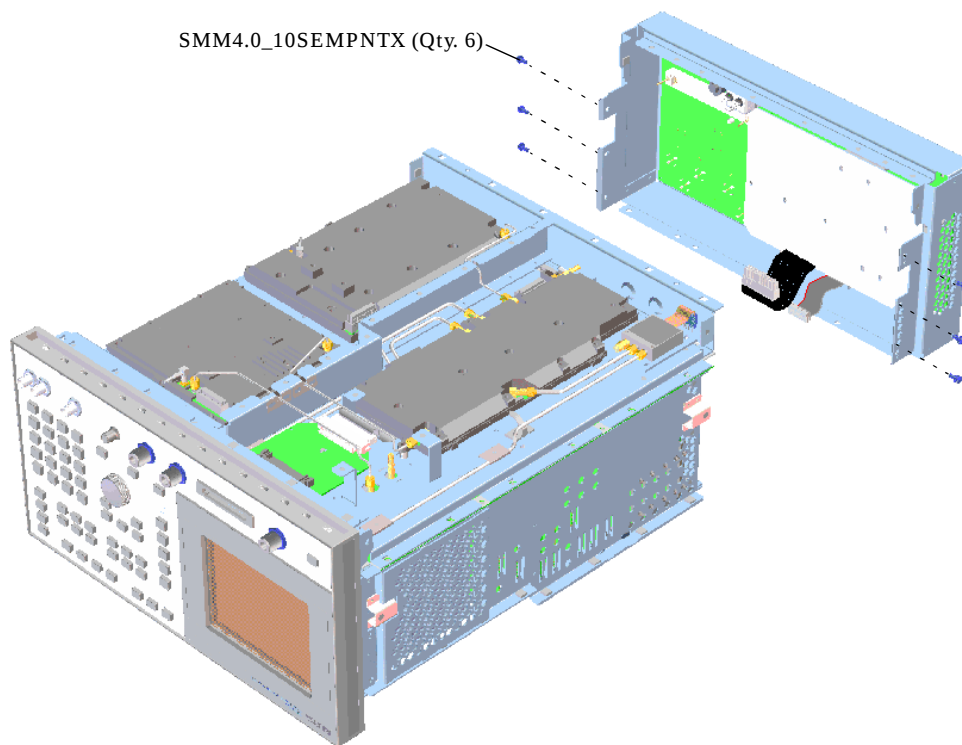


Figure 3-19 Power Supply Subassemblies

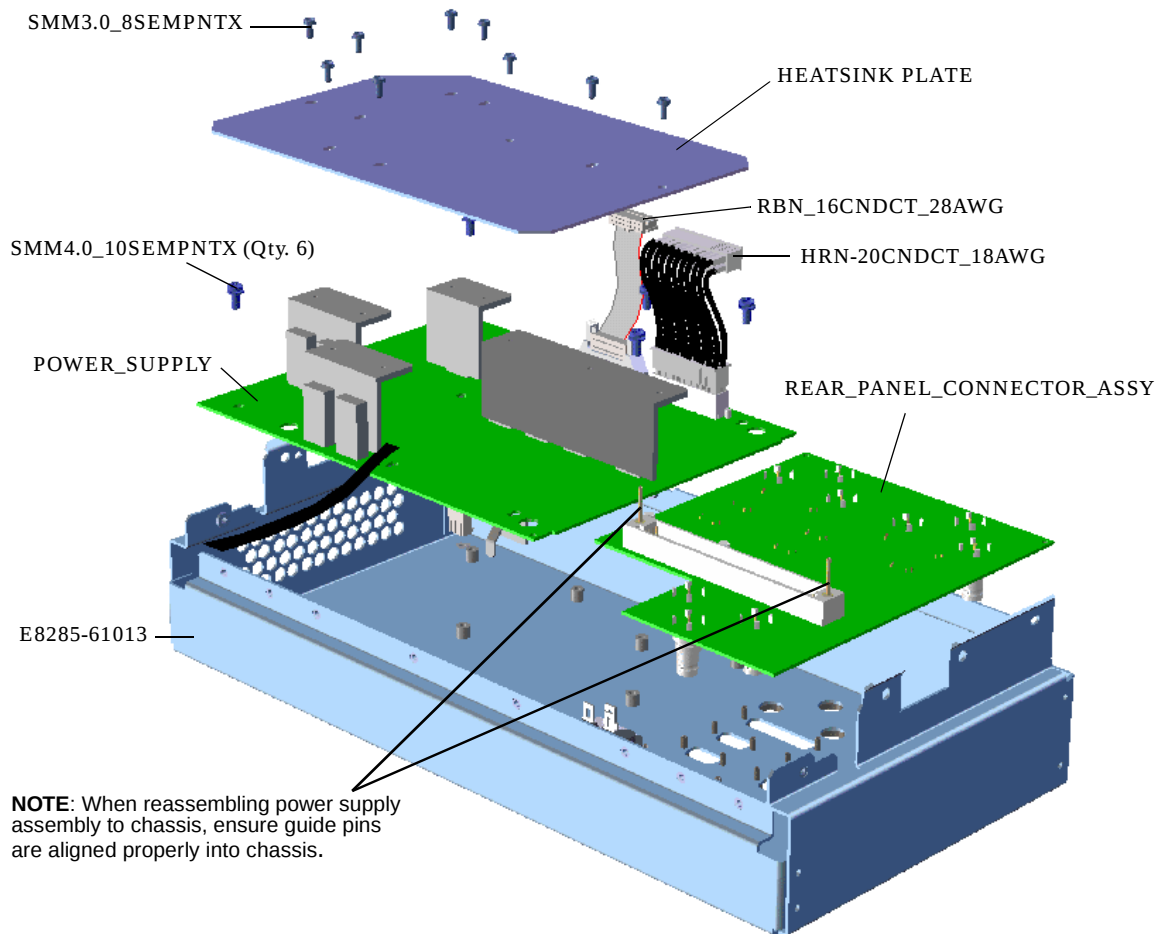
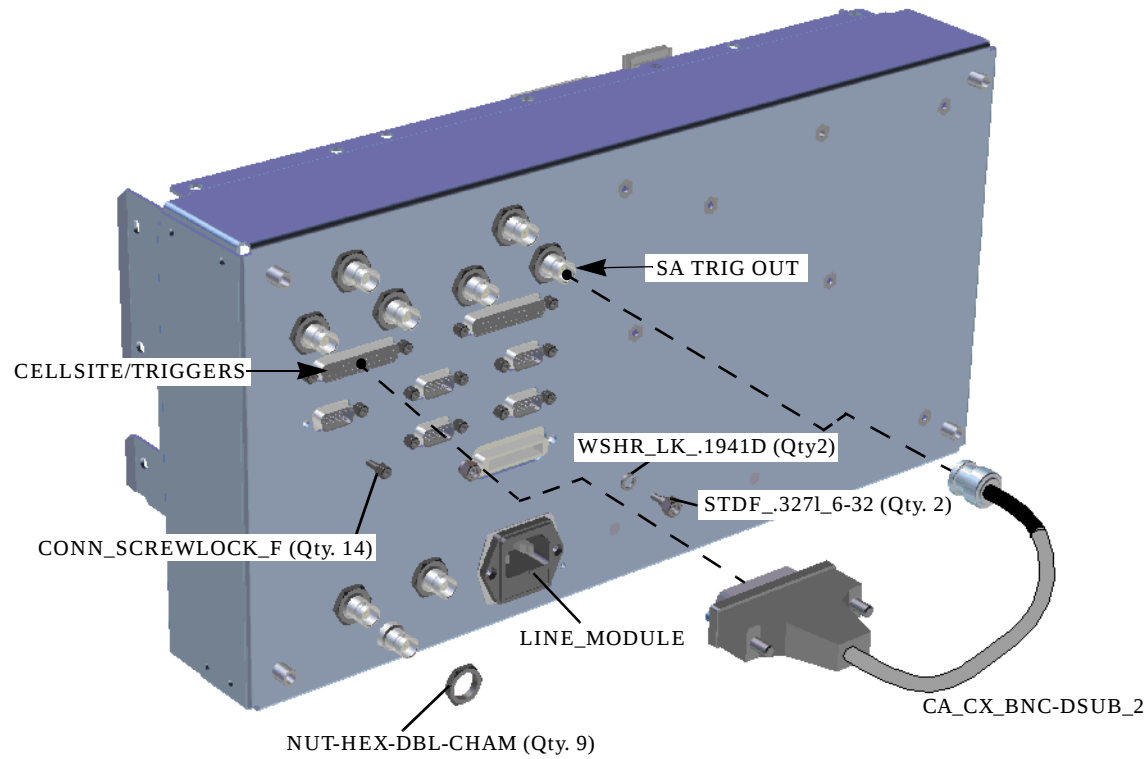


Figure 3-20 Power Supply Assembly Rear Panel

Parts List

Table 3-1

Replaceable Parts

Description	Part Number
6KHZ_BPF_#014_AY	08920-60268
ANALOG_C-SITE_KIT (FW Rev A.04.54 and below)	08924-61807
ANALOG_C-SITE_KIT (FW Rev A.05.03 and above)	E8285-61845
APPLICATN_GUIDE	E8285-90019
AUDIO_ANALYZER_#1_KIT	08920-61811
AUDIO_ANALYZER_2_KIT	08920-61853
AY,_STRAP_HANDLE	E8285-61012
BTRY_3.0V_1AH [on MEMORY_(SRBC)_KIT]	1420-0394
BTRY_3.0V_1.2AH [on REGULATOR_-KIT]	1420-0338
BRACKET_RELAY	E8285-00044
BRACKET_RELAY	E8285-00044
BUMPER-REAR	E5515-40009
C-MESS_FLTR	08920-61056
CA_AY-RBN	E6380-61052
CA_AY_RBN_26_CND	E8285-61057
CA_CX_BNC-DSUB_2	E8285-61066
CBL_AY_LNE_MDL	E8285-61047
CBL_AY_VOL_CONT	E8285-61043
CCITT_FLTR_#011	08920-61055
CDMA_LO/IF_DEMOD_KIT	08924-61805
CDMA_REF_-KIT	E8285-61804
CHASSIS_AY	E8285-61001
CHASSIS_AY_BOT	E8285-61035
COAXIAL_SWITCH	33314-60015
CONDENSE_REF_GDE	E8285-90020
CONN_SCREWLOCK_F	0380-2079
CONTROLLER_-KIT	E8285-61808

Description	Part Number
CORE_SHIELD_BEAD_AY	E8285-61058
COVER_BOTTOM	E8285-00012
COVER_EXTERNAL	E8285-00070
CX_A06A06_120	8120-5846
CX_F_BNC-SMB	E8285-61018
CX_F_SMB-SMB_170	E8285-61049
CX_F_SMB-SMB_530	E8285-61051
DIG_CELLSITE_-KIT	E8285-61832
DIGITAL_CVR_AY	E8285-61009
DISPLAY_-KIT	E8285-61823
DISPLAY_DRIVER_KIT	E6380-61816
DNCONV_KIT (FW Rev A.02.XX and below)	E6380-61808
DNCONV_KIT (FW Rev A.04.5X and above)	E8285-61861
DSP_-KIT	E8285-61812
FAN_-ASSY	E8285-61014
FOOT,BOTTOM	E5515-40010
FRONT_FRAME_-ASSY	E8285-61822
FUSE_5A_250V	2110-0882
FW_UPGRAD_-KIT	E8285-61815
GRD_BRKT_SMB	E8285-00029
GRND_SPRING_SMA	E8285-00065
GROUND_BRKT_CBL	E8285-00048
HEAT_SINK_PWR_SUP	E8285-00040
HI_STB_REFERENCE_KT	08920-61835
HOLDDOWN_KEYMAT	E8285-00038
HOLDDOWN_PCB	E8285-61052
HOLDDOWN_TYPE_N_AY	E8285-61053
GPIO/SERIAL_-KIT	E8285-61843
HRN-20CNDCT_18AWG	E8285-61033
HRN_PWR_SWITCH	E8285-61042

Description	Part Number
I/Q_MOD_KIT	08924-61806
KEY_MAT	E8285-40001
KEYBOARD_-ASSY	E8285-60141
KNOB-31_DIA	E5515-21052
KNOB_ASSY_3/8	0370-3409
MANUAL_CD_ROM	E8285-10004
MEASUREMENT_KIT	08920-61836
MEMORY_(SBRC)_KIT	E6380-61801
MOD_DISTRIBUTION_KIT	08920-61809
MOTHER_BD_AY	E8285-60101
MOTHERBOARD/CHASSIS_-KIT	E8285-61801
NUT-HEX-DBL-CHAM	0590-2332
PCMCIA_CARD_READER_KIT	E6380-61803
POWER_SUPPLY	0950-2665
PROTOCOL_PROC_-KIT	E8285-61813
RBN_10CNDCT28AWG	1253-0851
RBN_16CNDCT_28AWG	E8285-61032
RBN_20CNDCT_28AWG-26	E8285-61026
RBN_20CNDCT_28AWG-40	E8285-61040
RBN_34CNDCT_28AWG	E8285-61031
RBN_50CNDCT28AWG	E8285-61021
RBN_68CNDCT30AWG	E8285-61019
RCVR_SYNTH_KIT	08921-61820
REAR_PANEL_CONNECTOR_ASSY	E8285-60140
REAR_PANEL_KIT	E8285-61810
RECEIVER_-KIT (FW Rev A.02.XX and below)	E8285-61805
REFERENCE_GUIDE	E8285-90016
REGULATOR_-KIT	E8285-61802
RF/IO_KIT (FW Rev A.02.XX and below)	E8285-61856
RF/IO_KIT (FW Rev A.04.5X and above)	E8285-61860

Description	Part Number
RF_COVER_AY	E8285-61008
RF_OUTPUT_KIT (FW Rev A.02.XX and below)	E6380-61832
RF_OUTPUT_KIT (FW Rev A.04.5X and above)	E8285-61859
SCR-MACH_MS10.8	0515-2694
SHIELD_DISPLAY	E8285-00054
SIGGEN_SYNTH_KIT	08921-61819
SIGNAL_SOURCE_KIT	08920-61850
SMM3.0_12SEMPNTX	0515-0664
SMM3.0_18_PN_TX	0515-0682
SMM3.0_6_FL_TX	0515-1227
SMM3.0_6SEMPNTX	0515-2126
SMM3.0_8_FL_TX	0515-1102
SMM3.0_8SEMPNTX	0515-0372
SMM4.0_10SEMPNTX	0515-0380
SMM4.0_12SEMPNTX	0515-2243
SMM4.0_16SEMPNTX	0515-2245
SMM4.0_20MML	0515-0456
SMM4.0_6_PN_TX	0515-0684
SPEAKER_ASSY	E8285-61044
SPECTRUM_ANALYZER_KIT	08920-61852
SR_2.18_SMA-SMA	E8285-61024
SR_2.18_SMA-SMA	E8285-61028
SR_3.58_SMA-SMA-15	E8285-61015
SR_3.58_SMA-SMA-16	E8285-61016
SR_3.58_SMA-SMA-17	E8285-61017
SR_3.58_SMA-SMA-22	E8285-61022
SR_3.58_SMA-SMA-25	E8285-61025
STDF_.327L_6-32	0380-0644
TERMINATION	0960-0053
TRANSIT_CASE	E8285-90012

Description	Part Number
TRIM_STRIP_1	5041-9173
TRIM_STRIP_2	5041-9176
UPCONV_-KIT (FW Rev A.02.XX and below)	E8285-61811
UPCONV_-KIT (FW Rev A.04.5X and above)	E8285-61862
USERS_GUIDE	E8285-90018
WINDOW-DISPLY	E6380-21010
WSHR_LK_.1941D	2190-0577

4

Functional Verification

The purpose of this chapter is to provide loopback self-tests and mobile phone test procedures that quickly verify the functional performance of the Test Set.

Purpose

The purpose of this chapter is to provide loopback self-tests and mobile phone test procedures that quickly verify the functional performance of the Test Set while racked in a test system or operating stand-alone. If racked in a test system, removing the Test Set should be avoided if all functional performance tests pass. Performing and passing all tests will result in a very high level of confidence that the Test Set is functioning properly. This document is not intended to provide complete troubleshooting instruction for hardware failures.

The desired results of the following procedures are:

- To isolate the cause of test system problems quickly if related to the Test Set
- To minimize unnecessary Test Set swapping
- To identify the root cause of poor test system yields if related to the Test Set
- To improve user test system quality confidence level
- To educate current and new production technicians on Agilent Technologies products

Process Efficiency Recommendations

- A. Identify a test-standard “Golden Mobile” phone for each production line. This phone will be used to verify your test system and Test Set performance
- B. Characterize components of each test system:
 - Generate baseline performance data for each Test Set
 - Generate baseline performance data for each fixture
 - Generate baseline normalization data for external path losses
- C. Maintain Test System binder to include:
 - Test Set baseline data
 - Fixture baseline data
 - Test system normalization calibration tables
 - Test system maintenance records. (Performance Verification and PTR Records, [Table 4-1 on page 123](#))
- D. Create troubleshooting kits to include
 - Golden mobile phone
 - Cables and adapters
 - Maintenance record sheets
 - Firmware cards
- E. Use Save/Recall registers to speed-up testing.

Analog Loopback

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

Analog loopback configures the Test Set to test all of its major functions. A problem located in the RF and audio source or RF and audio analyzer paths will become evident.

In this configuration, the RF and audio generators will be used to simulate a low level modulated transmitter signal. The RF receiver will be used to demodulate this signal and pass it on to the audio analyzer to make the SINAD measurement.

1. Press the green Preset key to configure instrument to default settings.
2. Connect a short RF cable between the DUPLEX OUT port and the ANTENNA IN port.
3. Configure the instrument for loopback mode.
 - 3a. Press the Config key and set the following fields:
 - RF Display: Freq
 - RF Offset: On
 - (Gen) - (An1): 0 MHz
 - 3b. Press the AF analyzer key and set the following fields:
 - Speaker ALC: ON
 - Speaker Vol: POT
 - 3c. Press the Duplex key and set the following fields:
 - Tune Freq: 501 MHz (FW rev A.02.XX and below)
900 MHz (FW rev A.04.5X and above)
 - Input Port: Ant
 - RF Gen Freq: 501 MHz (FW rev A.02.XX and below)
900 MHz (FW rev A.04.5X and above)
 - Amplitude: -80 dBm
 - Output Port: Dupl
 - AFGen1 To: FM / 3.10 kHz
 - AF An1 In: FM Demod
 - Filter 1 300 HPF
 - Filter 2 3 kHz LPF
 - De-Emphasis OFF
 - Detector RMS*SQRT2

4. Turn up the VOLUME knob to hear the 1 kHz tone.
5. SINAD meter should read >35 dB.
6. Change the Amplitude setting to -100 dBm, the SINAD meter should read >12 dB.
7. Record results in [Table 4-1 on page 123](#).

SUGGESTION: Store instrument settings as a Save/Recall register (press the Save key). Name the register SINAD.

Wideband Sweep

NOTE Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

NOTE This functional performance test requires the spectrum analyzer option in the Test Set.

Wideband sweep configures the Test Set to test all of its major functions. A problem located in the RF source or RF analyzer paths will become evident. In this configuration, the spectrum analyzer and tracking generator will be used to test and view the RF level and flatness of the RF source and RF analyzer over a 1 GHz span.

1. Begin by using the same setup as analog loopback (Recall “SINAD” register)
2. Connect a short RF cable between the RF IN/OUT port and the ANTENNA IN port
3. Configure the instrument for wideband sweep mode.
 - 3a. Press the Spectrum analyzer key. On the SPECTRUM ANALYZER screen set the following fields:
 - Set the Ref Level field to 0 dBm
 - Set the Span field to 1 GHz (FW rev A.02.XX and below)
200 MHz (FW rev A.04.5X and above)
 - 3b. On the SPECTRUM ANALYZER / RF Gen screen, set the following fields:
 - Set the Controls field to RF Gen Track
 - Set the Port/Sweep field to RF Out
4. Sweep should be:
 - Continuous across the display with no RF level dropouts
 - Fairly flat, about 4 to 5 dB difference between end points
5. Record results in the [Table 4-1 on page 123](#).

SUGGESTION: Store instrument settings as a Save/Recall register (press the Save key). Name the register WB_SWEEP

Channel Power Loopback Verification Test

Channel power is extremely important in the ability of the Test Set to maintain a link with and properly control power output levels of the mobile phone under test. Channel power loopback verification is a quick way to ensure that both the average and channel power measurements are working properly.

1. Press the green Preset key to configure instrument to default settings.
2. Connect a short RF cable between the RF IN/OUT port and DUPLEX OUT port
3. Configure the Test Set for channel power loopback mode (this is a non-standard user mode).
 - 3a. Press the (CDMA SCREENS) Call control key and set the RF Chan Std field to US PCS.
 - 3b. Press the Config key and set the following fields:
 - RF Display: Freq
 - RF Offset: On
 - (Gen) - (Anl): 0 MHz
 - Output Port: Dupl
 - Input Port: RF In
 - 3c. Press the (CDMA SCREENS) Call control key. On the CDMA CALL CONTROL screen, set the following fields:
 - RF Gen Freq: 1900 MHz
 - Place cursor on the Avg Power field and select Chan Power
 - Place cursor on the Power Meas field.
 - Press the knob or Enter key to begin calibration routine
 - Press the Yes key to continue the calibration routine
4. Perform the Channel Power Loopback Measurement:
 - Place cursor on the Sctr A Pwr field
 - Step the Sctr A Pwr level from -5 to -60 dBm in 5 dB increments.
 - Measured channel power should be within a few dB of the sector power output level setting

NOTE

The "Ideal Mobile Power" value is not applicable for this test

5. Record results in [Table 4-1 on page 123](#).

Suggestion: Store instrument settings as a Save/Recall register (press the Save key). Name the register CPWR_LB.

ROM-Based Diagnostics and Calibration

Comprehensive internal IBASIC diagnostics are provided to aid in troubleshooting the Test Set. These diagnostic programs use external cabling and the internal measurement and path setting capabilities of the Test Set to diagnose itself for RF and audio hardware problems. No external test equipment is necessary.

As the diagnostic programs execute, detected problems will be reported with a suggested defective assembly and its probability of failure. Refer to the appropriate Assembly Level Repair section for more information.

1. Press the Preset key to configure instrument to default settings.
2. Press the Tests key to access to TESTS (Main Menu) screen, see [Figure 4-1 on page 119](#).
3. For Select Procedure Location: select ROM
4. For Select Procedure Filename: select SERVICE7
5. Press the K1 key. The SERVICE MENU appears.
6. Load and execute each of the following diagnostic and calibration programs:
 - Under Functional Diagnostics; select RF Modules, Analog Modulation, and CDMA Loopback
 - AF Diagnostics
 - RF Diagnostics
 - CDMA Diagnostics
 - IQ Calibration
 - IQ Demod Path Calibration

NOTE

Disregard all other diagnostic or calibration programs that appear on the SERVICE MENU and are not listed in step 6.

7. Load and execute PCB_CAL program:
 - Press the Tests key to access the TESTS (Main Menu) screen.
 - For Select Procedure Location: select ROM
 - For Select Procedure Filename: select PCB_CAL
 - Press K1 to execute.
8. Record results in the [Table 4-1 on page 123](#).

Figure 4-1 SERVICE MENU

TESTS (Main Menu)	
SERVICE7	
LOAD TEST PROCEDURE: Select Procedure Location: ROM Select Procedure Filename: Library: Program: SERVICE7 [NO LIB] ROM Description: Launches diagnostic and calibration programs.	
CUSTOMIZE TEST PROCEDURE: SET UP TEST SET: Freq Channel Information Exec Execution Cond Parm Test Parameters Sean Order of Tests Spec Pass/Fail Limits Proc Save/Delete Procedure	
1 Run Test 2 Continue 4 Help To Screen ● CDMA REV SPEC O Analog RX TEST	

TESTS (IBASIC Controller)	
SERVICE MENU	
Move pointer to the desired program using the knob then press the knob. Press Help for information on the tests. Press Exit to abort.	
=> Functional Diagnostics AF Diagnostics RF Diagnostics CDMA Diagnostics Edit Diagnostic Limits Periodic Calibration IQ Calibration IQ Demod Path Calibration	
1 2 3 4 Help 5 Exit	

Channel Power Calibration

To ensure the accuracy of the Test Set power measurement, channel power calibration should be run before the mobile phone functional test portion of the performance verification test plan.

1. Press the Preset key to configure instrument to default settings.
2. Connect a short RF cable between the RF IN/OUT port and DUPLEX OUT port
3. Calibrate the channel power measurement:
 - Press the (CDMA SCREENS) Call control key
 - Set RF Chan Std field to US PCS
 - Set Avg Power field to Chan Power
 - Place the cursor on the Power Meas field and select Calibrate
 - Press the knob or Enter key to begin calibration routine.
4. Record results in the [Table 4-1 on page 123](#).

Suggestion: Store instrument settings as a Save/Recall register (press the Save key). Name the register CPWR_CAL.

CDMA Mobile Phone Functional Test

1. Connect the mobile phone to the Test Set.
2. Setup for call processing:

NOTE

Knowledge of the mobile's System ID, RF Channel, and RF Channel capability are essential to call processing. Therefore, the mobile phone functional test may not be successful if this information is not known.

2a. Press (CDMA SCREENS) Cell config key. On the CDMA CELL SITE CONFIGURATION screen:

- For the System ID field, if known, enter system ID number.
- For the Rgstr SID field, enter system ID number (same as System ID field).
- Set the Pwr Up Reg field to On.

2b. Press the Config key and set the Date field for one month in advance.

2c. Press the (CDMA SCREENS) Call control key:

- Place cursor on the Avg Power field and select Chan Power
- For the RF Chan Std field enter appropriate RF channel standard
- For the Protocol field select appropriate protocol
- For the RF Channel field enter appropriate RF channel
- For the Traffic Data Mode field select Svc Opt 2
- For the Sctr A Pwr field enter -55 dBm/BW

Suggestion: Store instrument settings as a Save/Recall register (press the Save key). Name the register CP.

3. Turn mobile phone on:
 - Ensure Test Set's Call Status "Transmitting" annunciator is lit.
 - Mobile should obtain service with the Test Set.
 - If capable, mobile will do a power-up registration within 20 seconds indicated by the ESN appearing below the MS Database field.
 - Mobile RSSI indicator shows four bars.
 - Mobile may display date and time setting of Test Set.
4. Originate Call
 - Dial '123' on mobile then press YES or Send
 - Test Set's Connected annunciator should be lit
 - Mobile should be in a connected "Svc Opt 2" state.
 - Press No or End on mobile to end call.
5. Page mobile phone:

- Press the Call/Page key on the Test.
 - Test Set should page the mobile.
 - Mobile should automatically connect to Test Set.
6. Mobile phone measurements (record all test results in [Table 4-1 on page 123](#).
- 6a. Receiver FER Test:
- Press the (CDMA SCREENS) RX test key
 - Set the Display Interim Results field to Yes
 - Set the FER Spec field to 0.50%
 - Set Sctr A Pwr: field to -90 dBm/BW (when no isolation box is used)
 - Set Meas Cntl filed to Single
 - Begin measurement, highlight the Arm field. Test Set should return a Passed Status
- 6b. Transmitter Rho Test:
- Press the (CDMA SREENS) TX test key.
 - Set Meas Cntl field to Cont. Measured Traffic Rho should be >0.980
- 6c. Mobile Channel Power Test:
- Press the (CDMA SCREENS) Call control key.
 - Set Chan Power field to Chan Power. Measured channel power should be about ± 1.5 dB of the calculated "Ideal Mobile Power" value.
7. End call - press the End/Release button on the Test Set.

Functional Verification Test Record

Tested By _____ Date _____ Test Set Serial # _____

Cell Phone ESN # _____ Cell Phone MIN # _____

Table 4-1 Functional Verification Test Record

Power Up Self-Test	Pass / Fail
All self tests passed	
Channel Power Loopback Verification Test	Pass / Fail
Channel Power Accuracy	
Analog Loopback	Pass / Fail
SINAD @ -80 dB > 25 dB	
SINAD @ -100 dB > 12 dB	
Wideband Sweep	Pass / Fail
Acceptable flatness = (Max level – Min level) = <5 dB	
TESTS (Main Menu) Screen ROM Diagnostic Programs	Pass / Fail
SERVICE7 / Functional Diagnostics / RF Modules	
SERVICE7 / Functional Diagnostics / Analog Modulation	
SERVICE7 / Functional Diagnostics / CDMA Loopback	
SERVICE7 / AF Diagnostics (All Tests)	
SERVICE7 / RF Diagnostics (All Tests)	
SERVICE7 / CDMA Diagnostics (All Tests)	
TESTS (Main Menu) Screen Calibration Programs	Pass / Fail
SERVICE7 / IQ Calibration	
SERVICE7 / IQ Demod Path Calibration	
PCB_CAL	
Channel Power Calibration Procedure (see “Channel Power Calibration” on page 120)	Pass / Fail
Channel Power Cal	
Call Setup Procedures (see “CDMA Mobile Phone Functional Test” on page 121)	Pass / Fail
Register Mobile	

Table 4-1 Functional Verification Test Record

Page to Mobile	
Origination from Mobile	
Functional Tests Procedures (see “CDMA Mobile Phone Functional Test” on page 121)	Pass / Fail
Receiver FER	
Transmitter Rho	
Mobile Channel Power	

5 Periodic Adjustments/Calibration

This chapter contains the periodic adjustment procedures for the Test Set.

Periodic Adjustments

Some assemblies or combinations of assemblies require periodic adjustments to compensate for variations in circuit performance due to age or environment.

There are two types of calibration data:

- Factory-generated digital data either on memory cards, or on-board ROMs (which are on the assemblies themselves)
- Data generated internally by running calibration programs (ROM-based or external [“System Power Calibration Program”](#) on page 39)

In either case calibration data is loaded into non-volatile memory on the controller assembly.

NOTE

Because calibration data resides on the Controller assembly, it is important that whenever this assembly is replaced that the data be transferred from the original assembly to the new one. The calibration data resides on a “CAL MODULE” daughter-board which can be moved with little danger of losing its contents. Insure that the serial number of the daughter-board matches the serial number of the Test Set. Refer to the instructions accompanying the replacement assembly for details.

To download calibration data supplied on a memory card, follow the instructions that come with the replacement assembly. To create and download calibration data for assemblies requiring a periodic adjustment, follow the steps later in this chapter. For a summary of assemblies and their calibration requirements, see [table 5-1, “Assembly Calibration Information”](#) on page 127.

Table 5-1 Assembly Calibration Information


Assembly	Calibration Data Location		Calibration Program: Sub Program
	Memory Card	on Assembly	
Audio Analyzer 1			Periodic Calibration: Audio Analyzer 1 Offset
Modulation Distribution			Periodic Calibration: External Modulation Path Gain, and, AF GEN Gain
Upconverter		X	
Output Section		X	
Signal Generator Synthesizer		X	
Reference		X	Periodic Calibration: Timebase Reference
Receiver		X	
Receiver Synthesizer		X	
Spectrum Analyzer	X		
Downconverter		X	
Measurement	X		Periodic Calibration: Voltmeter References
RF I/O		X	See “System Power Calibration Program” on page 39.
CDMA Reference			IQ Calibration
Controller		X	
LO IF/IQ Demodulator			IQ Calibration, and IQ Demod Path Calibration
Digital Cellsite 1 or 2			IQ Calibration
IQ Modulation			IQ Calibration
Analog Cellsite			PCB Cal (ROM-based)
Audio Analyzer 2			Periodic Calibration: Variable Frequency Notch Filter

Test Equipment

Test Equipment for the Periodic Adjustments Programs

- For the **Timebase Reference Using a Counter** calibration you will need to connect a frequency counter to the rear-panel 10 MHz REF OUTPUT connector. The accuracy of the counter will determine the accuracy of the Test Set's internal reference. You will use the counter to set the timebase reference DACs.
- For the **Timebase Reference Using a Source** calibration you will need to connect a signal generator to the front-panel ANTENNA IN connector.
- For the **Voltmeter References** calibration you will need a DC voltmeter that can measure ± 5 V with $\pm 0.015\%$ accuracy.

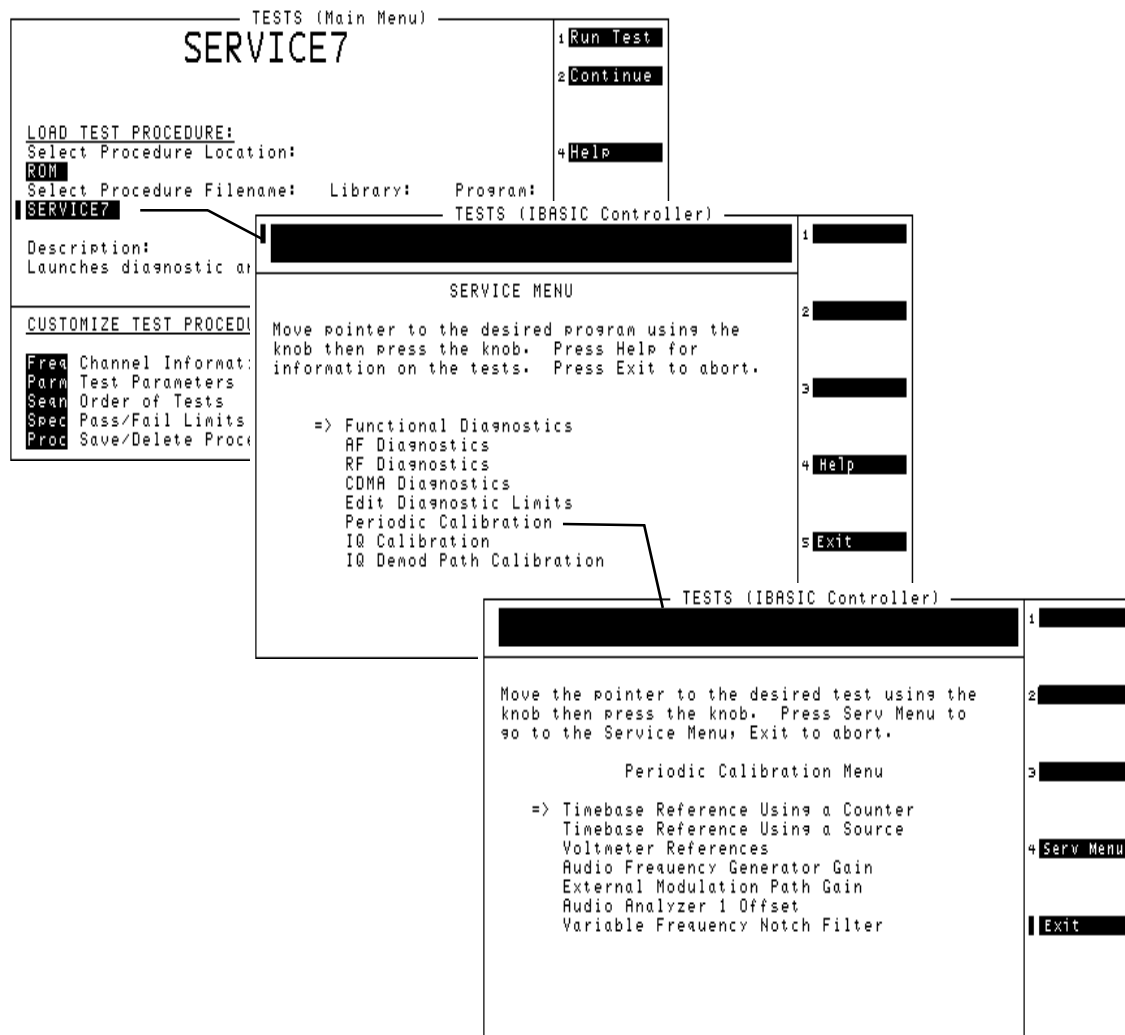Figure 5-1 Periodic Calibration Menu



Storing Calibration Factors

You should understand the calibration-factor-storage process before running any of the following programs: Periodic Calibration, IQ Calibration, IQ Demod Path Calibration, or System Power Calibration.

As a program runs, calibration factors are computed and applied. When all the calibration factors have been acquired, the program stops and asks if the user wants the calibration factors to be stored. At this point, it should be emphasized that the new calibration factors are now being used by the Test Set. If you do not store them at this point, they will be used by the Test Set until the power is switched off even though they have not been stored.

If you do not store the calibration factors but run another calibration program and then store the calibration factors, the calibration factors from the previous program will be stored along with the calibration factors just acquired unless the power is cycled between the tests. Storing calibration factors copies the calibration factors from volatile to non-volatile memory (that is, memory that is not erased when the power is turned off).

Also, when storing calibration factors, be sure to wait for the message **Updating Flash Calibration Files... DO NOT Interrupt Power!** to disappear before continuing. Depending on the number of calibration factors being stored, this may take several minutes.

Running the Periodic IQ, or IQ Demod Path Calibration Programs

1. Press Tests key to access the TESTS (Main Menu) screen, see [Figure 5-2](#).
2. Select the field under **Select Procedure Location:**.
3. Select **ROM** under the **Choices:** menu.
4. Select the field under **Select Procedure Filename:**.
5. Select **SERVICE7** from the **Choices:** menu.
6. Select **Run Test** (K1 key).
7. From the SERVICE MENU, select the desired calibration program to perform.
 - **Periodic Calibration** - for more detailed information, see [“Periodic Calibration Menu Descriptions” on page 131](#).
 - **IQ Calibration** - for more detailed information, see [“IQ Calibration Program Description” on page 137](#)
 - **IQ Demod Path Calibration** - for more detailed information, see [“IQ Demod Path Calibration Program Description” on page 139](#).
8. Follow the instructions on the screen.

Figure 5-2


SERVICE MENU's Calibration Programs

TESTS (Main Menu)	
SERVICE7	
<u>LOAD TEST PROCEDURE:</u> Select Procedure Location: ROM Select Procedure Filename: Library: Program: SERVICE7	
Description: Launches diagnostic ar	
<u>CUSTOMIZE TEST PROCEDURE:</u> Free Channel Information Param Test Parameters Seam Order of Tests Spec Pass/Fail Limits Proc Save/Delete Proc	
TESTS (IBASIC Controller) SERVICE MENU Move pointer to the desired program using the knob then press the knob. Press Help for information on the tests. Press Exit to abort. => Functional Diagnostics - AF Diagnostics - RF Diagnostics - CDMA Diagnostics - Edit Diagnostic Limits - Periodic Calibration - IQ Calibration - IQ Demod Path Calibration	
1	Run Test
2	Continue
4	Help
1	
2	
3	
4	Help
5	Exit

Periodic Calibration Menu Descriptions

This section describes the adjustment programs listed under the Periodic Calibration menu.

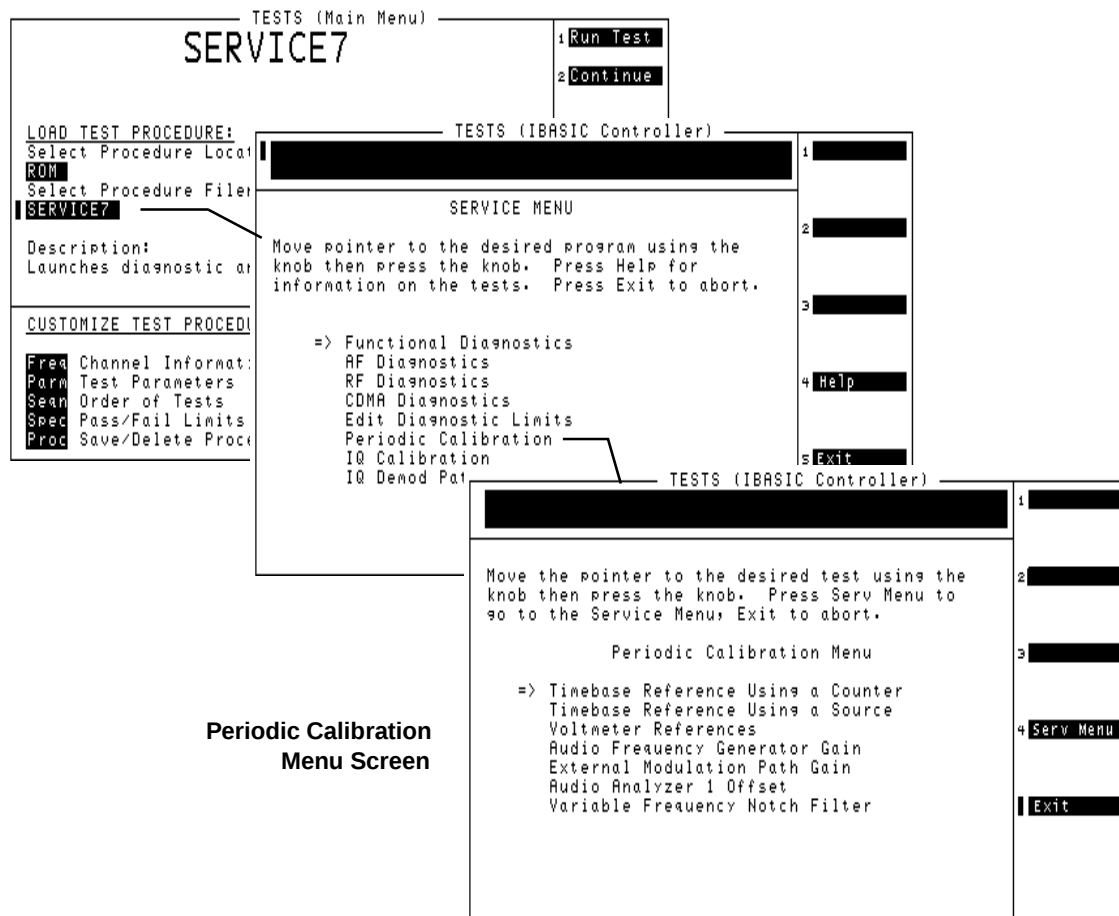Figure 5-3 Periodic Calibration



Timebase Reference Using a Counter

This program is used to manually tune the timebase reference using a frequency counter as the time standard. This procedure has two basic steps:

1. Coarse and fine manual adjustment of the two timebase tuning DACs.
2. Downloading the DAC settings into the Test Set.

If you have not already adjusted the two timebase tuning DACs, exit the program if needed (by selecting the **Adj** user key), and follow the instructions in ["Setting the Timebase Latches" on page 135](#).

If you have adjusted the timebase DACs, run this program and select the **Cal** user key to make the setting permanent.

As an alternate method, you can select the option **Timebase Reference Using a Source** (see following section) and adjust the timebase to a time standard connect to the front-panel ANTENNA IN connector.

Timebase Reference Using a Source

This program automatically tunes the timebase tuning DACs to the signal at the front-panel ANTENNA IN connector, which is input at the frequency that is keyed in from the front-panel keypad. If an external 10 MHz reference is being used, it must be disconnected.

In order for the calibration to be valid, the signal applied to the ANTENNA IN connector must have the following characteristics.

1. The level should be between -30 and $+20$ dBm (0.001 and 100 mW).
2. The frequency should be between 800 and 1000 MHz.
3. The frequency must be as accurate as the application of the Test Set requires.
4. The Test Set must be able to tune to within 10 or 100 kHz of the reference signal with the Test Set's current timebase reference settings. If this condition is not met, either the keyed-in frequency is incorrect or the Test Set is faulty.
5. The signal must be a CW signal. Specifically, any FM must be less than 100 Hz peak as measured by the Test Set.
6. The coarse tune DAC must be between 3 and 250 (decimal); otherwise, the frequency of the source is out of reach by the tuning DAC.


After the coarse and fine tune DAC settings have been determined, the values are downloaded into the Test Set's memory.

Voltmeter References

When you select the Voltmeter Reference calibration, instructions are displayed explaining how to measure the negative and positive references with an external voltmeter. The user is required to key in the readings. If the readings are within range, the two values are automatically downloaded.

For the Test Set to meet published specifications, the external DC voltmeter must be $\pm 0.015\%$ accurate when measuring ± 5 V. The voltmeter is connected to the test points on the Measurement board assembly, see [figure 5-4](#).

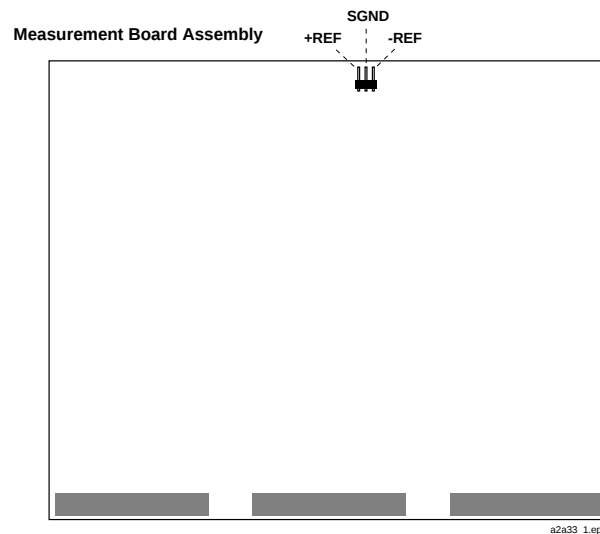Figure 5-4 Measurement Assembly Test Points



Audio Frequency Generator Gain

The gain of the following paths is calibrated:

- The internal paths that run from Audio Frequency Generators 1 and 2 (individually) through the Modulation Distribution assembly, to the monitor select output, then onto Audio Analyzer 1 to the DVM.
- The paths that run from Audio Frequency Generators 1 and 2 (individually) through the Modulation Distribution assembly to the AUDIO OUT connector, externally to the rear-panel MODULATION IN connector, then again through the Modulation Distribution assembly to the monitor select output and to the DVM.

The above-measured levels are used to adjust the output level of the audio generators so that they produce a calibrated level to the modulation inputs of the RF generator. These measurements are made at DC. Both positive and negative levels are measured to produce an optimum calibration factor.

External Modulation Path Gain

The **Audio Frequency Generator Gain** program should be performed before running the **External Modulation Path Gain** program.

The “path” in this program runs from the external MODULATION IN connector through the Modulation Distribution assembly, through the Monitor Select Switch, and then through Audio Analyzer 1 to the Test Set’s internal DVM. The dc source is Audio Frequency Generator 1 through the AUDIO IN connector and an external cable.

The goal of this procedure is to set the External Level Amplifier gain DAC (on the Modulation Distribution assembly) to produce a gain of exactly 4 between the MODULATION IN connector and output of the Monitor Select Switch. This requires measuring the input and output levels, calculating the gain, changing the DAC setting, and then repeating the process until the calculated gain equals 4.

Audio Analyzer 1 Offset

Two DC offsets are measured and downloaded as calibration factors to the Audio Analyzer 1 assembly. These measurements are determined under the following conditions:

- Input-select switch grounded
- AUDIO INPUT selected with return conductor grounded

Variable Frequency Notch Filter

The calibration factors for tuning the variable-frequency notch filter are determined as follows:

The input to the filter is set to 10 evenly-spaced frequencies between 300 and 10,000 Hz. The DAC that tunes the notch filter is adjusted for best null of the tune error voltage. From this data, three coefficients of a parabola which best fit the tuning data are calculated using a least-squares curve fit. The coefficients are then automatically downloaded into the Test Set’s non-volatile memory.


Setting the Timebase Latches

The **refs_DAC_coarse** and **ref_DAC_fine** values adjust the frequency of the Test Set's internal 10 MHz reference. They are stored in memory. The controller reads the values and sends the appropriate adjustment to the Reference assembly.

The following procedure is to be used when running the program "Timebase Reference Using a Counter" on page 132.

1. Press Config key to access the CONFIGURE screen, see Figure 5-5.
2. On the CONFIGURE screen, select **SERVICE**, the SERVICE screen appears.

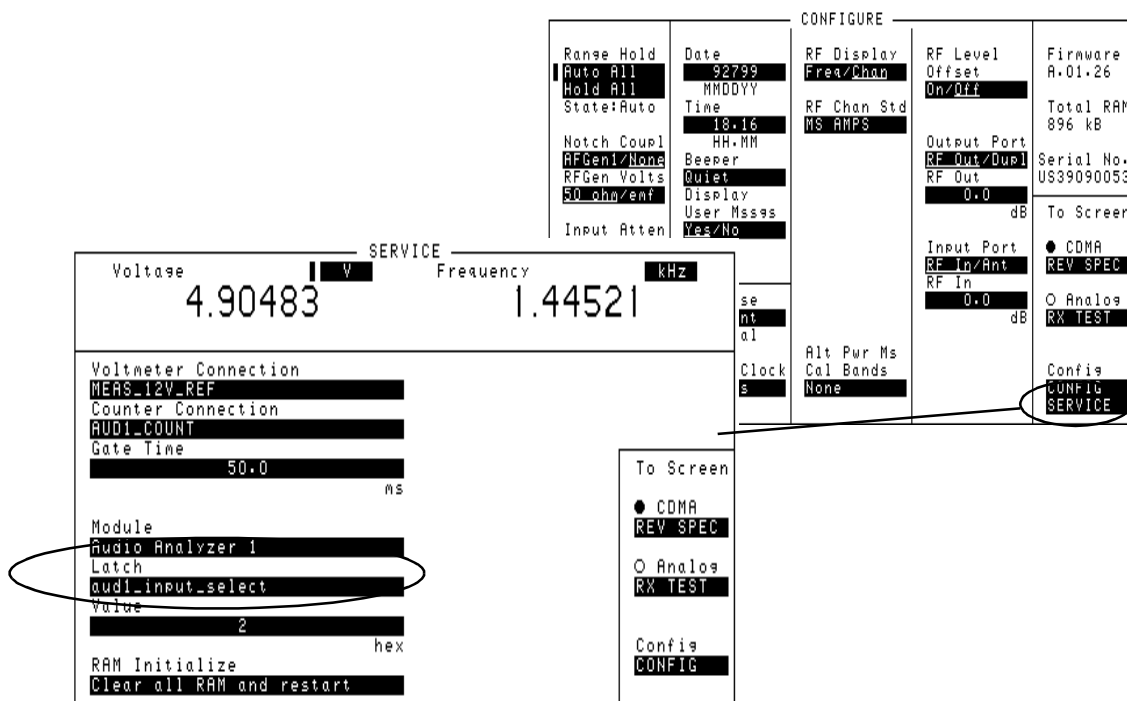Figure 5-5 SERVICE Screen



3. Connect a frequency counter to the rear-panel 10 MHz REF OUTPUT connector.
4. Select the **Latch** field.
5. Select **refs_DAC_coarse** under the **Choices:** menu.
6. Select the **Value** field.
7. Rotate the knob until the counter reads as close to 10 MHz as possible.
8. Select the **Latch** field.
9. Select **refs_DAC_fine** under the **Choices:** menu.

10. Select the **Value** field.
11. Rotate the knob until the counter reads as close to 10 MHz as possible.
12. Store the new DAC values (timebase calibration data) in non-volatile memory by selecting and running the **Timebase Reference Using a Counter** routine from the Periodic Calibration Menu. See ["Timebase Reference Using a Counter" on page 132](#).

IQ Calibration Program Description

The goal of IQ Calibration (see [Figure 5-6 on page 138](#)) is to minimize the carrier feedthrough while maximizing the Rho of the IQ signal. There are four DACs involved in this adjustment:

- buffModN_I_DC_offset_DAC,
- buffModN_Q_DC_offset_DAC,
- buffModN_signal_delta_DAC,
- genRef_IQ_quad_DAC

The I and Q dc offset DACs and the signal delta DAC are on the Data Buffer assembly and the Quad DAC is on the CDMA Generator Reference. These DACs can be accessed in the list of Latches on the SERVICE screen. All the DACs are initially set to 127 before starting the calibration adjustment, and the calibration is carried out at several equally spaced frequencies between 800 and 1000 MHz.

The instrument is set into a CDMA loopback mode and the calibration is carried out by first adjusting the I and Q dc offset DACs while monitoring the carrier feedthrough (CFT). Both CFT and rho are measured by the Receive DSP. Once the CFT is minimized (through an iterative process), the signal delta and the quad DACs are adjusted while monitoring rho. When rho is maximized (again through an iterative process), the calibration adjustment is complete. At power down, each DAC setting at each frequency is downloaded to the calibration ROM on the Controller assembly.

Figure 5-6 IQ Calibration

TESTS (Main Menu)

SERVICE7

LOAD TEST PROCEDURE:
 Select Procedure Location:
 ROM
 Select Procedure Filename: Library: Program:
 SERVICE7 CNO LIB ROM

Description:
 Launches diagnostic ar

CUSTOMIZE TEST PROCEDURE:
 Free Channel Information
 Param Test Parameters
 Setup Order of Tests
 Spec Pass/Fail Limits
 Proc Save/Delete Procedure

TESTS (IBASIC Controller)

SERVICE MENU

Move pointer to the desired program using the knob then press the knob. Press Help for information on the tests. Press Exit to abort.

=> Functional Diagnostics
 AF Diagnostics
 RF Diagnostics
 CDMA Diagnostics
 Edit Diagnostic Limits
 Periodic Calibration
 IQ Calibration
 IQ Demod Path Calibration


TESTS (IBASIC Controller)

Frequency (MHz)	Carrier Feedthru (dB)	Quadrature Spur (dB)
501.00	-60.4	-66.2
550.00	-66.2	-63.9
600.00	-61.1	-63.1
650.00	-63.2	-64.5
700.00	-57.8	-64.9
700.02	-61.5	-62.0
750.00	-67.9	-62.4
800.00	-63.1	-61.4
850.00	-57.0	-60.7
900.00	-65.9	-62.8
950.00	-60.1	-62.8
1000.00	-61.1	-64.0

Cal factors have been tested. Press Resume.

IQ Demod Path Calibration Program Description

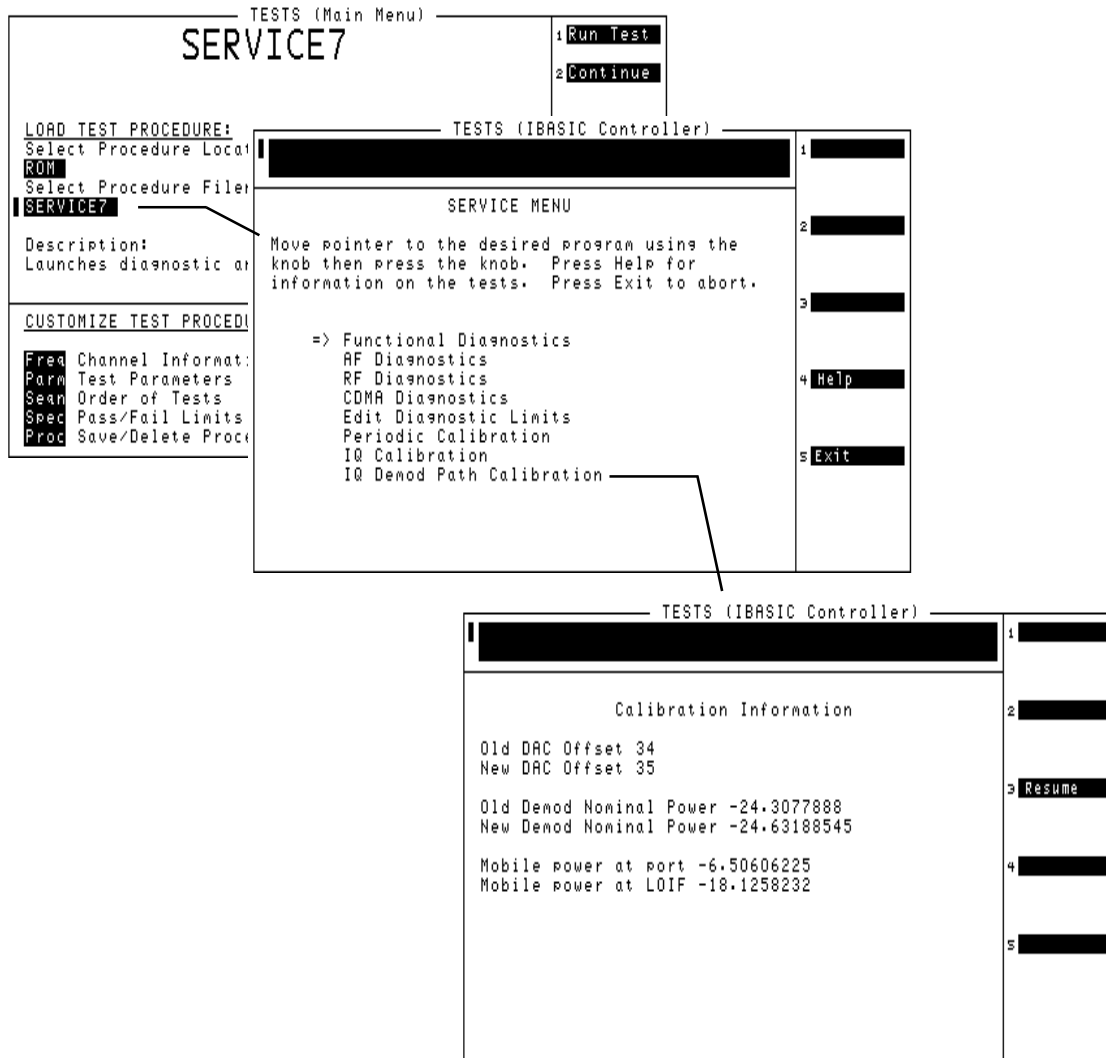Figure 5-7 IQ Modulation Path Calibration



6 Performance Tests

This chapter contains the performance test procedures for the Test Set. The tests in this chapter verify that the Test Set performs to its published specifications.

Procedure and Equipment

How to Use the Performance Tests

NOTE The recommended Test Set calibration interval is 24 months. This is accomplished by performing the performance tests or sending the Test Set to an Agilent Calibration Center or other qualified calibration lab.

- Run the Performance Tests in [table 6-2, "Performance Tests & Records Location" on page 144](#) using the specified Test Equipment from [table 6-1, "Required Test Equipment by Model" on page 143](#).
- Compare and record the data for each test onto the applicable Performance Test Record (PTR). [Table 6-2 on page 144](#) shows the page number of the PTR associated with each performance test.

Test Set Operation

To perform the following performance test procedures you need to know basic Test Set operation. You should be familiar with the front panel, the various display screens, and knob operation (cursor control). You should be able to operate the Test Set's RF generator, RF analyzer, AF generators, AF analyzer, spectrum analyzer (optional), and oscilloscope.

NOTE Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

NOTE Press **Preset** on the Test Set before beginning each test.

Test Equipment and Operation

The test equipment shown in [table 6-1, "Required Test Equipment by Model" on page 143](#) is needed to do all of the performance tests. Usually, a setup drawing at the beginning of each test procedure shows the equipment and hook-up needed for that particular test. Generic names are used for the test equipment shown in the setup drawings.

To find alternatives to the equipment listed in [table 6-1](#), look up their specifications in the *Agilent Technologies Test and Measurement Catalog* and use the specifications to find equivalent instruments.

The test procedures give critical instrument settings and connections, but they don't tell how to operate the instruments. Refer to each instrument's operating manual.

Table 6-1 Required Test Equipment by Model

Agilent Model Number	Model Name	Test Number
Mini-Circuits ZFL-2000 or equivalent ^a	Amplifier 1	5
GTC RF Products GRF 5016 or equivalent ^b	Amplifier 2	27, 28
3458A	Multimeter	8-9, 12, 15, 18
5316A	Counter	11, 16
8562A	Spectrum Analyzer	6-7
8663A	Signal Generator (High Performance)	4, 20-23, 28
8648B Option 1EA	Signal Generator	19
8902A	Measuring Receiver	1-5, 17, 19-22, 25, 27
8903B	Audio Analyzer	4, 10, 12, 16, 18, 20-22
11667A	Power Splitter	19, 27, 28
11722A	Sensor Module	5, 19, 25, 27
11793A	Microwave Converter	1-5
E4420B	Signal Generator	1-5, 24, 27
E6380-61811 ^c	System Power Calibration Program Software Kit	19
89441A with options AYA, AY9, UFG	Vector Signal Analyzer	26
EPM-438	Power Meter	25, 28
8482A	Power Sensor	25, 28

- a. Required amplifier specifications are frequency range 1.7 to 2.0 GHz, gain >18 dB, noise figure <5 dB. For more information about Mini-Circuits, contact them at (718) 934-4500 or <http://www.minicircuits.com>.
- b. Required amplifier specifications are frequency range 1.0 to 2.0 GHz, gain of 43 dB, output power of +20 dBm. For more information about GTC, contact them at (310) 673-8422 or GTC@primenet.com.
- c. To order the System Power Calibration Card see [“Ordering Replacement Parts and Support”](#) on page 85.

Table 6-2 Performance Tests & Records Location

Performance Tests (in this chapter)	Test Record in Chapter 7, “Performance Test Records.”
“RF Generator FM Distortion Performance Test 1” on page 146	page 202
“RF Generator FM Accuracy Performance Test 2” on page 149	page 204
“RF Generator FM Flatness Performance Test 3” on page 152	page 206
“RF Generator Residual FM Performance Test 4” on page 155	page 208
“RF Generator Level Accuracy Performance Test 5” on page 158	page 210
“RF Generator Harmonics Spectral Purity Performance Test 6” on page 163	page 218
“RF Generator Spurious Spectral Purity Performance Test 7” on page 165	page 221
“AF Generator AC Level Accuracy Performance Test 8” on page 167	page 223
“AF Generator DC Level Accuracy Performance Test 9” on page 168	page 225
“AF Generator Residual Distortion Performance Test 10” on page 169	page 226
“AF Generator Frequency Accuracy Performance Test 11” on page 170	page 228
“AF Analyzer AC Level Accuracy Performance Test 12” on page 171	page 229
“AF Analyzer Residual Noise Performance Test 13” on page 172	page 230
“AF Analyzer Distortion and SINAD Accuracy Performance Test 14” on page 173	page 231
“AF Analyzer DC Level Accuracy Performance Test 15” on page 174	page 232
“AF Analyzer Frequency Accuracy to 100 kHz Performance Test 16” on page 175	page 233
“AF Analyzer Frequency Accuracy at 400 kHz Performance Test 17” on page 176	page 234
“Oscilloscope Amplitude Accuracy Performance Test 18” on page 177	page 235
“RF Analyzer FM Accuracy Performance Test 20” on page 180	page 238
“RF Analyzer FM Distortion Performance Test 21” on page 182	page 239
“RF Analyzer FM Bandwidth Performance Test 22” on page 184	page 240
“RF Analyzer Residual FM Performance Test 23” on page 186	page 241
“Spectrum Analyzer Image Rejection Performance Test 24” on page 188	page 242
“CDMA Generator RF IN/OUT Amplitude Level Accuracy Performance Test 25” on page 190	page 243
“CDMA Generator DUPLEX OUT Amplitude Level Accuracy Performance Test 26” on page 192	page 244

Performance Tests (in this chapter)	Test Record in Chapter 7, “Performance Test Records.”
“CDMA Generator Modulation Accuracy Performance Test 27” on page 194	page 245
“CDMA Analyzer Average Power Level Accuracy Performance Test 28” on page 196	page 246
“CDMA Analyzer Channel Power Level Accuracy Performance Test 29” on page 198	page 247

RF Generator FM Distortion Performance Test 1

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-1, "RF Generator FM Distortion Test 1 Record" on page 202](#). The FM distortion of the RF generator is measured directly by the measuring receiver. The Test Set's internal audio generator provides the modulation source.

NOTE

Two setups are shown below. The first setup can measure signals to 1 GHz. Since the FM generator in the Test Set translates FM in the lower band directly into the 1.7 to 2 GHz range, testing to 1 GHz is adequate when verifying a repair. The second setup has a microwave converter which covers the full measurement range of FM signals to 2 GHz.

Initial Setup

Figure 6-1 Setup for Measurements to 1 GHz


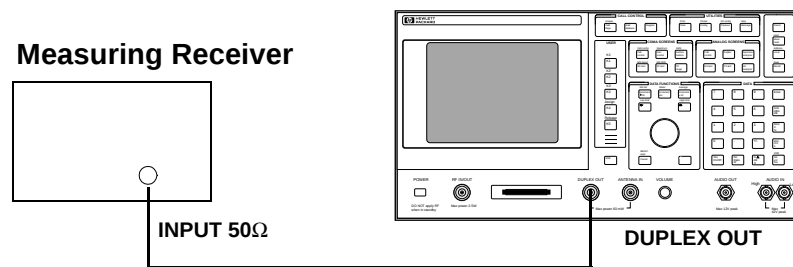


Figure 6-2 Setup for Measurements to 2 GHz Using a Microwave Converter

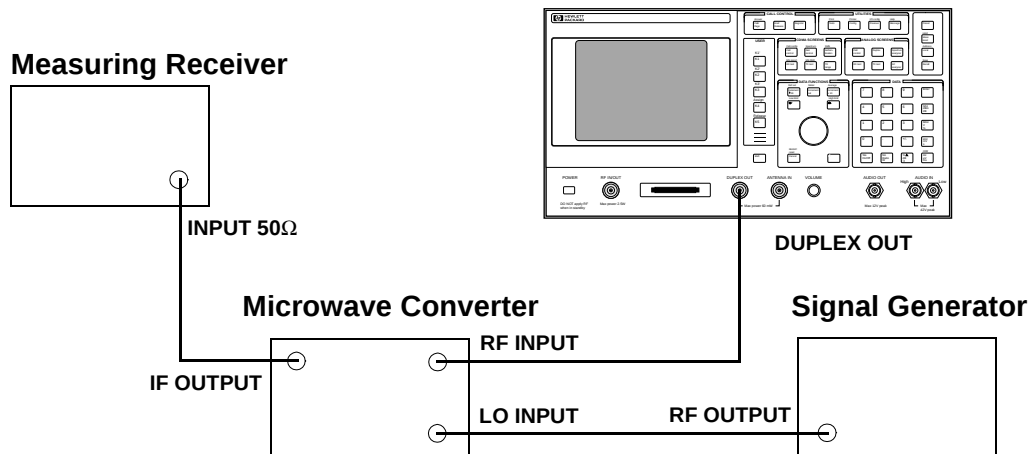

Procedure

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

Steps 1, 2, and 3 in the following procedure apply to both of the setups (shown in [figure 6-1](#) and [figure 6-2 on page 146](#)).

1. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the high-pass filter to 300 Hz.
 - c. Set the low-pass filter to 3 kHz.
 - d. Set the measurement mode to FM.
 - e. Set the measurement mode to audio distortion.
 - f. If the microwave converter is being used, set the frequency offset mode to exit the mode (27.0 Special).
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Set the **RF Offset** to **Off**.
 - e. Set the **Output Port** field to **Dup1**.
 - f. Select the RF GENERATOR screen.
 - g. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see **NOTE** above) from the Performance Test Record.
 - h. Set the **Amplitude** to **-10 dBm**.
 - i. Set the **AFGen1 To** field to **FM** at **99 kHz** deviation.
3. For frequencies up to 1000 MHz measure the FM distortion (audio distortion) at the RF frequencies and deviations shown in the Performance Test Record (PTR) and compare the measured distortion to the limits.

The following steps are for measurements to 2 GHz.

4. On the signal generator:
 - a. Set the frequency to 1500 MHz CW.
 - b. Set the level to +8 dBm or whatever level is suitable for the microwave converter's LO input.

5. On the measuring receiver:
 - a. Set the frequency offset mode to enter and enable the LO frequency (27.3 Special).
 - b. Key in the LO frequency (in MHz) which is 1500.
6. On the Test Set, for frequencies of 1700 and 2000 MHz, measure the FM distortion at the deviations shown in the PTR and compare the measured distortion to the limits.

RF Generator FM Accuracy Performance Test 2

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-2, "RF Generator FM Accuracy Test 2 Record" on page 204](#). The FM accuracy of the RF generator is measured directly by the measuring receiver. The Test Set's internal audio generator provides the modulation source.

NOTE

Two setups are shown below. The first setup can measure signals to 1 GHz. Since the FM generator in the Test Set translates FM in the lower band directly into the 1.7 to 2 GHz range, testing to 1 GHz is adequate when verifying a repair. The second setup has a microwave converter which covers the full measurement range of FM signals to 2 GHz.

Initial Setup

Figure 6-3 Setup for Measurements to 1 GHz


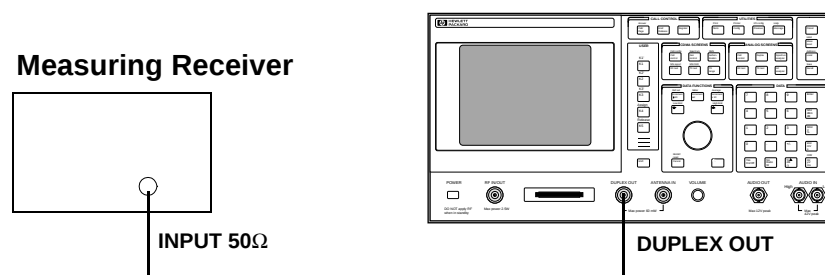


Figure 6-4 Setup for Measurements to 2 GHz Using a Microwave Converter

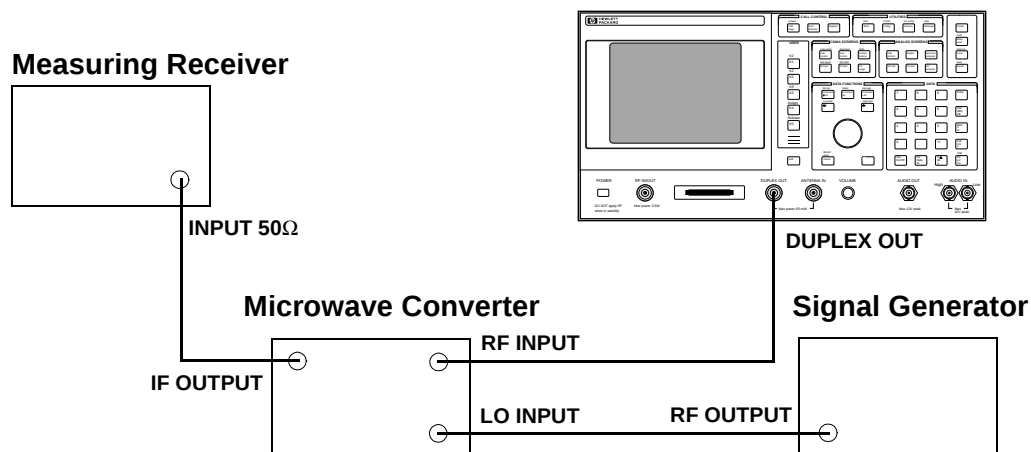

Procedure

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Steps 1, 2, and 3 in the following procedure apply to both of the setups (shown in [figure 6-3](#) and [figure 6-4 on page 149](#)).

1. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the high-pass filter to 300 Hz.
 - c. Set the low-pass filter to 3 kHz.
 - d. Set the measurement mode to FM.
 - e. Set the FM de-emphasis off.
 - f. If the microwave converter is being used, set the frequency offset mode to exit the mode (27.0 Special).
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Set the **RF Offset** to **Off**.
 - e. Set the **Output Port** field to **Dupl**.
 - f. Select the **RF GENERATOR** screen.
 - g. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see NOTE above) from the Performance Test Record.
 - h. Set the **Amplitude** to **-10 dBm**.
 - i. Set the **AFGen1 To** field to **FM** at **99 kHz** deviation.
3. For frequencies up to 1000 MHz measure the FM deviation at the RF frequencies and deviations shown in the Performance Test Record (PTR) and compare the measured deviation to the limits.

The following steps are for measurements to 2 GHz.
4. On the signal generator:
 - a. Set the frequency to 1500 MHz CW.
 - b. Set the level to +8 dBm or whatever level is suitable for the microwave converter's LO input.

5. On the measuring receiver:
 - a. Set the frequency offset mode to enter and enable the LO frequency (27.3 Special).
 - b. Key in the LO frequency (in MHz) which is 1500.
6. On the Test Set, for frequencies of 1700 and 2000 MHz, measure the FM at the deviations shown in the PTR and compare the measured deviation to the limits.

RF Generator FM Flatness Performance Test 3

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-3, "RF Generator FM Flatness Test 3 Record" on page 206](#). The FM flatness of the RF generator is measured directly by the measuring receiver. The Test Set's internal audio generator provides the modulation source.

NOTE

Two setups are shown below. The first setup can measure signals to 1 GHz. Since the FM generator in the Test Set translates FM in the lower band directly into the 1.7 to 2 GHz range, testing to 1 GHz is adequate when verifying a repair. The second setup has a microwave converter which covers the full measurement range of FM signals to 2 GHz.

Initial Setup

Figure 6-5 Setup for Measurements to 1 GHz


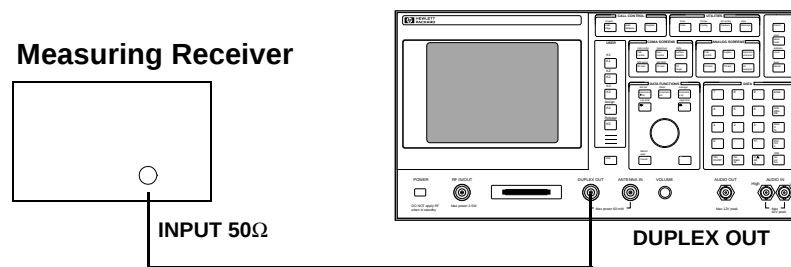


Figure 6-6 Setup for Measurements to 2 GHz Using a Microwave Converter

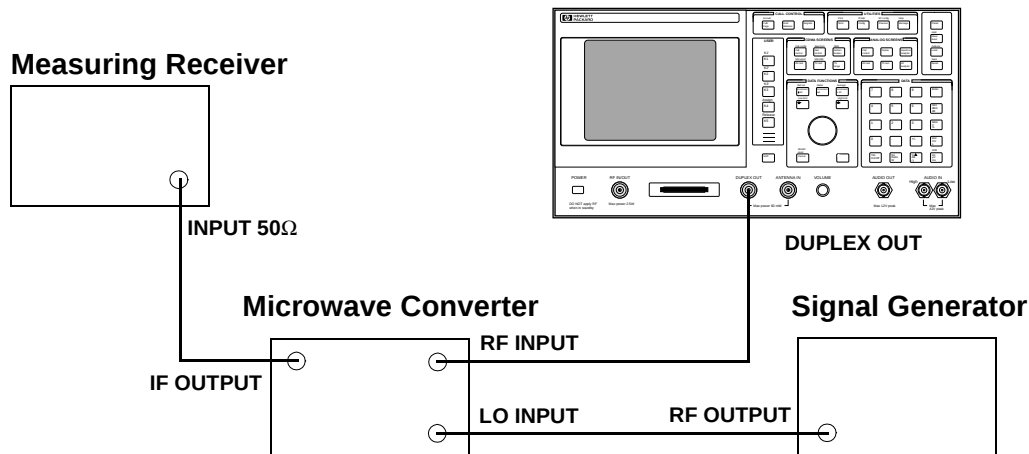

Procedure

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Steps 1, 2, and 3 in the following procedure apply to both of the setups (shown in figure 6-5 and figure 6-6 on page 152).

1. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the measurement mode to FM.
 - c. If the microwave converter is being used, set the frequency offset mode to exit the mode (27.0 Special).
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq.**
 - d. Set the **RF Offset** to **Off**.
 - e. Set the **Output Port** field to **Dupl**.
 - f. Select the RF GENERATOR screen.
 - g. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see **NOTE** above) from the Performance Test Record.
 - h. Set the **Amplitude** to **-10 dBm**.
 - i. Set the **AFGen1 To** field to **FM at 50 kHz** deviation.
3. For frequencies up to 1000 MHz measure the FM deviation at the RF frequencies and rates shown in the Performance Test Record (PTR). Convert the measurement results to dB referenced to the deviation measured at 1 kHz using the following formula and compare the calculated deviation to the limits in the PTR.

$$dB = 20 \bullet \log\left(\frac{\text{Deviation}}{\text{Deviation at 1 kHz}}\right)$$

The following steps are for measurements to 2 GHz.

4. On the signal generator:
 - a. Set the frequency to 1500 MHz CW.
 - b. Set the level to +8 dBm or whatever level is suitable for the microwave converter's LO input.

5. On the measuring receiver:
 - a. Set the frequency offset mode to enter and enable the LO frequency (27.3 Special).
 - b. Key in the LO frequency (in MHz) which is 1500.
6. On the Test Set, for frequencies of 1700 and 2000 MHz, measure the FM deviation at the rates shown in the PTR. Convert the measurement results as was done in step 3 and compare the calculated deviation to the limits.

RF Generator Residual FM Performance Test 4

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-4, "RF Generator Residual FM Test 4 Record" on page 208](#). The residual FM of the RF generator is measured directly by the measuring receiver. An external LO is used to improve the residual FM of the measuring receiver. An audio analyzer with a CCITT psophometric filter is required to measure the demodulated FM.

NOTE Two setups are shown, see [figure 6-7](#) and [figure 6-8 on page 156](#). The first setup is capable of measuring signals to 1 GHz. The second setup has a microwave converter which covers the full measurement range of FM signals to 2 GHz. The microwave converter's LO must be a low residual FM synthesizer.

Initial Setup

Figure 6-7 Setup for Measurements to 1 GHz


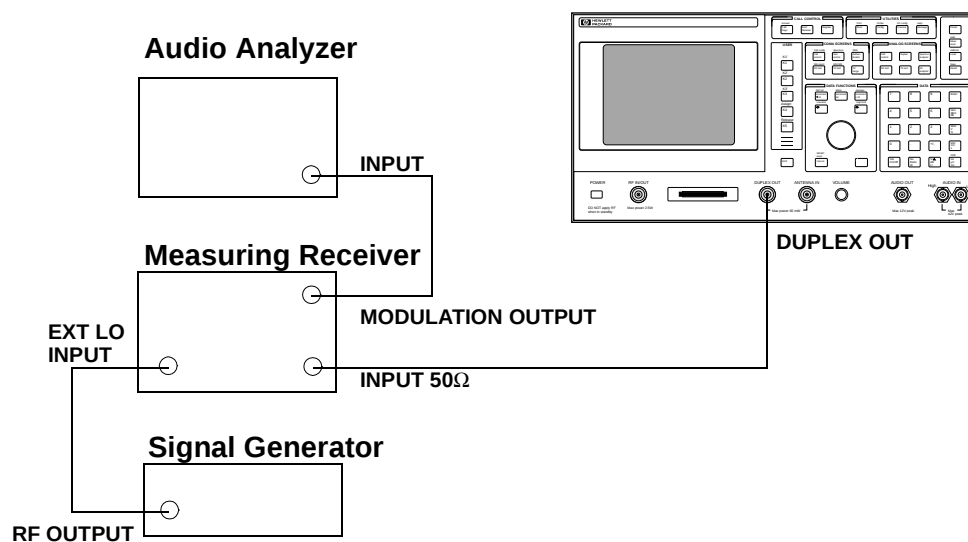


Figure 6-8 Setup for Measurements to 2 GHz Using a Microwave Converter

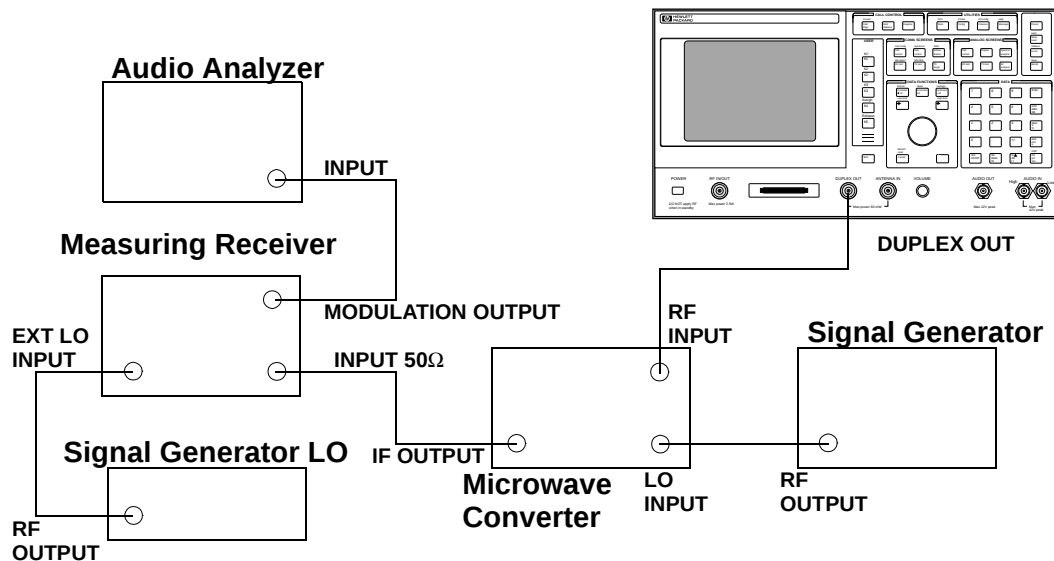

Procedure

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Steps 1 to 5 in the following procedure apply to both setups (shown in [figure 6-7](#) and [figure 6-8 on page 156](#)).

1. On the signal generator (to be used as the measuring receiver's LO):
 - a. Set the frequency to 11.5 MHz.
 - b. Set the level to 0 dBm.
2. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the IF to 1.5 MHz (3.2 Special).
 - c. Set the high-pass filter to 50 Hz.
 - d. Set the low-pass filter to 15 kHz.
 - e. Set the measurement mode to FM.
 - f. If the instrument has an external LO switch, enable the external LO mode (23.1 Special).
 - g. If the microwave converter is being used, set the frequency offset mode to exit the mode (27.0 Special).
3. On the audio analyzer:
 - a. Reset the instrument.

- b. Set the measurement mode to AC level.
 - c. Select the CCITT Weighting filter.
 - d. Set the low-pass filter to 30 kHz.
4. On the Test Set:
 - a. Press **Preset**.
 - b. Select the CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Set **RF Offset** to **off**.
 - e. Set **RF Output** to **Dupl**.
 - f. Select the RF GENERATOR screen.
 - g. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see **NOTE** above) from the Performance Test Record.
 - h. Set the **Amplitude** to **-10 dBm**.
5. For frequencies up to 1000 MHz and for each line in the Performance Test Record (PTR) do the following:
 - a. Set the signal generator (used as an LO for the measuring receiver) to the LO frequency shown in the PTR.
 - b. Set the Test Set to the RF frequencies shown in the PTR.
 - c. Measure the ac level (in mV) on the audio analyzer.
 - d. Multiply the measured ac levels by 1000 to convert them to FM deviation in Hz and compare the computed results to the limits shown in the PTR.

The following steps are for measurements to 2 GHz.
6. On the signal generator:
 - a. Set the frequency to 1500 MHz CW for 1700 MHz, 1800 MHz CW for 2000 MHz.
 - b. Set the level to +8 dBm or whatever level is suitable for the microwave converter's LO input.
7. On the measuring receiver:
 - a. Set the frequency offset mode to enter and enable the LO frequency (27.3 Special).
 - b. Key in the LO frequency (in MHz) which is 1500 MHz.
8. On the Test Set, for frequencies of 1700 and 2000 MHz, continue on as in step 5.


RF Generator Level Accuracy Performance Test 5

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-5, "RF Generator Level Accuracy Test 5 Record" on page 210](#). Using a measuring receiver and sensor module, at several frequencies up to 1 GHz the Test Set is set to generate levels between -10 and 125 dBm (in 5 dB steps) at its DUPLEX OUT connector. The level is measured with the tuned RF level function of the measuring receiver. At each frequency the measuring receiver connection is moved to the RF IN/OUT and the level measured from -40 to -125 dBm. As the test proceeds you may be required to recalibrate the measuring receiver.

To extend the measurement frequency to 2 GHz the second method uses a microwave converter and amplifier to extend the measurement range (see [figure 6-10 on page 160](#)).

Setup 1

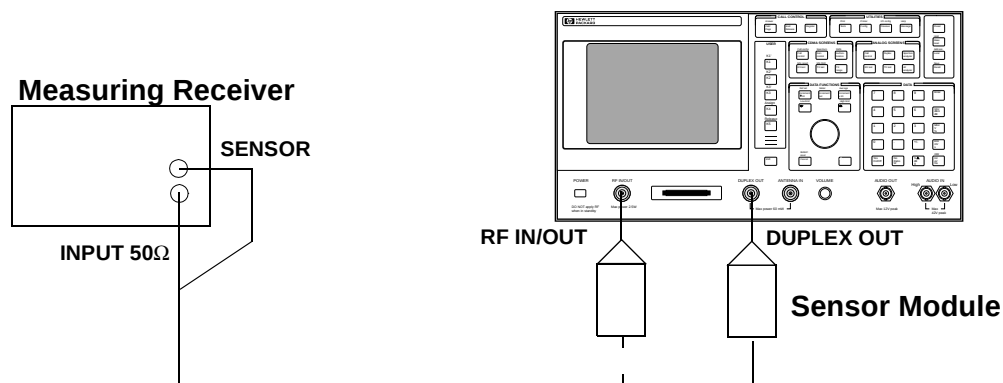Figure 6-9 Setup 1 for Measurements to 1 GHz



Procedure 1

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

Steps 1 to 5 in the following procedure apply to Setup 1 shown in [figure 6-9 on page 158](#).

1. Before connecting the Test Set to the measuring receiver:
 - a. Reset the instrument.
 - b. Zero and calibrate the sensor module.


NOTE

Make sure the sensor module's calibration data is entered into the measuring receiver.

2. Connect the equipment as shown in Setup 1 whether intending to measure frequencies to 1 GHz or 2 GHz.
3. On the measuring receiver:
 - a. Set the measurement mode to RF Power.
 - b. Set the display to log.
4. On the Test Set:
 - a. Press **Preset**.
 - b. Select the CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq.**
 - d. Set the **RF Offset** to **Off**.
 - e. Set the **Output Port** field to **Dupl.**
 - f. Select the RF GENERATOR screen.
 - g. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see **NOTE** above) from the Performance Test Record.
 - h. Set the **Amplitude** to **-11 dBm**.
5. For each frequency in the Performance Test Record (PTR) do the following:
 - a. Set the measuring receiver to measure frequency.
 - b. Set the Test Set level to -15 dBm.
 - c. After the measuring receiver has acquired the signal, set the measuring receiver to measure tuned RF level.
 - d. Measure the RF level at the levels shown in the PTR at the Test Set's **DUPLEX OUT** port and compare the measured RF level to the limits. If the measuring receiver displays the need to recalibrate, press the CALIBRATE key and wait for calibration to be completed.
 - e. Move the sensor module to the Test Set's **RF IN/OUT** port.
 - f. On the Test Set set the **Output Port** field to **RF Out** and repeat the measurements for the levels shown in the PTR and compare the measured RF level to the limits.
 - g. Move the sensor module back to the Test Set's **DUPLEX OUT** port and set the **Output Port** to **Dupl.**

Setup 2

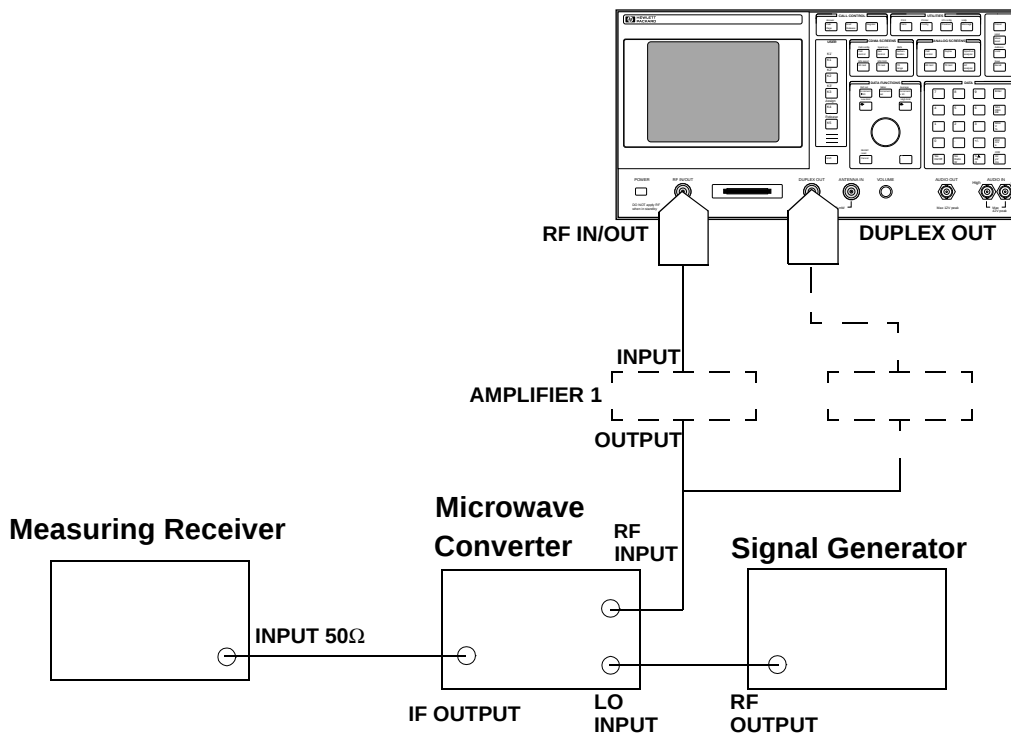Figure 6-10 Setup 2 for Measurements of 1700 and 2000 MHz



Procedure 2

Steps 1 to 5 in the following procedure apply to Setup 2 shown in [figure 6-10](#) on page 160.

1. Make the connections as shown on Setup 2.
2. On the Test Set:
 - a. Set the **Amplitude** to **-11 dBm**.
 - b. Set the **RF Gen Freq** to **1700 MHz**.
3. On the measuring receiver:
 - a. Set the measurement mode to RF power.
 - b. Key in 1700 MHz.
 - c. Measure and record the RF power at the **DUPLEX OUT** port.
4. On the Test Set set the **RF Gen Freq** to **2000 MHz**.
5. On the measuring receiver:
 - a. Key in 2000 MHz.
 - b. Measure and record the RF power at the **DUPLEX OUT** port.

RF Generator Level Accuracy Performance Test 5

6. On the signal generator set the level to +8 dBm or whatever level is suitable for the microwave converter's LO input.
7. For frequencies of 1700 and 2000 MHz perform the following:
 - a. On the signal generator set the frequency to 1900 MHz CW and 2200 MHz CW respectively.
 - b. Reset the measuring receiver.
 - c. On the measuring receiver set the frequency offset mode to enter and enable the LO frequency (27.3 Special) then key in the signal generator (LO) frequency (in MHz) which is 1900 or 2200 MHz respectively.
 - d. On the measuring receiver set the measurement mode to tuned RF level and the measurement units to dBm then press SET REF.
 - e. Measure and record the RF level at the levels down to and including -83 dBm shown in the PTR at the Test Set's **DUPLEX OUT** port. If the measuring receiver displays the need to recalibrate, press the CALIBRATE key and wait for calibration to be completed.
 - f. After recording the reading at -83 dBm insert an RF amplifier into the output of the Test Set.
 - g. Record the new measured level at -83 dBm.
 - h. Continue measuring the level down to -116 dBm.
 - i. Move the input to the **RF IN/OUT** port without the amplifier inserted.
 - j. Measure and record the RF level at the levels down to and including -83 dBm shown in the PTR at the Test Set's **RF IN/OUT** port.
 - k. After recording the reading at -83 dBm insert an RF amplifier into the output of the Test Set.
 - l. Record the new measured level at -83 dBm.
 - m. Continue measuring the level down to -116 dBm.
 - n. Correct the measured reading for each level measured without the amplifier as follows: Add the RF power measured in step 3c or 5b to the measured level. (For example, if the level in step 3c is -10.2 dBm and the level at -55 dBm is -45.1 dB, record a level of $-10.2 + (-45.1) = 55.3$ dBm.) Compare the corrected values with the limits in the PTR.
 - o. Correct the measured reading for each level measured with the amplifier by summing the following values:
 - + RF power measured at -11 dBm in step 3c or 5b
 - + RF level measured at -83 dBm in step 7i
 - RF level measured at -83 dBm in step 7j
 - + RF level measured in step 7k

For example, if:

RF power measured at -11 dBm in step 3b or 5b = -10.2 dBm

RF level measured at -83 dBm in step 7i = -70.1 dB

RF level measured at -83 dBm in step 7j = -52.6 dB

RF level measured at -101 dBm in step 7k = -73.2 dB


the corrected level at -101 dBm is $-10.2 + (-70.1) - (-52.6) + (-73.2) = 100.9$ dBm. Compare the corrected values with the limits in the PTR.

RF Generator Harmonics Spectral Purity Performance Test 6

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-6, "RF Generator Harmonics Spectral Purity Test 6 Record" on page 218](#). Harmonic signals with the carrier set to several frequencies and two different levels (maximum output and minimum level vernier) are searched for by an RF spectrum analyzer.

Setup

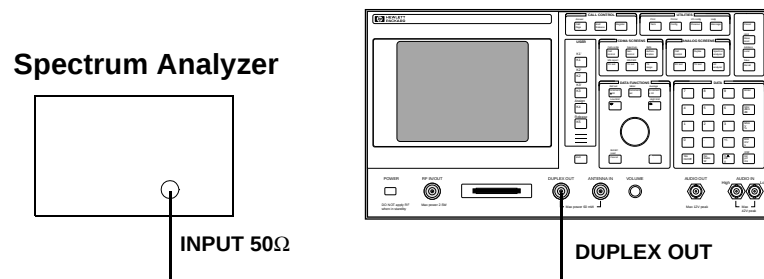Figure 6-11



Procedure

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

1. Set up the spectrum analyzer in accordance with its operating manual.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq.**
 - d. Set the **RF Offset** to **Off.**
 - e. Set the **Output Port** field to **Dupl.**
 - f. Select the **RF GENERATOR** screen.
 - g. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see **NOTE** above) from the Performance Test Record.
 - h. Set the **Amplitude** to **-10 dBm**.


3. Set the Test Set's RF generator to the frequencies and levels shown in the Performance Test Record (PTR) and measure the second and third harmonics. For each measurement convert the harmonic level to dB below the fundamental (dBc) and compare the computed levels to the limits.

RF Generator Spurious Spectral Purity Performance Test 7

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-7, "RF Generator Spurious Spectral Purity Test 7 Record" on page 221](#). Spurious signals with the carrier set to several frequencies and two different levels (maximum output and minimum level vernier) are searched for by an RF spectrum analyzer.

Setup

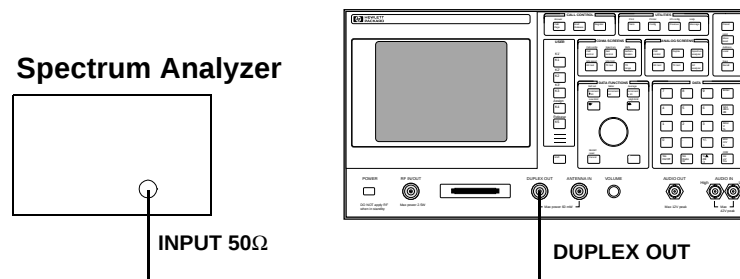Figure 6-12



Procedure

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

1. Set up the spectrum analyzer in accordance with its operating manual.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq.**
 - d. Set the **RF Offset** to **Off.**
 - e. Set the **Output Port** field to **Dupl.**
 - f. Select the **RF GENERATOR** screen.
 - g. Set the **Amplitude** to **-10 dBm**.
 - h. Set the **RF Gen Freq** field to the appropriate RF frequency (based on the firmware revision; see **NOTE** above) from the Performance Test Record.


3. Set the Test Set's RF generator to the frequencies shown in the Performance Test Record (PTR) and measure the level of the spurious signals at the frequencies shown. For each measurement convert the harmonic level to dB below the fundamental (dBc) and compare the computed levels to the limits.

AF Generator AC Level Accuracy Performance Test 8

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-8, "AF Generator AC Level Accuracy Test 8 Record" on page 223](#). There are two audio generators. AC level accuracy is measured directly with a digital multimeter.

Setup

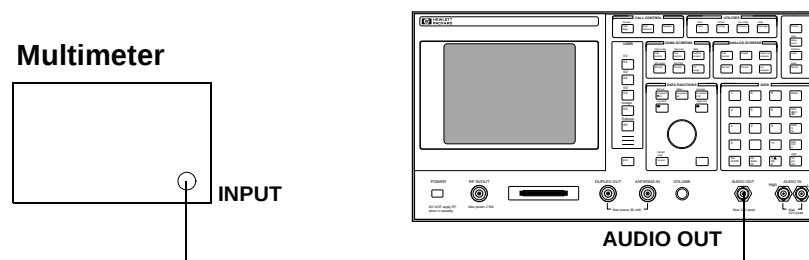Figure 6-13



Procedure


1. Set the multimeter to measure AC volts.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **RF GENERATOR** screen.
 - c. Set the **AFGen1 To** and **AFGen2 To** fields to **Audio Out**.
3. On the Test Set for Audio Frequency Generator 1 do the following:
 - a. Set the **AFGen2 To** level field to **Off**.
 - b. Set the audio frequency and level as shown in the Performance Test Record (PTR) and measure the AC level. Compare the measured voltage to the limits.
4. On the Test Set for Audio Frequency Generator 2 do the following:
 - a. Set the **AFGen1 To** level field to **Off** and **AFGen2 To** level field to **On**.
 - b. Set the audio frequency and level as shown in the PTR and measure the AC level. Compare the measured voltage to the limits.

AF Generator DC Level Accuracy Performance Test 9

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-9, "AF Generator DC Level Accuracy Test 9 Record" on page 225](#). There are two DC generators. DC level accuracy is measured directly with a digital multimeter.

Setup

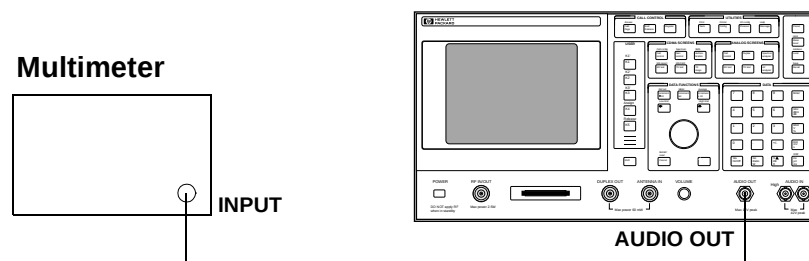Figure 6-14



Procedure


1. Set the multimeter to measure DC volts.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **RF GENERATOR** screen.
 - c. Set the **AFGen1 To** and **AFGen2 To** fields to **Audio Out**.
 - d. Set the **AFGen1 Freq** and **AFGen2 Freq** fields to **0.0 Hz**.
 - e. Set the **Audio Out** field to **DC**.
3. On the Test Set for Audio Frequency Generator 1 do the following:
 - a. Set the **AFGen2 To** level field to **Off**.
 - b. Set the audio frequency and level as shown in the Performance Test Record (PTR) and measure the DC level. Compare the measured voltage to the limits.
4. On the Test Set for Audio Frequency Generator 2 do the following:
 - a. Set the **AFGen1 To** level field to **Off** and **AFGen2 To** level field to **on**.
 - b. Set the audio frequency and level as shown in the PTR and measure the DC level. Compare the measured voltage to the limits.

AF Generator Residual Distortion Performance Test 10

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-10, "AF Generator Residual Distortion Test 10 Record" on page 226](#). Audio distortion is measured directly with an audio analyzer.

Setup

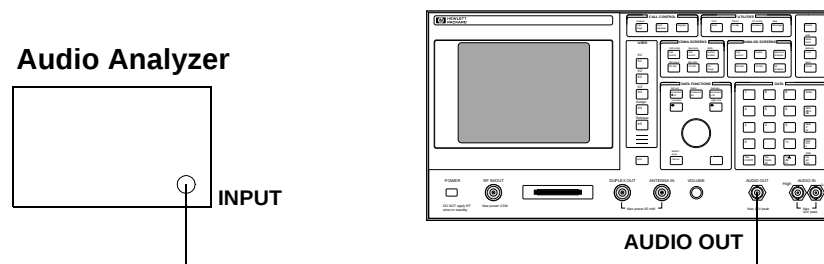Figure 6-15



Procedure


1. On the audio analyzer:
 - a. Reset the instrument.
 - b. Select the 80 kHz low-pass filter.
 - c. Set the measurement mode to distortion.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the RF GENERATOR screen.
 - c. Set the **AFGen1 To** and **AFGen2 To** fields to **Audio Out**.
3. On the Test Set for Audio Frequency Generator 1 do the following:
 - a. Set the **AFGen2 To** level field to **Off**.
 - b. Set the audio frequency and level as shown in the Performance Test Record (PTR) and measure the audio distortion. Compare the measured distortion to the limits.
4. On the Test Set for Audio Frequency Generator 2 do the following:
 - a. Set the **AFGen1 To** level field to **Off** and **AFGen2 To** level field to on.
 - b. Set the audio frequency and level as shown in the PTR and measure the audio distortion. Compare the measured distortion to the limits.

AF Generator Frequency Accuracy Performance Test 11

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-11, "AF Generator Frequency Accuracy Test 11 Record" on page 228](#). Frequency accuracy is measured directly with a frequency counter. The counter must be able to resolve 0.005% at 20 Hz.

Setup

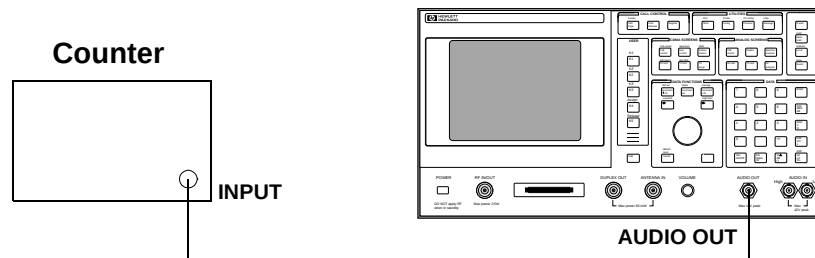Figure 6-16



Procedure


1. Set the counter to measure frequency.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the RF GENERATOR screen.
 - c. Set the **AFGen1 To** and **AFGen2 To** fields to **Audio Out**.
3. On the Test Set for Audio Frequency Generator 1 do the following:
 - a. Set the **AFGen2 To** level field to **Off**.
 - b. Set the audio frequency and level as shown in the Performance Test Record (PTR) and measure the audio frequency. Compare the measured frequency to the limits.
4. On the Test Set for Audio Frequency Generator 2 do the following:
 - a. Set the **AFGen1 To** level field to **Off** and **AFGen2 To** level field to on.
 - b. Set the audio frequency and level as shown in the PTR and measure the audio frequency. Compare the measured frequency to the limits.

AF Analyzer AC Level Accuracy Performance Test 12

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-12, "AF Analyzer AC Voltage Accuracy Test 12 Record" on page 229](#). To measure AC voltage accuracy, an AC signal is measured by an external multimeter and compared to the Test Set's internal AC voltmeter reading.

Setup

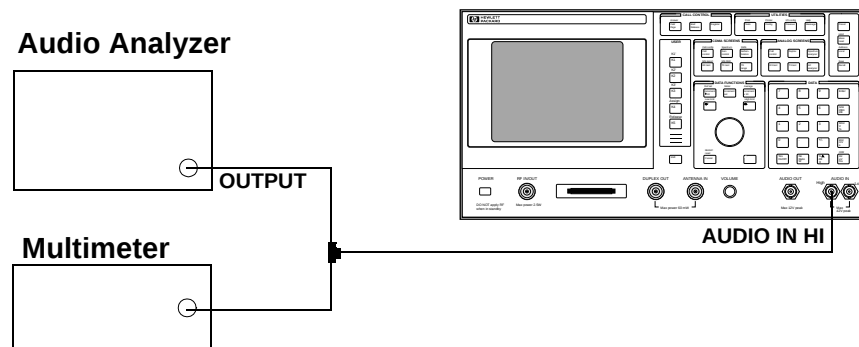Figure 6-17



Procedure


1. Set the digital multimeter to measure AC volts.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **AF ANALYZER** screen.
 - c. Set the **AF Anl In** field to **Audio In**.
 - d. Set the **Filter 1** field to **<20 Hz HPF**.
 - e. Set the **Filter 2** field to **>99kHz LPF**.
 - f. Set the **De-Emphasis** field to **Off**.
 - g. Set the **Detector** field to **RMS**.
 - h. Set the **Settling** field to **Slow**.
3. Set the audio analyzer's source to the frequencies and levels shown in the Performance Test Record. (Adjust the level until the digital multimeter reads the correct level.)
4. Measure the AC level on the Test Set and compare the measured level to the limits.

AF Analyzer Residual Noise Performance Test 13

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-13, "AF Analyzer Residual Noise Test 13 Record" on page 230](#). The AC level of the audio input is measured with no signal source connected.

Setup

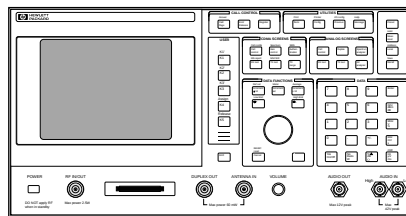Figure 6-18



Procedure


1. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **AF ANALYZER** screen.
 - c. Set the **AF An1 In** field to **Audio In**.
 - d. Set the **Filter 1** field to **<20 Hz HPF**.
 - e. Set the **Filter 2** field to **15kHz LPF**.
 - f. Set **De-Emphasis** field to **Off**.
 - g. Set the **Detector** field to **RMS**.
 - h. Set the **Audio In Lo** field to **600 To Hi**.
2. Measure the AC level (residual noise) on the Test Set and compare the measured level to the limits shown in the Performance Test Record.
3. Set the **Filter 2** field to **>99kHz LP**.
4. Measure the AC level (residual noise) on the Test Set and compare the measured level to the limits shown in the Performance Test Record.

AF Analyzer Distortion and SINAD Accuracy Performance Test 14

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-14, "AF Analyzer Distortion and SINAD Accuracy Test 14 Record" on page 231](#). A calibrated distortion source is created by summing the two internal audio generators. Levels are measured separately by the internal AC voltmeter. One source is set to a harmonic two or three times the frequency of the other. The measured distortion and SINAD is compared with the calculated value.

Setup

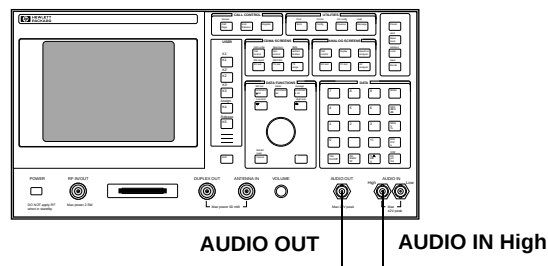Figure 6-19



Procedure


1. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **RF GENERATOR** screen.
 - c. Set the **AFGen1 To** and **AFGen2 To** fields to **Audio Out**.
 - d. Set the **AFGen1 To** level field to **1.00 V** and **AFGen1 Freq** field to **1 kHz**.
 - e. Set the **AFGen2 To** level field to **100 mv** and **AFGen2 Freq** field to **2 kHz**.
2. For the frequency (the harmonic) and level settings of Audio Frequency Generator 2 shown in the Performance Test Record, measure the distortion and SINAD on the Test Set and compare the measured values to the limits.

AF Analyzer DC Level Accuracy Performance Test 15

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-15, "AF Analyzer DC Level Accuracy Test 15 Record" on page 232](#). To measure DC level accuracy, a DC signal is measured by an external digital multimeter and compared to the Test Set's internal DC voltmeter reading.

Setup

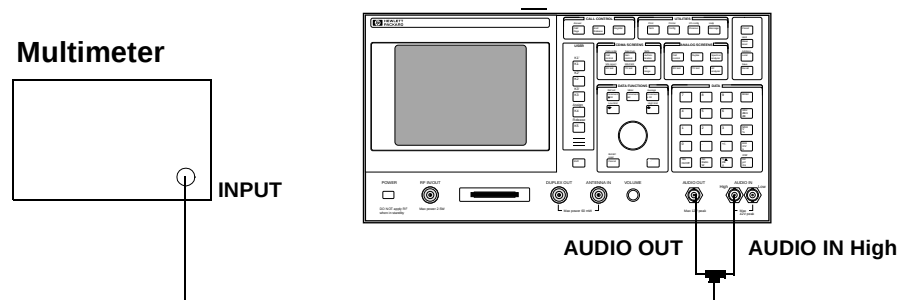Figure 6-20



Procedure


1. Set the multimeter to measure DC volts.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **AF ANALYZER** screen.
 - c. Set the **AF An1 In** field to **Audio In**.
 - d. Set the lower-right measurement to **DC level**.
 - e. Select the **RF GENERATOR** screen.
 - f. Set the **AFGen1 To** field to **Audio Out**.
 - g. Set the **AFGen1 Freq** field to **0.0 Hz**.
 - h. Set the **Audio Out** field to **DC**.
 - i. Set the level of Audio Frequency Generator 1 as shown in the Performance Test Record and measure the DC level. Compare the measured voltage to the limits.

AF Analyzer Frequency Accuracy to 100 kHz Performance Test 16

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-16, "AF Analyzer Frequency Accuracy to 100 kHz Test 16 Record" on page 233](#). To measure frequency accuracy up to 100 kHz, an AC signal at the audio input is measured by an external frequency counter and compared to the Test Set's internal audio frequency counter.

Setup

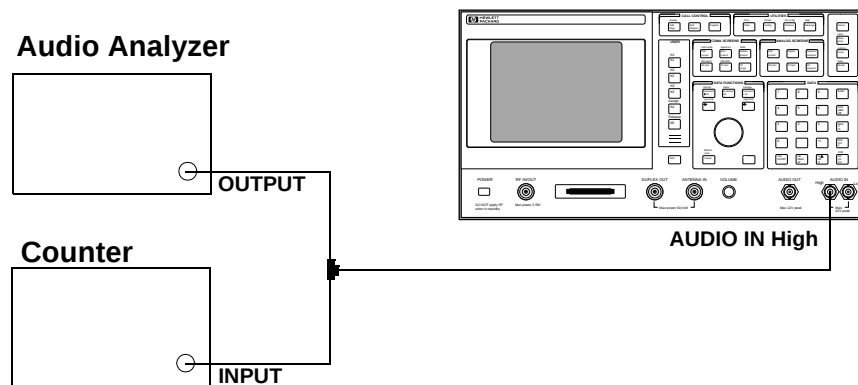Figure 6-21



Procedure


1. Set the frequency counter to measure frequency.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **AF ANALYZER** screen.
 - c. Set the **AF Anl In** field to **Audio In**.
 - d. Set the **Filter 1** field to **<20 Hz HPF**.
 - e. Set the **Filter 2** field to **>99kHz LPF**.
 - f. Set the lower-right measurement display to **AF Freq**.
3. Set the audio analyzer's source to 1 V and set the frequencies as shown in the Performance Test Record. Measure the frequency on the Test Set and compare the measured frequency to the limits.

AF Analyzer Frequency Accuracy at 400 kHz Performance Test 17

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-17, "AF Analyzer Frequency Accuracy at 400 kHz Test 17 Record" on page 234](#). To measure frequency accuracy at 400 kHz, the RF signal from the Test Set's DUPLEX OUT port is applied to the audio input and the input to the measuring receiver and the two measured frequencies are compared.

Setup

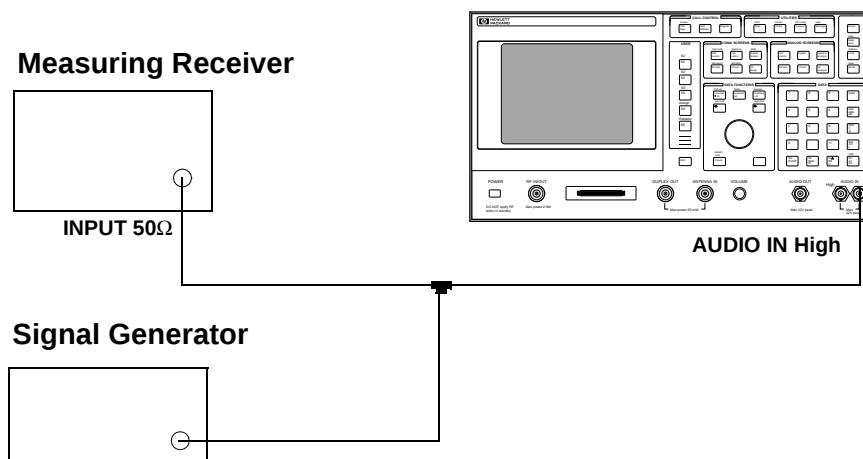Figure 6-22



Procedure


1. On the signal generator:
 - a. Set amplitude to 0 dBm.
 - b. Set the frequency to 400 kHz.
2. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the measurement mode to frequency.
3. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **AF ANALYZER** screen.
 - c. Set the **AF An1 In** field to **Audio In**.
 - d. Set the **Filter 2** field to **>99kHz LPF**.
4. Measure the audio frequency on the measuring receiver and the Test Set and note the frequency difference. Compare the calculated difference to the limits shown in the Performance Test Record.

Oscilloscope Amplitude Accuracy Performance Test 18

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-18, "Oscilloscope Amplitude Accuracy Test 18 Record" on page 235](#). A 5 V ac signal from the audio analyzer is measured by both an external multimeter and by the Test Set's internal oscilloscope. Since the oscilloscope reads peak volts, the RMS reading of the multimeter is multiplied by the square root of two.

Setup

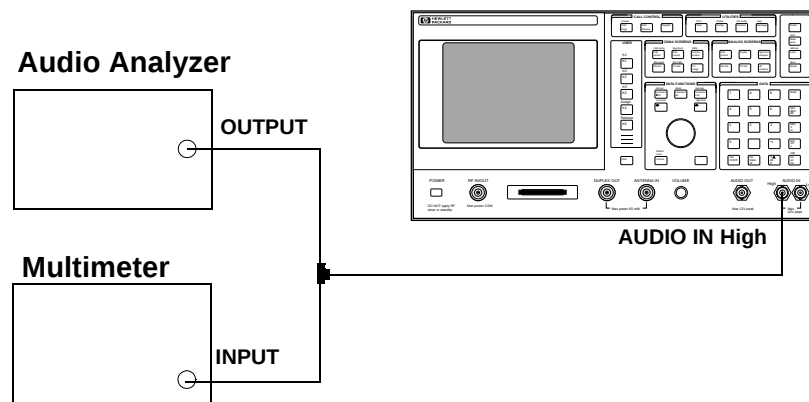Figure 6-23



Procedure

1. Set the digital multimeter to measure ac volts.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **AF ANALYZER** screen.
 - c. Set the **AF An1 In** field to **Audio In**.
 - d. Set the **Filter 2** field to **>99kHz LPF**.
 - e. Select the **SCOPE** screen.
 - f. Set the **Controls** field to **Marker** and move the cursor to the **Marker To Peak+** field.
3. Set the audio analyzer's source to 1 kHz and 5 V and fine adjust the level until the voltmeter reads 5 V.

4. Set the frequency as shown in the Performance Test Record (PTR). For each setting, perform the following:
 - a. Adjust the level until the digital multimeter reads 5 V.
 - b. Set **Controls** to **Main** and adjust the **Time/Div** on the Test Set to display 2 to 3 cycles of the waveform.
 - c. Set **Controls** to **Marker** and press the knob (with the cursor in the **Marker To Peak+** field) to move the marker to the peak of the waveform.
 - d. Read the **Lvl** and compare the reading to the limits in the PTR.


RF Analyzer Level Accuracy Performance Test 19

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-19, "RF Analyzer Level Accuracy Test 19 Record" on page 236](#). Level accuracy is measured using a system power calibration program that resides on a memory card.

Procedure

1. Obtain the memory card (see [Table 6-1 on page 143](#)) containing the System Power Calibration software program.
2. Run the System Power Calibration as follows:
 - a. Insert the memory card into the memory card slot.
 - b. Select the SOFTWARE MENU screen.
 - c. Set the **Select Procedure Location:** field to **Card**.
 - d. Set the **Select Procedure Filename** field to **SYSPWR0**.
 - e. Press the **Run Test** key.
3. Follow the instructions as they are presented. As the power difference is displayed, write these numbers in the Performance Test Record and compare them with the limits. (If two passes are chosen, average the two sets of data.) After the acquisition of levels is complete, select **No** when asked if you want the calibration factors downloaded into the Test Set's memory.

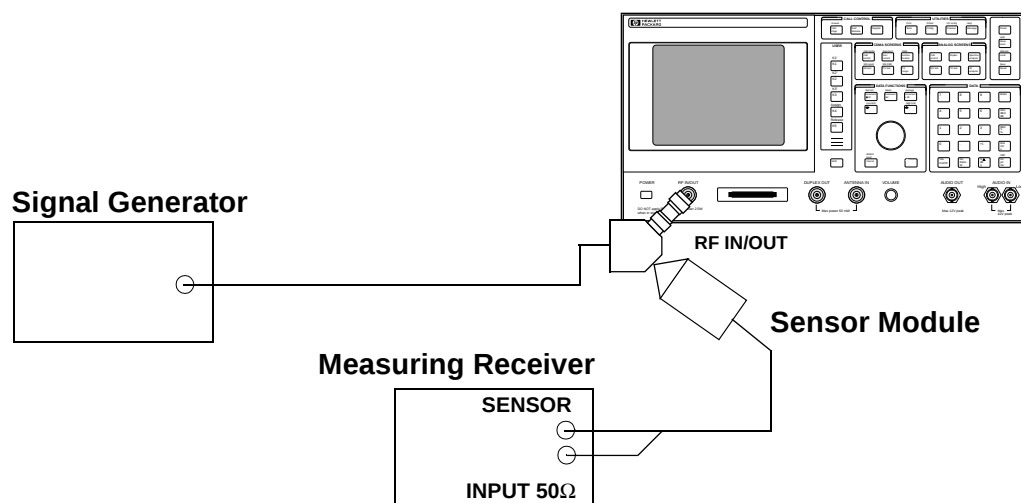Figure 6-24




RF Analyzer FM Accuracy Performance Test 20

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-20, "RF Analyzer FM Accuracy Test 20 Record" on page 238](#). The signal generator provides the RF signal with FM. An audio signal from the audio analyzer provides FM for the signal generator. The signal is measured both by the Test Set's internal RF analyzer and the measuring receiver. The FM signal comes from the external audio source in the audio analyzer. The audio level is varied until the modulation is at the desired FM deviation as measured by the measuring receiver. Results from this test give an indication of problems in the audio section of the Test Set.

Setup

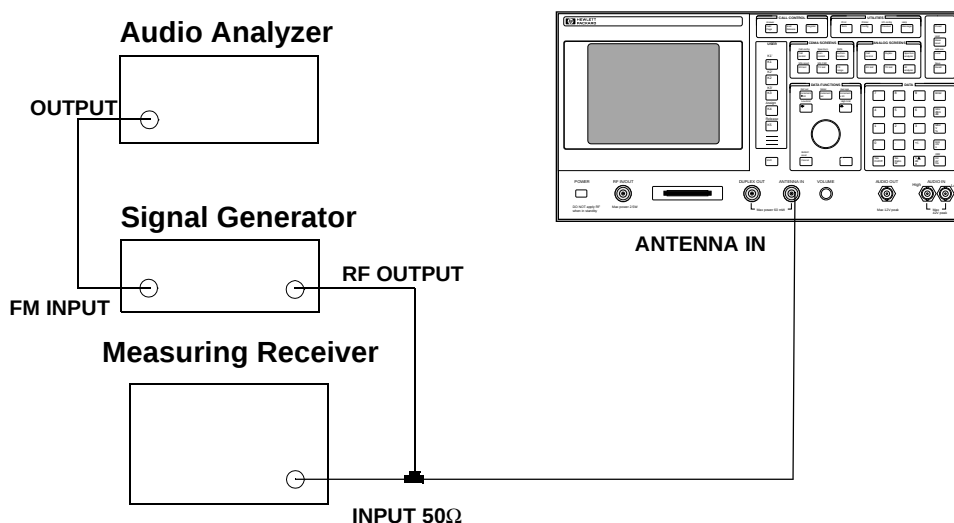Figure 6-25



Procedure

1. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the measurement mode to **FM**.
 - c. Set the detector to **PK+**.
 - d. Set the LP Filter to **3 kHz**.
2. On the audio analyzer:
 - a. Reset the instrument.
 - b. Set the output frequency to **1 kHz**.


- c. Set the amplitude to **1.42 V**.
- 3. On the signal generator:
 - a. Set the output frequency to **840 MHz**.
 - b. Set the amplitude to **0.0 dBm**.
 - c. Set the function to FM with EXT AC Modulation.
- 4. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Set the **(Gen)-(Anl) field** to **0 MHz**.
 - e. Select the **RF ANALYZER** screen.
 - f. Set the **Tune Freq** to **840 MHz**.
 - g. Set the **IF Filter** field to **230 kHz**.
 - h. Select the **AF ANALYZER** screen.
 - i. Set the **AF Anl In** field to **FM Demod**.
 - j. Set the **Filter 1** field to **<20 Hz HPF**.
 - k. Set the **Filter 2** field to **3 kHz LP**.
 - l. Set the **Detector** field to **PK+**.
- 5. For each RF output from the signal generator shown in the Performance Test Record (PTR), do the following:
 - a. Set the audio analyzer's frequency (rate) as shown in the PTR.
 - a. Set the appropriate **Filter 2** on the Test Set and LP Filter on the measuring receiver to match the output frequency of the audio analyzer.
 - b. Adjust the audio analyzer's level until the measuring receiver reads the FM deviation shown in the PTR.
 - c. Read the FM deviation on the Test Set and compare the results to the limits shown in the PTR.

RF Analyzer FM Distortion Performance Test 21

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-21, "RF Analyzer FM Distortion Test 21 Record" on page 239](#). An audio signal from the audio analyzer provides FM for the signal generator. The signal generator provides an RF signal (with FM) to the Test Set's internal RF analyzer. The measuring receiver is used to monitor FM deviation as the level of the audio signal from the audio analyzer is varied. The audio analyzer then measures distortion introduced by the Test Set.

Setup

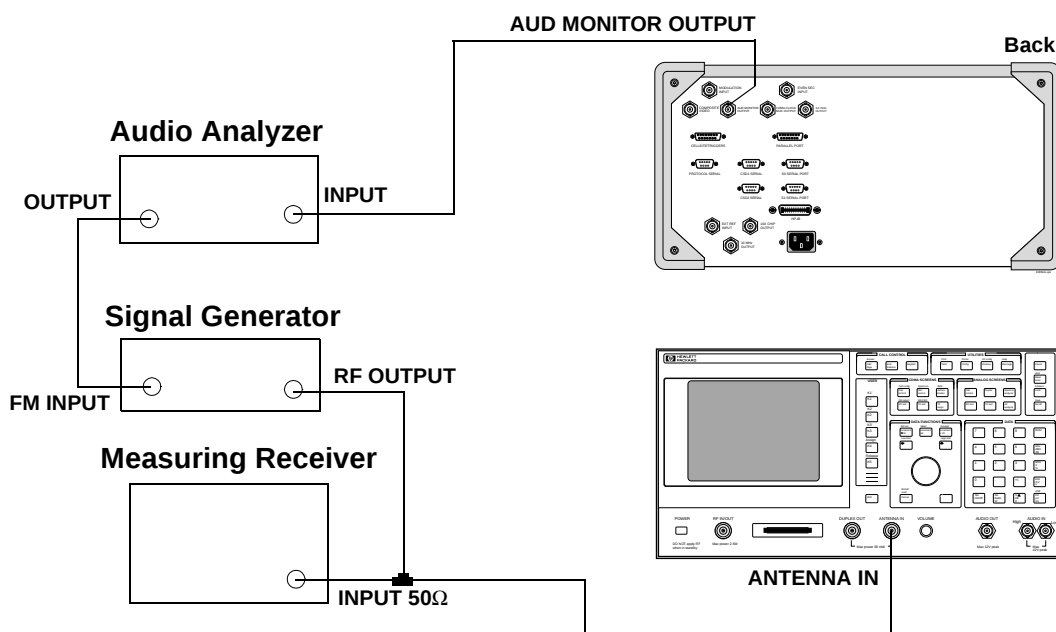Figure 6-26



Procedure

1. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the measurement mode to FM.
 - c. Set the high-pass filter to 300 Hz.
 - d. Set the low-pass filter to 3 kHz.
2. On the audio analyzer:


- a. Reset the instrument.
 - b. Set the output frequency to 1 kHz.
 - c. Set the output amplitude to 1.4 V.
 - d. Set the measurement mode to distortion.
3. On the signal generator:
 - a. Set the output frequency to 840 MHz.
 - b. Set the output amplitude to 0.0 dBm.
 - c. Set the function to FM with EXT AC Modulation.
 - d. Set the MOD LEVEL to 5 kHz.
4. On the Test Set:
 - a. Press **Preset**.
 - b. Select the INSTRUMENT CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Select the RF ANALYZER screen.
 - e. Set the **Tune Freq** to **840 MHz**.
 - f. Set the **Input Port** field to **Ant**.
 - g. Set the **IF Filter** field to **230 kHz**.
 - h. Set **Squelch** field to **Open**.
 - i. Select the AF ANALYZER screen.
 - j. Set the **AF Anl In** field to **FM Demod**.
 - k. Set the **Filter 1** field to **300Hz HPF**.
 - l. Set the **Filter 2** field to **3kHz LPF**.
 - m. Set the **Detector** field to **Pk+**.
5. For each FM deviation setting shown in the Performance Test Record (PTR) do the following:
 - a. Adjust the audio analyzer's level until the measuring receiver reads the FM deviation shown in the PTR.
 - b. Read the distortion on the audio analyzer and compare the results to the limits shown in the PTR.

RF Analyzer FM Bandwidth Performance Test 22

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-22, "RF Analyzer FM Bandwidth Test 22 Record" on page 240](#). An audio signal from the audio analyzer provides FM for the signal generator. The signal generator provides an RF signal (with FM) to the Test Set's internal RF analyzer. The measuring receiver is used to monitor FM deviation as the level of the audio signal from the audio analyzer is varied. The audio rate is varied in several steps from 20 Hz to 70 kHz. The difference between the maximum and minimum FM peak deviation is noted.

Setup

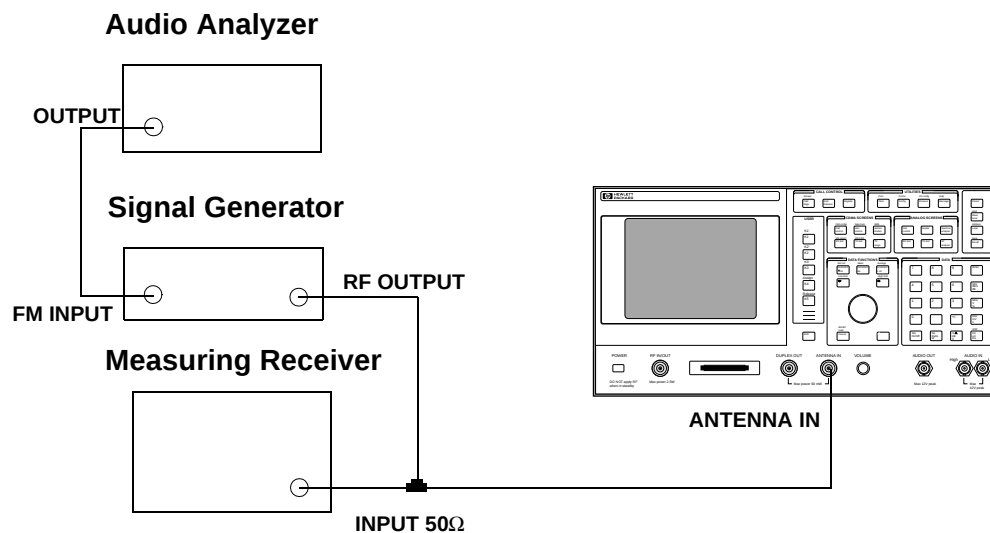Figure 6-27



Procedure

1. On the measuring receiver:
 - a. Reset the instrument.
 - b. Set the measurement mode to FM.
 - c. Set the all filters off.

2. On the audio analyzer:
 - a. Reset the instrument.
 - b. Set the output frequency to 1 kHz.
 - c. Set the output amplitude to 1.4 V.
3. On the signal generator:
 - a. Set the output frequency to 840 MHz.
 - b. Set the output amplitude to 0.0 dBm.
 - c. Set the function to FM with EXT AC Modulation.
 - d. Set the MOD LEVEL to 25 kHz.
4. On the Test Set:
 - a. Press **Preset**.
 - b. Select the CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq.**
 - d. Select the RF ANALYZER screen.
 - e. Set the **Tune Freq** to **840 MHz**.
 - f. Set the **Input Port** field to **Ant.**
 - g. Set the **IF Filter** field to **230 kHz**.
 - h. Set the **Squelch** field to **Open**.
 - i. Select the AF ANALYZER screen.
 - j. Set the **AF Anl In** field to **FM Demod**.
 - k. Set the **Filter 2** field to **>99kHz LP**.
 - l. Set the **Detector** field to **Pk+**.
5. Set the audio analyzer to the following frequencies: 20 Hz, 100 Hz, 1 kHz, 10 kHz, 35 kHz, and 70 kHz. For each frequency adjust the audio analyzer's level until the measuring receiver reads 25 kHz FM deviation and record the deviation read on the Test Set.
6. Of the FM deviations measured by the Test Set find the maximum and minimum deviations and make the following calculation:

$$dB = 20 \bullet \log\left(\frac{\text{Maximum Deviation}}{\text{Minimum Deviation}}\right)$$


Record the dB difference in the Performance Test Record and compare it with the limits shown.

RF Analyzer Residual FM Performance Test 23

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-23, "RF Analyzer Residual FM Test 23 Record" on page 241](#). The signal generator provides a CW signal with minimal residual FM. The FM is measured by the Test Set's internal RF analyzer.

Setup

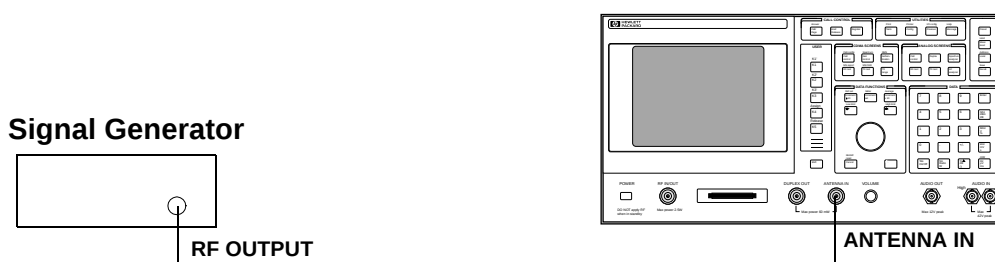Figure 6-28



Procedure

1. On the signal generator:
 - a. Set the output frequency to 840 MHz.
 - b. Set the output amplitude to 0.0 dBm.
 - c. Set the function to MOD OFF.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Select the **RF ANALYZER** screen.
 - e. Set the **Tune Freq** to **840 MHz**.
 - f. Set the **Input Port** field to **Ant**.
 - g. Set the **IF Filter** field to **230 kHz**.
 - h. Select the **AF ANALYZER** screen.
 - i. Set the **AF An1 In** field to **FM Demod**.
 - j. Set the **Filter 1** field to **300Hz HPF**.
 - k. Set the **Filter 2** field to **3kHz LPF**.
 - l. Set the **Detector** field to **RMS**.

RF Analyzer Residual FM Performance Test 23


3. Read the FM deviation (residual FM) for each both RF frequencies (840 and 1800 MHz) and record the deviation read on the Test Set in the Performance Test Record and compare it to the limits.

Spectrum Analyzer Image Rejection Performance Test 24

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-24, "Spectrum Analyzer Image Rejection \(Image\) Test 24 Record" on page 242](#). The first procedure measures the spectrum analyzer's ability to reject image frequencies. The spectrum analyzer is tuned to a signal frequency while an image signal from the signal generator is applied to the antenna input port.

Setup

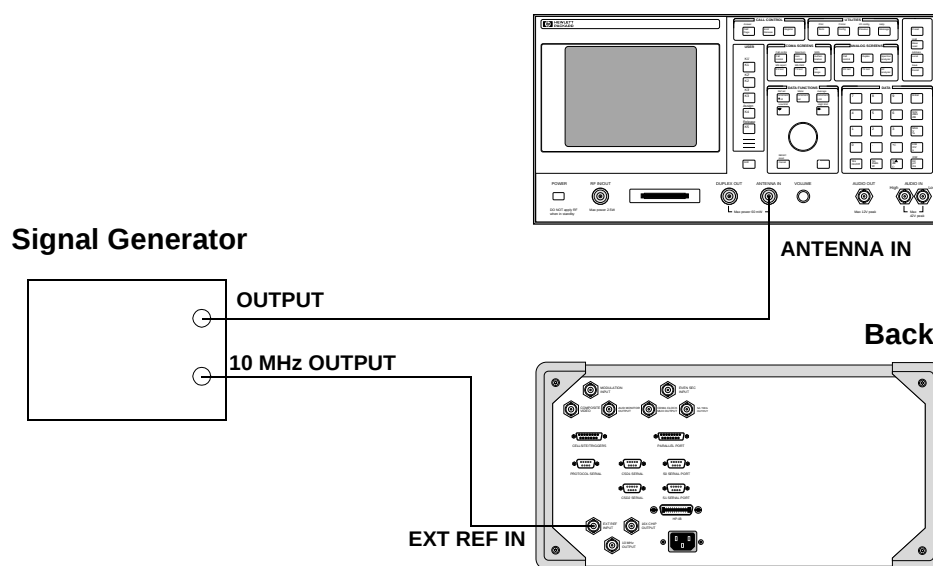Figure 6-29 Spectrum Analyzer Image Rejection Test 24



Procedure

1. On the signal generator:
 - a. Set the level to -20 dBm.
 - b. Set the frequency to 1229 MHz.
 - c. Set modulation off.
2. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Select the **SPEC ANL** screen.

Spectrum Analyzer Image Rejection Performance Test 24

- e. Set the **RF In/Ant** field to **Ant**.
 - f. Set the **Ref Level** field to **-25 dBm**.
 - g. Set the **Span** field to **5 kHz**.
 - h. Set the **Controls** field to **Marker**.
 - i. Set the **Marker To** field to **Center Freq**.
 - j. Set the **Controls** field back to **Main**.
3. Set the signal generator's frequency and the Test Set's spectrum analyzer center frequency as shown in the Performance Test Record (PTR) and read the image response on the spectrum analyzer. The image response is the spectrum analyzer's marker level (in dBm) minus the signal generator's output level (minus -20 dBm). (In other words, add 20 dB to the marker level.) Compare the results to the limits.

CDMA Generator RF IN/OUT Amplitude Level Accuracy Performance Test 25


The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-25, "CDMA Generator RF In/Out Test 25 Record" on page 243](#). The amplitude level accuracy of the CDMA generator is measured directly with a power meter. These measurements are made at the top and bottom of the CDMA generator's vernier range.

NOTE

Two setups follow. The first setup can measure signals to 1 GHz. Since the FM generator in the Test Set translates FM in the lower band directly into the 1.7 to 2 GHz range, testing to 1 GHz is adequate when verifying a repair. The second setup has a microwave converter which covers the full measurement range of FM signals to 2 GHz.

Setups

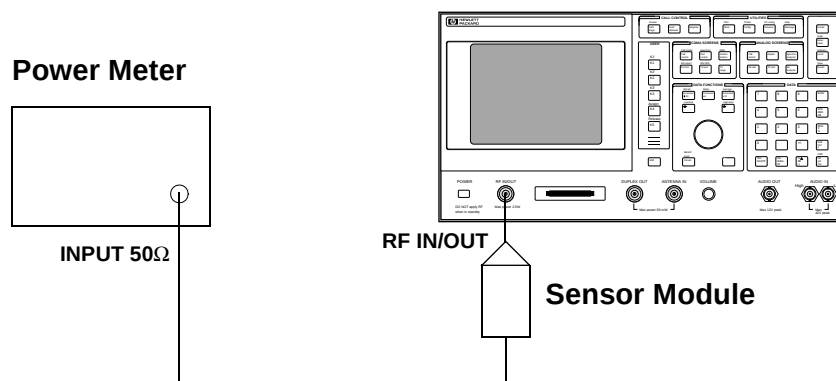Figure 6-30 Setup 1 for Measurements to 1 GHz



Procedure

1. Before connecting the equipment, on the measuring receiver:
 - a. Reset the instrument.
 - b. Zero and calibrate the sensor module.

NOTE

Make sure the sensor module's calibration data is entered into the measuring receiver.

2. Connect the equipment as shown in Setup 1.

CDMA Generator RF IN/OUT Amplitude Level Accuracy Performance Test 25

3. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen and set RF display to freq.
 - c. Select the **CDMA CALL CONTROL** screen.
 - d. Set the **RF Gen Freq** field to **836.52 MHz**.
 - e. Select the **CDMA GENERATOR CONTROL** screen.
 - f. Set the **Sctr A Pwr** to **-20.5 dBm**.
4. On the measuring receiver:
 - a. Set the measurement mode to **RF Power**.
 - b. Set the display to log.
 - c. Press the Calibrate key.
5. Set the Test Set to the frequencies and levels listed in the PTR and record the values.


CDMA Generator DUPLEX OUT Amplitude Level Accuracy Performance Test 26

The purpose of this test is to verify the amplitude level accuracy of the CDMA generator at the DUPLEX OUT port by using the CDMA analyzer to verify it meets the specification limits in PTR (Performance Test Record) [table 7-26](#), "CDMA Generator DUPLEX OUT Sector B Power Level Accuracy Test 26 Record" on page 244.

Setup

Figure 6-31

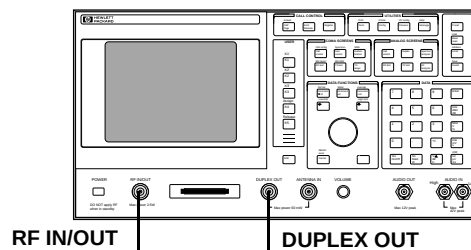CDMA Generator Modulation Accuracy Test 26



Procedure

DUPLEX OUT Sector B Power

1. Press **Preset**.
2. Select the CONFIGURE screen and set the **RF Display** field to **Freq**.
3. Set the **(Gen) - (An1)** field to **0 MHz**.
4. Set the **Output Port** field to **Dup1**.
5. Select the CDMA GENERATOR CONTROL screen.
6. Set the **Scrt A Pwr** field to **Off**.
7. Set the **RF Gen Freq** to **840 MHz**.
8. Set the **Scrt B Pwr** field to the values listed in the PTR for Sector B. See [Appendix Table 7-26](#), "CDMA Generator DUPLEX OUT Sector B Power Level Accuracy Test 26 Record," on page 244.
9. Go to the CDMA CELLULAR MOBILE TRANSMITTER TEST screen.
10. Read the **Avg Power** (average power) and record it in the PTR.

DUPLEX OUT AWGN Power

11. Select the CDMA GENERATOR CONTROL screen.
12. Set the **Sector B Power** field to **Off**.

CDMA Generator DUPLEX OUT Amplitude Level Accuracy Performance Test 26


13. Set the **AWGN Power** field to the values listed in the PTR for AWGN power.
See [table 7-27, "CDMA Generator DUPLEX OUT AWGN Power Level Accuracy Test 26 Record"](#) on page 244.
14. Select the CDMA CALL CONTROL screen.
15. Change the **Avg Power** measurement field to **Chan Power** (Channel Power).
16. Calibrate the channel power by selecting **Calibrate** in the **Power Meas** field.
17. Select the CDMA GENERATOR CONTROL screen.
18. Read the channel power and record it in the PTR.

CDMA Generator Modulation Accuracy Performance Test 27

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-28, "CDMA Generator Modulation Accuracy Test 27 Record" on page 245](#). The modulation accuracy of the CDMA generator is directly measured with a vector signal analyzer at the DUPLEX OUT port. Because the vector signal analyzer cannot measure rho directly, the modulation accuracy is measured in EVM (Error Vector Magnitude) % rms and rho is calculated from the EVM data.

Setup

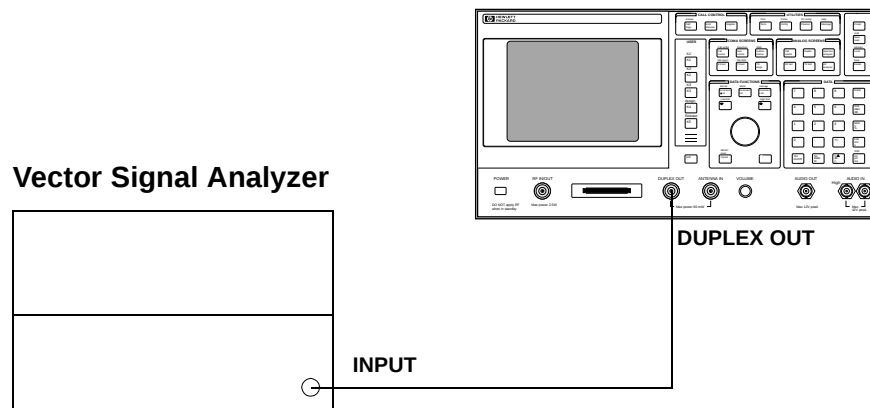Figure 6-32 CDMA Generator Modulation Accuracy Test 26



Procedure

1. On the Test Set:
 - a. Press **Preset**.
 - b. Select the **CONFIGURE** screen.
 - c. Set the **RF Display** field to **Freq**.
 - d. Set the **(Gen) - (An1)** field to **0 MHz**.
 - e. Set the **Output Port** field to **Dup1**.
 - f. Select the **CDMA CALL CONTROL** screen.
 - g. Set the **RF Gen Freq** field to **881.52 MHz**.
 - h. Select the **CDMA GENERATOR CONTROL** screen.
 - i. Set the **Scrt A Pwr** field to **-10 dBm**.
 - j. Turn off the **Synth**, **Pager**, and **Traffic** fields.
 - k. Set the **Pilot** field to **0 dB**.

CDMA Generator Modulation Accuracy Performance Test 27

2. On the Vector Signal Analyzer:
 - a. Press the **Frequency** key.
 - b. Set center frequency to 881.52 MHz.
 - c. Set the span to 2.6 MHz.
 - d. Press the **Instrument Mode** key
 - e. Press the **Digital Demodulation** (F4) key
 - f. Press the **Demodulation Setup** (F5) key
 - g. Press the **Demodulation Format** (F1) key
 - h. Press the **Standard Setup** (F7) key.
 - i. Press the **CDMA Base** (F7) key.
 - j. Press the **D** key.
 - k. Read the Rho measurement or:
3. Use the following equation to calculate rho.

$$\rho = \frac{1}{1 + EVM^2}$$

$$\rho = rho$$

EVM = Error Vector Magnitude (% rms)


4. Compare and record the rho error calculated in [table 7-28, "CDMA Generator Modulation Accuracy Test 27 Record" on page 245](#)
5. Set the CDMA GEN frequency on the Test Set and change the center frequency on the Vector Signal Analyzer to the 1956.25 MHz.
6. Calculate rho (using the above equation), and record the result (rho) in [table 7-28, "CDMA Generator Modulation Accuracy Test 27 Record" on page 245](#).

CDMA Analyzer Average Power Level Accuracy Performance Test 28

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-29, "CDMA Analyzer Average Power Level Accuracy Test 28 Record" on page 246](#). The CDMA average-power-level accuracy is verified by comparing the measured power in a CW signal with the power level measured by a power meter.

Setup

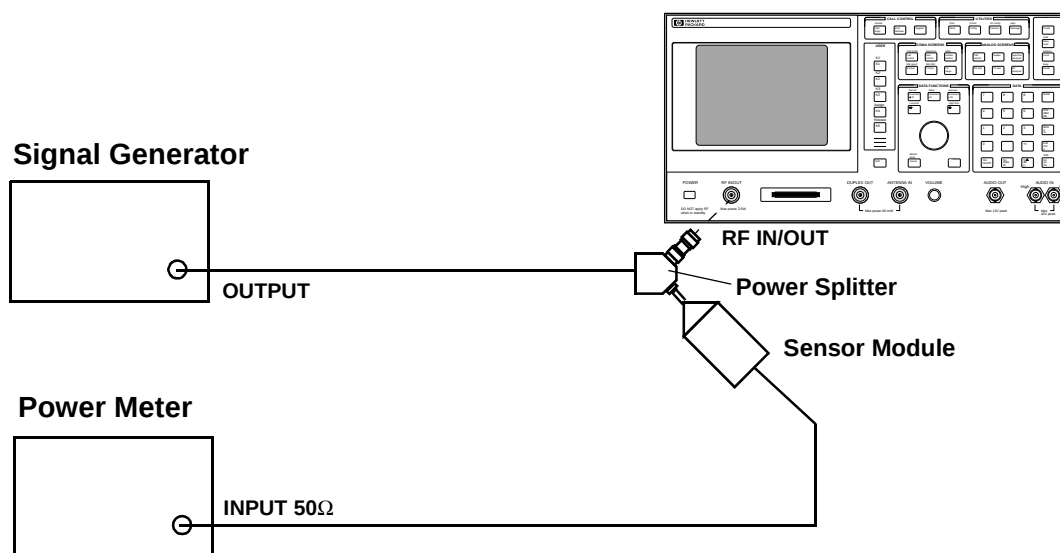Figure 6-33 CDMA Analyzer Average Power Level Accuracy Test 27



Procedure

1. On the signal generator:
 - a. Set the frequency to **881.52 MHz**.
 - b. Set the amplitude so the measuring receiver reads 0 dBm.

CDMA Analyzer Average Power Level Accuracy Performance Test 28


2. On the Test Set:
 - a. Press **Preset**
 - b. Select the CONFIGURE screen.
 - c. Set the **RF Display** field to **Freq.**
 - d. Set the **(Gen) - (An1)** field to **0 MHz.**
 - e. Select CDMA CALL CONTROL.
 - f. Set **Tune Freq** to 881.52 MHz.
 - g. Set the **Avg Pwr Units** to **mW.**
3. Record the **Avg Pwr** reading in the PTR (see [table 7-29, "CDMA Analyzer Average Power Level Accuracy Test 28 Record" on page 246](#)).
4. Repeat steps 2 and 3 for each of the frequencies and levels listed in the PTR.

CDMA Analyzer Channel Power Level Accuracy Performance Test 29

The purpose of this test is to verify that the Test Set meets the specification limits in PTR (Performance Test Record) [table 7-30, "CDMA Analyzer Channel Power Level Accuracy Test 29 Record" on page 247](#). The tuned channel power level accuracy is verified by comparing the measured power in a CW signal with the power level measured by a measuring receiver.

Setup

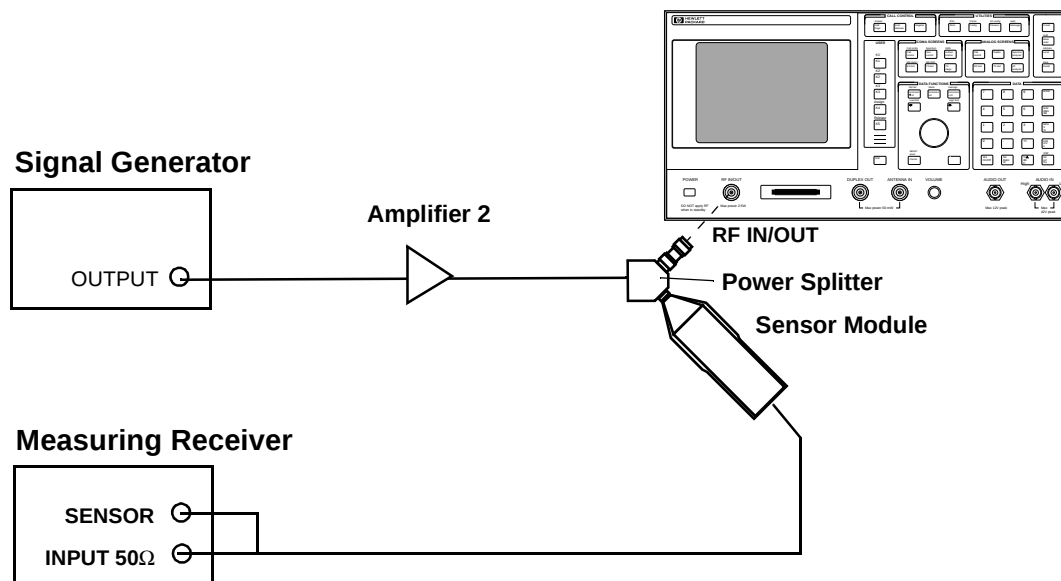Figure 6-34 CDMA Analyzer Channel Power Level Accuracy Test 28



Procedure

1. On the measuring receiver
 - a. Set the display mode to **LOG**.
 - b. Set the measurement mode to **RF POWER**.
 - c. Calibrate the power sensor.
2. On the signal generator:
 - a. Set the frequency to 836.52 MHz (45 MHz below RF generator frequency).
 - b. Set the output level so the measuring receiver reads 11 dBm.

CDMA Analyzer Channel Power Level Accuracy Performance Test 29

3. On the Test Set:
 - a. Press **Preset**.
 - b. Change the **Avg Pwr** field to **Chan Pwr**.
 - c. Verify the **RF Channel** is set at **384**.
 - d. Select **Calibrate** under **Chn Pwr Cal**.
4. Record the **Chan Pwr** measurement in the PTR [table 7-30, "CDMA Analyzer Channel Power Level Accuracy Test 29 Record"](#) on page 247.
5. Repeat steps 2 and 3 for each of the data points listed in the PTR.
6. For PCS frequencies:
 - a. Set the **RF CHAN Std** to **US PCS**.
 - b. Verify the **RF Channel** is set at **525**.

NOTE

The **Chan Pwr Cal** is only required when the frequency is changed.

7

Performance Test Records

Use this chapter to record the results of the performance tests in [Chapter 6](#), “Performance Tests,” on page 141.

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

RF Generator FM Distortion Performance Test 1 Record

For test procedure, see “RF Generator FM Distortion Performance Test 1” on page 146.

Table 7-1 RF Generator FM Distortion Test 1 Record

Applicable Firmware Revision	RF (MHz)	Deviation (kHz)	Rate (kHz)	FM Distortion Limits (%)	
				Upper	Actual
≤A.02.XX	30	99	1	0.50	
≤A.02.XX	30	5	1	0.50	
≤A.02.XX	312.5	5	1	0.50	
≤A.02.XX	425	50	1	0.50	
≤A.02.XX	501	99	1	0.50	
≤A.02.XX	501	50	1	0.50	
≤A.02.XX	501	5	1	0.50	
≤A.02.XX	568.75	50	1	0.50	
≤A.02.XX	656.25	99	1	0.50	
≤A.02.XX	656.25	50	1	0.50	
≤A.02.XX	656.25	5	1	0.50	
≤A.02.XX	750	99	1	0.50	
≤A.02.XX	750	50	1	0.50	
≤A.02.XX	750	5	1	0.50	
ALL	856.25	99	1	0.50	
ALL	856.25	50	1	0.50	
ALL	856.25	5	1	0.50	
ALL	956.25	50	1	0.50	
ALL	976.002	5	1	0.50	
ALL	1000	99	1	0.50	
ALL	1000	50	1	0.50	
ALL	1000	11	1	0.50	
ALL	1000	5	1	0.50	

RF Generator FM Distortion Performance Test 1 Record

Applicable Firmware Revision	RF (MHz)	Deviation (kHz)	Rate (kHz)	FM Distortion Limits (%)	
				Upper	Actual
ALL	1000	6	1	0.50	
ALL	1000	7	1	0.50	
ALL	1000	8	1	0.50	
ALL	1000	9	1	0.50	
ALL	998.401	8	1	0.50	
≤A.02.XX	768.001	8	1	0.50	
≤A.02.XX	512.001	8	1	0.50	
≤A.02.XX	511.601	8	1	0.50	
≤A.02.XX	511.201	8	1	0.50	
The following entries are for the 2 GHz setup.					
ALL	1700	99	1	1.00	
ALL	1700	50	1	1.00	
ALL	1700	5	1	1.00	
ALL	2000	99	1	1.00	
ALL	2000	50	1	1.00	
ALL	2000	5	1	1.00	

RF Generator FM Accuracy Performance Test 2 Record

For test procedure, see “RF Generator FM Accuracy Performance Test 2” on page 149.

Table 7-2 RF Generator FM Accuracy Test 2 Record

Applicable Firmware Revision	RF (MHz)	Deviation (kHz)	Rate (kHz)	FM Deviation Limits (kHz)		
				Lower	Upper	Actual
≤A.02.XX	30	99	1	95.035	102.965	
≤A.02.XX	30	3	1	2.845	3.155	
≤A.02.XX	312.5	3	1	2.845	3.155	
≤A.02.XX	425	50	1	47.750	52.25	
≤A.02.XX	501	99	1	95.035	102.965	
≤A.02.XX	501	50	1	47.750	52.25	
≤A.02.XX	501	3	1	2.845	3.155	
≤A.02.XX	568.75	50	1	47.750	52.25	
≤A.02.XX	656.25	99	1	95.035	102.965	
≤A.02.XX	656.25	50	1	47.750	52.25	
≤A.02.XX	656.25	3	1	2.845	3.155	
≤A.02.XX	750	99	1	95.035	102.965	
≤A.02.XX	750	50	1	47.750	52.25	
≤A.02.XX	750	3	1	2.845	3.155	
ALL	856.25	99	1	95.035	102.965	
ALL	856.25	50	1	47.750	52.25	
ALL	856.25	3	1	2.845	3.155	
ALL	956.25	50	1	47.750	52.25	
ALL	976.002	3	1	2.845	3.155	
ALL	1000	99	1	95.035	102.965	
ALL	1000	50	1	47.750	52.25	
ALL	1000	11	1	10.115	11.885	

RF Generator FM Accuracy Performance Test 2 Record

Applicable Firmware Revision	RF (MHz)	Deviation (kHz)	Rate (kHz)	FM Deviation Limits (kHz)		
				Lower	Upper	Actual
ALL	1000	3	1	2.845	3.155	
The following entries are for the 2 GHz setup.						
ALL	1700	99	1	95.035	102.965	
ALL	1700	50	1	47.750	52.25	
ALL	1700	3	1	2.845	3.155	
ALL	2000	99	1	95.035	102.965	
ALL	2000	50	1	47.750	52.25	
ALL	2000	3	1	2.845	3.155	

RF Generator FM Flatness Performance Test 3 Record

For test procedure, see “RF Generator FM Flatness Performance Test 3” on page 152.

Table 7-3 RF Generator FM Flatness Test 3 Record

Applicable Firmware Revision	Level (dBm)	RF (MHz)	Deviation (kHz)	AFGEN1 Freq. Rate (kHz)	Computed FM Flatness Limits (dB)		Measured Reading (kHz)	Computed Results (dB)
					Lower	Upper	Reading	Computed
≤A.02.XX	−10	521	50	1	Reference			0 dB
≤A.02.XX	−10	521	50	0.1	−1	1		
≤A.02.XX	−10	521	50	0.2	−1	1		
≤A.02.XX	−10	521	50	2	−1	1		
≤A.02.XX	−10	521	50	10	−1	1		
≤A.02.XX	−10	521	50	25	−1	1		
ALL	−10	975.5	50		Reference			0 dB
ALL	−10	975.5	50	0.1	−1	1		
ALL	−10	975.5	50	0.2	−1	1		
ALL	−10	975.5	50	2	−1	1		
ALL	−10	975.5	50	10	−1	1		
ALL	−10	975.5	50	25	−1	1		
The following entries are for the 2 GHz setup.								
ALL	−10	1700	50		Reference			0 dB
ALL	−10	1700	50	0.1	−1	1		
ALL	−10	1700	50	0.2	−1	1		
ALL	−10	1700	50	2	−1	1		
ALL	−10	1700	50	10	−1	1		
ALL	−10	1700	50	25	−1	1		
ALL	−10	2000	50		Reference			0 dB
ALL	−10	2000	50	0.1	−1	1		

RF Generator FM Flatness Performance Test 3 Record

Applicable Firmware Revision	Level (dBm)	RF (MHz)	Deviation (kHz)	AFGEN1 Freq. Rate (kHz)	Computed FM Flatness Limits (dB)		Measured Reading (kHz)	Computed Results (dB)
					Lower	Upper	Reading	Computed
ALL	-10	2000	50	0.2	-1	1		
ALL	-10	2000	50	2	-1	1		
ALL	-10	2000	50	10	-1	1		
ALL	-10	2000	50	25	-1	1		

RF Generator Residual FM Performance Test 4 Record

For test procedure, see “RF Generator Residual FM Performance Test 4” on page 155.

Table 7-4 RF Generator Residual FM Test 4 Record

Applicable Firmware Revision	LO (MHz)	RF (MHz)	Residual FM Limits (Hz)	
			Upper	Actual
≤A.02.XX	31.5	30	7	
≤A.02.XX	101.5	100	7	
≤A.02.XX	249.5	248	7	
≤A.02.XX	251.5	250	4	
≤A.02.XX	401.5	400	4	
≤A.02.XX	501.5	500	4	
≤A.02.XX	502.5	501	7	
≤A.02.XX	512.701	511.201	7	
≤A.02.XX	513.101	511.601	7	
≤A.02.XX	513.501	512.001	7	
≤A.02.XX	626.5	625	7	
≤A.02.XX	736.5	735	7	
≤A.02.XX	741.5	740	7	
≤A.02.XX	746.5	745	7	
≤A.02.XX	751.5	750	7	
≤A.02.XX	769.501	768.001	7	
ALL	846.5	845	7	
ALL	851.5	850	7	
ALL	856.5	855	7	
ALL	866.5	865	7	
ALL	901.5	900	7	
ALL	999.901	998.401	7	

RF Generator Residual FM Performance Test 4 Record

Applicable Firmware Revision	LO (MHz)	RF (MHz)	Residual FM Limits (Hz)	
			Upper	Actual
ALL	1001.5	1000	7	
The following entries are for the 2 GHz setup.				
ALL	201.5	1700	14	
ALL	501.5	2000	14	

RF Generator Level Accuracy Performance Test 5 Record

For test procedure, see “RF Generator Level Accuracy Performance Test 5” on page 158.

Table 7-5 RF Generator Level Accuracy Test 5 Record

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
The following entries are for Procedure 1.						
≤A.02.XX	DUPLEX OUT	30	−11	−12	−10	
≤A.02.XX	DUPLEX OUT	30	−16	−17	−15	
≤A.02.XX	DUPLEX OUT	30	−21	−22	−20	
≤A.02.XX	DUPLEX OUT	30	−26	−27	−25	
≤A.02.XX	DUPLEX OUT	30	−31	−32	−30	
≤A.02.XX	DUPLEX OUT	30	−36	−37	−35	
≤A.02.XX	DUPLEX OUT	30	−41	−42	−40	
≤A.02.XX	DUPLEX OUT	30	−46	−47	−45	
≤A.02.XX	DUPLEX OUT	30	−51	−52	−50	
≤A.02.XX	DUPLEX OUT	30	−56	−57	−55	
≤A.02.XX	DUPLEX OUT	30	−61	−62	−60	
≤A.02.XX	DUPLEX OUT	30	−66	−67	−65	
≤A.02.XX	DUPLEX OUT	30	−71	−72	−70	
≤A.02.XX	DUPLEX OUT	30	−76	−77	−75	
≤A.02.XX	DUPLEX OUT	30	−81	−82	−80	
≤A.02.XX	DUPLEX OUT	30	−86	−87	−85	
≤A.02.XX	DUPLEX OUT	30	−91	−92	−90	
≤A.02.XX	DUPLEX OUT	30	−96	−97	−95	
≤A.02.XX	DUPLEX OUT	30	−101	−102	−100	
≤A.02.XX	DUPLEX OUT	30	−106	−107	−105	
≤A.02.XX	DUPLEX OUT	30	−111	−112	−110	
≤A.02.XX	DUPLEX OUT	30	−116	−117	−115	

RF Generator Level Accuracy Performance Test 5 Record

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
≤A.02.XX	RF IN/OUT	30	−22	−23	−21	
≤A.02.XX	RF IN/OUT	30	−27	−28	−26	
≤A.02.XX	RF IN/OUT	30	−32	−33	−31	
≤A.02.XX	RF IN/OUT	30	−37	−38	−36	
≤A.02.XX	RF IN/OUT	30	−42	−43	−41	
≤A.02.XX	RF IN/OUT	30	−47	−48	−46	
≤A.02.XX	RF IN/OUT	30	−52	−53	−51	
≤A.02.XX	RF IN/OUT	30	−57	−58	−56	
≤A.02.XX	RF IN/OUT	30	−62	−63	−61	
≤A.02.XX	RF IN/OUT	30	−67	−68	−66	
≤A.02.XX	RF IN/OUT	30	−72	−73	−71	
≤A.02.XX	RF IN/OUT	30	−77	−78	−76	
≤A.02.XX	RF IN/OUT	30	−82	−83	−81	
≤A.02.XX	RF IN/OUT	30	−87	−88	−86	
≤A.02.XX	RF IN/OUT	30	−92	−93	−91	
≤A.02.XX	RF IN/OUT	30	−97	−98	−96	
≤A.02.XX	RF IN/OUT	30	−102	−103	−101	
≤A.02.XX	RF IN/OUT	30	−107	−108	−106	
≤A.02.XX	RF IN/OUT	30	−112	−113	−111	
≤A.02.XX	RF IN/OUT	30	−117	−118	−116	
ALL	DUPLEX OUT	800	−11	−12	−10	
ALL	DUPLEX OUT	800	−16	−17	−15	
ALL	DUPLEX OUT	800	−21	−22	−20	
ALL	DUPLEX OUT	800	−26	−27	−25	
ALL	DUPLEX OUT	800	−31	−32	−30	
ALL	DUPLEX OUT	800	−36	−37	−35	
ALL	DUPLEX OUT	800	−41	−42	−40	
ALL	DUPLEX OUT	800	−46	−47	−45	
ALL	DUPLEX OUT	800	−51	−52	−50	

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
ALL	DUPLEX OUT	800	-56	-57	-55	
ALL	DUPLEX OUT	800	-61	-62	-60	
ALL	DUPLEX OUT	800	-66	-67	-65	
ALL	DUPLEX OUT	800	-71	-72	-70	
ALL	DUPLEX OUT	800	-76	-77	-75	
ALL	DUPLEX OUT	800	-81	-82	-80	
ALL	DUPLEX OUT	800	-86	-87	-85	
ALL	DUPLEX OUT	800	-91	-92	-90	
ALL	DUPLEX OUT	800	-96	-97	-95	
ALL	DUPLEX OUT	800	-101	-102	-100	
ALL	DUPLEX OUT	800	-106	-107	-105	
ALL	DUPLEX OUT	800	-111	-112	-110	
ALL	DUPLEX OUT	800	-116	-117	-115	
ALL	RF IN/OUT	800	-22	-23	-21	
ALL	RF IN/OUT	800	-27	-28	-26	
ALL	RF IN/OUT	800	-32	-33	-31	
ALL	RF IN/OUT	800	-37	-38	-36	
ALL	RF IN/OUT	800	-42	-43	-41	
ALL	RF IN/OUT	800	-47	-48	-46	
ALL	RF IN/OUT	800	-52	-53	-51	
ALL	RF IN/OUT	800	-57	-58	-56	
ALL	RF IN/OUT	800	-62	-63	-61	
ALL	RF IN/OUT	800	-67	-68	-66	
ALL	RF IN/OUT	800	-72	-73	-71	
ALL	RF IN/OUT	800	-77	-78	-76	
ALL	RF IN/OUT	800	-82	-83	-81	
ALL	RF IN/OUT	800	-87	-88	-86	
ALL	RF IN/OUT	800	-92	-93	-91	
ALL	RF IN/OUT	800	-97	-98	-96	

RF Generator Level Accuracy Performance Test 5 Record

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
ALL	RF IN/OUT	800	-102	-103	-101	
ALL	RF IN/OUT	800	-107	-108	-106	
ALL	RF IN/OUT	800	-112	-113	-111	
ALL	RF IN/OUT	800	-117	-118	-116	
ALL	DUPLEX OUT	1000	-11	-12	-10	
ALL	DUPLEX OUT	1000	-16	-17	-15	
ALL	DUPLEX OUT	1000	-21	-22	-20	
ALL	DUPLEX OUT	1000	-26	-27	-25	
ALL	DUPLEX OUT	1000	-31	-32	-30	
ALL	DUPLEX OUT	1000	-36	-37	-35	
ALL	DUPLEX OUT	1000	-41	-42	-40	
ALL	DUPLEX OUT	1000	-46	-47	-45	
ALL	DUPLEX OUT	1000	-51	-52	-50	
ALL	DUPLEX OUT	1000	-56	-57	-55	
ALL	DUPLEX OUT	1000	-61	-62	-60	
ALL	DUPLEX OUT	1000	-66	-67	-65	
ALL	DUPLEX OUT	1000	-71	-72	-70	
ALL	DUPLEX OUT	1000	-76	-77	-75	
ALL	DUPLEX OUT	1000	-81	-82	-80	
ALL	DUPLEX OUT	1000	-86	-87	-85	
ALL	DUPLEX OUT	1000	-91	-92	-90	
ALL	DUPLEX OUT	1000	-96	-97	-95	
ALL	DUPLEX OUT	1000	-101	-102	-100	
ALL	DUPLEX OUT	1000	-106	-107	-105	
ALL	DUPLEX OUT	1000	-111	-112	-110	
ALL	DUPLEX OUT	1000	-116	-117	-115	
ALL	RF IN/OUT	1000	-22	-23	-21	
ALL	RF IN/OUT	1000	-27	-28	-26	
ALL	RF IN/OUT	1000	-32	-33	-31	

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
ALL	RF IN/OUT	1000	-37	-38	-36	
ALL	RF IN/OUT	1000	-42	-43	-41	
ALL	RF IN/OUT	1000	-47	-48	-46	
ALL	RF IN/OUT	1000	-52	-53	-51	
ALL	RF IN/OUT	1000	-57	-58	-56	
ALL	RF IN/OUT	1000	-62	-63	-61	
ALL	RF IN/OUT	1000	-67	-68	-66	
ALL	RF IN/OUT	1000	-72	-73	-71	
ALL	RF IN/OUT	1000	-77	-78	-76	
ALL	RF IN/OUT	1000	-82	-83	-81	
ALL	RF IN/OUT	1000	-87	-88	-86	
ALL	RF IN/OUT	1000	-92	-93	-91	
ALL	RF IN/OUT	1000	-97	-98	-96	
ALL	RF IN/OUT	1000	-102	-103	-101	
ALL	RF IN/OUT	1000	-107	-108	-106	
ALL	RF IN/OUT	1000	-112	-113	-111	
ALL	RF IN/OUT	1000	-117	-118	-116	
The following entries are for the 2 GHz setup						
ALL	DUPLEX OUT	1700	-13	-14	-12	
ALL	DUPLEX OUT	1700	-18	-19	-17	
ALL	DUPLEX OUT	1700	-23	-24	-22	
ALL	DUPLEX OUT	1700	-28	-29	-27	
ALL	DUPLEX OUT	1700	-33	-34	-32	
ALL	DUPLEX OUT	1700	-38	-39	-37	
ALL	DUPLEX OUT	1700	-43	-44	-42	
ALL	DUPLEX OUT	1700	-48	-49	-47	
ALL	DUPLEX OUT	1700	-53	-54	-52	
ALL	DUPLEX OUT	1700	-58	-59	-57	
ALL	DUPLEX OUT	1700	-63	-64	-62	

RF Generator Level Accuracy Performance Test 5 Record

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
ALL	DUPLEX OUT	1700	-68	-69	-67	
ALL	DUPLEX OUT	1700	-73	-74	-72	
ALL	DUPLEX OUT	1700	-78	-79	-77	
ALL	DUPLEX OUT	1700	-83	-84	-82	
ALL	DUPLEX OUT	1700	-88	-89	-87	
ALL	DUPLEX OUT	1700	-93	-94	-92	
ALL	DUPLEX OUT	1700	-98	-99	-97	
ALL	DUPLEX OUT	1700	-103	-104	-102	
ALL	DUPLEX OUT	1700	-108	-109	-107	
ALL	DUPLEX OUT	1700	-103	-114	-112	
ALL	DUPLEX OUT	1700	-118	-119	-117	
ALL	RF IN/OUT	1700	-23	-24.25	-21.75	
ALL	RF IN/OUT	1700	-28	-29.25	-26.75	
ALL	RF IN/OUT	1700	-33	-24.25	-31.75	
ALL	RF IN/OUT	1700	-38	-39.25	-36.75	
ALL	RF IN/OUT	1700	-43	-44.25	-41.75	
ALL	RF IN/OUT	1700	-48	-49.25	-46.75	
ALL	RF IN/OUT	1700	-53	-54.25	-51.75	
ALL	RF IN/OUT	1700	-58	-59.25	-56.75	
ALL	RF IN/OUT	1700	-63	-64.25	-61.75	
ALL	RF IN/OUT	1700	-68	-69.25	-66.75	
ALL	RF IN/OUT	1700	-73	-74.25	-71.75	
ALL	RF IN/OUT	1700	-78	-79.25	-76.75	
ALL	RF IN/OUT	1700	-83	-84.25	-81.75	
ALL	RF IN/OUT	1700	-88	-89.25	-86.75	
ALL	RF IN/OUT	1700	-93	-94.25	-89.75	
ALL	RF IN/OUT	1700	-98	-99.25	-96.75	
ALL	RF IN/OUT	1700	-103	-104.25	-101.75	
ALL	RF IN/OUT	1700	-108	-109.25	-106.75	

Performance Test Records

RF Generator Level Accuracy Performance Test 5 Record

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
ALL	RF IN/OUT	1700	-113	-114.25	-111.75	
ALL	RF IN/OUT	1700	-118	-119.25	-116.75	
ALL	DUPLEX OUT	2000	-13	-14	-12	
ALL	DUPLEX OUT	2000	-18	-19	-17	
ALL	DUPLEX OUT	2000	-23	-24	-22	
ALL	DUPLEX OUT	2000	-28	-29	-27	
ALL	DUPLEX OUT	2000	-33	-34	-32	
ALL	DUPLEX OUT	2000	-38	-39	-37	
ALL	DUPLEX OUT	2000	-43	-44	-42	
ALL	DUPLEX OUT	2000	-48	-49	-47	
ALL	DUPLEX OUT	2000	-53	-54	-52	
ALL	DUPLEX OUT	2000	-58	-59	-57	
ALL	DUPLEX OUT	2000	-63	-64	-62	
ALL	DUPLEX OUT	2000	-68	-69	-67	
ALL	DUPLEX OUT	2000	-73	-74	-72	
ALL	DUPLEX OUT	2000	-78	-79	-77	
ALL	DUPLEX OUT	2000	-83	-84	-82	
ALL	DUPLEX OUT	2000	-88	-89	-87	
ALL	DUPLEX OUT	2000	-93	-94	-92	
ALL	DUPLEX OUT	2000	-98	-99	-97	
ALL	DUPLEX OUT	2000	-103	-104	-102	
ALL	DUPLEX OUT	2000	-108	-109	-107	
ALL	DUPLEX OUT	2000	-113	-114	-112	
ALL	DUPLEX OUT	2000	-118	-119	-117	
ALL	RF IN/OUT	2000	-23	-24.25	-21.75	
ALL	RF IN/OUT	2000	-28	-29.25	-26.75	
ALL	RF IN/OUT	2000	-33	-34.25	-31.75	
ALL	RF IN/OUT	2000	-38	-39.25	-36.75	
ALL	RF IN/OUT	2000	-43	-44.25	-41.75	

RF Generator Level Accuracy Performance Test 5 Record

Applicable Firmware Revision	Port	RF (MHz)	Level (dBm)	Level Limits (dBm)		
				Lower	Upper	Actual
ALL	RF IN/OUT	2000	-48	-49.25	-46.75	
ALL	RF IN/OUT	2000	-53	-54.25	-51.75	
ALL	RF IN/OUT	2000	-58	-59.25	-56.75	
ALL	RF IN/OUT	2000	-63	-64.25	-61.75	
ALL	RF IN/OUT	2000	-68	-69.25	-66.75	
ALL	RF IN/OUT	2000	-73	-74.25	-71.75	
ALL	RF IN/OUT	2000	-78	-79.25	-76.75	
ALL	RF IN/OUT	2000	-83	-84.25	-81.75	
ALL	RF IN/OUT	2000	-88	-89.25	-86.75	
ALL	RF IN/OUT	2000	-93	-94.25	-91.75	
ALL	RF IN/OUT	2000	-98	-99.25	-96.75	
ALL	RF IN/OUT	2000	-103	-104.25	-101.75	
ALL	RF IN/OUT	2000	-108	-109.25	-106.75	
ALL	RF IN/OUT	2000	-113	-114.25	-111.75	
ALL	RF IN/OUT	2000	-118	-119.25	-116.75	

RF Generator Harmonics Spectral Purity Performance Test 6 Record

For test procedure, see “RF Generator Harmonics Spectral Purity Performance Test 6” on page 163.

Table 7-6 RF Generator Harmonics Spectral Purity Test 6 Record

Applicable Firmware Revision	Level (dBm)	RF Freq (MHz)	Harmonic Number	Harmonic Limits (dBc)	
				Upper	Actual
≤A.02.XX	-10	30	2nd	-18.000	
≤A.02.XX	-10	30	3rd	-18.000	
≤A.02.XX	-10	50	2nd	-18.000	
≤A.02.XX	-10	50	3rd	-18.000	
≤A.02.XX	-10	100	2nd	-18.000	
≤A.02.XX	-10	100	3rd	-18.000	
≤A.02.XX	-10	200	2nd	-18.000	
≤A.02.XX	-10	200	3rd	-18.000	
≤A.02.XX	-10	300	2nd	-18.000	
≤A.02.XX	-10	300	3rd	-18.000	
≤A.02.XX	-10	400	2nd	-18.000	
≤A.02.XX	-10	400	3rd	-18.000	
≤A.02.XX	-10	500	2nd	-18.000	
≤A.02.XX	-10	500	3rd	-18.000	
≤A.02.XX	-10	600	2nd	-18.000	
≤A.02.XX	-10	600	3rd	-18.000	
≤A.02.XX	-10	700	2nd	-18.000	
≤A.02.XX	-10	700	3rd	-18.000	
ALL	-10	800	2nd	-18.000	
ALL	-10	800	3rd	-18.000	
ALL	-10	900	2nd	-18.000	
ALL	-10	900	3rd	-18.000	
ALL	-10	1000	2nd	-18.000	

RF Generator Harmonics Spectral Purity Performance Test 6 Record

Applicable Firmware Revision	Level (dBm)	RF Freq (MHz)	Harmonic Number	Harmonic Limits (dBc)	
				Upper	Actual
ALL	-10	1000	3rd	-18.000	
ALL	-10	1700	2nd	-18.000	
ALL	-10	1700	3rd	-18.000	
ALL	-10	1800	2nd	-18.000	
ALL	-10	1800	3rd	-18.000	
ALL	-10	1900	2nd	-18.000	
ALL	-10	1900	3rd	-18.000	
ALL	-10	2000	2nd	-18.000	
ALL	-10	2000	3rd	-18.000	
ALL	-11	30	2nd	-18.000	
ALL	-11	30	3rd	-18.000	
ALL	-11	50	2nd	-18.000	
ALL	-11	50	3rd	-18.000	
ALL	-11	100	2nd	-18.000	
ALL	-11	100	3rd	-18.000	
ALL	-11	200	2nd	-18.000	
ALL	-11	200	3rd	-18.000	
ALL	-11	300	2nd	-18.000	
ALL	-11	300	3rd	-18.000	
ALL	-11	400	2nd	-18.000	
ALL	-11	400	3rd	-18.000	
ALL	-11	500	2nd	-18.000	
ALL	-11	500	3rd	-18.000	
ALL	-11	600	2nd	-18.000	
ALL	-11	600	3rd	-18.000	
ALL	-11	700	2nd	-18.000	
ALL	-11	700	3rd	-18.000	
ALL	-11	800	2nd	-18.000	
ALL	-11	800	3rd	-18.000	

Performance Test Records

RF Generator Harmonics Spectral Purity Performance Test 6 Record

Applicable Firmware Revision	Level (dBm)	RF Freq (MHz)	Harmonic Number	Harmonic Limits (dBc)	
				Upper	Actual
ALL	-11	900	2nd	-18.000	
ALL	-11	900	3rd	-18.000	
ALL	-11	1000	2nd	-18.000	
ALL	-11	1000	3rd	-18.000	
ALL	-12	1700	2nd	-18.000	
ALL	-12	1700	3rd	-18.000	
ALL	-12	1800	2nd	-18.000	
ALL	-12	1800	3rd	-18.000	
ALL	-12	1900	2nd	-18.000	
ALL	-12	1900	3rd	-18.000	
ALL	-12	2000	2nd	-18.000	
ALL	-12	2000	3rd	-18.000	

RF Generator Spurious Spectral Purity Performance Test 7 Record

For test procedure, see “RF Generator Spurious Spectral Purity Performance Test 7” on page 165.

Table 7-7

RF Generator Spurious Spectral Purity Test 7 Record

Spurious Source	RF Freq (MHz)	Spur Freq (MHz)	Spurious Signal Limits (dBc)	
			Upper	Actual
Supply	1000	1080	−60.00	
Supply	1000	999.89	−60.00	
Supply	1000	1130	−60.00	
Supply	1800	1880	−55.00	
Supply	1800	1799.89	−55.00	
Supply	1800	1930	−55.00	
1 Gz Mix	999.9995	1000.0145	−60.00	
1 Gz Mix	999.9995	999.9795	−60.00	
1 Gz Mix	999.9995	1000.0245	−60.00	
MX +1G	1700	2700	−55.00	
MX +1G	1799	2799	−55.00	
MX +.8G	1850	2650	−55.00	
FDTH1X	1799	1000	−55.00	
FDTH1X	1850	800	−55.00	
DCDMA	1700	1.2288	−55.00	
DCDMA	1850	1.2288	−55.00	
DREF5	1700	5	−55.00	
DREF5	1850	5	−55.00	
MX +CDMA	1700	1701.2288	−55.00	
MX -CDMA	1700	1698.7712	−55.00	
MX +CDMA	1850	1851.2288	−55.00	
MX -CDMA	1850	1848.7712	−55.00	
MX +REF5	1700	1705	−55.00	

Performance Test Records

RF Generator Spurious Spectral Purity Performance Test 7 Record

Spurious Source	RF Freq (MHz)	Spur Freq (MHz)	Spurious Signal Limits (dBc)	
			Upper	Actual
MX -REF5	1700	1695	-55.00	
MX +REF5	1850	1855	-55.00	
MX -REF5	1850	1845	-55.00	

AF Generator AC Level Accuracy Performance Test 8 Record

For test procedure, see “AF Analyzer AC Level Accuracy Performance Test 12”
on page 171.

Table 7-8 AF Generator AC Level Accuracy Test 8 Record

AF Generator	Frequency (Hz)	Level (mV)	AC Level Limits (mV)		
			Lower	Upper	Actual
1	25000	4000	3885.000	4115.000	
1	25000	700	682.500	717.500	
1	25000	75	70.000	80.000	
1	10000	4000	3885.000	4115.000	
1	10000	700	682.500	717.500	
1	10000	75	70.000	80.000	
1	1000	4000	3885.000	4115.000	
1	1000	700	682.500	717.500	
1	1000	75	70.000	80.000	
1	100	4000	3885.000	4115.000	
1	100	700	682.500	717.500	
1	100	75	70.000	80.000	
2	25000	4000	3885.000	4115.000	
2	25000	700	682.500	717.500	
2	25000	75	70.000	80.000	
2	10000	4000	3885.000	4115.000	
2	10000	700	682.500	717.500	
2	10000	75	70.000	80.000	
2	1000	4000	3885.000	4115.000	
2	1000	700	682.500	717.500	
2	1000	75	70.000	80.000	

Performance Test Records

AF Generator AC Level Accuracy Performance Test 8 Record

AF Generator	Frequency (Hz)	Level (mV)	AC Level Limits (mV)		
			Lower	Upper	Actual
2	100	4000	3885.000	4115.000	
2	100	700	682.500	717.500	
2	100	75	70.000	80.000	

AF Generator DC Level Accuracy Performance Test 9 Record

For test procedure, see “AF Generator DC Level Accuracy Performance Test 9” on [page 168](#).

Table 7-9 **AF Generator DC Level Accuracy Test 9 Record**

AF Generator	Level (mV)	DC Level Limits (mV)		
		Lower	Upper	Actual
1	4000	3870.000	4130.000	
1	1000	975.000	1025.000	
2	4000	3870.000	4130.000	
2	1000	975.000	1025.000	

AF Generator Residual Distortion Performance Test 10 Record

For test procedure, see “AF Generator Residual Distortion Performance Test 10”
on page 169.

Table 7-10

AF Generator Residual Distortion Test 10 Record

AF Generator	Frequency (Hz)	Level (mV)	Distortion Limits (%)	
			Upper	Actual
1	25000	4000	0.125	
1	25000	2000	0.125	
1	25000	200	0.125	
1	10000	4000	0.125	
1	10000	2000	0.125	
1	10000	200	0.125	
1	1000	4000	0.125	
1	1000	2000	0.125	
1	1000	200	0.125	
1	100	4000	0.125	
1	100	2000	0.125	
1	100	200	0.125	
2	25000	4000	0.125	
2	25000	2000	0.125	
2	25000	200	0.125	
2	10000	4000	0.125	
2	10000	2000	0.125	
2	10000	200	0.125	
2	1000	4000	0.125	
2	1000	2000	0.125	
2	1000	200	0.125	

AF Generator Residual Distortion Performance Test 10 Record

AF Generator	Frequency (Hz)	Level (mV)	Distortion Limits (%)	
			Upper	Actual
2	100	4000	0.125	
2	100	2000	0.125	
2	100	200	0.125	

AF Generator Frequency Accuracy Performance Test 11 Record

For test procedure, see “AF Generator Frequency Accuracy Performance Test 11” on page 170.

Table 7-11

AF Generator Frequency Accuracy Test 11 Record

AF Generator	Frequency (Hz)	Frequency Limits (Hz)		
		Lower	Upper	Actual
1	25000	24993.750	25006.250	
1	10000	9997.500	10002.500	
1	5000	4998.750	500.125	
1	2000	1999.500	2000.500	
1	1000	999.750	1000.250	
1	500	499.875	500.125	
1	200	199.950	200.050	
1	100	99.975	100.025	
1	50	49.988	50.012	
1	20	19.995	20.005	
2	25000	24993.750	25006.250	
2	10000	9997.500	10002.500	
2	5000	4998.750	500.125	
2	2000	1999.500	2000.500	
2	1000	999.750	1000.250	
2	500	499.875	500.125	
2	200	199.950	200.050	
2	100	99.975	100.025	
2	50	49.988	50.012	
2	20	19.995	20.005	

AF Analyzer AC Level Accuracy Performance Test 12 Record

For test procedure, see [“AF Analyzer AC Level Accuracy Performance Test 12”](#)
on page 171.

Table 7-12

AF Analyzer AC Voltage Accuracy Test 12 Record

Frequency (Hz)	Level (mV)	AC Voltage Limits (mV)		
		Lower	Upper	Actual
15000	5000	4850.00	5150.00	
2000	5000	4850.00	5150.00	
200	5000	4850.00	5150.00	
20	5000	4850.00	5150.00	
15000	500	485.00	515.00	
2000	500	485.00	515.00	
200	500	485.00	515.00	
20	500	485.00	515.00	
15000	50	48.50	51.50	
2000	50	48.50	51.50	
200	50	48.50	51.50	
20	50	48.50	51.50	

AF Analyzer Residual Noise Performance Test 13 Record

For test procedure, see “AF Analyzer Residual Noise Performance Test 13” on [page 172](#).

Table 7-13

AF Analyzer Residual Noise Test 13 Record

Residual Noise Limits (μV)		
Filter 2	Upper	Actual
15 kHz LPF	150	
>99 kHz LP	450	

AF Analyzer Distortion and SINAD Accuracy Performance Test 14 Record

AF Analyzer Distortion and SINAD Accuracy Performance Test 14 Record

For test procedure, see “AF Analyzer Distortion and SINAD Accuracy Performance Test 14” on page 173.

Table 7-14 AF Analyzer Distortion and SINAD Accuracy Test 14 Record

AF Generator 2 Frequency (kHz)	AF Generator 2 Level (mV)	Measurement Type	Distortion and SINAD Limits		
			Lower	Upper	Actual
2	100	Distortion	8.856 %	11.144 %	
2	100	SINAD	19.043 dB	21.043 dB	
3	100	Distortion	8.856 %	11.144 %	
3	100	SINAD	19.043 dB	21.043 dB	
2	10	Distortion	0.890 %	1.120 %	
2	10	SINAD	39.000 dB	41.000 dB	
3	10	Distortion	0.890 %	1.120 %	
3	10	SINAD	39.000 dB	41.000 dB	
2	5	Distortion	0.445 %	0.560 %	
2	5	SINAD	45.021 dB	47.021 dB	
3	5	Distortion	0.445 %	0.560 %	
3	5	SINAD	45.021 dB	47.021 dB	

AF Analyzer DC Level Accuracy Performance Test 15 Record

For test procedure, see “[AF Analyzer DC Level Accuracy Performance Test 15](#)”
on page 174.

Table 7-15

AF Analyzer DC Level Accuracy Test 15 Record

AF Generator 1 Level (mV)	DC Voltage Limits (mV)		
	Lower	Upper	Actual
5000	4905.000	5095.000	
500	450.000	550.000	

AF Analyzer Frequency Accuracy to 100 kHz Performance Test 16 Record

For test procedure, see “AF Analyzer Frequency Accuracy to 100 kHz
Performance Test 16” on page 175.

Table 7-16

AF Analyzer Frequency Accuracy to 100 kHz Test 16 Record

Frequency (Hz)	Frequency Limits (Hz)		
	Lower	Upper	Actual
21	20.896	21.104	
100	99.880	100.120	
1000	999.700	1000.300	
10000	9997.90	10002.10	
100000	99979.9	100020.1	

AF Analyzer Frequency Accuracy at 400 kHz Performance Test 17 Record

For test procedure, see “AF Analyzer Frequency Accuracy at 400 kHz
Performance Test 17” on page 176.

Table 7-17

AF Analyzer Frequency Accuracy at 400 kHz Test 17 Record

Frequency Difference Limits (kHz)		
Lower	Upper	Actual
–0.080	0.080	

Oscilloscope Amplitude Accuracy Performance Test 18 Record

For test procedure, see “Oscilloscope Amplitude Accuracy Performance Test 18”
on page 177.

Table 7-18

Oscilloscope Amplitude Accuracy Test 18 Record

Frequency (kHz)	Amplitude Limits (V)		
	Lower	Upper	Actual
1	6.765	7.377	
10	6.765	7.377	
50	5.000	10.000	

RF Analyzer Level Accuracy Performance Test 19 Record

For test procedure, see “RF Analyzer Level Accuracy Performance Test 19” on page 179.

Table 7-19 RF Analyzer Level Accuracy Test 19 Record

Applicable Firmware Revision	Frequency (MHz)	Level Difference Limits (dB)		
		Lower	Upper	Actual
≤A.02.XX	30	−0.314	0.314	
≤A.02.XX	50	−0.314	0.314	
≤A.02.XX	100	−0.314	0.314	
≤A.02.XX	150	−0.314	0.314	
≤A.02.XX	200	−0.314	0.314	
≤A.02.XX	250	−0.314	0.314	
≤A.02.XX	300	−0.314	0.314	
≤A.02.XX	350	−0.314	0.314	
≤A.02.XX	400	−0.314	0.314	
≤A.02.XX	450	−0.314	0.314	
≤A.02.XX	500	−0.314	0.314	
≤A.02.XX	550	−0.314	0.314	
≤A.02.XX	600	−0.314	0.314	
≤A.02.XX	650	−0.314	0.314	
≤A.02.XX	700	−0.314	0.314	
≤A.02.XX	750	−0.314	0.314	
ALL	800	−0.314	0.314	
ALL	850	−0.314	0.314	
ALL	900	−0.314	0.314	
ALL	950	−0.314	0.314	
ALL	1000	−0.314	0.314	
ALL	1700	−0.334	0.334	
ALL	1725	−0.334	0.334	

RF Analyzer Level Accuracy Performance Test 19 Record

Applicable Firmware Revision	Frequency (MHz)	Level Difference Limits (dB)		
		Lower	Upper	Actual
ALL	1750	−0.334	0.334	
ALL	1775	−0.334	0.334	
ALL	1800	−0.334	0.334	
ALL	1825	−0.334	0.334	
ALL	1850	−0.334	0.334	
ALL	1875	−0.334	0.334	
ALL	1900	−0.334	0.334	
ALL	1925	−0.334	0.334	
ALL	1950	−0.334	0.334	
ALL	1975	−0.334	0.334	
ALL	2000	−0.334	0.334	

RF Analyzer FM Accuracy Performance Test 20 Record

For test procedure, see [“RF Analyzer FM Accuracy Performance Test 20”](#) on page 180.

Table 7-20

RF Analyzer FM Accuracy Test 20 Record

RF (MHz)	Deviation (kHz)	Rate (Hz)	FM Deviation Limits (kHz)		
			Lower	Upper	Actual
840	1	1	0.950	1.050	
840	1	10	0.950	1.050	
840	10	1	9.500	10.500	
840	10	10	9.500	10.500	
1000	1	1	0.950	1.050	
1000	1	10	0.950	1.050	
1000	10	1	9.500	10.500	
1000	10	10	9.500	10.500	

RF Analyzer FM Distortion Performance Test 21 Record

For test procedure, see “RF Analyzer FM Distortion Performance Test 21” on page 182.

Table 7-21

RF Analyzer FM Distortion Test 21 Record

FM Deviation (kHz)	FM Distortion Limits (%)	
	Upper	Actual
5	1.000	
25	1.000	
75	1.000	

RF Analyzer FM Bandwidth Performance Test 22 Record

For test procedure, see “RF Analyzer FM Bandwidth Performance Test 22” on [page 184](#).

Table 7-22

RF Analyzer FM Bandwidth Test 22 Record

FM Deviation Difference Limits (dB)	
Upper	Actual
3.0	

RF Analyzer Residual FM Performance Test 23 Record

For test procedure, see “RF Analyzer Residual FM Performance Test 23” on page 186.

Table 7-23

RF Analyzer Residual FM Test 23 Record

RF (MHz)	FM Deviation Limits (Hz)	
	Upper	Actual
840	7.0	
1800	14.0	

Spectrum Analyzer Image Rejection Performance Test 24 Record

For test procedure, see “[Spectrum Analyzer Image Rejection Performance Test 24](#)” on page 188.

Table 7-24 Spectrum Analyzer Image Rejection (Image) Test 24 Record

Applicable Firmware Revision	RF Generator Frequency (MHz)	Spectrum Analyzer Frequency (MHz)	Image Response Limits (dB)	
			Upper	Actual
≤A.02.XX	1229	0.4	–47	
≤A.02.XX	1379.6	151	–47	
≤A.02.XX	616.6	385	–47	
≤A.02.XX	873.6	645	–47	
≤A.02.XX	883.6	655	–47	
≤A.02.XX	1023.6	795	–47	
≤A.02.XX	1000	771.4	–47	
ALL	928.6	1700	–47	
ALL	1078.6	1850	–47	
ALL	2078.6	1850	–47	
ALL	1227.6	1999	–47	
ALL	576.4	805	–47	
ALL	771.4	1000	–47	
ALL	1228.6	2000	–47	

CDMA Generator RF IN/OUT Amplitude Level Accuracy Performance Test 25 Record

CDMA Generator RF IN/OUT Amplitude Level Accuracy Performance Test 25 Record

For test procedure, see “CDMA Generator RF IN/OUT Amplitude Level Accuracy Performance Test 25” on page 190.

Table 7-25

CDMA Generator RF In/Out Test 25 Record

Sector	RF (MHz)	Level (dBm)	Measured Level Limits (dBm)		
			Lower	Upper	Actual
A	881.52	−20.50	−21.75	−19.25	
A	881.52	−25.49	−26.74	−24.24	
B	881.52	−20.50	−21.75	−19.25	
B	881.52	−25.49	−26.74	−24.24	
A	1956.25	−21.50	−22.85	−20.15	
A	1956.25	−26.49	−27.84	−25.14	
B	1956.25	−21.50	−22.85	−20.15	
B	1956.25	−26.49	−27.84	−25.14	

CDMA Generator DUPLEX OUT Amplitude Level Accuracy Performance Test 26

For test procedure, see “CDMA Generator DUPLEX OUT Amplitude Level Accuracy Performance Test 26” on page 192.

Table 7-26 CDMA Generator DUPLEX OUT Sector B Power Level Accuracy Test 26 Record

RF Freq. (MHz)	Level (dBm)	Measured Level Limits (dBm)		
		Lower	Upper	Actual
840	−10.50	−11.75	−9.25	
840	−15.49	−16.74	−14.24	
1890.52	−11.50	−12.85	−10.15	
1890.52	−16.49	−17.84	−15.14	

Table 7-27 CDMA Generator DUPLEX OUT AWGN Power Level Accuracy Test 26 Record

RF Freq. (MHz)	Level (dBm)	Measured Level Limits (dBm)		
		Lower	Upper	Actual
840	−7.50	−9.25	−5.75	
840	−9	−10.75	−7.25	
1890.52	−7.50	−9.35	−5.65	
1890.52	−9	−10.85	−9.15	

CDMA Generator Modulation Accuracy Performance Test 27 Record

For test procedure, see “CDMA Generator Modulation Accuracy Performance Test 27” on page 194.

Table 7-28

CDMA Generator Modulation Accuracy Test 27 Record

RF (MHz)	Level (dBm)	Measured EVM (%rms)	Calculated Rho	
			Lower Limit	Actual
881.52	–10		0.97	
1956.25	–10		0.97	

CDMA Analyzer Average Power Level Accuracy Performance Test 28 Record

For test procedure, see “[CDMA Analyzer Average Power Level Accuracy Performance Test 28](#)” on page 196.

Table 7-29

CDMA Analyzer Average Power Level Accuracy Test 28 Record

RF (MHz)	Level (dBm)	Measured Level Limits (mW)		
		Lower	Upper	Actual
881.52	0	-0.343	0.318	
881.52	-10	-10.39	-9.65	
1956.25	0	-0.366	0.338	
1956.25	-10	-10.41	-9.63	

CDMA Analyzer Channel Power Level Accuracy Performance Test 29 Record

For test procedure, see “CDMA Analyzer Channel Power Level Accuracy Performance Test 29” on page 198.

Table 7-30 CDMA Analyzer Channel Power Level Accuracy Test 29 Record

Sig. Gen. Freq. Setting (MHz)	RF Channel (MHz)	Level (dBm)	Measured Level Limits (dBm)		
			Lower	Upper	Actual
836.52	384	11	10.25	11.75	
836.52	384	6	5.25	6.75	
836.52	384	1	0.25	1.75	
836.52	384	−4	−4.75	−3.25	
836.52	384	−9	−9.75	−8.25	
836.52	384	−14	−14.75	−13.25	
836.52	384	−19	−19.75	−18.25	
1876.52	525	11	10.25	11.75	
1876.52	525	6	5.25	6.75	
1876.52	525	1	0.25	1.75	
1876.52	525	−4	−4.75	−3.25	
1876.52	525	−9	−9.75	−8.25	
1876.52	525	−14	−14.75	−13.25	
1876.52	525	−19	−19.75	−18.25	

8 Block Diagrams

This chapter contains block diagrams and descriptions that focus on how the Test Set generates signal and performs measurements.

Signal Flow and Interconnections

Shown in [Figure 8-1, “Signal Flow and Interconnections,” on page 252](#) is a block-diagram overview of the Test Set. For details on individual assemblies refer to [Table 8-1 on page 251](#).

This chapter is organized into the following sections which provide a detailed view of each individual assembly shown in the overview:

- RF Input/Output
- RF Analyzer
- Audio Analyzer
- CDMA Analyzer
- CDMA Generator
- Audio Generator
- RF Generator
- Reference/Regulator
- Instrument Control


Input/output and switch information is included to help you determine if voltages and signals are getting to the assemblies with the proper levels, shapes, and frequencies. Line names and connector pin numbers are given on the block diagrams when applicable.

Table 8-1
Block Diagrams

Figure
Figure 8-1, "Signal Flow and Interconnections," on page 252
Figure 8-2, "RF I/O," on page 254
Figure 8-3, "Downconverter," on page 257
Figure 8-4, "Receiver Synthesizer," on page 258
Figure 8-5, "Receiver," on page 259
Figure 8-6, "Digital Cellsite 1 & 2," on page 260
Figure 8-7, "Analog Cell Site (FW Rev A.04.54 and below)," on page 261
Figure 8-8, "Analog Cell Site (FW Rev A.05.03 and above)," on page 262
Figure 8-9, "Protocol Processor," on page 263
Figure 8-10, "Spectrum Analyzer," on page 265
Figure 8-11, "Audio Analyzer 1," on page 267
Figure 8-12, "Audio Analyzer 2," on page 268
Figure 8-13, "Measurement Board," on page 269
Figure 8-14, "Signaling and Analyzer Assembly," on page 270
Figure 8-15, "IQ Modulator," on page 272
Figure 8-16, "LO/IF/Demodulator," on page 273
Figure 8-17, "Digital Signal Processor 1 (DSP1)," on page 274
Figure 8-18, "CDMA Reference," on page 276
Figure 8-19, "Signaling and Analyzer Assembly," on page 277
Figure 8-20, "Modulation Distribution," on page 278
Figure 8-21, "Signal Generator Synthesizer," on page 281
Figure 8-22, "RF Output Section," on page 282
Figure 8-23, "Upconverter," on page 283
Figure 8-24, "High Stability Reference," on page 285
Figure 8-25, "Regulator," on page 286
Figure 8-26, "Memory SBRC," on page 288
Figure 8-27, "Controller," on page 289
Figure 8-28, "Display Driver," on page 290
Figure 8-29, "GPIB/Serial," on page 291

Figure 8-1

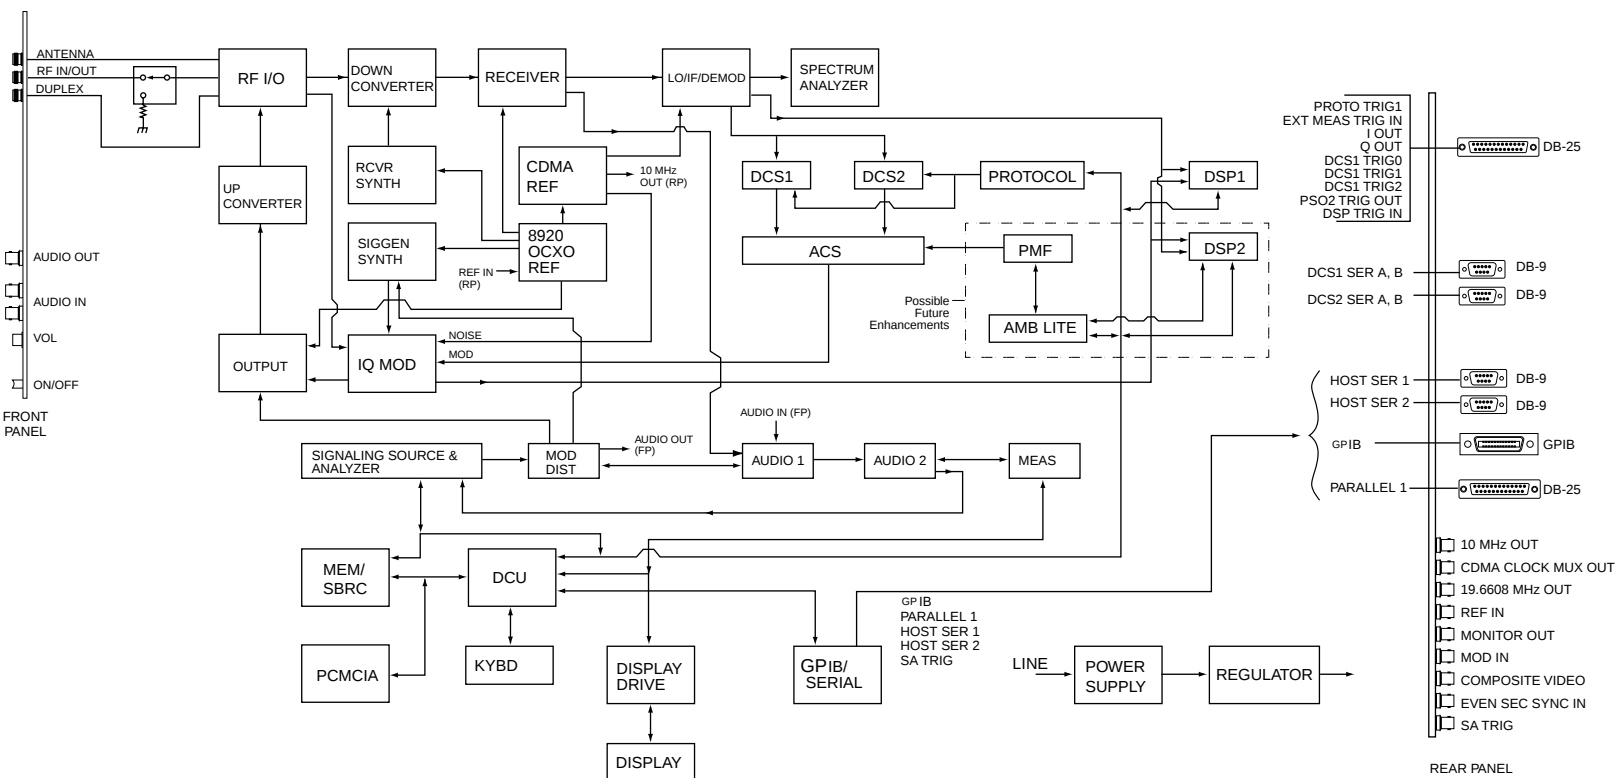Signal Flow and Interconnections



RF Input/Output Section


RF Power Measurement

An RF power measurement can only be made by supplying a signal to the RF IN/OUT port of the Test Set. See [Figure 8-2, “RF I/O,” on page 254](#). A power splitter then splits the signal between an RF analysis path and a power measurement path. The power detector has a direct path to the Receive DSP where average power measurements are made. There's also a diode peak detector to provide a peak power measurement through the Measurement assembly.

Accuracy is insured by factory-generated calibration data which is stored in CAL ROM.

Input Gain Control

Step attenuators in the RF Input/Output Section are switched in and out, manually or automatically. This keeps the input level within an optimum range for the mixers, IF amplifiers, and detectors.

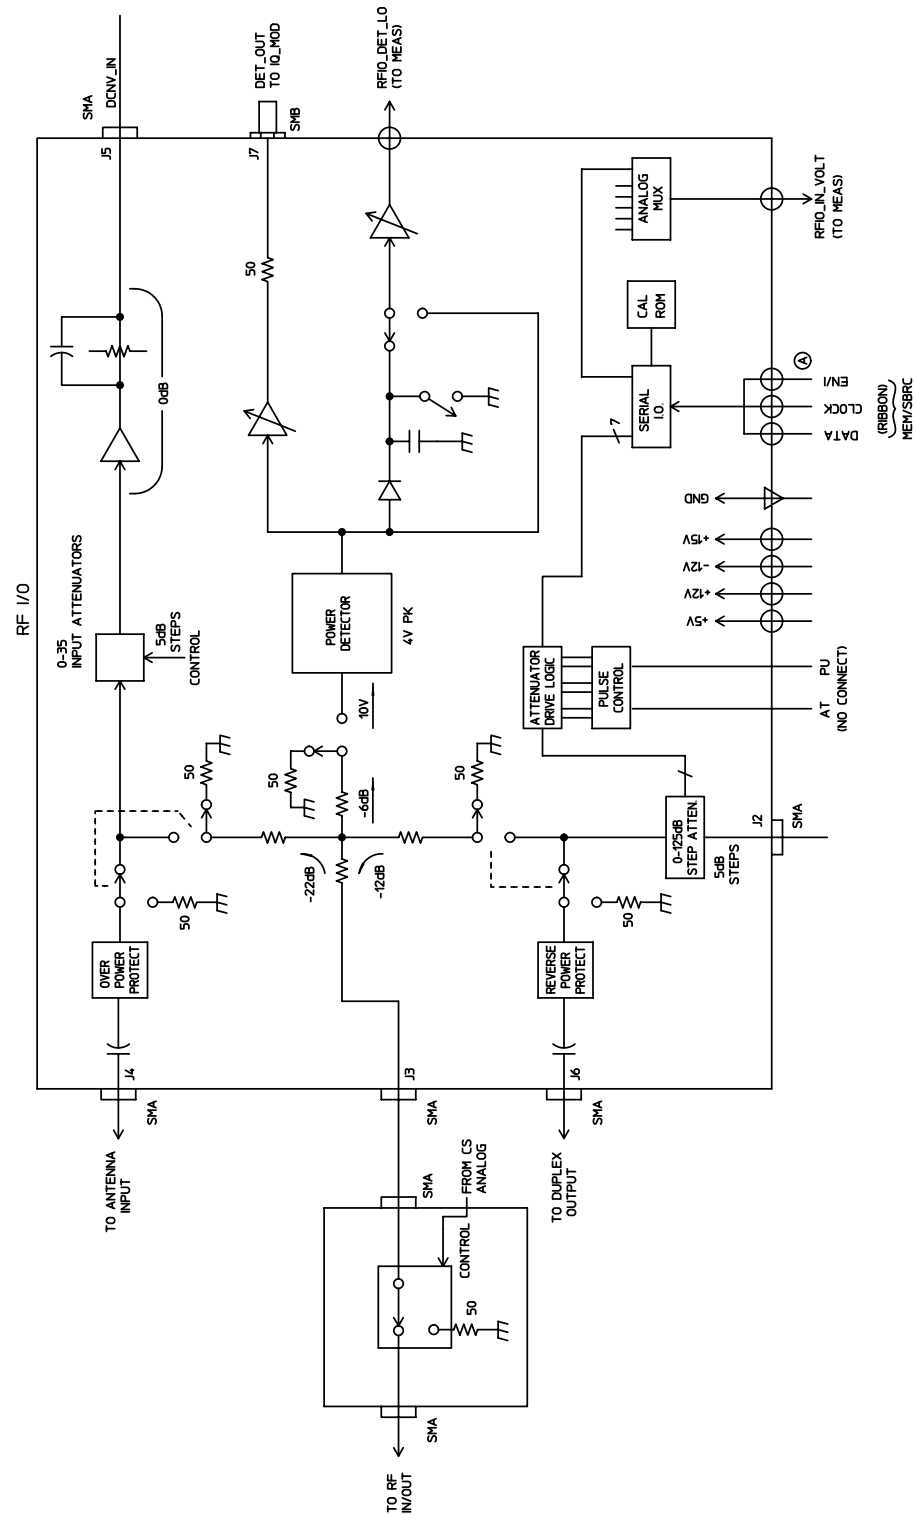Figure 8-2 RF I/O

RF Analyzer Section

Frequency Conversion

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **"Input value out of range"**, will be displayed if invalid frequencies are set.

The Downconverter, see [Figure 8-3 on page 257](#), produces an IF of 114.3, 385.7 or 614.3 MHz. The LO is provided by the Receiver Synthesizer, see [Figure 8-4 on page 258](#). The IF frequencies developed are as follows in [Table 8-2](#).

Table 8-2 Downconverter Signal Paths

Tune Frequency (MHz)	RF Filter	IF Frequency (MHz)	Conversion Module	LO Filter (LO freq range)	RSYN_500_1000M Range (MHz)
.4 to <150	150 MHz LPF	614.3	high-side LO	NA	614.7-764.3
150 to <380.7	150-386 MHz BPF	614.3	high-side LO	NA	764.3-995.0
380.7 to <650	350-650 MHz TBPF	114.3	high-side LO	NA	945.0-764.3
650 to <800	600-1000 MHz TBPF	114.3	high-side LO	NA	764.3-914.3
800 to 1000	600-1000 MHz TBPF	114.3	low-side LO	NA	685.7-885.7
1400 to <1614.3	1400-2200 MHz TBPF	385.7	high-side LO	PDC/Unlic_PCS (1600-2000 MHz)	892.85-1000.0 ^a
1614.3 to 2000	1400-2200 MHz TBPF	385.7	low-side LO	PCS (1200-1620 MHz)	614.3-807.15 ^b
>2000 to 2200	1400-2200 MHz TBPF	385.7	low-side LO	PDC/Unlic_PCS (1600-2000 MHz)	807.15-907.15 ^c

a. This LO input is doubled to 1785.7-2000 MHz prior to mixing.

b. This LO input is doubled to 1228.6-1614.3 MHz prior to mixing.

c. This LO input is doubled to 1614.3-1814.3 MHz prior to mixing.

Filters are automatically switched in to remove image and other interfering signals. The frequency ranges of the filters are as follows:

- 150 MHz low-pass
- 150 MHz - 386 MHz bandpass
- 350 MHz - 650 MHz tunable bandpass
- 650 MHz - 1000 MHz tunable bandpass
- 1400 MHz - 2200 MHz tunable bandpass

Modulation Measurement

The Receiver assembly, see [Figure 8-5 on page 259](#), demodulates the IF into its FM, AM, and SSB components. The demodulated signal is sent to the Audio Analyzer section for measurement.

Figure 8-3 Downconverter

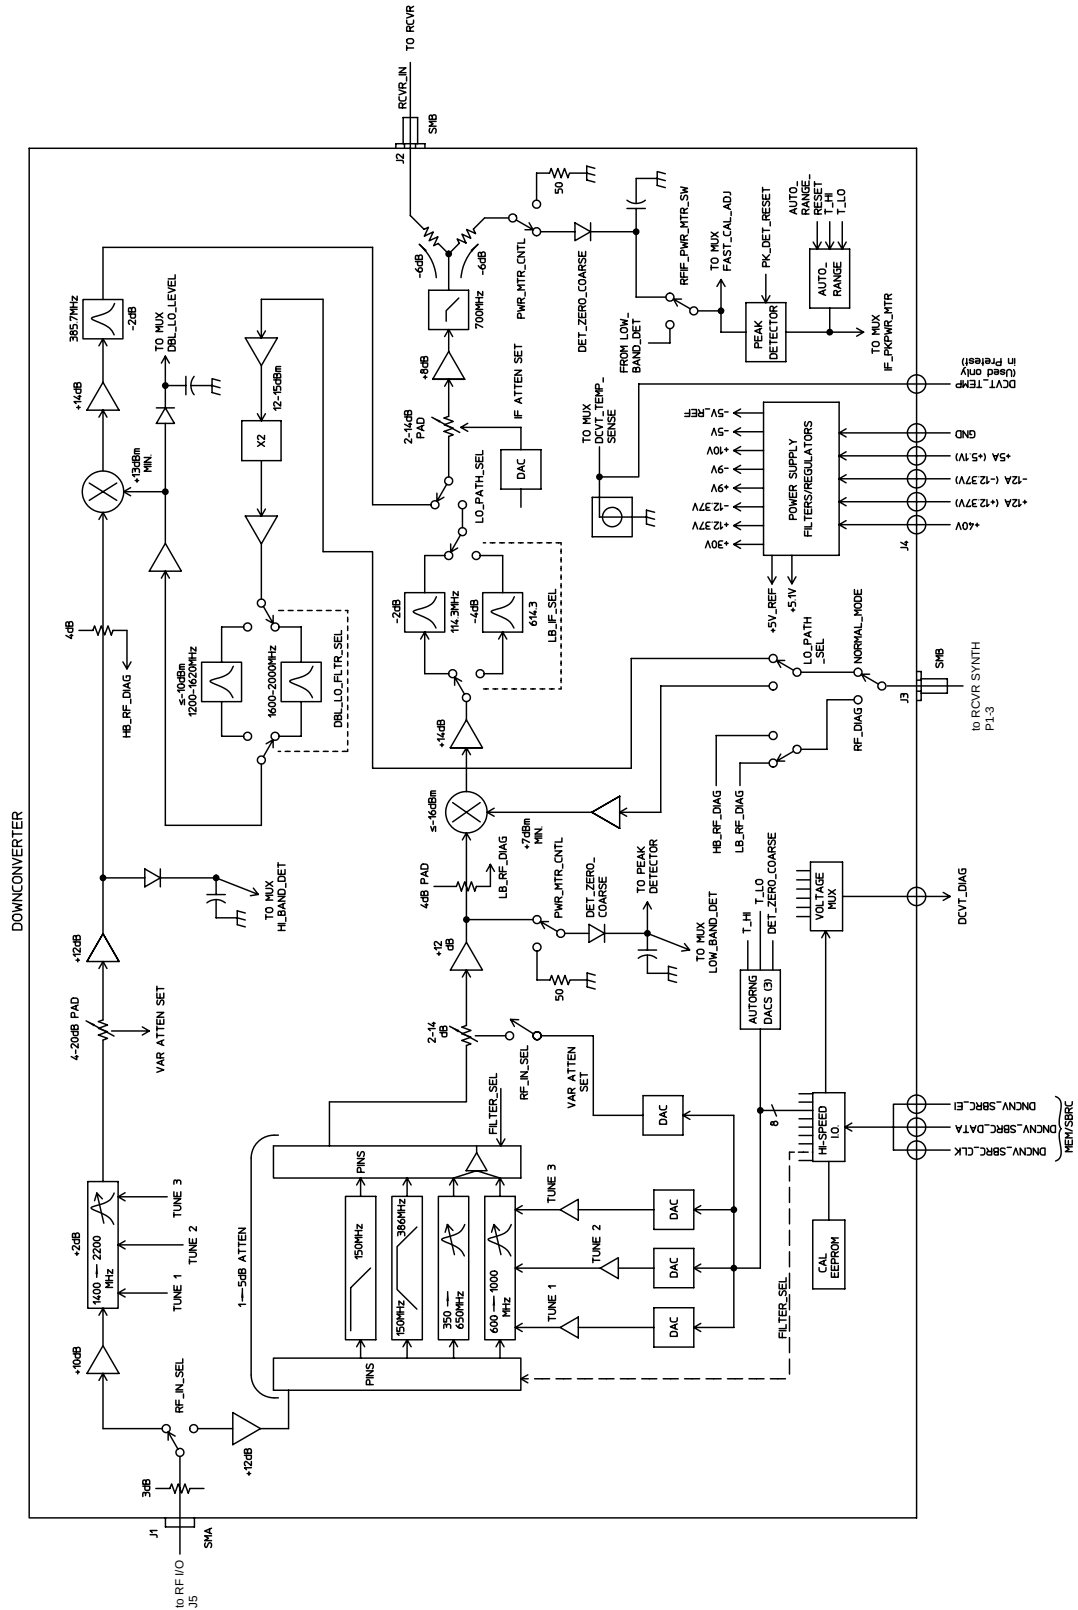



Figure 8-4 Receiver Synthesizer

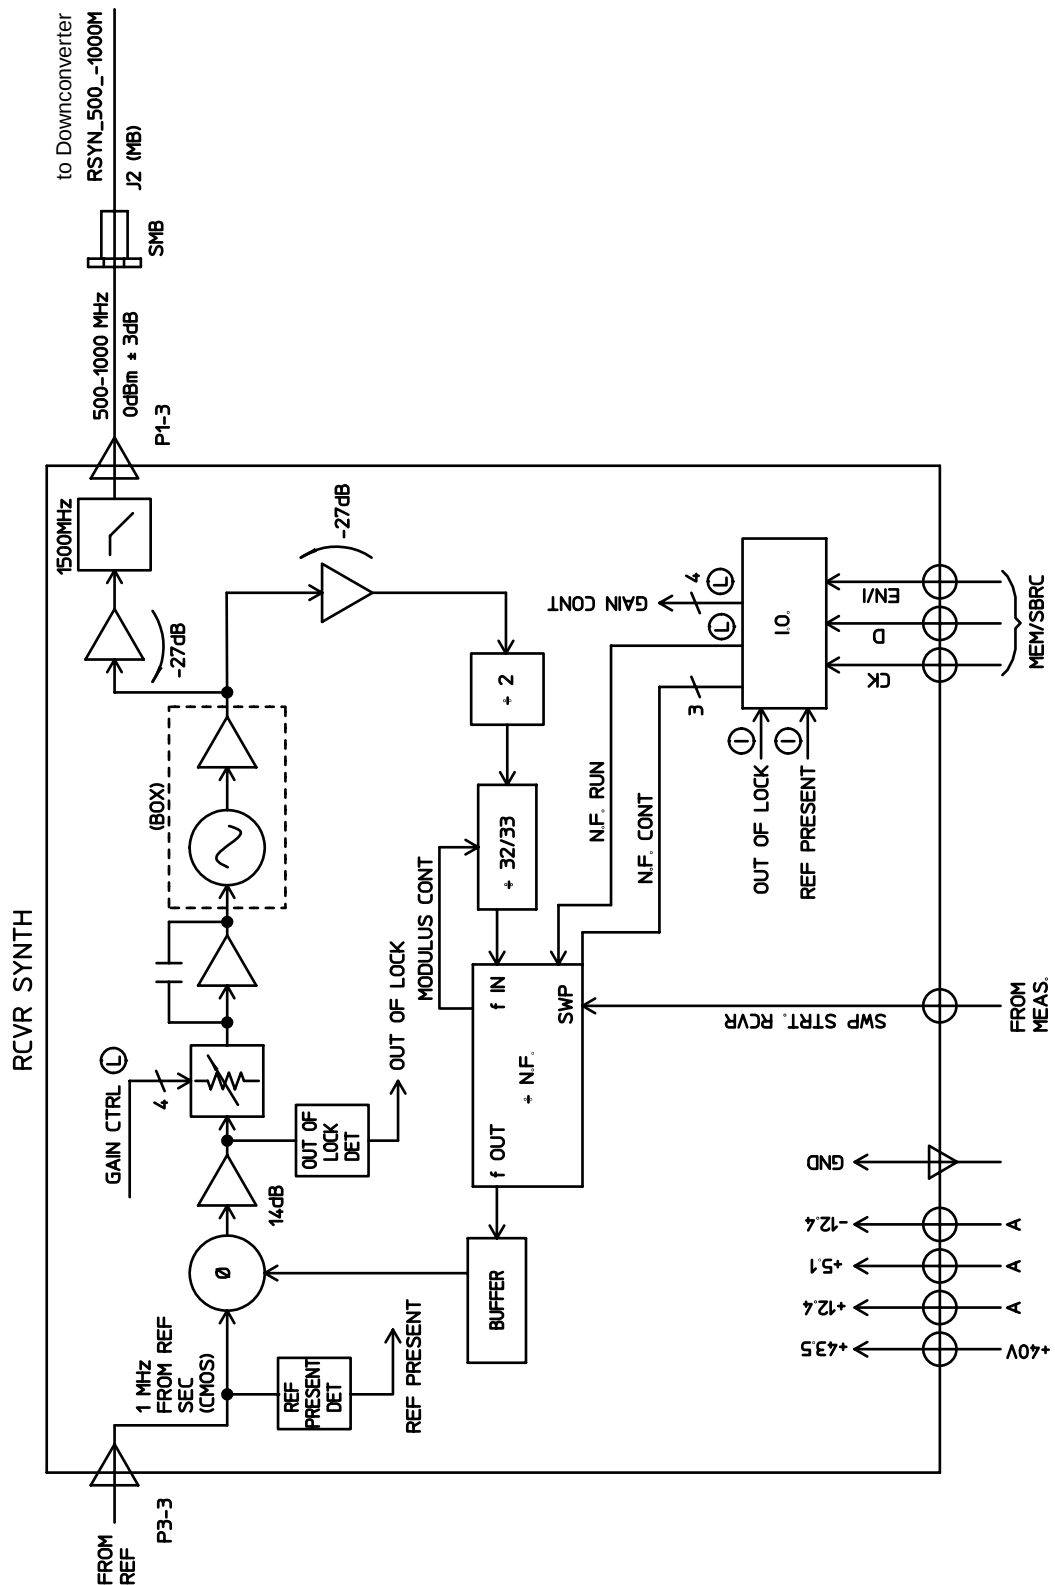Figure 8-5 Receiver

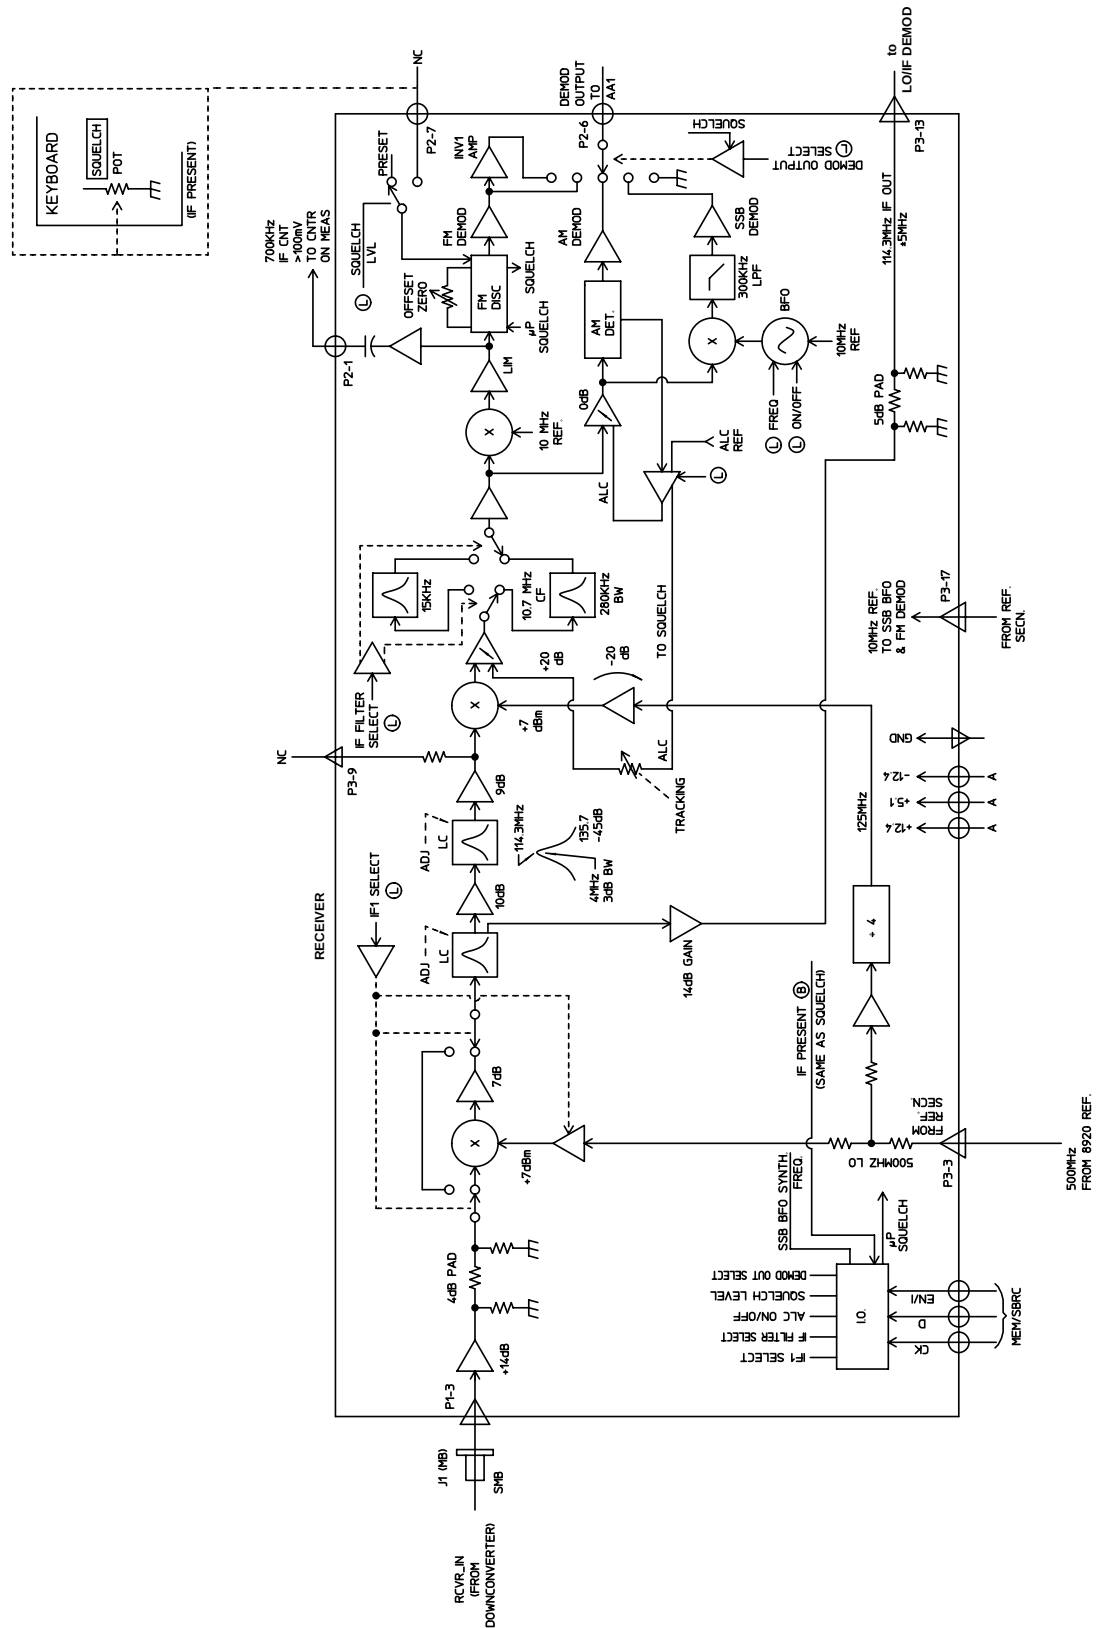


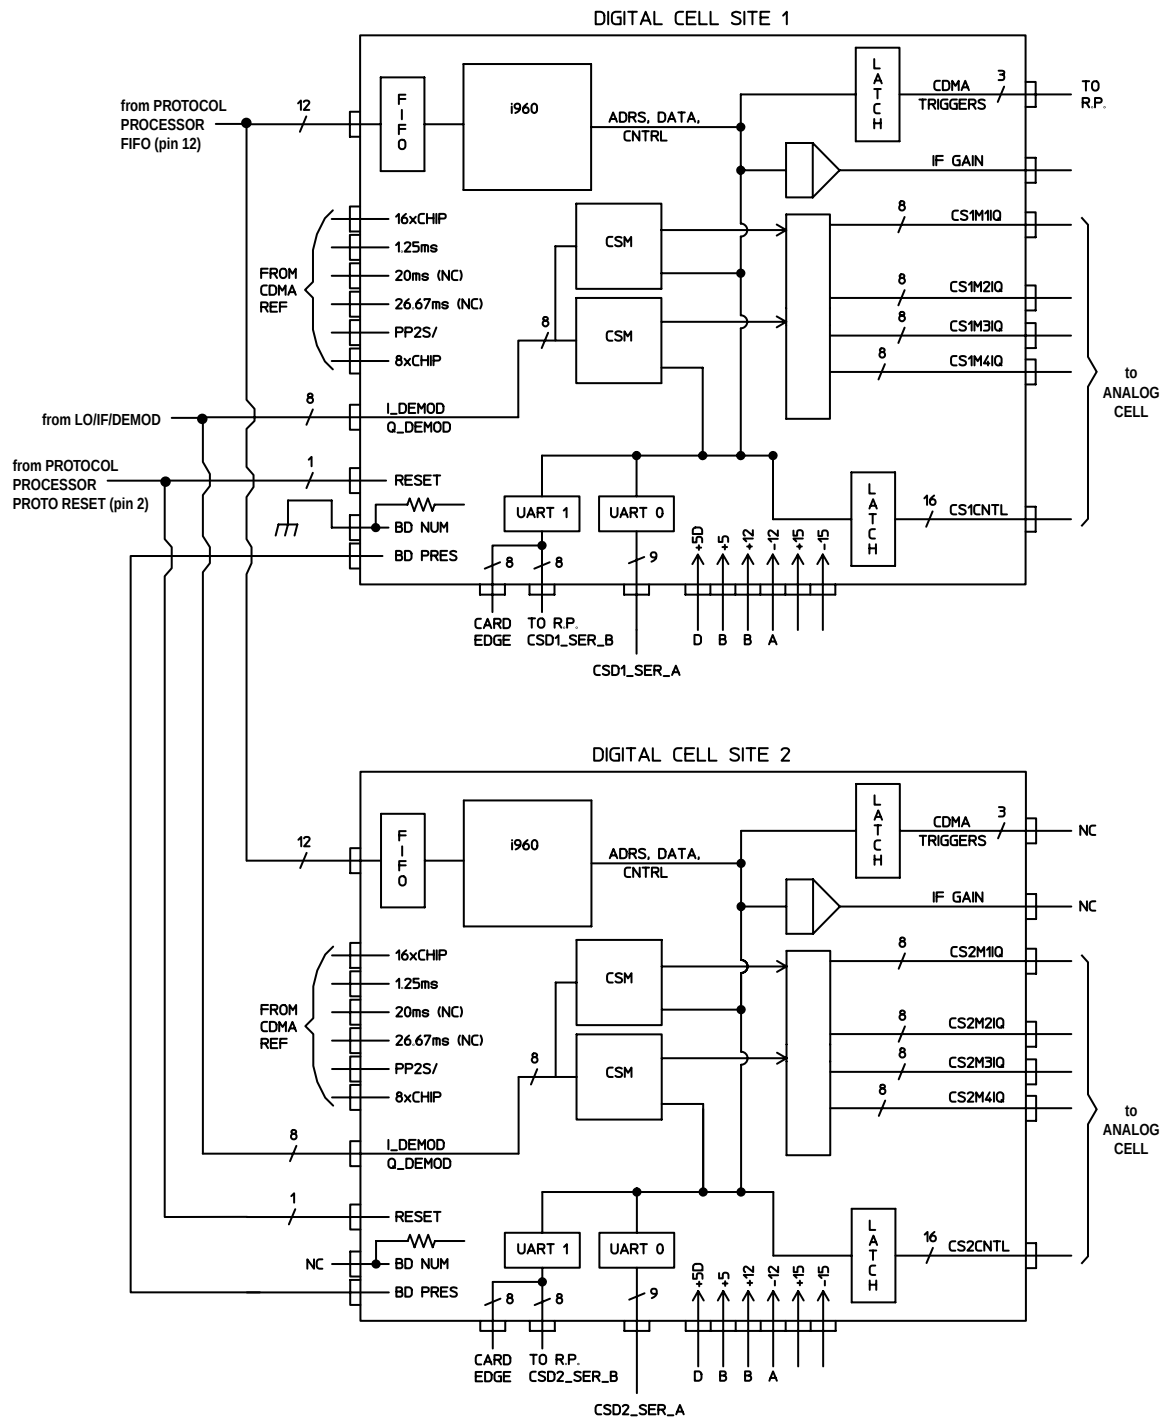
Figure 8-6 Digital Cellsite 1 & 2

Figure 8-7 **Analog Cell Site (FW Rev A.04.54 and below)**


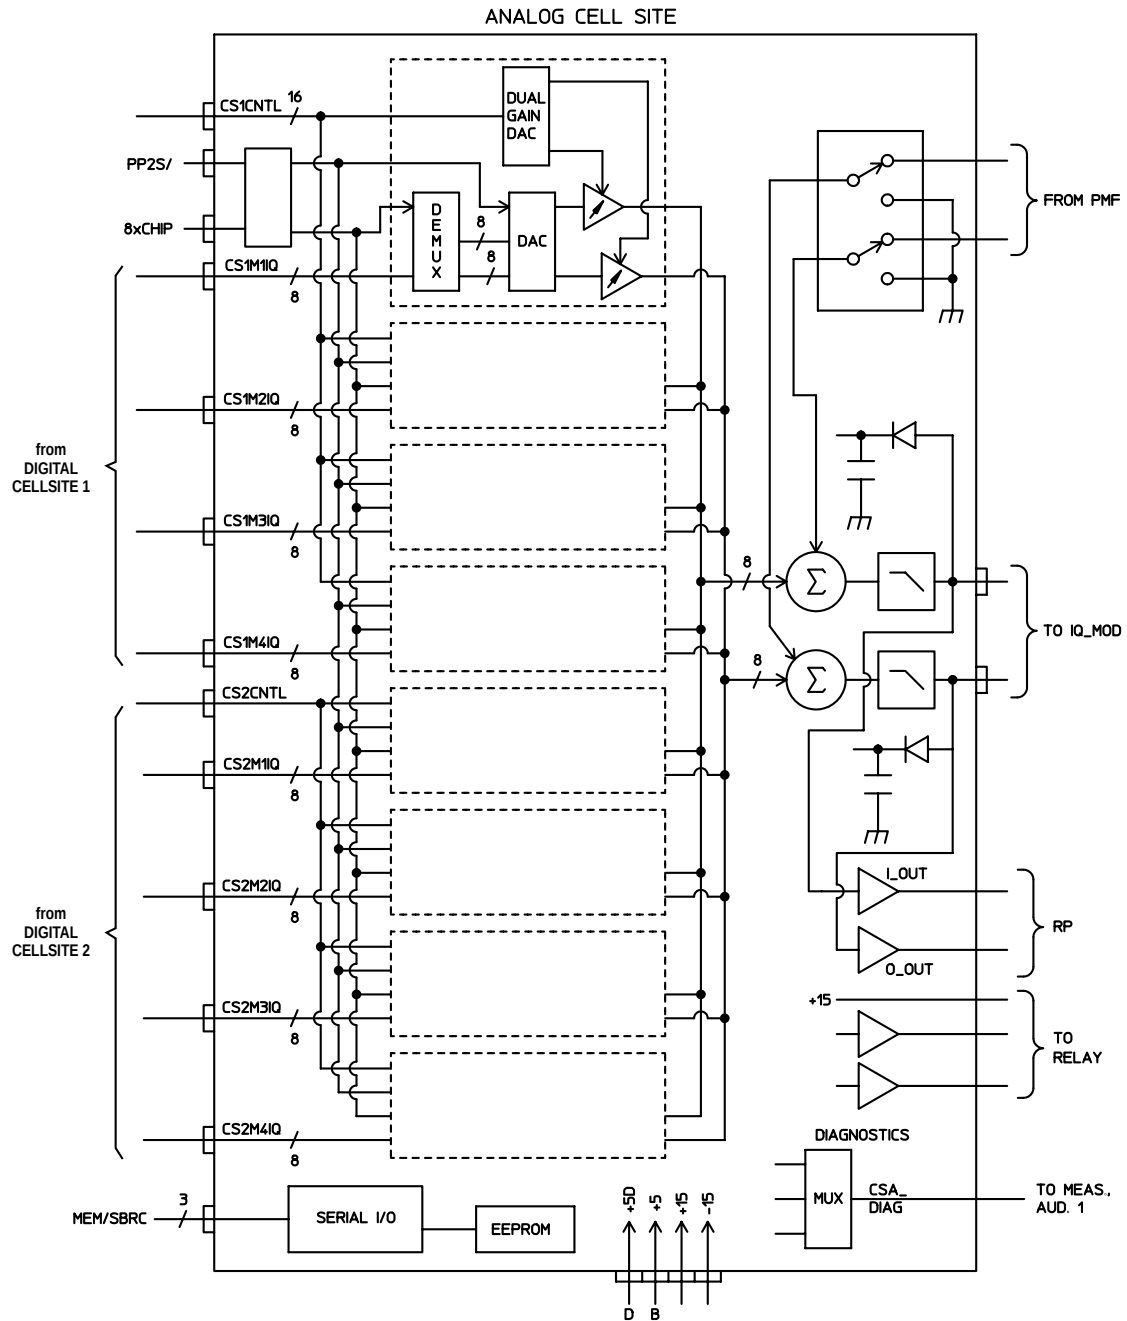
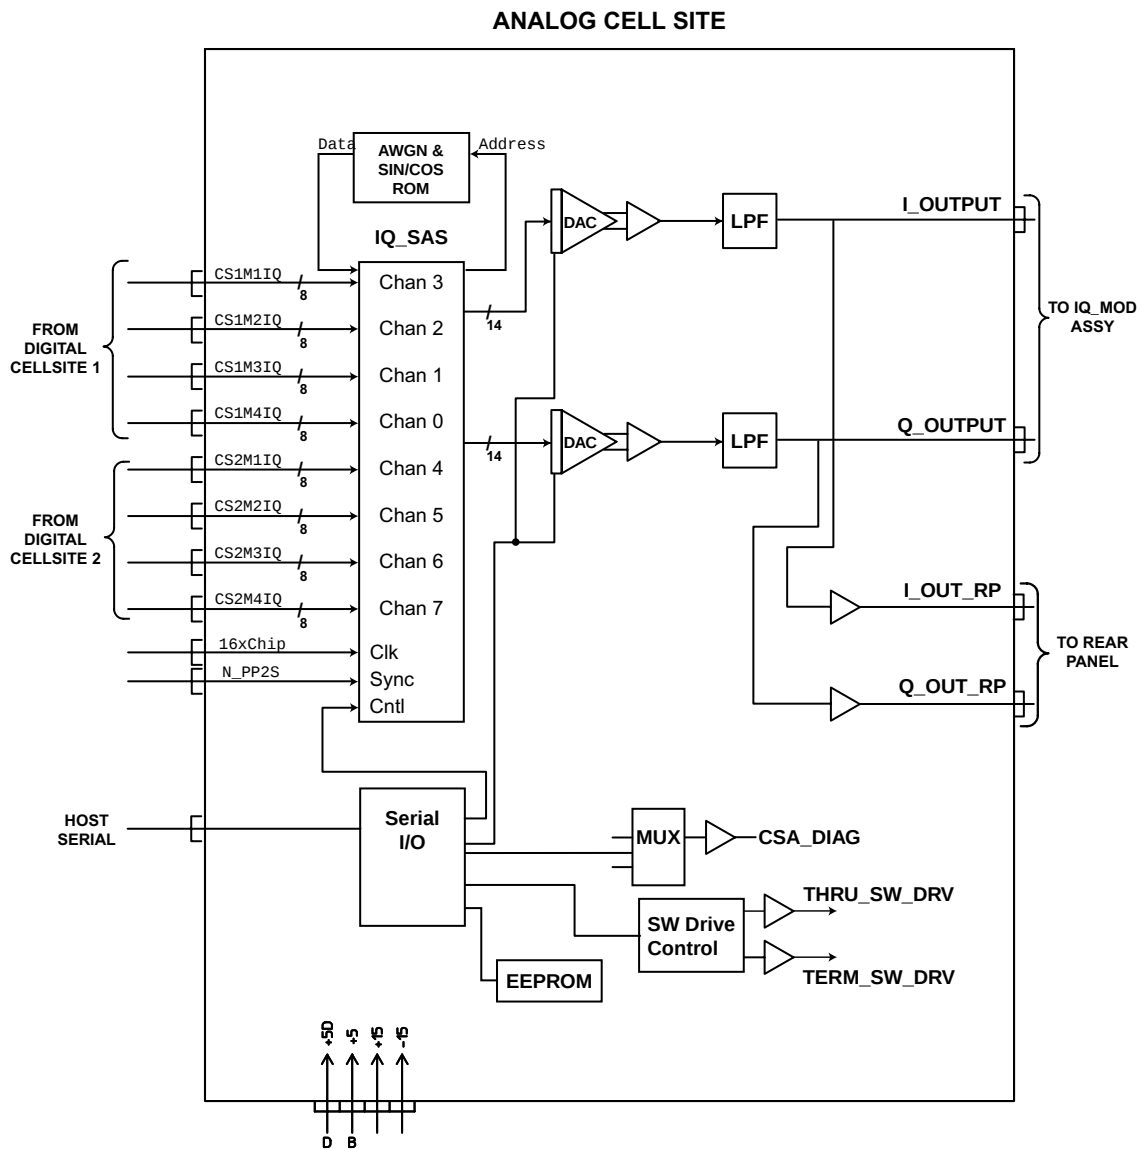


Figure 8-8 Analog Cell Site (FW Rev A.05.03 and above)

S:\agilent\8285\alr\book\graphics\analog_cellsite_new.eps

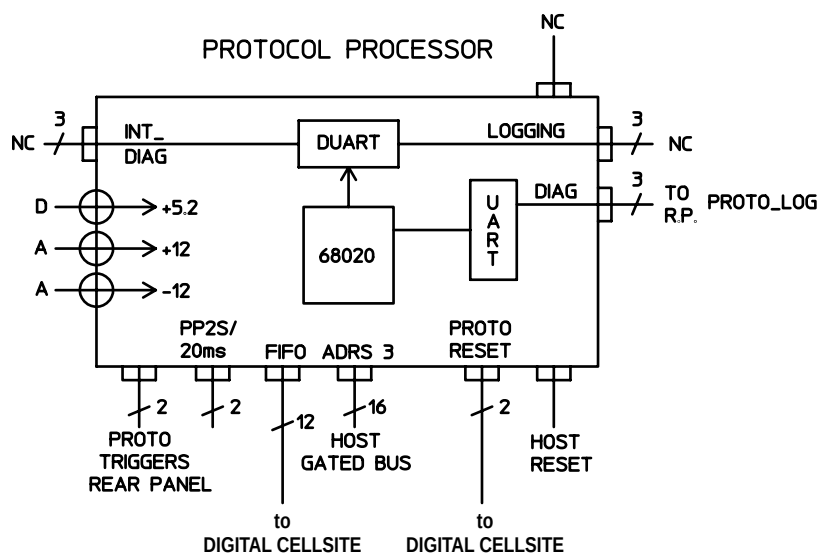Figure 8-9




Spectrum Analyzer

Spectrum Analysis (option 102)

The LO on the Spectrum Analyzer, see [figure 8-10 on page 265](#), is swept across the span by the Controller. The LO starts sweeping when the oscilloscope circuits on the Measurement board trigger the display sweep to start. As the LO sweeps, the spectrum analyzer filters and then amplifies the IF signal in a logarithmic detector so the signal voltage will be proportional to the log of power. The signal voltage is measured by a sampler on the Measurement board and displayed.

Spectrum analyzer resolution bandwidth is determined by switching bandwidth IF filters on the Spectrum Analyzer. These filters are set by the Controller as a function of the span selected from the front panel.

Spectrum Analyzer



Audio Analyzer Section

Input Level Control

Switchable gain amplifiers on the Audio Analyzer 1 and Audio Analyzer 2 ([figure 8-11 on page 267](#), and [figure 8-12 on page 268](#)) assemblies keep the audio input signal within a range suitable for the detectors.

AC and DC Level Measurements

Detected voltages from the Peak+, Peak –, and RMS detectors are measured on the Measurement assembly. The Controller calculates the displayed value taking into account the detector selected from the front panel, the gain of the amplifiers, and the source of the input signal (demodulators, front panel).

Distortion and SINAD Measurements

Distortion and SINAD can be measured on 300 Hz to 10 kHz audio signals. The Controller calculates distortion and SINAD by comparing the ratio of the voltage after the variable notch filter to the ratio of the voltage before the notch filter.

Oscilloscope Functions

The Test Set has no specialized oscilloscope assemblies. The and Audio Analyzer assemblies, Measurement assembly ([figure 8-13 on page 269](#)), and the Controller ([figure 8-27 on page 289](#)) work together to perform the oscilloscope functions.

The audio or dc signal to be displayed goes from the Audio Analyzer 2 assembly to a sampler on the Measurement assembly (the same sampler used by the Spectrum Analyzer). The Controller calculates the display level by taking the value of the measured signal at each point of the sweep, the gain of the signal path in the Audio Analyzer assemblies, and the volts-per-division setting.

The oscilloscope's trigger signals from the side-panel connector, the Signaling Source and Analyzer assembly ([figure 8-19 on page 277](#)), and the internal trigger signal are used by the Measurement assembly and the Controller to determine when to start the scope sweep. The Controller adds the pre-triggering time entered from the front panel.

Audio Analyzer 1


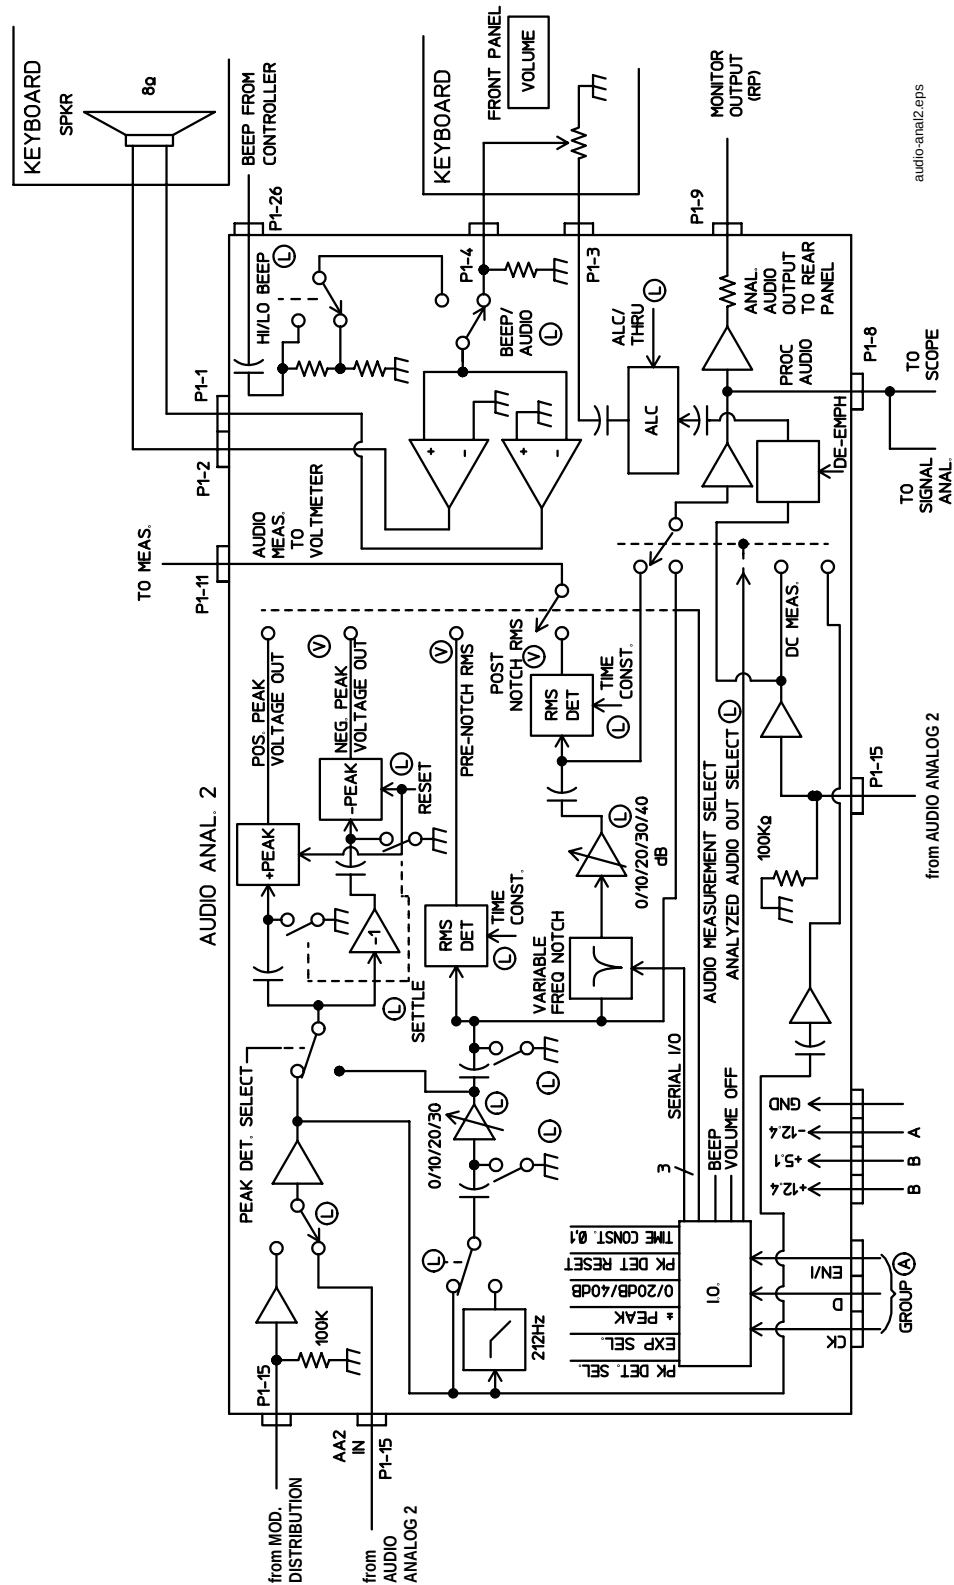


Figure 8-12 Audio Analyzer 2

audio-anal2.eps

from AUDIO ANALOG 2

Figure 8-13 Measurement Board

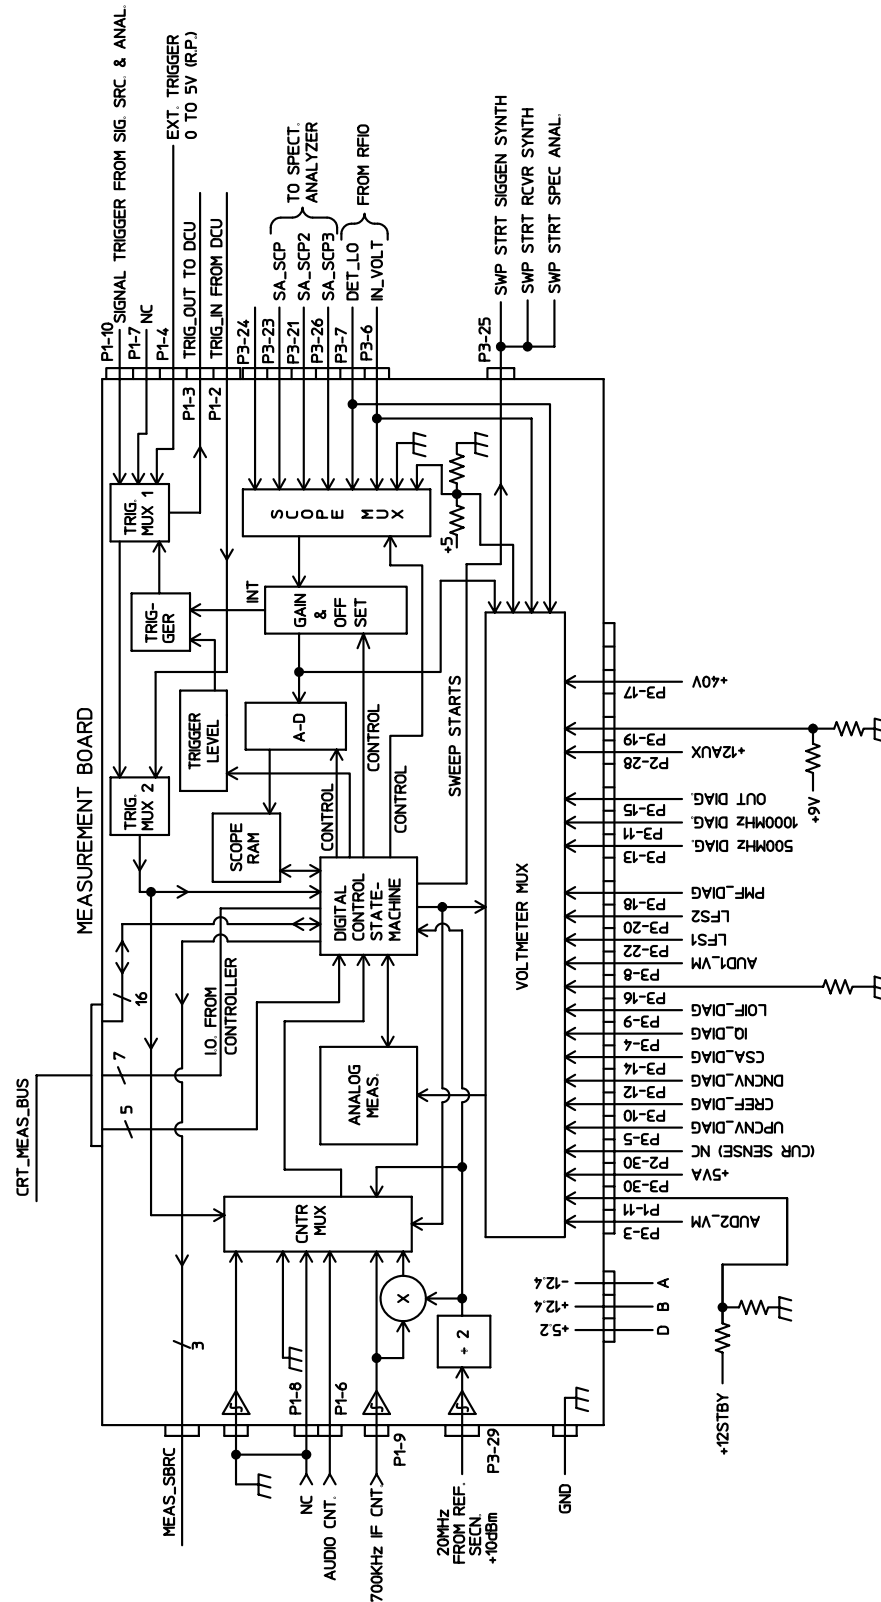
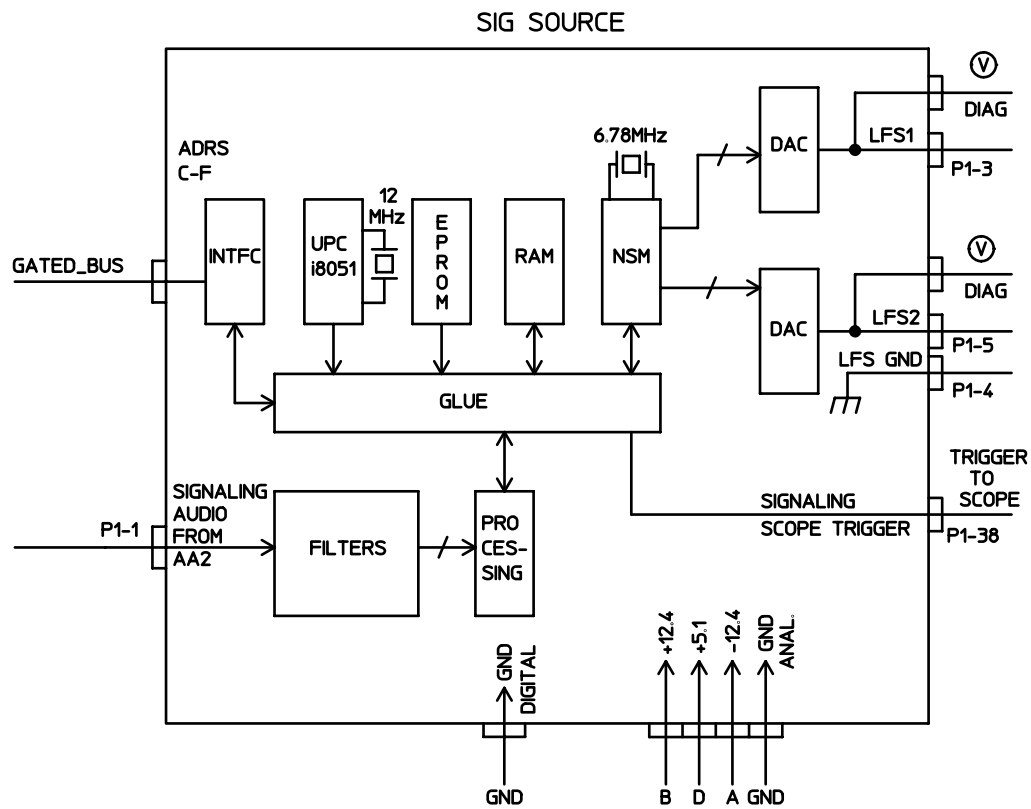


Figure 8-14 Signaling and Analyzer Assembly

CDMA Analyzer Section

IF Conversion

To downconvert the CDMA the signal, the 114.3 MHz IF is mixed with a 110.6136 MHz LO to produce a 3.6864 MHz IF in the IQ Modulator assembly, see [figure 8-15 on page 272](#). The oscillator that produces the LO signal is phase locked to a 10 MHz signal from the CDMA Reference assembly, see [figure 8-18 on page 276](#).

CDMA Signal Analysis

The 3.6864 MHz signal goes to the DSP assembly. The DSP assembly analyzes the 3.6864 MHz signal to make IQ modulation measurements, such as rho, timing accuracy, carrier feedthrough, and phase error.

Power Measurements

The DSP assembly also makes average power measurements through a direct link from the RF Input/Output assembly ([figure 8-2 on page 254](#)).

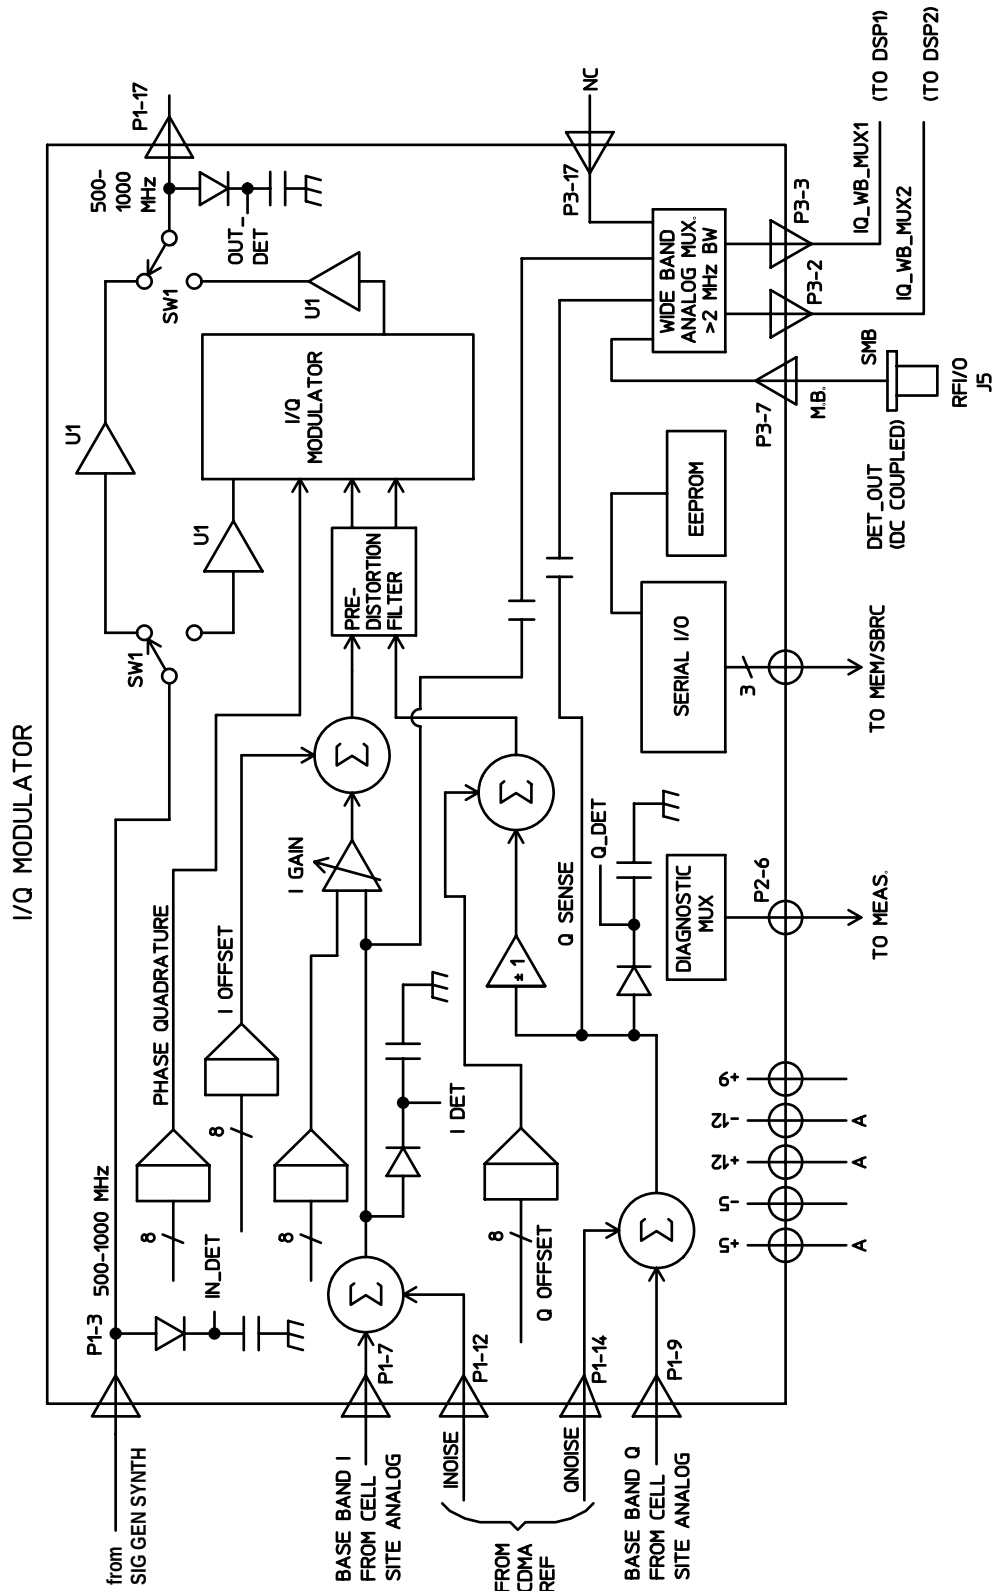
Figure 8-15 **IQ Modulator**

Figure 8-16 LO/IF/Demodulator

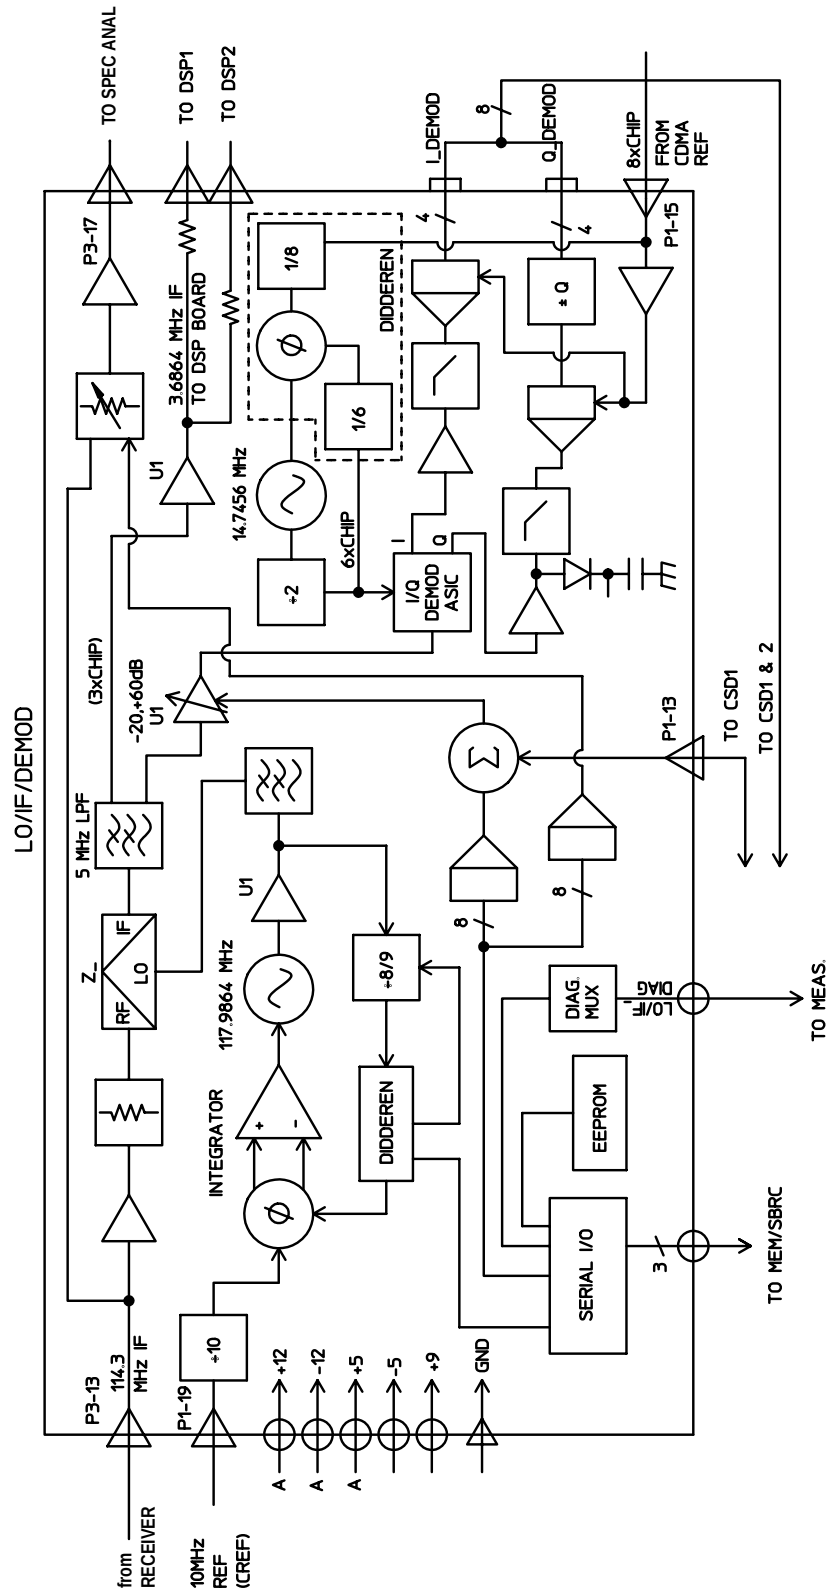
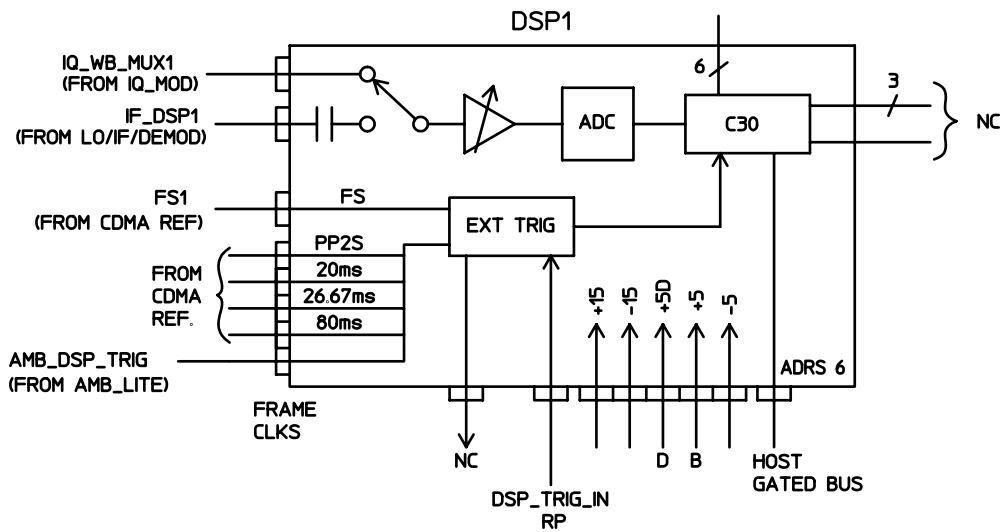


Figure 8-17 Digital Signal Processor 1 (DSP1)

CDMA Generator Section

Data Generation

The Digital Cellsite assembly, see [figure 8-6 on page 260](#), generates or buffers external data that emulates a CDMA traffic channel and outputs this data to the CDMA Reference, see [figure 8-18 on page 276](#). The CDMA Reference assembly converts the data into I and Q drive signals and sends it back to the Digital Cellsite assembly to be summed with calibrated noise sources. The signals are then passed to the IQ Modulator ([figure 8-15 on page 272](#)) for modulation with RF.

CDMA Reference

The CDMA Reference supplies all the CDMA clocks for the Receive DSP and the Digital Cellsite assemblies. The CDMA Reference also provides reference switching for an external or the internal reference source.

[illegible]

Audio Generator Section

Waveform Generation

The Signal Source and Analyzer, see [figure 8-19 on page 277](#), gets frequency and wave shape information from the Controller. Waveform values are calculated real-time by a digital waveform synthesis IC. The LFS1 output is always a sine-wave. The LFS2 output is a sine-wave unless one of the function generator waveforms is selected, or signaling is selected from the front panel.

Level Control

Audio level is controlled by the Modulation Distribution assembly, see [figure 8-20 on page 278](#), by using a DAC and variable attenuators. The leveled audio signal is passed on to the RF Generator section.

Figure 8-19 **Signaling and Analyzer Assembly**

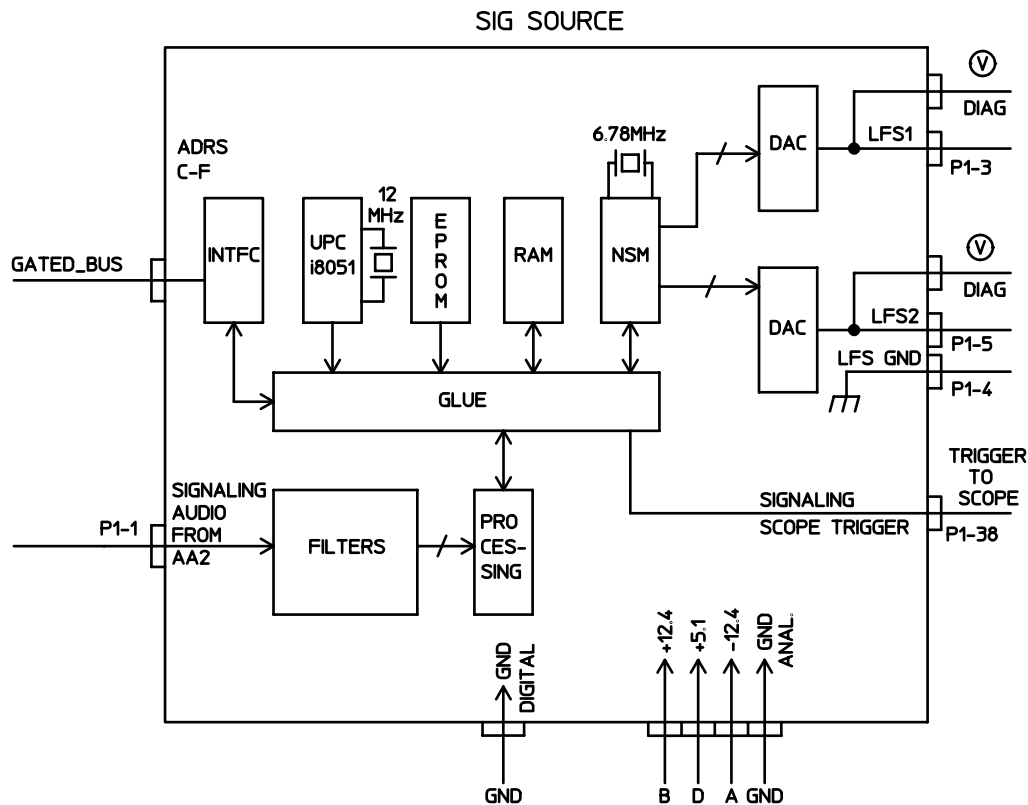
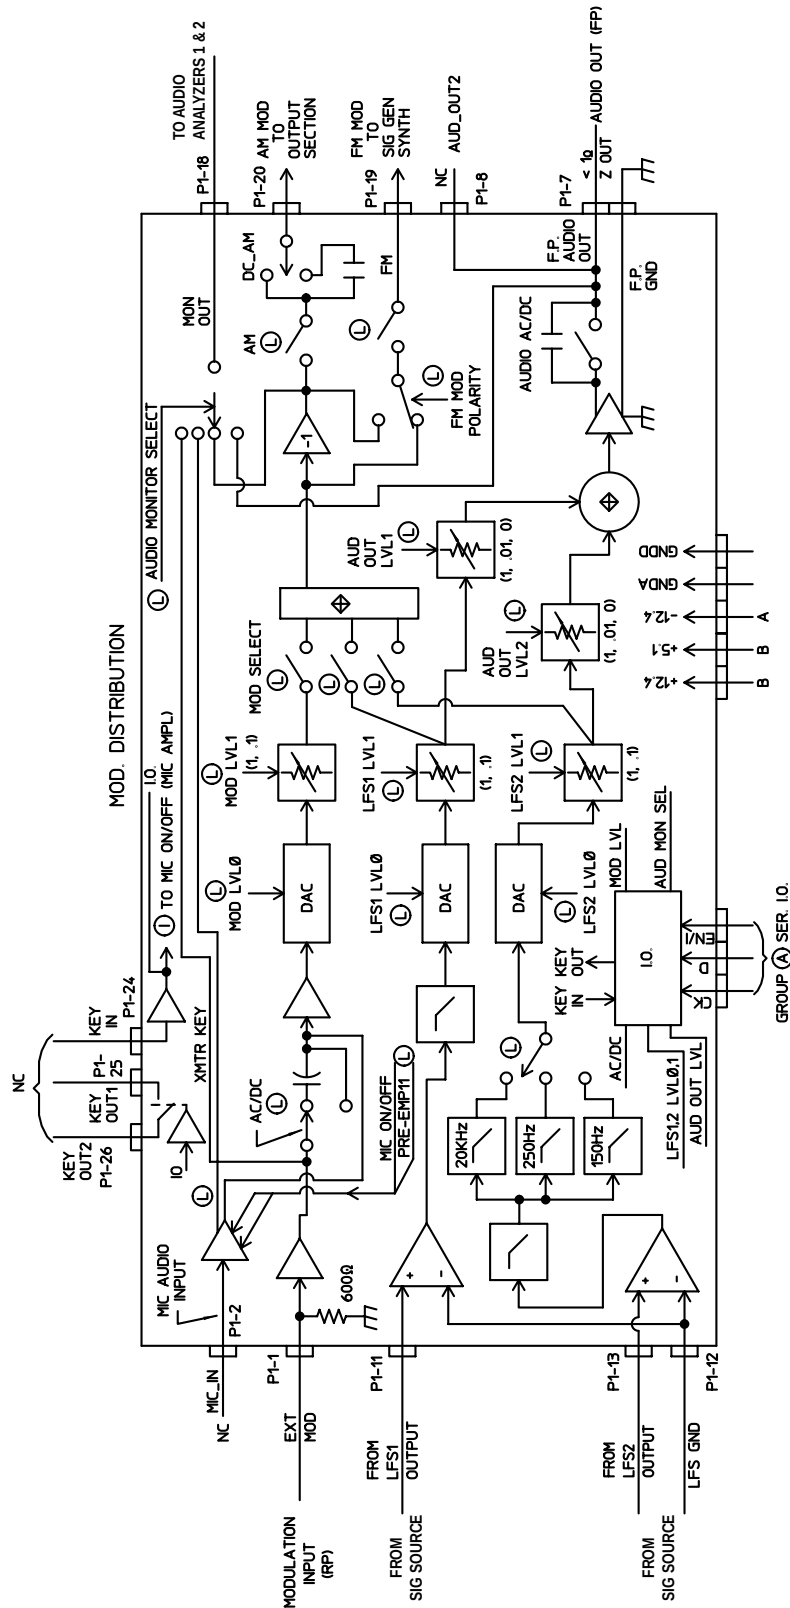


Figure 8-20 Modulation Distribution

RF Generator Section

Frequency Generation

NOTE

Test Sets with firmware revision A.04.5X and above operate only at RF frequencies from 800 to 1000 MHz and 1700 to 2000 MHz. A text only error message **“Input value out of range”**, will be displayed if invalid frequencies are set.

The Signal Generator Synthesizer ([figure 8-21 on page 281](#)) develops a 500 MHz to 1000 MHz signal which is phase-locked to the 200 kHz reference from the Reference Assembly ([figure 8-24 on page 285](#)). An out-of-lock indicator LED lights if the phase-lock-loop is out-of-lock. When you turn the Test Set's power on, the LED lights for a few seconds then goes out. If it stays on or comes on again, the loop is out-of-lock.

The RF Output Section assembly ([figure 8-22 on page 282](#)) develops the RF Generator's 30 to 2000 MHz frequency range by mixing, dividing, or passing the 500 MHz to 1000 MHz from the Signal Generator Synthesizer. The frequencies are derived as shown in [table 8-3](#).

The Upconverter assembly ([figure 8-23 on page 283](#)) develops the RF generator's 1.7 to 2.0 GHz range by mixing the 800-1000 MHz signal from the output section with a 1.5-3.0 GHz LO.

Table 8-3

Output Frequency	Derivation
30 MHz - 250 MHz	mix
250 MHz - 500 MHz	divide
500 MHz - 1 GHz	pass
1.7 GHz - 2.0 GHz	mix

Level Control

The RF Output Section assembly ([figure 8-22 on page 282](#)) has an automatic-level-control (ALC) loop that acts as a vernier control of RF level between -2 and $+9$ dBm. A step attenuator in the RF I/O assembly ([figure 8-2 on page 254](#)) takes the level down to -127 dBm (-137 dBm at the RF IN/OUT connector) in 5 dB steps.

Assemblies that affect output level calibration have factory-generated calibration data stored in the Test Set's EEPROM. Calibration data is fed to digital-to-analog-converters which control level-adjustable devices in the RF path. These assemblies are:

- RF I/O

- RF Output Section

Modulation

Amplitude modulation (AM) is done on the RF Output Section assembly ([figure 8-22 on page 282](#)). The modulating signal from the Modulation Distribution assembly is applied to the ALC loop's control voltage.

IQ modulation is done on the IQ Modulator assembly ([figure 8-15 on page 272](#)). Digital Cellsite is modulated onto the RF signal from the Signal Generator Synthesizer assembly ([figure 8-21 on page 281](#)).

Figure 8-21





Figure 8-22 RF Output Section

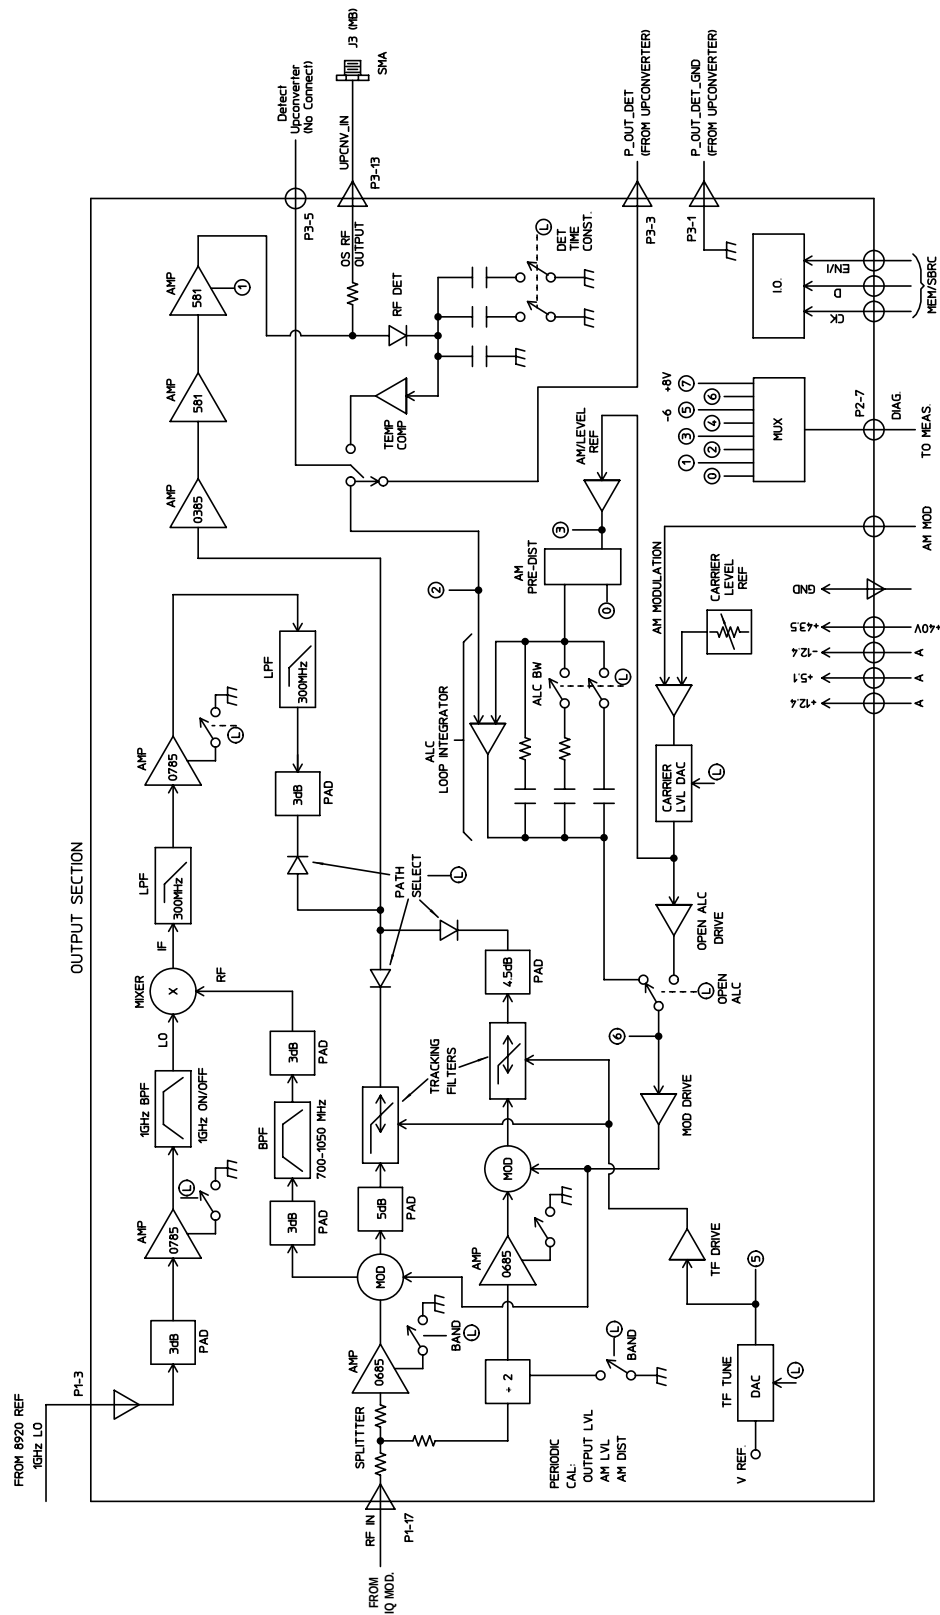

Upconverter



Reference/Regulator Section

Reference

All frequencies are derived from a 10 MHz reference which can come from an external reference or from a 10 MHz crystal oscillator on the Reference assembly ([figure 8-24 on page 285](#)). The High Stability Reference assembly develops the local oscillator (LO) and reference signals needed by the assemblies that make up the RF generator, RF analyzer, spectrum analyzer, and the Measurement assembly.

Power Supply Regulator

Power supply regulators ([figure 8-25 on page 286](#)) are distributed to all of the modules and assemblies by the Power Supply Regulator assembly through the motherboard.

Power Supply

The Power Supply assembly is a switching type supply. The power supply generates five different dc supplies. They are:

- +5.5 Vdc
- +13.4 Vdc
- -13.4 Vdc
- +43.5 Vdc
- -12 Vdc AUX

Power Supply voltages are distributed to all of the modules and assemblies through the motherboard.

Figure 8-24 High Stability Reference

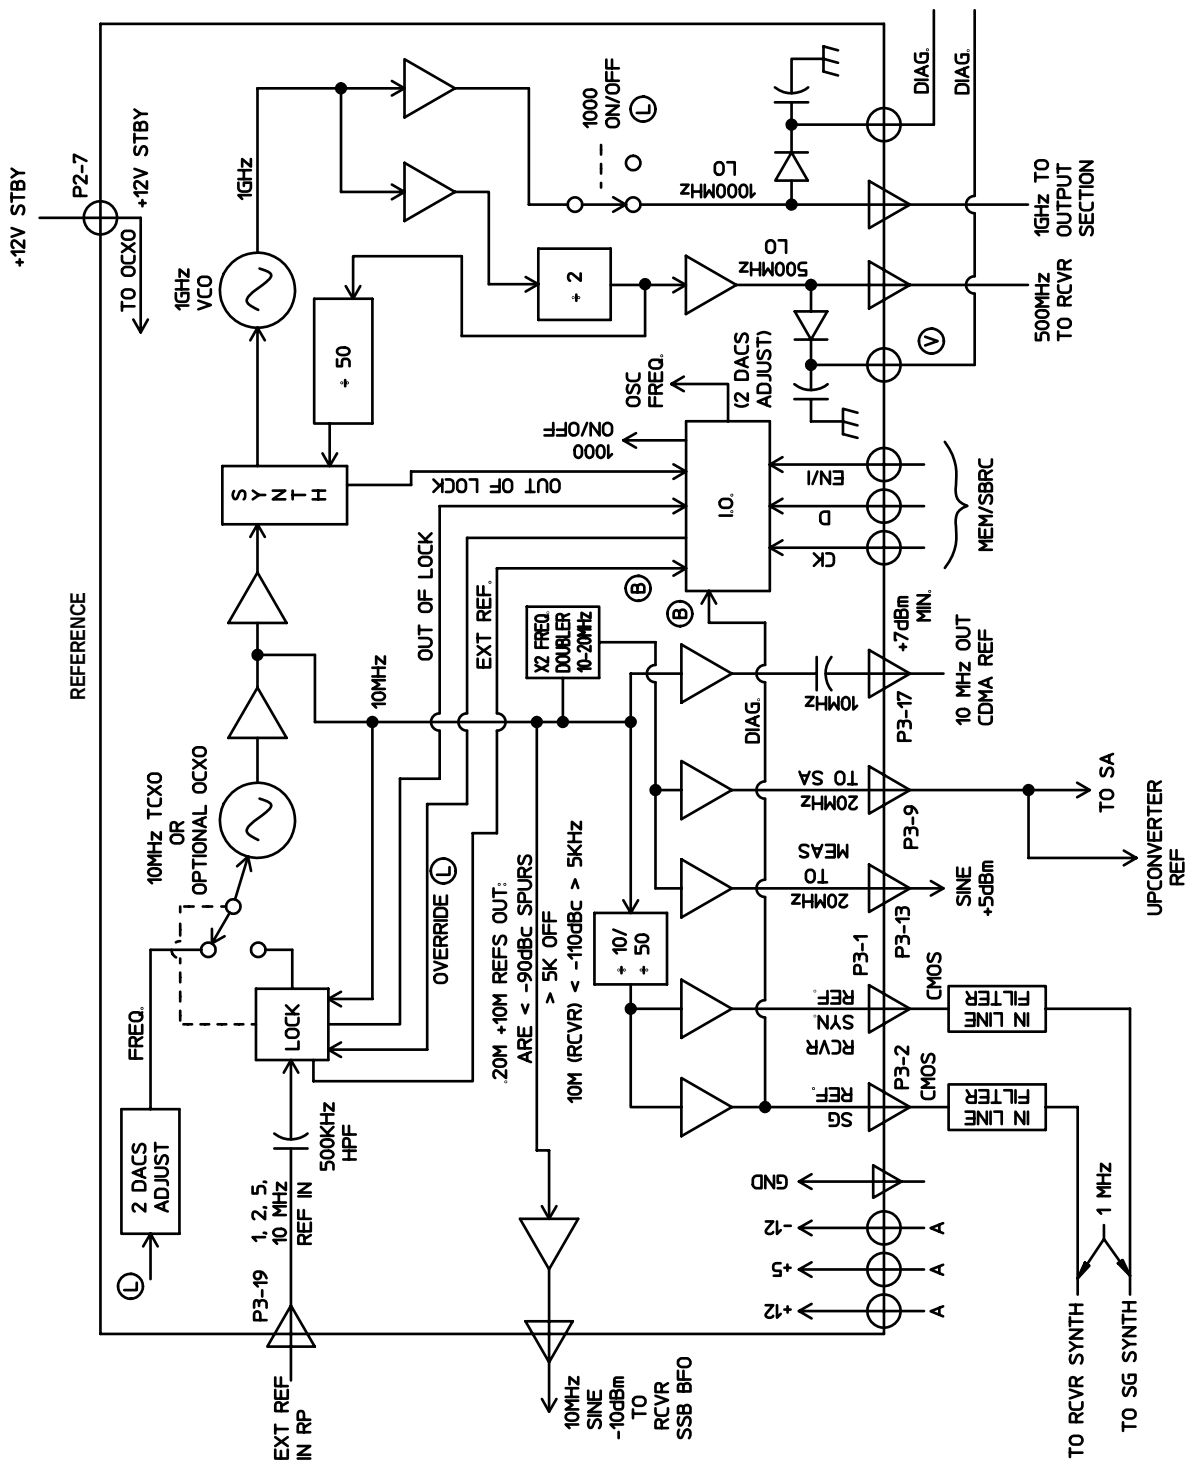
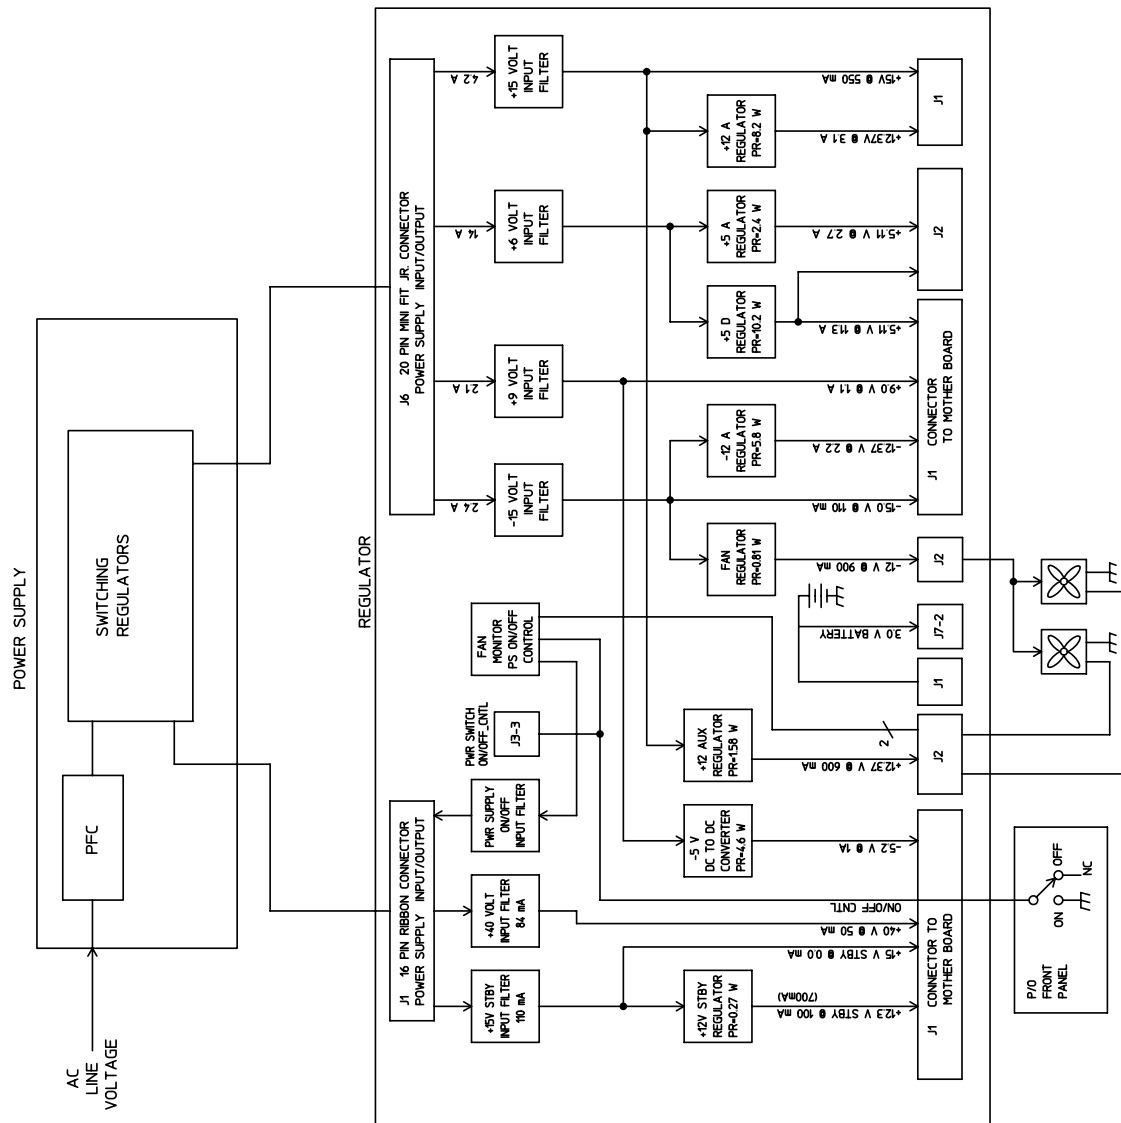


Figure 8-25 Regulator

Instrument Control Section

Digital Control

The Test Set's digital control is driven by two assemblies:

- Memory/SBRC
- Controller

The controller receives user control information by either the control interface or by the front panel. Operating firmware on the Memory/SBRC ([figure 8-26 on page 288](#)) is then used by the Controller ([figure 8-27 on page 289](#)) assembly to generate digital control for the Test Set. The digital control bus information is passed back to the Memory/SBRC assembly which controls most of the Test Set's modules and assemblies.

Display

The Test Set's display data is first generated by the Controller and then passed on to the Display Driver ([figure 8-28 on page 290](#)). The Display Driver converts the digital information into analog vertical and horizontal drive signals for the display. The Display Driver drive also provides brightness and contrast signals for the display.

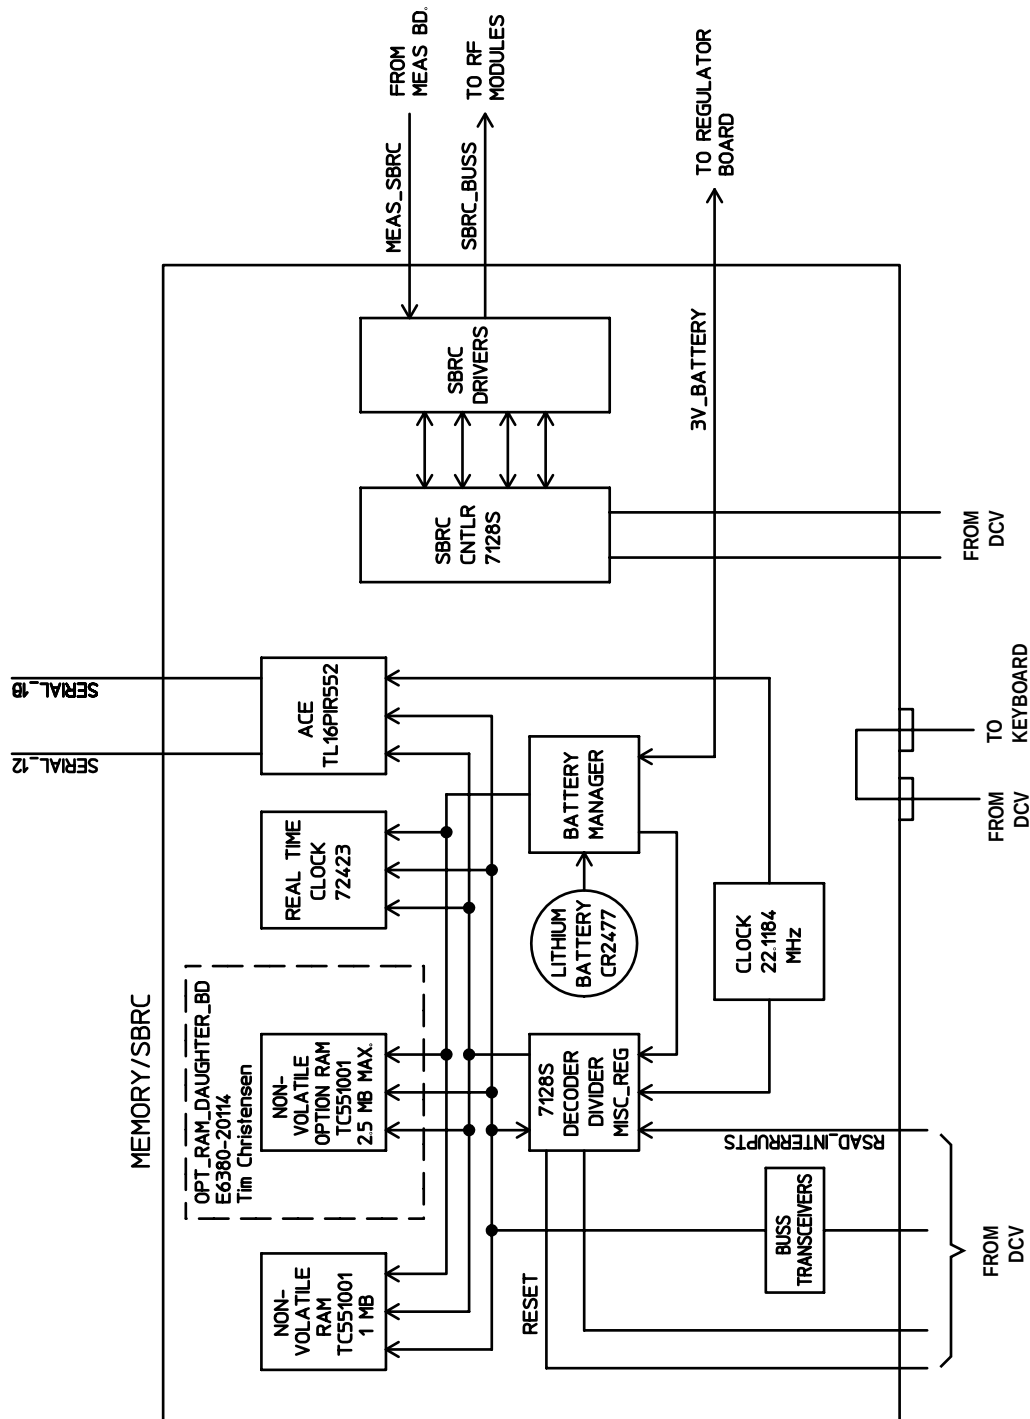
Figure 8-26 Memory SBRC

Figure 8-27 Controller


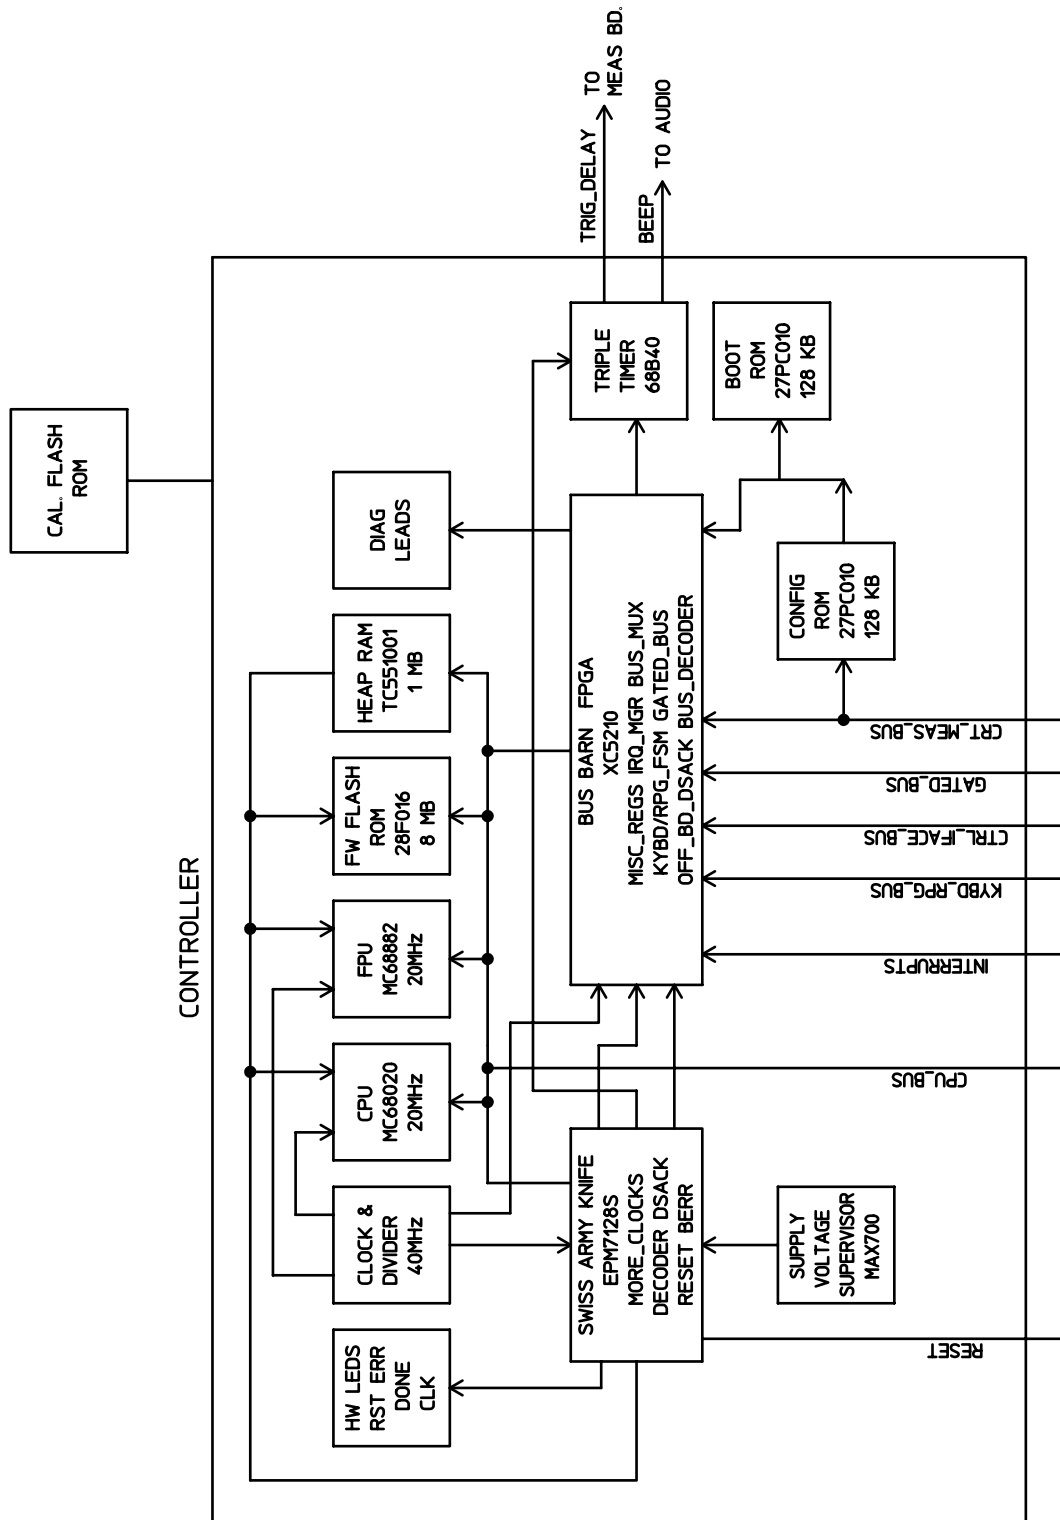
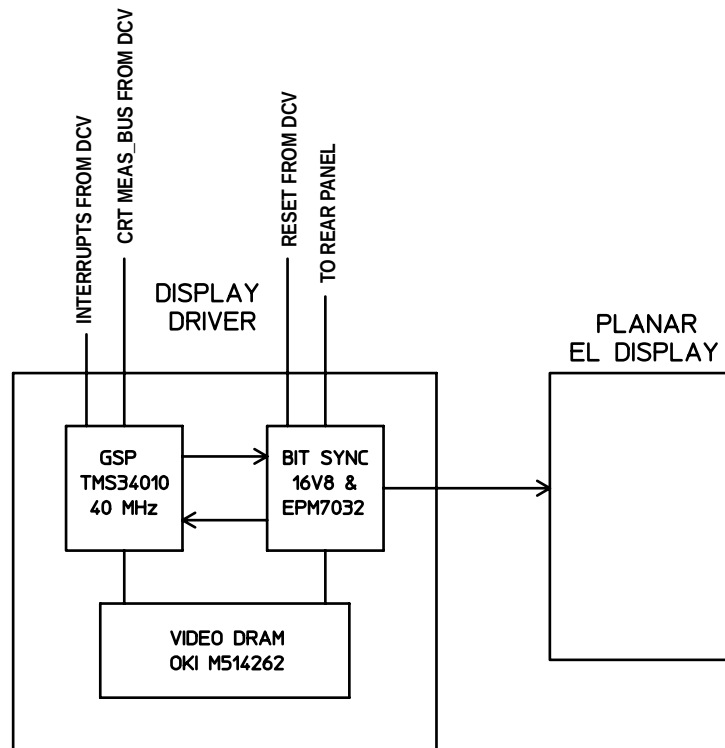


Figure 8-28 Display Driver

GPIB Serial

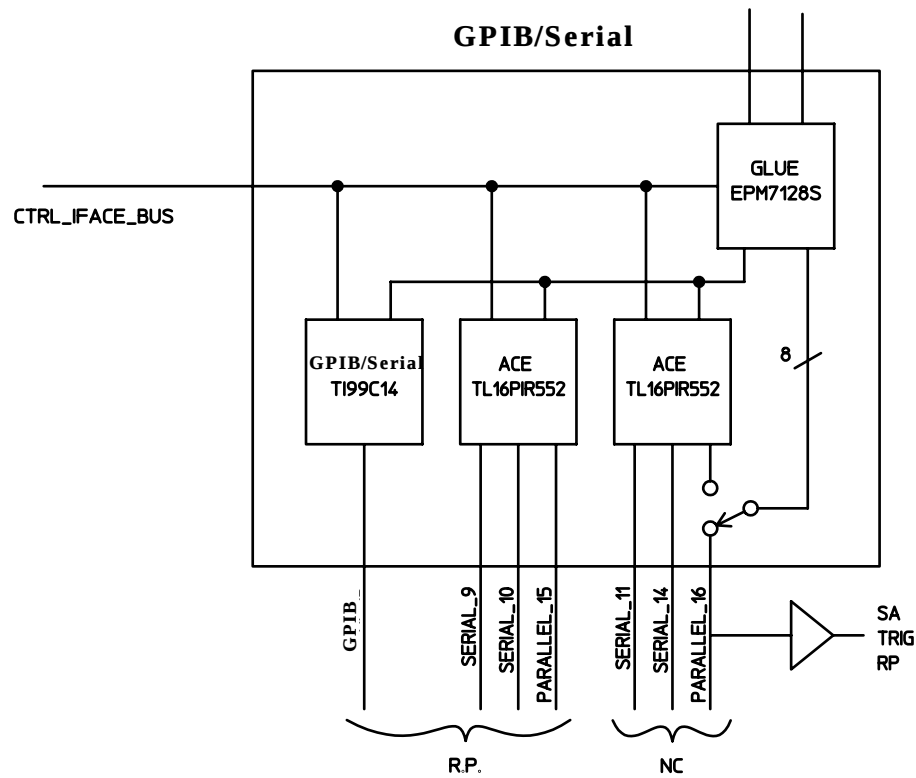Figure 8-29 GPIB/Serial



9 Service Screen

This chapter describes the SERVICE screen as a diagnostic aid for the Test Set.

Troubleshooting with the SERVICE Screen

The SERVICE screen, see [Figure 9-1 on page 295](#), uses the internal voltmeter and frequency counter functions to monitor specific nodes in most assemblies. A large number of latch and DAC settings used throughout the Test Set can also be read and/or set to alter standard operation. These functions are primarily intended to allow the automated internal diagnostic routines to verify proper instrument operation, and to allow the periodic adjustment routines (PER_CAL3, CDMA_CAL, and PCB_CAL) to modify Test Set operation.

Access to these functions under manual control is provided to allow further troubleshooting when the diagnostics cannot isolate a failure to a specific assembly. To do this, you must understand how to operate the Test Set and, especially, understand how the assemblies in the Test Set work together.

Detailed manual Test Set operation is provided in the Agilent Technologies E8285A User's Guide. Refer to [Chapter 8, "Block Diagrams," on page 249](#) for information on how the overall instrument and each module work.

How to Access the SERVICE Screen

1. Press Preset key.
2. Press the Config key on the Test Set to access the CONFIGURE screen, see [Figure 9-1 on page 295](#).
3. Select the **SERVICE** field in bottom-right corner of the screen.

Field Names and Descriptions

Voltmeter Connection

This field (see [Figure 9-1](#)) selects the desired circuit node for voltage measurements. To change the voltmeter connection, move the cursor in front of the **Voltmeter Connection** field and push the cursor control knob. A **Choices** menu will appear. Move the cursor to the desired circuit node in the list and push the cursor control knob. The reading is displayed in the **Voltage** measurement field at the top left of the display.

Because the diagnostic MUX points being measured must be in the range of 0 to ± 5 volts, the measurement of some points are scaled to that measurement range. For example; the +12 Volt reference (**MEAS_12V_REF** should measure about +5volts. The -12 Volt reference (**MEAS_NEG_12V_REF** should measure about -5 volts. Many of the voltage measurements are only valid after a number of instrument settings are changed.

When run, the diagnostic routines make the necessary circuit changes and measurements automatically, comparing the measurements to known limits for each node.

Figure 9-1 **CONFIGURE and SERVICE Screens**

CONFIGURE				
Range Hold Auto All Hold All State:Auto	Date 92799 MMDDYY Time 18.16 HH.MM Beeper Quiet Display User Mssgs Yes/No	RF Display Frea/Chan RF Chan Std MS AMPS	RF Level Offset On/Off Output Port RF Out/Dupl RF Out 0.0 dB Input Port RE In/Ant RF In 0.0 dB	Firmware A.01.26 Total RAM 896 kB Serial No. US39090053 To Screen ● CDMA REV SPEC ○ Analog RX TEST Config CONFIG SERVICE
Notch Coupl AFGen1/None RFGen Volts 50 ohm/enf Input Atten Auto/Hold 10 dB	TimeBase Auto/Int Internal Frame Clock 2.00 s	Alt Pwr Ms Cal Bands None		

SERVICE	
Voltage 4.90483 V	Frequency 1.44521 kHz
Voltmeter Connection MEAS_12V_REF Counter Connection AUD1_COUNT Gate Time 50.0 ms Module Audio Analyzer 1 Latch audi_input_select Value 2 hex RAM Initialize Clear all RAM and restart	
To Screen ● CDMA REV SPEC ○ Analog RX TEST Config CONFIG	

Counter Connection

This field selects the desired circuit node to connect to the Test Set's internal frequency counter. The reading is displayed in the **Frequency** measurement field at the top right of the display.

To change the counter connection, move the cursor in front of the **Counter Connection** field and push the cursor control knob. A **Choices** menu will appear, then move the cursor to the desired circuit node and push the cursor control knob.

Gate Time

This field is used to adjust the Test Set's internal frequency counter's gate time. A shorter gate time may enable you to see frequency fluctuations that might not be seen using a longer gate time.

To change the gate time, move the cursor in front of the **Gate Time** field and push the cursor control knob. Rotate the cursor control knob until the desired gate time (10 to 1000m in 10m increments) is displayed, then press the cursor control knob.

Latch

This field is used to manually alter the circuit latches that control switch, DAC, and gain settings within the Test Set. The value of the selected latch is displayed and changed in the **Value** field. Some settings are read-only.

To set a switch, DAC, or gain setting:

1. Move the cursor in front of the **Latch** field and push the cursor control knob. A **Choices** menu will appear.
2. Move the cursor to the desired latch name and push the cursor control knob.
3. Move the cursor in front of the **Value** field and push the cursor control knob.
4. Rotate the cursor control knob to modify the value (hexadecimal).

NOTE

If any of the switches, DACs, or gain settings are changed with the **Latch** field, the Test Set will generate the message "**Direct latch write occurred. Cycle power when done servicing.**" To clear this message, cycle the Test Set's power. Upon power-up, the internal controller will return the Test Set to its default settings and values.

The first part of the names in the **Choices** menu relates to the assembly where the switch, DAC, or gain setting is located. Some latch names are not listed here.

- dstr: Modulation Distribution
- aud1: Audio Analyzer 1
- aud2: Audio Analyzer 2
- refs: Reference
- inpt: Input

- out: Output
- rcvr: Receiver
- gsyn: Signal Generator Synthesizer
- rsyn: Receiver Synthesizer
- spec: Spectrum Analyzer
- meas: Measurement
- metron: Measurement
- afg1: Signaling Source/Analyzer
- afg2: Signaling Source/Analyzer
- sgnl: Displays version number of the Signaling Source/Analyzer firmware.
- cellSite1: Cell Site 1 Digital board
- cellSite2: Cell Site 2 Digital board
- cdmaRef: CDMA Reference
- iq_mod: I/Q Modulator
- loif: LO/IF Demod
- main_dsp: Main DSP Receiver
- aux_dsp: optional DSP Receiver
- protocol: Protocol Processor

Value (hex)

This field displays and changes the value for the latch shown in the **Latch** field.

RAM Initialize

Selecting this field clears all SAVE registers and test programs, and any initialized RAM disk(s), that may be in RAM. It also resets all latches to their factory power-up configuration. If you have saved one or more instrument setups using the SAVE function, using this function will permanently remove them.

A

AC Level Accuracy (AF Analyzer)
performance test, [171](#)
AC Level Accuracy (AF
Generator) performance test,
[167](#)
adjustments. *See* periodic
adjustments
AF Diagnostics. *See* diagnostics
Amplitude Accuracy
(Oscilloscope) performance
test, [177](#)
Amplitude Level Accuracy
DUPLEX OUT (CDMA
Generator) performance test,
[192](#)
Amplitude Level Accuracy RF
IN/OUT (CDMA Generator)
performance test, [190](#)
Analog Cellsite assembly, [33](#)
Analog Cellsite assembly, block
diagram, [261](#)
Analog Loopback verification test,
[114](#)
ANTENNA IN connector, [30](#)
assemblies
locating, [89](#)
top-side, [89](#)
AUD MONITOR OUTPUT
connector, [31](#)
Audio Analyzer 1 assembly, [31](#)
Audio Analyzer 1 Offset
adjustment, [134](#)
Audio Frequency Generator Gain
adjustment, [133](#)
AUDIO IN connector, [31](#)
Average Power Level Accuracy
(CDMA Analyzer)
performance test, [196](#)

B

battery replacement, [92](#)
battery, Memory assembly, [92](#)
battery, Regulator assembly, [92](#)
block diagrams, [251](#)
Boot Code, [91](#)
Boot ROM replacement, [91](#)

C

calibration
overview, [38](#)
calibration. *See* periodic
adjustments
calibration data, [91](#)
downloading, [85](#)
how to recover, [74](#), [126](#)
loss of, [74](#), [126](#)
storage locations, [127](#)
troubleshooting, [74](#), [126](#)
calibration factors, [129](#)
calibration procedures, [118](#)
carrier feedthrough, minimizing,
[137](#)
CDMA analysis diagram, [32](#)
CDMA Diagnostics. *See*
diagnostics
CDMA Mobile Phone Functional
Test, [121](#)
CDMA Signal Analysis, [32](#)
Channel Power Calibration, [120](#)
Channel Power Level Accuracy
(CDMA Analyzer)
performance test, [198](#)
Channel Power Loopback
verification test, [117](#)
clearing RAM, [81](#), [297](#)
codes. *See* failure codes
connectors, torque settings, [84](#)
Control Interface assembly, [28](#)
controller, replacing, [91](#)
Counter Connection field,
SERVICE screen, [79](#)
covers, removing external and
internal, [87](#)

D

DACs
 IQ, [137](#)
 settings, [81](#)
 timebase reference, [135](#)
DC Level Accuracy (AF Analyzer)
 performance test, [174](#)
DC Level Accuracy (AF
 Generator) performance test,
 [168](#)
demodulation diagram, [31](#)
diagnostic error messages, [68](#)
diagnostic self-test LED codes, [53](#)
diagnostics
 AF Diagnostics
 accessing, [64](#)
 All Audio Tests, [64](#)
 Audio Analyzer 1 External
 Paths, [64](#)
 Audio Analyzer 1 Internal
 Paths, [64](#)
 Audio Analyzer 2, [64](#)
 Audio Frequency Generators 1
 and 2, [64](#)
 Mod Distribution External
 Paths, [64](#)
 Mod Distribution Internal
 Paths, [64](#)
 Preliminary Audio Paths, [64](#)
 CDMA Diagnostics
 accessing, [67](#)
 Functional Diagnostics
 accessing, [58](#)
 Analog Modulation, [63](#)
 CDMA Loopback, [63](#)
 Power Supplies, [63](#)
 RF Modules, [63](#)
 Self-Test, [63](#)
 RF Diagnostics
 accessing, [65](#)
 All RF Tests, [65](#)
 Down Converter, [65](#)
 Output, [65](#)
 Receiver, [65](#)
 Receiver Synthesizer, [65](#)
 Reference, [65](#)
 RF Input/Output, [65](#)
 Signal Generator Synthesizer,
 [65](#)
 Spectrum Analyzer, [65](#)
 Upconverter, [65](#)
 diagnostics tests, [118](#)
Digital Cellsite assemblies, [32](#), [33](#)
Digital Cellsite assembly, block
 diagram, [260](#)
disassembly and replacement, [87](#)

Distortion and SINAD (AF
 Analyzer) performance test,
 [173](#)
downloading calibration data, [85](#)

E

enhancements
 firmware, [42](#)
 hardware, [42](#)
error codes. *See* failure codes
error messages
 "Autostart Test Procedure on
 Power-Up", [49](#)
 "Change Ref Level, Input Port or
 Attenuator...", [68](#)
 "Direct latch write occurred...",
 [68](#)
 "ERROR 173 IN XXXX
 Active/system...", [68](#)
 "Printer does not respond", [68](#)
 diagnostic, [68](#)
 time-outs, [69](#)
External Modulation Path Gain
 adjustment, [134](#)

F

failure codes
 diagnostic (displayed), [51](#)
 diagnostic (returned over GPIB), [51](#)
 See Also LEDs
failures
 power up, [48](#)
 self-test, [48](#)
firmware enhancements, [42](#)
flowchart, troubleshooting, [47](#)
FM Accuracy (RF Analyzer)
 performance test, [180](#)
FM Accuracy (RF Generator)
 performance test, [149](#)
FM Bandwidth (RF Analyzer)
 performance test, [184](#)
FM Distortion (RF Analyzer)
 performance test, [182](#)
FM Distortion (RF Generator)
 performance test, [146](#)
FM Flatness (RF Generator)
 performance test, [152](#)
Frequency Accuracy (AF Generator) performance test, [170](#)
Frequency Accuracy at 400 kHz (AF Analyzer) performance test, [176](#)
Frequency Accuracy to 100 kHz (AF Analyzer) performance test, [175](#)
frequency references, [28](#)
front panel
 disassembly, [99](#)
 wiring, [99](#)
Functional Diagnostics. *See* diagnostics
Functional Verification Test Record, [123](#)
fuse, [49](#)

G

Gate Time field, SERVICE screen, [80](#)

H

handles, removing, [87](#)
Harmonics Spectral Purity (RF Generator) performance test, [163](#)

I

I/Q Modulator assembly, [33](#)
IBASIC controller, [27](#)
IF frequencies, [255](#)
Image Rejection (Spectrum Analyzer) performance test, [188](#)
internal covers, top and bottom, [87](#)
IQ Calibration adjustment
 description, [137](#)
 selecting and running, [130](#)
IQ modulation, [33](#)

L

Latch field, SERVICE screen, [81](#)
latches
 DAC, [81](#)
 gain, [81](#)
 switch, [81](#)
 timebase, [135](#)
LEDs
 diagnostic codes, [53](#)
 failure codes, [48](#)
 out-of-lock indicators, [72](#)
 power supply, [49](#)
Level Accuracy (RF Analyzer)
 performance test, [179](#)
Level Accuracy (RF Generator)
 performance test, [158](#)
LO/IF Demodulation assembly, [32](#)
locating assemblies, [89](#)

M

Modulation Accuracy (CDMA Generator) performance test, [194](#)
modulation analysis, [31](#)
Modulation Distribution
 assembly, [33](#)
module swap. *See* troubleshooting, assembly swap
modules, locating, [89](#)

O

operating system, [28](#)
Output assembly, [33](#)

P

parts list, [105](#)
PC boards, locating, [89](#)
performance test record, [201–247](#)
performance tests
 AC Level Accuracy (AF Analyzer), [171](#)
 AC Level Accuracy (AF Generator), [167](#)
 Amplitude Accuracy (Oscilloscope), [177](#)
 Amplitude Level Accuracy (CDMA Generator), [190](#)
 Average Power Level Accuracy (CDMA Analyzer), [196](#)
 Channel Power Level Accuracy (CDMA Analyzer), [198](#)
 DC Level Accuracy (AF Analyzer), [174](#)
 DC Level Accuracy (AF Generator), [168](#)
 Distortion (AF Analyzer), [173](#)
 equipment required, [142](#)
 FM Accuracy (RF Analyzer), [180](#)
 FM Accuracy (RF Generator), [149](#)
 FM Bandwidth (RF Analyzer), [184](#)
 FM Distortion (RF Analyzer), [182](#)
 FM Distortion (RF Generator), [146](#)
 FM Flatness (RF Generator), [152](#)
 Frequency Accuracy (AF Generator), [170](#)
 Frequency Accuracy to 100 kHz (AF Analyzer), [175](#)
 Frequency Accuracy to 400 kHz (AF Analyzer), [176](#)
 Harmonics Spectral Purity (RF Generator), [163](#)
 how to use, [142](#)
 Image Rejection (Spectrum Analyzer), [188](#)
 Level Accuracy (RF Analyzer), [179](#)
 Level Accuracy (RF Generator), [158](#)
 Modulation Accuracy (CDMA Generator), [192](#), [194](#)
 recommended interval, [38](#), [142](#)
 Residual Distortion (AF Generator), [169](#)
 Residual FM (RF Analyzer), [186](#)
 Residual FM (RF Generator), [155](#)
 Residual Noise (AF Analyzer), [172](#)
 SINAD Accuracy (AF Analyzer), [173](#)
 Spurious Spectral Purity (RF Generator), [165](#)
performance verification
 overview, [38](#)
periodic adjustments
 accessing, [128](#)
 Audio Analyzer 1 Offset, [134](#)
 Audio Frequency Generator Gain, [133](#)
 External Modulation Path Gain, [134](#)
 IQ Calibration, [137](#)
 location of voltmeter connections, [133](#)
 selecting and running, [130](#)
 system power calibration program (SYSPWR0), [39](#)
 Timebase Reference Using a Counter, [132](#)
 Timebase Reference Using a Source, [132](#)
 Variable Frequency Notch Filter, [134](#)
 Voltmeter References, [133](#)
periodic calibration
 recommended interval, [38](#)
 See Also periodic adjustments
phone (CDMA mobile) test,
 functional, [121](#)
power supply
 LEDs, [49](#)
 removing, [102](#)
 test points, [50](#)
power supply regulator *See* Regulator assembly
power-up diagnostics, [48](#)
power-up failures, [49](#)
printer setup, [60](#)
process efficiency
 recommendations, [113](#)
Protocol Processor assembly, [32](#)

R

RAM Initialize field, SERVICE screen, [81](#)
RAM, clearing, [81](#)
Rcvr Synth assembly
troubleshooting, [73](#)
Receive DSP assembly, [32](#)
Received Signal Downconversion diagram, [30](#)
Reference assembly, [30](#), [33](#)
troubleshooting, [73](#)
references, frequency, [28](#)
Regulator assembly, [284](#)
repair process overview, [37](#)
replacing batteries, [92](#)
Residual Distortion (AF Generator) performance test, [169](#)
Residual FM (RF Analyzer) performance test, [186](#)
Residual FM (RF Generator) performance test, [155](#)
Residual Noise (AF Analyzer) performance test, [172](#)
RF analysis path, [30](#)
RF analyzer, troubleshooting, [75](#)
RF Diagnostics. *See* diagnostics
RF generation path diagram, [35](#)
RF IN/OUT connector, [30](#)
RF IN/OUT port, [34](#)
RF signal generation, [33](#)
RF source, troubleshooting, [77](#)
ROM, (boot) replacement, [91](#)

S

save/recall register, [49](#)
self-test diagnostics, [48](#)
self-test failures, [48](#)
SERVICE screen, [294](#)
accessing, [79](#)
Counter Connection field, [79](#)
field names and descriptions, [294](#)
Gate Time field, [80](#)
Latch field, [81](#)
RAM Initialize field, [81](#)
Value (hex) field, [81](#)
Voltmeter Connection field, [79](#)
Service Screen, [294](#)
accessing, [294](#)
SERVICE7
diagnostics
loading, [58](#)
menu, [61](#)
See Also diagnostics
IQ calibration
accessing, [130](#)
loading, [130](#)
periodic calibration
accessing, [130](#)
loading, [130](#)
Signal Generator Synthesizer assembly, [33](#)
troubleshooting, [73](#)
Signaling Source Analyzer assembly, [31](#)
Signaling Source and Analyzer (A15), [31](#)
SINAD Accuracy (AF Analyzer) performance test, [173](#)
speaker, internal, [31](#)
Spectrum Analyzer assembly, [32](#)
Spurious Spectral Purity (RF Generator) performance test, [165](#)
swapping assemblies, [74](#)
SYSPWR0 program
accessing, [39](#)
loading, [39](#)
part number, [39](#)

T

test equipment
for performance tests, [142](#)
overview for adjustments, [128](#)
test points
power supply, [50](#)
voltmeter reference, [133](#)
test record, [201–247](#)
test record, functional verification, [123](#)
test set description, [26](#)
theory of operation, [28](#)
audio analyzer, [266](#)
audio generator, [277](#)
CDMA analyzer, [271](#)
CDMA generator, [275](#)
digital control, [287](#)
display, [287](#)
oscilloscope, [266](#)
power supply, [284](#)
reference, [284](#)
RF generator, [279](#)
spectrum analyzer, [256](#)
timebase DACs, [135](#)
Timebase Reference Using a Counter adjustment, [132](#)
Timebase Reference Using a Source adjustment, [132](#)
time-outs, [69](#)
tools, [84](#)
See Also equipment
top-side assemblies, [89](#)
torque settings
connectors, [84](#)
troubleshooting
assembly swap, [74](#)
calibration data, [74](#)
flow chart, [47](#)
manual procedures, [70](#)
overview, [36](#)
Receiver Synthesizer assembly, [73](#)
Reference assembly, [73](#)
RF analyzer, [75](#)
RF source, [77](#)
Signal Generator Synthesizer assembly, [73](#)
using the SERVICE screen, [294](#)

V

Value (hex) field, SERVICE
screen, [81](#)

Variable Frequency Notch Filter
adjustment, [134](#)

video output signal, [50](#)

Voltmeter Connection field,
SERVICE screen, [79](#)

Voltmeter References adjustment,
[133](#)

VOLUME control, [31](#)

W

Wideband Sweep verification test,
[116](#)