

the hallicrafters co.

MANUFACTURERS OF RADIO, TELEVISION AND ELECTRONIC EQUIPMENT, CHICAGO 24, U. S. A.

TECHNICAL SPECIFICATIONS

TUBES AND RECTIFIERS 5 tubes plus 1 selenium rectifier.

POWER SUPPLY 105-120 volts DC or 50/60 cycle AC, 90V "B"/9V "A" battery pack, or 220 volts AC/DC with Ballast Adapter 1X1438.

POWER CONSUMPTION 20 watts

SPEAKER 5 inch round; 3.2-ohm voice coil.

INTERMEDIATE FREQUENCY 455 KC


ANTENNA Stick-loop for BC and LW bands, whip for SW bands, and terminals for long wire for use on all bands.

FREQUENCY COVERAGE

Band	Frequency Range	Reception
1	170 - 415 KC	Longwave
2	530 - 1620 KC	Std. Broadcast
3	2.0 - 6.0 MC	Shortwave
4	6.0 - 18.0 MC	Shortwave


REPLACEMENT BATTERY PACKS

Holli- crafters	Burgess	Ever- eady	RCA	Ray O-Vac	Sears
P1000	F6A60P	757	VS058	AB909	6410

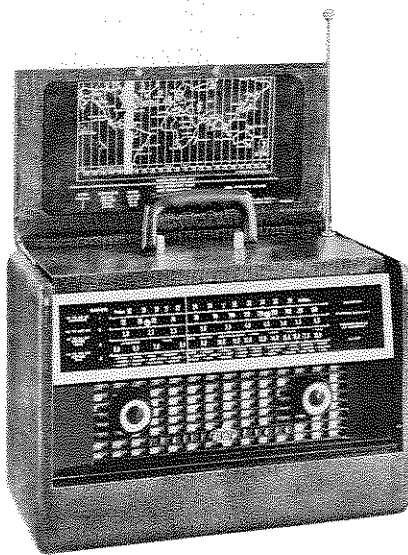


92X2190

Model TW-500, green "lizard" leatherette

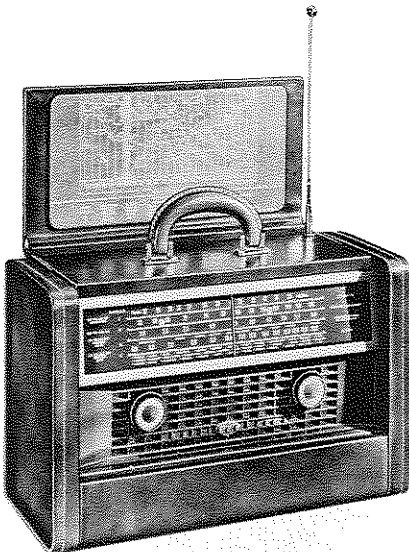

92X2235

Model TW-600, genuine top-grain cowhide

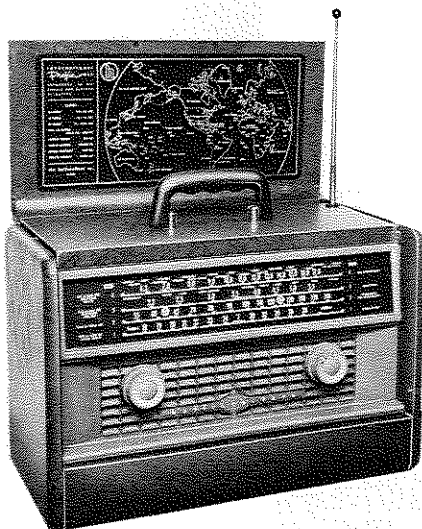


92X2368

Model S-93, Gray Leatherette

TO REMOVE CHASSIS FROM CABINET

1. Remove the front control knobs by pulling in the outward direction.
2. Disconnect the whip antenna lead at the antenna terminal strip.
3. Remove the 6-32 self-tapping screw at the bottom rear of the cabinet which secures the whip antenna.
4. Remove the whip antenna from the cabinet.
5. Remove the four #10 self-tapping screws at the bottom of the cabinet which secure the chassis.
6. Slide the chassis out through the rear of the cabinet.

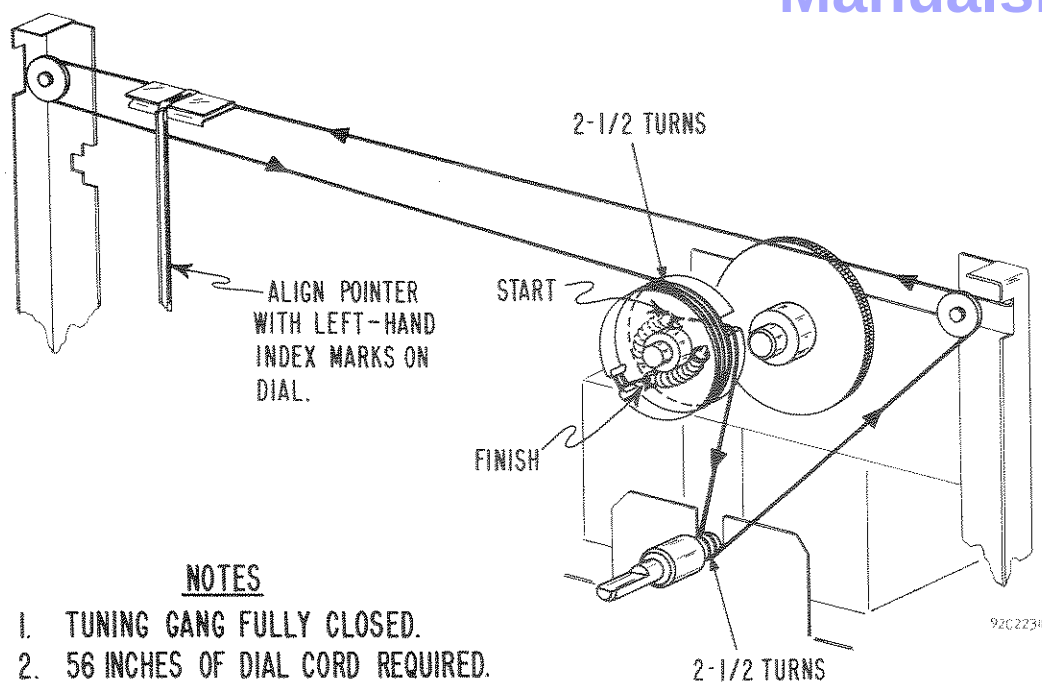

- NOTES**
1. TUNING GANG FULLY CLOSED.
 2. 56 INCHES OF DIAL CORD REQUIRED.

Fig. 1. Dial Stringing Diagram (Early Sets)

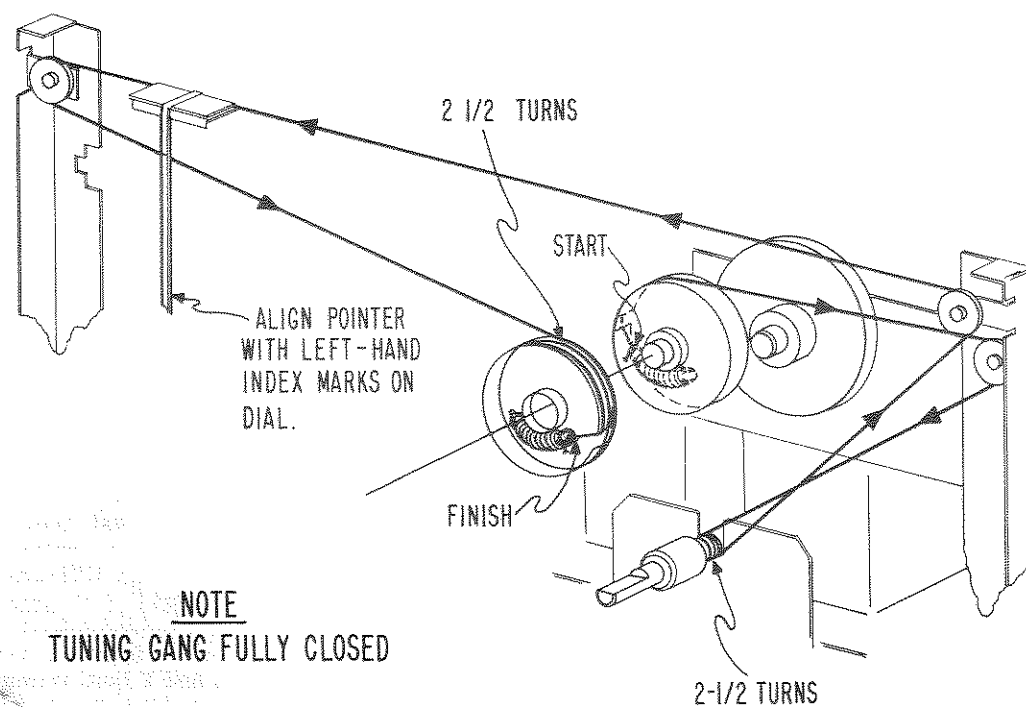


Fig. 2. Dial Stringing Diagram (Later Sets)

ALIGNMENT INSTRUCTIONS

- Be sure both the set and the signal generator are thoroughly warmed up before starting alignment.
- Use an accurate signal generator which has a modulated output and covers 455 KC to 14.0 MC.
- Set the volume control at maximum and disconnect the SW whip antenna.
- Use a non-metallic alignment tool with a 3/32"-wide screwdriver blade.
- Connect the output meter across the speaker voice coil.
- To avoid AVC action, use lowest output setting of signal generator which gives satisfactory reading on meter (approx. 50 milliwatts).
- Refer to Figs. 5 and 6 for location of the alignment adjustments.
- The local oscillator frequency is higher than the signal frequency on all bands.

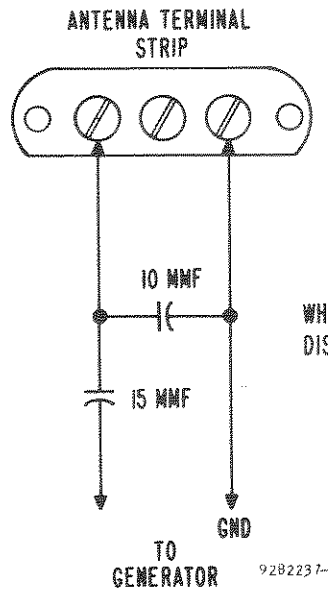


Fig. 3. Dummy Antenna for Band 3

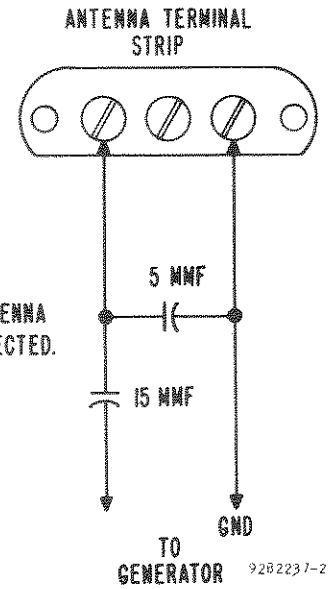


Fig. 4. Dummy Antenna for Band 4

NOTE
WHIP ANTENNA
DISCONNECTED.

ALIGNMENT PROCEDURE

Step	Signal Generator Connections	Generator Frequency	Band Selector Setting	Receiver Dial Setting	Adjust for Maximum Output
1	High side thru .1 mfd capacitor to stator plates of center section of tuning gang. Low side to chassis.	455 KC	2	1000 KC	A and B (2nd IF) C and D (1st IF)
2	Radiate gen. signal into stick-loop antenna.	360 KC	1	360 KC	E (osc. trimmer), F (mixer trimmer) and G (ant. trimmer)
3	Same as Step 2.	200 KC	1	200 KC	H (osc. slug), I (mixer slug), and J (ant. loading slug)
4	Repeat Step 2.				
5	Same as Step 2.	1400 KC	2	1400 KC	K (osc. trimmer), L (mixer trimmer) and M (ant. trimmer)
6	Same as Step 2.	600 KC	2	600 KC	N (osc. slug), O (mixer slug), and P (ant. loading slug)
7	Connect dummy antenna shown in Fig. 3.	5.0 MC	3	5.0 MC	Q (osc. trimmer), R (mixer trimmer) and S (ant. trimmer)
8	Same as Step 7.	2.2 MC	3	2.2 MC	T (osc. slug), U (mixer slug), and V (ant. slug)
9	Disconnect dummy antenna used for Steps 7 and 8 and connect dummy antenna shown in Fig. 4.	14.0 MC	4	14.0 MC	W (osc. trimmer), X (mixer trimmer) and Y (ant. trimmer)
10	Same as Step 9.	7.0 MC	4	7.0 MC	Z (osc. slug), AA (mixer slug), and AB (ant. slug)

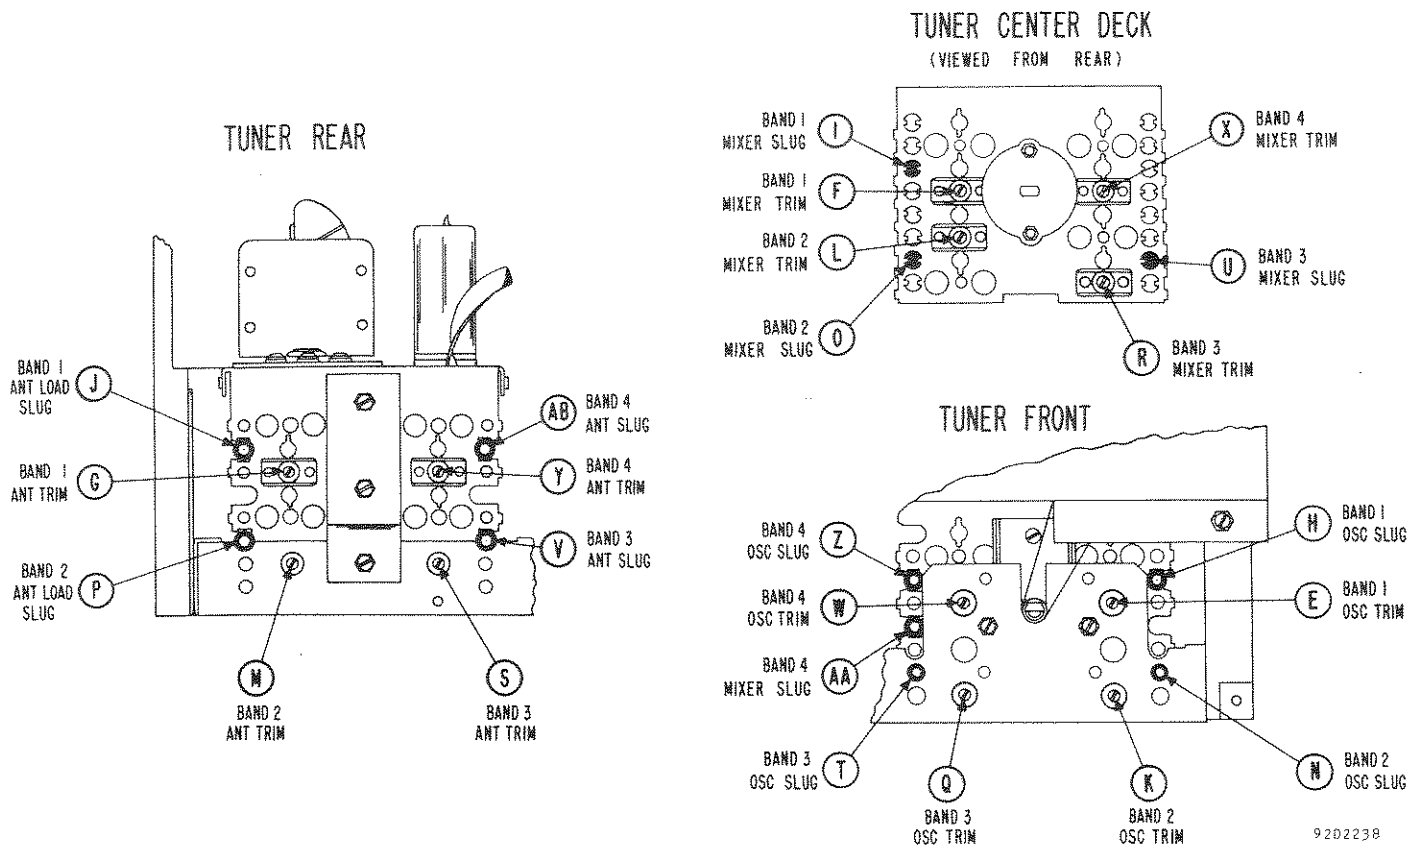


Fig. 5. Tuner Alignment Adjustments

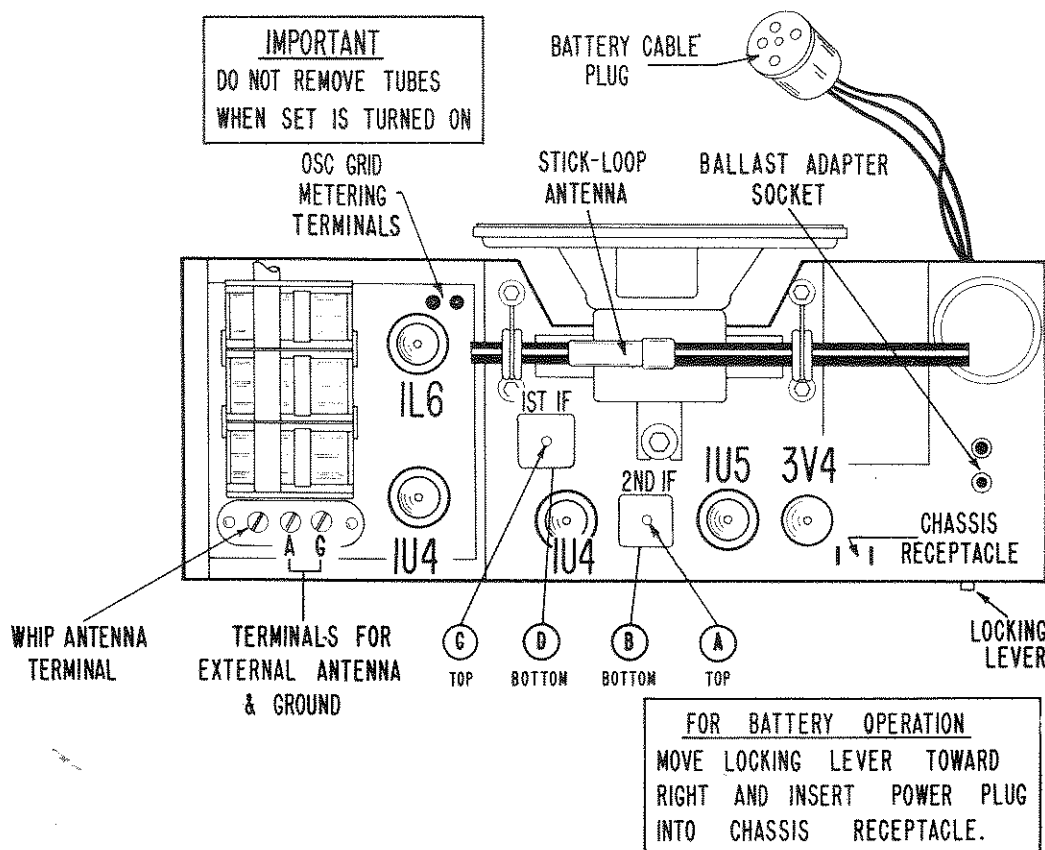


Fig. 6. Top View of Chassis Showing Location of Alignment Adjustments and Tubes

92C2239-A

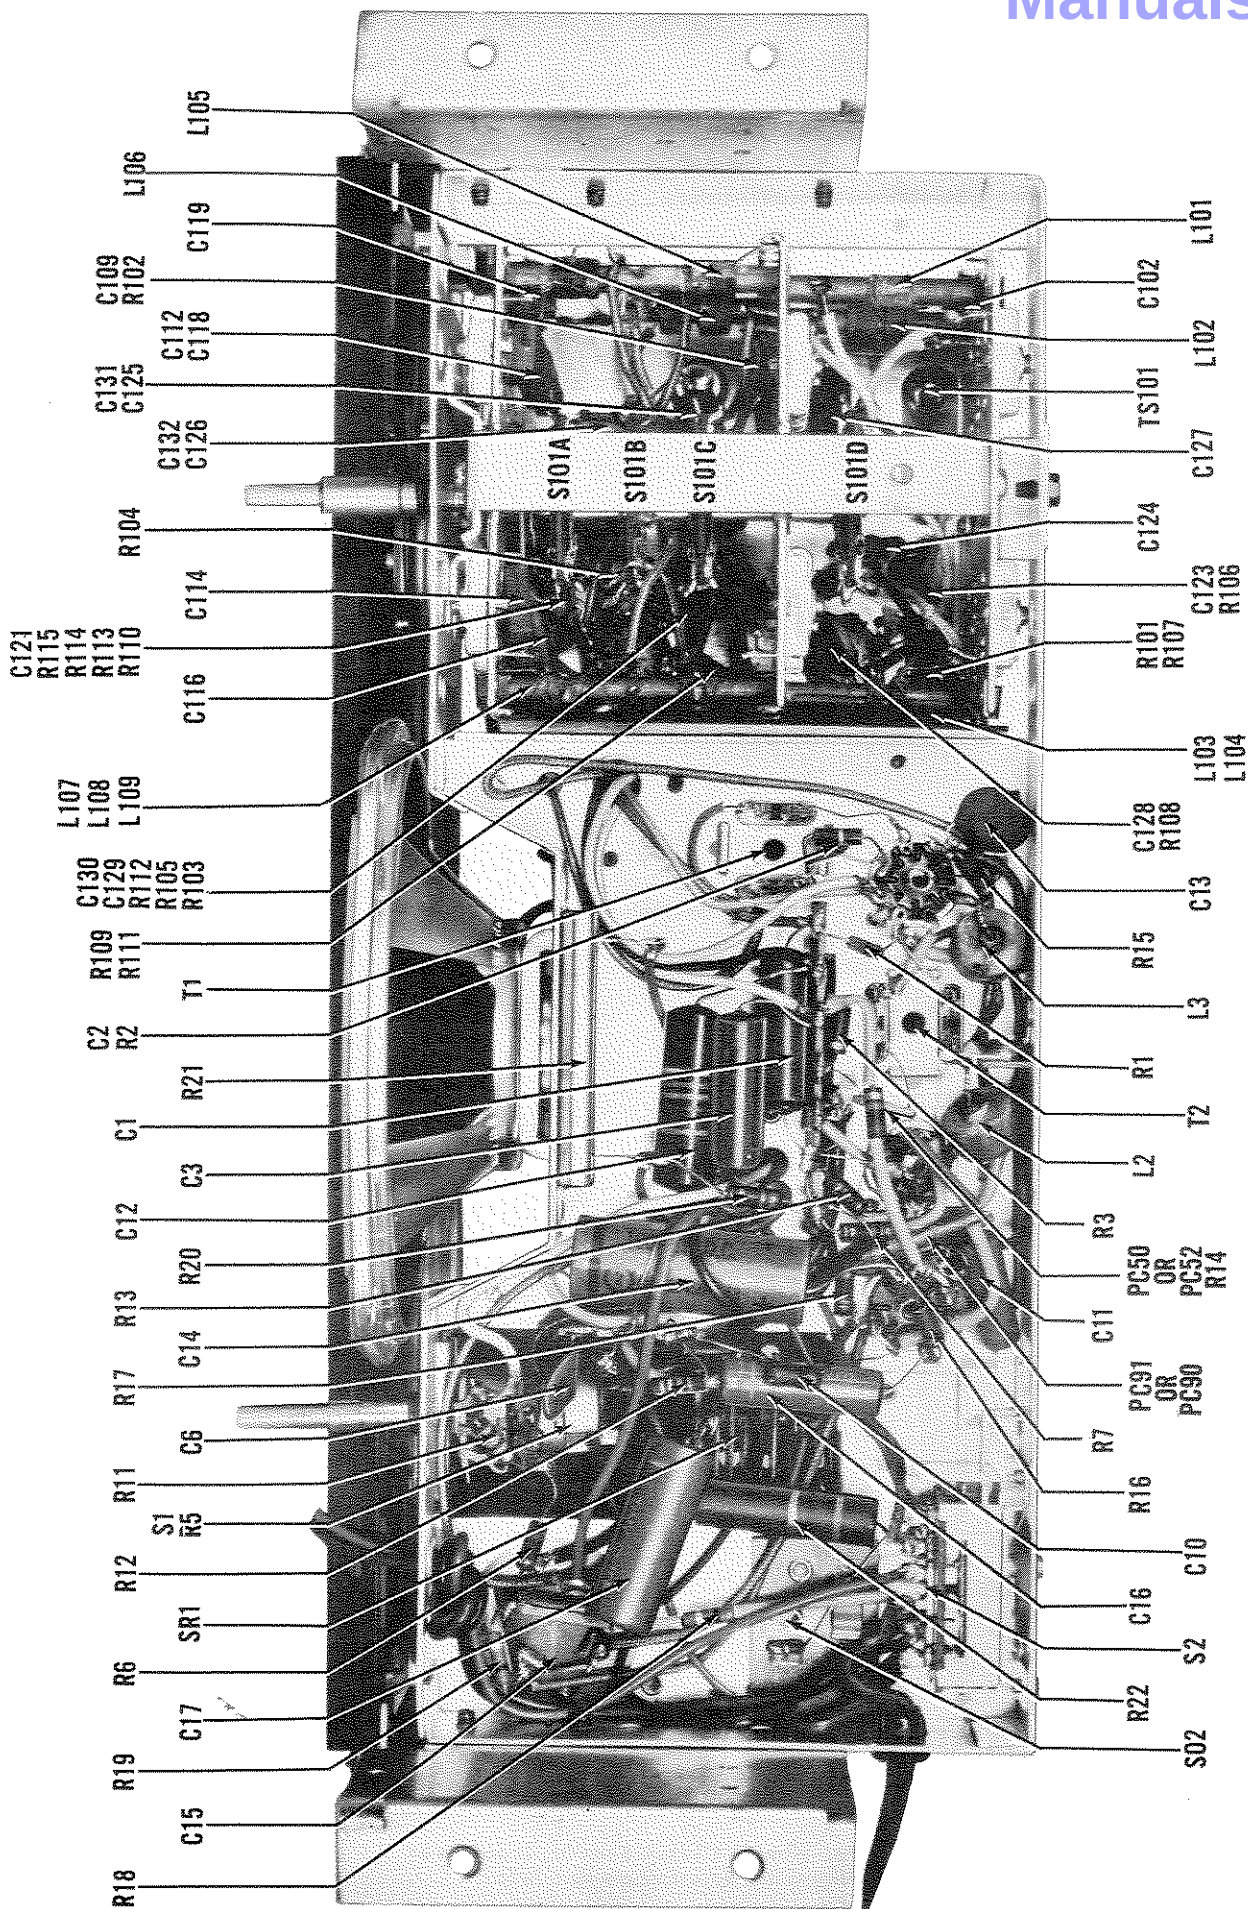


Fig. 7. Bottom View of Chassis Showing
Component Location

MAIN CHASSIS PARTS LIST

Schematic Symbol	Description	Hallicrafters Part Number	Schematic Symbol	Description	Hallicrafters Part Number
CAPACITORS			COILS AND TRANSFORMERS		
C-1,3,16	.047 mfd. 200V., molded tubular paper	46BS473L2	L-1	Antenna, stick-loop (less mtg. parts and twin-line)	57B203
**C-2	.001 mfd. GMV. 500V., ceramic	47C20A102N	L-2,3	Choke, RF; 1.0 Mh	53A265
C-6	.005 mfd. 450V., ceramic disc	47A168	T-1	Transformer, 1st IF	50C233
C-10	220 mmfd. 500V., ceramic	47CA20A221K	T-2	Transformer, 2nd IF	50C242
C-11	.0047 mfd. 600V., molded tubular paper	46BS472L6	T-3	Transformer, audio output (part of speaker LS-1)	-----
C-12,17	.047 mfd. 600V., molded tubular paper	46BR473L6	PLUGS AND SOCKETS		
C-13	.02 mfd. 500V., ceramic disc	47A242	PL-1	Line cord and plug	87A3592
C-14	100 mfd. 25V., electrolytic	45B214	SO-1	Socket, battery cable (less shell)	10A296
OC-15	Dual 40 mfd. 150V., 80 mfd. 150V., 80 mfd. 25V., electrolytic	45B215	SO-2	Shell for socket SO-1 above	10A294
or				Socket, ballast adapter	10A507
OC-15	Dual 40 mfd. 150V., 80 mfd. 150V., 200 mfd. 10V., electrolytic	45B251	SR-1	Socket, tube; 7 pin miniature	6B297
			TUBES AND RECTIFIERS		
⊙ See part number stamped on side of capacitor.			V-1	1U4: IF amplifier	90X1U4
** Guaranteed Minimum Value.			V-2	1U5: detector and audio amplifier	90X1U5
			V-3	3V4: audio output	90X3V4
RESISTORS			SWITCHES		
R-1,18,19	1000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X102K	S-1	Switch, on-off (part of Volume control R-5)	-----
R-2,3	2.2 megohms 10%, $\frac{1}{2}$ watt carbon	23X20X225K	S-2	Switch, power changeover	60B593
R-5	Volume control, 1 megohm (includes on-off switch S-1): for Models TW-500 and TW-600	25B1076	MISCELLANEOUS		
	for Model S-93	25B1077	Clip, IF transformer mtg.		
R-6	1500 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X152K	Cord, dial (specify length)		
R-7,14	10 megohms 10%, $\frac{1}{2}$ watt, carbon	23X20X106K	Dial plate, calibrated:		
R-11	33,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X333K	for Model TW-500, green		
R-12	330,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X334K	for Model TW-600, brown		
R-13	68 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X680J	for Model S-93, black		
R-15	100 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X101J	Diode filter plate (includes R-4, C-4, and C-5)		
R-16	220 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X221J	Grommet, rubber; 1/2" od		
R-17	1500 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X152J	Grommet, rubber, 5/8" od		
R-20	3300 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X332J	Lock, line cord		
R-21	2000 ohms 5%, 10 watts; wire-wound	24B981	Mounting base for tube shield		
R-22	82 ohms 5%, 2 watts, carbon	23X40X820J	Mounting plate for electrolytic capacitor C-15		
			Pentode couplate (includes R-8, R-9, R-10, C-7, C-8 and C-9)		
			Pointer, dial		
			Shield, tube		
			Snap-in trimount; for mounting chassis bottom plate		
			Speaker assembly, 5" PM; 3.2 ohm voice coil (includes output transformer T-3)		
			Spring, dial cord tension		

TUNER CHASSIS PARTS LIST


Schematic Symbol	Description	Hallicrafters Part Number	Schematic Symbol	Description	Hallicrafters Part Number
CAPACITORS			CAPACITORS		
C-101,104, 105,107, 108,110, 111,115, 117,120	5-25 mmfd.; ceramic trimmer	44A446	C-106	Tuning capacitor, 3 section	48C326
*C-102,122	22 mmfd. 10%, NPO, 500V.; ceramic	47X20CG220K	*C-109	39 mmfd. 5%, NPO, 500V.; ceramic	47X30CG390J/D
C-103,113	4-40 mmfd.; ceramic trimmer	44B443	C-112	570 mmfd. 2%, 500V.; silver mica	47X20C571G
			C-114	1650 mmfd. 2%, 500V.; silver mica	47A445
			C-116	3150 mfd. 2%, 500V.; silver mica	47B446

* USE EXACT REPLACEMENT ONLY

PRODUCTION CHANGES

Production changes are indicated on the schematic diagram by the numerical symbols 1, 2, 3, etc. When replacing components listed below, use the value or type indicated on the schematic diagram.




- 1 Pentode couplate changed. The type PC-91 pentode couplate used to couple V-2 to V-3 was replaced by a type PC-90. The PC-91 and PC-90 are identical except for the values of C-8 and C-9. C-8 is 100 mmfd in the PC-91 and 50 mmfd in the PC-90. C-9 is .005 mfd in the PC-91 and .002 mfd in the PC-90.
- 2 Diode filter plate changed. The type PC-52 diode filter plate was replaced by a type PC-50. The PC-52 and PC-50 are identical except for the values of C-4 and C-5. In the PC-52, C-4 and C-5 are 50 mmfd. In the PC-50, they are 100 mmfd.
- 3 R-109 decreased in value. R-109, mixer grid resistor, was changed from 10 megohms to 1 megohm. Note: In some sets, R-109 was 8.6 megohms instead of 10 megohms (3.9 megohm resistor on the tuner chassis in series with a 4.7 megohm resistor on the main chassis).
- 4 Value and voltage rating of C-15B, changed. C-15B filament filter section of the quad-section electrolytic capacitor, was changed from 200 mfd, 10 volts to 80 mfd, 25 volts.

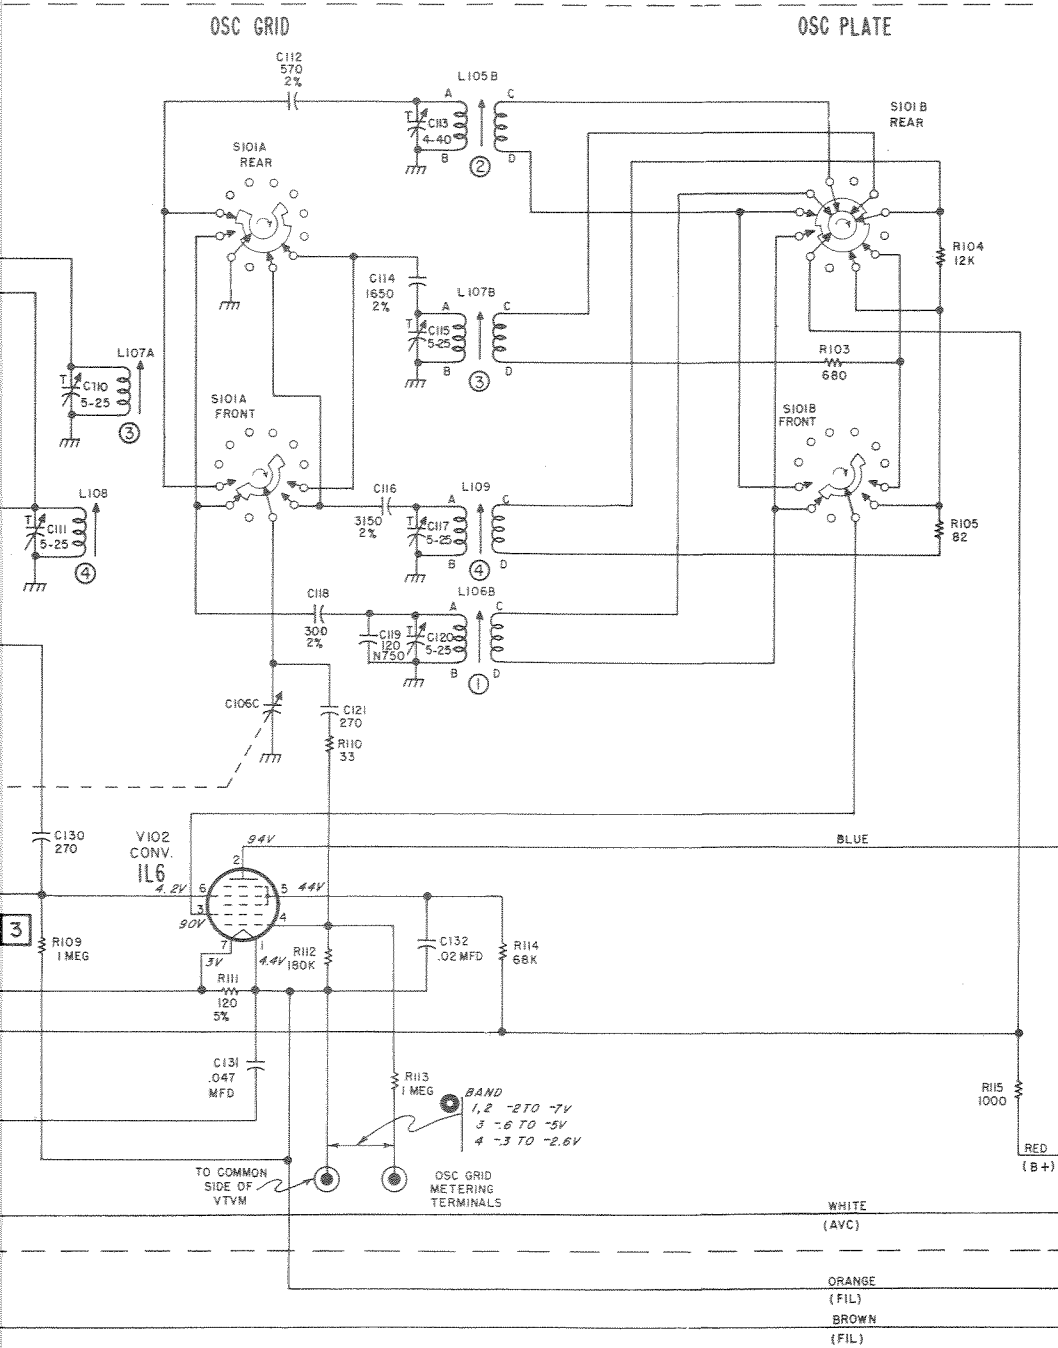


Production changes are indicated on the schematic diagram by the numerical symbol.

When replacing components listed below, use the value or type indicated on the schematic diagram.

- 1 Pentode couplate changed. The type PC-91 pentode couplate used to couple V1 by a type PC-90. The PC-91 and PC-90 are identical except for the values of C-9 and C-10. In the PC-91, C-9 is .005 mfd in the PC-90, they are 100 mmfd.
- 2 Diode filter plate changed. The type PC-52 diode filter plate was replaced by a type PC-50. PC-52 and PC-50 are identical except for the values of C-4 and C-5. In the PC-52, C-4 and C-5 are 100 mmfd. In the PC-50, they are 100 mmfd.
- 3 R-109 decreased in value. R-109, mixer grid resistor, was changed from 10 megohms to 1 megohm. Note: In some sets, R-109 was 8.6 megohms instead of 10 megohms (3.9 megohm resistor in series with a 4.7 megohm resistor on the main chassis).
- 4 Value and voltage rating of C-15B, changed. C-15B filament filter section of electrolytic capacitor, was changed from 200 mfd, 10 volts to 80 mfd, 25 volts.

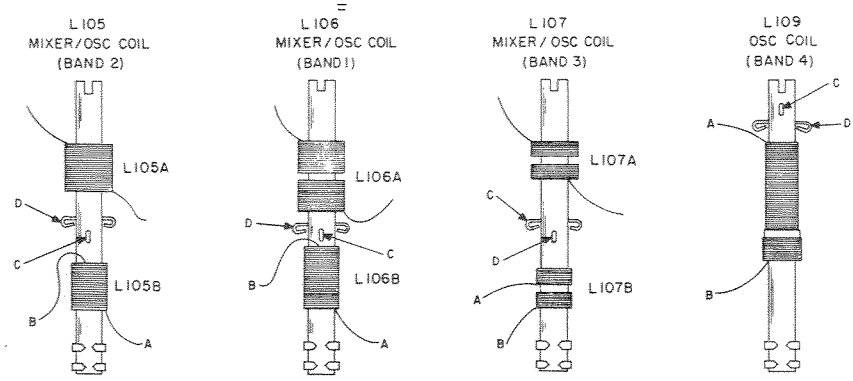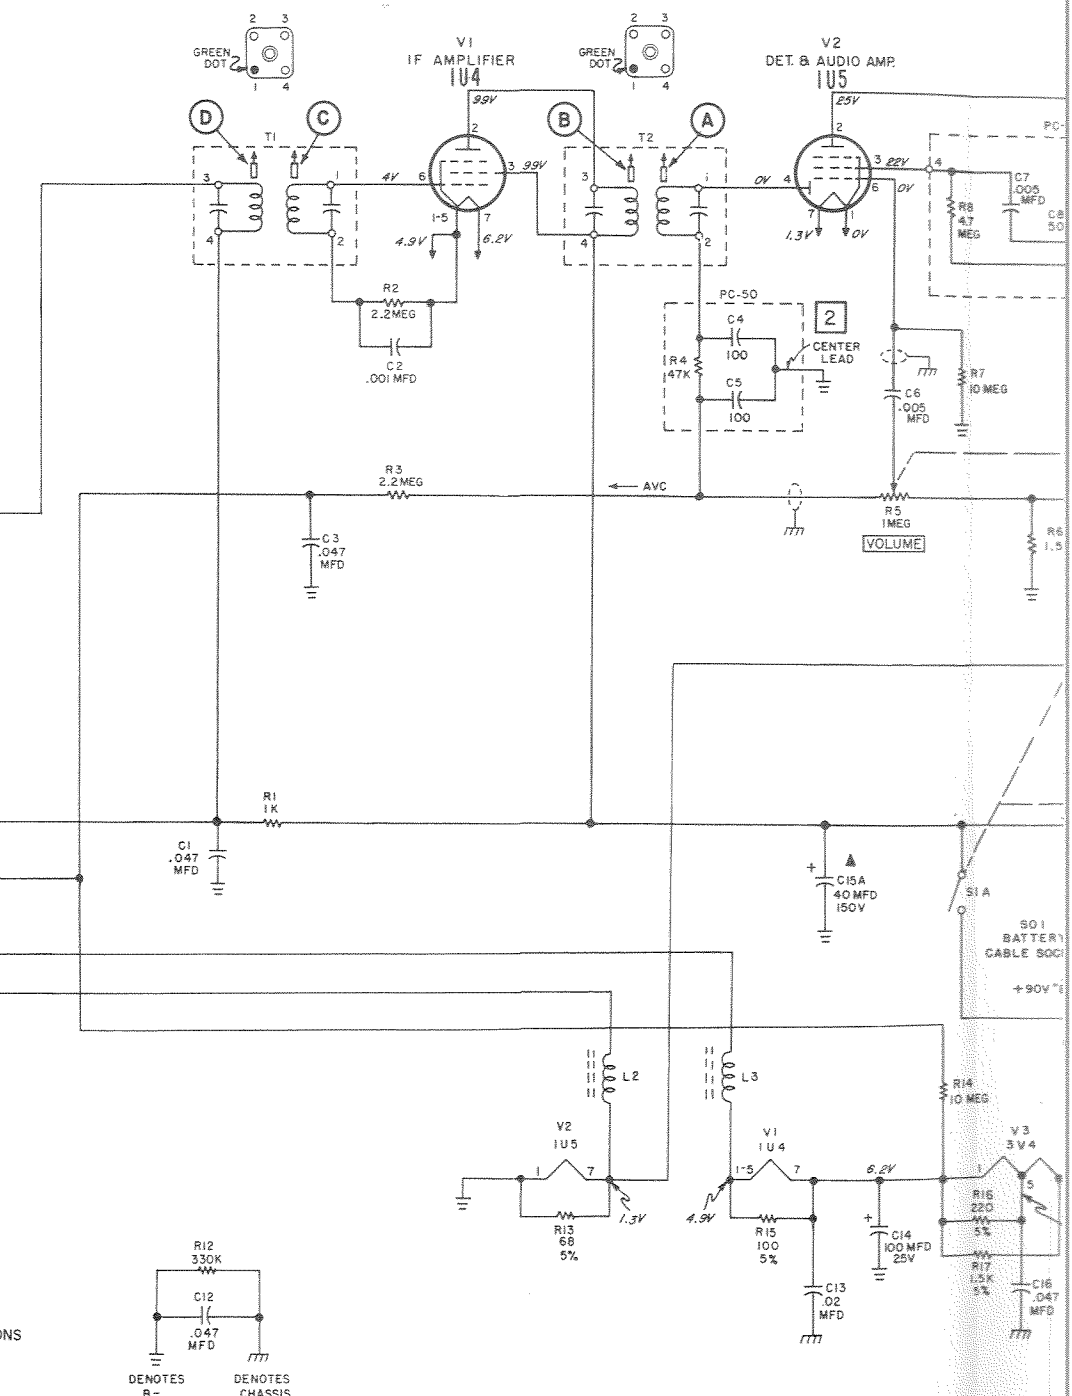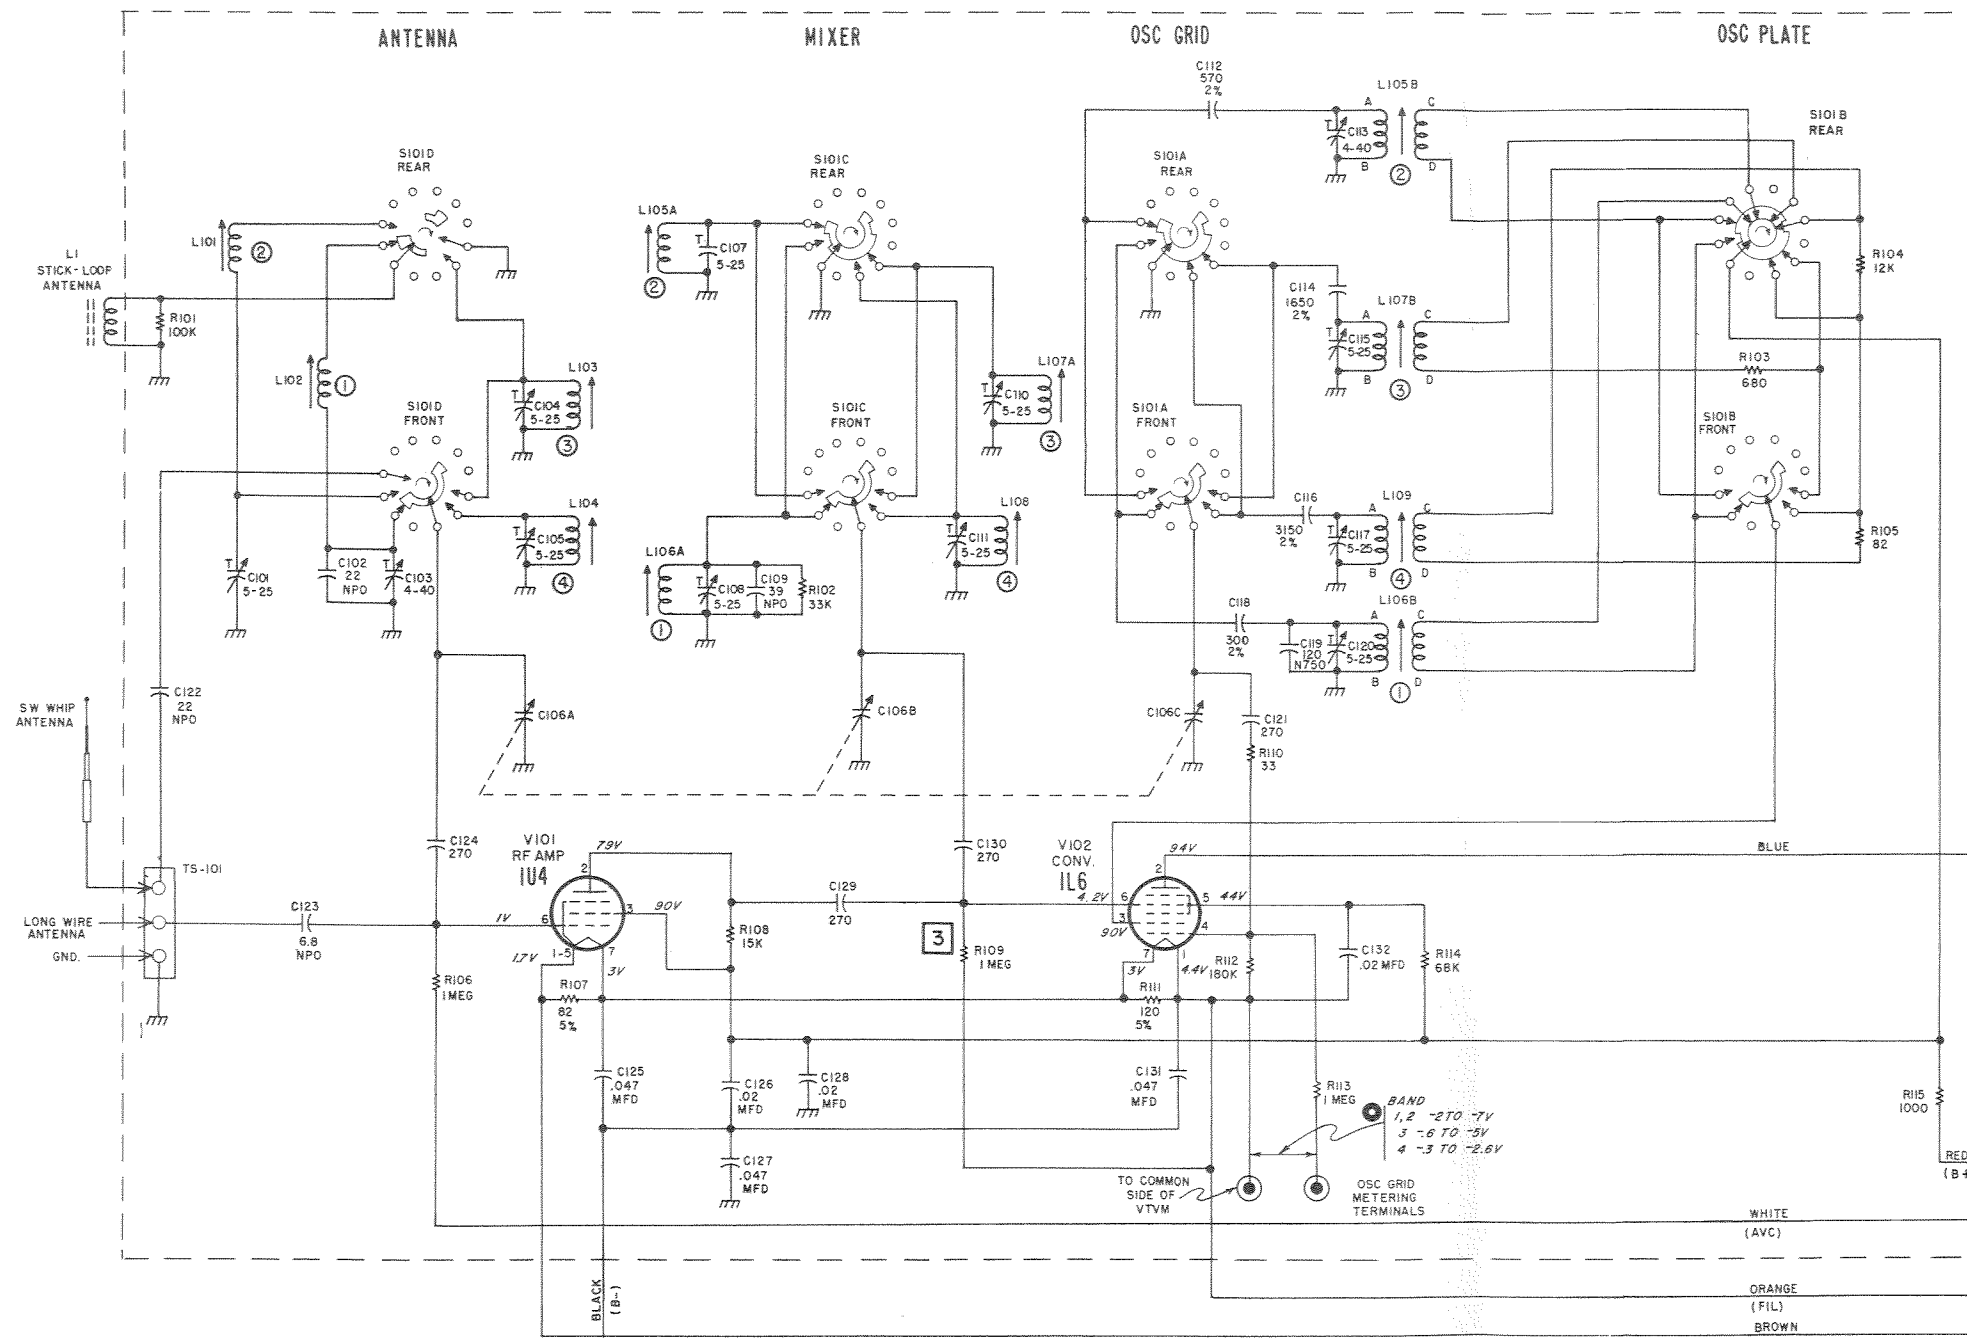

- NOTES**
1. RESISTORS ARE 1/2 WATT AND 10% UNLESS OTHERWISE SPECIFIED.
 2. RESISTANCE IN OHMS AND CAPACITANCE IN MMF UNLESS OTHERWISE SPECIFIED. K=1000.
 3. INTERMEDIATE FREQUENCY=455 KC.
 4. POWER CHANGEOVER SWITCH S-2 SHOWN IN AC/DC POSITION. FOR BATTERY OPERATION, INSERT LINE CORD PLUG INTO CHASSIS RECEPTACLE (SEE FIG. 6).
 5. LINE VOLTAGE: AC/DC OPERATION—117 VOLTS
BATTERY OPERATION—90V "B" AND 9V "A"
 6. ALL VOLTAGES MEASURED WITH VTVM BETWEEN TUBE SOCKET TERMINALS AND B-($\frac{1}{2}$). VOLTAGES ARE DC AND POSITIVE UNLESS OTHERWISE SPECIFIED.
 7. ALL VOLTAGES ARE MEASURED WITH ANTENNA TERMINALS AND STICK-LOOP ANTENNA SHORTED.
 8. BAND SELECTOR SWITCH S101 SHOWN IN BROADCAST POSITION. (BAND 2). ALL SWITCH SECTIONS ARE AS VIEWED FROM FRONT OF SET.
 9. AVAILABLE AS AN ACCESSORY.
 10. VOLTAGE VARIES WITH SETTING OF TUNING GANG.

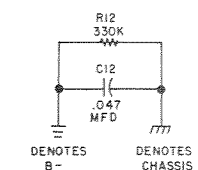

VALUES AND TOLERANCES SHOWN ARE NOMINAL AND VARIATIONS MAY BE FOUND. IT IS RECOMMENDED THAT THE VOLTAGE OF ANY REPLACEMENT CORRESPOND TO THE NOMINAL VOLTAGE OF THE PART BEING REPLACED.

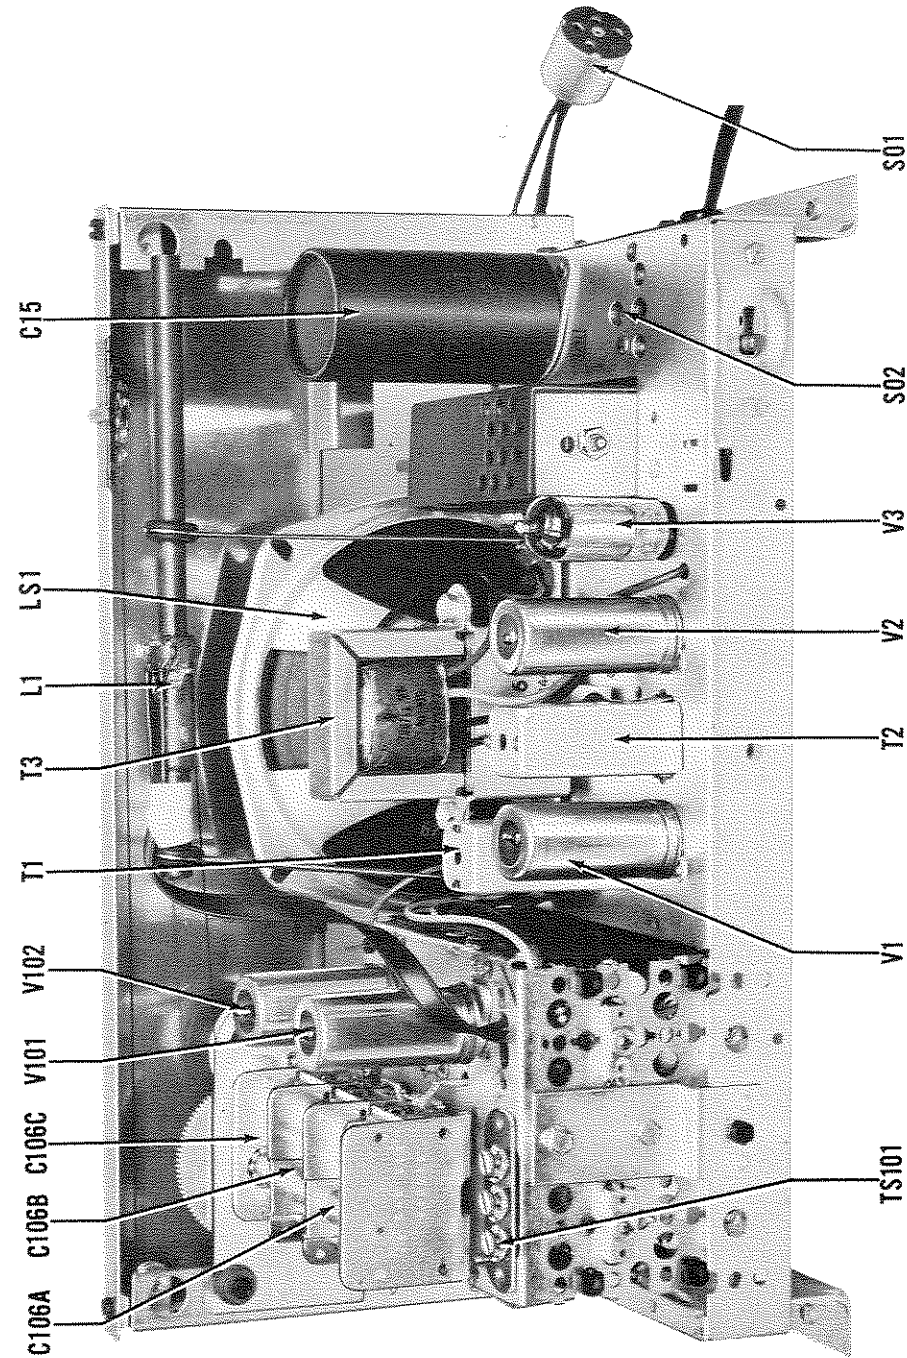


Fig. 8. Top View of Chassis Showing Component Location

92X2236

S₅
C-
**C-
C-
C-
C-
C-
C-
C-
OC-
OC-
OC-

O
**

R
R
R

R
R
R
R
R
R
R
R
R
S
(
#(

MAIN CHASSIS PARTS LIST

Schematic Symbol	Description	Hallcrafters Part Number	Schematic Symbol	Description	Hallcrafters Part Number
CAPACITORS			COILS AND TRANSFORMERS		
C-1,3,16	.047 mfd. 200V., molded tubular paper	46BS473L2	L-1	Antenna, stick-loop (less mtg. parts and twin-line)	57B203
**C-2	.001 mfd. GMV. 500V., ceramic	47C20A102N	L-2,3	Choke, RF; 1.0 Mh	53A265
C-6	.005 mfd. 450V., ceramic disc	47A168	T-1	Transformer, 1st IF	50C233
C-10	220 mmfd. 500V., ceramic	47CA20A221K	T-2	Transformer, 2nd IF	50C242
C-11	.0047 mfd. 600V., molded tubular paper	46BS472L6	T-3	Transformer, audio output (part of speaker LS-1)	-----
C-12,17	.047 mfd. 600V., molded tubular paper	46BR473L6	PLUGS AND SOCKETS		
C-13	.02 mfd. 500V., ceramic disc	47A242	PL-1	Line cord and plug	87A3592
C-14	100 mfd. 25V., electrolytic	45B214	SO-1	Socket, battery cable (less shell)	10A296
⊙ C-15	Dual 40 mfd. 150V., 80 mfd. 150V., 80 mfd. 25V., electrolytic	45B215	SO-2	Shell for socket SO-1 above	10A294
or				Socket, ballast adapter	10A507
⊙ C-15	Dual 40 mfd. 150V., 80 mfd. 150V., 200 mfd. 10V., electrolytic	45B251	SR-1	Socket, tube; 7 pin miniature	6B297
				Rectifier, selenium; 100 ma	27B190
⊙ See part number stamped on side of capacitor.			TUBES AND RECTIFIERS		
** Guaranteed Minimum Value.			V-1	1U4: IF amplifier	90X1U4
			V-2	1U5: detector and audio amplifier	90X1U5
			V-3	3V4: audio output	90X3V4
RESISTORS			SWITCHES		
R-1,18,19	1000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X102K	S-1	Switch, on-off (part of Volume control R-5)	-----
R-2,3	2.2 megohms 10%, $\frac{1}{2}$ watt carbon	23X20X225K	S-2	Switch, power changeover	60B593
R-5	Volume control, 1 megohm (includes on-off switch S-1); for Models TW-500 and TW-600	25B1076	MISCELLANEOUS		
	for Model S-93	25B1077		Clip, IF transformer mtg.	76A385
R-6	1500 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X152K		Cord, dial (specify length)	38A026
R-7,14	10 megohms 10%, $\frac{1}{2}$ watt, carbon	23X20X106K		Dial plate, calibrated:	
R-11	33,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X333K		for Model TW-500, green	83C473
R-12	330,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X334K		for Model TW-600, brown	83C474
R-13	68 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X680J		for Model S-93, black	83A487
R-15	100 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X101J	PC-50	Diode filter plate (includes R-4, C-4, and C-5)	49A016
R-16	220 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X221J		Grommet, rubber; 1/2" od	16A190
R-17	1500 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X152J		Grommet, rubber, 5/8" od	16A125-1
R-20	3300 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X332J		Lock, line cord	76A974
R-21	2000 ohms 5%, 10 watts; wire-wound	24B981		Mounting base for tube shield	69A308
R-22	82 ohms 5%, 2 watts, carbon	23X40X820J	PC-90	Mounting plate for electrolytic capacitor C-15	8A749
				Pentode couplate (includes R-8, R-9, R-10, C-7, C-8 and C-9)	49B043
				Pointer, dial	82B252
				Shield, tube	69A306
				Snap-in trimount; for mounting chassis bottom plate	76A1055
			LS-1	Speaker assembly, 5" PM; 3.2 ohm voice coil (includes output transformer T-3)	85C161
				Spring, dial cord tension	75A163

TUNER CHASSIS PARTS LIST

Schematic Symbol	Description	Hallcrafters Part Number	Schematic Symbol	Description	Hallcrafters Part Number
CAPACITORS			CAPACITORS		
C-101,104, 105,107, 108,110, 111,115, 117,120	5-25 mmfd.; ceramic trimmer	44A446	C-106	Tuning capacitor, 3 section	48C326
*C-102,122	22 mmfd. 10%, NPO, 500V.; ceramic	47X20CG220K	*C-109	39 mmfd. 5%, NPO, 500V.; ceramic	47X30CG390J/D
C-103,113	4-40 mmfd.; ceramic trimmer	44B443	C-112	570 mmfd. 2%, 500V.; silver mica	47X20C571G
			C-114	1650 mmfd. 2%, 500V.; silver mica	47A445
			C-116	3150 mfd. 2%, 500V.; silver mica	47B446

* USE EXACT REPLACEMENT ONLY

TUNER CHASSIS PARTS LIST (Cont.)

Schematic Symbol	Description	Hallicrafters Part Number	Schematic Symbol	Description	Hallicrafters Part Number
CAPACITORS (Cont.)			COILS AND TRANSFORMERS (Cont.)		
C-118	300 mmfd. 2% 500V.; silver mica	47X20C301G	L-105	Coil, oscillator and mixer; band 2	51B1827
*C-119	120 mmfd. 5%, N750, 500V.; ceramic	47X30UK121J/D	L-106	Coil, oscillator and mixer; band 1	51B1826
C-121,124,129,130	270 mmfd. 10%, 500V.; ceramic	47CA20A271K	L-107	Coil, oscillator and mixer; band 3	51B1828
*C-123	6.8 mmfd. 10%, NPO, 500V.; ceramic	47X20CG068K/D	L-108	Coil, mixer; band 4	51B1830
C-125,131	.047 mfd. 20%, 200V.; molded tubular paper	46BS473L2	L-109	Coil, oscillator; band 4	51B1829
C-126,128,132	.02 mfd. 500V.; ceramic disc	47A242	TUBES		
C-127	.047 mfd. 20%, 600V.; molded tubular paper	46BS473L6	V-101	1U4: RF amplifier	90X1U4
RESISTORS			V-102	1L6: converter	90X1L6
R-101	100,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X104K	MISCELLANEOUS		
R-102	33,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X333K	Bushings and gear assembly (less springs and set screws)		
R-103	680 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X681K	Grommet, rubber; 1/2" od (gang mounting)		
R-104	12,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X123K	Pinion and pulley assembly		
R-105	82 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X820K	Ring, retaining (for pulley and rear of band selector shaft)		
R-106,113	1 megohm 10%, $\frac{1}{2}$ watt, carbon	23X20X105K	Ring, retaining (for front of band selector shaft)		
R-107	82 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X820J	Shield, tube; 7 pin miniature		
R-108	15,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X153K	Snap-in trimount (for mounting insulator strip on tuner)		
R-109	1 megohm 10%, $\frac{1}{2}$ watt, carbon	23X20X105K	Socket, tube; 7 pin miniature		
R-110	33 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X330K	Spring, gear; 13/32" lg.		
R-111	120 ohms 5%, $\frac{1}{2}$ watt, carbon	23X20X121J	Switch assembly, Band Selector (includes center coil and trimmer mtg. bkt. of tuner)		
R-112	180,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X184K	Terminal strip, antenna		
R-114	68,000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X683K			
R-115	1000 ohms 10%, $\frac{1}{2}$ watt, carbon	23X20X102K			
COILS AND TRANSFORMERS					
L-101	Coil, antenna loading; band 2	51B1832	S-101		
L-102	Coil, antenna loading; band 1	51B1831			
L-103	Coil, antenna; band 3	51B1833			
L-104	Coil, antenna; band 4	51B1834	TS-101		

CABINET PARTS LIST

Description	Hallicrafters Part Number	Description	Hallicrafters Part Number	Description	Hallicrafters Part Number
Antenna, telescoping whip (with lead and lug)	57B204	Cabinet replacement parts: (Cont.)		Front panel assembly, plastic:	
Baffle board:		Grip, finger; front door:		for Model TW-500, green. . .	7D531
for Models TW-500 and TW-600, gold	7C532	for Models TW-500 and TW-600	30B302	for Model TW-600, brown . .	7A533
for Model S-93, silver	7A590	for Model S-93.	30B289	for Model S-93, gray.	7A589
Cabinet, complete with carrying handle, map, mtg. feet, fiber eye-let, front door finger grip, and hinges:		Handle, carrying:		Knob, Band Selector:	
for Model TW-500, green lizigator leatherette	78F1082	for Model TW-500, green. . .	121-331	for Model TW-500, green. . .	15C713
for Model TW-600, top-grain cowhide	78F1084	for Model TW-600, brown (with mtg. hdwe.)	121-332	for Model TW-600, brown . .	15A718
for Model S-93, gray leatherette	78A1147	for Model S-93, gray.	8A2593	for Model S-93, gray.	15A795
Cabinet replacement parts:		Hinge assembly, front door:		Knob, Tuning:	
Eyelet, fiber; for whip antenna (mounted in top of cabinet):		Left hand (viewed from front):		for Model TW-500, green. . .	15A710
for Model TW-500, green. . .	8A2350	for Models TW-500 and TW-600	30B312	for Model TW-600, brown . .	15A715
for Model TW-600, brown . .	8A2351	for Model S-93.	30A335	for Model S-93, gray.	15A794
for Model S-93, gray.	8A2592	Right hand (viewed from front):		Knob, Volume:	
Foot, mtg.; rubber:		for Models TW-500 and TW-600	30B311	for Model TW-500, green. . .	15B728
for Models TW-500 and S-93, black	16A347	for Model S-93.	30A334	for Model TW-600, brown . .	15A729
for Model TW-600, brown . .	16A396	Map:		for Model S-93, gray.	15A793
		for Model TW-500, green. . .	14C382	Operating Instruction Booklet:	
		for Model TW-600, brown . .	14C384	for Models TW-500 and TW-600	94X1255
		for Model S-93, gray. . . .	14C392	for Model S-93.	94X1346
		Eyelet, fiber; for whip antenna (mounted in bottom of cabinet) .	8A2348	Spacer, fiber; for whip antenna (3/4" od, 1/4" id, 9/32" t) . . .	8A2370

* USE EXACT REPLACEMENT ONLY

NOTES



BOOK NO. 94X1434

155

TX-500 (Runs 1, 2, and 2A)

TX-600 (Runs 1 and 1A)

S-93 (Run 1)