

# SENCORE

## *ATLAS* *Modular Receiver Decoder*

### MRD 3187B



## User Manual

Form 7632B

**FCC Class A Information**

The Atlas MRD 3187B has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

Shielded cables must be used with this unit to ensure compliance with the Class A FCC limits.

**⚠ Warning:** *Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

**Dolby Digital Information**

This product has been manufactured under license from Dolby Laboratories.

“Dolby Digital”, “DolbyE” and “AC-3” are licensed trademarks of Dolby Laboratories.

# WARNING

## **PLEASE OBSERVE THESE SAFETY PRECAUTIONS**

**There is always a danger present when using electronic equipment.**

*Unexpected high voltages can be present at unusual locations in defective equipment and signal distribution systems. Become familiar with the equipment that you are working with and observe the following safety precautions.*

- Every precaution has been taken in the design of your MRD 3187B to ensure that it is as safe as possible. However, safe operation depends on you the operator.
- Always be sure your equipment is in good working order. Ensure that all points of connection are secure to the chassis and that protective covers are in place and secured with fasteners.
- Never work alone when working in hazardous conditions. Always have another person close by in case of an accident.
- Always refer to the manual for safe operation. If you have a question about the application or operation call SENCORE for assistance.
- Never allow your equipment to be exposed to water or high moisture environments. If exposed to a liquid, remove power safely (at the breaker) and send your equipment to be serviced by a qualified technician.
- When installing the MRD 3187B utilizing the DC power supply, the power supply **MUST** be used in conjunction with an over-current protective device rated at 50V, 5A, type: Slow-blo, as part of battery-supply circuit.

MRD 3187B User Manual


# Package Contents

The following is a list of the items that are included along with the MRD 3187B:

1. User Manual
2. Declaration of Conformity
3. Warranty Registration Card
4. AC Power Cable
5. Four (4) Rack Mount Clips
6. Four (4) Rack Mount Screws
7. Third Wire Ground Warning

*Note: If any option cables were ordered with the MRD 3187B, they will be included in the box as well.*

If any of these items were omitted from the packaging of the MRD 3187B please call 1-800-SENCORE to obtain a replacement.

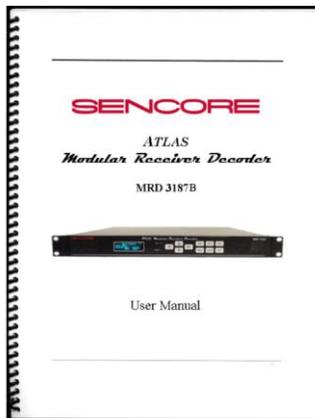

1.) User Manual




2.) Declaration of Conformity



3.) Warranty Registration Card




4.) AC Power Cable



5.) Rack Mount Clips



6.) Rack Mount Screws

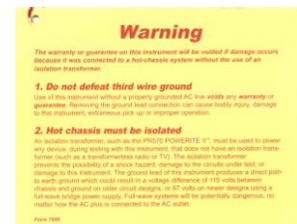

7.) Third Wire Ground Warning

## How to Use This Manual

Since the MRD 3187B is a modular device, this manual is arranged according to the specific option cards available. During configuration steps, all button presses are indicated by a picture of the actual button.

The beginning of each section includes a short description of the section, along with a section specific table of contents.

When using this manual, many extra pieces of useful information are inserted where pertinent and are designated in the following forms:

### Note

Designator: *Note*: “ ”

Description: These items are little extra pieces of information to ease unit configuration

### Caution

Designator: *CAUTION*: “ ”

Description: These items should be seriously considered before configuring a setting.

### Warning

Designator:  *Warning*: “ ” or **WARNING** 

Description: These items indicate actions that could have severe consequences.

## Factory Configurations

The MRD 3187B is an extremely versatile piece of equipment and in order to further expand its capabilities its internal setup can be factory configured in a number of different ways.

### Configuration 1 “Config 1” (No Decoder)

This configuration slaves the internal backplanes to one another but provides no decoded video output. The placement of input cards can be in both RDS1 and RDS2 (Slots 1-2, 1-3, 1-4, 2-2, 2-3, 2-4). No video output cards may be installed. This configuration is usually used as a satellite receiver or in combination with an MPEG/IP card to encapsulate the TS from the active input and transmit it via IP.

### Configuration 1 “Config 1” (Single Decoder)

This configuration slaves the internal backplanes to one another and provides one video output. The placement of input cards can be in both RDS1 and RDS2 (Slots 1-2, 1-3, 1-4, 2-2, 2-3, 2-4). Video outputs cards may only be placed in slot 1-1. This configuration allows for the tuning of two independent audio services. Only one input may be active and only one program decoded at any time.

**Configuration 1 “Config 1” (Dual Decoder)**

This configuration slaves the internal backplanes to one another and provides two mirrored video outputs. The placement of input cards can be in both RDS1 and RDS2 (Slots 1-2, 1-3, 1-4, 2-2, 2-3, 2-4). Video outputs cards may be placed in slots 1-1 and 2-1. This configuration allows for the tuning of four independent audio services. This configuration is commonly used to provide an HD and SD video output from the same input signal. Only one input may be active and only one program decoded at any time.

**Configuration 2 “Config 2” (No Decoder)**

This configuration utilizes the internal backplanes independent from one another allowing one MRD to input two independent inputs simultaneously. With this configuration, the MRD essentially acts like two configuration 1 no decoder units in the in the rack space of one MRD. One input per RDS can be active.

**Configuration 2 “Config 2” (Single Decoder)**

This configuration utilizes the internal backplanes independent from one another. This configuration operates identical to a configuration 1 unit except for input cards placed in RDS2 (Slots 2-2, 2-3, 2-4) cannot be decoded. A popular use of this configuration is to place an RF card and an ASI card (i.e. 8701A and 8702) in RDS2 to provide RF input and ASI output to act as an 8-VSB or satellite receiver. The bottom RDS may then be used independently to decode a different independent input.

**Configuration 2 “Config 2” (Dual Decoder)**

This configuration utilizes the internal backplanes independent from one another allowing one MRD to input and decode two independent inputs simultaneously. With this configuration, the MRD essentially acts like two configuration 1 single decoder units in the in the rack space of one decoder. One input per RDS can be active and decode unique video simultaneously.

# Contents

<b>PACKAGE CONTENTS .....</b>	<b>3</b>
<b>HOW TO USE THIS MANUAL .....</b>	<b>4</b>
<b>FACTORY CONFIGURATIONS.....</b>	<b>4</b>
CONFIGURATION 1 “CONFIG 1” (NO DECODER) .....	4
CONFIGURATION 1 “CONFIG 1” (SINGLE DECODER).....	4
CONFIGURATION 1 “CONFIG 1” (DUAL DECODER) .....	5
CONFIGURATION 2 “CONFIG 2” (NO DECODER) .....	5
CONFIGURATION 2 “CONFIG 2” (SINGLE DECODER).....	5
CONFIGURATION 2 “CONFIG 2” (DUAL DECODER) .....	5
<b>CONTENTS .....</b>	<b>6</b>
<b>SECTION 1 – GETTING STARTED.....</b>	<b>9</b>
1.1 INSTALLATION .....	10
1.2 QUICK START GUIDE .....	11
1.3 MAINTENANCE .....	11
<b>SECTION 2 – CONTROLS AND CONFIGURATION.....</b>	<b>13</b>
2.1 FRONT OF UNIT.....	14
2.2 REAR OF UNIT.....	14
2.3 FRONT PANEL DISPLAY LAYOUT .....	14
2.4 FRONT PANEL INDICATORS .....	14
2.5 INPUT ERROR LOGIC .....	15
2.6 DECODER ERROR LOGIC .....	15
2.8 FAN ERROR LOGIC.....	16
2.9 SNMP TRAPS .....	16
2.10 INPUT/OUTPUT SLOT ORGANIZATION .....	16
<b>SECTION 3 – OPTION CARDS OVERVIEW .....</b>	<b>17</b>
3.1 LICENSE OPTIONS .....	19
3.2 8VSB/QAM RECEIVER – OPTION 8701A .....	19
3.3 SERIAL TRANSPORT STREAM I/O (DVB-ASI/SMPTE 310M) – OPTION 8702.....	19
3.4 HIGH BIT RATE ASI INPUT – OPTION 8703.....	19
3.5 VIDEO OUTPUT (2 SD-SDI, 1 COMPOSITE) – OPTION 8704A/8704B.....	19
3.6 VIDEO OUTPUT (2 HD-SDI, 1 RGBHV/YPbPr) – OPTION 8705/8705A .....	19
3.7 VIDEO OUTPUT (1 RGBHV/YPbPr, 1 COMPOSITE) – OPTION 8706A.....	19
3.8 AUDIO OUTPUT (DOLBY E, AES DIGITAL, ANALOG) – OPTION 8707A.....	20
3.9 VIDEO OUTPUT (2 HD/SH-SDI, 1 RGBHV/YPbPr/COMPOSITE) – OPTION 8708 .....	20
3.10 DUAL INPUT DVB-S/DVB-S2 RECEIVER – OPTION 8710/8710A.....	20
3.11 DUAL INPUT ASM RECEIVER – OPTION 8711.....	20
3.12 VIDEO OUTPUT (2 HD/SD-SDI, 1 RGBHV/YPbPr/COMP) – OPTION 8712 .....	20
3.13 GPIO MODULE – OPTION 8713.....	20
3.14 RELAY AND DPI TRIGGER – OPTION 8714.....	21
3.15 DUAL INPUT COFDM RECEIVER – OPTION 8715 .....	21
3.16 CAM DECRYPTION – OPTION 8721 .....	21
3.17 MPEG OVER IP INPUT/OUTPUT – OPTION 8725.....	21
3.18 DUAL MPEG OVER IP INPUT/ UDP OUTPUT – OPTION 8727.....	21
<b>SECTION 4 – USING THE FRONT PANEL TO CONFIGURE THE MRD 3187B .....</b>	<b>23</b>
4.1 8VSB/QAM RECEIVER – OPTION 8701A .....	24
4.2 SERIAL TRANSPORT STREAM INPUT/OUTPUT (DVB-ASI/SMPTE 310M) – OPTION 8702 .....	27

## MRD 3187B User Manual

4.3 HIGH BIT RATE ASI INPUT – OPTION 8703.....	29
4.4 VIDEO OUTPUT (2 SD-SDI, 1 COMPOSITE) – OPTION 8704A/8704B.....	31
4.5 VIDEO OUTPUT (2 HD-SDI, 1 RGBHV/YPbPr) – OPTION 8705/8705A.....	38
4.6 VIDEO OUTPUT (1 RGBHV/YPbPr, 1 COMPOSITE) - OPTION 8706A.....	44
4.7 AUDIO OUTPUT (DOLBYE, AES DIGITAL, ANALOG) – OPTION 8707A.....	51
4.8 DUAL VIDEO OUTPUT (2 SDI, 1 RGBHV/YPbPr/COMPOSITE) – OPTION 8708.....	53
4.9 DUAL INPUT DVB-S/DVB-S2 RECEIVER – OPTION 8710/8710A.....	60
4.10 DUAL INPUT ASM RECEIVER – OPTION 8711.....	64
4.11 VIDEO OUTPUT (2 HD/SD-SDI, 1 RGBHV/YPbPr/COMP) – OPTION 8712.....	68
4.12 GPIO MODULE – 8713.....	73
4.13 RELAY AND DPI TRIGGER – OPTION 8714.....	75
4.14 DUAL INPUT COFDM RECEIVER – OPTION 8715.....	78
4.15 CA DECRYPTION – OPTION 8721.....	81
4.16 MPEG OVER IP INPUT/OUTPUT – OPTION 8725.....	83
4.17 DUAL MPEG OVER IP INPUT/ UDP OUTPUT – OPTION 8727.....	96
4.18 MPEG-2/MPEG-4 DECODER (1 VIDEO, 2 AUDIO) – OPTION 8730A/8732.....	109
4.19 MPEG DECODER WITH GENLOCK (1 VIDEO, 4 AUDIO) – OPTION 8733.....	118
4.20 MPEG-2/MPEG-4 DECODER WITH GENLOCK (1 VIDEO, 2 AUDIO) – OPTION 8731A/8734.....	127
4.21 NETWORK SETUP.....	136
4.22 SMPTE 333M CONFIGURATION.....	138
4.23 ACTIVE ERRORS.....	138
4.24 PASSWORD.....	139
4.25 EVENT LOG.....	140
4.26 SCTE35 TO SCTE104 SETUP.....	141
4.27 FEATURE LICENSING.....	143
<b>SECTION 5 – USING THE WEB CLIENT TO CONFIGURE THE MRD 3187B.....</b>	<b>145</b>
5.1 LOGIN.....	146
5.2 STATUS INDICATORS.....	146
5.3 CONFIGURATION.....	147
5.4 UNIT.....	154
5.5 PROFILES.....	156
5.6 WEB PASSWORDS.....	159
5.7 RESET UNIT.....	159
5.8 SNMP MIB MODULES.....	160
5.9 SOFTWARE UPDATES.....	160
5.10 DIAGNOSTICS.....	160
5.11 ABOUT.....	161
<b>SECTION 6 – USING SIMPLE NETWORK MANAGEMENT PROTOCOL (SNMP) TO CONFIGURE THE MRD 3187B.....</b>	<b>163</b>
6.1 SNMP CONFIGURATION.....	164
<b>APPENDICES.....</b>	<b>167</b>
APPENDIX A – ACRONYMS AND GLOSSARY.....	168
APPENDIX B – ERROR LIST.....	171
APPENDIX C – SPECIFICATIONS.....	173
APPENDIX D – PINOUT OF 8705/8705A, 8708 AND 8707A.....	196
APPENDIX E – COORDINATED UNIVERSAL TIME.....	197
APPENDIX F – OPEN SOURCE SOFTWARE.....	198
APPENDIX G – WARRANTY.....	199
APPENDIX H – SUPPORT AND CONTACT INFORMATION.....	200

This Page Intentionally Left Blank

# Section 1 – Getting Started



## Introduction

This section includes the following topics:

1.1 INSTALLATION .....	10
1.2 QUICK START GUIDE .....	11
1.3 MAINTENANCE .....	11

## 1.1 Installation

### Cooling

The MRD 3187B is cooled via forced induction through the front of the unit and exhausted through the vents on either side. The MRD 3187B is equipped with a temperature controlled status indicator. If the temperature in the inside of the unit exceeds 70° C the red “Error” LED will illuminate and a description of the error will appear in the “Error List.”


### Rack Information

The MRD 3187B is intended to be mounted in a standard 19” rack. It occupies 1U of rack space and the connections are all on the rear of the unit.

### Rack Installation

To install the MRD 3187B into a rack use the following steps:

1. Determine the desired position in the rack for the MRD 3187B making sure that the air intake on the front of the unit and the exhausts on the sides of the unit will not be obstructed.
2. Insert the rack mount clips into place over the mounting holes in the rack.
3. Slide the MRD 3187B into position in the rack.
4. Secure the MRD 3187B to the rack by installing the four supplied screws through the front mounting holes and tightening.

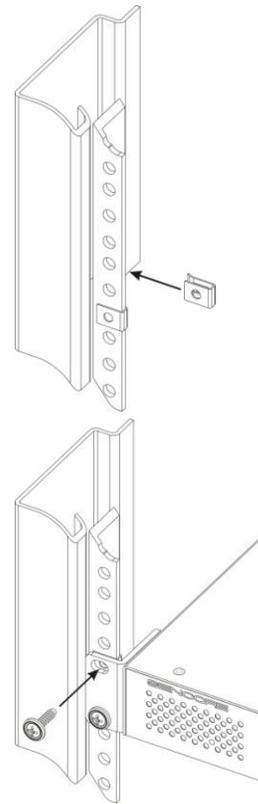

### Power Connection

Using the proper power connections is vital to the safe operation of the MRD 3187B. Only use the supplied 3-prong power connector or one with equal specifications. NEVER tamper with or remove the 3<sup>rd</sup> – prong grounding pin. This could cause damage to the MRD 3187B, personnel, or property.

### AC Power Connection

The MRD 3187B is intended for use on either 120V or 240V systems. The power supply will automatically detect the system it is connected to. To hook up the power use the following steps:

1. Locate the AC power cord that was included with the MRD 3187B.
2. Plug the female end of the power cord (end with no prongs) into the back of the unit.
3. Locate a protected outlet (usually inside of the rack) to plug the male end of the power cable into.

### DC Power Connection (*if equipped*)

Using the proper power connections is vital to the safe operation of the MRD 3187B. The MRD 3187B is intended for use in 40-65Vdc systems. The power supply will automatically detect the system it is connected to. **When installing the MRD 3187B, the power supply MUST be used in conjunction with an over-current protective device rated at 50V, 5A, type: Slow-blo, as part of battery-supply circuit.** Failure to include an over-current protective device could cause damage to the MRD 3187B, personnel, or property.

## 1.2 Quick Start Guide

### Quick Start

To get the MRD 3187B up and running there is a few things that need to be done.

1. Select the desired input as active.
2. Setup the decoder with the proper PIDs.
3. Setup the desired output(s).

The easiest way to set these options up is to refer to *Section 4*. At the beginning of *Section 4* is a table that shows the specific cards included in that section. Find the desired card in the table, then navigate to the corresponding page number and follow the step-by-step instructions.

## 1.3 Maintenance

The MRD 3187B is virtually a maintenance-free piece of equipment. There are no user serviceable parts on the inside of the unit however it is recommended that the user cleans the intake filter on the front right side of the unit on a regular basis to ensure the unit has an unobstructed cool air intake. This filter is removed easily, for cleaning, by opening the door on the front right side of the unit and removing the filter.

This Page Intentionally Left Blank

## Section 2 – Controls and Configuration



### Introduction

This section includes an overview of the MRD 3187B.

2.1 FRONT OF UNIT .....	14
2.2 REAR OF UNIT .....	14
2.3 FRONT PANEL DISPLAY LAYOUT .....	14
2.4 FRONT PANEL INDICATORS .....	14
2.5 INPUT ERROR LOGIC .....	15
2.6 DECODER ERROR LOGIC .....	15
2.8 FAN ERROR LOGIC .....	16
2.9 SNMP TRAPS .....	16
2.10 INPUT/OUTPUT SLOT ORGANIZATION .....	16

MRD 3187B User Manual

2.1 Front of Unit




2.2 Rear of Unit



2.3 Front Panel Display Layout



The following figure shows a typical screen on the front panel. Several important features have been circled and noted below. These features are common to all screens and assist when navigating, viewing and editing unit information. The **HOME** button will return the user to the home level while in any screen. In order to edit a selected parameter, the **ENTER** button must be pressed. Once a parameter has been changed, the **ENTER** button must be pressed again before the change takes effect on the unit. Pressing the **EXIT** button will leave an edit mode without changes taking effect.

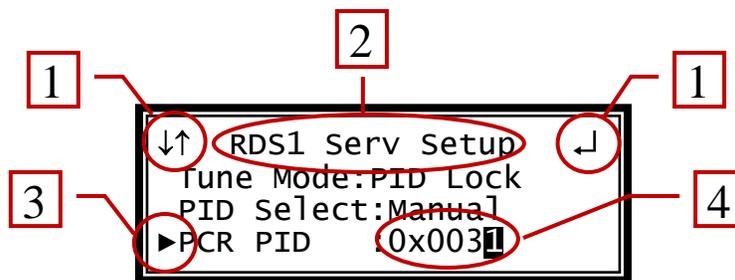

1. Icons indicate which control buttons are currently valid for entry.
2. Screen title.
3. Cursor shows which line is active.
4. When editing, active character or item is highlighted.

2.4 Front Panel Indicators

The MRD 3187B has four internal error parameters: INPUT, DECODER, FAN and TEMPERATURE. These parameters can be monitored locally or remotely. Locally the unit's status can be checked by visually looking at the INPUT LED and the ERROR LED on the front


## MRD 3187B User Manual

panel, then use the “Error List” under the  button to pinpoint the error. Remotely, the unit’s status can be checked by using the web client and looking at the status icons on the top of the main window. To see a detailed list of errors, click on the  tab from the web client.

The INPUT LED indicates the presence of a stream at the user-selected input. “Stream present” is represented by a green INPUT LED while “stream NOT present” is represented by a dark INPUT LED.



The ERROR LED represents the combined status of the unit’s error indicators. If INPUT, DECODER, TEMP, or FAN status is in the error state, the LED will be red. If all error indicators are good, the LED will be dark.



## 2.5 Input Error Logic

The input status is based on the selected input card’s status and the transport error indicator bit in the transport stream being decoded. For example if the current input is VSB, the input status is based on: VSB receiver lock, RF channel level, and the MER level. The RF channel and MER thresholds can be set by the user. If the unit detects the presence of the transport error bit in a transport packet header, the input status will be an error for 0.5 seconds each time the TS error bit is set. The system must detect a constant cadence of sync bytes (0x47h) every 188 bytes and detect a valid PAT at least every 500 ms in order for the INPUT LED to illuminate.

## 2.6 Decoder Error Logic

The decoder error indicator is based on the decoder’s ability to decode what the user has requested. The input status will be alarmed differently depending on the current decoding mode:

In “Auto Mode,” the decoder status will be good unless the Video or Audio decoders cannot decode a stream. For example: a stream defines program 4 to have video on PID 52. If PID 52 is not actually present in the stream, or is un-decodable, the decoder status will be in the error state. This is true for all modes.

In “PID Lock Mode,” the decoder status will be good if all of the PIDs entered by the user, for video and audio, are being decoded by the unit. If the user wants nothing to be decoded, they can set a PID to 0. If the user enters a PID which is not present or cannot be decoded the decoder status will be in the error state.

In “Program Priority Mode,” the decoder status will be good if any priority is currently active and the Audio and Video represented by that priority are being decoded. If the PMT for a selected program lists a video or audio PID, but the decoder cannot decode that PID, the indicator will be in the error state. If the user enters an index for a priority that does not exist in the PMT, the indicator will still be good because the decoder will be set to decode nothing on that audio output.

### 2.7 Temperature Error Logic

The temperature error indicator is based on the correct operation of the unit. If the unit’s temperature exceeds 70 degrees C, the temperature status will be in the error state.

## 2.8 Fan Error Logic


If the fan in the unit fails, the fan status will be in the error state. The fan status will be good as long as the fan is spinning at the proper RPM.

## 2.9 SNMP Traps

The unit contains separate SNMP Traps for Fan Status, Temperature Status, Decoder Status, Input Status, and IP Receive Group. Whenever any item changes state, a trap is sent to the configured host.

## 2.10 Input/Output Slot Organization

The MRD 3187B's modular design allows many different input/output configurations. An indexing system is used to identify module slots for configuration and monitoring reference. The bottom row of slots is numbered 1-1 through 1-4 (left to right). The top row is numbered 2-1 through 2-4 as shown.

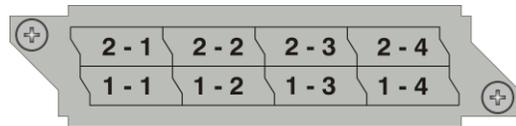

## Section 3 – Option Cards Overview












### Introduction

This section includes a brief overview of the different option cards that are available for the MRD 3187B. There are descriptions of each card as well as pictures of the various inputs and outputs for each card.

3.1 LICENSE OPTIONS .....	19
3.2 8VSB/QAM RECEIVER – OPTION 8701A .....	19
3.3 SERIAL TRANSPORT STREAM I/O (DVB-ASI/SMPTE 310M) – OPTION 8702.....	19
3.4 HIGH BIT RATE ASI INPUT – OPTION 8703.....	19
3.5 VIDEO OUTPUT (2 SD-SDI, 1 COMPOSITE) – OPTION 8704A/8704B .....	19
3.6 VIDEO OUTPUT (2 HD-SDI, 1 RGBHV/YPbPr) – OPTION 8705/8705A .....	19
3.7 VIDEO OUTPUT (1 RGBHV/YPbPr, 1 COMPOSITE) – OPTION 8706A .....	19
3.8 AUDIO OUTPUT (DOLBY E, AES DIGITAL, ANALOG) – OPTION 8707A.....	20
3.9 VIDEO OUTPUT (2 HD/SH-SDI, 1 RGBHV/YPbPr/COMPOSITE) – OPTION 8708 .....	20
3.10 DUAL INPUT DVB-S/DVB-S2 RECEIVER – OPTION 8710/8710A.....	20
3.11 DUAL INPUT ASM RECEIVER – OPTION 8711 .....	20
3.12 VIDEO OUTPUT (2 HD/SD-SDI, 1 RGBHV/YPbPr/COMP) – OPTION 8712 .....	20
3.13 GPIO MODULE – OPTION 8713.....	20
3.14 RELAY AND DPI TRIGGER – OPTION 8714 .....	21
3.15 DUAL INPUT COFDM RECEIVER – OPTION 8715 .....	21
3.16 CAM DECRYPTION – OPTION 8721 .....	21
3.17 MPEG OVER IP INPUT/OUTPUT – OPTION 8725.....	21
3.18 DUAL MPEG OVER IP INPUT/ UDP OUTPUT – OPTION 8727.....	21

MRD 3187B User Manual

<p><b>3.1 8VSB/QAM Receiver</b></p> <p><i>Option 8701A</i></p>	
<p><b>3.2 Serial Transport Stream I/O (DVB-ASI/SMPTE 310M)</b></p> <p><i>Option 8702</i></p>	
<p><b>3.3 High Bit Rate ASI Input</b></p> <p><i>Option 8703</i></p>	
<p><b>3.4 Video Output (2 SD-SDI, 1 Composite)</b></p> <p><i>Option 8704A/8704B</i></p>	
<p><b>3.5 Video Output (2 HD-SDI, 1 RGBHV/YPbPr)</b></p> <p><i>Option 8705/8705A</i></p>	
<p><b>3.6 Video Output (1 RGBHV/YPbPr, 1 Composite)</b></p> <p><i>Option 8706A</i></p>	
<p><b>3.7 Audio Output (Dolby E, AES Digital, Analog)</b></p> <p><i>Option 8707A</i></p>	
<p><b>3.8 Video Output (2 HD/SD-SDI, 1 RGBHV/YPbPr/Composite)</b></p> <p><i>Option 8708</i></p>	
<p><b>3.9 Dual Input DVB-S/DVB-S2 Receiver</b></p> <p><i>Option 8710/8710A</i></p>	
<p><b>3.10 Dual Input ASM Receiver</b></p> <p><i>Option 8711</i></p>	
<p><b>3.11 Video Output (2 HD/SD-SDI, 1 RGBHV/YPbPr/Composite)</b></p> <p><i>Option 8712</i></p>	
<p><b>3.12 GPIO Module</b></p> <p><i>Option 8713</i></p>	
<p><b>3.13 GPO Relay Card</b></p> <p><i>Option 8714</i></p>	
<p><b>3.14 Dual Input COFDM Receiver</b></p> <p><i>Option 8715</i></p>	
<p><b>3.15 CAM Decryption</b></p> <p><i>Option 8721</i></p>	
<p><b>3.16 MPEG over IP Input/Output</b></p> <p><i>Option 8725</i></p>	
<p><b>3.17 Dual MPEG over IP Input/ UDP Output</b></p> <p><i>Option 8727</i></p>	

### **3.1 License Options**

The MRD 3187B has two license options available. A separate license must be purchased to (1) decode MPEG4 or H.264 and/or (2) convert SCTE35 to SCTE104.

### **3.2 8VSB/QAM Receiver – Option 8701A**

This card will receive a TS that is demodulated from an 8VSB signal or it will demodulate a QAM64B or QAM256B RF input. With an 8VSB input, the card will tune to channels 2 – 69. With a QAM input, the card will tune to channels 2 – 134 in three cable frequency bands (FCC, IRC, and HRC). The MRD 3187B will show a valid input if the following conditions are met: the receiver equalizer and the FEC are locked. If the RF level is lower than the “Low Warning Setting” or the MER is lower than the “Low MER Warning Setting,” the red “Error” LED will illuminate on the front panel and there will be an error recorded in the Error List.

### **3.3 Serial Transport Stream I/O (DVB-ASI/SMPTE 310M) – Option 8702**

This card will receive a TS from either a DVB-ASI input or a SMPTE 310M input. Only one format may be selected at a time. For an ASI input, the bitrate of the TS must be between 1.5Mb/s and 160Mb/s. For a SMPTE 310M input, the bitrate of the TS must be 19.392658Mb/s. The selected input format will also be the output format. The 8702 card can also be used as a TS output for any of the other input cards.

### **3.4 High Bit Rate ASI Input – Option 8703**

This card will receive, up to a 160Mb/s MPTS on ASI. This card is equipped with a passive loop-through to allow the TS to be passed through the card without altering the stream. The loop-through on this card cannot be used to output a TS from a different input card. When the loop-through output is not in use it should be terminated with a 75 Ohm terminator.

### **3.5 Video Output (2 SD-SDI, 1 Composite) – Option 8704A/8704B**

A standard definition video output card. It provides two mirrored serial digital (SMPTE 259M) outputs and one composite NTSC & PAL output. Four pairs of audio can be embedded into the serial output on group 1 and 2. Closed captioning found within the transport (608/708B) can be embedded into the serial video output. NTSC closed caption, detected in the transport stream, can be inserted on line 21.

### **3.6 Video Output (2 HD-SDI, 1 RGBHV/YPbPr) – Option 8705/8705A**

A high definition video output card. It provides two mirrored serial digital (SMPTE 292M) outputs and one analog component video output (RGBHV or YPbPr). Four pairs of audio can be embedded into the serial output on group 1 and 2. Closed captioning found within the transport (608/708B) can be embedded into the serial video output.

### **3.7 Video Output (1 RGBHV/YPbPr, 1 Composite) – Option 8706A**

An analog only video output card that can output either high definition or standard definition formats. Two outputs are on the card: one BNC for composite (NTSC & PAL) and one 15-pin D-sub for component (RGBHV or YPbPr). The card outputs an SD or HD signal, one at a time. Closed caption (NTSC), detected in the transport stream, can be inserted on line 21 of the composite (NTSC video) output.

### **3.8 Audio Output (Dolby E, AES Digital, Analog) – Option 8707A**

This card allows the output of both Digital-AES and analog audio. Each digital audio output can be set to either Raw or PCM. In Raw, the compressed audio for the selected PID is passed through to the digital output. Typically this setting is used to pass-through the Dolby AC-3 compressed digital signal. When the digital audio output is set to PCM, two-channel linear coded PCM AES/EBU audio is output to the digital output. The analog output provides two-channel (L, R) decoded analog audio from the selected audio processor. The two audio processors on the decoder board, feeding the two digital outputs, can process or decode Dolby AC-3, MPEG Layer 1, or MPEG Layer 2 formats. The audio processor will self-sense which type of audio is in the TS. The 8707A also has a Dolby E parsing feature.

### **3.9 Video Output (2 HD/SH-SDI, 1 RGBHV/YPbPr/Composite) – Option 8708**

A versatile video output card. It provides two user selectable serial digital (SMPTE 259M, or SMPTE 292M) outputs and one component RGBHV or YPbPr/Composite NTSC & PAL output. Four pairs of audio can be embedded into the serial output on group 1, and 2. Closed captioning found within the transport (608/708B) can be embedded into the serial video output. NTSC closed caption, detected in the transport stream, can be inserted on line 21.

### **3.10 Dual Input DVB-S/DVB-S2 Receiver – Option 8710/8710A**

This card will input a satellite L-band (950MHz – 2150MHz) signal for demodulation of KU-band or C-band DVB-S QPSK signals or DVB-S2 QPSK/8PSK signals. The symbol rate ranges from 1MSym/s to 45MSym/s for DVB-S and 1-30MSym/s for DVB-S2. This card does not provide any power to the dish LNB. The “Input” LED will only illuminate if the card detects frequency, symbol rate, FEC lock (Carrier Lock), and TS sync (Sync Lock). The card provides A and B inputs, which may be independently configured, but only one may be active at a time.

### **3.11 Dual Input ASM Receiver – Option 8711**

This card will input a satellite L-band (950MHz – 2150MHz) signal for demodulation of KU-band, C-band, or X-band DVB-QPSK, 8PSK, or Adv-QPSK signals. All these modes are available using Turbo Coded forward error correction. The DVB-QPSK mode also supports legacy DVB FEC. The symbol rate ranges from 0.256MSym/s to 30MSym/s for all modulation types. This card does not provide any power to the dish LNB. The “Input” LED will only illuminate if the card detects frequency, symbol rate, FEC lock (Carrier Lock), and TS sync (Sync Lock). The card provides A and B inputs, which may be independently configured, but only one may be active at a time.

### **3.12 Video Output (2 HD/SD-SDI, 1 RGBHV/YPbPr/Comp) – Option 8712**

A versatile video output card. It provides two user selectable serial digital (SMPTE 259M, or SMPTE 292M) outputs and one component RGBHV or YPbPr/Composite NTSC & PAL output. Eight pairs of audio can be embedded into the serial output on group 1, 2, 3 and 4. Closed captioning found within the transport (608/708B) can be embedded into the serial video output. NTSC closed caption, detected in the transport stream, can be inserted on line 21.

*Note: This card requires the 8733 decoder board.*

### **3.13 GPIO Module – Option 8713**

This module is considered a global unit option. In other words, the inputs and outputs of a single installed module can be accessed by functions associated with general system features, or RDS specific features in any unit configuration. Only one GPIO module can be installed in a unit.

### 3.14 Relay and DPI Trigger – Option 8714

This card is a single-slot module and should be considered a global unit option. In other words, the relays of a single installed module can be accessed by functions associated with general system alarms, or RDS specific features in any unit configuration.

### 3.15 Dual Input COFDM Receiver – Option 8715

This card will input a (49 – 861 MHz) COFDM signal for use in electronic news gathering (U.S.) or any COFDM Terrestrial Broadcast (DVB-T, European) applications. The card provides A and B inputs, which may be independently configured, but only one may be active at a time.

### 3.16 CAM Decryption – Option 8721

This is a factory installed slot that will allow for up to two CAM cards to be installed at a time, giving the MRD 3187B the ability to decrypt Conditional Access transport streams. This card also includes all the functionality of the 8722 option card as well.

### 3.17 MPEG over IP Input/Output – Option 8725

This card is a dual purpose card in that it can receive and/or transmit from the internal TS bus, MPEG over IP. Up to two multicasts can be subscribed to, allowing for a backup multicast to be chosen and three mirrored multicasts can be transmitted to allow for redundancy.

### 3.18 Dual MPEG over IP Input/ UDP Output – Option 8727

This card is a dual purpose card in that it can receive and/or transmit from the internal TS bus, MPEG over IP. It has two physical connectors that can be configured independently. Up to two multicasts can be subscribed to, allowing for a backup multicast to be chosen and two UDP mirrored unicasts can be transmitted to allow for redundancy

#### Example Configurations:

##### **“Leave” IGMP V2 & V3 Multicast/Unicast**

Filter Mode: Include

IP list: *empty*

##### **“Join” IGMP V2 & V3 Multicast/Unicast**

Filter Mode: Exclude

IP list: *empty*

##### **“Join Filtered” IGMP V3 Multicast/Unicast**

Filter Mode: Include

IP: X.X.X.X

Or

Filter Mode: Exclude

IP: X.X.X.X

#### IP Address Selection

**Unicast:** X.X.X.X – 223.255.255.255

**Multicast:** 224.X.X.X – 239.255.255.255

**Suggested Multicast Range:** 239.192.X.X

#### Suggested Port Selection

- Choose a port number of 5000 or more

- Choose even numbered ports

- If using FEC the following example applies

- Destination port = 5000

- Column FEC = 5002

- Row REC = 5004

- Next available multicast port = 5006

This Page Intentionally Left Blank

## Section 4 – Using the Front Panel to Configure the MRD 3187B



### Introduction

This section describes how to navigate through the configuration menus on the front panel of the MRD 3187B.

*Note: All instructions in this manual are based on the unit software versions 7.2.X. Newer versions of software, when released, may operate slightly different in regards to menus and configuration.*

4.1 8VSB/QAM RECEIVER – OPTION 8701A .....	24
4.2 SERIAL TRANSPORT STREAM INPUT/OUTPUT (DVB-ASI/SMPTE 310M) – OPTION 8702 .....	27
4.3 HIGH BIT RATE ASI INPUT – OPTION 8703 .....	29
4.4 VIDEO OUTPUT (2 SD-SDI, 1 COMPOSITE) – OPTION 8704A/8704B .....	31
4.5 VIDEO OUTPUT (2 HD-SDI, 1 RGBHV/YPbPr) – OPTION 8705/8705A .....	38
4.6 VIDEO OUTPUT (1 RGBHV/YPbPr, 1 COMPOSITE) - OPTION 8706A.....	44
4.7 AUDIO OUTPUT (DOLBYE, AES DIGITAL, ANALOG) – OPTION 8707A.....	51
4.8 DUAL VIDEO OUTPUT (2 SDI, 1 RGBHV/YPbPr/COMPOSITE) – OPTION 8708.....	53
4.9 DUAL INPUT DVB-S/DVB-S2 RECEIVER – OPTION 8710/8710A.....	60
4.10 DUAL INPUT ASM RECEIVER – OPTION 8711 .....	64
4.11 VIDEO OUTPUT (2 HD/SD-SDI, 1 RGBHV/YPbPr/COMP) – OPTION 8712 .....	68
4.12 GPIO MODULE – 8713.....	73
4.13 RELAY AND DPI TRIGGER – OPTION 8714 .....	75
4.14 DUAL INPUT COFDM RECEIVER – OPTION 8715 .....	78
4.15 CA DECRYPTION – OPTION 8721 .....	81
4.16 MPEG OVER IP INPUT/OUTPUT – OPTION 8725.....	83
4.17 DUAL MPEG OVER IP INPUT/ UDP OUTPUT – OPTION 8727.....	96
4.18 MPEG-2/MPEG-4 DECODER (1 VIDEO, 2 AUDIO) – OPTION 8730A/8732.....	109
4.19 MPEG DECODER WITH GENLOCK (1 VIDEO, 4 AUDIO) – OPTION 8733 .....	118
4.20 MPEG-2/MPEG-4 DECODER WITH GENLOCK (1 VIDEO, 2 AUDIO) – OPTION 8731A/8734 .....	127
4.21 NETWORK SETUP .....	136
4.22 SMPTE 333M CONFIGURATION .....	138
4.23 ACTIVE ERRORS.....	138
4.24 PASSWORD.....	139
4.25 EVENT LOG.....	140
4.26 SCTE35 TO SCTE104 SETUP .....	141
4.27 FEATURE LICENSING.....	143

## 4.1 8VSB/QAM Receiver – Option 8701A


### General Information

**Install Location:** Any slot *except* 1-1 and 2-1.

**I/O:** (1) 75Ω Female F Connector

**Supported Formats:** 8VSB, QAM64B, QAM256B

**Description:** This card provides demodulation of 8VSB or QAM. For 8VSB the card is able to tune to channels 2-69 on UHF/VHF and channels 2-134 on the cable channel bands of FCC cable, IRC, and HRC. For QAM, the card is able to receive both QAM64B and QAM256B and is able to tune to channels 2-134 in the cable bands of FCC cable, IRC, and HRC.




### Input Control


To enable this card as an input use the following steps.

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

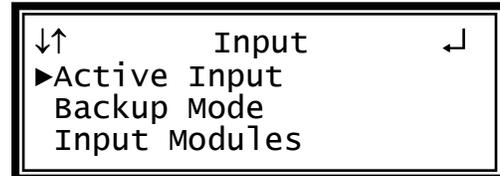


2. Select “Active Input”, then press the **ENTER** button.
3. Press **ENTER** twice to change the active input and use the **▲** and **▼** buttons to select the input to make active, and press the **ENTER** button to save the changes.

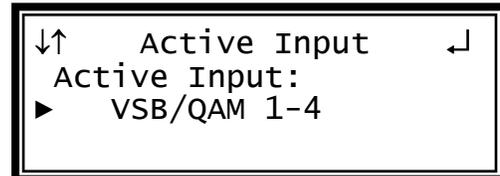


### Configure Input

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

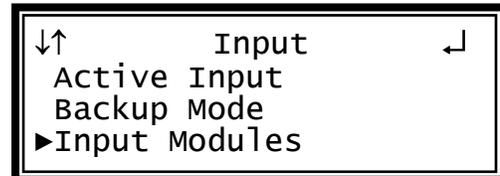

2. Select “Input Modules”, and press the **ENTER** button.
3. Use the **▲** and **▼** buttons to move the cursor to the “VSB/QAM” card of the specific slot (e.g. 1-4). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
4. Press the **ENTER** button once to display the Status screen for the VSB/QAM card.
5. Press the **ENTER** button again to display the Edit screen for the VSB/QAM card.

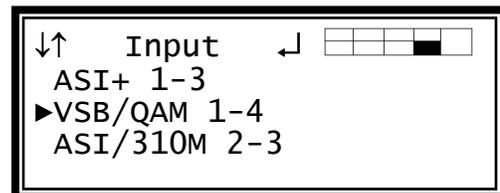

## MRD 3187B User Manual

- Use the  and  buttons to move the cursor to “Selected I/O:” then press the  button.
- Use the  and  buttons to change the selection to, “yes,” then press the  button.

```

↓↑      VSB/QAM 1-4      ↵
▶Selected I/O:no
  Chan:___
  Modulation:8VSB

```

**Channel**

- Use the  and  buttons to move the cursor to, “Chan:” then press the  button.
- Use the  and  buttons to tune to the specific RF channel of interest (2-134), then press the  button to save the selection.

```

↓↑      VSB/QAM 1-4      ↵
Selected I/O:yes
▶Chan:32
  Modulation:8VSB

```

**Modulation**

- Use the  and  buttons to move the cursor to, “Modulation:” then press the  button.
- Use the  and  buttons to choose the appropriate modulation type (8VSB, QAM64B, QAM256B), then press the  button to save the selection.

```

↓↑      VSB/QAM 1-4      ↵
Selected I/O:yes
  Chan:32
▶Modulation:8VSB

```

**Channel Bands**

- Use the  and  buttons to move the cursor to, “Air/CATV:” then press the  button.
- Use the  and  buttons to choose the appropriate channel band (OffAir, Cable-FCC, Cable-HRC, Cable-IRC), then press the  button to save the selection.

```

↓↑      VSB/QAM 1-4      ↵
Modulation:8VSB
▶Air/CATV:OffAir
  Low:+00dBmV

```

**Set Low Signal and MER Error Levels**

These two values are user defined threshold levels for the signal level and MER level. Once these values are set, if the input levels drops below the defined value, an error will be triggered which will cause the red “Error” LED to illuminate on the front panel, a description of the error will be shown in the “Active Errors” menu under the  button, and an entry will be logged in the event log.

- Use the  and  buttons to move the cursor to, “Low:” then press the  button.
- Use the  and  buttons to select the

```

↓↑      VSB/QAM 1-4      ↵
Modulation:8VSB
  Air/CATV:OffAir
▶Low:+00dBmV

```

## MRD 3187B User Manual

column to edit and use the  and  buttons to set the value of the low signal alarm threshold (-30dBmV - +40dBmV), then press the  button to save the selection.

- Use the  and  buttons to move the cursor to, "MER:" then press the  button.
- Use the  and  buttons to select the column to edit and use the  and  buttons to set the value of the low MER alarm threshold (0dB - 40dB), then press the  button to save the selection.



```
↓↑      VSB/QAM 1-4      ↵
Air/CATV:offAir
Low:+00dBmV
▶MER:10dB
```

## 4.2 Serial Transport Stream Input/Output (DVB-ASI/SMPTE 310M) – Option 8702


### General Information

**Install Location:** Any slot *except* 1-1 and 2-1.

**I/O:** (1) 75Ω Female BNC Input, (1) 75Ω Female BNC Output

**Supported Formats:** DVB-ASI, 310M

**Description:** This card provides either DVB-ASI or 310M input and output. The card will provide 310M output only if the input TS is 19.39Mb/sec. When the card is in ASI mode, the TS bitrate for both the input and output is from 1.5Mb/sec – 160Mb/sec. When the card is in SMPTE 310M mode, the bitrate for both input and output must be 19.39Mb/sec. The output jack on this card is an active loop-through (i.e. a re-serialized TS). The output will be the same type that the input is set for (e.g. 310M or ASI). The card can be used to provide an ASI TS output from another type of input on the unit (e.g. 8VSB).




### Input Control


To enable this card as an input use the following steps.

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

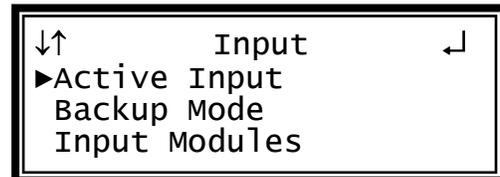


2. Select “Active Input”, then press the **ENTER** button.
3. Press **ENTER** twice to change the active input and use the **▲** and **▼** buttons to select the input to make active, and press the **ENTER** button to save the changes.

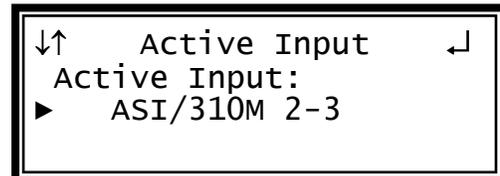


### Configure Input

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

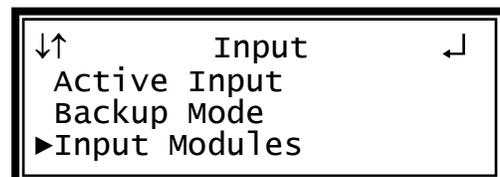


2. Select “Input Modules”, and press the **ENTER** button.
3. Use the **▲** and **▼** buttons to move the cursor to the “ASI/310M” card of the specific slot (e.g. 2-3). Notice the location diagram in the upper right corner of the screen changes as the cursor

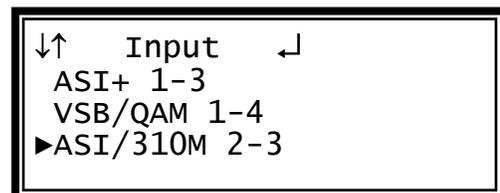

moves by each card.


4. Press the  button once to display the Status screen for the ASI/310M card.
5. Press the  button again to display the Edit screen for the ASI/310M card.
6. Use the  and  buttons to move the cursor to, “Selected I/O:” then press the  button.
7. Use the  and  buttons to change the selection to, “yes,” then press the  button.

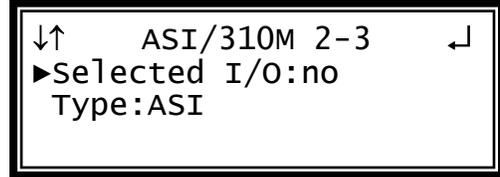

```
↓↑   ASI/310M 2-3   ↵
▶Selected I/O:no
Type:ASI
```

### Input Type

1. Use the  and  buttons to move the cursor to, “Type:” then press the  button.
2. Use the  and  buttons to select the appropriate input (ASI, 310M), then press the  button to save the selection.

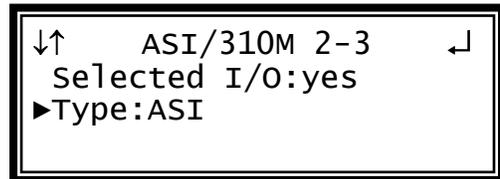

```
↓↑   ASI/310M 2-3   ↵
Selected I/O:yes
▶Type:ASI
```

### 4.3 High Bit Rate ASI Input – Option 8703


#### General Information

**Install Location:** Any slot *except* 1-1 and 2-1.

**I/O:** (1) 75Ω Female BNC Input, (1) 75Ω Female BNC Loop Out

**Supported Formats:** ASI

**Description:** This card provides DVB-ASI input for MPTS up to 160Mb/sec. The maximum TS bitrate for the card is 160Mb/sec. The output on the card is a passive loop-through and should be terminated with a 75Ohm terminator when not in use. The card cannot be used to provide a TS output from another TS input on the unit.




#### Input Control


To enable this card as an input use the following steps.

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

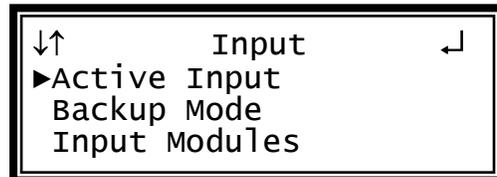


2. Select “Active Input”, then press the **ENTER** button.
3. Press **ENTER** twice to change the active input and use the **▲** and **▼** buttons to select the input to make active, and press the **ENTER** button to save the changes.

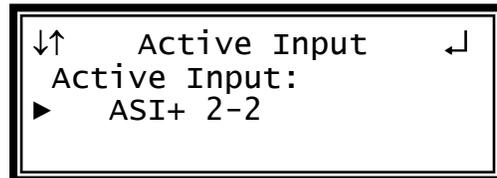



#### Configure Input

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

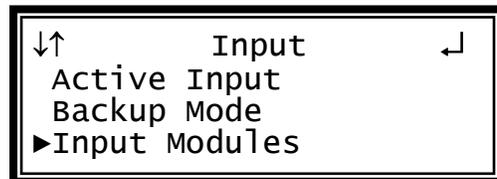

2. Select “Input Modules”, and press the **ENTER** button.
3. Use the **▲** and **▼** buttons to move the cursor to the “ASI+” card of the specific slot (e.g. 2-2). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
4. Press the **ENTER** button once to display Status screen for the ASI+ card.
5. Press the **ENTER** button again to display the Edit screen for the ASI+ card.

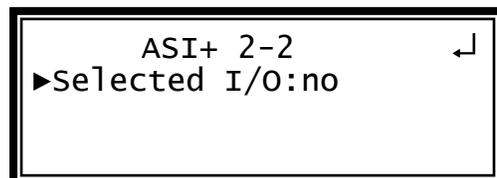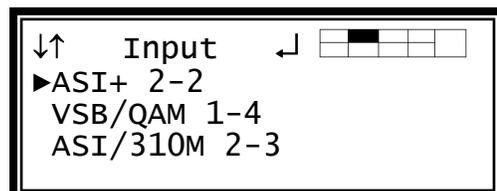

6. Press the  button one more time.
7. Use the  and  buttons to change the selection to, “yes,” then press the  button.

## 4.4 Video Output (2 SD-SDI, 1 Composite) – Option 8704A/8704B

### General Information

**Install Location:** 1-1 or (2-1, only on Configuration 2 units or Configuration 1 with dual decoders)

**I/O:** (2) 75Ω Female BNC SD-SDI outputs, (1) 75Ω Female BNC NTSC/PAL Composite output

**Supported Formats:** SD-SDI, NTSC/PAL Composite

**Description:** This card provides three mirrored outputs from any of the available input option cards. Two of the outputs are SD-SDI and one is NTSC Composite. The 8704A card provides Composite Color Phase Reference when used with Genlock and the 8731, Genlock decoder.




### Output Control

1. Press the **OUTPUT** button.


*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

2. Use the **▲** and **▼** buttons to move the cursor to the “SD Video” card of the specific slot (e.g. 1-1). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

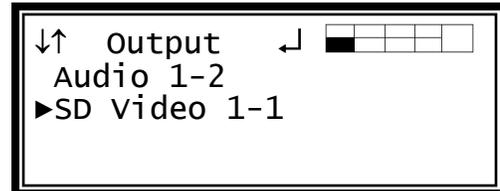

### Video Settings

1. Use the **▲** and **▼** buttons to move the cursor to, “Video,” then press the **ENTER** button to display the Video Status screen for the video output card.
2. Press the **ENTER** button again to display the Edit screen for the video output card.

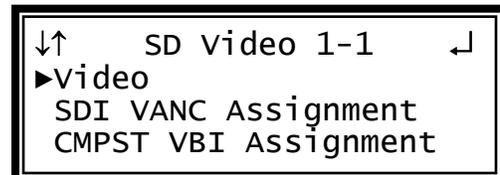

### NTSC Pedestal

When the NTSC Ped is enabled it applies a 7.5IRE pedestal to the black level of the Composite video output.

1. Use the **▲** and **▼** buttons to move the cursor to, “NTSC Ped:” then press the **ENTER** button.
2. Use the **▲** and **▼** buttons to enable or disable the pedestal, then press the **ENTER** button to save the selection.



**SDI Clock**

This option sets how the SDI clock behaves upon input failure. Pass on Fail will continue to send the SDI clock and show the selected raster color on the SDI outputs. Squelch will stop the SDI clock and any equipment down the line will lose SDI input.

1. Use the  and  buttons to move the cursor to, “SDI Clk:” then press the  button.
2. Use the  and  buttons to set the desired SDI clock mode (Pass on Fail, Squelch), then press the  button to save the selection.

```

↓↑ SD Video 1-1 ↵
NTSC Ped:Disabled
▶SDI Clk:Pass on Fail
Format: 720x480i

```

**Video Format**

1. Use the  and  buttons to move the cursor to, “Format:” then press the  button.
2. Use the  and  buttons to select the appropriate format, then press the  button to save the selection.

```

720x480i 4x3 29.97
720x480i 16x9 29.97
720x576i 16x9 25.00
720x576i 4x3 25.00

```

```

↓↑ SD Video 1-1 ↵
SDI Clk:Pass on Fail
▶Format: 720x480i
4x3 29.97

```

**Display Mode**

1. Use the  and  buttons to move the cursor to, “Disp Mode:” then press the  button.
2. Use the  and  buttons to select the appropriate display mode (Letterbox, Cropped, Anamorph), then press the  button to save the selection.

```

↓↑ SD Video 1-1 ↵
Format: 720x480i
4x3 29.97
▶Disp Mode: Letterbox

```

**Auto AFD**

1. Use the  and  buttons to move the cursor to, “Auto AFD:” then press the  button.
2. Use the  and  buttons to select the appropriate mode (Enabled or Disabled), then press the  button to save the selection.

```

↓↑ SD Video 1-1 ↵
4x3 29.97
Disp Mode: Letterbox
▶Auto AFD: Disabled

```

### Raster Color

This setting determines the color of the raster that is output by the decoder when input is lost.

1. Use the  and  buttons to move the cursor to, “Raster Color:” then press the  button.
2. Use the  and  buttons to select the desired raster color (Black, white, Yellow, Cyan, Green, Magenta, Red, Blue), then press the  button to save the selection.

```

↓↑ SD Video 1-1 ↵
Disp Mode: Letterbox
Auto AFD: Disabled
▶ Raster Color: Black

```

### VANC Embedding

1. Use the  and  buttons to move the cursor to, “SDI VANC Assignment,” then press the  button to view the Status screen.
2. Press the  button once more to display the edit menu.
3. Use the  and  buttons to move the cursor to the desired ancillary data type, then press the  button.
4. Use the  and  buttons to choose (Enabled or Disabled), then press the  button to save the selection.
5. Use the  and  buttons to select “Line:” and press the  button.
6. Use the  and  buttons to change the line number in which the ancillary data will be located.

```

↓↑ SD Video 1-1 ↵
Video
▶ SDI VANC Assignment
CMPST VBI Assignment

```

```

↓↑ SDI VANC 1-1 ↵
ADP
▶ EIA-608CC:Disabled
Line: 9

```

```

↓↑ SDI VANC 1-1 ↵
ADP
EIA-608CC:Disabled
▶ Line: 9

```

*Note: Use the above steps 3-6 to embed other components on other lines.*

### Composite VBI Assignment

To setup Line 21 Closed Captions, Teletext, etc... on the Composite output of this card use the following steps:

1. Use the  and  buttons to move the cursor to, “Cmpst VBI Assignment,” then press the  button.
2. To Enable or Disable any of the options (Line 21 CC, TTX, VPS, or WSS) press the  button on the selected option.

```

↓↑ HD Video 2-1 ↵
▶ CMPST VBI Assignment
Overlay
Genlock offset

```

```

↓↑ Cmpst VBI ↵
NTSC
▶ Line21 CC: Enabled
PAL

```


- Then use the  and  buttons to toggle between **Enabled** and **Disabled**.
- Press the  button to save changes.

### Overlay Settings

Overlays provide an easy to use OSD to help troubleshoot problems, monitor stream characteristics, or decode closed captioning.


**CAUTION:** *All overlays will appear on the downstream video.*

- Use the  and  buttons to move the cursor to, “**Over**lay,” then press the  button.

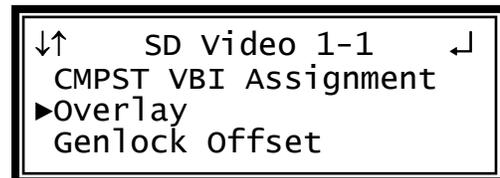

### Type of Overlay


- Use the  and  buttons to move the cursor to, “**Type:**” then press the  button.
- Use the  and  buttons to select which overlay to display (**Table**, **Closed Caption**, **Service**, **Off**), then press the  button to save the selection.

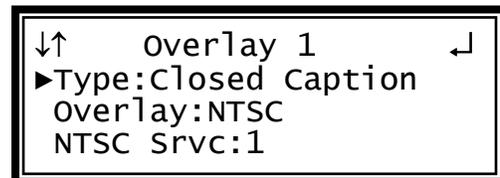

### Overlay (Closed Caption)

*Note: This menu changes depending upon which overlay is set in “Type of Overlay” above.*

- Use the  and  buttons to move the cursor to, “**Over**lay:” then press the  button.
- Use the  and  buttons to select the appropriate type of overlay (**NTSC**, **DTVCC**), then press the  button to save the selection.

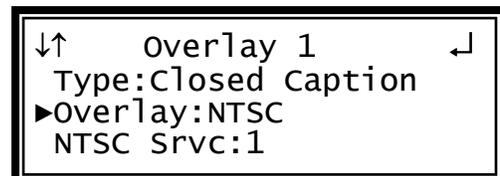


### NTSC Service

*Note: This menu is only available when the “Overlay” setting is set to NTSC.*


## MRD 3187B User Manual

1. Use the  and  buttons to move the cursor to, "NTSC Srvc:" then press the  button.
2. Use the  and  buttons to select which NTSC CC Srvc to display on the overlay (1-4), then press the  button to save the selection.

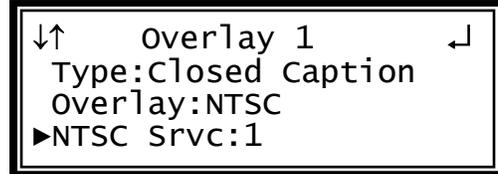**DTVCC Service**


*Note: This menu is only available when the "Overlay" setting is set to DTVCC.*

1. Use the  and  buttons to move the cursor to, "DTVCC Srvc:" then press the  button.
2. Use the  and  buttons to select which DTVCC Srvc to display on the overlay (1-7), then press the  button to save the selection.

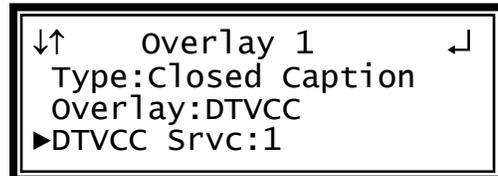**Overlay (Table)**

*Note: This menu changes depending on which overlay is set in "Type of Overlay" above.*


1. Use the  and  buttons to move the cursor to, "Overlay:" then press the  button.
2. Use the  and  buttons to select the appropriate type of overlay (PSI PAT, PSI PMT, PSIP MGT, PSIP STT, PSIP TVCT, PSIP EIT, PSIP EPG), then press the  button to save the selection.

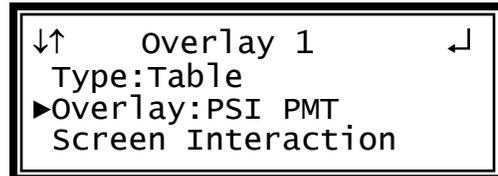**Screen Interaction**

This mode allows the user to page through the OSD PSI/PSIP tables.

*Note: This option will only be available if the type of overlay is set to, "Table."*

1. Use the  and  buttons to move the cursor to, "Screen Interaction," then press the  button.
2. While this mode is enabled, the , , , and  buttons will control the on-

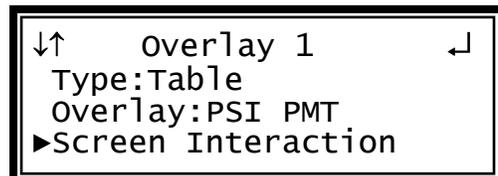

## MRD 3187B User Manual

screen PSI/PSIP tables. To exit the, “Screen Interaction” mode press the  button.

**Coordinated Universal Time Offset**

1. Use the  and  buttons to move the cursor to, “Utc Offset:” then press the  button.
2. Use the  and  buttons to change to the appropriate offset, then press the  button to save the selection.

*See Appendix E for UTC values*


**Overlay (Service)**

*Note: This option only displays the Service Info.*

**Small Format Display**

To setup the MRD 3187B to output a “Small Format Display,” use the following steps:

1. Use the  and  buttons to move the cursor to “Small Format Disp,” then press the  button.
2. Press the  button again to change the settings.

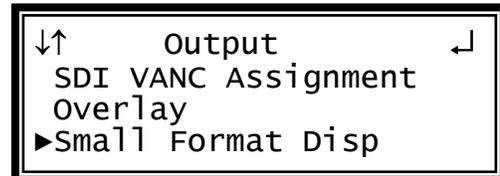
**Format**

1. While the cursor is on “Output Format:” press the  button to change the display format.
2. Use the  and  buttons to change from any of the following settings:

```

720x480i 4x3 29.97
720x480i 16x9 29.97
720x576i 16x9 25.00
720x576i 4x3 25.00

```

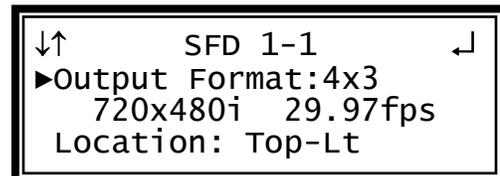


3. Press the  button to save the settings.

**SFD Location**

1. Use the  and  button to move the cursor to “Location:” and then press the  button.
2. Use the  and  buttons to select one of the following options:

Top-Lt	Mid-Lt	Btm-Lt
Top-Rt	Mid-Rt	Btm-Rt
Top-Ctr	Mid-Ctr	Btm-Ctr

3. Press the  button to save the settings.

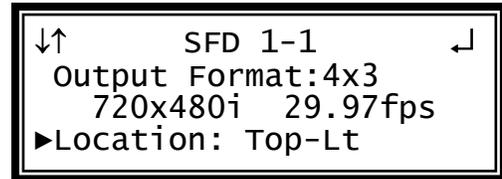

## 4.5 Video Output (2 HD-SDI, 1 RGBHV/YPbPr) – Option 8705/8705A


### General Information

**Install Location:** 1-1 or (2-1, only on Configuration 2 units or Configuration 1 with dual decoders)

**I/O:** (2) 75Ω HD-SDI Female BNC outputs, (1) 15-pin D-sub Female analog output

**Supported Formats:** HD-SDI, YPbPr, RGBHV

**Description:** This card provides three mirrored outputs from any of the available input option cards. Two of the outputs are HD-SDI and one is analog YPbPr/RGBHV.




### Output Control

1. Press the  button.


*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

2. Use the  and  buttons to move the cursor to the “HD video” card of the specific slot (e.g. 2-1). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

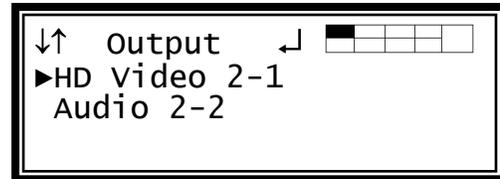

### Video Settings


1. Use the  and  buttons to move the cursor to, “video,” then press the  button to display the Video Status screen for the video output card.
2. Press the  button again to display the Edit screen for the video output card.

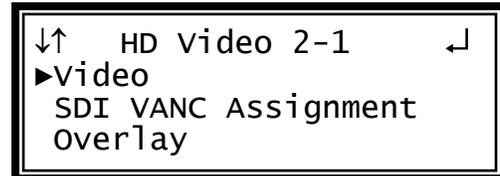

### Select Format Setting

When in “Auto” mode, the unit will automatically pick the format which is closest to the native format of the decoded video in the elementary stream. When in “Manual” mode, the format may be selected from the list of available output formats listed under “Video Format” below.

1. Use the  and  buttons to move the cursor to, “Select Format:” then press the  button.
2. Use the  and  buttons to select either auto or manual mode, then press the  button to save the selection.

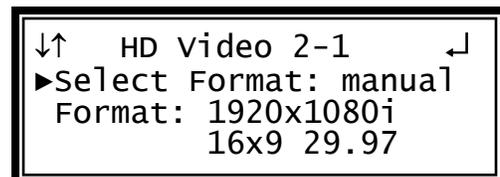


## MRD 3187B User Manual

**Video Format**

*Note: This menu is only available if the “Select Format” option is set to “manual.”*

1. Use the  and  button to move the cursor to, “Format:” then press the  button.
2. Use the  and  buttons to select the desired output format, then press the  button to save the selection.

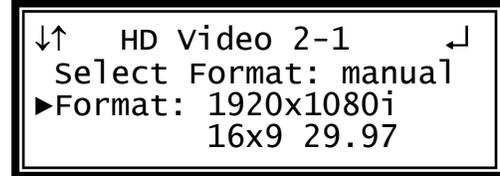

720x480i 16x9 29.97	1920x1080i 16x9 25.00
720x480i 4x3 29.97	1920x1080i 16x9 29.97
720x576i 16x9 25.00	1920x1080i 16x9 30.00
720x576i 4x3 25.00	1920x1080p 16x9 23.98*
1280x720p 16x9 50.00	1920x1080p 16x9 24.00*
1280x720p 16x9 59.94	1920x1080p 16x9 25.00*
1280x720p 16x9 60.00	1920x1080p 16x9 29.97*
	1920x1080p 16x9 30.00*


\* indicates that this setting is only available for the 8730A/8732

*Note: “If either 480i or 576i video format is used the HD-SDI outputs are turned off and only the analog output is enabled.”*


**Analog Output Format**

*Note: If this setting is set incorrectly when using an RGB monitor, the image will appear green. If this setting is set incorrectly when using a Component monitor, there will be no video on the monitor.*

1. Use the  and  buttons to move the cursor to, “Anlg Out:” then press the  button.
2. Use the  and  buttons to select the desired output format (RGBHV, YPbPr), then press the  button to save the selection.

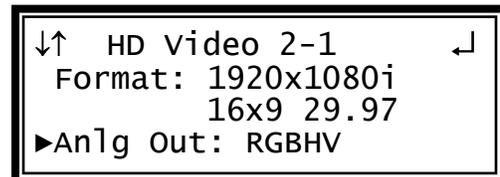**Display Mode**

1. Use the  and  buttons to move the cursor to, “Disp Mode:” then press the  button.

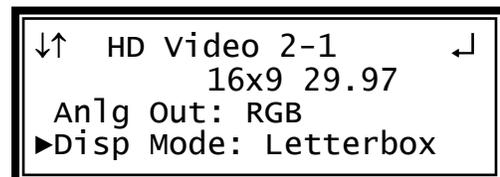


- Use the  and  buttons to select the desired output size (Letterbox, Cropped), then press the  button to save the selection.

### Raster Color




This setting determines the color of the raster that is output by the decoder when input is lost.

- Use the  and  buttons to move the cursor to, “Raster Color:” then press the  button.
- Use the  and  buttons to select the desired raster color (Black, white, Yellow, Cyan, Green, Magenta, Red, Blue), then press the  button to save the selection.

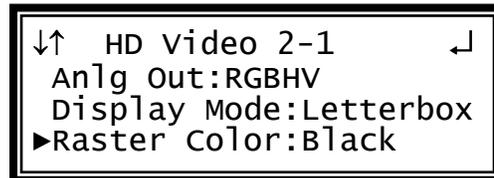

### VANC Embedding

- Use the  and  buttons to move the cursor to, “SDI VANC Assignment,” then press the  button to view the Status screen.
- Press the  button once more to display the edit menu.
- Use the  and  buttons to move the cursor to the desired ancillary data type, then press the  button.
- Use the  and  buttons to choose (Enabled or Disabled), then press the  button to save the selection.
- Use the  and  buttons to select “Line:” and press the  button.
- Use the  and  buttons to change the line number in which the ancillary data will be located.

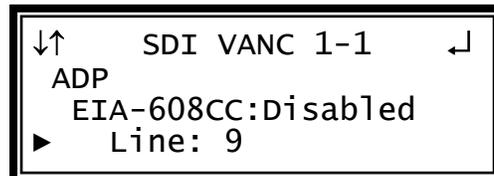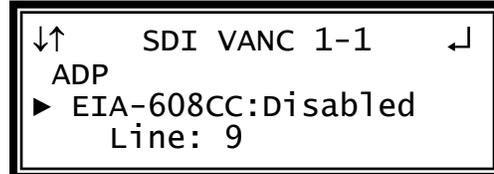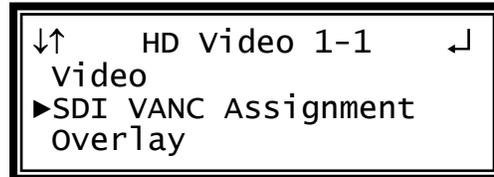

*Note: Use the above steps 3-6 to embed other components on other lines.*

### Overlay Settings

Overlays provide an easy to use OSD to help troubleshoot problems, monitor stream characteristics, or decode closed captioning.

**CAUTION:** All overlays will appear on the downstream video.

1. Use the  and  buttons to move the cursor to, “Overlay,” then press the  button.

```

↓↑ HD Video 2-1 ↵
SDI VANC Assignment
▶Overlay
Genlock offset
  
```

### Type of Overlay

1. Use the  and  buttons to move the cursor to, “Type:” then press the  button.
2. Use the  and  buttons to select which overlay to display (Closed Caption, Service, Table) then press the  button to save the selection.

```

↓↑ Overlay 2 ↵
▶Type: Closed Caption
Overlay: NTSC
NTSC Srvc: 1
  
```

### Overlay (Closed Caption)

*Note: This menu changes depending on which overlay is set in “Type of Overlay” above.*

1. Use the  and  buttons to move the cursor to, “Overlay:” then press the  button.
2. Use the  and  buttons to select the appropriate type of overlay (NTSC, DTVCC, OFF), then press the  button to save the selection.

```

↓↑ Overlay 2 ↵
Type: Closed Caption
▶Overlay: NTSC
NTSC Srvc: 1
  
```

### Closed Caption Number

#### NTSC

*Note: This option will only be available if the TYPE of overlay is set to, “Closed Caption” and the OVERLAY is set to “NTSC.”*

1. Use the  and  buttons to move the cursor to, “NTSC Srvc:” then press the  button.
2. Use the  and  buttons to select the desired number of closed caption to view (1-4), then press the  button to save the selection.

```

↓↑ Overlay 2 ↵
Type: Closed Caption
Overlay: NTSC
▶NTSC Srvc: 1
  
```

#### DTVCC

*Note: This option will only be available if the TYPE of overlay is set to, “Closed Caption” and the OVERLAY is set to “DTVCC.”*

```


↓↑ Overlay 2 ↵
Type: Closed Caption
Overlay: DTVCC
▶DTVCC Srvc: 1
  
```

1. Use the  and  buttons to move the cursor to, “DTVCC Srvc:” then press the  button.
2. Use the  and  buttons to select the desired number of closed caption to view (1-7), then press the  button to save the selection.

### Overlay (Table)

*Note: This menu changes depending on which overlay is set in “Overlay”.*

1. Use the  and  buttons to move the cursor to, “OverlAy:” then press the  button.
2. Use the  and  buttons to select the appropriate type of overlay (PSI PAT, PSI PMT, PSIP MGT, PSIP STT, PSIP TVCT, PSIP EIT, PSIP EPG), then press the  button to save the selection.

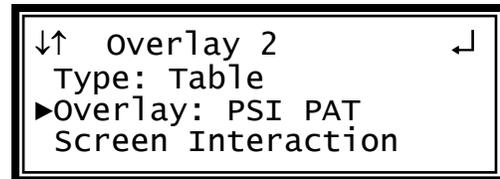


### Screen Interaction

This mode allows the user to page through the on-screen PSI/PSIP tables.


*Note: This option will only be available if the type of overlay is set to, “Table.”*

1. Use the  and  buttons to move the cursor to, “Screen Interaction,” then press the  button.
2. While this mode is enabled, the , , , and  buttons will control the on-screen PSI/PSIP tables. To exit the, “Screen Interaction” mode press the  button.

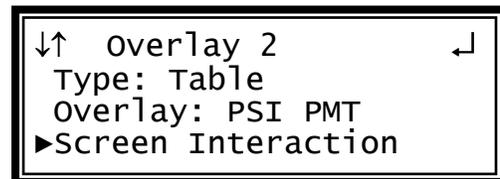

### Coordinated Universal Time Offset

1. Use the  and  buttons to move the cursor to, “Utc Offset:” then press the  button.
2. Use the  and  buttons to change

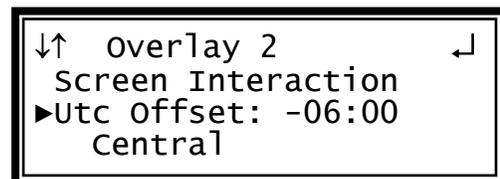

MRD 3187B User Manual

to the appropriate offset, then press the  button to save the selection.

**Overlay (Service)**


*Note: This option only displays the Service Info.*



**Small Format Display**


To setup the MRD 3187B to output a “Small Format Display,” use the following steps:

1. Use the  and  buttons to move the cursor to “Small Format Disp,” then press the  button.
2. Press the  button again to change the settings.

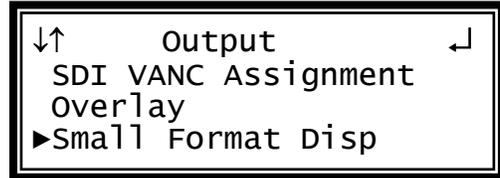

**Format**

1. While the cursor is on “Format:” press the  button to change the display format.
2. Use the  and  buttons to change from any of the following settings:

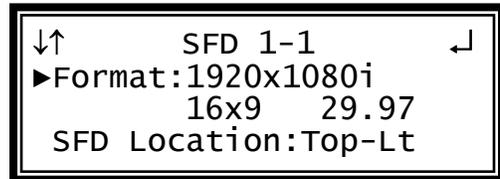


720x480i	16x9	29.97	1920x1080i	16x9	25.00
720x480i	4x3	29.97	1920x1080i	16x9	29.97
720x576i	16x9	25.00	1920x1080i	16x9	30.00
720x576i	4x3	25.00	1920x1080p	16x9	23.98
1280x720p	16x9	50.00	1920x1080p	16x9	24.00
1280x720p	16x9	59.94	1920x1080p	16x9	25.00
1280x720p	16x9	60.00	1920x1080p	16x9	29.97
			1920x1080p	16x9	30.00

3. Press the  button to save the settings.

**SFD Location**

1. Use the  and  button to move the cursor to “SFD Location:” and then press the  button.
2. Use the  and  buttons to select one of the following options:

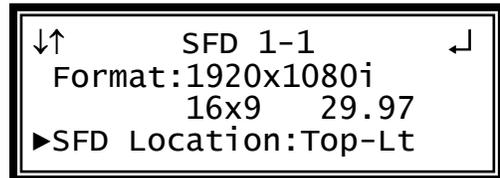

Top-Lt	Mid-Lt	Btm-Lt
Top-Rt	Mid-Rt	Btm-Rt
Top-Ctr	Mid-Ctr	Btm-Ctr

3. Press the  button to save the settings.

## 4.6 Video Output (1 RGBHV/YPbPr, 1 Composite) - Option 8706A

### General Information

**Install Location:** 1-1 or (2-1 only on Configuration 2 units or Configuration 1 units with dual decoders)

**I/O:** (1) 75Ω Female BNC NTSC/PAL Composite output, (1) 15-pin D-sub Female analog output

**Supported Formats:** NTSC/PAL Composite, YPbPr, RGBHV

**Description:** Analog only, video output card that can output either high definition or standard definition formats. There are two outputs on the card. One BNC for composite and one 15-pin D-sub for composite




### Output Control

1. Press the button.


*Note:* For Configuration 2 units, select RDS1 or RDS2, then press .

2. Use the and buttons to move the cursor to the “Anlg video” card of the specific slot (e.g. 1-1), then press the button. Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

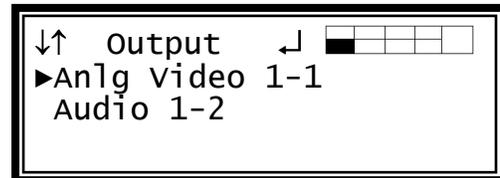

### Video Settings


1. Use the and buttons to move the cursor to, “video,” then press the button to display the Video status screen for the video output card.
2. Press the button again to display the Edit screen for the video output card.

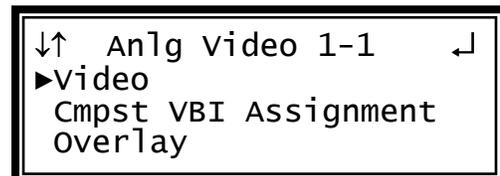

### Select Format Setting

When in “Auto” mode, the unit will automatically pick the format which is closest to the native format of the decoded video in the elementary stream. When in “Manual” mode, the format may be selected from the list of available output formats listed under “Video Format” below.

1. Use the and buttons to move the cursor to, “Select Format:” then press the button.
2. Use the and buttons to select either auto or manual mode, then press the button to save the selection.

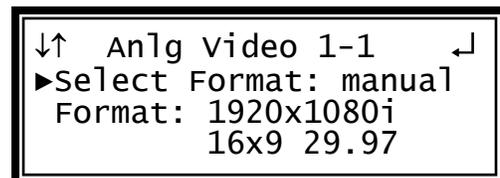

## Video Format

*Note: This menu is only available if the “Select Format” option is set to “manual.”*

1. Use the  and  buttons to move the cursor to, “Format:” then press the  button.
2. Use the  and  buttons to select the appropriate output format, then press the  button to save the selection.

```

↓↑ Anlg Video 1-1 ↓
  Select Format: manual
  ▶Format: 1920x1080i
             16x9 29.97
  
```

720x480i	16x9	29.97	1280x720p	16x9	59.94
720x480i	4x3	29.97	1280x720p	16x9	60.00
720x576i	16x9	25.00	1920x1080i	16x9	25.00
720x576i	4x3	25.00	1920x1080i	16x9	29.97
1280x720p	16x9	50.00	1920x1080i	16x9	30.00

## Analog Output Format

*Note: If this setting is set incorrectly when using an RGB monitor, the image will appear green. If this setting is set incorrectly when using a Component monitor, there will be no video on the monitor.*

1. Use the  and  buttons to move the cursor to, “Anlg Out:” then press the  button.
2. Use the  and  buttons to select the desired output format (RGBHV, YPbPr), then press the  button to save the selection.

```

↓↑ Anlg Video 1-1 ↓
  Format: 1920x1080i
             16x9 29.97
  ▶Anlg Out: RGBHV
  
```

## NTSC Ped

When the NTSC Ped is enabled it applies a 7.5IRE offset to the black level of the Composite video output.

1. Use the  and  buttons to move the cursor to, “Format:” then press the  button.
2. Use the  and  buttons to enable or disable the NTSC offset, then press the  button to save the selection.

```

↓↑ Anlg Video 1-1 ↓
  ▶NTSC offset: Enabled
  Disp Mode: Letterbox
  Raster Color: Black
  
```

## Display Mode

1. Use the  and  buttons to move the cursor to, “Disp Mode:” then press the  button.

```

↓↑ Anlg Video 1-1 ↓
  NTSC offset: Enabled
  ▶Disp Mode: Letterbox
  Raster Color: Black
  
```

## MRD 3187B User Manual

- Use the  and  buttons to select either (Letterbox, Cropped), then press the  button to save the selection.

**Auto AFD**

AFD or Active Format Description, is a standard set of codes that if sent in the MPEG transport stream is interpreted by the MRD 3187A into a certain aspect ratio and active picture characteristics.

- Use  the  and buttons to move the cursor to, "Auto AFD:" then press the  button.
- Use  the  and buttons to select the appropriate mode (Enabled or Disabled), then press the  button to save the selection.

```

↓↑ Anlg Video 1-1 ↓
Disp Mode: Letterbox
▶Auto AFD:Disabled
Raster Color: Black

```

**Raster Color**

- Use the  and  buttons to move the cursor to, "Raster Color:" then press the  button.
- Use the  and  buttons to select the desired raster color (Black, white, Yellow, Cyan, Green, Magenta, Red, Blue), then press the  button to save the selection.

```

↓↑ Anlg Video 1-1 ↓
NTSC offset: Enabled
Disp Mode: Letterbox
▶Raster Color: Black

```

**Composite VBI Assignment**

To setup Line 21 Closed Captions, Teletext, etc... on the Composite output of this card use the following steps:

- Use the  and  buttons to move the cursor to, "Cmpst VBI Assignment," then press the  button.
- To Enable or Disable any of the options (Line 21 CC, TTX, VPS, or WSS) press the  button on the selected option.
- Then use the  and  buttons to toggle between Enabled and Disabled.
- Press the  button to save changes.

```

↓↑ HD Video 2-1 ↓
▶CMPST VBI Assignment
Overlay
Genlock Offset

```

```

↓↑ Cmpst VBI 2-1 ↓
NTSC
▶ Line21 CC:Disabled
PAL

```

## Overlay Settings


**CAUTION:** *If Info (PSI/PSIP) data is turned on, the overlay will appear on downstream video. The same is true if Closed Caption overlay is turned on.*

1. Use the  and  buttons to move the cursor to, “Overlay,” then press the  button.



### Type of Overlay


1. Use the  and  buttons to move the cursor to, “Type:” then press the  button.
2. Use the  and  buttons to select which overlay to display (Table, Closed Caption, Service, OFF), then press the  button to save the selection.

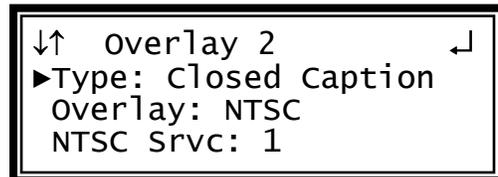

### Overlay (Closed Caption)

*Note: This menu changes depending on which overlay is set in “Type of Overlay” above.*

1. Use the  and  buttons to move the cursor to, “Overlay:” then press the  button.
2. Use the  and  buttons to select the appropriate type of overlay (NTSC, DTVCC), then press the  button to save the selection.

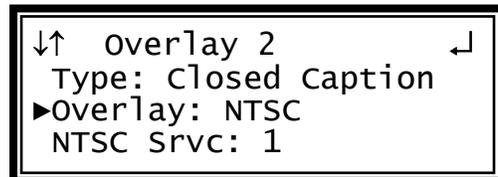


### Closed Caption Number

#### NTSC

*Note: This option will only be available if the TYPE of overlay is set to, “Closed Caption” and the OVERLAY is set to “NTSC.”*

1. Use the  and  buttons to move the cursor to, “NTSC Srvc:” then press the  button.
2. Use the  and  buttons to select the desired number of closed caption to

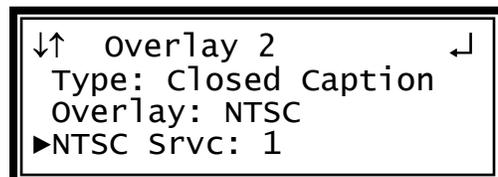


## MRD 3187B User Manual

view (1-4), then press the  button to save the selection.

**DTVCC**

*Note: This option will only be available if the TYPE of overlay is set to, "Closed Caption" and the OVERLAY is set to "DTVCC."*

1. Use the  and  buttons to move the cursor to, "DTVCC Srvc:" then press the  button.
2. Use the  and  buttons to select the desired number of closed caption to view (1-7), then press the  button to save the selection.

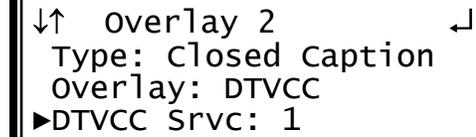

```


↓↑ Overlay 2 ↵
Type: Closed Caption
Overlay: DTVCC
▶DTVCC Srvc: 1

```

**Overlay (Table)**

*Note: This menu changes depending on which overlay is set in "Overlay".*

1. Use the  and  buttons to move the cursor to, "Overlay:" then press the  button.
2. Use the  and  buttons to select the appropriate type of overlay (PSI PAT, PSI PMT, PSIP MGT, PSIP STT, PSIP TVCT, PSIP EIT, PSIP EPG), then press the  button to save the selection.

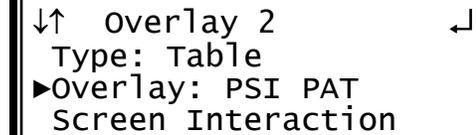

```

↓↑ Overlay 2 ↵
Type: Table
▶Overlay: PSI PAT
Screen Interaction


```

**Screen Interaction**

This mode allows the user to page through the on-screen PSI/PSIP tables.

*Note: This option will only be available if the type of overlay is set to, "Table"*

1. Use the  and  buttons to move the cursor to, "Screen Interaction," then press the  button.
2. While this mode is enabled, the , , , and  buttons will control the on-screen PSI/PSIP tables. To exit the, "Screen Interaction" mode press the  button.

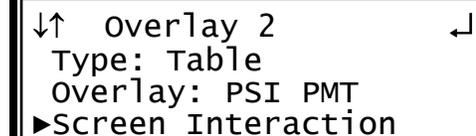

```

↓↑ Overlay 2 ↵
Type: Table
Overlay: PSI PMT
▶Screen Interaction

```

MRD 3187B User Manual

**Coordinated Universal Time Offset**

1. Use the  and  buttons to move the cursor to, "Utc Offset:" then press the  button.
2. Use the  and  buttons to change to the appropriate offset, then press the  button to save the selection.



**Overlay (Service)**


*Note: This option only displays the Service Info.*



**Small Format Display**


To setup the MRD 3187B to output a "Small Format Display," use the following steps:

1. Use the  and  buttons to move the cursor to "Small Format Disp," then press the  button.
2. Press the  button again to change the settings.

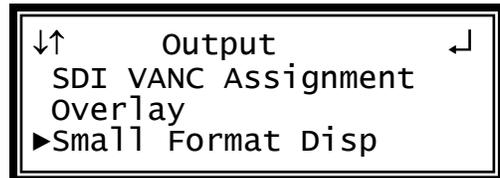

**Format**

1. While the cursor is on "Format:" press the  button to change the display format.
2. Use the  and  buttons to change from any of the following settings:

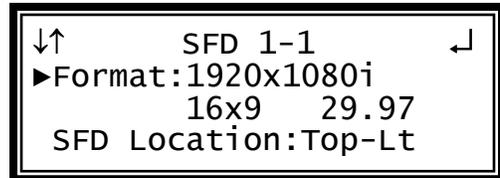

720x480i 16x9 29.97	1920x1080i 16x9 25.00
720x480i 4x3 29.97	1920x1080i 16x9 29.97
720x576i 16x9 25.00	1920x1080i 16x9 30.00
720x576i 4x3 25.00	1920x1080p 16x9 23.98*
1280x720p 16x9 50.00	1920x1080p 16x9 24.00*
1280x720p 16x9 59.94	1920x1080p 16x9 25.00*
1280x720p 16x9 60.00	1920x1080p 16x9 29.97*
	1920x1080p 16x9 30.00*

\* indicates that this setting is only available for the 8730A/8732

## MRD 3187B User Manual

---


*Note: "If either 480i or 576i video format is used the HD-SDI outputs are turned off and only the analog output is enabled."*

3. Press the  button to save the settings.

**SFD Location**

1. Use the  and  button to move the cursor to "SFD Location:" and then press the  button.
2. Use the  and  buttons to select one of the following options:

Top-Lt	Mid-Lt	Btm-Lt
Top-Rt	Mid-Rt	Btm-Rt
Top-Ctr	Mid-Ctr	Btm-Ctr

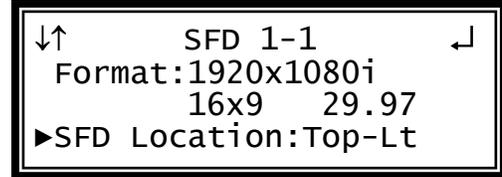

3. Press the  button to save the settings.

## 4.7 Audio Output (DolbyE, AES Digital, Analog) – Option 8707A

### General Information

**Install Location:** Any slot *except* 1-1 and 2-1.

**I/O:** (2) 75Ω Female BNC digital outputs, (1) 15-pin D-sub Male analog output

**Supported Formats:** Raw, PCM, Dolby E

**Description:** This card provides parsed DolbyE compressed audio, two digital audio outputs, and two analog audio pair outputs. It provides the audio from two audio decoder processors. Two 8707A cards can be installed to provide Raw and PCM digital audio outputs from four audio decoder processors (*Only in Configuration 2 units for separate inputs or Configuration 1 Dual Decoder units for the same input*).




### Output Control

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*


2. Use the  and  buttons to move the cursor to the “Audio” card of the specific slot (e.g. 2-2), then press the  button. Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

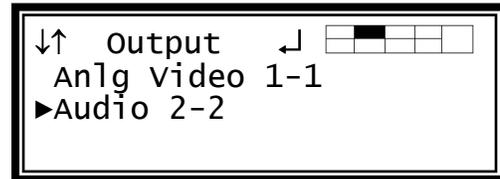

3. Press the  button one more time to move from the Status screen to the Edit screen.

### Digital Audio Settings

1. Use the  and  buttons to move the cursor to, “Digital Audio: Out1:” then press the  button.
2. Use the  and  buttons to select the audio decoder and output format desired (Audio X, Raw, PCM), then press the  button to save the selection.

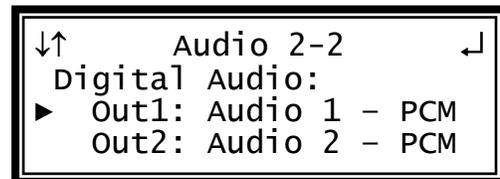

*Note: The above steps apply to “Digital Audio: Out2:” as well.*

*Note: The “X” of “Audio X,” in the step above, will be (1, 2, Off) for a Configuration 1 Single Decoder unit or any Configuration 2 unit, and it will be (1, 2, 3, 4, Off) for a Configuration 1 Dual Decoder unit.*

### Analog Audio Settings

1. Use the  and  buttons to move the cursor to, “Analog Audio: Ch1:” then press the  button.
2. Use the  and  buttons to select the desired audio to output (Audio X), then press the  button to save the selection.

*Note: The “X” of “Audio X,” in the step above, will be (1, 2, Off) for a Configuration 1 Single Decoder unit or any Configuration 2 unit, and it will be (1, 2, 3, 4, Off) for a Configuration 1 Dual Decoder unit.*


*Note: The above steps apply to “Analog Audio: Ch2:” as well.*



### Output Level

1. Use the  and  buttons to move the cursor to, “Level:” then press the  button.
2. Use the  and  buttons to select the desired level (1-9), then press  to save the selection.

*Note: The level 7 is approx. 0 Db and each number increment is approx. 2.5 Db.*

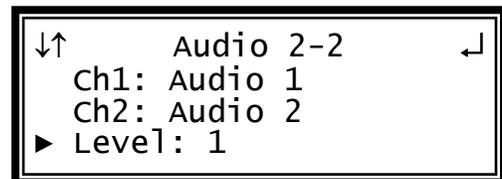

## 4.8 Dual Video Output (2 SDI, 1 RGBHV/YPbPr/Composite) – Option 8708


### General Information

**Install Location:** 1-1 or (2-1 only on Configuration 2 units or Configuration 1 units with dual decoders)

**I/O:** (2) 75Ω HD-SDI Female BNC outputs, (1) 15-pin D-sub Female analog output


**Supported Formats:** HD-SDI, SD-SDI, YPbPr, RGBHV, and Composite

**Description:** This card provides three mirrored outputs from any of the available input option cards. Two of the outputs are any combination of HD-SDI or SD-SDI and one is analog YPbPr/RGBHV/Composite.



### Output Control

1. Press the **OUTPUT** button.
2. Use the **▲** and **▼** buttons to move the cursor to the “HD/SD SDI Anlg Video” card of the specific slot (e.g. 2-1). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

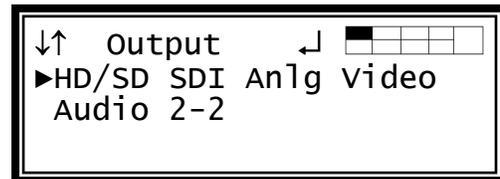

### Video Settings


1. Use the **▲** and **▼** buttons to move the cursor to, “Video,” then press the **ENTER** button to display the Video Status screen for the video output card.
2. Press the **ENTER** button again to display the Edit screen for the video output card.



### Select Format Setting

When in “Auto” mode, the unit will automatically pick the format which is closest to the native format of the decoded video in the elementary stream. When in “Manual” mode, the format may be selected from the list of available output formats listed under “Video Format” below.

1. Use the **▲** and **▼** buttons to move the cursor to, “Select Format:” then press the **ENTER** button.
2. Use the **▲** and **▼** buttons to select either auto or manual mode, then press the **ENTER** button to save the selection.

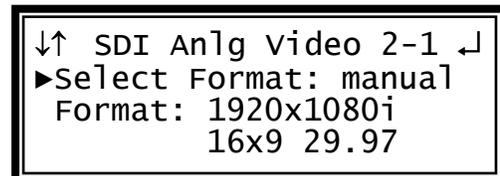

### Video Format

*Note: This menu is only available if the “Select Format” option is set to “manual.”*

1. Use the  and  button to move the cursor to, “Format:” then press the  button.
2. Use the  and  buttons to select the desired output format, then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  Select Format: manual
  ▶Format: 1920x1080i
           16x9 29.97

```

```

720x 480i 16x9 29.97
720x 480i 4x3 29.97
720x 576i 4x3 25.00
720x 576i 16x9 25.00
1280x720p 16x9 60.00
1280x720p 16x9 59.94
1280x720p 16x9 50.00
1920x1080i 16x9 25.00
1920x1080i 16x9 29.97

```

```

1920x1080i 16x9 30.00
1920x1080psF 16x9 23.98
1920x1080psF 16x9 24.00
1920x1080p 16x9 23.98
1920x1080p 16x9 24.00
1920x1080p 16x9 25.00
1920x1080p 16x9 29.97
1920x1080p 16x9 30.00

```

### SDI Output Setup

Follow the steps in this section to set the outputs to SD-SDI and HD-SDI.

1. Use the  and  button to move the cursor to, “Output A:” then press the  button.
2. Use the  and  buttons to select the desired output format (SD or HD), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  SDI
  ▶ Output A:SD
    Output B:HD

```

*Note: Repeat the steps above to change to the desired output setting for “Output B:”*

### Analog Output Format

*Note: If this setting is set incorrectly when using an RGB monitor, the image will appear green. If this setting is set incorrectly when using a Component monitor, there will be no video on the monitor.*

1. Use the  and  buttons to move the cursor to, “Anlg Out:” then press the  button.
2. Use the  and  buttons to select the desired output format (RGBHV, YPbPr, Composite), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  Analog
  ▶ Anlg Out:RGBHV
    NTSC Ped:Disabled

```

## MRD 3187B User Manual

- Use the  and  buttons to move the cursor to, “NTSC Ped:” then press the  button.
- Use the  and  buttons to change the “NTSC Ped:” to either “Black 0” or “Black 7.5”, then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
Analog
  Anlg Out:RGBHV
▶ NTSC Ped:Black 0

```

**Raster Color**

This setting determines the color of the raster that is output by the decoder when input is lost.

- Use the  and  buttons to move the cursor to, “Raster Color:” then press the  button.
- Use the  and  buttons to select the desired raster color (Black, white, Yellow, Cyan, Green, Magenta, Red, Blue), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
Anlg Out:RGBHV
NTSC Ped:Disabled
▶Raster Color:Black

```

**HD Settings**

- Use the  and  buttons to move the cursor to, “HD Settings,” then press the  button to display the Status screen for the HD video output settings.
- Press the  button again to display the Edit screen for the HD video output settings.

```

↓↑ SDI Video 2-1 ↓
Video
▶HD Settings
SD Settings

```

**Display Mode**

- Use the  and  buttons to move the cursor to, “Disp Mode:” then press the  button.
- Use the  and  buttons to select the desired output size (Pillarbars, Cropped), then press the  button to save the selection.

```

↓↑ SDI Video 2-1 ↓
▶Disp Mode: Pillarbars
Video Loss Mode:
Display Raster

```

**Video Loss Mode**

- Use the  and  buttons to move the cursor to, “Video Loss Mode:” then press the  button.
- Use the  and  buttons to choose between (Display Raster, Disable

```

↓↑ SDI Video 2-1 ↓
Disp Mode: Pillarbars
▶Video Loss Mode:
Display Raster

```

## MRD 3187B User Manual

output), then press the  button to save the selection.

**Auto AFD**

1. Use the  and  buttons to move the cursor to, “Auto AFD:” then press the  button.
2. Use the  and  buttons to enable or disable AFD, then press the  button to save the selection.

**SDI VANC Assignment**


To edit the SDI VANC Assignment, use the following steps.

1. Use the  and  buttons to move the cursor to, “SDI VANC Assign” then press the  button to display the status screen for the VANC.
2. Press the  button once more to enter the Edit screen.

**ADP**

To enable items in the VANC and assign a line for each item, use the following steps.

1. Use the  and  buttons to move the cursor to the desired type of closed captioning (EIA-608CC, EIA-708CC, TTX S2031M, Source ID, or 127 S2031M), then press the  button.
2. Use the  and  buttons to choose “Enabled or Disabled” then select the “Line” on which to embed. Press the  button to save the selection.

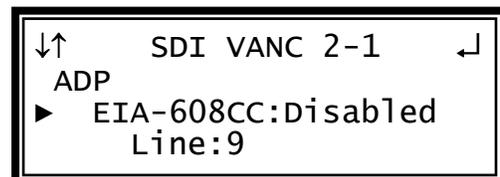

*Note: Repeat steps 1-4 above to change EIA-708CC, TTX S2031M, Source ID, and 127 S2031M.*

**SD Settings**

1. Use the  and  buttons to move the cursor to, “SD Settings,” then press the  button to display the Status screen for the SD video output settings.
2. Press the  button again to display the Edit



screen for the SD video output settings.

### Display Mode

1. Use the  and  buttons to move the cursor to, “Disp Mode:” then press the  button.
2. Use the  and  buttons to select the desired output size (Letterbox, Anamorph, or Cropped), then press the  button to save the selection.

```

↓↑ SD SDI Video 2-1 ↓
▶SD Mode: Cropped
Video Loss Mode:
Display Raster

```

### Video Loss Mode

1. Use the  and  buttons to move the cursor to, “Video Loss Mode:” then press the  button.
2. Use the  and  buttons to choose between (Display Raster, Disable Output), then press the  button to save the selection.

```

↓↑ SD SDI Video 2-1 ↓
Disp Mode: Pillarbars
▶Video Loss Mode:
Display Raster

```

### Auto AFD

1. Use the  and  buttons to move the cursor to, “Auto AFD:” then press the  button.
2. Use the  and  buttons to enable or disable AFD, then press the  button to save the selection.

```

↓↑ SD SDI Video 2-1 ↓
Video Loss Mode:
Display Raster
▶Auto AFD:Disabled

```

### SDI VANC Assignment

To edit the SDI VANC Assignment, use the following steps.

1. Use the  and  buttons to move the cursor to, “SDI VANC Assign” then press the  button to display the status screen for the VANC.
2. Press the  button once more to enter the Edit screen.

```

↓↑ SD SDI Video 2-1 ↓
Auto AFD:Disabled
▶SDI VANC Assign
Cmpst VBI Assignment

```

### ADP

To enable items in the VANC and assign a line for each item, use the following steps.

1. Use the  and  buttons to move the cursor to the desired type of closed

```

↓↑ SD SDI VANC 2-1 ↓
ADP
▶ EIA-608CC:Disabled
Line:9

```

## MRD 3187B User Manual

captioning (EIA-608CC, EIA-708CC, TTX S2031M, Source ID, or 127 S2031M), then press the  button.

- Use the  and  buttons to choose “Enabled or Disabled” then select the “Line” on which to embed. Press the  button to save the selection.

```

↓↑ SD SDI VANC 2-1 ↵
ADP
EIA-608CC:Disabled
▶ Line:9

```

*Note: Repeat steps 1-4 above to change EIA-708CC, TTX S2031M, Source ID, and 127 S2031M.*

### NTSC Waveforms

To enable NTSC items, use the following steps.

- Use the  and  buttons to move the cursor to, “Line21CC:” then press the  button.
- Use the  and  buttons to enable or disable “Line21CC”, then press the  button to save the selection.

```

↓↑ SD SDI Video 2-1 ↵
NTSC Waveforms
▶ Line21CC:Enabled
AMOL:Disabled

```

*Note: Repeat steps 1-2 above to change AMOL, and TVG2x.*

### PAL Waveforms

To enable PAL items, use the following steps.

- Use the  and  buttons to move the cursor to, “TTX:” then press the  button.
- Use the  and  buttons to enable or disable “TTX”, then press the  button to save the selection.

```

↓↑ SD SDI Video 2-1 ↵
PAL Waveforms
▶ TTX:Enabled
VPS:Disabled

```

*Note: Repeat steps 1-2 above to change VPS, and WSS.*

### Composite VBI Assignment

To edit the Composite VBI Assignment, use the following steps.

- Use the  and  buttons to move the cursor to, “Cmpst VBI Assignment” then press the  button to display the status screen for the VBI.

```

↓↑ SD SDI Video 2-1 ↵
Auto AFD:Disabled
SDI VANC Assign
▶ Cmpst VBI Assignment


```

2. Press the  button once more to enter the Edit screen.

### NTSC Waveforms

To enable NTSC items, use the following steps.

1. Use the  and  buttons to move the cursor to, “Line21CC:” then press the  button.
2. Use the  and  buttons to enable or disable “Line21CC”, then press the  button to save the selection.

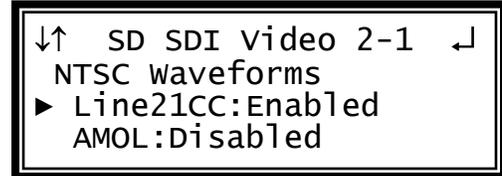

*Note: Repeat steps 1-2 above to change AMOL, and TVG2x.*

### PAL Waveforms

To enable PAL items, use the following steps.

1. Use the  and  buttons to move the cursor to, “TTX:” then press the  button.
2. Use the  and  buttons to enable or disable “TTX”, then press the  button to save the selection.



*Note: Repeat steps 1-2 above to change VPS, and WSS.*

## 4.9 Dual Input DVB-S/DVB-S2 Receiver – Option 8710/8710A

### General Information

**Install Location:** Any slot *except* 1-1 or 2-1.

**I/O:** (2) 75Ω Female F Connectors

**Supported Formats:** DVB-S/DVB-S2

**Description:** This card will input a satellite L-band (950MHz – 2150MHz) signal for demodulation of KU-band or C-band DVB-S QPSK signals or DVB-S2 QPSK/8PSK signals. The symbol rate ranges from 1MSym/s to 45MSym/s for DVB-S and 1-30MSym/s for DVB-S2. This card does not provide any power to the dish LNB. The “Input” LED will only illuminate if the card detects frequency, symbol rate, FEC lock (Carrier Lock), and TS sync (Sync Lock). The card provides A and B inputs, which may be independently configured, but only one may be used at a time.




*Note: This card does not provide power to the dish LNB*

### Input Control


To enable this card as an input use the following steps.

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

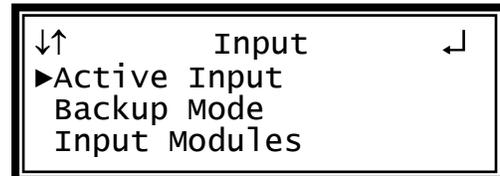


2. Select “Active Input”, then press the **ENTER** button.
3. Press **ENTER** twice to change the active input and use the **▲** and **▼** buttons to select the input to make active, and press the **ENTER** button to save the changes.

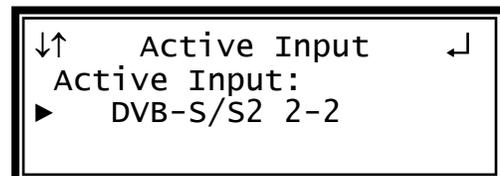


### Configure Input

1. Press the **INPUT** button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press **ENTER**.*

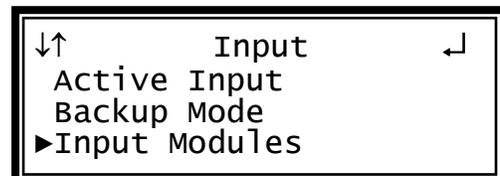


2. Select “Input Modules”, and press the **ENTER** button.
3. Use the **▲** and **▼** buttons to move the cursor to the “DVB-S/S2” card of the specific slot (e.g. 2-2). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

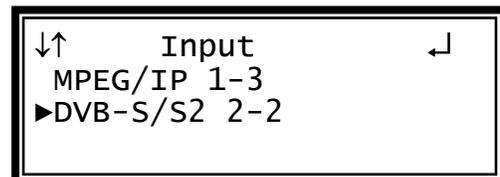


## MRD 3187B User Manual

4. Press the  button once to display the Status screen for the DVB-S/S2 card.
5. Press the  button again to display the Edit screen for the DVB-S/S2 card.
6. Use the  and  buttons to move the cursor to, “Selected I/O:” then press the  button.
7. Use the  and  buttons to change the selection to, “yes,” then press the  button.

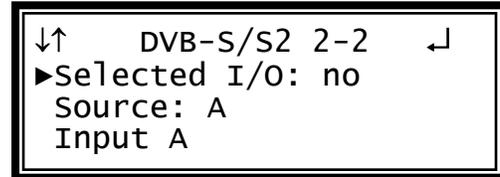**Source**

This option will select which input, on the back of the card, will be active.

1. Use the  and  buttons to move the cursor to, “Source:” then press the  button.
2. Use the  and  buttons to select which input to be active (A, B), then press the  button to save the selection.

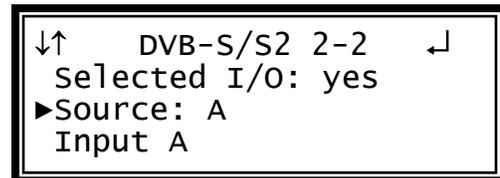
**Input A**

These settings correspond to the input on “Source A.”

**DVB Mode**


The DVB-S/S2 card can receive either DVB-S or DVB-S2 transmission.

1. Use the  and  buttons to move the cursor to, “DVB Mode:” then press the  button.
2. Use the  and  buttons to select either (DVB-S, DVB-S2), then press the  button to save the selection.

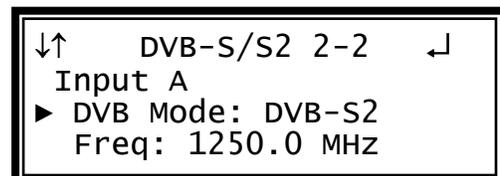**Frequency A**

The DVB-S/S2 card tunes by the L-band frequency rather than the transponder frequency or local oscillator value. The L-band frequency is the difference between the downlink transponder frequency and the LNB local oscillator frequency.

1. Use the  and  buttons to move the cursor to, “Freq:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the frequency (950MHz – 2150MHz), then press the  button to save the selection.

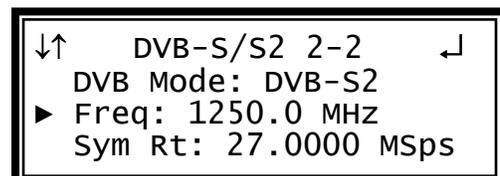


**Symbol Rate A**

1. Use the  and  buttons to move the cursor to, “Sym Rt:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the symbol rate.

*Note: 1 – 45MSymbols/s for DVB-S,  
and 1 – 30MSymbols/s for DVB-S2.*

3. Then press the  button to save the selection.

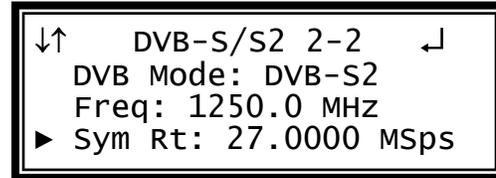
**Input B**

These settings correspond to the input on “Source B.”

**DVB Mode**


The DVB-S/S2 card can receive either DVB-S or DVB-S2 transmission.

1. Use the  and  buttons to move the cursor to, “DVB Mode:” then press the  button.
2. Use the  and  buttons to select either (DVB-S, DVB-S2), then press the  button to save the selection.

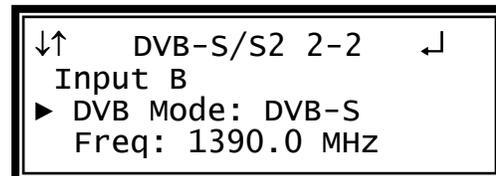**Frequency B**

The DVB-S/S2 card tunes by the L-band frequency rather than the transponder frequency or local oscillator value. The L-band frequency is the difference between the downlink transponder frequency and the LNB local oscillator frequency.


1. Use the  and  buttons to move the cursor to, “Freq:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the frequency (950MHz – 2150MHz), then press the  button to save the selection.

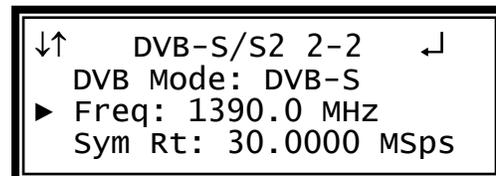

**Symbol Rate B**

1. Use the  and  buttons to move the cursor to, “Sym Rate:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the symbol rate.

*Note: 1 – 45MSymbols/s for DVB-S,  
and 1 – 30MSymbols/s for DVB-S2.*

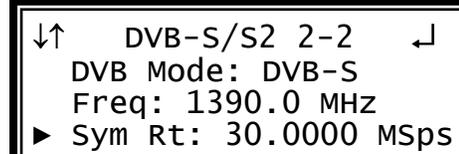

```
↓↑  DVB-S/S2 2-2  ↵
DVB Mode: DVB-S
Freq: 1390.0 MHz
▶ Sym Rt: 30.0000 MSps
```

3. Then press the  button to save the selection.

## 4.10 Dual Input ASM Receiver – Option 8711

### General Information

**Install Location:** Any slot *except* 1-1 or 2-1.

**I/O:** (2) 75Ω Female F Connectors

**Supported Formats:** DVB-S/DVB-S2

**Description:** This card will input a satellite L-band (950MHz – 2150MHz) signal for demodulation of KU-band, C-band, or X-band DVB-QPSK, 8PSK, or Adv-QPSK signals. All these modes are available using Turbo Coded forward error correction. The DVB-QPSK mode also supports legacy DVB FEC. The symbol rate ranges from 0.256MSym/s to 30MSym/s for all modulation types. This card does not provide any power to the dish LNB. The “Input” LED will only illuminate if the card detects frequency, symbol rate, FEC lock (Carrier Lock), and TS sync (Sync Lock). The card provides A and B inputs, which may be independently configured, but only one may be active at a time.




*Note: This card does not provide power to the dish LNB*

### Input Control


To enable this card as an input use the following steps.

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

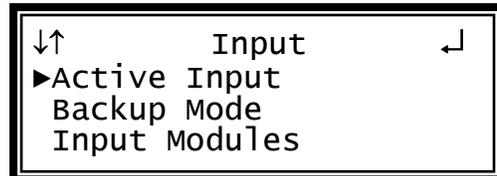


2. Select “Active Input”, then press the  button.
3. Press  twice to change the active input and use the  and  buttons to select the input to make active, and press the  button to save the changes.

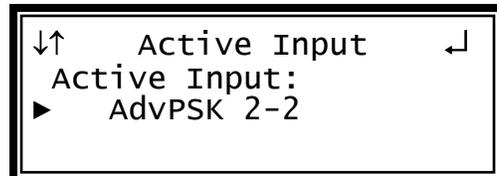


### Configure Input

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

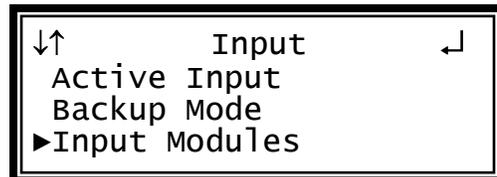


2. Select “Input Modules”, and press the  button.
3. Use the  and  buttons to move the cursor to the “AdvPSK” card of the specific slot (e.g. 2-

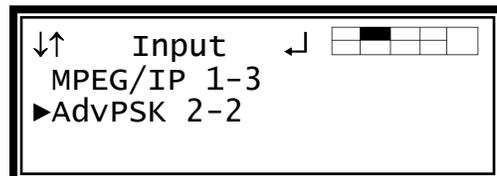


## MRD 3187B User Manual

- 2). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
4. Press the  button once to display the Status screen for the Adv-PSK card.
5. Press the  button again to display the Edit screen for the Adv-PSK card.
6. Use the  and  buttons to move the cursor to, “Selected I/O:” then press the  button.
7. Use the  and  buttons to change the selection to, “yes,” then press the  button.

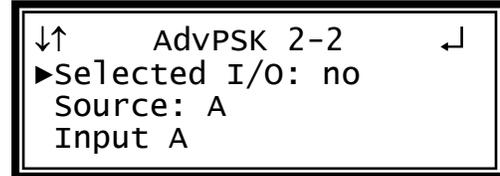**Source**

This option will select which input, on the back of the card, will be active.

1. Use the  and  buttons to move the cursor to, “Source:” then press the  button.
2. Use the  and  buttons to select which input to be active (A, B), then press the  button to save the selection.

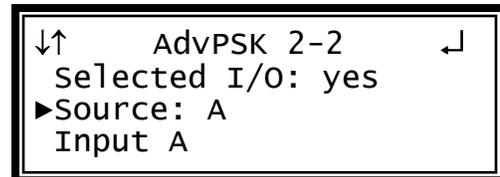
**Input A**

These settings correspond to the input on “Source A.”

**Modulation Type**

The ASM card can receive DVB-QPSK ( $1/2, 2/3, 3/4, 5/6, 7/8$ ), Adv QPSK ( $1/2, 2/3, 3/4, 5/6, 7/8$ ), and 8-PSK ( $2/3, 3/4 (2.05), 3/4 (2.10), 3/4 (2.20), 5/6, 8/9$ ) transmission.

1. Use the  and  buttons to move the cursor to, “Mod:” then press the  button.
2. Use the  and  buttons to select (DVB-QPSK, Adv QPSK, or 8-PSK), then press the  button to save the selection.

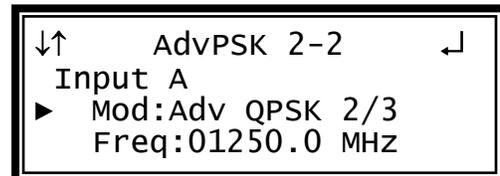**Frequency A**

The ASM card tunes by the L-band frequency rather than the transponder frequency or local oscillator value. The L-band frequency is the difference between the downlink transponder frequency and the LNB local oscillator frequency.

## MRD 3187B User Manual

1. Use the  and  buttons to move the cursor to, “Freq:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the frequency (950MHz – 2150MHz), then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
Mod:Adv QPSK 2/3
▶ Freq:01250.0 MHz
LO Off:00000.0 MHz

```

**Local Oscillator Offset**

The ASM card offers an offset for the Local Oscillator frequency. This means that the MRD will calculate the actual frequency in which the card tunes; saving the user time and possible miscalculation errors. Follow the steps below to change the offset or set to zero for manual calculation.

1. Use the  and  buttons to move the cursor to, “LO Off:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Local Oscillator Offset, then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
Freq:01250.0 MHz
▶ LO Off:00000.0 MHz
SymRt:00.000000MSps

```

**Symbol Rate A**

1. Use the  and  buttons to move the cursor to, “SymRt:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the symbol rate.
3. Then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
Freq:01250.0 MHz
LO Off:00000.0 MHz
▶ SymRt:00.000000MSps

```

**Input B**

These settings correspond to the input on “Source B.”

**Modulation Type**

The ASM card can receive DVB-QPSK ( $1/2$ ,  $2/3$ ,  $3/4$ ,  $5/6$ ,  $7/8$ ), Adv QPSK ( $1/2$ ,  $2/3$ ,  $3/4$ ,  $5/6$ ,  $7/8$ ), and 8-PSK ( $2/3$ ,  $3/4$  (2.05),  $3/4$  (2.10),  $3/4$  (2.20),  $5/6$ ,  $8/9$ ) transmission.

## MRD 3187B User Manual

1. Use the  and  buttons to move the cursor to, "Mod:" then press the  button.
2. Use the  and  buttons to select (DVB-QPSK, Adv QPSK, or 8-PSK), then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
Input B
▶ Mod:Adv QPSK 2/3
  Freq:01250.0 MHz

```

**Frequency B**

The ASM card tunes by the L-band frequency rather than the transponder frequency or local oscillator value. The L-band frequency is the difference between the downlink transponder frequency and the LNB local oscillator frequency.

1. Use the  and  buttons to move the cursor to, "Freq:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the frequency (950MHz – 2150MHz), then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
DVB Mode: DVB-S
▶ Freq: 1390.0 MHz
  Sym Rt: 30.0000 MSps

```

**Local Oscillator Offset**

The ASM card offers an offset for the Local Oscillator frequency. This means that the MRD will calculate the actual frequency in which the card tunes; saving the user time and possible miscalculation errors. Follow the steps below to change the offset or set to zero for manual calculation.

1. Use the  and  buttons to move the cursor to, "LO Off:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Local Oscillator Offset, then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
Freq:01250.0 MHz
▶ LO Off:00000.0 MHz
  SymRt:00.000000MSps

```

**Symbol Rate B**

1. Use the  and  buttons to move the cursor to, "SymRt:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the symbol rate.
3. Then press the  button to save the selection.

```

↓↑ AdvPSK 2-2 ↓
Freq:01250.0 MHz
LO Off:00000.0 MHz
▶ SymRt:00.000000MSps

```

## 4.11 Video Output (2 HD/SD-SDI, 1 RGBHV/YPbPr/Comp) – Option 8712


### General Information

**Install Location:** This card can only be installed in location 2-1.

**I/O:** (2) 75Ω HD-SDI Female BNC outputs, (1) 15-pin D-sub Female analog output


**Supported Formats:** HD-SDI, SD-SDI, YPbPr, RGBHV, and Composite

**Description:** This card provides three mirrored outputs from any of the available input option cards. Two of the outputs are any combination of HD-SDI or SD-SDI and one is analog YPbPr/RGBHV/Composite.




### Output Control

1. Press the **OUTPUT** button.
2. Use the **▲** and **▼** buttons to move the cursor to the “HD video” card of the specific slot (e.g. 2-1). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.

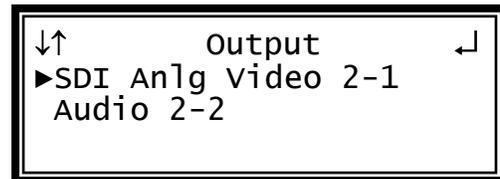

### Video Settings


1. Use the **▲** and **▼** buttons to move the cursor to, “video,” then press the **ENTER** button to display the Video Status screen for the video output card.
2. Press the **ENTER** button again to display the Edit screen for the video output card.

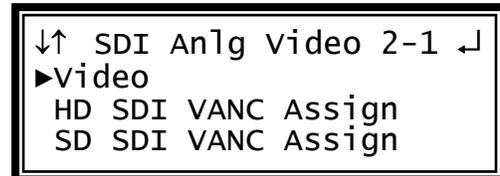

### Select Format Setting

When in “Auto” mode, the unit will automatically pick the format which is closest to the native format of the decoded video in the elementary stream. When in “Manual” mode, the format may be selected from the list of available output formats listed under “Video Format” below.

1. Use the **▲** and **▼** buttons to move the cursor to, “Select Format:” then press the **ENTER** button.
2. Use the **▲** and **▼** buttons to select either auto or manual mode, then press the **ENTER** button to save the selection.

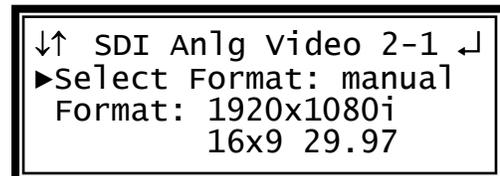

### Video Format

*Note: This menu is only available if the “Select Format” option is set to “manual.”*

## MRD 3187B User Manual

1. Use the  and  button to move the cursor to, “Format:” then press the  button.
2. Use the  and  buttons to select the desired output format, then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  Select Format: manual
▶Format: 1920x1080i
          16x9 29.97

```

1280x720p	16x9	50.00	1920x1080i	16x9	30.00
1280x720p	16x9	59.94	1920x1080i	16x9	29.97
1280x720p	16x9	60.00	1920x1080i	16x9	25.00

### SDI Output Setup

Follow the steps in this section to set the outputs to SD-SDI and HD-SDI.

1. Use the  and  button to move the cursor to, “Output 1:” then press the  button.
2. Use the  and  buttons to select the desired output format (SD or HD), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  SDI
▶  Output 1:SD
  Output 2:HD

```

*Note: Repeat the steps above to change to the desired output setting for “Output 2:”*

3. Use the  and  button to move the cursor to, “SDI Clk:” then press the  button.
4. Use the  and  buttons to select the desired SDI Clk (Pass or Squelch), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  Output 1:SD
  Output 2:HD
▶  SDI Clk:Pass

```

### Analog Output Format

*Note: If this setting is set incorrectly when using an RGB monitor, the image will appear green. If this setting is set incorrectly when using a Component monitor, there will be no video on the monitor.*

1. Use the  and  buttons to move the cursor to, “Anlg Out:” then press the  button.
2. Use the  and  buttons to select the desired output format (RGBHV, YPbPr,

```

↓↑ SDI Anlg Video 2-1 ↓
  Analog
▶  Anlg Out:RGBHV
  NTSC Ped:Disabled

```

## MRD 3187B User Manual

- Composite), then press the  button to save the selection.
- Use the  and  buttons to move the cursor to, “NTSC Ped:” then press the  button.
  - Use the  and  buttons to Enable, or Disable the “NTSC Ped:” then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
Analog
  Anlg Out:RGBHV
▶ NTSC Ped:Disabled

```

**Display Mode**

- Use the  and  buttons to move the cursor to, “Disp Mode:” then press the  button.
- Use the  and  buttons to select the desired output size (Letterbox, Cropped), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
Format: 1920x1080i
      16x9 29.97
▶Disp Mode: Letterbox

```

**SD Mode**

- Use the  and  buttons to move the cursor to, “SD Mode:” then press the  button.
- Use the  and  buttons to select the desired output size (Letterbox, Cropped, Anamorph), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
▶Disp Mode: Letterbox
SD Mode: Anamorph
SDI

```

**Raster Color**

This setting determines the color of the raster that is output by the decoder when input is lost.

- Use the  and  buttons to move the cursor to, “Raster Color:” then press the  button.
- Use the  and  buttons to select the desired raster color (Black, White, Yellow, Cyan, Green, Magenta, Red, Blue), then press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
  Anlg Out:RGBHV
  NTSC Ped:Disabled
▶Raster Color:Black

```

**HD SDI VANC Embedding**

1. Use the  and  buttons to move the cursor to, “HD SDI VANC Assign,” then press the  button to view the Status screen.
2. Press the  button once more to display the Edit menu.
3. Use the  and  buttons to move the cursor to the desired type of closed captioning (EIA-608CC: or EIA-708CC:), then press the  button.
4. Use the  and  buttons to choose “Enabled or Disabled” then select the “Line” on which to embed the captioning. Press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
Video
▶ HD SDI VANC Assign
SD SDI VANC Assign

```

```

↓↑ SDI VANC 1-1 ↓
ADP
▶ EIA-608CC:Disabled
Line:9

```

**SD SDI VANC Embedding**

1. Use the  and  buttons to move the cursor to, “SD SDI VANC Assign,” then press the  button to view the Status screen.
2. Press the  button once more to display the Edit menu.
3. Use the  and  buttons to move the cursor to the desired type of closed captioning (EIA-608CC: or EIA-708CC:), then press the  button.
4. Use the  and  buttons to choose “Enabled or Disabled” then select the “Line” on which to embed the captioning. Press the  button to save the selection.

```

↓↑ SDI Anlg Video 2-1 ↓
Video
HD SDI VANC Assign
▶ SD SDI VANC Assign

```

```

↓↑ SDI VANC 1-1 ↓
ADP
▶ EIA-608CC:Disabled
Line:9

```

**Composite VBI Assignment**

To setup Line 21 Closed Captions on the Composite output of this card use the following steps:

1. Use the  and  buttons to move the cursor to, “Cmpst VBI Assignment,” then press the  button.
1. To Enable or Disable “Line 21 CC” press the  button on the selected option.
2. Then use the  and  buttons to toggle between Enabled and Disabled.
3. Press the  button to save changes.

```

↓↑ SDI Anlg Video 2-1 ↓
▶ Cmpst VBI Assignment
HD Genlock Offset
SD Genlock Offset

```

```

↓↑ Cmpst VBI 2-1 ↓
NTSC
▶ Line21 CC: Enabled

```

### HD/SD Genlock Offset

The 8712 card can be Genlocked to a standard “black and burst” or Tri-level sync signal applied to the Genlock input on the back panel. The frame rate of the “black and burst” signal must be the same as the frame rate of the video output. The “Genlock Reference,” under the  button, must be set to the type of Genlock signal being used as well. If the Genlock input source is lost, the red Error LED will illuminate, a Decoder Error will show, and the Error list will show the error. The video will restore but will not be Genlocked until the Genlock signal is restored.

*Note: This mode is only available if the unit is equipped with an 8733 decoder as well as the 8712 video output card.*

1. Use the  and  buttons to move the cursor to, “HD Genlock Offset,” then press the  button.

```

↓↑ SDI Anlg Video 2-1 ↓
  CMPST VBI Assignment
  ▶HD Genlock Offset
  SD Genlock Offset

```

*Note: To setup the “SD Genlock Offset”, select the “SD Genlock Offset” instead.*

### Vertical

1. Use the  and  buttons to move the cursor to, “Vert:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the number of lines (-131 - +131), then press the  button to save the selection.

```

↓↑ Genlock1 offset ↓
  ▶Vert:-125 lines
  Horiz:-0177 pixels

```

### Horizontal

1. Use the  and  buttons to move the cursor to, “Horiz:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the number of pixels, then press the  button to save the selection.

```

↓↑ Genlock1 offset ↓
  Vert:-125 lines
  ▶Horiz:-0177 pixels

```

*Note: The maximum amount of offset is determined by the format of the video set.*

## 4.12 GPIO Module – 8713


### General Information

**Install Location:** Any slot *except* 1-1 and 2-1.

**I/O:** Logic Input, Open-Collector, and Relay Contact

**Description:** This module is considered a global unit

option. In other words, the inputs and outputs of a single installed module can be accessed by functions associated with general system features, or RDS specific features in any unit configuration. Only one GPIO module can be installed in a unit.



### DTMF Tones

To setup the MRD 3187B to interpret a contact closure from a receiver (getting DTMF analog cue tones) and output an embedded SCTE104 message in the SDI output, use the following steps:

1. Press the button.
2. Use the and buttons to move the cursor to, “GPIO Module”, then press the button.
3. Use the and buttons to move the cursor to, “Input 1”, then press the button.
4. Use the and buttons to move the cursor to, “Input 1”, then press the button.
5. Use the and buttons to select the SCTE104 message that is to be inserted, then press the button to save the selection.

*Ex: SCTE104 RDS1 1 refers to splice request 1 that will be output on RDS1. All other options follow the same convention.*

6. Use the and buttons to move the cursor to, “Active State”, then press button.
7. Use the and buttons to select the state in which the input will be considered active, then press the button to save the selection.

```

↓↑           Menu           ↵
Event Log
▶GPIO Module
Splice Req. Setup
  
```

```

↓↑  GPIO Module 2-4  ↵
▶Input 1:None
Input 2:None
Input 3:None
  
```

```

↓↑  GPIO Module 2-4 1  ↵
▶Input 1:SCTE104 RDS1 1
Active State:High
  
```

```

↓↑  GPIO Module 2-4 1  ↵
Input 1:SCTE104 RDS1 1
▶Active State:High
  
```

*Note: The aforementioned steps apply to the configuration of “Inputs 1-4, Outputs 1-3, and Relays 1-3” as well.*

### Splice Request Setup

Once the Input is setup the outgoing SCTE104 messages need to be configured. Use the following steps to configure the outgoing SCTE104 messages:

1. Press the  button.
2. Use the  and  buttons to move the cursor to, “Splice Requests”, and then press the  button.
3. Use the  and  buttons to move the cursor to, “Splice Req 1”, and then press the  button.
4. Use the  and  buttons to move the cursor to the desired field to edit, and then press the  button to edit.
5. Use the  and  buttons to choose the desired values, and then press the  button to save the selection.



*Note: Use steps 4-5 to edit all “Splice Req” variables*

*Note: The aforementioned steps apply to the configuration of “Splice Req 2-4” as well.*

### Pinout

- |    |                          |
|----|--------------------------|
| 1  | GND                      |
| 2  | Logic Input #1           |
| 3  | Logic Input #2           |
| 4  | Logic Input #3           |
| 5  | Logic Input #4           |
| 6  | +Vcc                     |
| 7  | GND                      |
| 8  | Open-Collector Output #1 |
| 9  | GND                      |
| 10 | Open-Collector Output #2 |
| 11 | GND                      |
| 12 | Open-Collector Output #3 |
| 13 | Relay Contact #1         |
| 14 | Relay Contact #1         |
| 15 | Relay Contact #2         |
| 16 | Relay Contact #2         |
| 17 | Relay Contact #3         |
| 18 | Relay Contact #3         |


## 4.13 Relay and DPI Trigger – Option 8714

### General Information

**Install Location:** Any slot *except* 1-1 and 2-1.

**I/O:** Relay Contacts

**Description:** This module should be considered a global unit option. In other words, the relays of a single installed module can be accessed by functions associated with general system alarms, or RDS specific features in any unit configuration.



### DPI Trigger Event Configuration




The DPI Trigger event must be configured and then mapped to a relay contact in order to utilize the new DPI Trigger output feature. Use the following steps to configure the DPI Trigger Event, and map the DPI Trigger Event to a relay contact output.

1. Press the **MENU** button.
2. Use the **▲** and **▼** buttons to select “Splice Requests” and press the **ENTER** button. Choose (Splice Rec 1, Splice Req 2, etc...), and then press the **ENTER** button.
3. Use the **▲** and **▼**, and the **◀** and **▶** buttons to set the “AS Index” to the desired amount, and then press the **ENTER** button.

*Note: Refer to step 3 to adjust the “DPI PID Index:, Event Source:, Program ID:, Preroll:, Break Duration:, Avail Num:, and Avail Expect:”.*

4. For the “Splice Type:” choose (OON, OON Imm, RTN, RTN Imm, or Cancel) using the **▲** and **▼** buttons, and then press the **ENTER** button.

*Note: The user should take care to ensure the correct DPI PID and Video PID and PCR values (as indicated by the PMT) are configured on the MRD so that the splice points and decoded video are properly associated.*

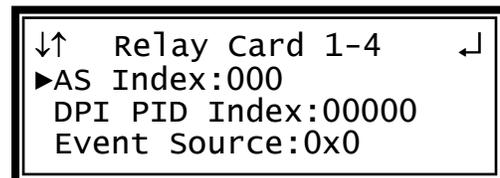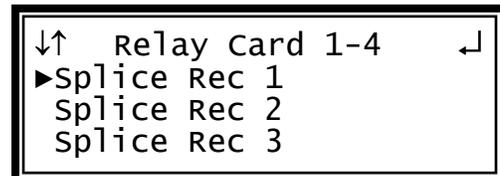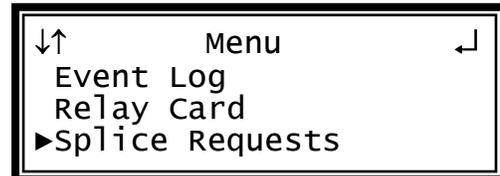

## Relay Contact Configuration

1. Press the  button.
2. Use the  and  buttons to select “Relay Card” and then press the  button.
3. Choose the desired contact set (Relay1, Relay2, etc...) to configure and then press the  button.
4. Use the  and  buttons to assign the appropriate event (OON RDS1 1 in this example) and then press the  button.
5. Use the  and  buttons to select either (High or Low), and then press the  button.
6. Use the  and  buttons and the  and  buttons to select the desired offset (+/-2000) or leave set to default, and then press the  button.

### Override

There are three options for this setting: “Off, On, and Auto”. If set to “Auto” the relay will operate as expected (a DPI splice command will trigger the Active State). If “Override” is set to “Off”, the relay will always be in the “non-active” state and vice versa if “Override” is set to “On”. This setting can be used for testing the downstream equipment.

1. Use the  and  buttons to change the “Override” to either (Off, On, or Auto).
2. Press the  button to save the selection.

```

↓↑      Menu      ↓
Event Log
▶Relay Card
Splice Requests
  
```

```

↓↑ Relay Card 1-4 ↓
▶Relay1
Relay2
Relay3
  
```

```

↓↑ Relay Card 1-4 1 ↓
▶Relay: OON RDS1 1
Active State: High
Offset:+0000
  
```

```

↓↑ Relay Card 1-4 1 ↓
Relay: OON RDS1 1
▶Active State: High
Offset:+0000
  
```

```

↓↑ Relay Card 1-4 1 ↓
Active State: High
Offset: +0000
▶Override: Auto
  
```

### IMPORTANT NOTE ABOUT THE “OFFSET” SETTING:

The “offset” value may need to be adjusted to compensate for switch time latencies and line up the exact desired insertion switch point.

The MRD will delay the relay pulse according to the parameters received in the DPI splice command. If the received DPI command is a splice\_immediate type, the MRD will fire the relay immediately following any delay (positive value) indicated by the configured “Offset” value. In the case of the splice\_immediate event, negative offsets have no meaning, and the event will be fired as soon as possible.

In the case of a splice\_insert event with a delayed splice\_time indicated, the MRD will wait until the indicated splice time before firing the relay pulse. The splice\_insert command is typically transmitted 4 to 5 seconds before the actual DPI insertion point. In this case the “Offset” value can be used to cause the relay to be fired earlier (negative offset) or later (positive offset) than indicated by the splice\_insert message.

#### **A NOTE ABOUT MULTIPLE SPLICE COMMANDS:**

SCTE35 allows the DPI inserter to send more than one splice command indicating the same DPI event. This is accomplished by using the splice\_event\_ID. The MRD will keep track of the splice\_event\_ID so that duplicate splice commands do not cause more than one DPI trigger output, and so that unique splice events are properly queued and fired - as would be expected.

## 4.14 Dual Input COFDM Receiver – Option 8715


### General Information

**Install Location:** Any slot *except* 1-1 or 2-1.

**I/O:** (2) 75Ω Female F Connectors

**Supported Formats:** COFDM

**Description:** This card will allow the MRD 3187B to receive a COFDM signal for use in electronic news gathering (U.S.) or any COFDM Terrestrial Broadcast (DVB-T, European) applications. Only one input may be selected at a time.




### Input Control


To enable this card as an input use the following steps.

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press* .

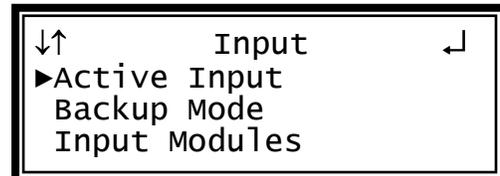

2. Select “Active Input”, then press the  button.
3. Press  twice to change the active input and use the  and  buttons to select the input to make active, and press the  button to save the changes.



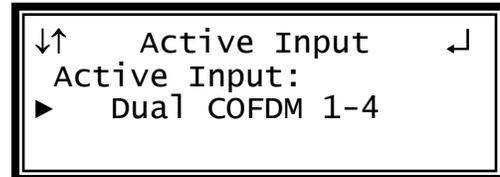


### Configure Input

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press* .

2. Select “Input Modules”, and press the  button.
3. Use the  and  buttons to move the cursor to “Dual COFDM” card of the specific slot (e.g. 1-4). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
4. Press the  button once to display the Status screen for the COFDM card.
5. Press the  button again to display the Edit screen for the COFDM card.
6. Use the  and  buttons to move the cursor

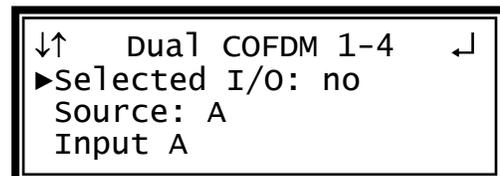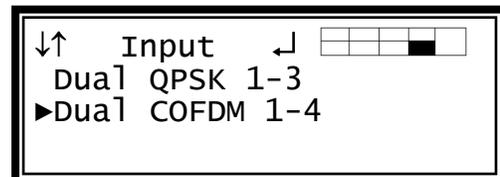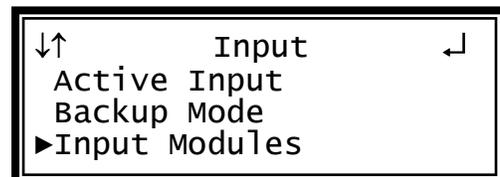

to, “Selected I/O:” then press the  button.

- Use the  and  buttons to change the selection to, “yes,” then press the  button.

### Source

This option will select which input, on the back of the card, will be active.

- Use the  and  buttons to move the cursor to, “Source:” then press the  button.
- Use the  and  buttons to select which input to be active (A, B), then press the  button to save the selection.

```

↓↑ Dual COFDM 1-4 ↓
Selected I/O: no
▶ Source: A
Input A
  
```

### Input A

These settings correspond to the input on “Source A.”

#### Center Frequency A

The COFDM card tunes to the center frequency of the channel to tune to.

- Use the  and  buttons to move the cursor to, “Center Freq:” then press the  button.
- Use the  and  buttons to select the column to edit and use the  and  buttons to change the center frequency (49MHz – 861MHz), then press the  button to save the selection.

```

↓↑ Dual COFDM 1-4 ↓
Input A
▶ Center Freq: 050MHz
Channel BW: 8 MHz
  
```

#### Channel Bandwidth A

- Use the  and  buttons to move the cursor to, “Channel BW:” then press the  button.
- Use the  and  buttons to change the channel bandwidth (6MHz, 7MHz, 8MHz), then press the  button to save the selection.

```

↓↑ Dual COFDM 1-4 ↓
Input A
Center Freq: 050MHz
▶ Channel BW: 8 MHz
  
```

#### Spectrum

- Use the  and  buttons to move the cursor to, “Spectrum:” then press the  button.

```

↓↑ Dual COFDM 1-4 ↓
Center Freq: 050MHz
Channel BW: 8 MHz
▶ Spectrum: Normal
  
```

- Use the  and  buttons to change the spectrum (Normal, Inverted), then press the  button to save the selection.

## Input B

These settings correspond to the input on “Source B.”

### Center Frequency B

The COFDM card tunes to the center frequency of the channel to tune to.

- Use the  and  buttons to move the cursor to, “Center Freq:” then press the  button.
- Use the  and  buttons to select the column to edit and use the  and  buttons to change the center frequency (49MHz – 861MHz), then press the  button to save the selection.

```

↓↑ Dual COFDM 1-4 ↓
Input B
▶ Center Freq: 050MHz
Channel BW: 8 MHz

```

### Channel Bandwidth B

- Use the  and  buttons to move the cursor to, “Channel BW:” then press the  button.
- Use the  and  buttons to change the channel bandwidth (6MHz, 7MHz, 8MHz), then press the  button to save the selection.

```

↓↑ Dual COFDM 1-4 ↓
Input B
Center Freq: 050MHz
▶ Channel BW: 8 MHz

```

### Spectrum

- Use the  and  buttons to move the cursor to, “Spectrum:” then press the  button.
- Use the  and  buttons to change the spectrum (Normal, Inverted), then press the  button to save the selection.

```

↓↑ Dual COFDM 1-4 ↓
Center Freq: 050MHz
Channel BW: 8 MHz
▶ Spectrum: Normal

```

## 4.15 CA Decryption – Option 8721

### General Information

**Install Location:** Factory Installed Option (*Not Field Upgradeable*)

**I/O:** Two external slots in the front of the unit. The transport stream is input and output through the various other option cards

**Description:** The MRD 3187B can be configured with this option to be able to decrypt a Conditional Access transport stream. In Config 1 the dual CAM functionality can be used to decrypt multiple services to send out ASI, essentially looping the stream through the MRD 3187B for decryption.


*Note: the dual CAM functionality is only available in a Config 1 when the CAS mode is set to manual.*

In Config 2 each slot links to its respective RDS.

### CAM Setup


To setup the MRD 3187B to decrypt Conditional Access Streams use the following steps.

1. Press the  button to bring the display back to the RDS status screen.
2. Press the  button to access the RDS 1 Decoder Menu.

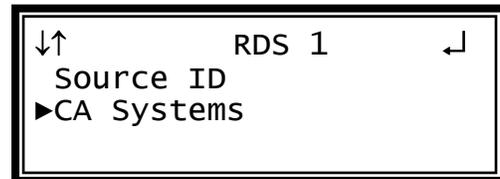

*Note: For Configuration 2 units, all of the following instructions apply exactly the same except, use the  button to access the RDS 2 Decoder Menu.*

3. Use the  and  buttons to move the cursor to, "CA Systems," then press the  button.
4. Use the  and  buttons to move the cursor to, "CA Mode," then press the  button.
5. Use the  and  buttons to change the mode (Automatic or Manual), then press the  button to save the selection.

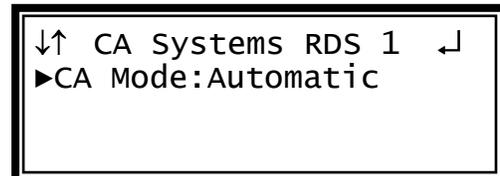

*Note: Depending on the mode selection, the menus below the mode options will have changed. .*

### Automatic

Once CA Mode has been set to Automatic, the CAM will decrypt only one program no matter how many programs the CAM is capable of decrypting (i.e. Even if the CAM can decrypt 4

## MRD 3187B User Manual

programs, only 1 program will be decrypted by the CAM).

### Manual

Once CA Mode has been set to Manual, use the following steps to configure your MRD 3187B to decrypt selected programs.

*Note: It is only possible to decrypt more than one program at a time, if the CAM module supports multiple program decrypting.*

1. Use the  and  buttons to move the cursor to, "Program," then press the  button.
2. Use the  and  buttons to select the CAM, then press the  button to save the selection.
3. To change the program to decrypt, select "Program1:" then press the  button.
4. Use the  and  buttons to select the column to edit and use the  and  buttons to enter the Program number, then press the  button to save the selection.

```

↓↑ CA System RDS 1   ↵
  CA Mode:Manual
  ▶Program:Nagravision
  CAM2:Nagravision

```

```

↓↑ CA System RDS 1   ↵
  CAM2:Nagravision
  ▶ Program1:00012
  Decrypting

```

*Note: The status of the stream will be listed below the program number.*

## 4.16 MPEG over IP Input/Output – Option 8725

### General Information

**Install Location:** Installs in 1-3,4 or 2-3,4 *Only* (Uses two slots) *Up*

*to two 8725 can be installed per MRD 3187B chassis with purchase of an additional fan.*

**I/O:** (1) 10/100/1000 Auto-negotiating Base-T RJ-45 Ethernet Port, (1) SFP Port

**Supported Formats:** UDP or RTP Multicasts and Unicasts


**Description:** This card encapsulates the TS from the bus and will transmit IP streams. It can also take in IP streams and place them on the bus for an ASI/310M card and/or a decoder. Up to two multicasts can be subscribed to, allowing for a backup multicast to be chosen and three mirrored multicasts can be transmitted to allow for redundancy.



### Menu Control




This menu is used to setup the IP address, Subnet Mask, and Gateway for the MPEG/IP card. These settings need to be set to proper values for the network that the MRD 3187B is being used on. These values can usually be obtained from the local network administrator.

1. Press the button.
2. Use the and buttons to move the cursor to, “MPEG/IP NetCfg,” then press the button.

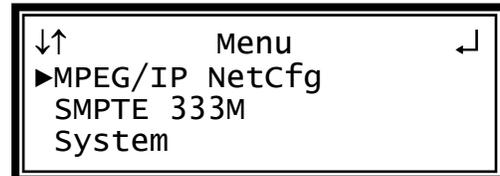

### IP Address/Subnet Mask/Gateway

1. Use the and buttons to move the cursor to, “IP Address,” then press the button.
2. Use the and buttons to select the column to edit and use the and buttons to change the IP, then press the button to save the selection.
3. The cursor will now be on, “Subnet Mask”.
4. Use the and buttons to select the column to edit and use the and buttons to change the Subnet Mask, then press the button to save the selection.
5. The cursor will now be on, “Gateway.”
6. Use the and buttons to select the column to edit and use the and buttons to change the Gateway, then press the button to save the selection.

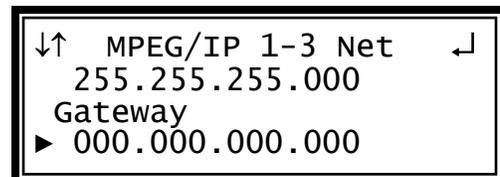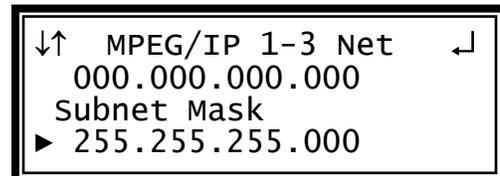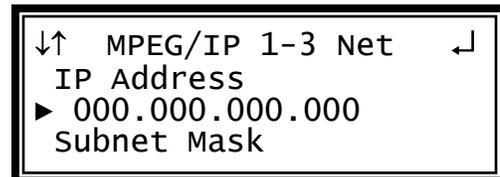


## MRD 3187B User Manual

**MAC Address**

This option will show the physical MAC Address of the MPEG/IP card.

1. Use the  and  buttons to move the cursor to, “MAC Address” to view the MPEG/IP card’s physical MAC Address.

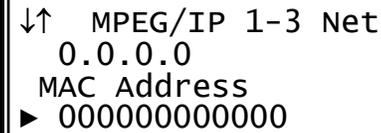

```

↓↑ MPEG/IP 1-3 Net
   0.0.0.0
   MAC Address
   ▶ 000000000000
  
```


**Input Control**

To enable this card as an input use the following steps.

1. Press the  button.


*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

2. Select “Active Input”, then press the  button.
3. Press  twice to change the active input and use the  and  buttons to select the input to make active, and press the  button to save the changes.

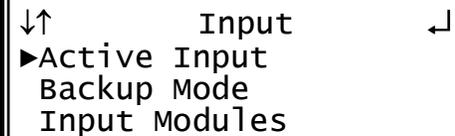

```

↓↑           Input           ↵
▶Active Input
  Backup Mode
  Input Modules
  
```



```


↓↑           Active Input     ↵
Active Input:
▶ MPEG/IP 1-3
  
```

**Configure Input**

1. Press the  button.


*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

2. Select “Input Modules”, and press the  button.
3. Use the  and  buttons to move the cursor to the “MPEG/IP” card of the specific slot (e.g. 1-3 or 2-3). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
4. Press the  button once to display the Status screen for the MPEG/IP card.
5. Press the  button again to display the Edit screen for the MPEG/IP card.
6. Use the  and  buttons to move the cursor to, “Selected I/O:” then press the  button.
7. Use the  and  buttons to change the selection to, “yes,” then press the  button to save the selection.

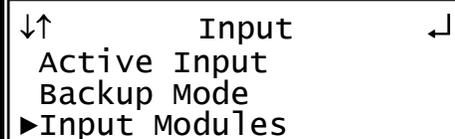

```

↓↑           Input           ↵
Active Input
Backup Mode
▶Input Modules
  
```



```

↓↑           Input           ↵  [ ][ ][ ][ ][ ]
▶MPEG/IP 1-3
  QPSK 2-2
  
```



```

↓↑           MPEG/IP 1-3     ↵
▶Selected I/O:no
  Receive:Enable
  Grp To Recv:1
  
```

**Receive**

This option enables or disables the receive function of the MPEG/IP card.

1. Use the  and  buttons to move the cursor to, “Receive:” then press the  button.
2. Use the  and  buttons to Enable or Disable “Receive,” then press the  button to save the selection.

```

↓↑      MPEG/IP 1-3      ↵
Selected I/O: yes
▶Receive: Enable
Grp To Recv: 1

```

**Group to Receive**

The MRD 3187B allows the user to subscribe to two multicasts simultaneously in order to provide a backup in the case of a primary failure. There are three options for “Group To Recv:” (1, 2, Auto). Auto will attempt to join the first multicast, if it cannot join that one it will then attempt to join the second one. If the unit is currently joined to the first multicast and that stream disappears, the unit will automatically switch over to the second receive group. The only time the unit will go back to the first receive group is if it is forced back or if the second receive group disappears. If the “Group To Recv” is set to either 1 or 2, the unit will always stay on that receive group regardless of if it is present or not.

1. Use the  and  buttons to move the cursor to, “Grp To Recv:” then press the  button.
2. Use the  and  buttons to select the desired group to receive (1, 2, Auto), then press the  button to save the selection.

```

↓↑      MPEG/IP 1-3      ↵
Selected I/O: no
Receive: Enable
▶Grp To Recv: 1

```

**Receive 1**

1. Use the  and  buttons to move the cursor to, “Receive 1,” then press the  button to access the Edit screen.

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑      MPEG/IP 1-3 1      ↵
▶Ip: 239.192.1.50
Dest Port: 01050
Send IGMP Report

```

*Note: A Unicast or Multicast IP address may be chosen.*

*Unicast: X.X.X.X – 223.255.255.255*

*Multicast: 224.0.0.0 – 239.255.255.255*

*Suggested Multicast Range: 239.192.X.X*

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3 1   ↵
  Ip: 239.192.1.50
▶Dest Port: 01050
  Send IGMP Report

```

**Send IGMP Report**

This option will send an unsolicited IGMP report to force a join operation.

1. Use the  and  buttons to move the cursor to, “Send IGMP Report,” then press the  button.
2. Press the  button one more time to send the report.

```

↓↑   MPEG/IP 1-3 1   ↵
  Ip: 239.192.1.50
  Dest Port: 01050
▶Send IGMP Report

```

**IGMP V3 Source Filter**

1. Use the  and  buttons to move the cursor to, “IGMP V3 Src Filter,” then press the  button to access the Edit screen.

```

↓↑   MPEG/IP 1-3 1   ↵
  Dest Port: 01050
  Send IGMP Report
▶IGMP V3 Src Filter

```

**Filter Mode**

1. Use the  and  buttons to move the cursor to, “Filter Mode:” then press the  button.
2. Use the  and  buttons to select either Include or Exclude, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3 1   ↵
▶Filter Mode: Include
  Add IP
  Clear All

```

**Add IP**

1. Use the  and  buttons to move the cursor to, “Add IP,” then press the  button.
2. Press the  button again to add an IP address to the list.
3. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP address, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3 1   ↵
  Filter Mode: Include
▶Add IP
  Clear All

```

```

↓↑   MPEG/IP 1-3 1   ↵
  Filter Mode: Include
  000.000.000.000
  Clear All

```

## MRD 3187B User Manual

*Note: A maximum of 64 IP addresses may be added to the list.*

**Edit/Remove an IP**

1. Use the  and  buttons to move the cursor to the desired IP address to edit, then press the  button.
2. Use the  and  buttons to select either Edit or Remove, then press the  button.

```

↓↑  MPEG/IP 1-3 1  ↵
  Filter Mode: Include
      Edit   Remove
  Add IP

```

**Clear All**

This option will clear all IP addresses in the filter list.

1. Use the  and  buttons to move the cursor to, “Clear All,” then press the  button.
2. Press the  button one more time to clear all the IP addresses in the list.

```

↓↑  MPEG/IP 1-3 1  ↵
  239.192.20.3
  Add IP
  ►Clear All

```

**Receive 2**

1. Use the  and  buttons to move the cursor to, “Receive 2,” then press the  button to access the Edit screen.

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑  MPEG/IP 1-3 2  ↵
  ►Ip: 239.192.1.50
  Dest Port: 01050
  Send IGMP Report

```

*Note: A Unicast or Multicast IP address may be chosen.*

*Unicast: X.X.X.X – 223.255.255.255*

*Multicast: 224.0.0.0 – 239.255.255.255*

*Suggested Multicast Range: 239.192.X.X*

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3 2   ↵
  Ip: 239.192.1.50
▶Dest Port: 01050
  Send IGMP Report

```

**Send IGMP Report**

This option will send an unsolicited IGMP report to force a join operation.

1. Use the  and  buttons to move the cursor to, “Send IGMP Report,” then press the  button.
2. Press the  button one more time to send the report.

```

↓↑   MPEG/IP 1-3 2   ↵
  Ip: 239.192.1.50
  Dest Port: 01050
▶Send IGMP Report

```

**IGMP V3 Source Filter**

1. Use the  and  buttons to move the cursor to, “IGMP V3 Src Filter,” then press the  button to access the Edit screen.

```

↓↑   MPEG/IP 1-3 2   ↵
  Dest Port: 01050
  Send IGMP Report
▶IGMP V3 Src Filter

```

**Filter Mode**

1. Use the  and  buttons to move the cursor to, “Filter Mode:” then press the  button.
2. Use the  and  buttons to select either Include or Exclude, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3 2   ↵
▶Filter Mode: Include
  Add IP
  Clear All

```

**Add IP**

1. Use the  and  buttons to move the cursor to, “Add IP,” then press the  button.
2. Press the  button again to add an IP address to the list
3. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP address, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3 2   ↵
  Filter Mode: Include
▶Add IP
  Clear All

```

```

↓↑   MPEG/IP 1-3 2   ↵
  Filter Mode: Include
  000.000.000.000
  Clear All

```

## MRD 3187B User Manual

*Note: A maximum of 64 IP addresses may be added to the list.*

**Edit/Remove an IP**

1. Use the  and  buttons to move the cursor to the desired IP address to edit, then press the  button.
2. Use the  and  buttons to select either Edit or Remove, then press the  button.

```

↓↑  MPEG/IP 1-3 2  ↵
Filter Mode: Include
      Edit   Remove
Add IP
  
```

**Clear All**

This option will clear all IP addresses in the list.

1. Use the  and  buttons to move the cursor to, “Clear All,” then press the  button.
2. Press the  button one more time to clear all the IP addresses in the list.

```

↓↑  MPEG/IP 1-3 2  ↵
0.0.0.0
Add IP
▶Clear All
  
```

**Forward Error Correction**

This setting lets the decoder know if it should be expecting FEC data with the active receive group. If no FEC data is expected, this setting can be disabled to allow multicasts closer together on the same IP.

1. Use the  and  buttons to move the cursor to, “FEC:” then press the  button.
2. Use the  and  buttons to either Enable or Disable the setting, then press the  button to save the selection.

```

↓↑  MPEG/IP 1-3  ↵
Receive 2
▶FEC:Disable
Jitter Tol:Low
  
```

**Jitter Tolerance**

This setting is used to set the number of IP packets that the unit needs to receive before starting to decode video. Most closed networks should use a setting of Low or Medium unless the network is especially prone to severe jitter.

1. Use the  and  buttons to move the cursor to, “Jitter Tol:” then press the  button.
2. Use the  and  buttons to set the desired jitter tolerance mode (Low, Med, High), then press the  button to save the selection.


```

↓↑  MPEG/IP 1-3  ↵
Receive 2
FEC:Disable
▶Jitter Tol:Low
  
```

### Null Stripped

This setting is used to allow the MRD 3187B to receive a null stripped IP stream.


1. Use the  and  buttons to move the cursor to, “Null Strip:” then press the  button.
2. Use the  and  buttons to enable or disable null stripping, then press the  button to save the selection.

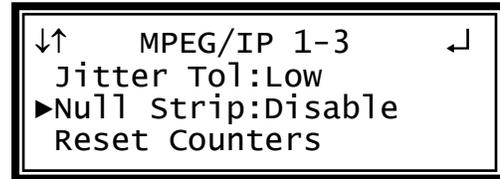

### Reset Counters

This option will reset the counters on the status screen for the MPEG/IP card.

1. Use the  and  buttons to move the cursor to, “Reset Counters,” then press the  button.
2. Press the  button again to reset the counters.

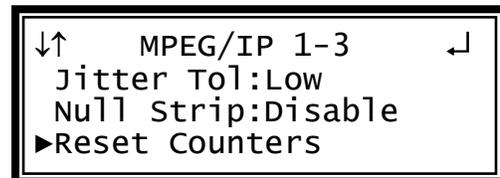


### Output Control

To configure this card as an output use the following steps:

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*


2. Use the  and  buttons to move the cursor to the “MPEG/IP” card of the specific slot (e.g. 1-3 or 2-3). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
3. Press the  button once to display the Status screen for the MPEG/IP card.
4. Press the  button again to display the Edit screen for the MPEG/IP card.

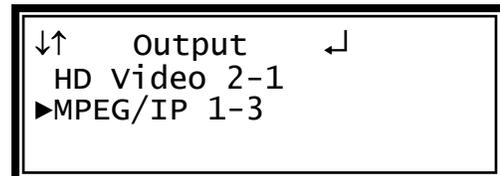

### Transmit 1

To enable “Transmit 1” as an output use the following steps:

1. Use the  and  buttons to move the cursor to, “Transmit 1,” then press the  button.
2. Press the  button one more time to get to the Edit screen.
3. Use the  and  buttons to move the cursor to, “Transmit:” then press the  button.

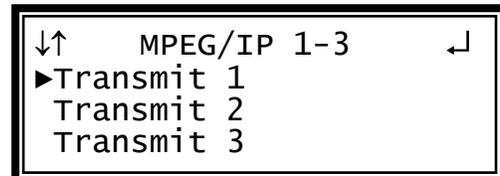

## MRD 3187B User Manual

4. Use the  and  buttons to change the selection to, “Enabled,” then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
▶Transmit:Enabled
  IP:000.000.000.000
  Dest Port:00000

```

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  Transmit:Enabled
▶IP:000.000.000.000
  Dest Port:00000

```

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  Transmit:Enabled
  IP:000.000.000.000
▶Dest Port:00000

```

**RTP**

1. Use the  and  buttons to move the cursor to, “RTP:” then press the  button.
2. Use the  and  buttons to enable or disable RTP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  IP:000.000.000.000
  Dest Port:00000
▶RTP:Enabled

```

**Transmit 2**

To enable “Transmit 2” as an output use the following steps:

1. Use the  and  buttons to move the cursor to, “Transmit 2,” then press the  button.
2. Press the  button one more time to get to the Edit screen.
3. Use the  and  buttons to move the cursor to, “Transmit:” then press the  button.
4. Use the  and  buttons to change the selection to, “Enabled,” then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  Transmit 1
▶Transmit 2
  Transmit 3

```

```

↓↑   MPEG/IP 1-3   ↵
▶Transmit:Enabled
  IP:000.000.000.000
  Dest Port:00000

```

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
Transmit:Enabled
▶IP:000.000.000.000
Dest Port:00000

```

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
Transmit:Enabled
IP:000.000.000.000
▶Dest Port:00000

```

**RTP**

1. Use the  and  buttons to move the cursor to, “RTP:” then press the  button.
2. Use the  and  buttons to enable or disable RTP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
IP:000.000.000.000
Dest Port:00000
▶RTP:Enabled

```

**Transmit 3**

To enable “Transmit 3” as an output use the following steps:

1. Use the  and  buttons to move the cursor to, “Transmit 3,” then press the  button.
2. Press the  button one more time to get to the Edit screen.
3. Use the  and  buttons to move the cursor to, “Transmit:” then press the  button.
4. Use the  and  buttons to change the selection to, “Enabled,” then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
Transmit 1
Transmit 2
▶Transmit 3

```

```

↓↑   MPEG/IP 1-3   ↵
▶Transmit:Enabled
IP:000.000.000.000
Dest Port:00000

```

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  Transmit:Enabled
▶IP:000.000.000.000
  Dest Port:00000

```

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  Transmit:Enabled
  IP:000.000.000.000
▶Dest Port:00000

```

**RTP**

1. Use the  and  buttons to move the cursor to, “RTP:” then press the  button.
2. Use the  and  buttons to enable or disable RTP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
  IP:000.000.000.000
  Dest Port:00000
▶RTP:Enabled

```

**Global Transmit Settings**

1. Use the  and  buttons to move the cursor to, “Global Settings,” then press the  button.

```

↓↑   MPEG/IP 1-3   ↵
  Transmit 2
  Transmit 3
▶Global Settings

```

**Forward Error Correction**

1. Use the  and  buttons to move the cursor to, “FEC:” then press the  button.
2. Use the  and  buttons to select the desired FEC type (Off, Col & Row, Col only), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
▶FEC:off
  RTP
  SSRC Setup:Auto

```

**Rows(D) and Columns(L)**

*Note: These settings will only be available if FEC is enable, either Col & Row or Col only, in the above steps.*

1. Use the  and  buttons to move the cursor to, “Rows(D):” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the rows value, then press the  button to save the selection.
3. Use the  and  buttons to move the cursor to, “Columns(L):” then press the  button.
4. Use the  and  buttons to select the column to edit and use the  and  buttons to change the columns value, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
FEC:Col & Row
▶ Rows(D):004
Columns(L):001

```

### Synchronization Source Setup Type

1. Use the  and  buttons to move the cursor to, “SSRC Setup:” then press the  button.
2. Use the  and  buttons select the desired type of SSRC Setup (Auto, User), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
FEC:off
RTP
▶ SSRC Setup:User

```

### Synchronization Source Setup

*Note: This option will only be available if the SSRC SETUP is set to, “User.”*

1. Use the  and  buttons to move the cursor to, “SSRC:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the SSRC, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
RTP
SSRC Setup:User
▶ SSRC:0x00000000

```

### Differentiated Services

1. Use the  and  buttons to move the cursor to, “DiffServ:” then press the  button.
2. Use the  and  buttons to select the desired differentiated services (Default,

```

↓↑   MPEG/IP 1-3   ↵
SSRC Setup:User
SSRC:0x00000000
▶ DiffServ:Default

```

## MRD 3187B User Manual

AF11, AF12, AF13, AF21, AF22, AF23, AF31, AF32, AF33, AF41, AF42, AF43, EF), then press the  button to save the selection.

**Source Port**

1. Use the  and  buttons to move the cursor to, “Src Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
    SSRC:0x00000000
    DiffServ:Default
    ▶Src Port:00000
  
```

**IP Packets / MPEG Frame**

This setting defines how many IP packets will be transmitted per MPEG frame.

1. Use the  and  buttons to move the cursor to, “Packets/Frame:” then press the  button.
2. Use the  and  buttons to specify the number of IP packets to be transmitted per MPEG frame (1-7), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-3   ↵
    DiffServ:Default
    Src Port:00000
    ▶Packets/Frame:7
  
```

## 4.17 Dual MPEG over IP Input/ UDP Output – Option 8727

### General Information

**Install Location:** Installs in 1-2 through 1-4 and/or 2-2 through 2-4.

**I/O:** (2) 10/100/1000 Auto-negotiating Base-T RJ-45 Ethernet Port

**Supported Formats:** Receive: UDP or RTP Multicasts and Unicasts. Transmit: UDP only


**Description:** This card encapsulates the TS from the bus and will transmit IP streams. It can also take in IP streams and place them on the bus for an ASI/310M card and/or a decoder. Up to two multicasts can be subscribed to, allowing for a backup multicast to be chosen and two mirrored unicasts can be transmitted to allow for redundancy. The two physical connectors can be configured independently.



### Menu Control




This menu is used to setup the IP address, Subnet Mask, and Gateway for the MPEG/IP card. These settings need to be set to proper values for the network that the MRD 3187B is being used on. These values can usually be obtained from the local network administrator.

1. Press the button.
2. Use the and buttons to move the cursor to, “MPEG/IP NetCfg,” then press the button.
3. Select “Port 1” or “Port 2” and then press the button.

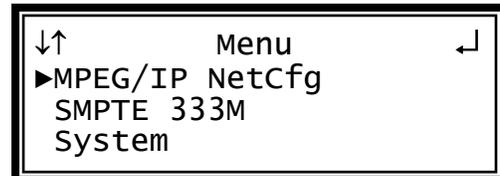

### IP Address/Subnet Mask/Gateway

1. Use the and buttons to move the cursor to, “IP Address,” then press the button.
2. Use the and buttons to select the column to edit and use the and buttons to change the IP, then press the button to save the selection.
3. The cursor will now be on, “Subnet Mask”.
4. Use the and buttons to select the column to edit and use the and buttons to change the Subnet Mask, then press the button to save the selection.
5. The cursor will now be on, “Gateway.”
6. Use the and buttons to select the column to edit and use the and buttons to change the Gateway, then press the button to save the selection.

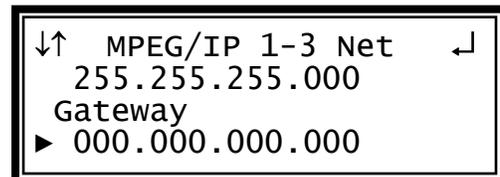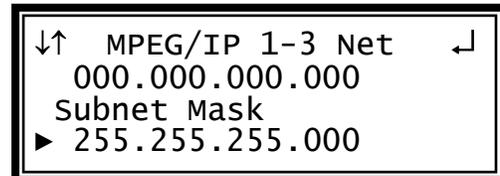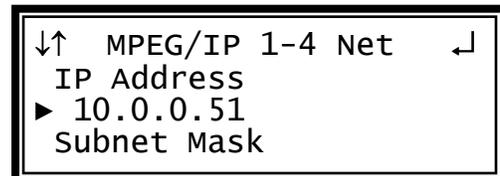

### MAC Address

This option will show the physical MAC Address of the MPEG/IP card.

1. Use the  and  buttons to move the cursor to, “MAC Address” to view the MPEG/IP card’s physical MAC Address.

```

↓↑ MPEG/IP 1-3 Net
   0.0.0.0
   MAC Address
   ▶ 000000000000
  
```

### Input Control

To enable this card as an input use the following steps.

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

```

↓↑           Input           ↵
▶Active Input
  Backup Mode
  Input Modules
  
```

2. Select “Active Input”, then press the  button.
3. Press  twice to change the active input and use the  and  buttons to select the input to make active, and press the  button to save the changes.

```

↓↑           Active Input     ↵
  Active Input:
  ▶ MPEG/IP 1-4
  
```

### Configure Input

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

```

↓↑           Input           ↵
  Active Input
  Backup Mode
  ▶Input Modules
  
```

2. Select “Input Modules”, and press the  button.
3. Use the  and  buttons to move the cursor to the “MPEG/IP” card of the specific slot (e.g. 1-4). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
4. Press the  button once to display the Status screen for the MPEG/IP card.
5. Press the  button again to display the Edit screen for the MPEG/IP card.
6. Use the  and  buttons to move the cursor to, “Active Group:” then press the  button.
7. Use the  and  buttons to change the selection to, “Auto, 1 or 2,” (this relates to the

```

↓↑           Input           ↵  [ ][ ][ ][ ]
▶MPEG/IP 1-4
  QPSK 2-2
  
```

```

↓↑           MPEG/IP 1-3     ↵
▶Active Group:1
  Receive 1
  Receive 2
  
```

## MRD 3187B User Manual

physical connector on the card), then press the  button to save the selection.

**Receive 1**

This section allows the user to setup the receive function of the first receive group.

1. Use the  and  buttons to move the cursor to, “Receive 1” then press the  button.
2. Use the  and  buttons to move the cursor to, “Receive:” then press the  button.
3. Use the  and  buttons to Enable or Disable “Receive,” then press the  button to save the selection.
4. Choose the physical connector, “Port1” or “Port 2” then press the  button.

```

↓↑      MPEG/IP 1-4      ↵
Active Group:1
▶Receive 1
Receive 2

```

```

↓↑      MPEG/IP 1-4 1    ↵
▶Receive: Enable
Phys Conn: Port 1
Ip: 239.192.0.1

```

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑      MPEG/IP 1-4 1    ↵
▶Ip: 239.192.1.50
Dest Port: 01050
FEC: Disable

```

*Note: A Unicast or Multicast IP address may be chosen.*

*Unicast: X.X.X.X – 223.255.255.255*

*Multicast: 224.0.0.0 – 239.255.255.255*

*Suggested Multicast Range: 239.192.X.X*

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the port (1025 – 65536), then press the  button to save the selection.

```

↓↑      MPEG/IP 1-4 1    ↵
Ip: 239.192.1.50
▶Dest Port: 01050
FEC: Disable

```

## MRD 3187B User Manual

**Forward Error Correction**

This setting lets the decoder know if it should be expecting FEC data with the active receive group. If no FEC data is expected, this setting can be disabled to allow multicasts closer together on the same IP.

1. Use the  and  buttons to move the cursor to, “FEC:” then press the  button.
2. Use the  and  buttons to select “enable” or “disable”, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↵
Ip: 239.192.1.50
Dest Port: 01050
▶FEC: Disable

```

**Null Stripped**

This setting is used to allow the MRD 3187B to receive a null stripped IP stream.

1. Use the  and  buttons to move the cursor to, “Null Strip:” then press the  button.
2. Use the  and  buttons to select “enable” or “disable”, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↵
Dest Port: 01050
FEC: Disable
▶Null Strip:Disable

```

**Synchronized Source Setup**

1. Use the  and  buttons to move the cursor to, “SSRC:” then press the  button.
2. Use the  and  buttons to select “enable” or “disable”, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↵
Null Strip:Disable
▶SSRC:Disable
SSRC Filt:0x00000000

```

**Synchronized Source Setup Filter**

1. Use the  and  buttons to move the cursor to, “SSRC Filt:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the SSRC Filter, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↵
Null Strip:Disable
SSRC:Disable
▶SSRC Filt:0x00000000

```

## MRD 3187B User Manual

**Buffer**

1. Use the  and  buttons to move the cursor to, "Buffer:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Buffer, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↓
SSRC Filt:0x00000000
▶Buffer:0100kb
IGMP V3 Src Filter

```

**IGMP V3 Source Filter**

1. Use the  and  buttons to move the cursor to, "IGMP V3 Src Filter," then press the  button to access the Edit screen.

```

↓↑   MPEG/IP 1-4 1   ↓
SSRC Filt:0x00000000
Buffer:0100kb
▶IGMP V3 Src Filter

```

**Filter Mode**

1. Use the  and  buttons to move the cursor to, "Filter Mode:" then press the  button.
2. Use the  and  buttons to select either Include or Exclude, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↓
▶Filter Mode: Include
Add IP
Clear All

```

**Add IP**

1. Use the  and  buttons to move the cursor to, "Add IP," then press the  button.
2. Press the  button again to add an IP address to the list.
3. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP address, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 1   ↓
Filter Mode: Include
▶Add IP
Clear All

```

```

↓↑   MPEG/IP 1-4 1   ↓
Filter Mode: Include
000.000.000.000
Clear All

```

*Note: A maximum of 64 IP addresses may be added to the list.*

**Edit/Remove an IP**

1. Use the  and  buttons to move the cursor to the desired IP address to edit, then press the  button.
2. Use the  and  buttons to select

```

↓↑   MPEG/IP 1-4 1   ↓
Filter Mode: Include
Edit   Remove
Add IP

```

## MRD 3187B User Manual

either Edit or Remove, then press the  button.

**Clear All**

This option will clear all IP addresses in the filter list.

1. Use the  and  buttons to move the cursor to, “Clear All,” then press the  button.
2. Press the  button one more time to clear all the IP addresses in the list.

```

↓↑   MPEG/IP 1-4 1   ↵
239.192.20.3
Add IP
▶Clear All

```

**Receive 2**

This section allows the user to setup the receive function of the second receive group.

1. Use the  and  buttons to move the cursor to, “Receive 2” then press the  button.
2. Use the  and  buttons to move the cursor to, “Receive:” then press the  button.
3. Use the  and  buttons to Enable or Disable “Receive,” then press the  button to save the selection.
4. Choose the physical connector, “Port1” or “Port 2” then press the  button.

```

↓↑   MPEG/IP 1-4   ↵
Active Group:1
Receive 1
▶Receive 2

```

```

↓↑   MPEG/IP 1-4 2   ↵
▶Receive: Enable
Phys Conn: Port 1
Ip: 239.192.0.1

```

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
▶Ip: 239.192.1.50
Dest Port: 01050
FEC: Disable

```

*Note: A Unicast or Multicast IP address may be chosen.*

*Unicast: X.X.X.X – 223.255.255.255*

*Multicast: 224.0.0.0 – 239.255.255.255*

*Suggested Multicast Range: 239.192.X.X*

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
  Ip: 239.192.1.50
▶Dest Port: 01050
  FEC: Disable

```

**Forward Error Correction**

This setting lets the decoder know if it should be expecting FEC data with the active receive group. If no FEC data is expected, this setting can be disabled to allow multicasts closer together on the same IP.

1. Use the  and  buttons to move the cursor to, “FEC:” then press the  button.
2. Use the  and  buttons to select “enable” or “disable”, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
  Ip: 239.192.1.50
  Dest Port: 01050
▶FEC: Disable

```

**Null Stripped**

This setting is used to allow the MRD 3187B to receive a null stripped IP stream.

1. Use the  and  buttons to move the cursor to, “Null Strip:” then press the  button.
2. Use the  and  buttons to select “enable” or “disable”, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
  Dest Port: 01050
  FEC: Disable
▶Null Strip:Disable

```

**Synchronized Source Setup**

1. Use the  and  buttons to move the cursor to, “SSRC:” then press the  button.
2. Use the  and  buttons to select “enable” or “disable”, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
  Null Strip:Disable
▶SSRC:Disable
  SSRC Filt:0x00000000

```

**Synchronized Source Setup Filter**

1. Use the  and  buttons to move the cursor to, "SSRC Filt:." then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the SSRC Filter, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
Null Strip:Disable
SSRC:Disable
▶SSRC Filt:0x00000000

```

**Buffer**

1. Use the  and  buttons to move the cursor to, "Buffer:." then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Buffer, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
SSRC Filt:0x00000000
▶Buffer:0100kb
IGMP V3 Src Filter

```

**IGMP V3 Source Filter**

1. Use the  and  buttons to move the cursor to, "IGMP V3 Src Filter," then press the  button to access the Edit screen.

```

↓↑   MPEG/IP 1-4 2   ↵
SSRC Filt:0x00000000
Buffer:0100kb
▶IGMP V3 Src Filter

```

**Filter Mode**

1. Use the  and  buttons to move the cursor to, "Filter Mode:." then press the  button.
2. Use the  and  buttons to select either Include or Exclude, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
▶Filter Mode: Include
Add IP
Clear All

```

**Add IP**

1. Use the  and  buttons to move the cursor to, "Add IP," then press the  button.
2. Press the  button again to add an IP address to the list.
3. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP address, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4 2   ↵
Filter Mode: Include
▶Add IP
Clear All

```

```

↓↑   MPEG/IP 1-4 2   ↵
Filter Mode: Include
000.000.000.000
Clear All

```

*Note: A maximum of 64 IP addresses may be added to the list.*

### Edit/Remove an IP

1. Use the  and  buttons to move the cursor to the desired IP address to edit, then press the  button.
2. Use the  and  buttons to select either Edit or Remove, then press the  button.

```

↓↑  MPEG/IP 1-4 2  ↵
  Filter Mode: Include
                Edit  Remove
  Add IP
  
```

### Clear All

This option will clear all IP addresses in the filter list.

1. Use the  and  buttons to move the cursor to, "Clear All," then press the  button.
2. Press the  button one more time to clear all the IP addresses in the list.

```

↓↑  MPEG/IP 1-4 2  ↵
  239.192.20.3
  Add IP
  ▶Clear All
  
```

### Reset Counters

This option will reset the counters on the status screen for the MPEG/IP card.

1. Use the  and  buttons to move the cursor to, "Reset Counters," then press the  button.
2. Press the  button again to reset the counters.

```

↓↑  MPEG/IP 1-3  ↵
  Receive 1
  Receive 2
  ▶Reset Counters
  
```

### Output Control

To configure this card as an output use the following steps:

1. Press the  button.

*Note: For Configuration 2 units, select RDS1 or RDS2, then press .*

2. Use the  and  buttons to move the cursor to the "MPEG/IP" card of the specific slot (e.g. 1-4). Notice the location diagram in the upper right corner of the screen changes as the cursor moves by each card.
3. Press the  button once to display the

```

↓↑  Output  ↵  [ ][ ][ ][ ]
  HD Video 2-1
  ▶MPEG/IP 1-4
  
```

## MRD 3187B User Manual

selection screen for “Transmit 1” and “Transmit 2” of the MPEG/IP card.

**Transmit 1**

To enable “Transmit 1” as an output use the following steps:

1. Use the  and  buttons to move the cursor to, “Transmit 1,” then press the  button.
2. Press the  button one more time to get to the Edit screen.
3. Use the  and  buttons to move the cursor to, “Transmit:” then press the  button.
4. Use the  and  buttons to change the selection to, “Enabled,” then press the  button to save the selection.
5. Choose the physical connector, “Port1” or “Port 2” then press the  button.

```

↓↑   MPEG/IP 1-4   ↵
▶Transmit 1
  Transmit 2
  
```

```

↓↑   MPEG/IP 1-4   ↵
▶Transmit:Enabled
  Phys Conn:Port 1
  IP:239.192.0.1
  
```

**IP**

1. Use the  and  buttons to move the cursor to, “IP:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
▶IP:239.192.0.1
  Dest Port:01030
  Source Port:01030
  
```

**Destination Port**

1. Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
  IP:239.192.0.1
▶Dest Port:01030
  Source Port:01030
  
```

**Source Port**

1. Use the  and  buttons to move the cursor to, "Source Port:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
  IP:239.192.0.1
  Dest Port:01030
  ▶Source Port:01030

```

**Packets Per Frame**

1. Use the  and  buttons to move the cursor to, "Packets/Ip:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the number of packets per frame (1 –7), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
  Source Port:01030
  ▶Packets/Ip:7
  DiffServ:Default

```

**Differentiated Services**

1. Use the  and  buttons to move the cursor to, "DiffServ:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change between (Default, AF11, AF12, AF13, AF21, AF22, AF23, AF31, AF32, AF33, AF41, AF42, AF43, EF), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
  Source Port:01030
  Packets/Ip:7
  ▶DiffServ:Default

```

**Transmit 2**

To enable "Transmit 2" as an output use the following steps:

1. Use the  and  buttons to move the cursor to, "Transmit 2," then press the  button.
2. Press the  button one more time to get to the Edit screen.

```

↓↑   MPEG/IP 1-4   ↵
  Transmit 1
  ▶Transmit 2

```

## MRD 3187B User Manual

- Use the  and  buttons to move the cursor to, “Transmit:” then press the  button.
- Use the  and  buttons to change the selection to, “Enabled,” then press the  button to save the selection.
- Choose the physical connector, “Port1” or “Port 2” then press the  button.

```

↓↑   MPEG/IP 1-4   ↵
▶Transmit:Enabled
  Phys Conn:Port 1
  IP:239.192.0.1

```

**IP**

- Use the  and  buttons to move the cursor to, “IP:” then press the  button.
- Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
▶IP:239.192.0.1
  Dest Port:01030
  Source Port:01030

```

**Destination Port**

- Use the  and  buttons to move the cursor to, “Dest Port:” then press the  button.
- Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
  IP:239.192.0.1
▶Dest Port:01030
  Source Port:01030

```

**Source Port**

- Use the  and  buttons to move the cursor to, “Source Port:” then press the  button.
- Use the  and  buttons to select the column to edit and use the  and  buttons to change the destination port (1025 – 65536), then press the  button to save the selection.

```

↓↑   MPEG/IP 1-4   ↵
  IP:239.192.0.1
  Dest Port:01030
▶Source Port:01030

```

**Packets Per Frame**

- Use the  and  buttons to move the cursor to, “Packets/Ip:” then press the  button.

```


↓↑   MPEG/IP 1-4   ↵
  Source Port:01030
▶Packets/Ip:7
  DiffServ:Default

```

- Use the  and  buttons to select the column to edit and use the  and  buttons to change the number of packets per frame (1 –7), then press the  button to save the selection.

### Differentiated Services

- Use the  and  buttons to move the cursor to, “DiffServ:” then press the  button.
- Use the  and  buttons to select the desired differentiated services (Default, AF11, AF12, AF13, AF21, AF22, AF23, AF31, AF32, AF33, AF41, AF42, AF43, EF), then press the  button to save the selection.

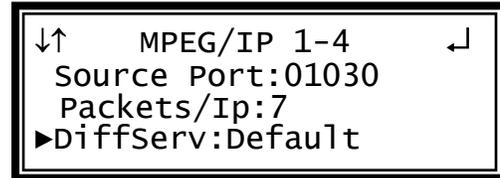

## 4.18 MPEG-2/MPEG-4 Decoder (1 Video, 2 Audio) – Option 8730A/8732

### General Information

**Install Location:** Not Field Upgradeable

**I/O:** The input and output is done through the various other I/O cards. (e.g. 8701)

**Supported Formats:** 8730A: MPEG2 and all formats supported by the option cards.

8732: MPEG2, MPEG4, and all formats supported by the option cards.

**Description:** The MRD 3187B can be configured as a Single RDS or as a Dual RDS. As a Single RDS, the MRD 3187B has only one MPEG Decoder. As a Dual RDS the MRD 3187B has two MPEG Decoders. The MRD 3187B can be configured, when ordering, to act as two separate RDSs or as one RDS with two decoders to enable four audio processors.


### Decoder Setup

To setup the MRD 3187B to be able to decode the incoming audio and video use the following steps.

1. Press the  button to bring the display back to the RDS status screen.
2. Press the  button to access the RDS 1 Decoder Menu.


*Note: For Configuration 2 units, all of the following instructions apply exactly the same except, use the  button to access the RDS 2 Decoder Menu.*

3. Use the  and  buttons to move the cursor to, “Service Setup,” then press the  button.
4. Press the  button again to display the Edit screen for the RDS 1 Decoder.

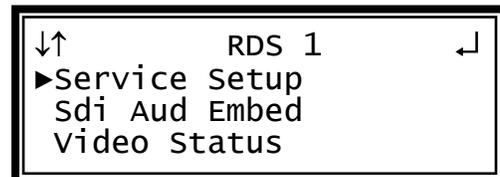

### Tune Mode

1. Use the  and  buttons to move the cursor to, “Tune Mode:” then press the  button.
2. Use the  and  buttons to select the desired mode (Auto, No PSI, PID Lock, Priority), then press the  button to save the selection.

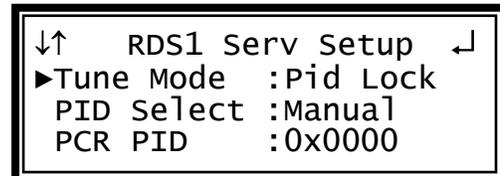

### PID Lock Mode

This mode is the most desirable and will produce the most consistent output. If possible this mode should *always* be used.

**PID Select**

PID Select determines how the PID will be entered during the following steps. “Manual” mode allows *any* PID to be entered. In “List” mode, the MRD 3187B will only allow the PIDs to be entered that are in the PMT. In the following steps, only the  and  buttons are needed to change the PID if this option is set to “List.”

1. Use the  and  buttons to move the cursor to, “PID Select:” then press the  button.
2. Use the  and  buttons to select either “Manual” or “List,” then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Tune Mode  :PID Lock
▶PID Select :Manual
PCR PID    :0x0000

```

**PCR**

1. Use the  and  buttons to move the cursor to, “PCR PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Tune Mode  :PID Lock
PID Select :Manual
▶PCR PID   :0x0000

```

**Video**

1. Use the  and  buttons to move the cursor to, “Video PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
PID Select :Manual
PCR PID   :0x0031
▶Video PID :0x0000

```

**Audio 1 PID**

1. Use the  and  buttons to move the cursor to, “Audio1 PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
PCR PID   :0x0031
Video PID :0x0031
▶Audio1 PID :0x0000

```

**Audio 2 PID**

1. Use the  and  buttons to move the cursor to, "Audio2 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Video PID :0x0031
Audio1 PID :0x0034
▶Audio2 PID :0x0000

```

**Audio 3 PID**

*Note: This menu is only available if the unit is equipped with a second decoder in Configuration 1.*

1. Use the  and  buttons to move the cursor to, "Audio3 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Audio1 PID :0x0034
Audio2 PID :0x0035
▶Audio3 PID :0x0000

```

**Audio 4 PID**

*Note: This menu is only available if the unit is equipped with a second decoder in Configuration 1.*

1. Use the  and  buttons to move the cursor to, "Audio4 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Audio2 PID :0x0035
Audio3 PID :0x0036
▶Audio4 PID :0x0000

```

**DolbyE 1**

*Note: This option is only available if there is an 8707A audio output card installed.*

1. Use the  and  buttons to move the cursor to, "DlbyE1 PID:" then press the  button.
2. Use the  and  buttons to select

```

↓↑   RDS1 Serv Setup   ↓
Audio3 PID :0x0036
Audio4 PID :0x0037
▶DlbyE1 PID :0x0000

```

## MRD 3187B User Manual

the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

**Priority Mode**

This mode is generally used with two identical streams for redundancy.

**1<sup>st</sup> Priority**

1. Use the  and  buttons to move the cursor to, “1<sup>st</sup> Priority:” then press the  button.
2. Use the  and  buttons to select either “manual” or “list,” then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Mode: priority
▶1st Priority: manual
Program:00001

```

**Program**

1. Use the  and  buttons to move the cursor to, “Program:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to select the program, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Mode: priority
1st Priority: manual
▶Program:00001

```

**Audio 1 Index**

1. Use the  and  buttons to move the cursor to, “Audio 1 Index:” then press the  button.
2. Use the  and  buttons to select the desired audio, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
1st Priority: manual
Program:00001
▶Audio 1 Index: 1

```

**Audio 2 Index**

1. Use the  and  buttons to move the cursor to, “Audio 2 Index:” then press the  button.
2. Use the  and  buttons to select the desired audio, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Program:00001
Audio 1 Index: 1
▶Audio 2 Index: 2

```

*Note: Use the previous steps to setup the 2<sup>nd</sup> Priority as well.*

**No PSI Mode**

This mode should only be used if both the PID information and audio/video formats are known about the stream.

**PCR PID**

*Note: This menu is only available if the “Tune Mode” is set to “No PSI”.*

1. Use the  and  buttons to move the cursor to, “No PSI” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired PCR PID in the stream, then press the  button to save the PID.

```

↓↑  RDS1 Serv Setup  ↓
Tune Mode: No PSI
▶PCR PID   :0x0000
Video PID  :0x0000

```

**Video PID**

1. Use the  and  buttons to move the cursor to, “Video PID” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Video PID in the stream, then press the  button to save the PID.

```

↓↑  RDS1 Serv Setup  ↓
PCR PID   :0x0010
▶Video PID :0x0000
Video Type :-----

```

**Video Type**

1. Use the  and  buttons to move the cursor to, “Video Type” then press the  button.
2. Use the  and  buttons to select the video type on the PID chosen above, then press the  button.

```

↓↑  RDS1 Serv Setup  ↓
Video PID :0x0000
▶Video Type :-----
Audio1 PID :0x0000

```

**Audio 1 PID**

1. Use the  and  buttons to move the cursor to, “Audio1 PID” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Audio

```

↓↑  RDS1 Serv Setup  ↓
Video Type :MPEG 2
▶Audio1 PID :0x0000
Audio1 Typ  :-----

```

## MRD 3187B User Manual

PID in the stream, then press the  button to save the PID.

**Audio 1 Type**

1. Use the  and  buttons to move the cursor to, “Audio1 Typ” then press the  button.
2. Use the  and  buttons to select the audio type on the PID chosen above, then press the  button.

```

↓↑   RDS1 Serv Setup   ↓
Audio1 PID :0x0022
▶Audio1 Typ :-----
Audio2 PID :0x0000

```

**Audio 2 PID**

1. Use the  and  buttons to move the cursor to, “Audio2 PID” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Audio PID in the stream, then press the  button to save the PID.

```

↓↑   RDS1 Serv Setup   ↓
Audio1 Typ :Dolby AC3
▶Audio2 PID :0x0000
Audio2 Typ :-----

```

**Audio 2 Type**

1. Use the  and  buttons to move the cursor to, “Audio2 Typ” then press the  button.
2. Use the  and  buttons to select the audio type on the PID chosen above, then press the  button.

```

↓↑   RDS1 Serv Setup   ↓
Audio2 PID :0x0024
▶Audio2 Typ :-----
DolbyE1 PID :0x0000

```

**DolbyE 1**

*Note: This option is only available if there is an 8707A audio output card installed.*

1. Use the  and  buttons to move the cursor to, “DolbyE1 PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the DolbyE1, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Audio2 PID :0x0024
Audio2 Typ :AAC ADTS
▶DolbyE1 PID :0x0000

```


## Auto Mode

This mode should only be used if no PID information is known about the stream.

### Auto Program

*Note: This menu is only available if the “Tune Mode” is set to “Auto”.*

1. Use the  and  buttons to move the cursor to, “Auto” then press the  button.
2. Use the  and  buttons to select the desired program number in the stream, then press the  button to save the selection.

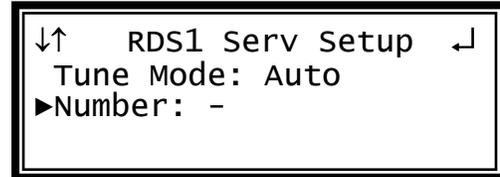


## Audio 1 Setup

The following menus are used to setup the audio downmix settings.


*Note: Use the following instructions to setup Audio 1-4 (if equipped).*

1. Use the  and  buttons to move the cursor to, “Audio 1 Setup” then press the  button.
2. The current screen shows the status of the audio downmix settings, press the  button again to display the Edit screen.

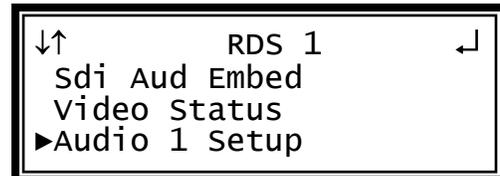

### Type

1. Use the  and  buttons to move the cursor to, “Type:” then press the  button.
2. Use the  and  buttons to select the desired downmix type (User, Monitor, Transmission) then press the  button to save the selection.

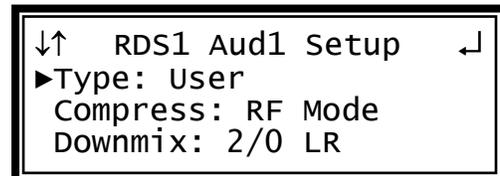

## MRD 3187B User Manual

**Compression**

1. Use the  and  buttons to move the cursor to, “Compress:” then press the  button.
2. Use the  and  buttons to select the desired compression (RF Mode, Line Mode, Custom 0, Custom 1) then press the  button to save the selection.

```

↓↑ RDS1 Aud1 Setup ↓
Type: User
▶Compress: RF Mode
Downmix: 2/0 LR

```

**Downmix**

*Note: This menu is only user configurable if the Type is set to “User.”*

1. Use the  and  buttons to move the cursor to, “Downmix:” then press the  button.
2. Use the  and  buttons to select the desired downmix (2/0 LR, 2/0 LtRt, Mono Chan1, Mono Chan2) then press the  button to save the selection.

```

↓↑ RDS1 Aud1 Setup ↓
Type: User
Compress: RF Mode
▶Downmix: 2/0 LR

```

**Dynamic Range**

1. Use the  and  buttons to move the cursor to, “Dyn Range:” then press the  button.
2. Use the  and  buttons to Enable or Disable Dynamic Range then press the  button to save the selection.

```

↓↑ RDS1 Aud1 Setup ↓
Compress: RF Mode
Downmix: 2/0 LR
▶Dyn Range: Enabled

```

**MRD 3187B Audio Explanation****Audio Setup**

There are three primary modes of audio down mix operation for the 8730A/8732 decoder. These settings only affect the signal if the digital output is set to “PCM.” It will also affect those embedded audio channels that are set to a PCM Downmix as well as analog audio.

*Note: There are no gain changes if the digital or embedded outputs are set to Raw.* The modes are “Monitor” (the default setting), “Transmission”, and “User.”

The first mode is “Transmission.” It allows no changes by the customer. It is intended to provide a limited dynamic range signal to drive a set top box or a transmitter. The “Transmission” mode does respond to dialog normalization data. It provides a gain boost of 11 dB and has compression to prevent the signal from overdriving a modulator. The 11dB gain boost is applied to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

*Note: It will not affect the gain of digital outputs or embedded outputs set to Raw.*

---

## MRD 3187B User Manual

---

It is intended to provide a similar audio level as a broadcast TV station signal through an RF modulator. The down mix includes the “center” and “surround” channels if they are present, and is represented as Lt/Rt. (left total/right total)

The second mode is “Monitor.” It has moderate processing, no gain boost and its down mix involves left and right channels only (L/R). The compression setting is “Line” mode as the default, but may be changed to “RF”, “Custom 0” or “Custom 1.” In “Line” mode, the Dolby dialog normalization data is followed. No other parameters may set by the customer. It is intended for monitoring of sources with only some peak limiting protection. Selecting “RF” as the compression setting will add 11 dB of gain and the same processing as the “Transmission” mode to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM. The down mix is L/R (left only/right only)

The third mode available is “User.” It allows all parameters to be set by the operator. The compression choices are “RF”, “Line Mode”, “Custom 0”, and “Custom 1.” RF and “Line Mode” essentially duplicate the first two modes of audio down mix described above. The “Custom 0” and “Custom 1” modes have no audio processing or gain boost. “Custom 1” does enable gain changes called for by the dialog normalization data. It allows the operator to enable or disable the dynamic range (peak limiting) and select the channels to down mix “Lt/Rt”, “L/R”, “Mono L”, and “Mono R”. Mono left or Mono right applies that signal to both left and right channels of the digital service, left and right channels of the analog outputs, and left and right channels of any embedded stream set to PCM. “Custom 0” disregards the Dolby dialog normalization data and runs at a fixed gain. Choosing “RF” as the compression mode will increase the gain by 11dB for the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

If you want to run with no processing, then set “*User / Custom 1 / L/R / Disabled.*” This will still allow gain changes called for in the Dolby metadata.

### Audio Output Settings

The digital audio services may be set to “PCM” (AES) or “Raw” as an output. This applies to all available sources. The “PCM” setting will pass an AES stream, or automatically down mix an AC-3 Dolby stream to two channels. “Raw” simply passes thru the Dolby AC-3 data stream to be decoded by an external decoder such as the Dolby 569. The analog channels can be assigned to any of the digital services. The analog gain may be adjusted for the desired level. The gain setting does not affect the level of either the embedded audio or the digital services. A setting of 7 provides an output of approximately 0dBu for a digital signal level of -20 dBFS. To check the audio output level, set “*User / Custom 1 / L/R / Disabled.*” This will remove any signal processing in the down mix. Set the digital service to be measured to “PCM.” A test stream of -20dBFS will output from the digital services as -20dBFS. If the analog channels are set to a gain setting of 7, the output should be -0.7 dBu plus or minus 0.5 dBu. Each gain number increments or decrements approximately 2.5 dBu per step. When you are setting the output levels it is suggested that an AC-3 stereo tone (2.0) be used as the source. Do not use a Dolby AC-3 5.1 tone source as your test signal. The five channels of equal tones will down mix such that one channel will be more than twenty dB greater than the other.

## 4.19 MPEG Decoder with Genlock (1 Video, 4 Audio) – Option 8733

### General Information

**Install Location:** Not Field Upgradeable

**I/O:** The input and output is done through the various other I/O cards. (e.g. 8701)

**Supported Formats:** Option 8733 can decode MPEG-2 4.2.2, and all formats supported by the option cards, with the exception of MPEG-4.

**Description:** With the 8733 decoder board the MRD 3187B can only be configured as a Single RDS. Meaning only one MPEG Decoder. The MRD 3187B with the 8733 decoder board can be configured to process four audio streams.


### Decoder Setup

To setup the MRD 3187B to be able to decode the incoming audio and video use the following steps.

1. Press the  button to bring the display back to the RDS status screen.
2. Press the  or  button to access the Decoder Menu.


*Note: With this Decoder card the MRD 3187B can only have one decoder so either of the  or  buttons will display the same decoder menu.*

3. Use the  and  buttons to move the cursor to, “Service Setup,” then press the  button.
4. Press the  button again to display the Edit screen for the RDS 1 Decoder.

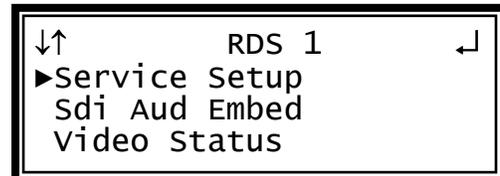

### Tune Mode

1. Use the  and  buttons to move the cursor to, “Tune Mode:” then press the  button.
2. Use the  and  buttons to select the desired mode (Auto, No PSI, PID Lock, Priority), then press the  button to save the selection.

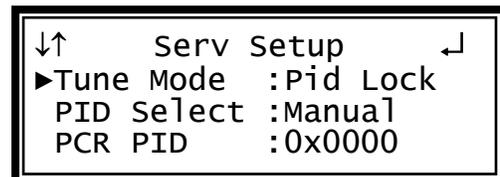

### PID Lock Mode

This mode is the most desirable and will produce the most consistent output. If possible this mode should *always* be used.

**PID Select**

PID Select determines how the PID will be entered during the following steps. “Manual” mode allows *any* PID to be entered. In “List” mode, the MRD 3187B will only allow the PIDs to be entered that are in the PMT. In the following steps, only the  and  buttons are needed to change the PID if this option is set to “List.”

1. Use the  and  buttons to move the cursor to, “PID Select:” then press the  button.
2. Use the  and  buttons to select either “Manual” or “List,” then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
Tune Mode  :PID Lock
▶PID Select :Manual
PCR PID    :0x0000

```

**PCR**

1. Use the  and  buttons to move the cursor to, “PCR PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
Tune Mode  :PID Lock
PID Select  :Manual
▶PCR PID   :0x0000

```

**Video**

1. Use the  and  buttons to move the cursor to, “Video PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
PID Select  :Manual
PCR PID     :0x0031
▶Video PID  :0x0000

```

**Audio 1 PID**

1. Use the  and  buttons to move the cursor to, “Audio1 PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
PCR PID     :0x0031
Video PID   :0x0031
▶Audio1 PID :0x0000

```

**Audio 2 PID**

1. Use the  and  buttons to move the cursor to, "Audio2 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
Video PID :0x0031
Audio1 PID :0x0034
▶Audio2 PID :0x0000

```

**Audio 3 PID**

1. Use the  and  buttons to move the cursor to, "Audio3 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
Audio1 PID :0x0034
Audio2 PID :0x0035
▶Audio3 PID :0x0000

```

**Audio 4 PID**

1. Use the  and  buttons to move the cursor to, "Audio4 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
Audio2 PID :0x0035
Audio3 PID :0x0036
▶Audio4 PID :0x0000

```

**Priority Mode**

This mode is generally used with two identical streams for redundancy.

**Priority 1**

1. Use the  and  buttons to move the cursor to, "Priority 1:" then press the  button.
2. Use the  and  buttons to select either "manual" or "list," then press the  button to save the selection.

```

↓↑      Serv Setup      ↵
Mode: priority
▶Priority 1: manual
Number:00001

```

**Number**

1. Use the  and  buttons to move the cursor to, “Number:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to select the program, then press the  button to save the selection.

```

↓↑   Serv Setup   ↵
Mode: priority
Priority 1: manual
▶Number:00001

```

**Audio 1 Index**

1. Use the  and  buttons to move the cursor to, “Audio 1 Index:” then press the  button.
2. Use the  and  buttons to select the desired audio, then press the  button to save the selection.

```

↓↑   Serv Setup   ↵
Priority 1: manual
Number:00001
▶Audio 1 Index: 1

```

**Audio 2 Index**

1. Use the  and  buttons to move the cursor to, “Audio 2 Index:” then press the  button.
2. Use the  and  buttons to select the desired audio, then press the  button to save the selection.

```

↓↑   Serv Setup   ↵
Number:00001
Audio 1 Index: 1
▶Audio 2 Index: 2

```

*Note: Repeat the steps above to setup “Audio 3 Index:” and “Audio 4 Index:.”*

*Note: Then use the steps above to setup Priority 2.*

**No PSI Mode**

This mode should only be used if both the PID information and audio/video formats are known about the stream.

**PCR PID**

*Note: This menu is only available if the “Tune Mode” is set to “No PSI”.*

1. Use the  and  buttons to move the cursor to, “No PSI” then press the  button.

```

↓↑   Serv Setup   ↵
Tune Mode: No PSI
▶PCR PID      :0x0000
Video PID     :0x0000

```

- Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired PCR PID in the stream, then press the  button to save the PID.

### Video PID

- Use the  and  buttons to move the cursor to, "Video PID" then press the  button.
- Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Video PID in the stream, then press the  button to save the PID.

```

↓↑      Serv Setup      ↵
PCR PID   :0x0010
▶Video PID :0x0000
Video Type :-----

```

### Video Type

- Use the  and  buttons to move the cursor to, "Video Type" then press the  button.
- Use the  and  buttons to select the video type on the PID chosen above, then press the  button.

```

↓↑      Serv Setup      ↵
Video PID :0x0000
▶Video Type :-----
Audio1 PID :0x0000

```

### Audio 1 PID

- Use the  and  buttons to move the cursor to, "Audio1 PID" then press the  button.
- Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Audio PID in the stream, then press the  button to save the PID.

```

↓↑      Serv Setup      ↵
Video Type :MPEG 2
▶Audio1 PID :0x0000
Audio1 Typ  :-----

```

### Audio 1 Type

- Use the  and  buttons to move the cursor to, "Audio1 Typ" then press the  button.
- Use the  and  buttons to select the audio type on the PID chosen above, then press the  button.

```

↓↑      Serv Setup      ↵
Audio1 PID :0x0022
▶Audio1 Typ :-----
Audio2 PID :0x0000

```

### Audio 2 PID

## MRD 3187B User Manual

1. Use the  and  buttons to move the cursor to, "Audio2 PID" then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Audio PID in the stream, then press the  button to save the PID.

```

↓↑   RDS1 Serv Setup   ↓
Audio1 Typ :Dolby AC3
▶Audio2 PID :0x0000
Audio2 Typ :-----

```

**Audio 2 Type**

1. Use the  and  buttons to move the cursor to, "Audio2 Typ" then press the  button.
2. Use the  and  buttons to select the audio type on the PID chosen above, then press the  button.

```

↓↑   RDS1 Serv Setup   ↓
Audio2 PID :0x0024
▶Audio2 Typ :-----
DlbyE1 PID :0x0000

```

*Note: Repeat the steps above to setup "Audio 3 PID" and "Typ" as well as "Audio 4 PID" and "Typ."*

**Auto Mode**

This mode should only be used if no PID information is known about the stream.

**Auto Program**

*Note: This menu is only available if the "Tune Mode" is set to "Auto".*

1. Use the  and  buttons to move the cursor to, "Auto" then press the  button.
2. Use the  and  buttons to select the desired program number in the stream, then press the  button to save the selection.

```

↓↑   Serv Setup   ↓
Tune Mode: Auto
▶Number: -

```


**Audio 1 Setup**

The following menus are used to setup the audio downmix settings.


*Note: Use the following instructions to setup Audio 1-4.*

## MRD 3187B User Manual


1. Use the  and  buttons to move the cursor to, “Audio 1 Setup” then press the  button.
2. The current screen shows the status of the audio downmix settings, press the  button again to display the Edit screen.

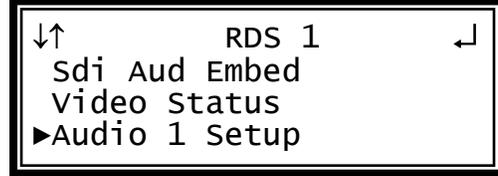**Type**

1. Use the  and  buttons to move the cursor to, “Type:” then press the  button.
2. Use the  and  buttons to select the desired downmix type (Monitor, Transmission, and User) then press the  button to save the selection.

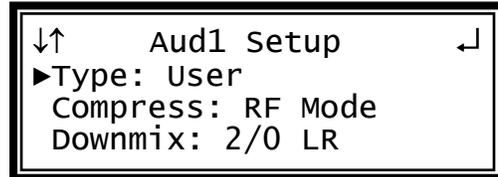
**Compression**

1. Use the  and  buttons to move the cursor to, “Compress:” then press the  button.
2. Use the  and  buttons to select the desired compression (RF Mode, Line Mode, Custom 0, Custom 1) then press the  button to save the selection.

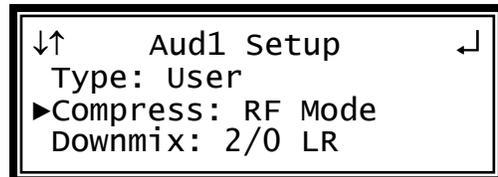
**Downmix**

*Note: This menu is only user configurable if the Type is set to “User.”*

1. Use the  and  buttons to move the cursor to, “Downmix:” then press the  button.
2. Use the  and  buttons to select the desired downmix (2/0 LR, 2/0 LtRt, Mono Chan1, Mono Chan2) then press the  button to save the selection.

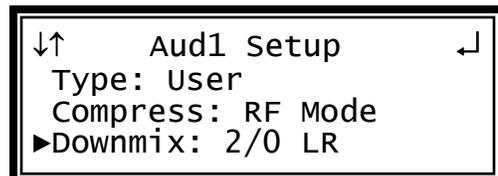**Dynamic Range**

1. Use the  and  buttons to move the cursor to, “Dyn Range:” then press the  button.
2. Use the  and  buttons to Enable or Disable Dynamic Range then press the

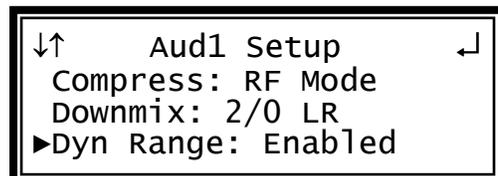

---

 button to save the selection.

## MRD 3187B Audio Explanation

### Audio Setup

There are three primary modes of audio down mix operation for the 8733 decoder. These settings only affect the signal if the digital output is set to “PCM.” It will also affect those embedded audio channels that are set to a PCM Downmix as well as analog audio.

*Note: There are no gain changes if the digital or embedded outputs are set to Raw.* The modes are “Monitor” (the default setting), “Transmission”, and “User.”

The first mode is “Transmission.” It allows no changes by the customer. It is intended to provide a limited dynamic range signal to drive a set top box or a transmitter. The “Transmission” mode does respond to dialog normalization data. It provides a gain boost of 11 dB and has compression to prevent the signal from overdriving a modulator. The 11dB gain boost is applied to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

*Note: It will not affect the gain of digital outputs or embedded outputs set to Raw.* It is intended to provide a similar audio level as a broadcast TV station signal through an RF modulator. The down mix includes the “center” and “surround” channels if they are present, and is represented as Lt/Rt. (left total/right total)

The second mode is “Monitor.” It has moderate processing, no gain boost and its down mix involves left and right channels only (L/R). The compression setting is “Line” mode as the default, but may be changed to “RF”, “Custom 0” or “Custom 1.” In “Line” mode, the Dolby dialog normalization data is followed. No other parameters may set by the customer. It is intended for monitoring of sources with only some peak limiting protection. Selecting “RF” as the compression setting will add 11 dB of gain and the same processing as the “Transmission” mode to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM. The down mix is L/R (left only/right only)

The third mode available is “User.” It allows all parameters to be set by the operator. The compression choices are “RF”, “Line Mode”, “Custom 0”, and “Custom 1.” RF and “Line Mode” essentially duplicate the first two modes of audio down mix described above. The “Custom 0” and “Custom 1” modes have no audio processing or gain boost. “Custom 1” does enable gain changes called for by the dialog normalization data. It allows the operator to enable or disable the dynamic range (peak limiting) and select the channels to down mix “Lt/Rt”, “L/R”, “Mono L”, and “Mono R”. Mono left or Mono right applies that signal to both left and right channels of the digital service, left and right channels of the analog outputs, and left and right channels of any embedded stream set to PCM. “Custom 0” disregards the Dolby dialog normalization data and runs at a fixed gain. Choosing “RF” as the compression mode will increase the gain by 11dB for the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

If you want to run with no processing, then set “User / Custom 1 / L/R / Disabled.” This will still allow gain changes called for in the Dolby metadata.

### Audio Output Settings

The digital audio services may be set to “PCM” (AES) or “Raw” as an output. This applies to all available sources. The “PCM” setting will pass an AES stream, or automatically down

MRD 3187B User Manual

---

mix an AC-3 Dolby stream to two channels. “Raw” simply passes thru the Dolby AC-3 data stream to be decoded by an external decoder such as the Dolby 569. The analog channels can be assigned to any of the digital services. The analog gain may be adjusted for the desired level. The gain setting does not affect the level of either the embedded audio or the digital services. A setting of 7 provides an output of approximately 0dBu for a digital signal level of -20 dBFS. To check the audio output level, set “*User / Custom1 / L/R / Disabled.*” This will remove any signal processing in the down mix. Set the digital service to be measured to “PCM.” A test stream of -20dBFS will output from the digital services as -20dBFS. If the analog channels are set to a gain setting of 7, the output should be -0.7 dBu plus or minus 0.5 dBu. Each gain number increments or decrements approximately 2.5 dBu per step. When you are setting the output levels it is suggested that an AC-3 stereo tone (2.0) be used as the source. Do not use a Dolby AC-3 5.1 tone source as your test signal. The five channels of equal tones will down mix such that one channel will be more than twenty dB greater than the other.

## 4.20 MPEG-2/MPEG-4 Decoder with Genlock (1 Video, 2 Audio) – Option 8731A/8734

### General Information

**Install Location:** Not Field Upgradeable

**I/O:** The input and output is done through the various other I/O cards. (e.g. 8701)

**Supported Formats:** 8731A: MPEG2 and all formats supported by the option cards.

8734: MPEG2, MPEG4, and all formats supported by the option cards. Both cards support genlock between compatible option cards.

**Description:** The MRD 3187B can be configured as a Single RDS or as a Dual RDS. As a Single RDS, the MRD 3187B has only one MPEG Decoder. As a Dual RDS the MRD 3187B has two MPEG Decoders. The MRD 3187B can be configured, when ordering, to act as two separate RDSs or as one RDS with two decoders to enable four audio processors.


### Decoder Setup

To setup the MRD 3187B to be able to decode the incoming audio and video use the following steps.

1. Press the  button to bring the display back to the RDS status screen.
2. Press the  button to access the RDS 1 Decoder Menu.


*Note: For Configuration 2 units, all of the following instructions apply exactly the same except, use the  button to access the RDS 2 Decoder Menu.*

3. Use the  and  buttons to move the cursor to, “Service Setup,” then press the  button.
4. Press the  button again to display the Edit screen for the RDS 1 Decoder.

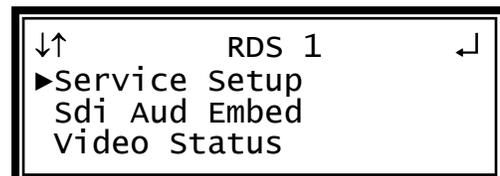

### Tune Mode

1. Use the  and  buttons to move the cursor to, “Tune Mode:” then press the  button.
2. Use the  and  buttons to select the desired mode (Auto, No PSI, PID Lock, Priority), then press the  button to save the selection.

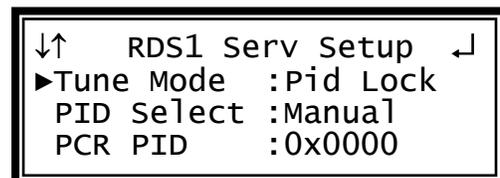

### PID Lock Mode

This mode is the most desirable and will produce the most consistent output. If possible this mode should *always* be used.

**PID Select**

PID Select determines how the PID will be entered during the following steps. “Manual” mode allows *any* PID to be entered. In “List” mode, the MRD 3187B will only allow the PIDs to be entered that are in the PMT. In the following steps, only the  and  buttons are needed to change the PID if this option is set to “List.”

1. Use the  and  buttons to move the cursor to, “PID Select:” then press the  button.
2. Use the  and  buttons to select either “Manual” or “List,” then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Tune Mode   :PID Lock
▶PID Select :Manual
PCR PID     :0x0000

```

**PCR**

1. Use the  and  buttons to move the cursor to, “PCR PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Tune Mode   :PID Lock
PID Select  :Manual
▶PCR PID    :0x0000

```

**Video**

1. Use the  and  buttons to move the cursor to, “Video PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
PID Select  :Manual
PCR PID     :0x0031
▶Video PID  :0x0000

```

**Audio 1 PID**

1. Use the  and  buttons to move the cursor to, “Audio1 PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
PCR PID     :0x0031
Video PID   :0x0031
▶Audio1 PID :0x0000

```

**Audio 2 PID**

1. Use the  and  buttons to move the cursor to, "Audio2 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Video PID :0x0031
Audio1 PID :0x0034
▶Audio2 PID :0x0000

```

**Audio 3 PID**

*Note: This menu is only available if the unit is equipped with a second decoder in Configuration 1.*

1. Use the  and  buttons to move the cursor to, "Audio3 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Audio1 PID :0x0034
Audio2 PID :0x0035
▶Audio3 PID :0x0000

```

**Audio 4 PID**

*Note: This menu is only available if the unit is equipped with a second decoder in Configuration 1.*

1. Use the  and  buttons to move the cursor to, "Audio4 PID:" then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Audio2 PID :0x0035
Audio3 PID :0x0036
▶Audio4 PID :0x0000

```

**DolbyE 1**

*Note: This option is only available if there is an 8707A audio output card installed.*

1. Use the  and  buttons to move the cursor to, "DlbyE1 PID:" then press the  button.
2. Use the  and  buttons to select

```

↓↑  RDS1 Serv Setup  ↓
Audio3 PID :0x0036
Audio4 PID :0x0037
▶DlbyE1 PID :0x0000

```

## MRD 3187B User Manual

the column to edit and use the  and  buttons to set the PID, then press the  button to save the selection.

**Priority Mode**

This mode is generally used with two identical streams for redundancy.

**1<sup>st</sup> Priority**

1. Use the  and  buttons to move the cursor to, “1<sup>st</sup> Priority:” then press the  button.
2. Use the  and  buttons to select either “manual” or “list,” then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Mode: priority
▶1st Priority: manual
Program:00001

```

**Program**

1. Use the  and  buttons to move the cursor to, “Program:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to select the program, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Mode: priority
1st Priority: manual
▶Program:00001

```

**Audio 1 Index**

1. Use the  and  buttons to move the cursor to, “Audio 1 Index:” then press the  button.
2. Use the  and  buttons to select the desired audio, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
1st Priority: manual
Program:00001
▶Audio 1 Index: 1

```

**Audio 2 Index**

1. Use the  and  buttons to move the cursor to, “Audio 2 Index:” then press the  button.
2. Use the  and  buttons to select the desired audio, then press the  button to save the selection.

```

↓↑  RDS1 Serv Setup  ↓
Program:00001
Audio 1 Index: 1
▶Audio 2 Index: 2

```

*Note: Use the previous steps to setup the 2<sup>nd</sup> Priority as well.*

**No PSI Mode**

This mode should only be used if both the PID information and audio/video formats are known about the stream.

**PCR PID**

*Note: This menu is only available if the “Tune Mode” is set to “No PSI”.*

1. Use the  and  buttons to move the cursor to, “No PSI” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired PCR PID in the stream, then press the  button to save the PID.

```

↓↑  RDS1 Serv Setup  ↓
Tune Mode: No PSI
▶PCR PID   :0x0000
Video PID  :0x0000

```

**Video PID**

1. Use the  and  buttons to move the cursor to, “Video PID” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Video PID in the stream, then press the  button to save the PID.

```

↓↑  RDS1 Serv Setup  ↓
PCR PID   :0x0010
▶Video PID :0x0000
Video Type :-----

```

**Video Type**

1. Use the  and  buttons to move the cursor to, “Video Type” then press the  button.
2. Use the  and  buttons to select the video type on the PID chosen above, then press the  button.

```

↓↑  RDS1 Serv Setup  ↓
Video PID :0x0000
▶Video Type :-----
Audio1 PID :0x0000

```

**Audio 1 PID**

1. Use the  and  buttons to move the cursor to, “Audio1 PID” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Audio

```

↓↑  RDS1 Serv Setup  ↓
Video Type :MPEG 2
▶Audio1 PID :0x0000
Audio1 Typ  :-----

```

## MRD 3187B User Manual

PID in the stream, then press the  button to save the PID.

**Audio 1 Type**

1. Use the  and  buttons to move the cursor to, “Audio1 Typ” then press the  button.
2. Use the  and  buttons to select the audio type on the PID chosen above, then press the  button.

```

↓↑   RDS1 Serv Setup   ↓
Audio1 PID :0x0022
▶Audio1 Typ :-----
Audio2 PID :0x0000

```

**Audio 2 PID**

1. Use the  and  buttons to move the cursor to, “Audio2 PID” then press the  button.
2. Use the  and  buttons to select the column to edit, then use the  and  buttons to select the desired Audio PID in the stream, then press the  button to save the PID.

```

↓↑   RDS1 Serv Setup   ↓
Audio1 Typ :Dolby AC3
▶Audio2 PID :0x0000
Audio2 Typ :-----

```

**Audio 2 Type**

1. Use the  and  buttons to move the cursor to, “Audio2 Typ” then press the  button.
2. Use the  and  buttons to select the audio type on the PID chosen above, then press the  button.

```

↓↑   RDS1 Serv Setup   ↓
Audio2 PID :0x0024
▶Audio2 Typ :-----
DolbyE1 PID :0x0000

```

**DolbyE 1**

*Note: This option is only available if there is an 8707A audio output card installed.*

1. Use the  and  buttons to move the cursor to, “DlbyE1 PID:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the DlbyE1, then press the  button to save the selection.

```

↓↑   RDS1 Serv Setup   ↓
Audio2 PID :0x0024
Audio2 Typ :AAC ADTS
▶DlbyE1 PID :0x0000

```

## Auto Mode

This mode should only be used if no PID information is known about the stream.

### Auto Program

*Note: This menu is only available if the “Tune Mode” is set to “Auto”.*

1. Use the  and  buttons to move the cursor to, “Auto” then press the  button.
2. Use the  and  buttons to select the desired program number in the stream, then press the  button to save the selection.




## Audio 1 Setup

The following menus are used to setup the audio downmix settings.


*Note: Use the following instructions to setup Audio 1-4 (if equipped).*

1. Use the  and  buttons to move the cursor to, “Audio 1 Setup” then press the  button.
2. The current screen shows the status of the audio downmix settings, press the  button again to display the Edit screen.

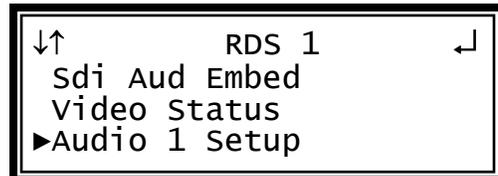

### Type

1. Use the  and  buttons to move the cursor to, “Type:” then press the  button.
2. Use the  and  buttons to select the desired downmix type (User, Monitor, Transmission) then press the  button to save the selection.

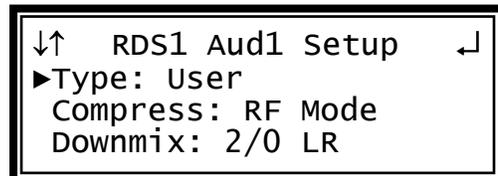

## MRD 3187B User Manual

**Compression**

1. Use the  and  buttons to move the cursor to, “Compress:” then press the  button.
2. Use the  and  buttons to select the desired compression (RF Mode, Line Mode, Custom 0, Custom 1) then press the  button to save the selection.

```

↓↑ RDS1 Aud1 Setup ↓
Type: User
▶Compress: RF Mode
Downmix: 2/0 LR

```

**Downmix**

*Note: This menu is only user configurable if the Type is set to “User.”*

1. Use the  and  buttons to move the cursor to, “Downmix:” then press the  button.
2. Use the  and  buttons to select the desired downmix (2/0 LR, 2/0 LtRt, Mono Chan1, Mono Chan2) then press the  button to save the selection.

```

↓↑ RDS1 Aud1 Setup ↓
Type: User
Compress: RF Mode
▶Downmix: 2/0 LR

```

**Dynamic Range**

1. Use the  and  buttons to move the cursor to, “Dyn Range:” then press the  button.
2. Use the  and  buttons to Enable or Disable Dynamic Range then press the  button to save the selection.

```

↓↑ RDS1 Aud1 Setup ↓
Compress: RF Mode
Downmix: 2/0 LR
▶Dyn Range: Enabled

```

**MRD 3187B Audio Explanation****Audio Setup**

There are three primary modes of audio down mix operation for the 8731A/8734 decoder. These settings only affect the signal if the digital output is set to “PCM.” It will also affect those embedded audio channels that are set to a PCM Downmix as well as analog audio.

*Note: There are no gain changes if the digital or embedded outputs are set to Raw.* The modes are “Monitor” (the default setting), “Transmission”, and “User.”

The first mode is “Transmission.” It allows no changes by the customer. It is intended to provide a limited dynamic range signal to drive a set top box or a transmitter. The “Transmission” mode does respond to dialog normalization data. It provides a gain boost of 11 dB and has compression to prevent the signal from overdriving a modulator. The 11dB gain boost is applied to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

*Note: It will not affect the gain of digital outputs or embedded outputs set to Raw.*

---

## MRD 3187B User Manual

---

It is intended to provide a similar audio level as a broadcast TV station signal through an RF modulator. The down mix includes the “center” and “surround” channels if they are present, and is represented as Lt/Rt. (left total/right total)

The second mode is “Monitor.” It has moderate processing, no gain boost and its down mix involves left and right channels only (L/R). The compression setting is “Line” mode as the default, but may be changed to “RF”, “Custom 0” or “Custom 1.” In “Line” mode, the Dolby dialog normalization data is followed. No other parameters may set by the customer. It is intended for monitoring of sources with only some peak limiting protection. Selecting “RF” as the compression setting will add 11 dB of gain and the same processing as the “Transmission” mode to the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM. The down mix is L/R (left only/right only)

The third mode available is “User.” It allows all parameters to be set by the operator. The compression choices are “RF”, “Line Mode”, “Custom 0”, and “Custom 1.” RF and “Line Mode” essentially duplicate the first two modes of audio down mix described above. The “Custom 0” and “Custom 1” modes have no audio processing or gain boost. “Custom 1” does enable gain changes called for by the dialog normalization data. It allows the operator to enable or disable the dynamic range (peak limiting) and select the channels to down mix “Lt/Rt”, “L/R”, “Mono L”, and “Mono R”. Mono left or Mono right applies that signal to both left and right channels of the digital service, left and right channels of the analog outputs, and left and right channels of any embedded stream set to PCM. “Custom 0” disregards the Dolby dialog normalization data and runs at a fixed gain. Choosing “RF” as the compression mode will increase the gain by 11dB for the analog outputs, AES digital outputs set to PCM, and any embedded outputs set to PCM.

If you want to run with no processing, then set “*User / Custom 1 / L/R / Disabled.*” This will still allow gain changes called for in the Dolby metadata.

### Audio Output Settings

The digital audio services may be set to “PCM” (AES) or “Raw” as an output. This applies to all available sources. The “PCM” setting will pass an AES stream, or automatically down mix an AC-3 Dolby stream to two channels. “Raw” simply passes thru the Dolby AC-3 data stream to be decoded by an external decoder such as the Dolby 569. The analog channels can be assigned to any of the digital services. The analog gain may be adjusted for the desired level. The gain setting does not affect the level of either the embedded audio or the digital services. A setting of 7 provides an output of approximately 0dBu for a digital signal level of -20 dBFS. To check the audio output level, set “*User / Custom 1 / L/R / Disabled.*” This will remove any signal processing in the down mix. Set the digital service to be measured to “PCM.” A test stream of -20dBFS will output from the digital services as -20dBFS. If the analog channels are set to a gain setting of 7, the output should be -0.7 dBu plus or minus 0.5 dBu. Each gain number increments or decrements approximately 2.5 dBu per step. When you are setting the output levels it is suggested that an AC-3 stereo tone (2.0) be used as the source. Do not use a Dolby AC-3 5.1 tone source as your test signal. The five channels of equal tones will down mix such that one channel will be more than twenty dB greater than the other.


## 4.21 Network Setup

**Description:** The MRD 3187B can be setup on a network connection to allow remote management and SNMP configuration. For these features to work, the network settings for the MRD 3187B must first be configured properly for the network it is connected to.

### Static IP Address




To setup the MRD 3187B with a static IP address, use the following steps:

1. Press the  button.
2. Use the  and  buttons to move the cursor to “Network,” then press the  button.
3. Use the  and  buttons to move the cursor to, “DHCP:” then press the  button.
4. Use the  and  buttons to change the selection to, “off,” then press the  button to save the selection.

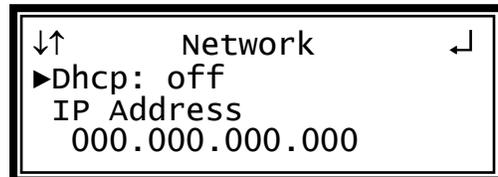

### IP Address/Subnet Mask/Gateway


1. Use the  and  buttons to move the cursor to, “IP Address,” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to change the IP, then press the  button to save the selection.
3. The cursor will now be on, “Subnet Mask.”
4. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Subnet Mask, then press the  button to save the selection.
5. The cursor will now be on, “Gateway.”
6. Use the  and  buttons to select the column to edit and use the  and  buttons to change the Gateway, then press the  button to save the selection.

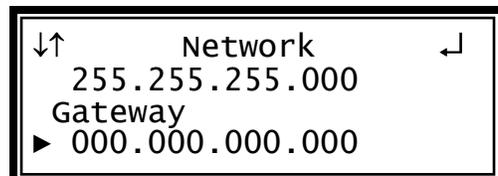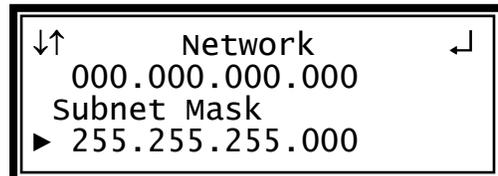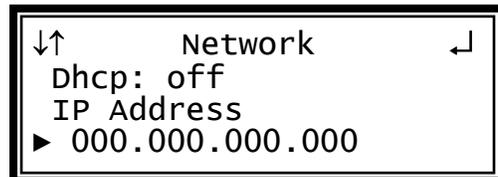

### DHCP

The MRD 3187B can be configured to use DHCP to obtain an IP address/Subnet Mask/Gateway.

1. Use the  and  buttons to move the cursor to, “Dhcp:” then press the  button.
2. Use the  and  buttons to change the

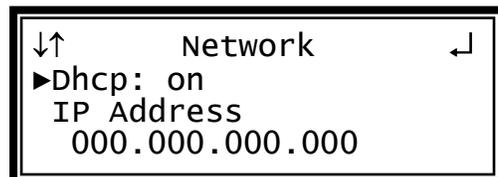

selection to, “on,” then press the  button to save the selection.



*Note: It may take up to a minute for the MRD 3187B to obtain an IP address. During this time the unit will display a “busy” message next to DHCP.*

## 4.22 SMPTE 333M Configuration

**Description:** The MRD 3187B can be configured to output SMPTE 333M Closed Caption signals from the SMPTE 333M port on the back of the unit.

### Configuration

1. Press the  button.
2. Use the  and  button to move the cursor to, “SMPTE 333M,” then press the  button.
3. Press the  button one more time to edit, “333M:”
4. Use the  and  buttons to enable or disable SMPTE 333M, then press the  button to save the selection.

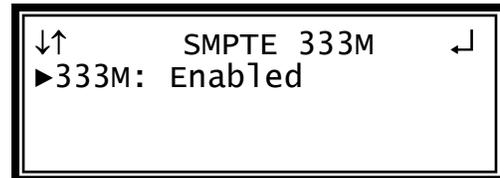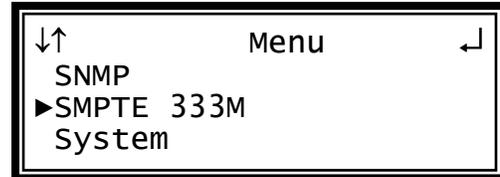



## 4.23 Active Errors

**Description:** Whenever an error occurs on any of the four internal status indicators in the MRD 3187B, the Error LED will illuminate on the front panel and the details of the error will be listed in the Active Errors. An extensive listing of errors and their definitions is included in *Appendix B*.

### Active Errors Display

To display the current errors on the unit use the following steps:

1. Press the  button.
2. Use the  and  buttons to move the cursor to, “Active Errors,” then press the  button.
3. Use the  and  buttons to scroll through the list of errors. The number in front of the error indicates which card the error is on (e.g. “1-4 Low Level” = RDS1, Card 4 has dropped below the user defined RF level threshold).

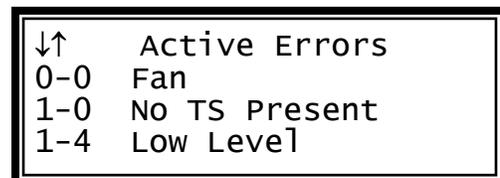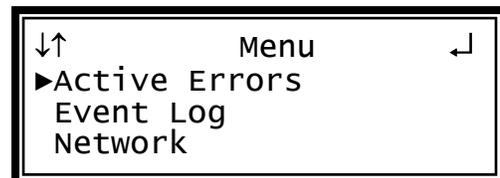


## 4.24 Password

**Description:** The MRD 3187B has the option to lock out the front panel with a user defined password. Follow the steps below to set the password in the MRD 3187B.

### Configuration


1. Press the  button.
2. Use the  and  buttons to move the cursor to, “Password,” then press the  button.

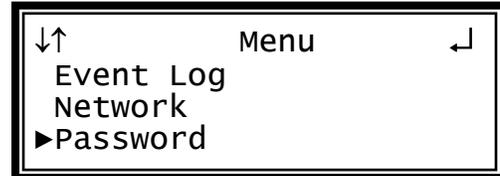

### Set Password

To set a password, use the following steps:


1. Press the  key, when the cursor is on “Set Password”.
2. Use the  and  buttons to change the character and then the  and  buttons to move to the next character.
3. Press the  button when finished, to save the password.

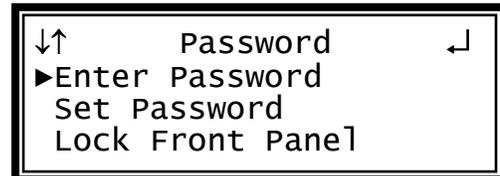

### Enter Password

To enter the password, after it has been set, follow the steps below.

1. Move the cursor to “Enter Password,” then press the  button.
2. Use the  and  buttons to change the character and then the  and  buttons to move to the next character.
3. Press the  button when finished, to save the password.

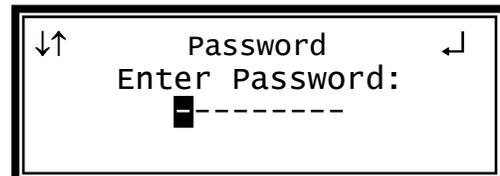

### Lock Front Panel

To lock the front panel, after a password has been set, follow the steps below.

1. Press the  button, when the cursor is on “Lock Front Panel.”
2. Press the  button again to confirm, or press the  button to cancel.




## 4.25 Event Log

**Description:** The MRD 3187B has user selectable event logging that it stores to a list. The list includes the date and time of each event, a short description of the event, and which card was affected by the event. To configure the MRD 3187B to log specific events from a predefined list, use the steps below.

### Error List Display



To display the current events or view past events on the unit use the following steps:

1. Press the  button.
2. Use the  and  buttons to move the cursor to, “Event Log,” then press the  button.
3. Use the  and  buttons to select “current, day 1 log, day 2 log, etc...”

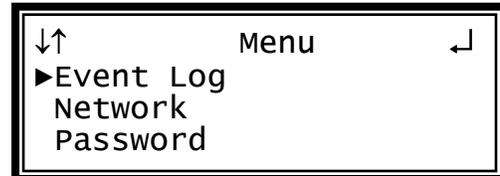


### Display

1. Press the  button while the cursor is on “Display” to view the events for the selected time.
2. Use the  and  buttons to view the entire event and the  and  buttons to view the next event.
3. The log currently shown in the front panel is specified by the top line “1/8” meaning event 1 out of 8.

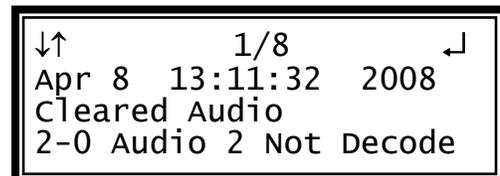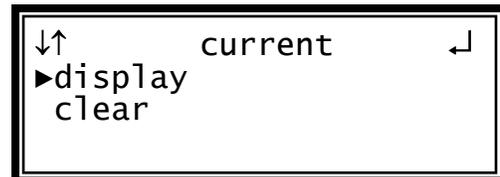


### Clear

1. While the cursor is on “clear,” press the  button to clear that log.

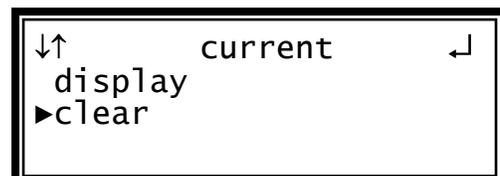

**CAUTION:** If “clear” is selected, all of the events that have been logged under the time selected will be erased from memory, and cannot be recovered.

2. The log selected will be listed followed by “has been cleared!”

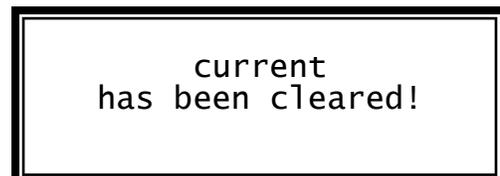




## 4.26 SCTE35 to SCTE104 Setup

Use the following steps to setup SCTE35 to SCTE104 conversion.

### SCTE35 PID



There are two modes that the SCTE35 PID(s) can be entered in, Auto or Manual. In Auto mode the unit attempts to discover the SCTE35 PID(s) as they are signaled in the stream. In Manual mode the user must enter the PID(s) manually using each PID's HEX PID number. To setup the SCTE35 PID(s) use the following steps.

1. Start out at the home screen (where it shows the TS bit rate).
2. Press the  button.
3. Use the  and  buttons to move the cursor to "SCTE35 Setup," then press the  button.
4. Press the  button again to get to the edit screen.
5. Use the  and  buttons to move the cursor to "Mode," then press the  button.
6. Use the  and  buttons to select the desired mode of operation (Auto or Manual), then press the  button to save the selection.

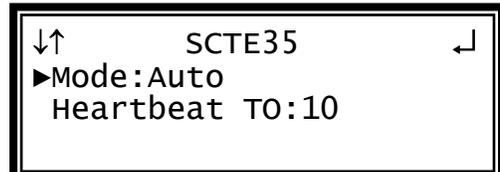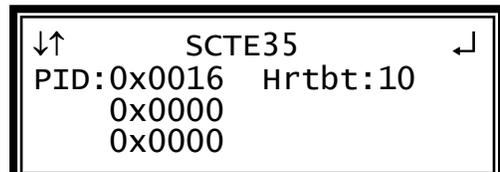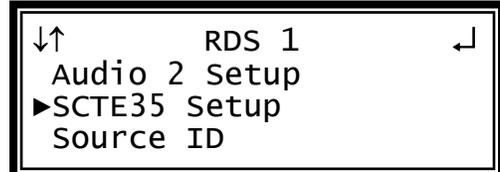

The following steps are only applicable to "Manual" mode.

7. Use the  and  button to select "PID 1:" then press the  button.
8. Use the  and  arrows to select the column to edit and use the  and  arrows to enter the PID, then press the  button to save the selection.

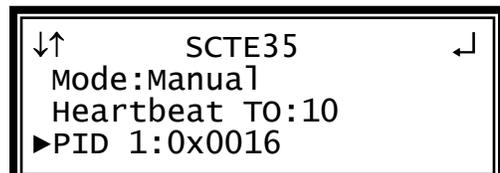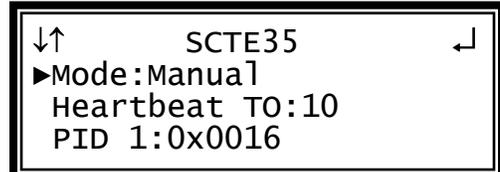


*Note: Use steps 1 and 2 above to enter the SCTE35 PIDs for fields "PID 2:" and PID 3:" if applicable.*

### SCTE104 VANC Embedding


To setup the MRD 3187B to embed the SCTE104 message into the SDI VANC use the following steps:

1. Press the  button.

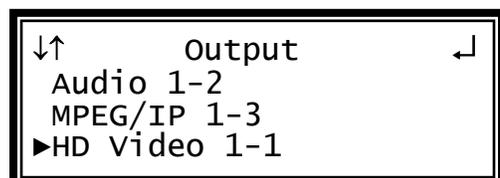

## MRD 3187B User Manual

2. Use the  and  buttons to move the cursor to, “HD Video”, then press the  button.
3. Use the  and  buttons to move the cursor to, “SDI VANC Assignment”, then press the  button.
4. Press the  button again to display the edit menu.
5. Use the  and  buttons to move the cursor to the desired line, then press the  button.
6. Use the  and  buttons to change the available option to “SCTE104 Msg”, then press the  button to save the selection.

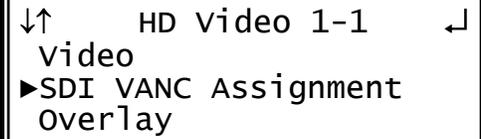

```
↓↑      HD video 1-1      ↵
Video
▶SDI VANC Assignment
Overlay
```



```
↓↑      SDI VANC 1-1      ↵
Line 4:None
Line 5:None
▶Line 6:SCTE104 Msg
```

## 4.27 Feature Licensing


The Web Client is the easiest way to upgrade the licensing on the MRD 3187B so it can decode MPEG4/H.264 and/or convert SCTE35 to SCTE104.


### Over the Web Client

Simply login to the MRD 3187B Remote Web Client as an administrator, and then click the  tab. The first section under this tab is “Feature Licensing”. “h.264” is listed as well as “SCTE35/104” each followed by either ENABLED or DISABLED. If they are both listed as ENABLED then you do not need to upgrade the licensing.




### Follow these steps to upgrade

1. Click on the  button on the left under “Feature Licensing”.
2. Enter your newly acquired license key in the space provided, and then press the  button.
3. When the MRD 3187B is finished saving the settings a reboot will be required.

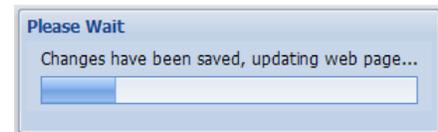

### On the Front Panel

1. Click the  button.
2. Use the  and  buttons to select “System”, and then press the  button.
3. Use the  and  buttons to select “License”, and then press the  button.

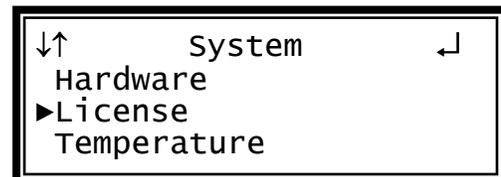


### To View the Current Licensing

1. To view your current licenses select “Feature List”, and then press the  button.



*Note: If both “h.264:” and “SCTE 35/104:” are ENABLED, then it is not necessary to enter a new license key.*

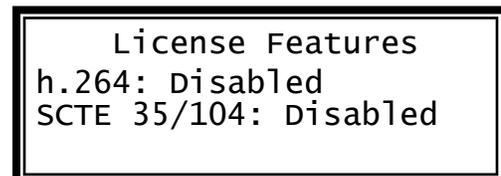

## MRD 3187B User Manual

**To Enter the License Key**

1. To enter a new license key press the  button when “Key Entry” is selected.
2. Use the  and  buttons to edit the character and use the  and  buttons to move to then next character. Press the  button when finished.

*Note: If you incorrectly enter the license key, you can go back and try again.*



*Note: A reboot will be required when the MRD 3187B has finished saving the settings.*

## Section 5 – Using the Web Client to Configure the MRD 3187B



### Introduction

This section describes how to navigate through the configuration menus on the web client of the MRD 3187B.


*Note: All instructions in this manual are based on unit software 7.2.X. Newer versions of software, when released, may operate slightly different in regards to menus and configuration.*

5.1 LOGIN .....	146
5.2 STATUS INDICATORS .....	146
5.3 CONFIGURATION .....	147
5.4 UNIT .....	154
5.5 PROFILES .....	156
5.6 WEB PASSWORDS .....	159
5.7 RESET UNIT .....	159
5.8 SNMP MIB MODULES .....	160
5.9 SOFTWARE UPDATES .....	160
5.10 DIAGNOSTICS .....	160
5.11 ABOUT .....	161

### 5.1 Login

To login to the remote web client for the MRD 3187B, use the following steps:

1. Open an Internet Explorer browser window or a Firefox browser window, then type the IP address of the MRD 3187B into the address box and press ENTER.

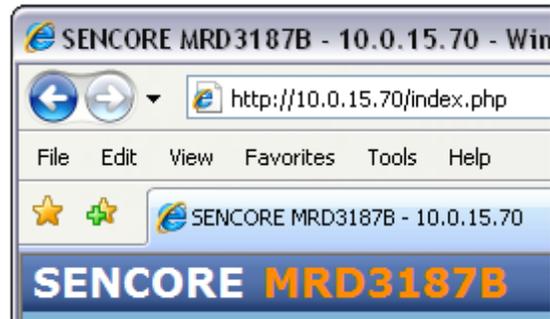


*Note: The IP address of the MRD 3187B can be found by using the following steps:*

1. Press the **MENU** button.
2. Use the **▲** and **▼** buttons to move the cursor to "Network," then press the **ENTER** button.
3. This screen will show the IP address for the MRD 3187B. It will also give the option to set a static IP address or leave it as DHCP. Refer to section 4.16 for more information.




2. Pick the username from the drop-down menu.
3. Enter the password then click the **Login** button.

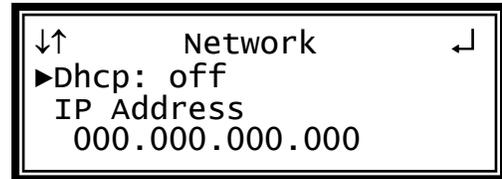

*Note: By default there is no password.*

*Note: If the password was changed it can be recorded in the provided space below.*

Password: \_\_\_\_\_

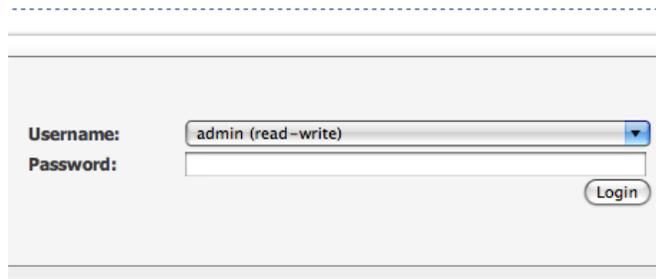

### 5.2 Status Indicators



Once logged into the web client, there are many things to take note of. The first things are the four status indicators along the top of the screen.

These indicators directly reflect the two status LEDs on the front panel. A green LED means the status of that object is good and a red LED means that status of that object is in error. If any of

the indicators are red, a more detailed explanation is provided by clicking on the  tab and looking under the first section, “Error List.”

*Refer to Appendix B for a more detailed explanation of the individual errors.*

## 5.3 Configuration


When setting up the MRD 3187B using the web client, some of the same things apply as the front panel. In a Configuration 2 unit, RDS1 and RDS2 are differentiated in the first two tabs. To setup the Input, Services, and Output use the following steps:



### 5.3.1 Input Setup

To set the desired input as active use the following steps:

1. Click on the  or  tab of the corresponding RDS that needs to be configured.


*Note: In a Configuration 1 MRD 3187B, there will only be a  tab.*


2. Click the  button on the same line as the input you wish to make active.

Inputs			
Edit	Module	Slot	Active
	VSB/QAM		
	ASI/310M		


*Note: The input is already active if the button looks like this:*



3. A dialog box will appear asking “Are you sure you want to change the active input?” Click  to approve the action.

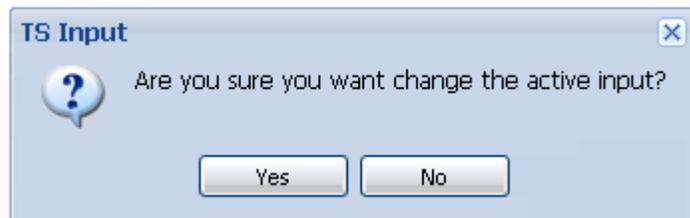

Once the desired input had been set to active, the specific options of that input card can be set by clicking on the  icon next to the active input. When the  icon is clicked, an edit window will appear with the specific options for that card. Use the drop down menus and input boxes to complete the edit form. Click the  button at the bottom of the form to save the settings. The current settings for

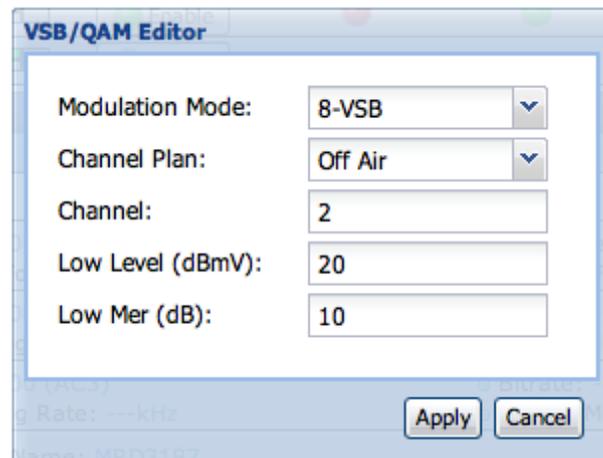

VSB/QAM Editor

Modulation Mode: 8-VSB

Channel Plan: Off Air

Channel: 2

Low Level (dBmV): 20

Low Mer (dB): 10

Apply Cancel

any of the input cards can be verified by clicking on the  button next to the desired input.

## 5.3.2 Services Setup

After the desired input has been selected and configured, now the session needs to be setup. All of the following options can be found under the “Services” heading.


### 5.3.2.1 Services

The “Services” edit menu defines which program is going to be decoded. These can be setup in four different ways depending upon the application. The four different setup options are: “Auto,” “PID-Locked,” “Priority,” and “No PSI.” Auto mode should *only* be used if nothing is known about the PIDs in the TS. Priority mode is primarily used for redundancy. PID-Locked mode should *always* be used unless one of the above conditions is true. No PSI mode should only be used for streams that do not contain any PSI information. To setup these decoder settings use the following steps:


1. Click on the  or  tab of the corresponding RDS that needs to be configured.

*Note: In a Configuration 1 MRD 3187B, there will only be a  tab.*

2. Under the “Services” heading, click on the  button next to “Services.”
3. A new window should pop up in the middle of the screen. Use the drop down menu at the top to choose the appropriate setup type.

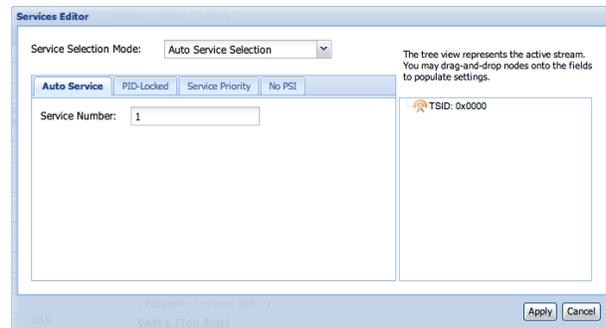

### PID-Locked Mode

1. In the section on the right, there is a list of services detected in the stream and a  button to the left of each service.
2. Click the  button to view the contents of each service.
3. You can then drag and drop the PID values by simply clicking and holding them as you drag the PID value to the appropriate box in the section on the left.
4. Fill in the remaining input boxes then click the  button to save the settings.

*Note: In PID-Locked mode, all of the entries should be entered as PIDs.*

## MRD 3187B User Manual

*Note: In Auto mode, the program number should be entered as the number of the program in the TS.*

*Note: In Priority mode, the service number is entered and the audio entries should be entered as the number they are indexed by, in the TS.*

*Note: In No PSI mode, all of the entries should be entered as PIDs with their corresponding data type.*


### 5.3.2.2 Audio Status and Downmix Settings

The audio downmix settings have three different configuration settings. These three are: transmission, monitor, and user. To configure the audio downmix setting, use the following steps:

1. Click on the **RDS 1** or **RDS 2** tab of the corresponding RDS that needs to be configured.

*Note: In a Configuration 1 MRD 3187B, there will only be a **RDS 1** tab.*

2. Under the “Services” heading, click on the  button next to the corresponding audio to configure.
3. A new window should pop up in the middle of the screen. Use the drop down menu at the top to choose the appropriate audio downmix configuration.
4. Depending on the chosen configuration, use the remaining drop down menus to finish the setup.
5. Click the **Apply** button to save the settings.

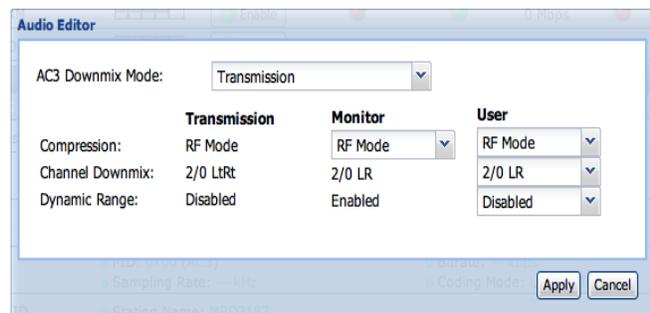



*Note: Use the previous steps to setup the other audio downmixes as well.*

### 5.3.2.3 Source ID

To setup the Source ID, use the following steps:

1. Click on the **RDS 1** or **RDS 2** tab of the corresponding RDS that needs to be configured.

2. Under the “Services” heading, click on the  button next to the Source ID option.
3. A new window will pop up in the middle of the screen. Use the drop down menu at the top to choose the “Lookup Mode.”
4. Then use the next drop down box to choose the desired “ID Timeout” (in seconds).
5. Enter a “Manual Station Name:” and then click the  button to save the changes.

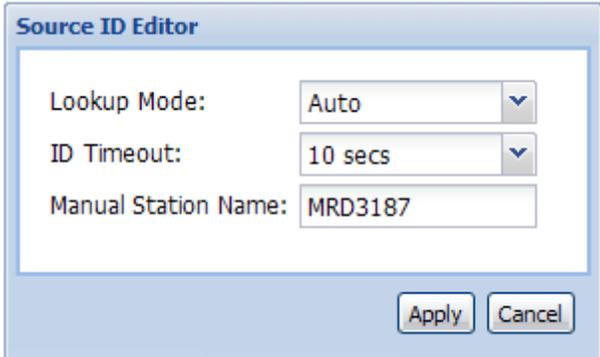

*Note: If no source is found in the allotted time the “Manual Station Name:” is displayed.*


#### 5.3.2.4 SCTE35

To select the PIDs for SCTE35 follow the steps below.

1. Click on the  or  tab of the corresponding RDS that needs to be configured.
2. Under the “Services” heading, click on the  button next to the “SCTE35” option.
3. Set the “PID Detection Mode” to either “Auto, or Manual.”

*Note: If “Manual” PID Detection Mode is selected the following boxes become available to configure: “PID 1, PID 2, and PID 3.”*

*Note: If “Auto” mode is selected the MRD 3187B will pick the first three DPI PIDs in the PMT’s registration descriptor to monitor for SCTE35 events.*

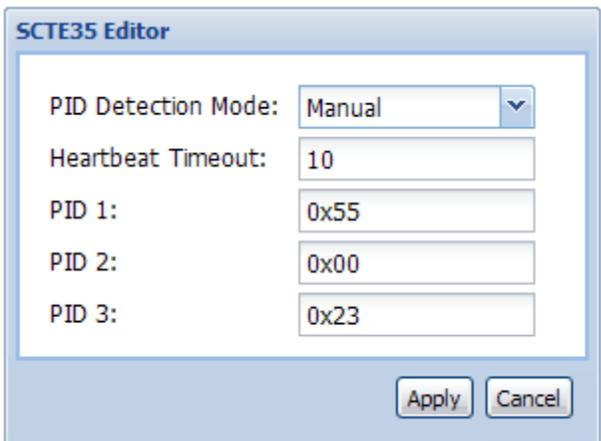

4. Next, enter the “Heartbeat Timeout:” in minutes.
5. If “Manual” is selected in the above drop down box, “PID 1, PID 2, and PID 3”

## MRD 3187B User Manual

can be set as the PIDs that the MRD 3187B will monitor for SCTE35 events.


### 5.3.2.5 SCTE104 Splice Requests

To setup SCTE104 Splice Requests follow the steps below.

*Note: Up to 4 SCTE104 Splice Requests can be set up at one time. Use the tabs at the top of the editor to configure a different Splice Request.*

1. Click on the  or  tab of the corresponding RDS that needs to be configured.
2. Under the “Services” heading, click on the  button next to the “SCTE104 Splice Requests” option.
3. Next, enter the “AS Index” if one is present, otherwise leave blank.

*Note: The “AS Index” ranges from 0 to 255 and uniquely identifies the source of the message.*

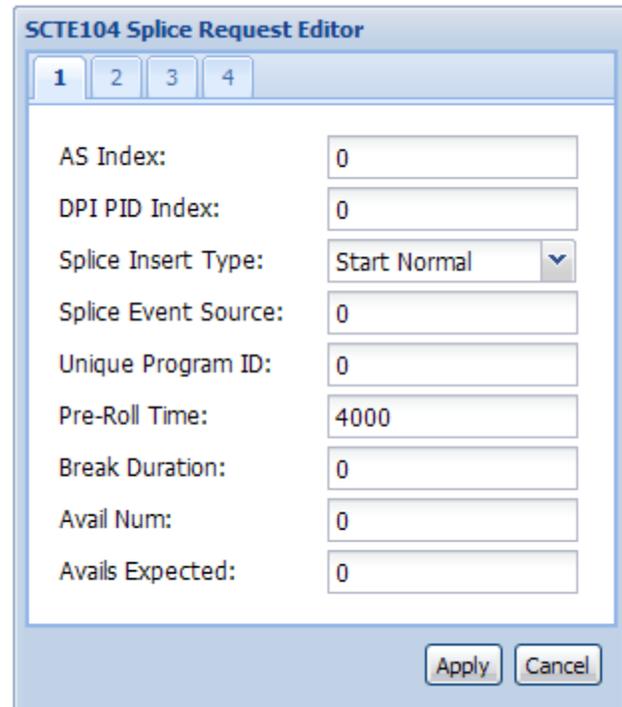

4. Enter the “DPI PID Index” to specify the index to the DPI PID that will carry the splice\_info\_sections.

*Note: The “DPI PID Index” ranges from 0 to 65535 and is important when there are multiple DPI PIDs referenced by the PMT of one MPEG program.*

5. Use the drop down menu to select either “Start Normal, Start Immediate, End Normal, End Immediate, or Cancel.”
6. Next is the “Splice Event Source.” This is a user assigned value for the source of the cue message.
7. In the next box, enter the “Unique Program ID:”

*Note: The “Unique Program ID” ranges from 0 to 65535 and is a unique identification for a viewing event in the service.*

## MRD 3187B User Manual

8. In the box to the right of “Pre-Roll Time” enter the desired amount of time, in milliseconds, after being processed that the action will occur.
9. Then insert the “Break Duration” in tenths of seconds.

*Note: The “Break Duration” ranges from 0 to 255. If the default, 0, is chosen the Injector will not set a duration. This value is ignored if “Splice Insert Type” is anything other than “Start Normal” or “Start Immediate.”*

10. Next is the “Avail Num” which is a field that gives an authentication for a specific *avail* in the current “Unique Program ID.”

*Note: The “Avail Num” ranges from 0 to 255. If left at default, 0, non-usage will be assumed.*

11. Finally the “Avails Expected” box is the last parameter to configure. This box indicates the specific number of individual *Avails* expected within the current viewing event.

*Note: The “Avails Expected” ranges from 0 to 255. If left at its default, 0, “Avail Num” is assumed to have no meaning.*

### 5.3.3 Output Setup

All of the installed output option cards are listed under the “Outputs” heading. This section includes the options for the installed output cards (e.g. Video, Audio).

Outputs			
Edit	Module	Slot	Type
	HD-SDI/Analog	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Video
	Analog/Digital Audio	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Audio
	SDI Embedded Audio		Audio

Each output card can be configured by clicking on the  button that is next to it. When the  button is clicked it will bring up another window, in the middle of the screen, with the specific options for that card. Use the drop down menus and input boxes to complete the edit form. Click the  button, at the bottom of the form, to save the settings. The current settings for any of the output cards can be verified by clicking on the  button next to the desired output.

### 5.3.4 PSIP Information

To view the PSIP information for the applied TS, click the  button which is located right next to the “Inputs” heading towards the top of the page. This will open a new window that displays all of the PSIP information for the applied TS. Click the tabs at the top of the window to view the corresponding PSIP data ex. PMT, PAT, MGT, etc.

## 5.4 Unit

This section will describe what information is included under the  tab.

### 5.4.1 Active Errors


The first thing under this tab is the “Active Errors.” If any of the status indicators across the top of the web client are indicating an error (i.e. red circle) this section will give a more detailed description of the specific error along with the location of the item that is producing the error.

Module	Location	Error Message
Tslo	RDS 1	No TS Present Error
VsbQam	Slot 1-3	Lock Error
VsbQam	Slot 1-3	Low Level
Tslo	RDS 2	No TS Present Error
VsbQam	Slot 2-3	Low Level
VsbQam	Slot 2-3	Lock Error

### 5.4.2 Event Logging

Just below the “Active Errors” is the “Event Logging” section. This section shows all the possible events that the MRD 3187B will log. Follow the steps below to either enable or disable an event.

1. Click the  button under the “Event Logging” heading. This will bring up a new edit form in the middle of the screen.
2. Choose either the “General, Video, Audio, DPI, or System” tab to enable or disable events under those headings.
3. Then click the  button, at the bottom of the form, to save the settings.

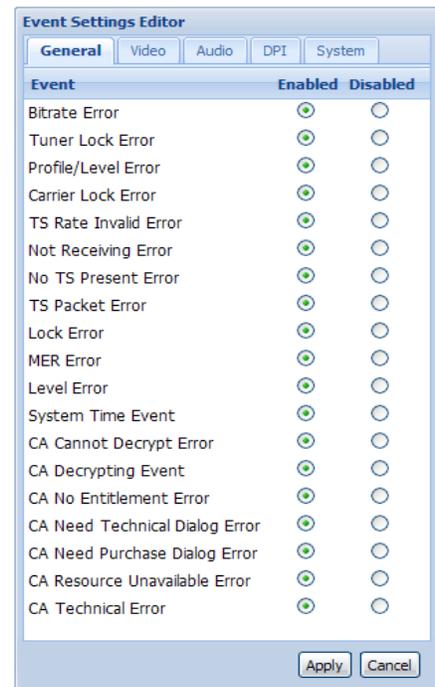


The Event Settings Editor dialog box has tabs for General, Video, Audio, DPI, and System. The General tab is selected. It contains a list of events with radio buttons for Enabled and Disabled. All events are currently enabled.

Event	Enabled	Disabled
Bitrate Error	<input checked="" type="radio"/>	<input type="radio"/>
Tuner Lock Error	<input checked="" type="radio"/>	<input type="radio"/>
Profile/Level Error	<input checked="" type="radio"/>	<input type="radio"/>
Carrier Lock Error	<input checked="" type="radio"/>	<input type="radio"/>
TS Rate Invalid Error	<input checked="" type="radio"/>	<input type="radio"/>
Not Receiving Error	<input checked="" type="radio"/>	<input type="radio"/>
No TS Present Error	<input checked="" type="radio"/>	<input type="radio"/>
TS Packet Error	<input checked="" type="radio"/>	<input type="radio"/>
Lock Error	<input checked="" type="radio"/>	<input type="radio"/>
MER Error	<input checked="" type="radio"/>	<input type="radio"/>
Level Error	<input checked="" type="radio"/>	<input type="radio"/>
System Time Event	<input checked="" type="radio"/>	<input type="radio"/>
CA Cannot Decrypt Error	<input checked="" type="radio"/>	<input type="radio"/>
CA Decrypting Event	<input checked="" type="radio"/>	<input type="radio"/>
CA No Entitlement Error	<input checked="" type="radio"/>	<input type="radio"/>
CA Need Technical Dialog Error	<input checked="" type="radio"/>	<input type="radio"/>
CA Need Purchase Dialog Error	<input checked="" type="radio"/>	<input type="radio"/>
CA Resource Unavailable Error	<input checked="" type="radio"/>	<input type="radio"/>
CA Technical Error	<input checked="" type="radio"/>	<input type="radio"/>

### 5.4.3 Unit Date/Time

The next section is the “Unit Date/Time” section. This section gives an overview of how to configure the date and time of the unit.


1. Click the  button under the “Unit Date/Time” heading. This will bring up a new edit form in the middle of the screen.
2. Use the drop down menu to select either “Auto, or Manual.”
3. If “Auto” is selected, the option to use a time server is available. Enter the IP address of the Time Server in the space provided.
4. Then click the  button to save the changes.

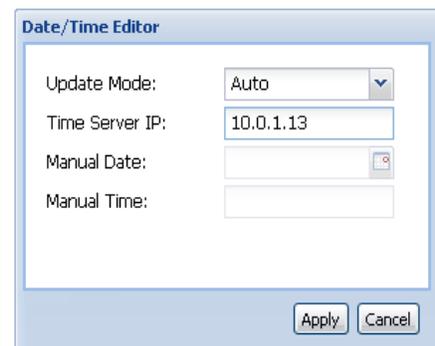

The Date/Time Editor dialog box has fields for Update Mode (Auto), Time Server IP (10.0.1.13), Manual Date, and Manual Time. The Apply and Cancel buttons are at the bottom.

## MRD 3187B User Manual

5. If “Manual” is selected, click the  button to choose the date.
6. Then enter the time manually in the space provided.
7. Click the  button to save the changes.

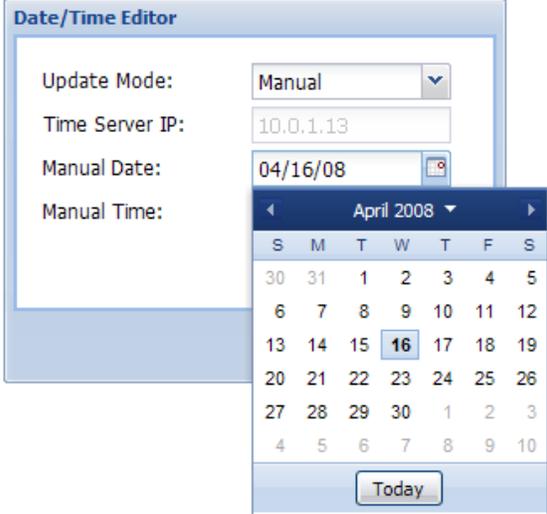

The **Date/Time Editor** dialog box contains the following fields:


- Update Mode:** Manual (dropdown menu)
- Time Server IP:** 10.0.1.13 (text input)
- Manual Date:** 04/16/08 (text input with a calendar icon)
- Manual Time:** (text input)

A calendar is displayed for April 2008, with the date 16 selected. A **Today** button is located at the bottom right of the calendar.

#### 5.4.4 SNMP Settings

The next section is the SNMP settings. This section gives an overview of all the SNMP settings as well as the configuration of SNMP. To edit the SNMP settings use the following steps:

1. Click the  button under the “SNMP Settings” heading. This will bring up a new edit form in the middle of the screen.
2. Use the drop down menus and input boxes to configure SNMP to the desired settings.
3. At the top of the edit form there are five drop down menus for enabling or disabling five separate SNMP traps as well.
4. When all of the settings have been configured, click the  button, at the bottom of the form, to save the settings.

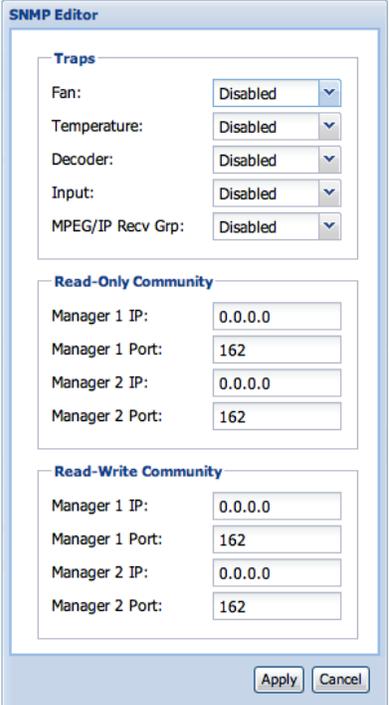


The **SNMP Editor** dialog box contains the following sections:


- Traps:**
  - Fan: Disabled (dropdown)
  - Temperature: Disabled (dropdown)
  - Decoder: Disabled (dropdown)
  - Input: Disabled (dropdown)
  - MPEG/IP Recv Grp: Disabled (dropdown)
- Read-Only Community:**
  - Manager 1 IP: 0.0.0.0 (text input)
  - Manager 1 Port: 162 (text input)
  - Manager 2 IP: 0.0.0.0 (text input)
  - Manager 2 Port: 162 (text input)
- Read-Write Community:**
  - Manager 1 IP: 0.0.0.0 (text input)
  - Manager 1 Port: 162 (text input)
  - Manager 2 IP: 0.0.0.0 (text input)
  - Manager 2 Port: 162 (text input)

**Apply** and **Cancel** buttons are located at the bottom right.

#### 5.4.5 SMPTE333M

To enable SMPTE333M, use the following steps:

1. Click the  button next to the SMPTE333M title. This will bring up a new edit form in the middle of the screen.
2. Use the drop down menu to enable or disable SMPTE333M.
3. Click the  button, at the bottom of the form, to save the settings.

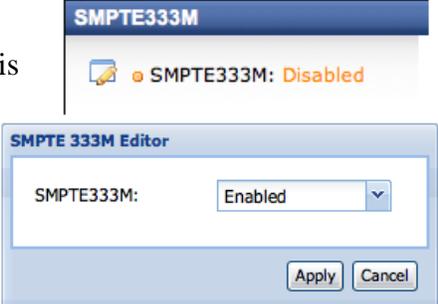

The **SMPTE333M Editor** dialog box contains the following field:

- SMPTE333M:** Enabled (dropdown menu)


**Apply** and **Cancel** buttons are located at the bottom right.

## 5.5 Profiles

Profiles are the means for saving and applying a group of settings on an MRD 3187B for a particular use. By applying a particular profile, the user can recall the settings of the MRD 3187B for different demodulation and decoding needs.

Up to 24 different profiles can be stored on an MRD 3187B. New profiles can be added to the unit by configuring the various settings of the MRD 3187B, then “saving” this profile and giving it a name. New profiles can also be added to an MRD 3187B by transferring them from a PC via the web client interface. Profiles can be deleted, by name, to make room for others. To

configure profiles, first click on the  tab to display the profiles section.

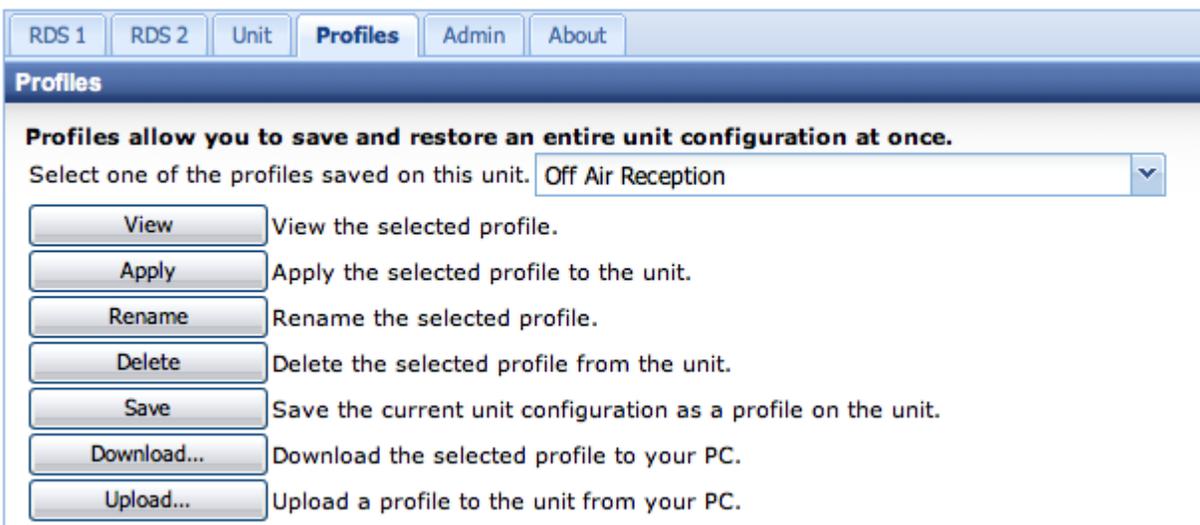


### 5.5.1 Saving a Profile

Once the MRD 3187B is configured as required for a specific use and environment, the settings can be saved to the MRD 3187B by a named profile. To save a profile, use the following steps:

1. Click the  button.
2. Enter a name for the profile.


*Note: The profile name should be no more than 15 characters long.*

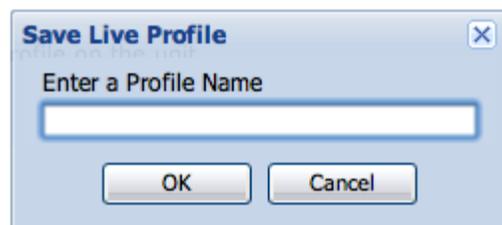


3. Click the  button to save the profile.
4. Click the  button after the profile has been successfully saved.

### 5.5.2 Deleting a Profile



If a given profile is no longer needed or more space is needed on the MRD 3187B for more profiles, it may be necessary to delete a profile. To delete a profile, use the following steps:

1. Use the drop down menu to select the profile to be deleted.
2. Click the  button.
3. A dialog box will appear and ask, “Are you sure you want to delete this profile?” Be sure to check the profile name in the dropdown box because that is the profile that will be deleted.
4. Click the  button in the dialog box to confirm the delete.
5. After the profile has been deleted, click the  button to close the dialog box.

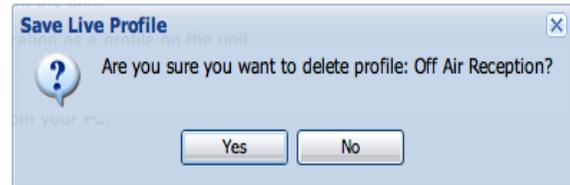

### 5.5.3 Renaming a Profile


If a particular profile’s name needs to be changed for one reason or another, use the following steps to change the name of the profile:

1. Use the drop down menu to select the profile to be renamed.
2. Click the  button.
3. A dialog box will appear that has the current name of the profile in it. Type a new name for the profile in the input box.
4. Click the  button in the dialog box to confirm the rename.
5. After the profile has been renamed, click the  button to close the dialog box.



### 5.5.4 Applying a Saved Profile


Once one or more profiles have been saved in the MRD 3187B it is possible to apply any of the saved profiles. When the selected profile is applied, the settings that were saved in that profile will now be applied. To apply a saved profile, use the following steps:

1. Choose the desired profile from the drop down menu.
2. Click the  button.



## MRD 3187B User Manual

- It may take up to a minute to apply the new profile. When the profile has been successfully loaded click the  button to close the dialog box.

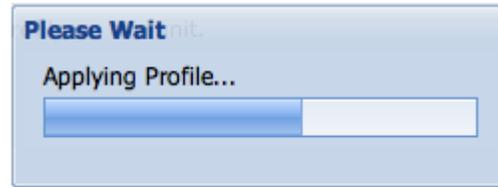

### 5.5.5 Viewing a Saved Profile

To view the settings contained in a saved profile choose the desired profile from the drop down list then click the  button. A new window will appear with all of the settings contained in that profile.

### 5.5.6 Downloading a Saved Profile





The MRD 3187B is capable of downloading a saved profile to a local computer. This option can be extremely useful if more than 24 profiles are needed. Since only 24 profiles can be stored on the MRD 3187B, new profiles can be created on the unit and then downloaded to the local computer. To download a profile from the MRD 3187B, use the following steps:


- Choose the desired profile from the drop down menu.
- Click the  button.
- A new dialog box will appear and ask what to do with the file. Click the  button and then point to a location on the local computer.
- Click the  button again.



### 5.5.7 Uploading a Saved Profile

When a saved profile on a local computer is needed, it is necessary to upload that profile back to the MRD 3187B. To upload a profile, from a local computer, back to the MRD 3187B, use the following steps:

- Click the  button.
- A new window will appear with a space to provide the path of the profile to upload. Click the  button and navigate to the location of the profile on the local computer. Select the file and then click .
- The file path box should now be filled in with the location of the profile. Click the  button.

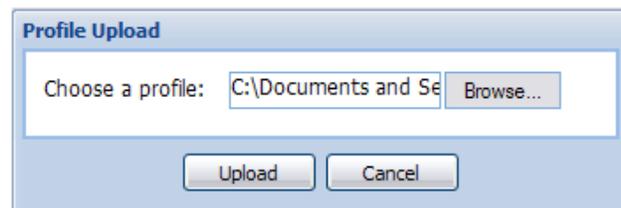

## 5.6 Web Passwords

The password on the web client for the admin account and user account should be changed to something other than the default passwords. The process is the same for both the admin account and the user account, just click on the  button next to the account of the password to change. To change either the admin account password or the user account password, use the following steps:

1. Click on the  button next to the account to edit.
2. A new window will appear in the middle of the screen. Type the new password in both of the fields and then click the  button to save the new password.




## 5.7 Reset Unit

If a problem should ever arise where the MRD 3187B has locked up, or malfunctioned in some manner, it is possible to perform a soft reset from the web client. A soft reset will reboot the MRD 3187B and hopefully take care of any previous problems the unit was exhibiting. A soft reset will not change any setting. To perform a soft reset, use the following steps:

1. Click the “Reset Unit” hyperlink under the “Reset Unit” heading.
2. A new page will appear. Click the  button.
3. A new dialog box will appear asking “Are you sure that you want to reset the unit?” Click the  button to reset the unit.




**Caution: Resetting the unit is a service affecting event and service will be interrupted while the unit is rebooting.**

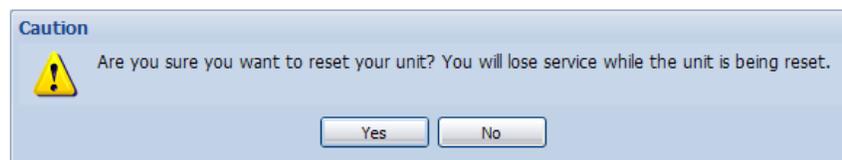

4. A progress bar will appear on the screen as the unit is resetting. It may take up to 5 minutes for the MRD 3187B to restart depending on the configuration.
5. Once the unit has restarted the web client will be redirected back to the login page for the MRD 3187B.

## 5.8 SNMP MIB Modules

In order to control the MRD 3187B using SNMP, the MIB modules need to be downloaded. The Sencore specific MIB modules are displayed under the “SNMP MIB Modules” heading. The generic MIB modules can be viewed and downloaded by clicking on the “View All MIB Modules...” hyperlink. That will bring up a new window displaying all the generic MIB modules. To download these, right-click on the desired MIB module under the “SNMP MIB Modules” heading and select “Save Target As...”

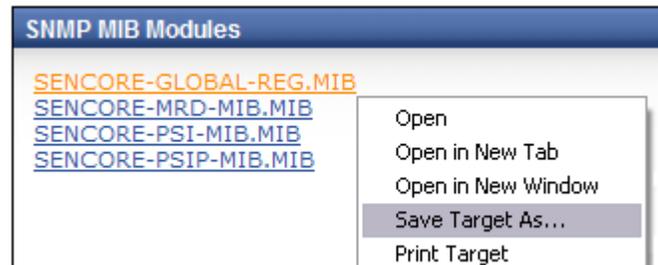

## 5.9 Software Updates

Occasionally Sencore will release new software for the MRD 3187B to provide new features and bug fixes. **NEVER PERFORM A SOFTWARE UPDATE UNLESS INSTRUCTED TO DO SO BY A SENCORE REPRESENTATIVE.** If an update is warranted, the representative will provide the software and instructions for the update.

## 5.10 Diagnostics


### 5.10.1 Processes


This section is primarily used by a Sencore representative to aid in troubleshooting a problem. By clicking on the “View Processes Window...” hyperlink, under the “Diagnostics” heading, it will bring up a new window that shows all the running processes of the MRD 3187B’s operating system. *There are no user-definable parameters under this menu.*

### 5.10.2 Network Interface Information

This section displays detailed information about the network portion of the MRD 3187B. It also allows a new IP address to be set in the unit. To set a new IP address, use the following steps:

 **Warning:** Use caution when changing IP settings or the unit may be rendered unreachable.

1. Click the “View Network Interface Window...” hyperlink, under the “Diagnostics” heading.
2. A new window will appear in the middle of the screen. This new window will give all of the details for the network interface of the MRD 3187B, as well as contain three input boxes to set a new IP address.
3. Fill in the three fields, “IP Address,” “Subnet Mask,” and “Gateway.”
4. Click the  button to save the network settings.

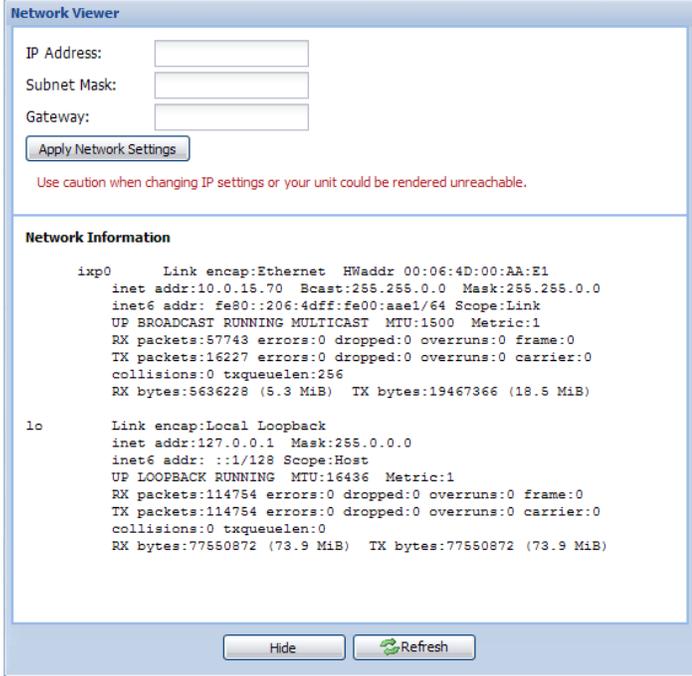

The screenshot shows a window titled "Network Viewer" with the following content:

IP Address:   
 Subnet Mask:   
 Gateway:   
  
 Use caution when changing IP settings or your unit could be rendered unreachable.

---

**Network Information**

```

ixp0   Link encap:Ethernet  HWaddr 00:06:4D:00:AA:E1
       inet addr:10.0.15.70  Bcast:255.255.0.0  Mask:255.255.0.0
       inet6 addr: fe80::206:4dff:fe00:aae1/64 Scope:Link
       UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
       RX packets:57743 errors:0 dropped:0 overruns:0 frame:0
       TX packets:16227 errors:0 dropped:0 overruns:0 carrier:0
       collisions:0 txqueuelen:256
       RX bytes:5636228 (5.3 MiB)  TX bytes:19467366 (18.5 MiB)

lo     Link encap:Local Loopback
       inet addr:127.0.0.1  Mask:255.0.0.0
       inet6 addr: ::1/128 Scope:Host
       UP LOOPBACK RUNNING  MTU:16436  Metric:1
       RX packets:114754 errors:0 dropped:0 overruns:0 frame:0
       TX packets:114754 errors:0 dropped:0 overruns:0 carrier:0
       collisions:0 txqueuelen:0
       RX bytes:77550872 (73.9 MiB)  TX bytes:77550872 (73.9 MiB)
  
```

## 5.11 About

Under the  tab, there are no user definable parameters but there is information about how to contact Sencore, as well as information about the software versions on the unit, and which option cards are installed.

This Page Intentionally Left Blank

## Section 6 – Using Simple Network Management Protocol (SNMP) to Configure the MRD 3187B



### Introduction

This section describes how to configure, control, and manage the MRD 3187B through the use of SNMP commands.

*Note: All instructions in this manual are based on the unit software versions 7.2.X. Newer versions of software, when released, may operate slightly different in regards to menus and configuration.*

## 6.1 SNMP Configuration

**Description:** The MRD 3187B can be controlled, configured, and monitored by SNMP via the RJ45 Ethernet port or the RS232 port on the back of the unit. Additionally, there are five separate SNMP traps that can be set to trigger by various error conditions.

### MRD 3187B MIB Modules

The MIBs needed for SNMP configuration are included on the MRD 3187B itself. To access and download the MIB files use the following steps:

1. Open a web browser of choice on a local computer and type the IP address of the MRD 3187B into the address bar then press enter.
2. Log into the MRD 3187B remotely.

*Note: By default there is no password.*



3. Click on the  tab.
4. Scroll down until the “SNMP MIB Modules” section is in view.
5. Right click on the desired MIB module and click “Save Target As...”
6. Now use the desired SNMP manager to configure the MRD 3187B.



### Configure SNMP Manager Addresses

Two SNMP communities exist on the MRD 3187B, a “Read Only” Community and a “Read Write” Community. Each one of these can be managed by two different host addresses. To set these up use the following steps:

1. Press the  button.
2. Use the  and  buttons to move the cursor to, “SNMP,” then press the  button
3. Use the  and  buttons to move the cursor to either, “RO Community” or “RW Community,” then press the  button.

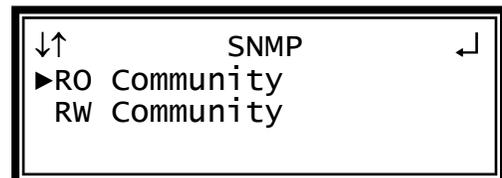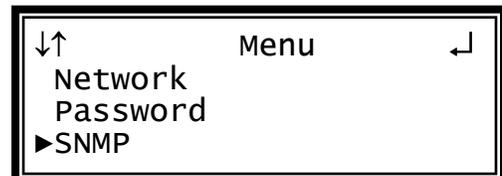

*Note: The setup instructions for the “RO Community” and the “RW Community” are the same from this point on.*

**IP Address 1**

1. Use the  and  buttons to move the cursor to, “IP1:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the IP, then press the  button to save the selection.

```

↓↑      RO Community      ↵
Name:public_____
▶Ip1: 0.0.0.0
Port1: 0000

```

**Port 1**

1. Use the  and  buttons to move the cursor to, “Port1:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the port, then press the  button to save the selection.

```

↓↑      RO Community      ↵
Name:public_____
Ip1: 0.0.0.0
▶Port1: 0162

```

**IP Address 2**

1. Use the  and  buttons to move the cursor to, “IP2:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the IP, then press the  button to save the selection.

```

↓↑      RO Community      ↵
Ip1: 0.0.0.0
Port1: 0162
▶Ip2: 0.0.0.0

```

**Port 2**

1. Use the  and  buttons to move the cursor to, “Port2:” then press the  button.
2. Use the  and  buttons to select the column to edit and use the  and  buttons to set the port, then press the  button to save the selection.

```

↓↑      RO Community      ↵
Port1: 0162
Ip2: 0.0.0.0
▶Port2: 0162

```

This Page Intentionally Left Blank

# Appendices



## Introduction

This section includes the following appendices.

APPENDIX A – ACRONYMS AND GLOSSARY .....	168
APPENDIX B – ERROR LIST .....	171
APPENDIX C – SPECIFICATIONS .....	173
APPENDIX D – PINOUT OF 8705/8705A, 8708 AND 8707A .....	196
APPENDIX E – COORDINATED UNIVERSAL TIME .....	197
APPENDIX F – OPEN SOURCE SOFTWARE .....	198
APPENDIX G – WARRANTY .....	199
APPENDIX H – SUPPORT AND CONTACT INFORMATION .....	200

## Appendix A – Acronyms and Glossary

**8VSB:** Vestigial sideband modulation with 8 discrete amplitude levels.

**16VSB:** Vestigial sideband modulation with 16 discrete amplitude levels.

**AC-3:** Also known as Dolby Digital

**AAC:** Advanced Audio Coding

**AES:** Audio Engineering Society

**ASI:** Asynchronous Serial Interface

**ATSC:** Advanced Television Systems Committee

**AV:** Audio Video

**Bit Rate:** The rate at which the compressed bit stream is delivered from the channel to the input of a decoder.

**BNC:** British Naval Connector

**BPS:** Bits per second.

**CAT:** Conditional Access Table

**CAT6:** Category 6 – Cable standard for gigabit Ethernet

**CC:** Closed Caption

**CoP:** Code of Practice

**CRC:** Cyclic Redundancy Check

**CVCT:** Cable Virtual Channel Table

**DHCP:** Dynamic Host Configuration Protocol

**DTVCC:** Digital Television Closed Captioning

**DVB:** Digital Video Broadcasting

**EBU:** European Broadcasting Union

**EIA:** Electronic Industries Alliance

**EIT:** Event Information Table

**EPG:** Electronic Program Guide

**ETM:** Extended Text Message

**ETT:** Extended Text Table

**Event:** An event is defined as a collection of elementary streams with a common time base, an associated start time, and an associated end time.

**FCC:** Federal Communications Commission

**FEC:** Forward Error Correction

**Field:** For an interlaced video signal, a “field” is the assembly of alternate lines of a frame. Therefore, an interlaced frame is composed of two fields, a top field and a bottom field.

**Frame:** A frame contains lines of spatial information of a video signal. For progressive video, these lines contain samples starting from one time instant and continuing through successive

lines to the bottom of the frame. For interlaced video a frame consists of two fields, a top field and a bottom field. One of these fields will commence one field later than the other.

**HANC:** Horizontal Ancillary

**HD:** High Definition

**High level:** A range of allowed picture parameters defined by the MPEG-2 video coding specification which corresponds to high definition television.

**I/O:** Input/Output

**IP:** Internet Protocol

**LED:** Light Emitting Diode

**LNB:** Low-Noise Block

**MAC:** Medium Access Control

**Main level:** A range of allowed picture parameters defined by the MPEG-2 video coding specification with maximum resolution equivalent to ITU-R Recommendation 601.

**Main profile:** A subset of the syntax of the MPEG-2 video coding specification that is expected to be supported over a large range of applications.

**Mbps:** 1,000,000 bits per second.

**MER:** Modulation Error Ratio

**MGT:** Master Guide Table

**MIB:** Management Information Base

**MP@HL:** Main profile at high level.

**MP@ML:** Main profile at main level.

**MPEG:** Refers to standards developed by the ISO/IEC JTC1/SC29 WG11, *Moving Picture Experts Group*. MPEG may also refer to the Group.

**MPEG-2:** Refers to ISO/IEC standards 13818-1 (Systems), 13818-2 (Video), 13818-3 (Audio), 13818-4

**MPTS:** Multiprogram Transport Stream

**MRD:** Modular Receiver Decoder

**NTSC:** National Television System Committee

**OSD:** On Screen Display

**PAL:** Phase-Alternating Line

**PAT:** Program Association Table

**PCM:** Pulse-Code Modulation

**PCR:** Program Clock Reference

**PID:** Packet Identifier. A unique integer value used to associate elementary streams of a program in a single or multi-program transport stream.

**PMT:** Program Map Table

**Profile:** A defined subset of the syntax specified in the MPEG-2 video coding specification

**Program specific information (PSI):** PSI consists of normative data which is necessary for the demultiplexing of transport streams and the successful regeneration of programs.

**Program:** A program is a collection of program elements. Program elements may be elementary streams. Program elements need not have any defined time base; those that do have a common time base and are intended for synchronized presentation.

**PTS:** Presentation Time Stamp

**QAM:** Quadrature Amplitude Modulation

**QPSK:** Quadrature Phase-Shift Keying

**RDS:** Receiver Decoder System

**RF:** Radio Frequency

**RGBHV:** Red, Green, Blue, Horizontal, Vertical

**RO:** Read Only

**RPM:** Revolutions Per Minute

**RRT:** Rating Region Table

**RS-232:** Recommended Standard. A standard for serial binary data interconnection.

**RU:** Rack Unit

**RW:** Read/Write

**SD:** Standard Definition

**SDI:** Serial Digital Interface

**SFP:** Small Form-Factor Pluggable

**SI:** System Information

**SMPTE:** Society of Motion Pictures and Television Engineers

**SNMP:** Simple Network Management Protocol

**SSRC:** Synchronization Source

**STD input buffer:** A first-in, first-out buffer at the input of a system target decoder for storage of compressed data from elementary streams before decoding.

**STD:** System Target Decoder. A hypothetical reference model of a decoding process used to describe the semantics of the Digital Television Standard multiplexed bit stream.

**STT:** System Time Table

**TS:** Transport Stream

**TVCT:** Terrestrial Virtual Channel Table

**UTC:** Coordinated Universal Time

**VANC:** Vertical Ancillary

**VCT:** Virtual Channel Table. Used in reference to either TVCT or CVCT.

**XLR:** Cannon “X” series connector, with a Latch, and Rubber around the contacts.

**YPbPr:** Component Red, Green, Blue

---

## Appendix B – Error List

### General

---

- **Bitrate Error** - The TS bitrate is not within 100 bps of 19.392 Mbps while using the 310M card, or it is greater than 160 Mbps while using ASI.
- **Tuner Lock Error** – The FEC is not synchronized. Data on carrier is not synchronized.
- **Video Unsupported Profile/Level** - The video is not of a supported profile/level.
- **Carrier Lock Error** - Cannot detect the carrier signal.
- **TS Rate Invalid** - A burst of packets caused the receive FIFO to overflow.
- **Not Receiving Packets** - The card is not receiving IP packets within 1 FEC period (1 second).
- **No TS Present Error** - There is no sync byte (0x47) found in a 1 second period.
- **Transport Packet Error** - There was an error in the transport stream.
- **Lock Error** - A carrier cannot be found.
- **Low MER** - The MER is lower than the threshold set by the user.
- **Low Level** - The signal level is lower than the threshold set by the user.
- **System Time Event** – If the unit is powered on/off, the time is manually updated, or the time server is invalid, this event will be triggered.
- **CA No Entitlement Error-** The user has no entitlement for the program, or the user does not want to buy the program.
- **CA Need Technical Dialog Error-** The application has to enter into a technical dialogue with the user before being able to descramble (e.g. ask the user to select fewer elementary streams because the descrambling capabilities are limited).
- **CA Need Purchase Dialog Error-** The application has to enter into a purchase dialogue with the user before being able to descramble (e.g. pay per view programs).
- **CA Resource Unavailable Error-** There is not a CAS card available to descramble the stream.
- **CA Technical Error-** The application cannot descramble the elementary stream for technical reasons (e.g. all descrambling capabilities are already in use).

### Video

---

- **Video Not Decoding Error** – The decoder didn't receive a new video frame within 3 seconds.
- **Video Type Error-** Selected video stream format is not supported by the decoder.
- **Video Unknown Error** – Video Decoder does not recognize the video stream.
- **Video Conversion Error-** The video stream cannot be converted.
- **Invalid Output Format Error** - The output format selected is invalid for the combination of incoming stream and output card.
- **Incompatible Genlock Error** - The Genlock Reference selected by the user is incompatible with the incoming stream format.
- **Genlock Reference Error** - The Genlock reference is set but there is no reference signal detected.

### Audio

---

- **DolbyE Not Decoding Error** - The DolbyE PID has been set but is not being decoded.
- **Audio (N) Not Decoding Error** - Audio Decoder (N) didn't receive a new audio frame within 3 seconds.
- **Audio (N) Unknown Error** - Audio Decoder (N) does not recognize the audio stream.

### System

---

- **Fan Error** - The fan is spinning at less than 500 RPM.
- **Temperature Error** - The temperature has exceeded 70 Celsius.
- **DPI Stream Type Locked Error-** User is not licensed to decode the selected stream.

### DPI

---

- **SCTE104 GPI Event-** I2C failed to write to the splice request data to the decoder.
- **SCTE104 LAN Event-** I2C failed to write to the splice request data to the decoder.
- **SCTE35 Event-** Parsed transport stream and event was fired.
- **SCTE35 GPO Event-** Relay configured by user to have an SCTE35 trigger and an SCTE35 splice\_insert message was received.

MRD 3187B User Manual

---

- **SCTE35 to SCTE104 Event-** Although a number of things can trigger this event, one example is: The decoder received an SCTE104 splice\_request\_data message but failed to embedded it in the VANC because either an embedder was not available or the ADP packet was too large for the number of available lines.
- **SCTE35 Heartbeat Event-** Have not received an SCTE35 message for a user specified period of time (default 10min).

## MRD 3187B User Manual

**Appendix C – Specifications****MRD 3187B – base unit**

Includes:	Display, keypad, embedded controller, Chassis/case, Power Supply/line cord
System –	
Display Type:	VFD (Vacuum Fluorescent Display)
Display Configuration:	4 lines x 20 characters
Keypad:	Membrane switches
Front Panel Lockout:	Password control, up to 10 alpha-numeric characters (no punctuations or spaces allowed)
Configurations Allowed:	Single RDS – 8-Slot (Configuration 1) Dual RDS – 4-Slot (Configuration 2)
Rear panel:	Eight available slots Six I/O interface slots Two video output slots (Configuration dependant)
Remote Operation/Update Interface –	
Type:	Ethernet, 10/100
Rear panel indicators:	Link (Green LED), Activity (Amber LED)
Connector:	RJ45
Serial Remote operation interface –	
Type:	RS232
Protocol:	115, 8, N, 1
Connector:	9-pin D-sub, male
Front Panel Indicators –	
Input LED:	Green indicates valid input on selected input, Off indicates no valid signal on the selected input Constant Blinking Green for Configuration 2 units indicates one valid input and one invalid input Red indicates error is occurring OFF indicates no errors detected
Error LED:	
AC Power –	
Operating Voltage:	95-135 VAC or 180-265 VAC
Current Draw/Power:	
Typical 1 Decoder with 4 option cards:	0.40A / 50W
Typical 2 Decoders with 8 option cards:	0.60A / 70W
Frequency:	47-63Hz
Line Cord:	Detachable, 3-prong
DC Power –	
Operating Voltage:	40 - 60 VDC
Max Current Draw/Power:	4.17A / 200W (at 48VDC)
Current Draw/Power:	
Typical 1 Decoder with 4 option cards:	1.04A / 50W
Typical 2 Decoders with 8 option cards:	1.46A / 70W
Line Cord:	Detachable, 3-prong connector (+, -, Earth Ground)
General –	
RoHS Compliant:	Yes
Operating Temperature:	0 to 45 degrees C
Operating Humidity:	<95% Non-Condensing
Cooling:	Forced air, front intake, rear exhaust
Temperature monitor:	Fan failure, internal temperature sensor
Size:	Height = 1RU (1 <sup>3</sup> / <sub>4</sub> ”), Width = 19”, Depth = 19” 19 in. rack mountable, removable ears Rack clips and screws included
Weight:	9.5 lbs. (base unit) 12.75 lbs. (Fully Loaded)
Pollution Degree:	2
Installation Category:	II
Grounding Post:	On chassis



Specifications are subject to change without notice.

## MRD 3187B User Manual

**MPEG-2/MPEG-4 Decoder (1 Video, 2 Audio) – Option 8730A/8732**

## General –

RoHS Compliant: Yes  
 TS Data Rate: 1-160 Mb/s

## Video Decoder –

Compatibility Standard: MPEG-2 4:2:0 MP@HL & MP@ML  
 MPEG-4 H.264 MP@4.1 & HP@4 (8732 only)  
 Video Bit Rate: MPEG-2 1-80 Mbps (dependent on profile)  
 MPEG-4 H.264 1-50 Mbps (8732 only;  
 dependent on profile)  
 Primary Video Formats: 1080i@ 25Hz, 29.97Hz, 30Hz  
 720p@ 50Hz, 59.94Hz, 60Hz  
 480p@ 59.94Hz  
 480i@ 29.97Hz  
 576i@ 25Hz  
 Format Scaling: Output Format Selectable  
 Display Modes: Letterbox, Cropped, & Anamorphic  
 Aspect Ratio: 16x9, 4x3 (Selectable - format dependent)

## Audio Decoder –

Output Formats: IEC-60958 (uncompressed)  
 IEC-61937 (compressed)  
 PCM Downmix  
 Allowed MPEG-2 PES Formats: MPEG-2  
 MPEG-1  
 AC-3  
 HE-AAC  
 DolbyE (With 8707A)  
 MPEG-2 AAC ADTS  
 MPEG-4 AAC ADTS & LOAS  
 MRD Configuration 1 Opt 1/3 (2 services)  
 L/R (Stereo), Lt/Rt (Surround), Mono1, Mono2  
 Service Source: User defined, Monitor, Transmission  
 PCM Downmix (selectable):  
 Modes (selectable):

Specifications are subject to change without notice.



## MRD 3187B User Manual

**MPEG-2 Decoder with Genlock (1 Video, 4 Audio) – Option 8733**

## General –

RoHS Compliant: Yes  
 TS Data Rate: 1-160 Mb/s

## Video Decoder –

Compatibility Standard: MPEG-2 4:2:2 MP@HL & MP@ML  
 Decoding Capability: Can decode HD-SDI and SD-SDI simultaneously  
 (Must use the 8712 option card)

Video Bit Rate: MPEG-2 1-80 Mbps (dependent on profile)

Primary Video Formats: 1080i@ 25Hz, 29.97Hz, 30Hz  
 720p@ 50Hz, 59.94Hz, 60Hz  
 480p@ 59.94Hz  
 480i@ 29.97Hz  
 576i@ 25Hz

Format Scaling: Output Format Selectable  
 Display Modes: Letterbox, Cropped, & Anamorphic  
 Aspect Ratio: 16x9, 4x3 (Selectable - format dependent)

## Audio Decoder –

Output Formats: IEC-60958 (uncompressed)  
 IEC-61937 (compressed)  
 PCM Downmix

## Allowed MPEG-2 PES Formats:

MPEG-2  
 MPEG-1  
 AC-3  
 HE-AAC  
 Up to 4 DolbyE PIDs (With 8707A)  
 MPEG-2 AAC ADTS  
 MRD Configuration 1 Opt 1/3 (2 services)  
 L/R (Stereo), Lt/Rt (Surround), Mono1, Mono2  
 User defined, Monitor, Transmission

## Service Source:

PCM Downmix (selectable):

Modes (selectable):

Specifications are subject to change without notice.



## MRD 3187B User Manual

**MPEG-2/MPEG-4 Decoder with Genlock (1 Video, 2 Audio) – Option 8731A/8734**

## General –

RoHS Compliant: Yes  
 TS Data Rate: 1-160 Mb/s

## Video Decoder –

Compatibility Standard: MPEG-2 4:2:0 MP@HL & MP@ML  
 MPEG-4 H.264 MP@4.1 & HP@4 (8734 only)  
 Video Bit Rate: MPEG-2 1-80 Mbps (dependent on profile)  
 MPEG-4 H.264 1-50 Mbps (8734 only;  
 dependent on profile)  
 Primary Video Formats: 1080i @ 25Hz, 29.97Hz, 30Hz  
 720p @ 50Hz, 59.94Hz, 60Hz  
 480p @ 59.94Hz  
 480i @ 29.97Hz  
 576i @ 25Hz  
 Format Scaling: Output Format Selectable  
 Display Modes: Letterbox, Cropped, & Anamorphic  
 Aspect Ratio: 16x9, 4x3 (Selectable - format dependent)

## Audio Decoder –

Output Formats: IEC-60958 (uncompressed)  
 IEC-61937 (compressed)  
 PCM Downmix  
 Allowed MPEG-2 PES Formats: MPEG-2, MPEG-1, AC-3, HE-AAC,  
 DolbyE (With 8707A),  
 MPEG-2 AAC ADTS,  
 MPEG-4 AAC ADTS & LOAS  
 Service Source: MRD Configuration 1 Opt 1/3 (2 services)  
 PCM Downmix (selectable): L/R (Stereo), Lt/Rt (Surround), Mono1, Mono2  
 Modes (selectable): User defined, Monitor, Transmission

## Genlock Capability -

Includes Genlock capability for 8704A/8704B,  
 8705/8705A, and 8706A video output cards.  
 (No Color burst phase adjust on NTSC outputs)  
 HD – Adjustment of pixels and lines. Max number  
 dependent on video mode  
 SD – Adjustment of Color burst phase, pixels,  
 and lines.

## Genlock Reference -

Video 1080i @ 25 fps – Ref 1080i tri-level sync @ 25 fps  
 – Ref NTSC “black and burst”  
 Video 1080i @ 29.97 – Ref 1080i tri-level sync @ 29.97 fps  
 Video 1080i @ 30 fps – Ref NTSC1080i tri-level sync @ 30 fps  
 Video 720p @ 50 fps – Ref 720p tri-level sync @ 50 fps  
 – Ref 720p tri-level sync @ 25 fps  
 Video 720p @ 59.94 fps – Ref 720p tri-level sync @ 59.94 fps  
 – Ref 720p tri-level sync @ 29.97 fps  
 – Ref NTSC “black and burst”  
 Video 720p @ 60 fps – Ref 720p tri-level sync @ 60 fps  
 – Ref 720p tri-level sync @ 30 fps  
 Video 480i @ 29.97 – Ref NTSC “black and burst”



Specifications are subject to change without notice.

## MRD 3187B User Manual

**8VSB/QAM Receiver – Option 8701A**

## RF Input -

RoHS Compliant:	Yes
Frequency Range:	50M-850MHz VHF/UHF (Ch2 – Ch69) CATV (Ch2 – Ch134)
CATV Offsets:	FCC, IRC, HRC
Sensitivity:	-15dBmV
Dynamic Range:	>35dB
Modulation:	8VSB, QAM-B
Connector:	F-81 Type, panel mount, female
Impedance:	75 ohms
MER:	Accuracy: +/- 1dB Range: 0 – 35dB – 38dB (QAM 256) Low limit flag: User defined
Input Level Flag:	Range: -15dBmV to +20dBmV Accuracy: +/-5dB Low flag limit: User defined

## QAM -

Standard:	ITU-T, Annex B (SCTE DVS-031)
QAM Mode:	64 and 256
De-interleaver:	I=1-128, J=128/1
Nyquist Roll Off (Alpha):	12%, 18%

## 8VSB -

Standard:	ATSC A/53E
Decoding Levels:	8
Nyquist Roll Off (Alpha):	11.5%

Specifications are subject to change without notice.



**Serial TS Input/Output (DVB-ASI /SMPTE 310M) – Option 8702**

## General –

RoHS Compliant:	Yes
Configuration:	ASI or 310M, selectable (Not simultaneously)
Connector:	(2) BNC, female
Impedance:	75ohms

## ASI Serial TS Input/Output -

Number of ASI Inputs:	1
Number of ASI Outputs:	1 (non loop-through)
Standard:	EN50083-9 (V2:3/98) DVB ASI
Data Bit Rate:	270Mbps
Max TS Rate Supported:	160Mbps (Dependant on configuration)

## 310M Serial TS Input/Output -

Number of 310M Inputs:	1
Number of 310M Outputs:	1 (non loop-through)
Standard:	SMPTE 310M
Data Bit Rate:	19.39Mbps, synchronous

**High Bit Rate ASI Input – Option 8703**

*This card is not needed with 8730A/8732 decoder, but is supported in the MRD 3187B.*

## ASI Serial TS Input/Output –

RoHS Compliant:	Yes
Number of ASI Inputs:	1
Number of ASI Outputs:	1 (passive loop-through)
Standard:	EN50083-9 (V2:3/98) DVB ASI
Data Bit Rate:	270Mbps
Max TS Rate Supported:	160Mbps for MPTS
Connector:	(2) BNC, female
Impedance:	75ohms

Specifications are subject to change without notice.



**Video Output (2 SD-SDI, 1 Composite) – Option 8704A/8704B**

SDI (Serial Digital Interface, Standard definition) –

RoHS Compliant:	Yes
Standard:	ITU-BT.601/SMPTE 259M
Data Bit Rate:	270Mbps
Number of Serial Video Outputs:	2 (Isolated)
Display Modes:	Letterbox, cropped, anamorphic
Embedded Audio Format:	SMPTE272M
Sample Rates Supported:	48KHz
Sample Rate Out:	48KHz
Output Squelch:	Enable, (Output muted if no input detected) Disable, selectable
Number of Embedded Audio Channel Pairs:	4 (2 complete audio groups)
Audio Types Supported:	DolbyE, AC3, MPEG2 layer 1 and 2, or PCM
Embedded Audio Control:	Selectable – “type”/disable (each pair independently controlled)
Audio Type Standard:	Compressed (IEC 60958) Uncompressed (IEC 61937)
Closed Captions:	Embedded - EIA-708B or EIA-608B Line21 – Enable/Disable (selectable) SDI and Composite controlled simultaneously. (2) Female BNC
Connector:	75ohms
Impedance:	
Composite Video Out –	
Number of Outputs:	1 (NTSC/PAL)
Connector:	BNC, female
Impedance:	75ohms, +/-10%
Return Loss:	>25dB
Frequency Response:	DC to 6.0MHz
Amplitude:	140 IRE (1.0Vpp), +/-2 IRE
Display Modes:	Letterbox, cropped, anamorphic
NTSC -	
Standard:	ANSI/SMPTE 170M-1994; CCIR656
Format, Frame rate:	525lines, 29.97Hz (Interlaced)
Setup (pedestal):	On/Off, selectable
Closed Caption:	Enable/Disable, selectable
CC Standard:	EIA-608B
PAL -	
Standard:	ITU.R.BT.470-6
Format, Frame rate:	625lines, 25.00Hz (Interlaced)
Genlock –	
SDI:	Line and Pixel Adjustment
Composite:	Line, Pixel, Color Phase Adjustment

Specifications are subject to change without notice.



**Video Output (2 HD-SDI, 1 RGBHV/YPbPr) – Option 8705/8705A**

## General -

RoHS Compliant:	Yes
Output Connectors:	2 – HD-SDI, 1 – Analog Video
Output Formats:	1920 x 1080 Interlaced (1080i) 1280 x 720 Progressive (720p) 720 x 576 Interlaced (576i) 720 x 480 Interlaced (480i)
Frame Rates:	1080i@ 25.00Hz, 29.97Hz, 30.00Hz 720p@ 50.00Hz, 59.94Hz, 60.00Hz 576i@ 25.00Hz 480i@ 29.97Hz
Aspect Ratio:	16x9 (fixed: 1080i, 720p) 16x9, 4x3 (selectable: 576i, 480i)
Display Modes:	HD: Letterbox, Cropped

## HD-SDI –

Standard:	SMPTE 292M
Data Bit Rate:	1.485Gbps
Number of Serial Outputs:	2
Connector:	(2) BNC, female
Impedance:	75ohms, +/-10%
Return loss:	>=15dB,
Number of Video formats Supported:	2
Video Format Standards:	SMPTE 274M (1080I, 29.97Hz) SMPTE 296M (720P, 59.94Hz)
Embedded Audio Format:	SMPTE 299M
Sample Rates Supported:	48KHz
Sample Rate Output:	48KHz
Number of Embedded Audio Channel Pairs:	4 (2 complete audio groups)
Audio Types Supported:	AC3, MPEG2 layer 1 and 2, or PCM DolbyE (With 8707A)
Embedded Audio Control:	Selectable – “type” and disable (Each pair independently controlled)
Audio Type Standard:	Compressed (IEC 60958) Uncompressed (IEC 61937)
Closed Captions:	Embedded - EIA-708B or EIA-608B Enable/Disable – selectable

## Analog Video –

Video Format Standards:	SMPTE274M (1080i) SMPTE 296M (720p) SMPTE 253M (480p, 480i) (Reference: EIA 770.2 and 770.3)
Number of Analog Outputs:	1 (shared: RGBHV and YPbPr)
Connector:	High Density 15-pin D-sub, female
Impedance:	75 ohms, +/-10%, 1kohm for syncs
Return Loss:	>20dB, 30KHz – 30MHz
Frequency Response:	Y = 30KHz - 30MHz, +/-0.2dB ripple PbPr = 30KHz – 15MHz, +/-0.2dB ripple
H/V Sync:	4Vpp into 1 M ohm, positive polarity

## Genlock -

HD-SDI:	Line and Pixel Adjustment
---------	---------------------------

Specifications are subject to change without notice.



**Video Output (2 HD-SDI, 1 RGBHV/YPbPr) – Option 8705/8705A  
(Continued)**

Options available –

8705/8705A Opt 1:

Connectors:

Length:

Analog video breakout cable

(5) BNC, male;

R, G, B, Horizontal Sync, Vertical Sync or  
Pr, Y, Pb, --, --

(1) High density 15-pin D-sub, male

48 inches

Specifications are subject to change without notice.



**Video Output (1 RGBHV/YPbPr, 1 Composite) – Option 8706A**

Analog Video General –	
RoHS Compliant:	Yes
Video Standards:	SMPTE274M (1080i) SMPTE296M (720p) SMPTE253M (480p) SMPTE170M (480i) (Reference: EIA 770.2 and 770.3)
Output Formats:	1920 x 1080 Interlaced (1080i) 1280 x 720 Progressive (720p) 720 x 576 Interlaced (576i) 720 x 480 Interlaced (480i)
Frame Rates:	1080i@ 25.00Hz, 29.97Hz, 30.00Hz 720p@ 50.00Hz, 59.94Hz, 60.00Hz 576i@ 25.00Hz 480i@ 29.97Hz
Aspect Ratio:	16x9 (fixed: 1080i, 720p) 16x9, 4x3 (selectable: 576i, 480i)
Display Modes:	HD: Letterbox, Cropped SD: Letterbox, Cropped
Composite General –	
Standard:	ANSI/SMPTE 170M-1994 CCIR656 PAL Standard
Output Formats:	
NTSC:	480 Interlaced
PAL:	576 Interlaced

*Note: Simultaneous RGB/YPbPr and Composite operation in 480i29.97Hz format only.*

Analog Video –	
Number of Outputs:	1 (shared: RGBHV and YPbPr)
Connector:	High Density 15-pin D-sub, female
Impedance:	75ohms, +/-10%; 1kohm for syncs
Return Loss:	>20dB, 30KHz – 30MHz
Frequency Response:	Y = 30KHz - 30MHz, +/-0.2dB ripple PbPr = 30KHz – 15MHz, +/-0.2dB ripple
H/V Sync:	4Vpp into 1Mohm, negative polarity

Specifications are subject to change without notice.



**Video Output (1 RGBHV/YPbPr, 1 Composite) – Option 8706A (Continued)**

## Composite Video Out –

Number of Outputs:	1 (NTSC/PAL)
Connector:	BNC, female
Impedance:	75ohms, +/-10%
Return Loss:	>25dB
Frequency Response:	DC to 6.0MHz
Amplitude:	140 IRE (1.0Vpp), +/-2 IRE
NTSC -	
Standard:	ANSI/SMPTE 170M-1994; CCIR656
Format, Frame rate	525lines, 29.97Hz (480i)
Setup (pedestal):	On/Off, selectable
Closed Caption:	Enable/Disable, selectable
CC Standard:	EIA-608B
PAL -	
Standard:	ITU-R.BT.470-6
Format, Frame rate:	625lines, 25.00Hz

## Genlock -

Line and Pixel Adjustment  
Color Phase Adjustment (8706A Only)

Specifications are subject to change without notice.



## MRD 3187B User Manual

**Audio Output (DolbyE, AES Digital, Analog) – Option 8707A**

## General –

RoHS Compliant:	Yes
Audio Source:	Selected Audio Services 1-4
# Of Services:	2 supported per 8707A option card
Service Source:	MRD Configuration 1 Opt 1/3 (2 services) MRD Configuration 1 Opt 2/4 (4 services) (Requires 2 – 8707A cards)
Modes:	User defined, Monitor, Transmission
DolbyE PID:	DolbyE extracted digital data output provides extracted DolbyE for embedding

## Digital Audio Out –

DolbyE:	Available with breakout cable on 15-pin D-sub Connector
Digital Output format: Type (selectable):	S/PDIF/AES3id (Unbalanced) Raw (native – AC3, MPEG, etc.), PCM (uncompressed Ch1 and 2), IEC 60958-3 AC-3 (consumer), MPEG-1/2, layers 1 and 2 AES3id (IEC 60958-4/61937), Ch1/2 (professional)
Standard:	(2) BNC, female
Connector:	75ohms
Impedance:	

## Analog Audio Out -

Output Type:	Balanced, 2 channel pairs (+/-, L/R)
Source:	Same as selected Digital PCM above
Conditions:	Load=600ohms, –20dBFS encoded TS source when gain set to “7”
Amplitude:	0dBu Adjustable to +4dBu
Max Output:	27dBu
THD+N:	<0.01%
Crosstalk:	<-85dB
Frequency Response:	20Hz to 20KHz < +/-0.1dBu
Connector:	High density 15-pin D-sub, male
Impedance:	600ohms nominal 50ohms min.

## Options available –

8707A Opt 1:	Audio breakout cable with XLR and DolbyE BNC
Connectors:	(4) XLR, male; Chan 1 – L,R Chan 2 – L,R (1) BNC, male; DolbyE (1) High density 15-pin D-sub, female
Length:	14 inches
8707A Opt 3:	Audio breakout cable with unbalanced BNC and DolbyE BNC
Connectors:	(5) BNC, male; Chan 1 – L,R Chan 2 – L, R DolbyE (1) High density 15-pin D-sub, female
Length:	14 inches
8707A Opt 4:	DolbyE breakout cable
Connectors:	(1) BNC, male; DolbyE (1) High density 15-pin D-sub, female
Length:	14 inches

Specifications are subject to change without notice.



## MRD 3187B User Manual

**Dual Video Output (2 SDI, 1 RGBHV/YPbPr/Composite) – Option 8708**

## General –

RoHS Compliant:	Yes
Connector:	(2) Female BNC
Impedance:	75ohms +/- 10%
Output Connectors:	2 –SDI, 1 – RGBHV/YPbPr/Composite (Composite/YPbPr output with breakout cable only)
Genlock -	
SDI:	Line and Pixel Adjustment
Composite:	Line, Pixel, Color Phase Adjustment
SDI (Serial Digital Interface) Video Out –	
HD-SDI Standard:	SMPTE 292M SMPTE 274M (1080I, 29.97Hz) SMPTE 296M (720P, 59.94Hz) ITU-BT.601/SMPTE 259M
SD-SDI Standard:	SD-SDI = 270Mbps
Data Bit Rate:	HD-SDI = 1.485Gbps
Display Modes:	Letterbox, cropped, anamorphic
Embedded Audio Format:	SD-SDI = SMPTE272M HD-SDI = SMPTE 299M
Sample Rates Supported:	48KHz
Sample Rate Out:	48KHz
Output Squelch:	Selectable – Enable or Disable (if Enabled, and no input is detected, then the output is muted)
Number of Embedded Audio Channel Pairs:	4 (2 complete audio groups)
Audio Types Supported:	AC-3, MPEG2 layer 1 and 2, or PCM DolbyE (With 8707A)
Embedded Audio Control:	Selectable – “type”/disable (Each pair independently controlled)
Audio Type Standard:	Compressed (IEC 60958) Uncompressed (IEC 61937)
Closed Captions:	Embedded - EIA-708B or EIA-608B Line21 – Enable/Disable (selectable) SDI and Composite controlled simultaneously.
Analog Video –	
Video Format Standards:	SMPTE274M (1080i) SMPTE 296M (720p) SMPTE 253M (480p, 480i) (Reference: EIA 770.2 and 770.3)
Number of Analog Outputs:	1 (shared: RGBHV or YPbPr/Composite via breakout cable)
Connector:	High Density 15-pin D-sub, female
Impedance:	75 ohms, +/-10%, 1kohm for syncs
Return Loss:	>20dB, 30KHz – 30MHz
Frequency Response:	Y = 30KHz - 30MHz, +/-0.2dB ripple PbPr = 30KHz – 15MHz, +/-0.2dB ripple
H/V Sync:	4Vpp into 1 M ohm, positive polarity
Options available –	
8708 Opt 1:	Analog video breakout cable
Connectors:	(5) BNC, male; R, G, B, Horizontal Sync, Vertical Sync or Pr, Y, Pb, --, Composite
Length:	(1) High density 15-pin D-sub, male 48 inches

Specifications are subject to change without notice.



**Dual Input DVB-S2 Receiver – Option 8710/8710A**

## General –

RoHS Compliant:	Yes
Frequency Range:	950MHz – 2150MHz
Number of inputs:	2 (A and B)
Connector:	F-81 Type, Female (2)
Impedance:	75 Ohms
Return Loss:	>9dB
Separation:	>65dB
Legacy DVB-S Modulation:	QPSK
DVB-S2 Modulation:	QPSK, 8PSK
Packet size:	188 bytes
Modulation/Coding supported:	CCM (ACM & VCM not supported)
Transport Stream:	Up to 81Mbps
Nyquist root filter roll-off factors:	.20, .25, .35
RF Input Level	-25 dBm to -65 dBm
Input RF Spectrum	Normal/Inverted Auto Detect

## DVB-S –

Standard:	EN 300 421
FEC Code:	Conv. + Reed-Solomon
Viterbi soft decoder rate:	1/2
Code rates:	1/2, 2/3, 3/4, 5/6, 7/8
QPSK Symbol rate:	1-45Msym/s

## DVB-S2 –

Standard:	EN 302 307
Decoding type:	LDPC and BCH
FEC Framing Type	Normal Frames
QPSK supported rates:	1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10
8PSK supported rates:	3/5, 2/3, 3/4, 5/6, 8/9, 9/10
QPSK Symbol rate:	1-30Msym/s
8PSK Symbol rate:	1-30Msym/s
Carrier Loop capture range:	+/-5MHz
Pilot:	On/Off Auto Detect

Specifications are subject to change without notice.



**Dual Input ASM Receiver – Option 8711**

## General –

RoHS Compliant:	Yes
Frequency Range:	950MHz – 2150MHz
Number of inputs:	2 (A and B)
Connector:	F-81 Type, Female (2)
Impedance:	75 Ohms
Return Loss:	>7dB
Legacy DVB-S Modulation:	QPSK
Packet size:	188 bytes
Transport Stream:	Up to 72Mbit/s (depends on FEC and mode)
RF Input Level:	-25 dBm to -65 dBm
Input RF Spectrum:	Normal/Inverted Auto Detect

## DVB-QPSK –

Standard:	EN 300 421
FEC Code:	Viterbi + Reed-Solomon
Code rates:	1/2, 2/3, 3/4, 5/6, 7/8
QPSK Symbol rate:	0.256Msym/s – 30Msym/s

## Adv-PSK –

Standard:	Advanced
FEC Code:	Advanced + Reed-Solomon
Code rates:	1/2, 2/3, 3/4, 5/6, 7/8
QPSK Symbol rate:	0.256Msym/s – 30Msym/s

## 8-PSK –

Standard:	Advanced
FEC Code:	Advanced + Reed-Solomon
Code rates:	2/3, 3/4 (2.05), 3/4 (2.10), 3/4 (2.20), 5/6, 8/9
QPSK Symbol rate:	0.256Msym/s – 30Msym/s

Specifications are subject to change without notice.



## MRD 3187B User Manual

**Video Output (2 SDI, 1 RGBHV/YPbPr/Composite) – Option 8712**

SDI outputs 1 and 2 can be set to either HD-SDI or SD-SDI independently.

## General –

RoHS Compliant:	Yes
Connector:	(2) Female BNC
Impedance:	75ohms +/- 10%
Output Connectors:	2 –SDI, 1 – RGBHV/YPbPr/Composite (Composite/YPbPr output with breakout cable only)

## Genlock -

SDI:	Line and Pixel Adjustment
Composite:	Line, Pixel, Color Phase Adjustment
SDI (Serial Digital Interface) Video Out – HD-SDI Standard:	SMPTE 292M SMPTE 274M (1080I, 29.97Hz) SMPTE 296M (720P, 59.94Hz) ITU-BT.601/SMPTE 259M
SD-SDI Standard:	SD-SDI = 270Mbps HD-SDI = 1.485Gbps
Data Bit Rate:	Letterbox, cropped, anamorphic
Display Modes:	SD-SDI = SMPTE272M HD-SDI = SMPTE 299M
Embedded Audio Format:	48KHz
Sample Rates Supported:	48KHz
Sample Rate Out:	Enable, (Output muted if no input detected)
Output Squelch:	Disable, selectable
Number of Embedded Audio Channel Pairs:	8 (4 complete audio groups)
Audio Types Supported:	AC3, MPEG2 layer 1 and 2, or PCM DolbyE (With 8707A)
Embedded Audio Control:	Selectable – “type”/disable (Each pair independently controlled)
Audio Type Standard:	Compressed (IEC 60958) Uncompressed (IEC 61937)
Closed Captions:	Embedded - EIA-708B or EIA-608B Line21 – Enable/Disable (selectable) SDI and Composite controlled simultaneously.

## Analog Video –

Video Format Standards:	SMPTE274M (1080i) SMPTE 296M (720p) SMPTE 253M (480p, 480i) (Reference: EIA 770.2 and 770.3)
Number of Analog Outputs:	1 (shared: RGBHV or YPbPr/Composite via breakout cable)
Connector:	High Density 15-pin D-sub, female
Impedance:	75 ohms, +/-10%, 1kohm for syncs
Return Loss:	>20dB, 30KHz – 30MHz
Frequency Response:	Y = 30KHz - 30MHz, +/-0.2dB ripple PbPr = 30KHz – 15MHz, +/-0.2dB ripple
H/V Sync:	4Vpp into 1 M ohm, positive polarity

Specifications are subject to change without notice.



**Video Output (2 SDI, 1 RGBHV/YPbPr/Composite) – Option 8712  
(Continued)**

## Composite Video Out –

Number of Outputs:	1(NTSC/PAL)
Connector:	Breakout cable into BNC, female
Frequency Response:	DC to 6.0MHz
Amplitude:	140 IRE (1.0Vpp), +/-2 IRE
Display Modes:	Letterbox, cropped, anamorphic
NTSC -	
Standard:	ANSI/SMPTE 170M-1994; CCIR656
Format, Frame rate:	525lines, 29.97Hz (Interlaced)
Setup (pedestal):	On/Off, selectable
Closed Caption:	Enable/Disable, selectable
CC Standard:	EIA-608B
PAL -	
Standard:	ITU.R.BT.470-6
Format, Frame rate:	625lines, 25.00Hz (Interlaced)

Specifications are subject to change without notice.



**GPIO Module – Option 8713**

## General –

RoHS Compliant:	Yes
Remote Interfaces:	Web GUI and SNMP
+Vcc Voltage Level:	+5V @ 800mA
Relay Type:	High-cycle, High-reliability
Contact Ratings:	>30vdc @ 500mA
Event Types:	OON and RTN (Out-Of-Network and Return-To-Network)
Suggested Connector Type:	Phoenix 2.5mm Pluggable Terminal Block

## I/O –

Logic Input:	Provides four logic inputs
Logic Outputs:	Provides three open-collector outputs
Voltage Range:	5 - 24Volts logic switching and current limiting
Short circuit protection:	Yes
Relay Contact:	Provides three relay contact outputs

Specifications are subject to change without notice.



**Relay and DPI Trigger – Option 8714**

## General –

RoHS Compliant:	Yes
Remote Interfaces:	Web GUI and SNMP
Connector Type:	3.5mm Molex ESE Eurostyle Pluggable Terminal
Relay Type:	High-cycle, High-reliability
Contact Ratings:	>30vdc @ 500mA
Event Types:	OOB and RTN (Out-Of-Network and Return-To-Network)
Trigger Offset:	+/-2000 mS
DPI Commands:	The MRD DPI Trigger function need only respond to the splice_insert() command. The parameters following the command are what the MRD is concerned with.

Specifications are subject to change without notice.



**Dual Input COFDM Receiver – Option 8715**

## General –

RoHS Compliant:	Yes
Compatibility Standard:	EN 300 744
Spectrum:	Normal or Inverted
Frequency range:	49MHz – 861MHz
Channel bandwidth:	6MHz, 7MHz, 8MHz
Guard interval:	1/4, 1/8, 1/16, 1/32
FFT size:	2K, 8K
Code rate:	1/2, 2/3, 3/4, 5/6, 7/8
Constellation:	QPSK, QAM16, QAM64
Connector:	2-F-81 Type, panel mount, female
Impedance:	75 Ohms
Return Loss:	>9dB

Specifications are subject to change without notice.



## Conditional Access – Option 8721

General –

RoHS Compliant:	Yes
Compatibility Standard:	DVB-CI
Supported CAMs:	NDS NagraVision NagraStar Irdeto Viaccess (SCM and Aston) Crypto Works
Max number of Programs at once:	Based on individual CAMs

Specifications are subject to change without notice.



**MPEG over IP Input/Output – Option 8725**

*(This card physically requires two slots and is limited to one card per MRD chassis.)*

**General –**

RoHS Compliant:	Yes
Connector:	1 – 10/100/1000 Auto-negotiating Base-T RJ-45 Ethernet Port 1 – SFP Port (Optical or CAT6)
FEC Transmit/Receive:	Pro MPEG CoP3 Range: L*D<100 1<L<20 4<D<20 Annex B
Multicast Filtering:	Filters based on IP address (Avoids Problematic 30IP – 1 MAC)

**Receive –**

Input Format:	UDP and RTP Multicast and Unicast
Bitrate Range:	1 – 160Mbps
Packets/IP Frame:	1-7 MPEG Packets/IP Frame
IGMP Compatibility:	Version 1, 2, and 3
Network Jitter Buffer:	120ms

**Transmit –**

Output Format:	UDP and RTP
Bitrate Range:	1 – 160Mbps
Packets/IP Frame:	1-7 MPEG Packets/IP Frame
Number of Outputs:	3 Mirrored TS – Unicast and/or Multicast

Specifications are subject to change without notice.



## MRD 3187B User Manual

**Dual Input MPEG over IP Receiver/UDP Output – Option 8727**

## General –

RoHS Compliant:	Yes
Connector:	2 – 10/100/1000 Auto-negotiating Base-T RJ-45 Ethernet Port
FEC Receive:	Licensed - Pro MPEG CoP3 SMPTE 2022 Range: L*D<100 1<L<20 4<D<20 Annex B
Multicast Filtering:	Filters based on IP address (Avoids Problematic 30IP – 1 MAC)

## Receive –

Input Format:	UDP, RTP, and RTP with extension headers Multicast and Unicast CBR, VBR, Null Stripped
Receive Capability:	2 simultaneous MPEG over IP transport streams with automatic failover
Buffer size:	5 user configurable settings
Bitrate Range:	1 – 160Mbps
Packets/IP Frame:	1-7 MPEG Packets/IP Frame
IGMP Compatibility:	Version 1, 2, and 3

## Transmit –

Output Format:	UDP
Bitrate Range:	1 – 160Mbps
Packets/IP Frame:	1-7 MPEG Packets/IP Frame
Number of Outputs:	2 Mirrored TS – Unicast

Specifications are subject to change without notice.



---

**Appendix D – Pinout of 8705/8705A, 8708 and 8707A**
**8705/8705A  
DB-15 (RGB / YPbPr)**

Pin	RGB	YPbPr
1	Red	Pr
2	Green	Y
3	Blue	Pb
4		
5		
6	Ground	Ground
7	Ground	Ground
8	Ground	Ground
9		
10	Ground	Ground
11		
12		
13	Horizontal Sync	
14	Vertical Sync	
15		

**8708  
DB-15 (RGB/YPbPr/Composite)**

Pin	RGB	YPbPr	Comp
1	Red	Pr	
2	Green	Y	
3	Blue	Pb	
4			
5	Ground	Ground	Ground
6	Ground	Ground	Ground
7	Ground	Ground	Ground
8	Ground	Ground	Ground
9			Composite
10	Ground	Ground	Ground
11			
12			
13	Horizontal Sync		
14	Vertical Sync		
15			

**8707A  
DB-15 (Audio)**

Pin	Function
1	Chan 1 (Left) +
2	Chan 1 (Right) +
3	Chan 2 (Left) +
4	Chan 2 (Right) +
5	Dolby E data (Digital Output 3)
6	Chan 1 (Left) –
7	Chan 1 (Right) –
8	Chan 2 (Left) –
9	Chan 2 (Right) –
10	NC
11	Ground
12	Ground
13	Ground
14	Ground
15	Dolby E Ground

**Appendix E – Coordinated Universal Time**

-12:00 Eniwetok  
-11:00 Midway  
-10:00 Hawaii  
-09:00 Alaska  
-08:00 Pacific  
-07:00 Mountain  
-06:00 Central  
-05:00 Eastern  
-04:00 Atlantic  
-03:30 Newfoundland  
-03:00 Greenland  
-02:00 Mid-Atlantic  
-01:00 Azores  
**00:00 Greenwich**  
01:00 Amsterdam  
02:00 Athens  
03:00 Baghdad  
03:30 Tehran  
04:00 Abu Dhabi  
04:30 Kabul  
05:00 Ekaterinburg  
05:30 Calcutta  
05:45 Kathmandu  
06:00 Amaty  
06:30 Rangoon  
07:00 Bangkok  
08:00 Beijing  
09:00 Osaka  
09:30 Adelaide  
10:00 Brisbane  
11:00 Magadan  
12:00 Auckland  
13:00 Nuku

## Appendix F – Open Source Software

### The MRD 3187B includes:

- binutils 2.15  
Copyright (c) 2002, 2003 Free Software Foundation, Inc.  
All rights reserved.
- busybox 1.8.2  
Portions of this code are respectively:  
Copyright (c) 1989, 1991 Free Software Foundation, Inc.  
Copyright (c) 1998-2006 Erik Anderson, Rob Landley, and others.  
All rights reserved.
- codelighter 1.5.4  
Copyright (c) 2006, EllisLab, Inc.  
All rights reserved.
- coreutils 5.9.7  
Copyright (c) 1994 – 2005 Free Software Foundation, Inc.  
All rights reserved.
- curl 7.16.2  
Copyright (c) 1996 – 2007, Daniel Stenberg, <daniel@haxx.se>.  
All rights reserved.
- famfamfam 1.3  
Copyright (c) 2004 – 2008 Creative Commons Attribution 2.5 License.  
All rights reserved.
- fcgi 2.4.0  
Copyright (c) 1996 Open Market, Inc.  
All rights reserved.
- gcc 4.1.0  
Copyright (c) 2002, 2003 Free Software Foundation, Inc.  
All rights reserved
- glibc 2.3.6  
Portions of this code are respectively :  
Copyright (c) 1991 Regents of the University of California.  
Copyright (c) 1993 by Digital Equipment Corporation.  
Copyright (c) 1984, Sun Microsystems, Inc.  
Copyright (c) 1991, 1990, 1989 Carnegie Mellon University.  
Copyright (c) 2000, Intel Corporation.  
All rights reserved.
- libxml2 2.6.28  
Copyright (c) 1998 – 2003 Daniel Veillard.  
All rights reserved.
- libxslt 1.1.20  
Portions of this code are respectively:  
Copyright (c) 2001 – 2002 Daniel Veillard.  
Copyright (c) 2001 – 2002 Thomas Broyer, Charlie Bozeman, and Daniel Veillard.  
All rights reserved.
- lighttpd 1.4.15  
Copyright (c) 2004 Jan Kneschke, incremental.  
All rights reserved.
- linux 2.6.15  
Portions of this code are respectively :  
Copyright (c) 1989, 1991 Free Software Foundation, Inc.  
Copyright (c) 2004 – 2005 Intel Corporation.  
All rights reserved.
- linux 2.6.20.7  
Copyright (c) 1989, 1991 Free Software Foundation, Inc.  
All rights reserved.
- log4cpp 0.3.5 rc3  
Copyright (c) 2000 – 2002 LifeLine Networks bv.  
Copyright (c) 2000 – 2002 Bastiaan Bakker.  
All rights reserved.
- MD5.c  
Copyright (c) 1991 – 1992 RSA Data Security, Inc.  
All rights reserved.
- MD5.h  
Copyright (c) 1991 – 1992 RSA Data Security, Inc.  
All rights reserved.
- module\_init\_tools 3.2  
Copyright (c) 1989, 1991 Free Software Foundation, Inc.  
Copyright (c) 2002 Rusty Russell IBM Corporation.  
All rights reserved.
- Mstring.cpp 1.7  
Copyright (c) 2001 – 2004 Jesse L. Lovelace (jesse at aslogicsys dot com).  
All rights reserved.
- newlib 1.15.0  
Portions of this code are respectively:  
Copyright (c) 1994 – 2006 Red Hat, Inc.  
Copyright (c) 1981 – 2000 The Regents of the University of California.  
Copyright (c) 1991 by AT&T.  
Copyright (c) 1998-2001 by Lucent Technologies.  
Copyright (c) 1989, 1990 Advanced Micro Devices, Inc.  
Copyright (c) 1993 C.W. Sandmann.  
Copyright (c) 1992 Eric Backus.  
Copyright (c) by Sun Microsystems, Inc.  
Copyright (c) 1986 HEWLETT-PACKARD COMPANY.  
Copyright (c) 2001 Hans-Peter Nilsson.  
Copyright (c) 1999, 2000, 2001, 2002 Stephane Carrez.  
Copyright (c) 2001 Christopher G. Demetriou.  
Copyright (c) 2002 SuperH, Inc.  
Copyright (c) 1999 Kungliga Tekniska Högskolan (Royal Institute of Technology, Stockholm, Sweden).  
Copyright (c) 2000, 2001 Alexey Zelkin.  
Copyright (c) 1997 by Andrey A. Chernov, Moscow, Russia.  
Copyright (c) 1997 – 2002 FreeBSD Project.  
Copyright (c) 1984, 2000 S.L. Moshier.  
Copyright (c) 1999 Citrus Project.  
Copyright (c) 1998 Todd C. Miller <Todd.Miller@courtesan.com>.  
Copyright (c) 1991 DJ Delorie.  
Copyright (c) 1990 – 1999, 2000, 2001 Free Software Foundation, Inc.  
Copyright (c) 1996 Xavier Leroy (Xavier.Leroy@infia.fr).  
Copyright (c) 1993 Intel Corporation.  
Copyright (c) 1986 HEWLETT-PACKARD COMPANY.  
Copyright (c) 1992, 1993, 1994 Henry Spencer.  
Copyright (c) 2001 Mike Barcroft <mike@FreeBSD.org>.  
Copyright (c) 1999, 2000 Konstantin Chuguev.  
Copyright (c) 2003, Artem B. Bityukiy, SoftMine Corporation.  
Copyright (c) 2001, 2006, IBM, Sony, Toshiba.  
All rights reserved.
- ntpdate 4.0.99g  
Copyright (c) 1996 – 2001 by Software in the Public Interest.  
All rights reserved.
- php 5.2.5  
Copyright (c) 1999 – 2006 The PHP Group.  
All rights reserved.
- redboot 2.0  
Portions of this code are respectively:  
Copyright (c) 2002 Bart Veer.  
Copyright (c) 2000, 2001, 2001 Red Hat, Inc.  
All rights reserved.
- ucd-snmp 4.2.3  
Portions of this code are respectively:  
Copyright 1989, 1991, 1992 by Carnegie Mellon University.  
Copyright 1996, 1998 – 2000 The Regents of the University of California.  
Copyright (c) 2001, Networks Associates Technology, Inc.  
Copyright (c) 2001, Cambridge Broadband Ltd.  
All rights reserved.
- xerces-c –src 2.7.0  
Portions of this code are respectively:  
Copyright (c) 1999 – 2004, The Apache Software Foundation.  
Copyright (c) 1999, IBM Corporation.  
All rights reserved.

## **Appendix G – Warranty**

### **Sencore One-Year Warranty**

Sencore warrants this instrument against defects from any cause, except acts of God and abusive use, for a period of 1 (one) year from date of purchase. During this warranty period, Sencore will correct any covered defects without charge for parts, labor, or recalibration. The warranty registration card (packed with or attached to the unit) must be mailed to the factory within 10 (ten) days of receiving of the product to validate this warranty.

## Appendix H – Support and Contact Information

### Returning Products for Service or Calibration

The MRD 3187B, part of the ATLAS Modulator Receiver Decoder System, is a delicate piece of equipment and needs to be serviced and repaired by Sencore. Periodically it is necessary to return a product for repair or calibration. In order to expedite this process please carefully read the instructions below.

### RMA Number

Before any product can be returned for service or calibration, an RMA number must be obtained. In order to obtain a RMA number, use the following steps:

1. Contact the SENCORE service department by calling 1-800-SENCORE.
2. Let the customer service representative know the following things
  - a. Product name and model number
  - b. Reason for product return
  - c. Contact information
  - d. Serial number of the unit
3. Get the RMA number and shipping information from the customer service representative.

### Shipping the Product

Once an RMA number has been issued, the unit needs to be packaged and shipped back to Sencore. It's best to use the original box and packaging for the product but if this not available, check with the customer service representative for the proper packaging instructions.

*Note: DO NOT return any power cables or accessories unless instructed to do so by the customer service representative.*

**Contact Information**

Please address all correspondence to the following:

**SENCORE Inc.**  
**3200 Sencore Drive**  
**Sioux Falls, S.D.**  
**57107**  
**USA**

**Tel: 1-800-SENCORE**  
**(736-2673)**

**Tel: (605)-339-0100**

**Fax: (605)-339-0317**

**www.SENCORE.com**

**E-mail: mail@SENCORE.com**

