


O P E R A T I N G A N D S E R V I C E M A N U A L

THIS MANUAL CONTAINS A
SUPPLEMENT FOR A SPECIAL
MODIFICATION TO THE
INSTRUMENT.
SEE INSIDE COVER.

0-560157

**REFLECTION-
TRANSMISSION
TEST UNIT**

8743A

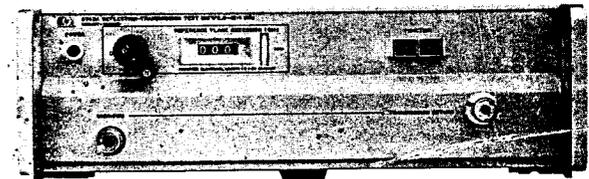

HEWLETT  PACKARD



OPERATING AND SERVICE MANUAL

MODIFICATIONS

S-PARAMETER TEST SET
8743A-H23

SERIAL NO. PREFIX
1702A AND ABOVE

MODIFICATION PART NO.
08743-90035
APRIL 1978
REV. I - FEBRUARY 1979

USE THIS MODIFICATION
WITH MANUAL PART NO.
08743-90010
PRINTED: JULY 1972

0-560145R

INTRODUCTION:

This Modification describes the differences in the 8743A-H23 S-Parameter Test Set. In addition, it describes the manual changes necessary to document the instrument.

DESCRIPTION:

The Model 8743A-H23 S-Parameter Test Set is a standard 8743A which has been tested to operate to 18 GHz and also provides 10 dB additional dynamic range for transmission measurements and provides an additional 10 dB isolation between the UNKNOWN and TEST ports for reflection measurements. The 8743A-H23 also provides a variable 0 dB to 70 dB attenuation to the UNKNOWN port by means of an internal programmable attenuator. Attenuation is achieved by the external closure of a switch (such as the 59306A HP-IB Relay Actuator).

MANUAL CHANGES NECESSARY TO DOCUMENT THE HP 8743A-H23:

Page 1-1, Paragraph 1-2:

Change Frequency Range to 2.0-18.0 GHz

Page 1-1, Table 1-1:

Change Frequency Range to 2.0-18.0 GHz

Add to Reflection Coefficient, UNKNOWN port:

12.4 to 18.0 GHz \leq 0.20 (VSWR 1.5)

Add to Reflection Coefficient:

Transmission Return Port:

Reflection Measurement: 12.4-18.0 GHz \leq .2 (VSWR 1.5)

Transmission Measurement: 12.4-18.0 GHz \leq .23 (VSWR 1.6)

Add to Coupler Directivity:

2.0-12.4 GHz \geq 30 dB

12.4-18.0 GHz \geq 18 dB typically 20 dB

Page 5-3, Table 5-1:

Change: A5, A6, A7 to HP Part No. 5080-0290, Switch Tree (Matched set of three)

Change: DC1 to HP Part No. 5080-0288, Coupler Assembly, Test

PRINTED IN U.S.A.

MANUAL CHANGES (Cont'd):

Page 5-3, Table 5-1 Cont.:

Change: DC2 to HP Part No. 5080-0299, Coupler Assembly, Reference

Add: J101 HP Part No. 1251-0143, Connector, 14 Pin Female

Add: A101 33321H-C03 Attenuator, 70 dB programmable

Change: W3 to HP Part No. 08746-20031, Cable, Patch Line

Change: W6 to HP Part No. 08743-20040, Cable, Coax Line

Delete: W8

Add: W101 HP Part No. 08743-20049, Cable Assembly, CPLR/ATTEN.

Add: W102 HP Part No. 08743-20050, Cable Assembly, ATTEN/CPLR

Add: W103 HP Part No. 08743-60040, Cable Assembly, Attenuator

Change: Rear Panel to HP Part No. 08743-00029

Add: Bracket, Attenuator, HP Part No. 08743-00030

Add: HP P/N 1251-0142, Connector, 14 Pin Male

Page 6-3, Figure 6-4:

Change to Figure 1

Page 6-4, Figure 6-5:

Change to Figure 2

Page 6-5, Figure 6-6:

Change to Figure 3

Add Figure 4.

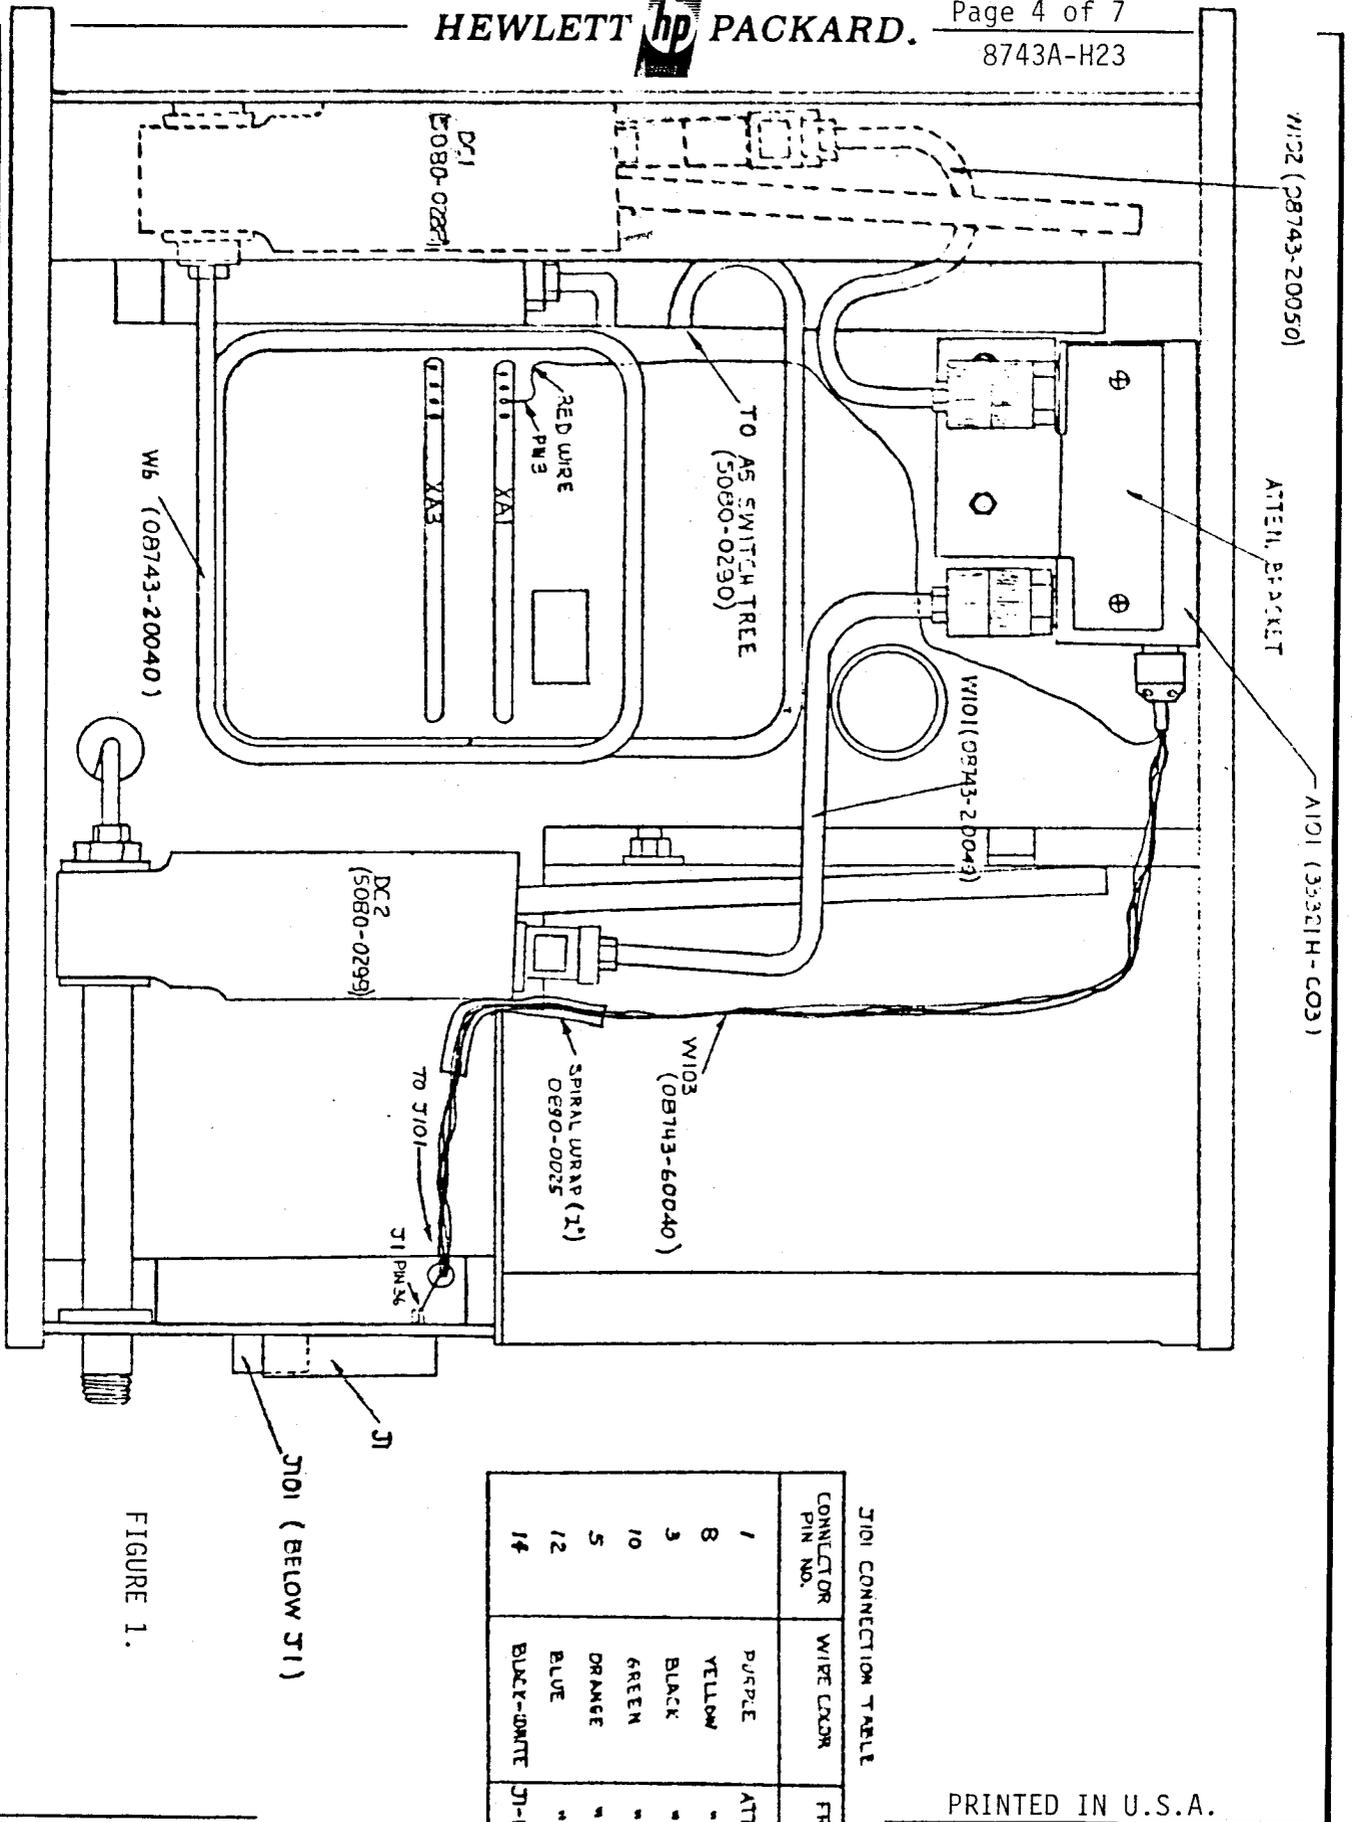


FIGURE 1.

J101 CONNECTION TABLE

CONNECTOR PIN NO.	WIRE COLOR	FROM
1	PURPLE	ATTEN
8	YELLOW	"
3	BLACK	"
10	GREEN	"
5	ORANGE	"
12	BLUE	"
14	BLACK-WHITE	J1-PH36

PRINTED IN U.S.A.

NIA, 95404, U.S.A.


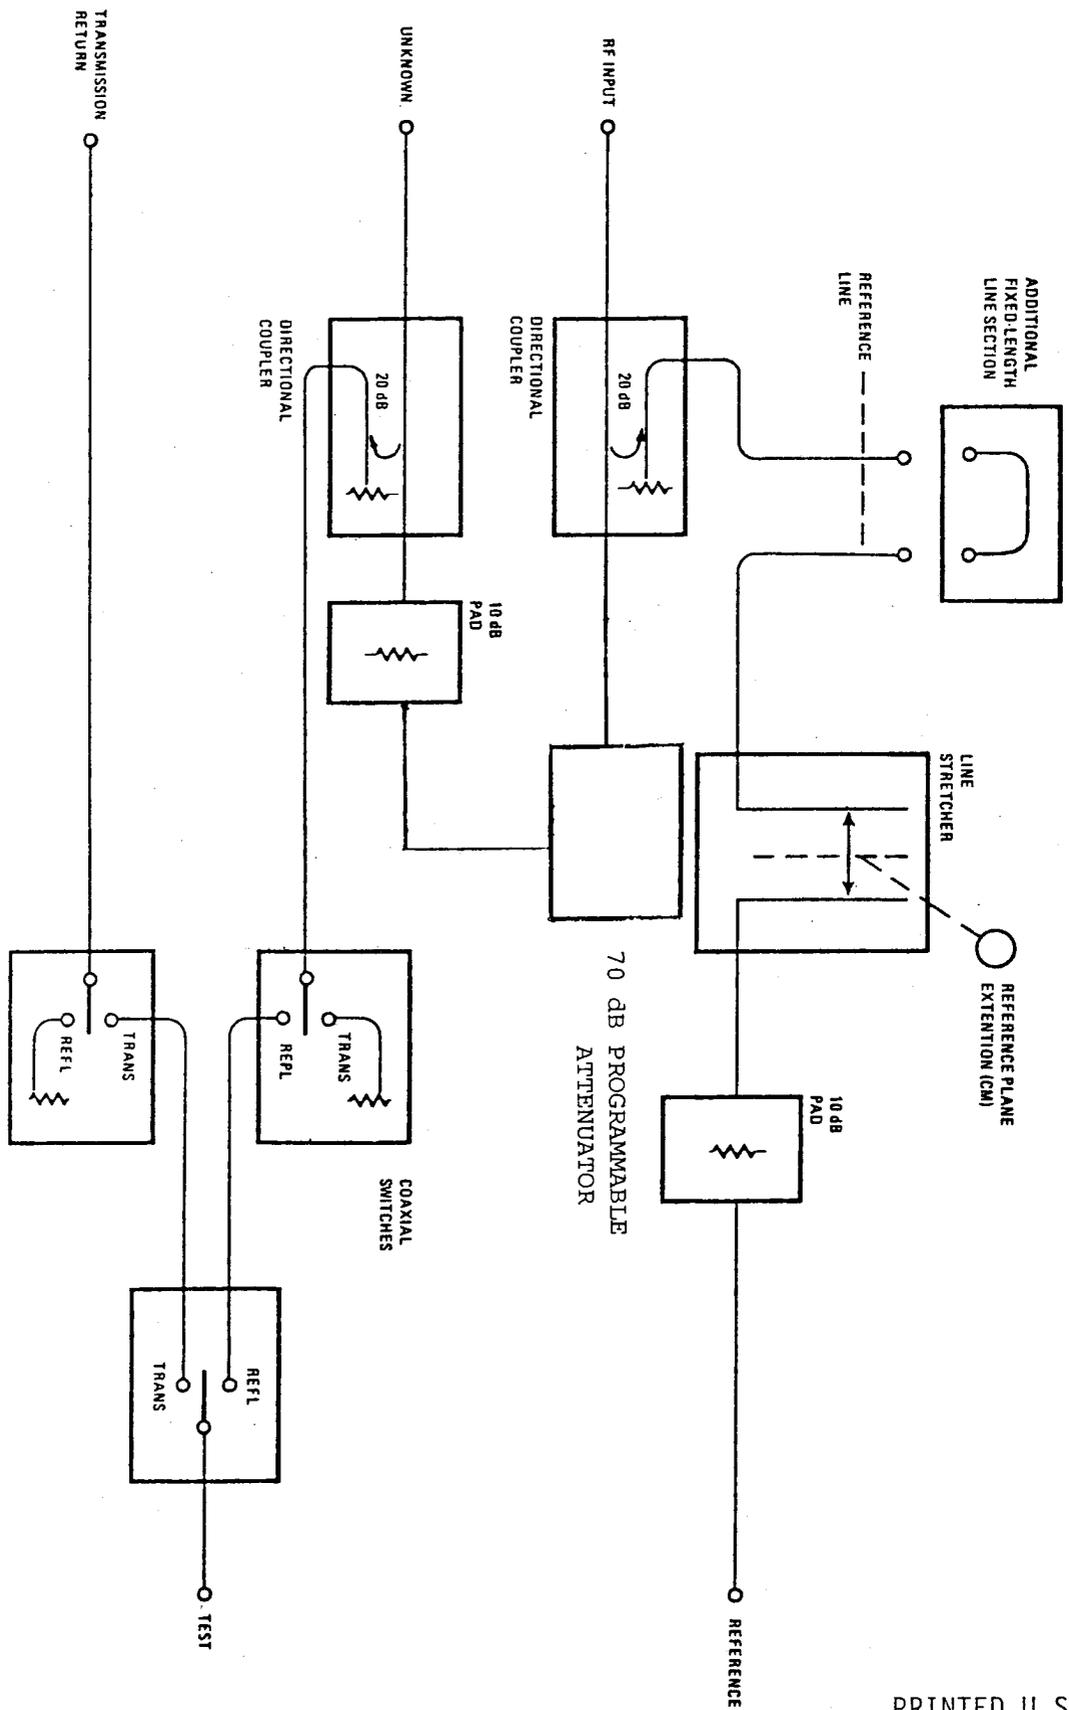


FIGURE 2. SIMPLIFIED RF SCHEMATIC DIAGRAM

1-560150SR

PRINTED U.S.A.

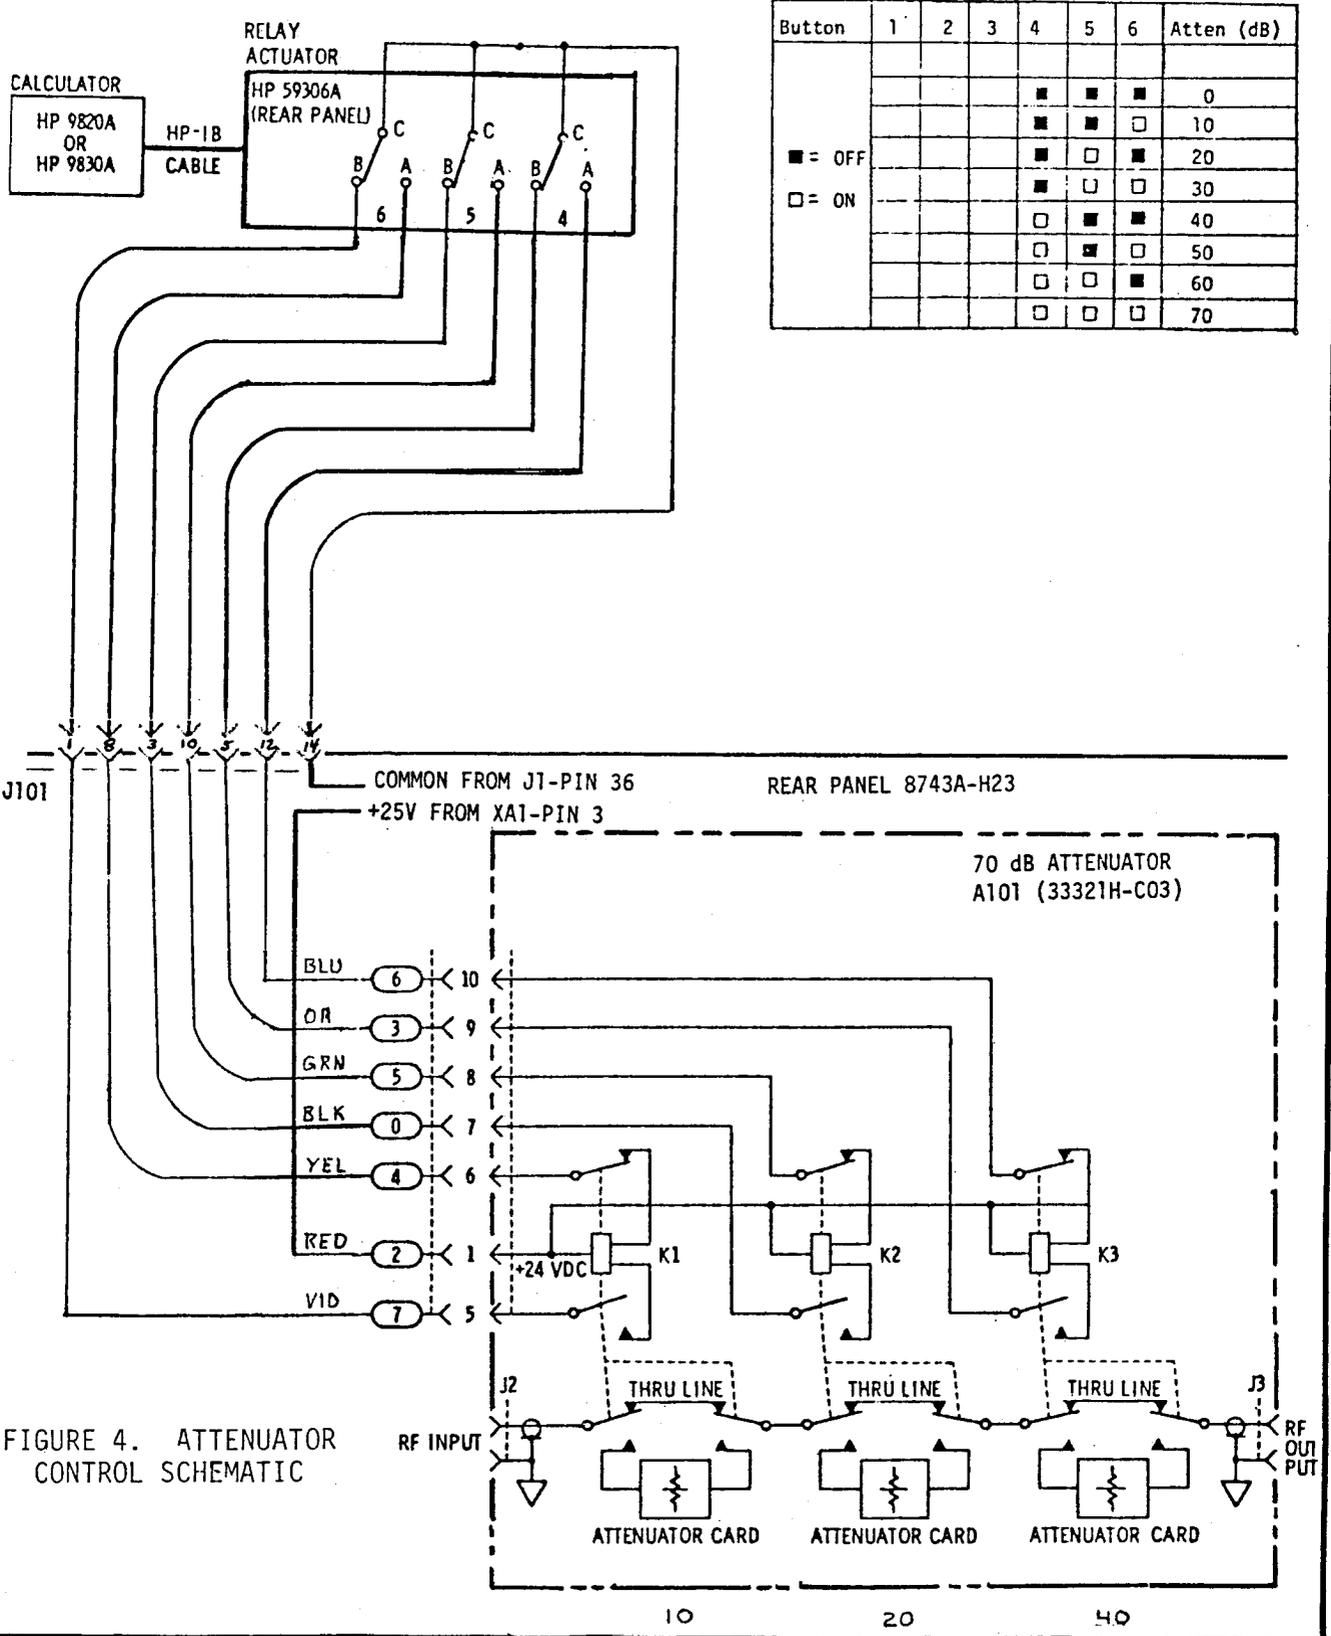

Button	1	2	3	4	5	6	Atten (dB)
				■	■	■	0
				■	■	□	10
■ = OFF				■	□	■	20
□ = ON				■	□	□	30
				□	■	■	40
				□	□	□	50
				□	□	■	60
				□	□	□	70

FIGURE 4. ATTENUATOR CONTROL SCHEMATIC

1-560150SR

SAFETY

This product has been designed and tested according to International Safety Requirements. To ensure safe operation and to keep the product safe, the information, cautions, and warnings in this manual must be heeded. Refer to Section I for general safety considerations applicable to this product.

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. However, warranty service for products installed by HP and certain other products designated by HP will be performed at Buyer's facility at no charge within the HP service travel area. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses.

For products returned to HP for warranty service, Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

REFLECTION-TRANSMISSION TEST UNIT 8743A

SERIALS PREFIXED: 1226-

This manual applies directly to HP Model 8743A Reflection-Transmission Test Units having serial prefix number 1226-.

SERIAL PREFIXES NOT LISTED

For serial prefixes above 1226, a "Manual Changes" sheet is included with this manual. For serial prefixes below 1226, refer to the Appendix.

©COPYRIGHT

HEWLETT-PACKARD COMPANY

1976

1400 FOUNTAIN GROVE PARKWAY, SANTA ROSA, CALIFORNIA, 95404, U.S.A.

MANUAL PART NO. 08743-90010
MICROFICHE PART NO. 08743-90011

Printed: JULY 1972


HEWLETT  PACKARD

TABLE OF CONTENTS


Section		Page	Section		Page
I	GENERAL INFORMATION.....	1-1	3-6.	Description of Panel Features	3-1
	1-1. Description.....	1-1	3-8.	Operating Precautions.....	3-1
	1-5. Accessories Furnished.....	1-1	3-9.	Maximum RF Power.....	3-1
	1-7. Rack-Mounting Kit.....	1-1	3-11.	Measurement Procedures....	3-1
	1-9. Thirty-six Pin Male Connector.....	1-1	3-13.	Increased Accuracy for Reflection Measurements by Minimizing Directivity Errors.....	3-12
	1-11. Accessories Available.....	1-2	3-16.	Increased Accuracy for Transmission Measure- ments by Reducing Mis- match Ambiguity.....	3-12
	1-12. Flexible Arm.....	1-2	3-18.	Remote Operation.....	3-13
	1-14. Attenuator.....	1-2	3-20.	Care of APC-7 Connectors..	3-13
	1-16. APC-7 Short.....	1-2	3-23.	Contact Replacement	3-13
	1-18. Complementary Equipment	1-2	3-28.	Coupling Mechanisms.....	3-16
	1-19. Model 8410A Network Analyzer.....	1-2	3-32.	Power Switch Lamp Replacement.....	3-16
	1-21. Signal Source.....	1-2	IV	MAINTENANCE	4-1
	1-23. Instruments Covered by Manual.	1-2	4-1.	Introduction	4-1
II	INSTALLATION.....	2-1	4-3.	RF Troubleshooting	4-1
	2-1. Incoming Inspection.....	2-1	4-5.	Performance Test Procedures	4-1
	2-3. Repackaging for Shipment.....	2-1	V	REPLACEABLE PARTS.....	5-1
	2-4. Using Original Packaging.....	2-1	5-1.	Introduction	5-1
	2-8. Using Other Packaging.....	2-1	5-3.	Ordering Information	5-1
	2-10. Preparation For Use.....	2-1	VI	SCHEMATIC DIAGRAMS	6-1
	2-11. Power Requirements.....	2-1	6-1.	Introduction	6-1
	2-13. 115/230 Volt Operation.....	2-1			
	2-16. Power Cable	2-1			
	2-19. Bench Operation	2-1			
	2-21. Rack Mounting	2-1			
III	OPERATION	3-1			
	3-1. Introduction	3-1			

LIST OF ILLUSTRATIONS

Number	Title	Page	Number	Title	Page
1-1.	Model 8743A Reflection-Transmission Test Unit	1-0	4-1.	Performance Test	4-2
3-1.	Front Panel Features	3-2	4-2.	Insertion Loss Troubleshooting	4-7
3-2.	Rear Panel Features	3-3	4-3.	Position of Outer Conductor Washer ..	4-8
3-3.	Reflection Measurement, Using Net- work Analyzer with 8413A Display ..	3-4	6-1.	General Information on Schematic Diagrams	6-1
3-4.	Transmission Measurement, Using Network Analyzer with 8413A Display Unit	3-6	6-2.	Schematic Diagram Notes	6-2
3-5.	Reflection Measurement, Using Network Analyzer with 8414A Polar Display Unit	3-8	6-3.	8743A Component Identification, Top View	6-3
3-6.	Transmission Measurement, Using Network Analyzer with 8414A Polar Display Unit	3-10	6-4.	8743A Component Identification, Bottom View	6-3
3-7.	Measured Reflection Coefficient	3-12	6-5.	Simplified RF Schematic Diagram	6-4
3-8.	Locus of Measured Reflection with Load is Moved	3-12	6-6.	RF Schematic Diagram	6-5
3-9.	Locus of Measured Reflection with Directivity Cancelled	3-12	6-7.	Relay Driver Input Circuit Talking ... Schematic Diagram	6-6
3-10.	Typical Transistor Remote Control Circuit	3-13	6-8.	Relay Driver Assy Component Diagram	6-7
3-11.	APC-7 Connectors	3-14	6-9.	Relay Driver Assy Component Identification	6-8
3-12.	Pushbutton Selector Bulb Replacement	3-15	6-10.	Switch Assy Component Identification .	6-8
			6-11.	Relay Driver Assy Schematic Diagram	6-9
			6-12.	Power Supply Assy Component Identification	6-10
			6-13.	Power Supply Schematic Diagram	6-11
			A-1.	Pushbutton Lamp Replacement	A-2


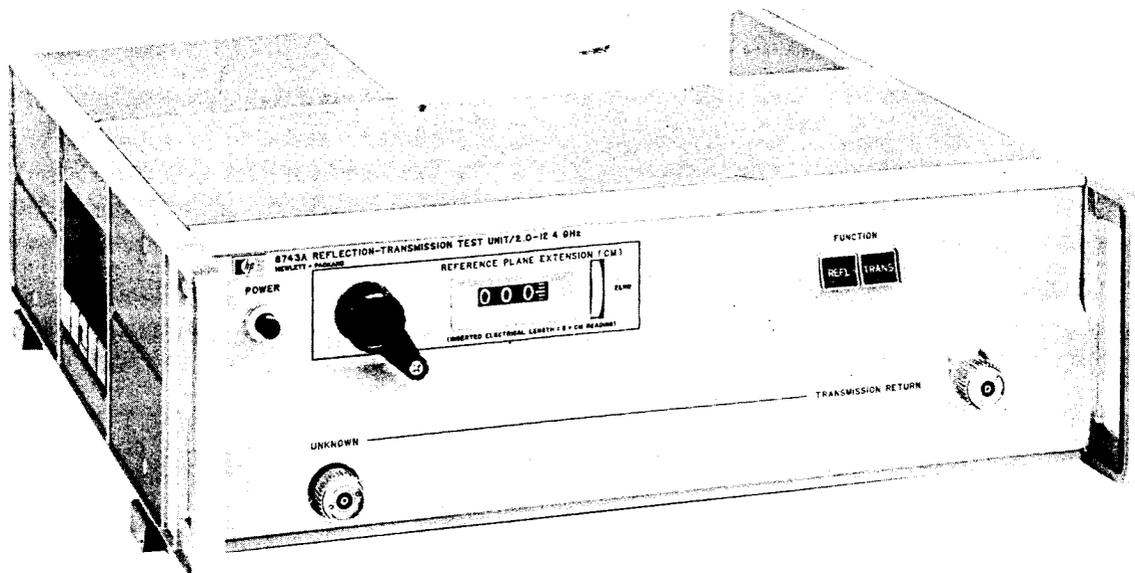


8743A

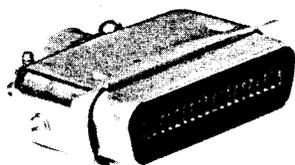

36 PIN
CONNECTOR

POWER CABLE

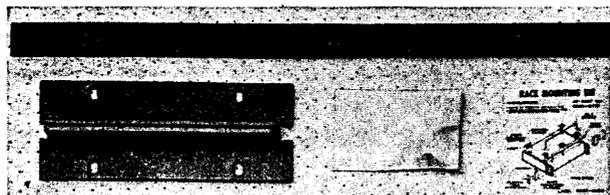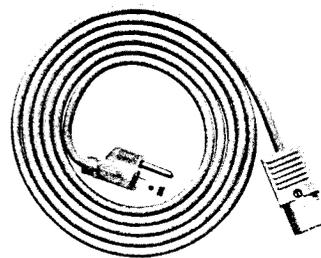

RACK MOUNTING KIT

Figure 1-1. MODEL 8743A REFLECTION-TRANSMISSION TEST UNIT.

LIST OF TABLES

Number	Title	Page	Number	Title	Page
1-1.	Specifications.....	1-1	4-1.	Recommended Test Equipment for Performance Test Procedure.....	4-1
3-1.	Contact Closures for Remote Operation.....	3-13	5-1.	Reference Designation Index.....	5-2
3-2.	Signal Requirements for Remote Operation.....	3-13			

1-11. ACCESSORIES AVAILABLE.**1-12. FLEXIBLE ARM.**

1-13. The Model 11605A Flexible Arm is a combination of three rotary air lines and three swivel joints. It combines the phase stability of rigid line with the flexibility of cable so that devices with any port geometry can be connected to the 8743A.

1-14. ATTENUATOR.

1-15. A 50-ohm coaxial attenuator is recommended for transmission measurements. An attenuator connected between the output of the device under test and the HP 11605A Flexible Arm reduces the ambiguity due to mismatch between the 11605A, 8743A, and 8411A. A 10-dB low reflection attenuator, such as a HP 8492A Option 10, reduces this ambiguity to essentially that of the attenuator ($VSWR \leq 1.25$). In addition to reducing error due to mismatch, the 10-dB attenuator makes the test channel power level during calibration the same for transmission and reflection. Also, the combined electrical lengths of the 8492A and 11605A make the electrical length of the test channel in the transmission mode nearly equal to its length in the reflection mode. This means, that since the difference is small, it is possible to calibrate for one mode of operation and switch to the other without recalibrating.

1-16. APC-7 SHORT.

1-17. The Model 11565A APC-7 Short is useful for establishing reflection measurement, phase and magnitude, reference.

1-18. COMPLEMENTARY EQUIPMENT.**1-19. MODEL 8410A NETWORK ANALYZER.**

1-20. The 8410A Network Analyzer measures relative amplitude and phase of two RF input signals. The instrument is capable of single or swept frequency

measurements, in the range of 0.11 to 12.4 GHz. Two plug-in display units are available. The 8413A plug-in unit displays relative amplitude and phase data on a meter. Phase and amplitude output signals allow display of swept signals on an oscilloscope or X-Y recorder. The 8414A plug-in unit displays relative amplitude and phase data in polar coordinates on a 5-inch CRT for either swept or CW mode of measurement.

1-21. SIGNAL SOURCE.

1-22. HP 8690 Sweep Oscillator main frames with 8692B, 8693B and 8694B RF plug-in units provide swept frequency coverage of the entire 8743A frequency range. These oscillators have features which make them especially compatible with the 8410A Network Analyzer system. For example, the sweep reference voltage output permits the 8410A phase lock system to track the fastest sweeps for flicker-free oscilloscope displays. Also, the between-sweep pause at the start frequency enables the Network Analyzer to phase lock solidly before a sweep begins.

1-23. INSTRUMENTS COVERED BY MANUAL.

1-24. Each Model 8743A carries a two-section, eight-digit serial number (000-00000). The first three digits of the number are a prefix. The contents of this manual apply directly to the Model 8743A which has the same serial number prefix(es) as those listed after SERIALS PREFIXED on the title page.

1-25. Revisions required to adapt this manual to other serial number prefixes are given in a yellow-sheet Manual Changes insert, supplied with the manual. For information concerning serial number prefixes not listed on the title page or in an insert, contact the nearest Hewlett-Packard office listed at the rear of this manual.

SECTION II

INSTALLATION

2-1. INCOMING INSPECTION.

2-2. Inspect the instrument for shipping damage as soon as it is unpacked. Check that all accessories listed in Paragraph 1-7 have been included. Check for broken knobs and connectors; inspect cabinet and panel surfaces for dents and scratches. If the instrument is damaged in any way, or fails to operate properly, notify carrier and your nearest Hewlett-Packard Sales and Service Office. For assistance of any kind, including instruments under warranty, contact the nearest Hewlett-Packard Sales Office listed at the back of this manual.

2-3. REPACKAGING FOR SHIPMENT.

2-4. USING ORIGINAL PACKAGING.

2-5. The same containers and materials used in factory packaging can be obtained through the Hewlett-Packard offices listed at the rear of this manual. Remove the rear-panel coaxial link, wrap it separately and include in shipping container.

2-6. If the Model 8743A is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to assure careful handling.

2-7. In any correspondence, refer to the instrument by model number and full serial number.

2-8. USING OTHER PACKAGING.

2-9. The following general instructions should be used when repackaging with commercially-available materials:

a. Wrap the 8743A and the rear-panel coaxial link separately in heavy paper or plastic. (If shipping to a Hewlett-Packard service office or center, attach a tag indicating the type of service required, the return address, model number, and full serial number.)

b. Use a strong shipping container. A double-wall carton made of 350 pound test material is adequate.

c. Use enough shock-absorbing material (3 to 4 inch layer) around all sides of the instrument to provide firm cushion and prevent movement inside the container. Protect the control panel with cardboard.

d. Seal the shipping container securely, and mark it FRAGILE to assure careful handling.

e. In any correspondence refer to the instrument by model number and full serial number.

2-10. PREPARATION FOR USE.

2-11. POWER REQUIREMENTS.

2-12. The Model 8743A requires a power source of 115 or 230 volts $\pm 10\%$, 50 to 1000 Hz, single phase that can supply approximately 20 watts.

2-13. 115/230 VOLT OPERATION.

2-14. A two-position slide switch on the rear panel of the Model 8743A permits operation from either a 115- or 230-volt power source. The number showing on the switch slider indicates the voltage for which the instrument is connected. The correct line fuse rating for each line voltage is marked on the plate adjacent to the fuse.

2-15. To prepare the Model 8743A for operation, position the 115-230 volt switch so that the number showing on the slider corresponds to the available line voltage, and install a line fuse of correct rating. "Slo-blo" fuses should be used.

CAUTION

To avoid damage to the instrument, set the 115-230 switch to the line voltage to be used before connecting the power cable.

2-16. POWER CABLE.

2-17. To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that instrument panels and cabinets be grounded. Accordingly, the Model 8743A is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds panel and cabinet. The offset pin of the three-prong connector is the grounding pin.

2-18. To preserve the protection feature when operating the Model 8743A from a two-contact outlet, use a three-prong to two-prong adapter (HP part number 1251-0048), and connect the green wire on the adapter to ground.

2-19. BENCH OPERATION.

2-20. The Model 8743A cabinet has plastic feet and a foldaway tilt stand for convenience in bench operation. The stand inclines the instrument enough to make the panel features easier to see. The plastic feet provide clearance for air circulation and make the Model 8743A self-aligning when stacked on other Hewlett-Packard full rack-width modular instruments.

2-21. RACK MOUNTING.

2-22. All necessary hardware and instructions are contained in the supplied rack-mounting kit (HP part number 5060-0775). Care must be taken to insure that the ambient operating temperature does not exceed 55°C (140°F).

SECTION III

OPERATION

3-1. INTRODUCTION.

3-2. The combination of the Model 8743A Reflection-Transmission Test Unit with the Model 11605A Flexible Arm, a signal source, and a compatible phase-amplitude ratio indicator, such as the HP Model 8410A Network Analyzer, makes up a system for measuring reflection and transmission, phase and magnitude, from 2.0 to 12.4 GHz.

3-3. The microwave circuit for a reflection or transmission measurement is set up by pressing a front panel pushbutton or with remote contact closures.

3-4. A calibrated line stretcher with a digital indicator is used to equalize the electrical length of the test and reference channels for initial phase calibration. A thumbwheel allows the digital indicator to be set to zero or to any desired reference. For reflection measurements, in cases where the measurement plane is not to be at the UNKNOWN port, the line stretcher can be adjusted to extend the measurement plane up to 15 cm beyond the UNKNOWN port. For transmission measurements, the line stretcher can be used to determine the total electrical length (up to 30 cm) of the device under test. For either function, additional line may be installed in place of the removable rigid coax link (REFERENCE LINE) on the rear panel.

3-5. A special recess for the HP 8410A Network Analyzer's harmonic frequency converter permits

direct connection to the 8743A with no increase in package dimensions.

3-6. DESCRIPTION OF PANEL FEATURES.

3-7. Front and rear panel controls, connectors, and indicators are described in Figures 3-1 and 3-2. In these figures the numbers on the panel illustrations match the description numbers.

3-8. OPERATING PRECAUTIONS.

3-9. MAXIMUM RF POWER.

3-10. Do not apply more than 2 watts of RF power to the rear-panel RF INPUT. Power in excess of 2 watts may damage the internal directional couplers. When making transmission measurements using the 8410A Network Analyzer, do not apply more than 50 mW to the 8743A TRANSMISSION RETURN port. More than 50 mW may damage the 8411A Harmonic Frequency Converter.

3-11. MEASUREMENT PROCEDURES.

3-12. Procedures for making transmission and reflection measurements using the HP 8743A with the HP 8410A Network Analyzer are included in Figures 3-3 through 3-6.

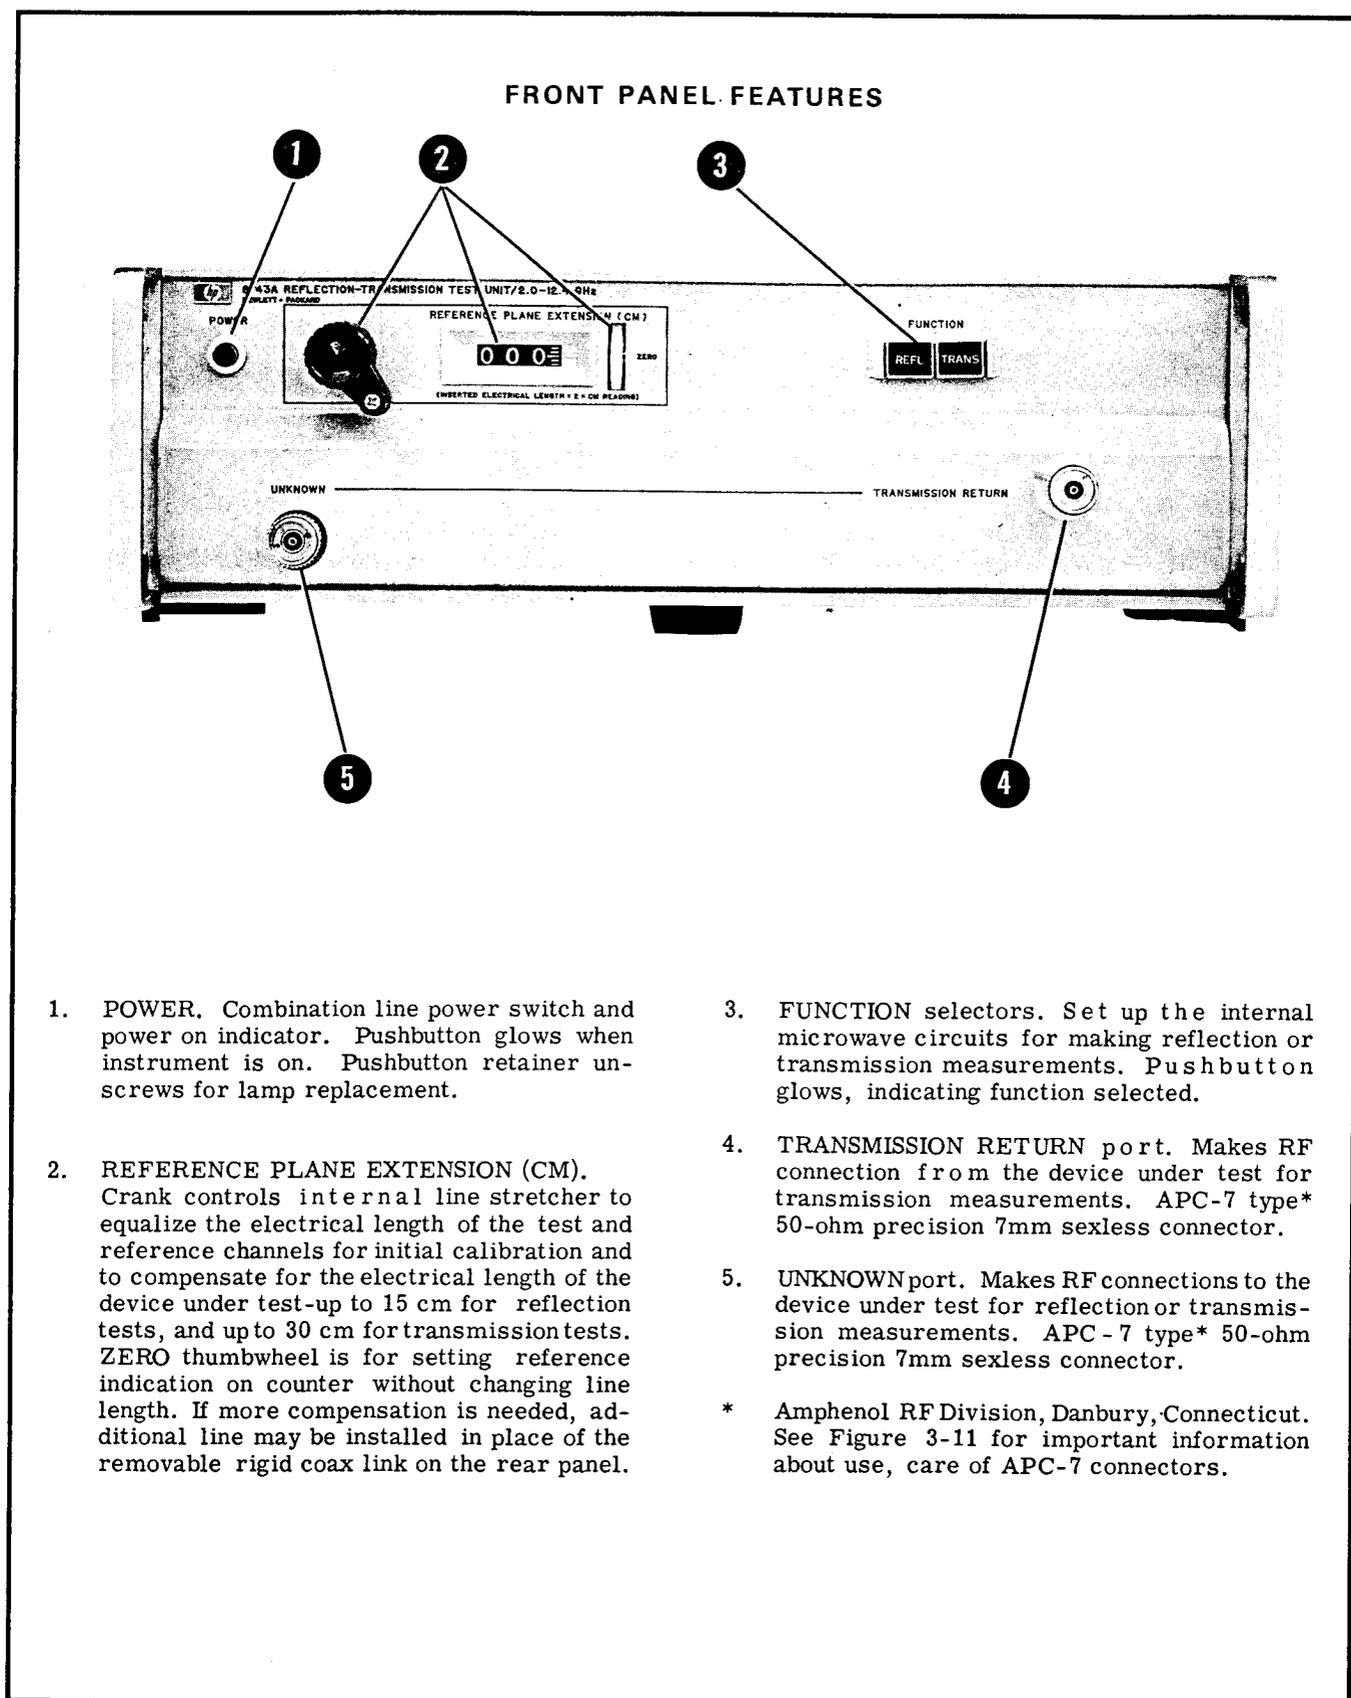


Figure 3-1. Front Panel Features

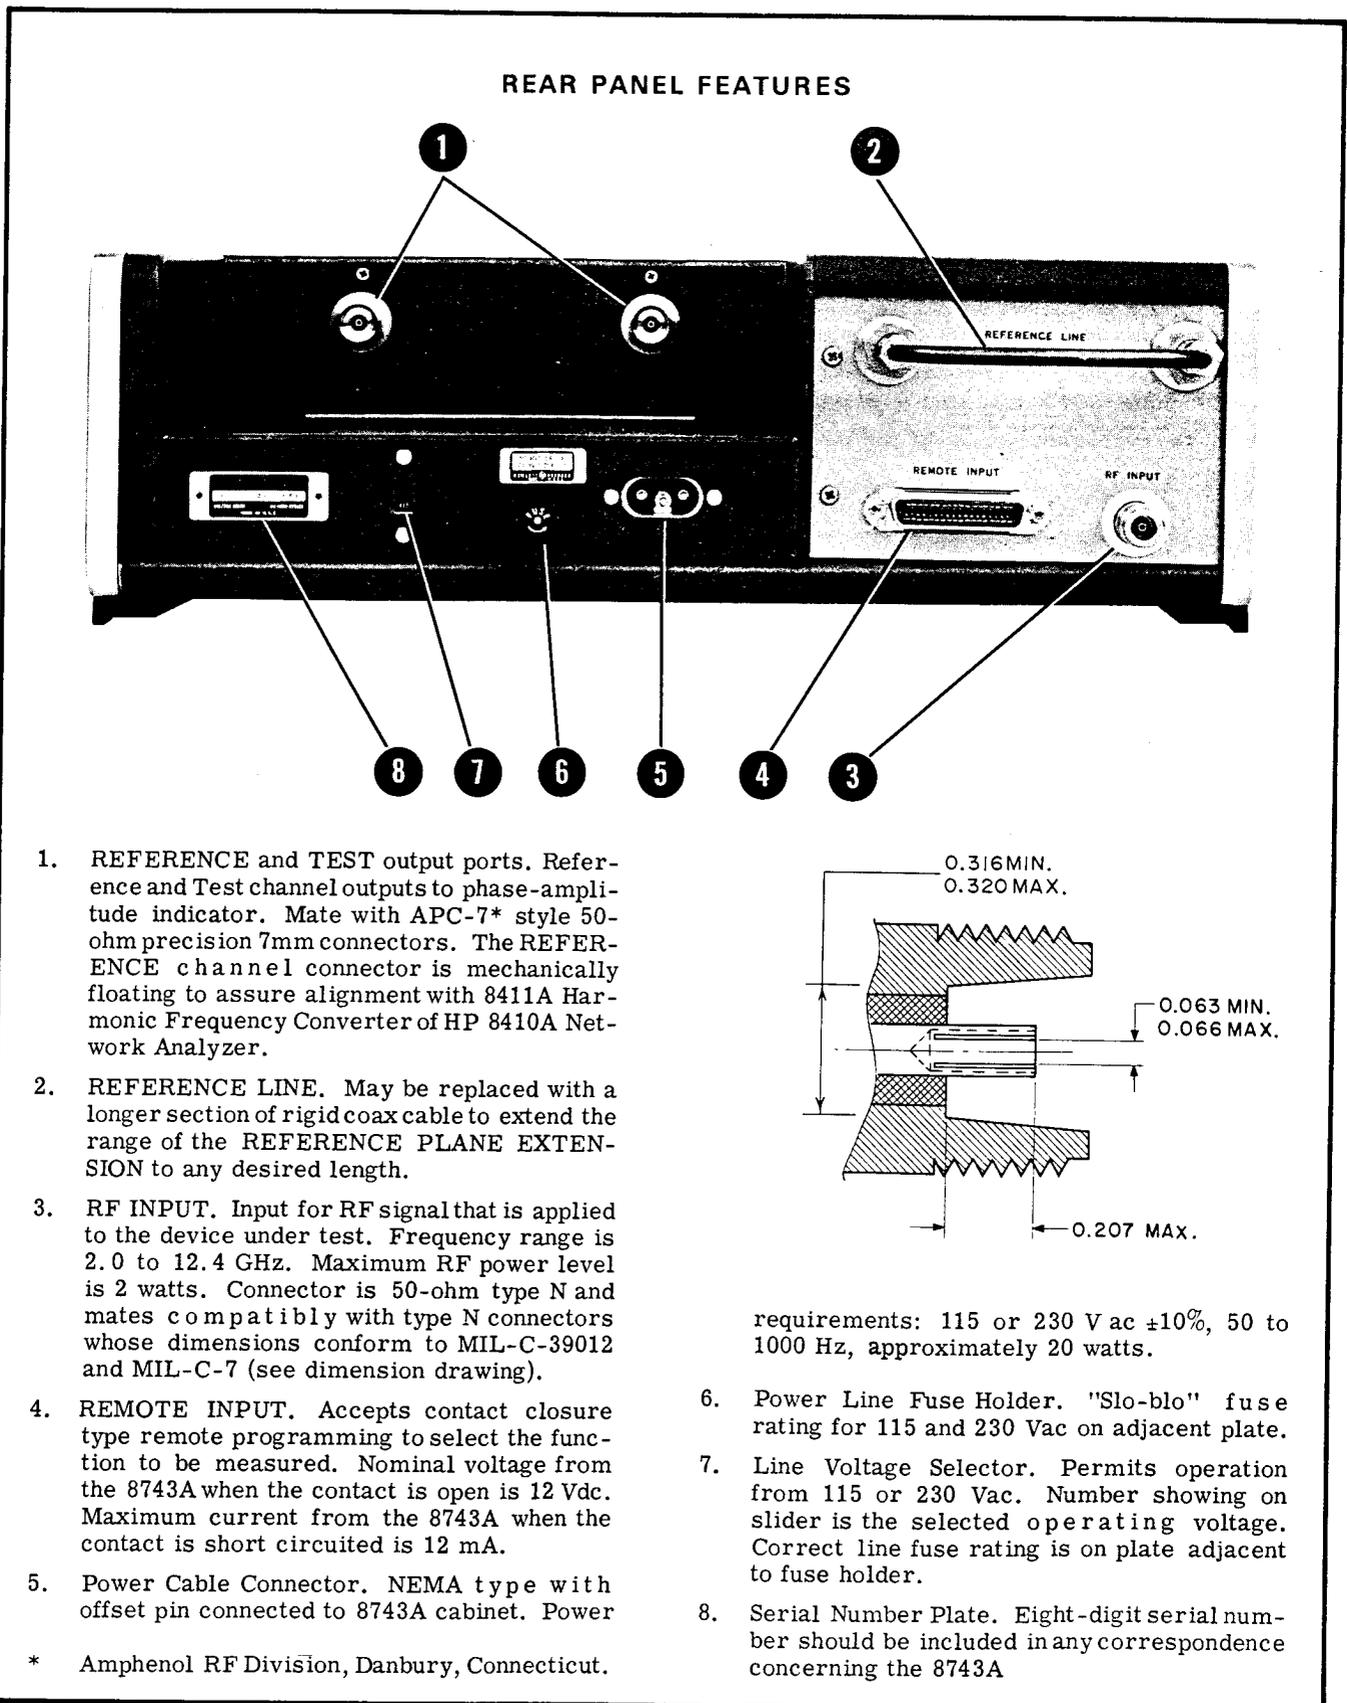


Figure 3-2. Rear Panel Features

REFLECTION MEASUREMENT

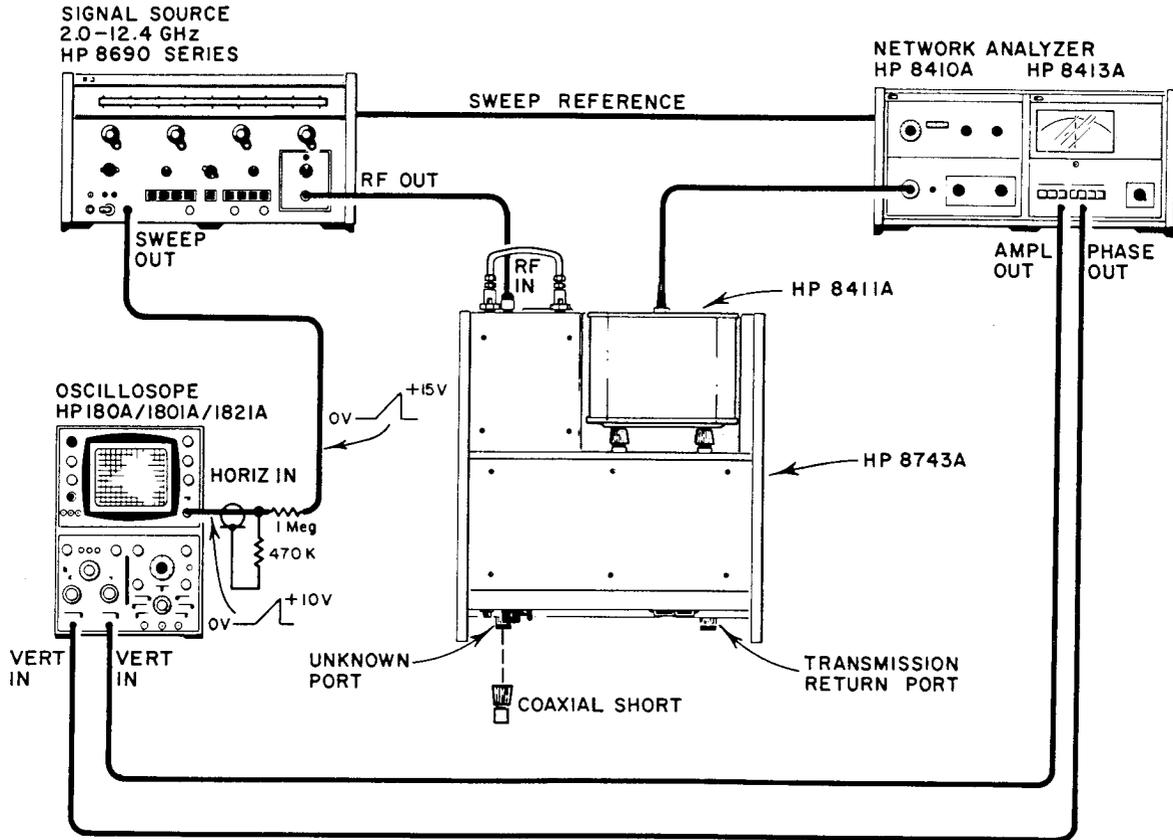


Figure 3-3. Reflection Measurement, Using Network Analyzer with 8413A Display Unit. (Sheet 1 of 2)

CALIBRATION

DESCRIPTION. Calibration consists of adjusting the 8743A REFERENCE PLANE EXTENSION to obtain equal reference and test channel electrical lengths and obtaining reference, magnitude and phase, indications using a termination of known magnitude and phase angle.

PROCEDURE.

1. Connect equipment as shown in setup.
2. Connect a coaxial short such as the HP 11565A to the 8743A UNKNOWN port and depress the REFL pushbutton.
3. Adjust 8413A phase offset control for 180° offset (either polarity).
4. Set the Sweep Oscillator to automatic sweep. Adjust the Sweep Oscillator and Network Analyzer controls to phase lock the Network Analyzer over the frequency band of interest.
5. Adjust the oscilloscope to display the swept phase output from the 8413A.
6. Obtain equal reference and test channel electrical lengths by adjusting the REFERENCE PLANE EXTENSION for a horizontal phase display on the oscilloscope. If the plane of measurement is to be extended beyond the plane of the short, the digital counter should be set to zero so that it can be used to set the required extension accurately. A convenient way to do this is as follows:
 - a. Adjust REFERENCE PLANE EXTENSION crank until counter reads all zeros.
 - b. Hold thumbwheel to retain zero indication and readjust REFERENCE PLANE EXTENSION for a horizontal display on the oscilloscope.
7. For swept-frequency measurements, adjust the oscilloscope display as follows:
 - a. Disconnect oscilloscope vertical input from 8413A AMPLITUDE channel, to simulate zero volts dc from 8413A. Note trace position.
 - b. Reconnect vertical input and adjust 8410A test channel gain and amplitude vernier controls so that the average of the trace falls on the zero trace position noted in step (a) above.
 - c. Adjust oscilloscope vertical position for a convenient amplitude reference.
 - d. Disconnect oscilloscope vertical input from 8413A PHASE channel, to simulate zero volts dc from 8413A. Note trace position.
8. To calibrate for single - frequency measurements, perform the following:
 - a. Set the Sweep Oscillator for single-frequency operation.
 - b. Adjust the 8410A PHASE VERNIER for a zero degree indication on the 8413A.
 - c. Adjust 8410A test channel gain and amplitude vernier controls for a 0 dB indication on the 8413A.
- e. Reconnect vertical input and adjust 8410A phase vernier control so that the average of the trace falls on the zero trace position noted in step (d) above.
- f. Adjust oscilloscope vertical position for a convenient phase reference.

NOTE

Calibration for greater accuracy is discussed in Paragraph 3-14 and 3-15.

MEASUREMENT.

1. Remove the coaxial short and connect the device to be tested to the 8743A UNKNOWN port.
2. Return the 8413A phase offset to zero.
3. For swept - frequency measurements, read magnitude and phase as follows:
 - a. For magnitude, note 8410A test channel gain settings. Increase test channel gain to return oscilloscope display to reference obtained during calibration. The difference in test channel gain settings is the reflection magnitude in return loss¹.
 - b. For phase, adjust oscilloscope vertical sensitivity and position controls to view the swept - phase display of the device under test. Use the calibrated 8413A output (10 mV/degree) and the oscilloscope vertical calibration to determine phase angle.
4. For single - frequency measurements, read magnitude and phase as follows:
 - a. For magnitude, note 8410A test channel gain settings. Increase test channel gain to return the 8413A meter indication to zero. The difference in test channel gain settings is the reflection magnitude in return loss.¹
 - b. For phase, adjust the 8413A phase offset for an on scale meter indication on the most sensitive scale. The phase angle is the algebraic sum of phase offset and meter indication.

$$^1 |\rho| = \frac{1}{\text{Log}^{-1}(0.05 \times \text{Return Loss})}$$

Figure 3-3. Reflection Measurement, Using Network Analyzer with 8413A Display Unit. (Sheet 2 of 2)

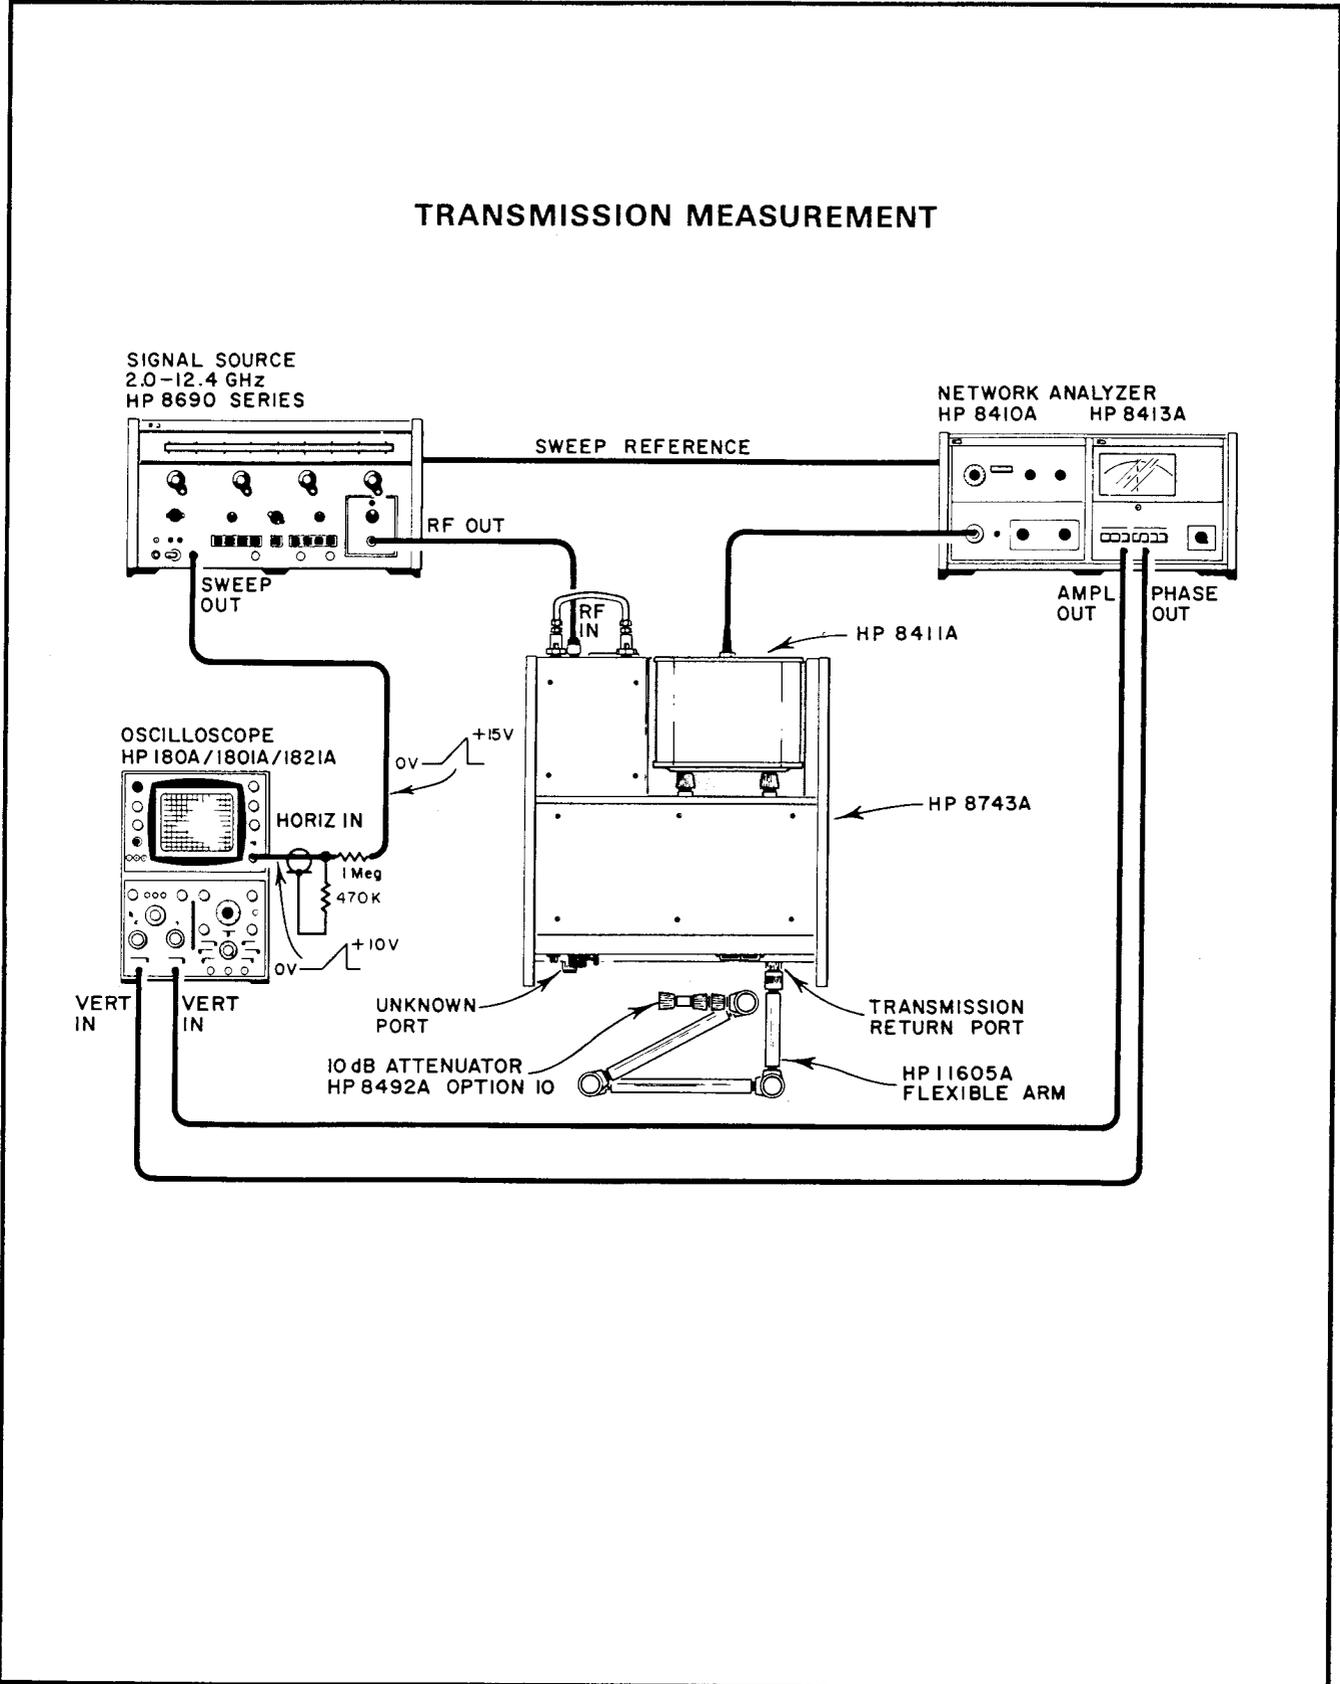


Figure 3-4. Transmission Measurement, Using Network Analyzer with 8413A Display Unit (Sheet 1 of 2)

CALIBRATION

DESCRIPTION. Calibration consists of adjusting the 8743A REFERENCE PLANE EXTENSION to obtain equal reference and test channel electrical lengths and obtaining reference, magnitude and phase, indications.

PROCEDURE.

1. Connect equipment as shown in setup. Connect a 10-dB attenuator, such as the HP 8492A Option 10, to the HP 11605A Flexible Arm (see Paragraph 3-17), and connect the attenuator to the 8743A UNKNOWN port.
2. Dc couple and dc balance the oscilloscope vertical amplifiers. Adjust the oscilloscope to display the swept - phase output from the 8413A.
3. Obtain equal reference and test channel electrical lengths by adjusting the REFERENCE PLANE EXTENSION for a horizontal phase display on the oscilloscope. If the digital counter is to be used to determine the electrical length of the device under test, it should be set to zero. A convenient way to do this is as follows.
 - a. Adjust REFERENCE PLANE EXTENSION crank until counter reads all zeros.
 - b. Hold thumbwheel to retain zero indication and readjust REFERENCE PLANE EXTENSION for a horizontal display on the oscilloscope.
4. For swept - frequency measurements, adjust the oscilloscope display as follows:
 - a. Disconnect oscilloscope vertical input from 8413A AMPLITUDE channel to simulate zero volts dc from 8413A. Note trace position.
 - b. Reconnect vertical input and adjust 8410A test channel gain and amplitude vernier controls so that the average of the trace falls on the zero trace position noted in step (a) above.
 - c. Adjust oscilloscope vertical position for convenient amplitude reference.
 - d. Disconnect oscilloscope vertical input from 8413A PHASE channel to simulate zero volts dc from 8413A. Note trace position.
 - e. Reconnect vertical input and adjust the 8410A PHASE vernier control so that the average of the trace falls on the zero trace position noted in step (d) above.
5. To calibrate for single - frequency measurements perform the following:
 - a. Set the Sweep Oscillator for single-frequency operation.
 - b. Adjust 8410A PHASE VERNIER for zero degree indication on the 8413A.
 - c. Adjust 8410A test channel gain and amplitude vernier controls for a 0 dB indication on the 8413A.
 - f. Adjust oscilloscope vertical position for a convenient phase reference.

MEASUREMENT

1. Insert the device to be tested between the UNKNOWN port and the 10-dB attenuator.
2. For swept - frequency measurements, read magnitude and phase as follows:
 - a. For magnitude, note 8410A test channel gain settings. Adjust test channel gain to return oscilloscope display to reference obtained during calibration. The difference in test channel gain settings is the transmission gain or loss in dB of the device under test.
 - b. For phase, adjust oscilloscope vertical sensitivity and position controls to view the swept - phase display of the device under test. Use the calibrated 8413A output (10 mv/degree) and the oscilloscope vertical calibration to determine phase angle.

NOTE

The phase display is the combination of linear phase (due to electrical length) and non-linear phase shift. Group delay can be determined from this display (see HP Application Note 92).

3. For single - frequency measurements, read magnitude and phase as follows:
 - a. For magnitude, note 8410A test channel gain settings. Adjust test channel gain to return the 8413A meter indication to zero. The difference in test channel gain settings is the transmission gain or loss in dB of the device under test.
 - b. For phase, adjust the 8413A phase offset for an on-scale meter indication on the most sensitive scale. The phase angle is the algebraic sum of phase offset and meter indication.

Figure 3-4. Transmission Measurement, Using Network Analyzer with 8413A Display Unit (Sheet 2 of 2)

REFLECTION MEASUREMENT

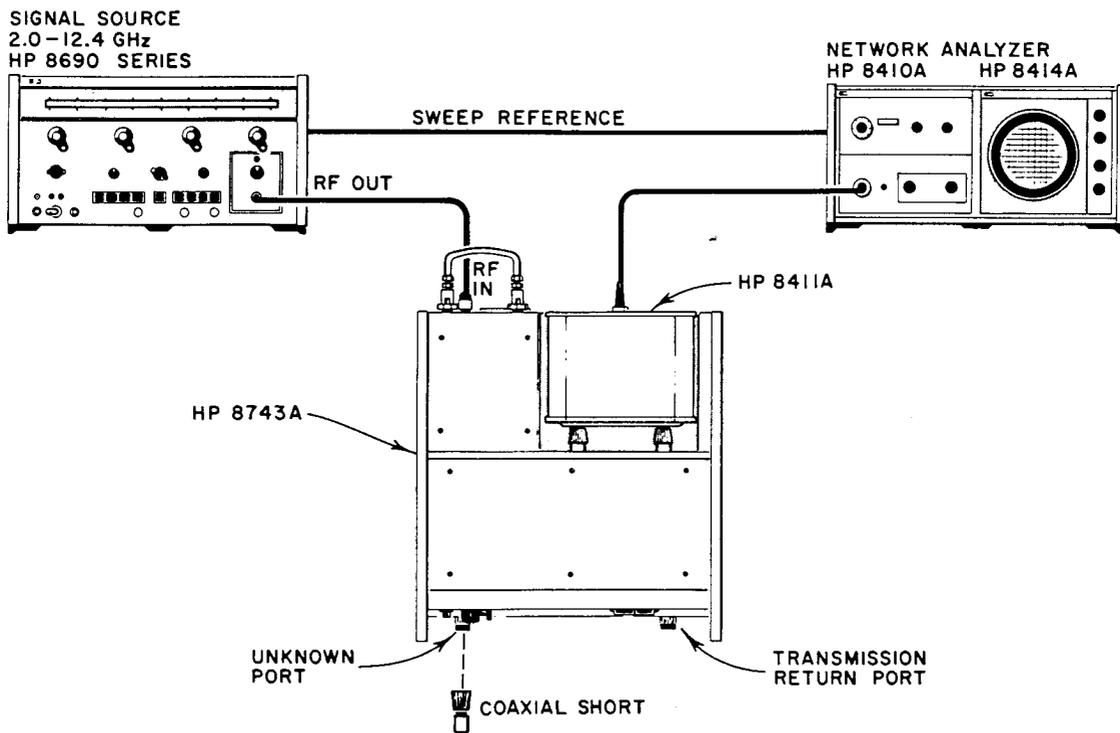


Figure 3-5. Reflection Measurement, Using Network Analyzer with 8414A Polar Display Unit (Sheet 1 of 2)

CALIBRATION

DESCRIPTION. Calibration consists of adjusting the 8743A REFERENCE PLANE EXTENSION to obtain equal reference and test channel electrical lengths and obtaining reference, magnitude and phase, indications.

PROCEDURE.

1. Connect equipment as shown in setup.
2. Connect a coaxial short such as the HP 11565A to the 8743A UNKNOWN port and depress the REFL pushbutton.
3. Set the Sweep Oscillator to automatic sweep. Adjust the Sweep Oscillator and Network Analyzer controls to phase lock the Network Analyzer over the frequency band of interest.
4. Push and hold the 8414A BEAM CTR pushbutton and adjust the centering controls to place the dot in the center of the polar display.
5. Obtain equal reference and test channel electrical lengths by adjusting the REFERENCE PLANE EXTENSION to collapse the trace to a dot or smallest cluster. If the plane of measurement is to be extended beyond the plane of the short, the digital counter should be set to zero so that it can be used to set the required extension accurately. A convenient way to do this is as follows:
 - a. Adjust REFERENCE PLANE EXTENSION crank until counter reads all zeros.
 - b. Hold thumbwheel to retain zero indication and readjust REFERENCE PLANE EXTENSION to collapse the trace to a dot or smallest cluster.
6. Adjust the 8410A PHASE VERNIER, TEST CHANNEL GAIN and AMPL VERNIER controls to place the dot or cluster for a reference indication of $\Gamma=1/180^\circ$.

NOTE

Calibration for greater accuracy is discussed in Paragraph 3-14 and 3-15.

MEASUREMENT

1. Remove the coaxial short and connect the device to be tested to the 8743A UNKNOWN port.
2. Read the reflection coefficient, magnitude and phase, (or impedance using a Smith Chart overlay) from the 8414A display.

NOTE

For small reflection coefficients the 8414A resolution can be improved by increasing the 8410A test channel gain. For example, increasing the test channel gain by 20 dB changes the full scale reflection-coefficient calibration from 1.0 to 0.1 at the outer circle.

3. The effective load plane of the device under test may be determined by adjusting the REFERENCE PLANE EXTENSION to again collapse the trace to a dot or smallest cluster. The distance from reference plane to load plane may be read directly from 8743A digital counter (counter set to zero during calibration).

Figure 3-5. Reflection Measurement, Using Network Analyzer with 8414A Polar Display Unit (Sheet 2 of 2)

TRANSMISSION MEASUREMENT

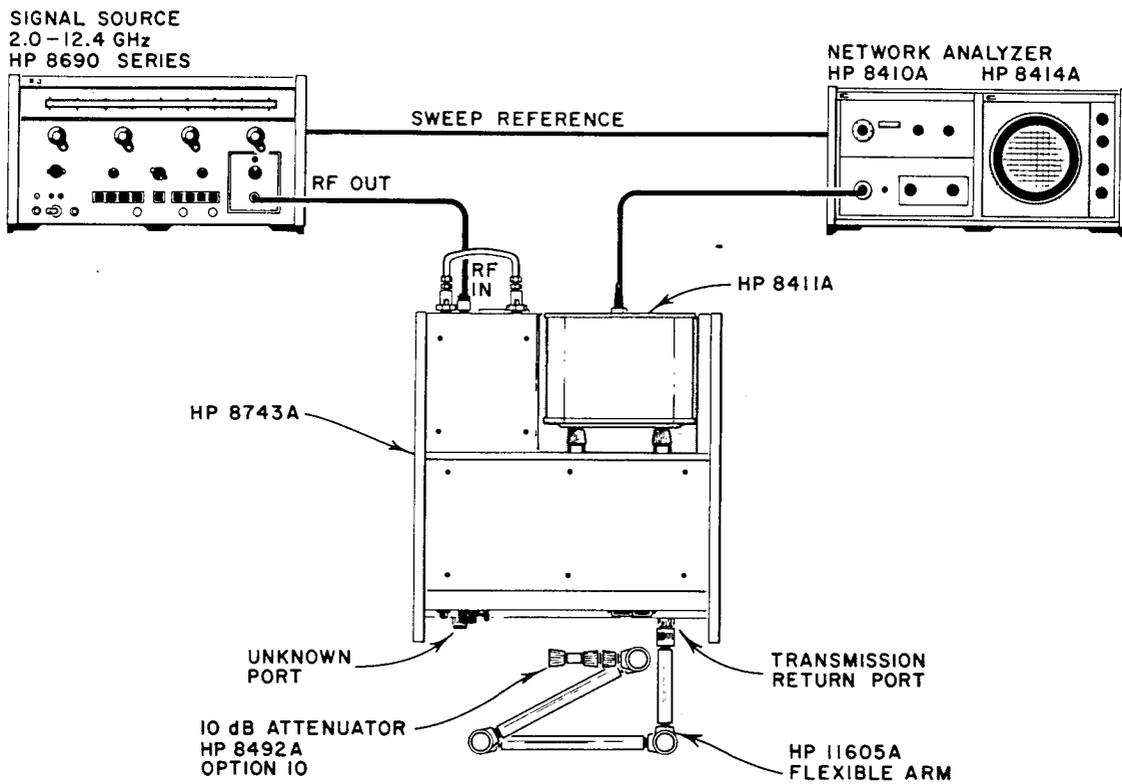


Figure 3-6. Transmission Measurements, Using Network Analyzer with 8414A Polar Display Unit (Sheet 1 of 2)

CALIBRATION

DESCRIPTION. Calibration consists of adjusting the 8743A REFERENCE PLANE EXTENSION to obtain equal reference and test channel electrical lengths and obtaining reference, magnitude and phase, indications.

PROCEDURE.

1. Connect equipment as shown in setup. Connect a 10-dB attenuator, such as the HP 8492A Option 10, to the Flexible Arm (see Paragraph 3-17) and connect the attenuator to the 8743A UNKNOWN port.
2. Depress the 8743A TRANS pushbutton.
3. Set the Sweep Oscillator to automatic-sweep. Adjust the Sweep Oscillator and Network Analyzer controls to phase lock the Network Analyzer over the frequency band of interest.
4. Push and hold the 8414A beam center pushbutton and adjust the centering controls to place the dot in the center of the polar display.
5. Obtain equal reference and test channel electrical lengths by adjusting the REFERENCE PLANE EXTENSION to collapse the trace to a dot or smallest cluster. If the digital counter is to be used to determine the electrical length of the device under test, it should be set to

zero. A convenient way to do this is as follows:

- a. Adjust REFERENCE PLANE EXTENSION crank until counter reads all zeros.
 - b. Hold thumbwheel to retain zero indication and readjust REFERENCE PLANE EXTENSION to collapse the trace to a dot or smallest cluster.
6. Adjust the 8410A phase and amplitude controls to place the dot or cluster for a reference indication of $\Gamma=1 \angle 0^\circ$

MEASUREMENT

1. Insert the device to be tested between the UNKNOWN port and the 10-dB attenuator.
2. Note the 8410A test channel gain setting. This is the calibrated gain setting. Adjust the test channel gain controls to locate the CRT display on the outside ring. The difference in test channel gain settings is the magnitude of the transmission gain or loss of the device under test.
3. To determine the electrical length of the device under test perform the following:
 - a. Adjust the REFERENCE PLANE EXTENSION to again collapse the trace to a dot or smallest cluster.
 - b. The electrical length of the device under test is two times the digital counter reading.

Figure 3-6. Transmission Measurements, Using Network Analyzer with 8414A Polar Display Unit (Sheet 2 of 2)

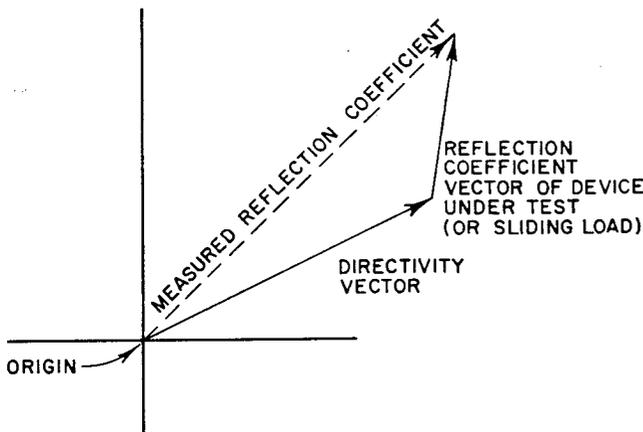


Figure 3-7. Measured Reflection Coefficient.

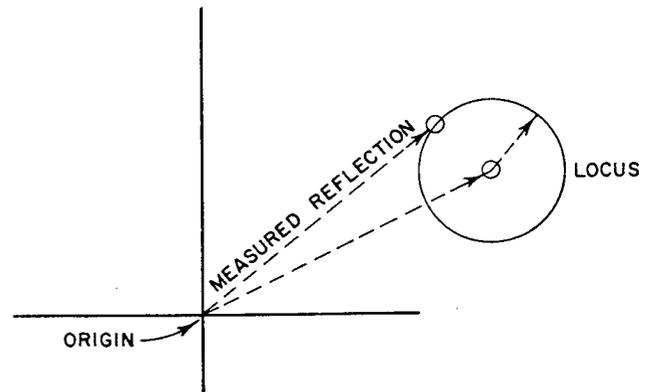


Figure 3-8. Locus of Measured Reflection when Load is Moved.

3-13. INCREASED ACCURACY FOR REFLECTION MEASUREMENTS BY MINIMIZING DIRECTIVITY ERRORS.

3-14. The 8743A internal coupler's directivity errors become significant when measuring small reflection coefficients, but the error can be cancelled at single frequencies. The measured reflection is the vector sum of the directivity vector plus the reflection coefficient of the device under test. (See Figure 3-7.) The error is calibrated out with a sliding load. Figure 3-8 depicts the sliding load in one position at a single-frequency. As the sliding load is moved, the magnitude of its reflection coefficient remains constant but the phase of the coefficient changes. As the load is moved its reflection coefficient indication rotates in a circle of constant magnitude about the directivity vector. The center of this circle is the tip of the directivity vector. If the magnitude of the directivity was zero, the locus circle would be centered about the origin as shown in Figure 3-9. The directivity vector goes from the origin to the center of the locus circle. When the location of the center of the circle is known, the directivity vector can be subtracted from the measured reflection. The resultant is the reflection coefficient of the device under test.

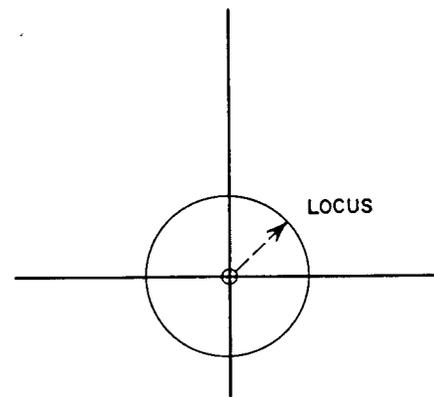


Figure 3-9. Locus of Measured Reflection with Directivity Cancelled

3-16. INCREASED ACCURACY FOR TRANSMISSION MEASUREMENTS BY REDUCING MISMATCH AMBIGUITY.

3-15. The vector subtraction can be performed directly with the horizontal and vertical controls on the 8414A polar display. Increase the 8410A TEST CHANNEL GAIN so full scale reflection on the polar display is suitable for the component you wish to measure. Attach a sliding load such as the HP 905A to the 8743A UNKNOWN port. Slide the load and adjust the horizontal and vertical controls until the circle rotates about the center of the CRT. The effect of directivity is now cancelled for this frequency and this test channel gain on the Network Analyzer. The vector subtraction must be done manually with the 8413A. Put the sliding load on the 8743A and measure reflection, phase and magnitude, for three positions of the sliding load. Plot these three points on graph paper and find the center of the circle that goes through these points. The vector from the origin of the graph to this center must be vectorially subtracted from any reflection measurement at this frequency.

3-17. A 50-ohm coaxial attenuator is recommended for transmission measurements. An attenuator connected between the output of the device under test and the HP 11605A Flexible Arm reduces the ambiguity due to mismatch between the 11605A, 8743A and 8411A. A 10-dB low-reflection attenuator, such as a HP 8492A Option 10 reduces this ambiguity to essentially that due to the mismatch of the attenuator ($V_{SWR} < 1.25$). Other values of attenuation may be used; however, values greater than 10 dB will not reduce the mismatch below that of the attenuator. For values less than 10 dB the multiple mismatch between the 11605A, 8743A and 8411A should be taken into consideration. In addition to reducing ambiguity due to mismatch, the 10-dB attenuator makes the test channel power level during calibration the same for transmission and reflection. Also, the combined electrical lengths of the 8492A and the 11605A makes the electrical length of the test channel in the transmission mode nearly equal to its length in the reflection mode. This means that, since the difference is small, it is possible to calibrate for one mode of operation, and switch to the other without recalibrating.

Table 3-1. Contact Closures for Remote Operation.

J1 Pin No.	Function
1 thru 16	No connection
17	Remote-Manual Select
18	Remote Control Common
19 thru 23	No Connection
24	Remote TRANS-REFL Select
25	No Connection
36	Remote Control Common

3-18. REMOTE OPERATION.

3-19. A thirty-six pin connector on the rear panel of the 8743A provides contacts for remote selection of transmission or reflection measurements. Only four of the thirty-six pins are used. The pins and their uses are given in Table 3-1. When remote-manual select pin 17 is open and not connected to a remote control common (pin 18 or 36), the 8743A is in the manual or front panel mode. In this mode of operation, the front-panel pushbuttons are enabled and remote TRANS-REFL select pin 24 is disabled. When remote-manual select pin 17 is connected to a remote control common (pin 18 or 36), the 8743A is in the remote mode. In this mode of operation the front-panel pushbuttons are disabled, and remote TRANS-REFL select pin 24 is enabled, allowing selection of transmission or reflection measurements only through the remote input pin 24. Table 3-2 shows the signal requirements for remote operation. A typical transistor remote control circuit is shown in Figure 3-10. The 8743A supplies approximately +12 Vdc for the open-circuit condition and 12 mA of current for the short-circuit condition.

3-20. CARE OF APC-7 CONNECTORS.

3-21. RF connections to and from the device under test and to the phase-amplitude ratio indicator are made with APC-7 style 50-ohm 7 mm sexless connectors. These connectors should be handled with particular care for two reasons:

a. Continuity through APC-7 connectors is obtained by end-to-end contact of the inner and outer conductors. Consequently, the electrical performance of the connector is largely dependent upon the condition of these exposed surfaces.

b. The inner conductor of the front-panel UNKNOWN connector is attached to a directional coupler and any rotational force on the inner conductor may result in damage to the coupler.

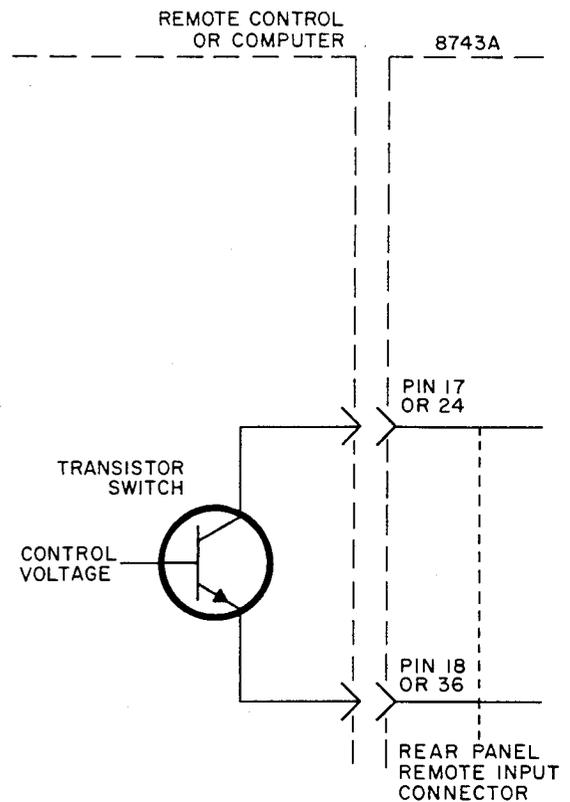


Figure 3-10. Typical Transistor Remote Control Circuit.


Table 3-2. Signal Requirements for Remote Operation.

Measurement	Pin 18 or 36 to:	
	Pin 17	Pin 24
Transmission	shorted	shorted
Reflection	shorted	open

3-22. Important recommendations about the handling and care of the APC-7 connectors are given in Figure 3-11. The part of an input connector that is most likely to be damaged is the inner conductor contact. Since it protrudes slightly beyond the plane of electrical contact, any wiping action of one connector across the other can damage the contact enough to cause a discontinuity. The risk of this kind of damage can be minimized, as stated in Figure 3-11, by always having the coupling sleeves of the UNKNOWN and TRANSMISSION RETURN connectors fully extended.

3-23. CONTACT REPLACEMENT.

3-24. Replacement inner conductor contacts are available from Hewlett-Packard (part number 1250-0907), and from Amphenol RF Division, Danbury, Connecticut (part number 131-129).

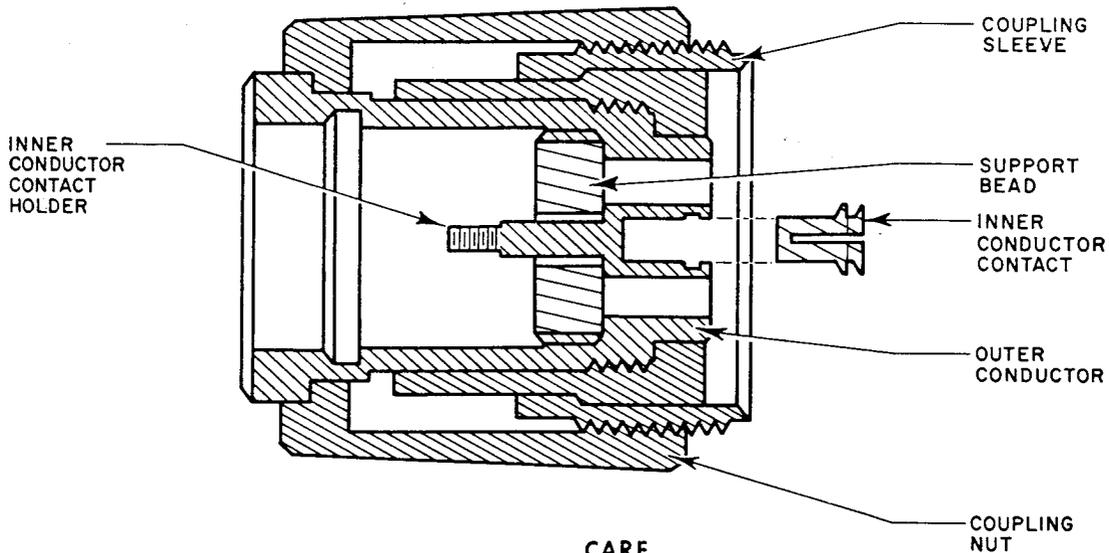


USE

To Connect:

1. On one connector, retract the coupling sleeve by turning the coupling nut counterclockwise until the sleeve and nut disengage.
2. On the other connector, fully extend the coupling sleeve by turning the coupling nut clockwise. To engage coupling sleeve and coupling nut when the sleeve is fully retracted, press back lightly on the nut while turning it clockwise.
3. Push the connectors firmly together, and thread the coupling nut of the connector with retracted sleeve over the extended sleeve. Leave the other coupling nut in the original position: closing the gap between coupling nuts tends to loosen the electrical connection.

To Disconnect:


1. Loosen the coupling nut of the connector showing the wider gold band.

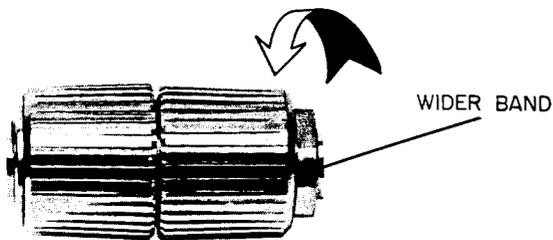

2. **IMPORTANT:** Part the connectors carefully to prevent striking the inner conductor contact.

CARE

1. Keep contacting surfaces smooth and clean. Irregularities and foreign particles can degrade electrical performance.

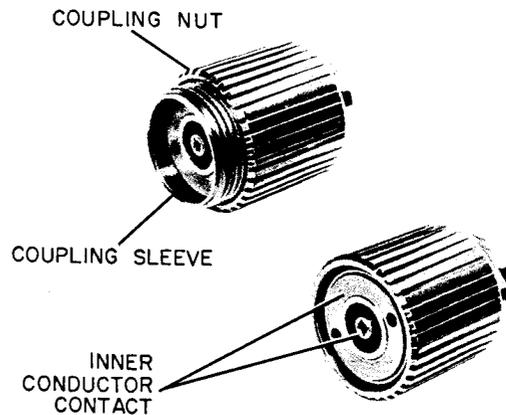



2. Protect the contacting surfaces when the connector is not in use by leaving the coupling sleeve extended.
3. Use lintless material and/or firm-bristled brush such as tooth brush for cleaning. If a cleaning fluid is needed use isopropyl alcohol. **IMPORTANT:** Do not use aromatic or chlorinated hydrocarbons, esters, ethers, terpenes, higher alcohols, ketones, or ether-alcohols such as benzene, toluene, turpentine, dioxane, gasoline, cellosolve acetate, or carbon tetrachloride. Keep exposure of the connector parts to both the cleaning fluid and its vapors as brief as possible.

Figure 3-11. APC-7 Connectors



A bulb extractor tool, HP Part No. 4040-0427, has been developed to facilitate bulb replacement for backlighted pushbutton switches of the type shown below.

BULB REPLACEMENT PROCEDURE

1. Place the end of the thumb of one hand over the corner of the pushbutton switch. With the bulb extractor tool in the other hand, place the hooked end of the tool into the front of the slot on the bottom of the pushbutton (A) and gently push up until the lower end of the pushbutton lens pops out as shown in B.

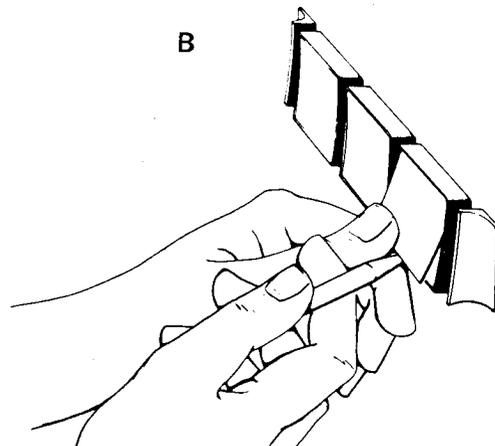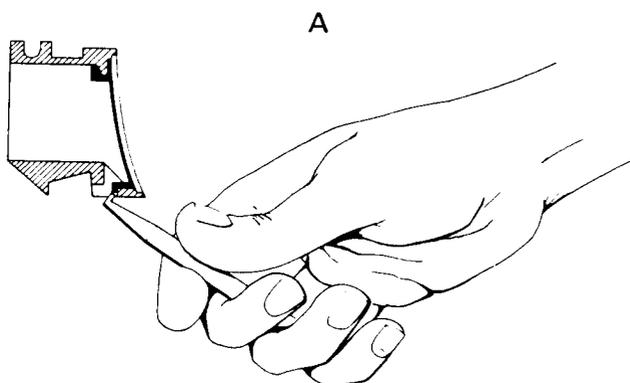

2. Remove the pushbutton lens. Place the hollow end of the bulb extractor tool over the bulb to be replaced and gently pull back. The bulb should stick in the extractor and come out of its socket as the extractor is pulled back as shown in C.

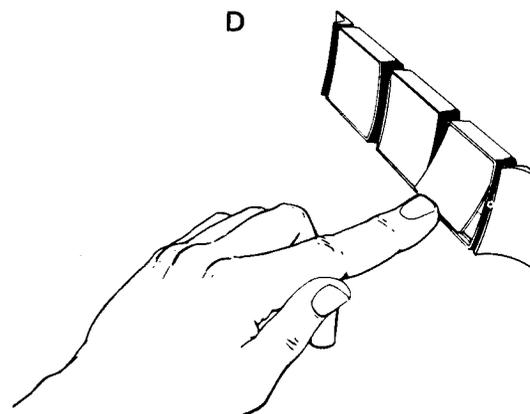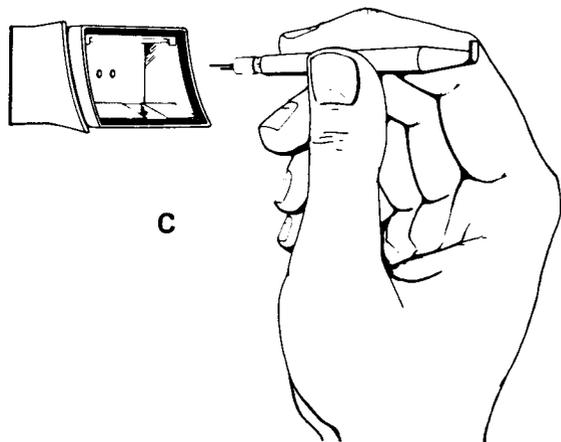

3. Remove the old bulb from the hollow end of the extractor and insert the bulb into the hollow end. Using the extractor to hold the new bulb, insert the new bulb into the socket. To separate bulb and extractor, gently twist until it easily slips off the bulb.
4. Replace the pushbutton lens by first positioning the tabs at the top of the lens into the top of the pushbutton and pressing the bottom of the lens into place as shown in D.

NOTE

Only the pushbutton lens should be removed for bulb replacement. If the pushbutton is inadvertently pulled out during replacement, remove lens from the pushbutton. Re-insert the pushbutton into the front panel and push in until pushbutton snaps in place. Remainder of procedure is the same as previously given.

Figure 3-12. Pushbutton Selector Bulb Replacement

3-25. The important precautions that apply to the replacement of inner conductor contact are these:

- a. Do not disassemble the connector.
- b. Do not apply more than slight inward pressure to the inner conductor.
- c. Do not apply ANY twisting force to the inner conductor.
- d. Do not attempt to repair contacts.
- e. Do not re-use contacts.

CAUTION

Inward pressure or twisting force applied to the inner conductor of the UNKNOWN port connector can render the Model 8743A inoperative.

3-26. Because of the above considerations, contact removal should not be attempted with ordinary hand tools. Only the Hewlett-Packard self-positioning, hypodermic-action contact extractor tool (part number 5060-0236)¹ should be used. This tool exerts no appreciable inward pressure and no twisting force on the inner conductor. Instructions for removing contacts are supplied with the tool.

3-27. No tool is required for installing a replacement contact. Insert the contact gently by hand, applying only enough inward pressure to snap it into place. Then check for proper installation by inspecting the contact for even spacing of its four segments. Also, test for normal spring action by applying light inward pressure against the end of the contact with a pencil eraser. As the pressure is released the contact's spring action should cause it to move outward. If not, the contact is defective and should be replaced.

¹Part of APC-7 Connector Tool Kit 11591A.

3-28. COUPLING MECHANISMS.

3-29. The coupling mechanism includes the coupling nut and the two-piece coupling sleeve assembly shown in Figure 3-11. Both of these parts can be replaced without access to the inside of the Model 8743A, and without disturbing either of the conductors. A special spanner wrench, HP Stock Number 5060-0237¹, is required.

3-30. To remove a coupling mechanism:

- a. Fully extend the coupling sleeve to provide a guide for the spanner wrench.
- b. Align the wrench so both pegs engage the holes in the end of the coupling sleeve assembly.
- c. Unscrew the sleeve assembly by turning the wrench counterclockwise.

3-31. When installing a coupling mechanism, set the coupling nut in place on the connector first, then thread on the coupling sleeve assembly, and tighten it firmly with the spanner wrench. Extending the coupling sleeve helps to keep the spanner in position during the final tightening.

CAUTION

The UNKNOWN port connector is part of a directional coupler. When tightening a coupling sleeve assembly on this connector, do not apply excessive torque. Excessive torque may be transmitted to the center conductor and may damage the coupler.

3-32. POWER SWITCH LAMP REPLACEMENT.

3-33. The lamp that indicates line power is applied to the Model 8743A is housed in the POWER switch pushbutton. To replace the lamp, unscrew the retaining ring near the front panel, pull out the pushbutton, and remove the lamp. Replacement lamp part number is HP 2140-0052, LAMP: GLOW.

SECTION IV MAINTENANCE

4-1. INTRODUCTION.

4-2. This Preliminary Operating and Service Manual provides instructions for testing the performance of the 8743A. The complete Operating and Service Manual will include more detailed maintenance information. If repair of the Model 8743A is necessary before the complete manual is received, contact the nearest Hewlett-Packard office for instructions. HP office locations are listed in the back pages of this manual.

4-3. COMPLETE OPERATING AND SERVICE MANUAL.

4-4. To obtain a copy of the complete Operating and Service Manual, when it is available, fill out and return the mailing card inside the front cover of this

manual. If this mailing card is not filled out and returned, the complete Operating and Service Manual will not be sent.

4-5. PERFORMANCE TEST PROCEDURES.

4-6. The performance test procedures presented in Figure 4-1 are useful for incoming inspection and periodic evaluation, and after repair. The specifications of Table 1-1 are the performance standards. Test equipment required for the procedures is listed in Table 4-1. Instruments other than those recommended may be used, provided their performance equals or exceeds the critical specifications listed in the table.

Table 4-1. Recommended Test Equipment for Performance Test Procedure

Instrument	Critical Specifications	Recommended HP Model
Sweep Oscillator	Frequency Range: 2.0 to 12.4 GHz Output Power: 1 mW minimum into 50 ohm Power Variation: ± 7 dB VSWR: $< 3:1$	8690A, B/8692A, B (2 to 4 GHz) 8690A, B/8693A, B (4 to 8 GHz) 8690A, B/8694A, B (8 to 12.4 GHz)
Network Analyzer	No substitute may be used	8410A/8411A/8413A and 8414A
Oscilloscope	Bandwidth: 5 MHz minimum Sensitivity: 50 mV/cm Horizontal Sweep Rate: 25 ms/cm	140A/1405A/1422A or 180A/1801A/1821A and 141A/1416A
Short	50-ohm short (APC-7 connector)	11565A
50-ohm Coaxial Sliding Load	50-ohm coaxial sliding termination with APC-7 connector. SWR: ≤ 1.05	907A
Swept Slotted Line	Frequency Range: 2.0 to 12.4 GHz Impedance: 50 ohm Output Connector: APC-7 Residual VSWR: < 1.02	817A

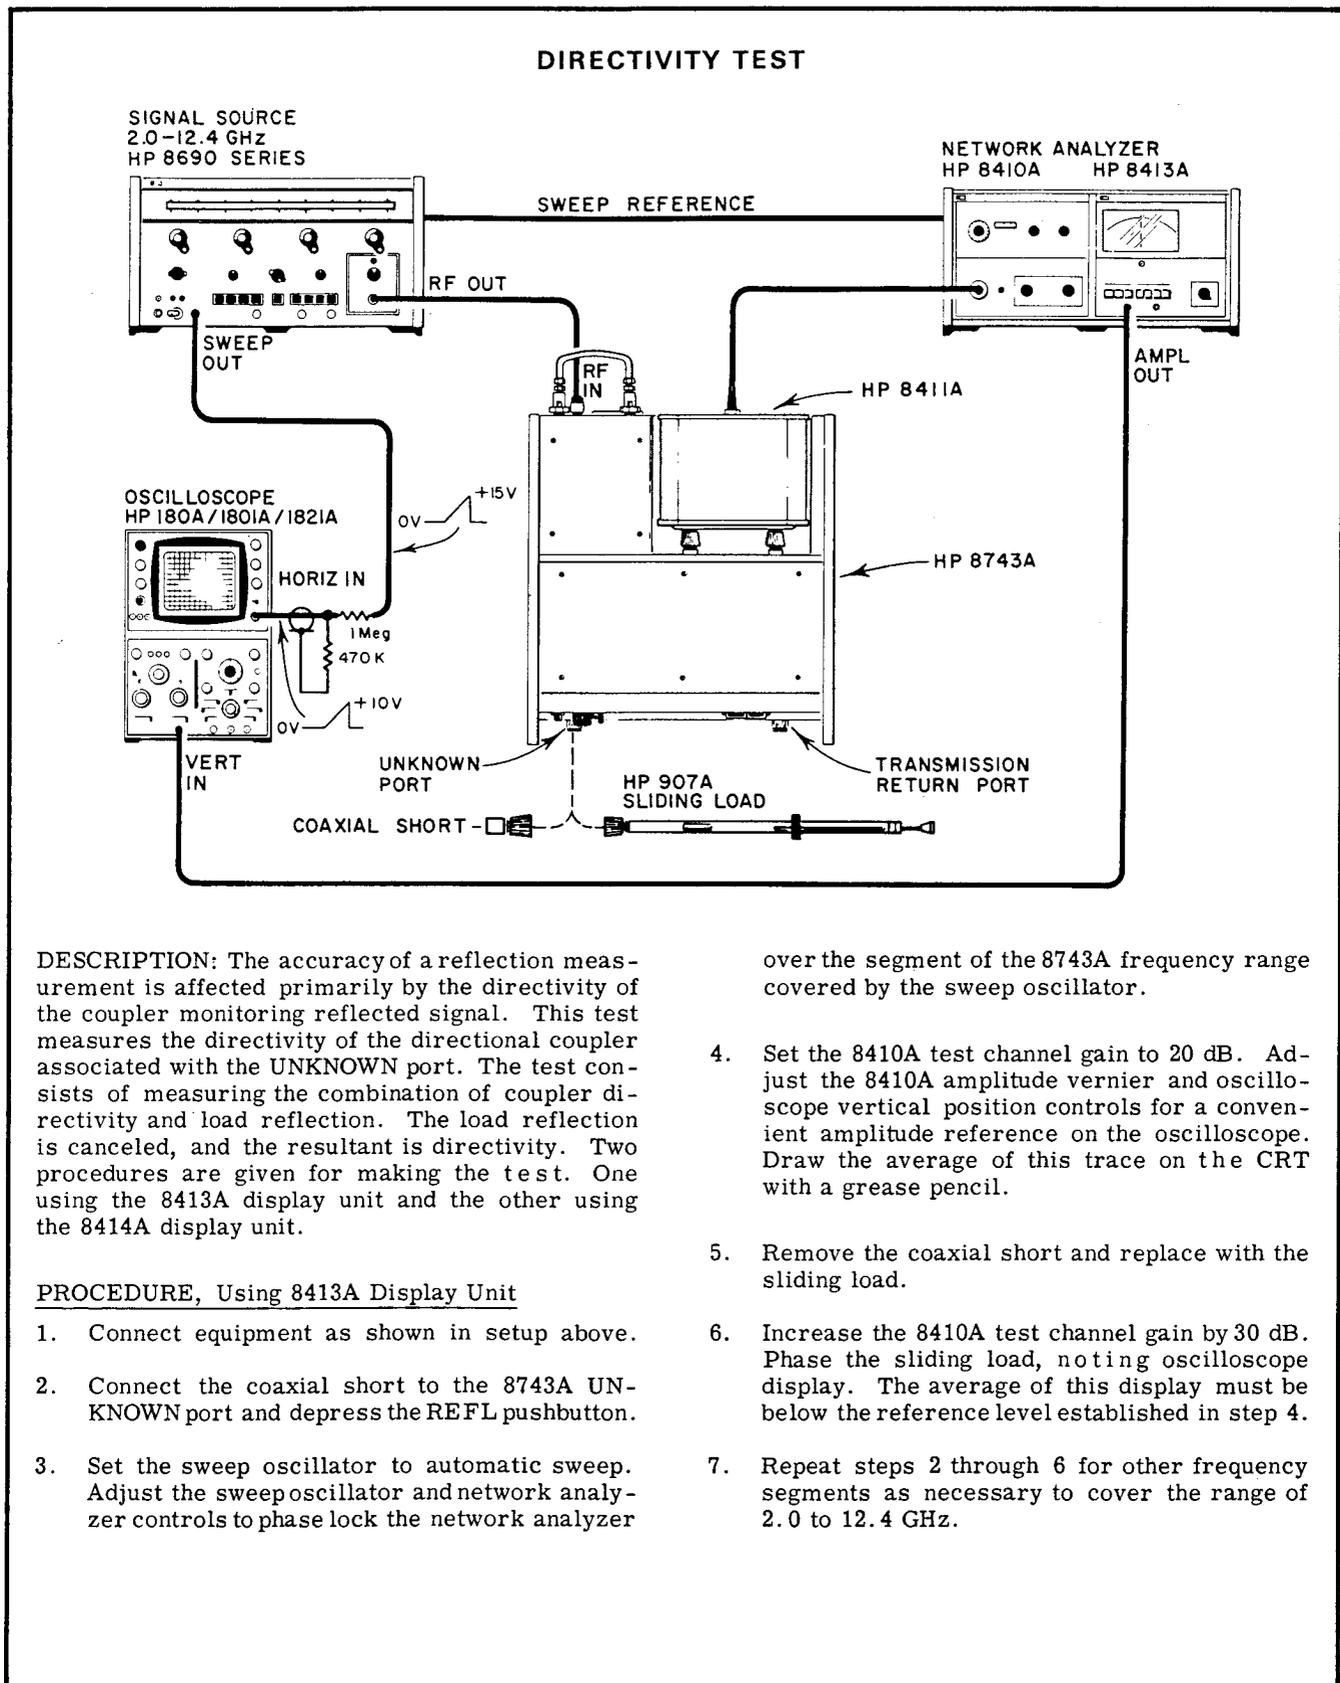


Figure 4-1. Performance Test (Sheet 1 of 4)

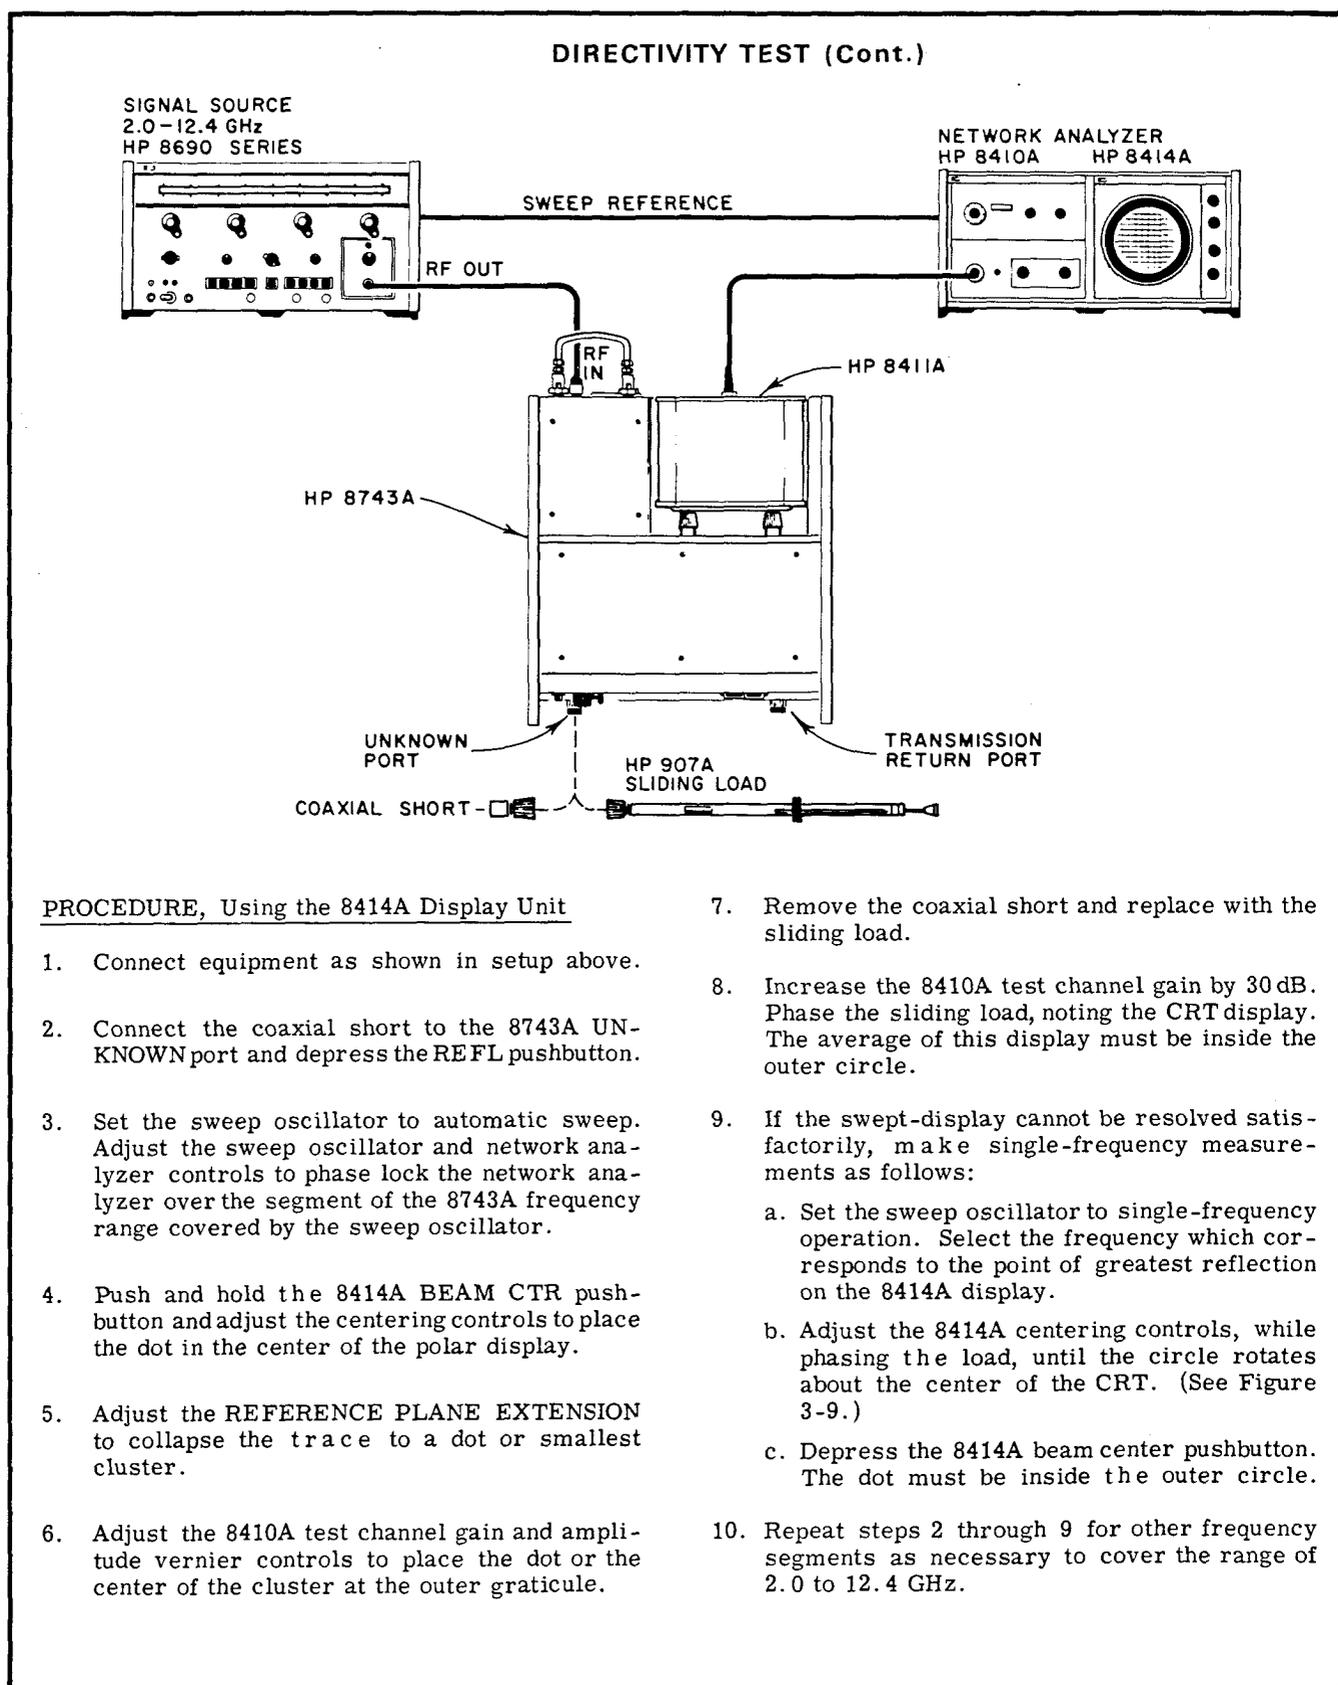


Figure 4-1. Performance Test (Sheet 2 of 4)

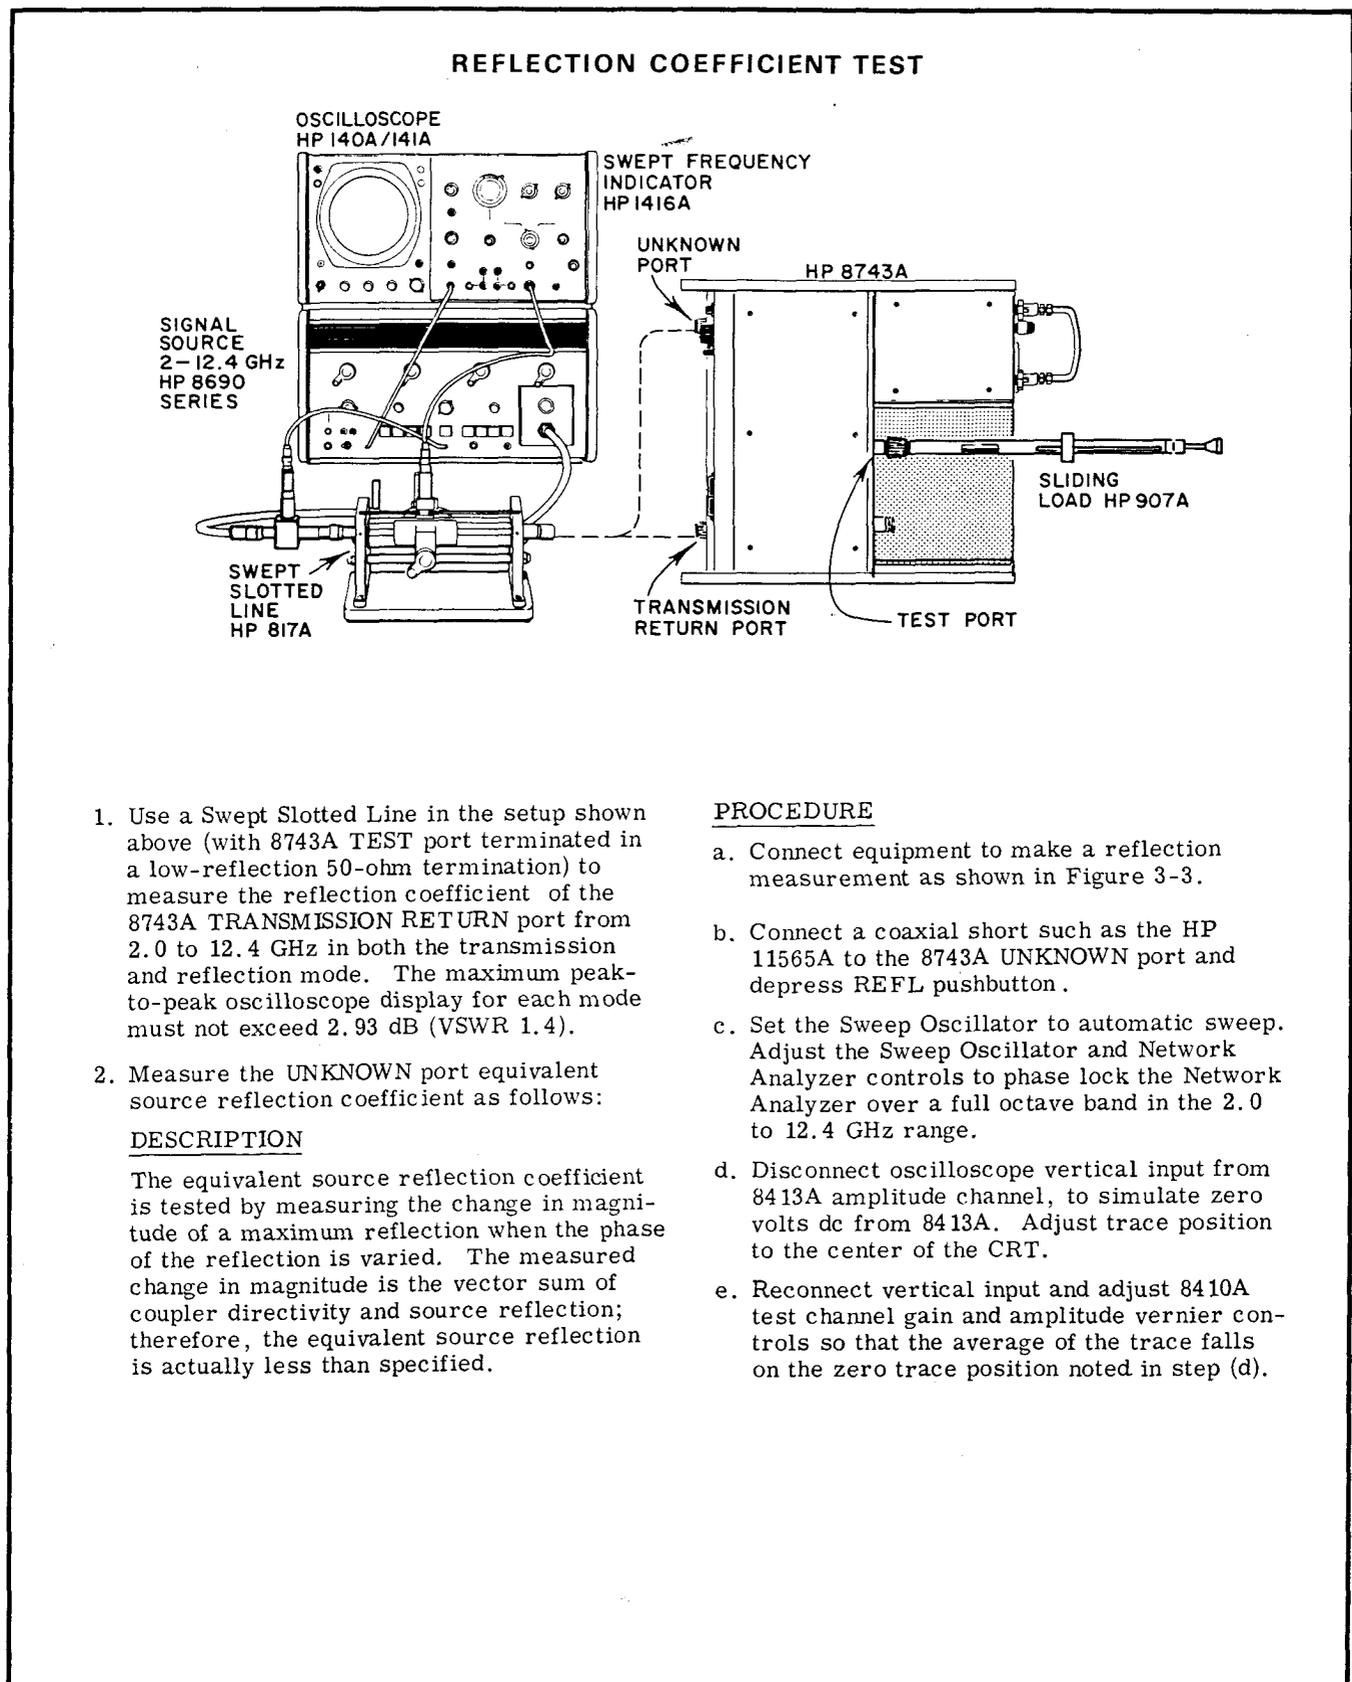


Figure 4-1. Performance Test (Sheet 3 of 4)

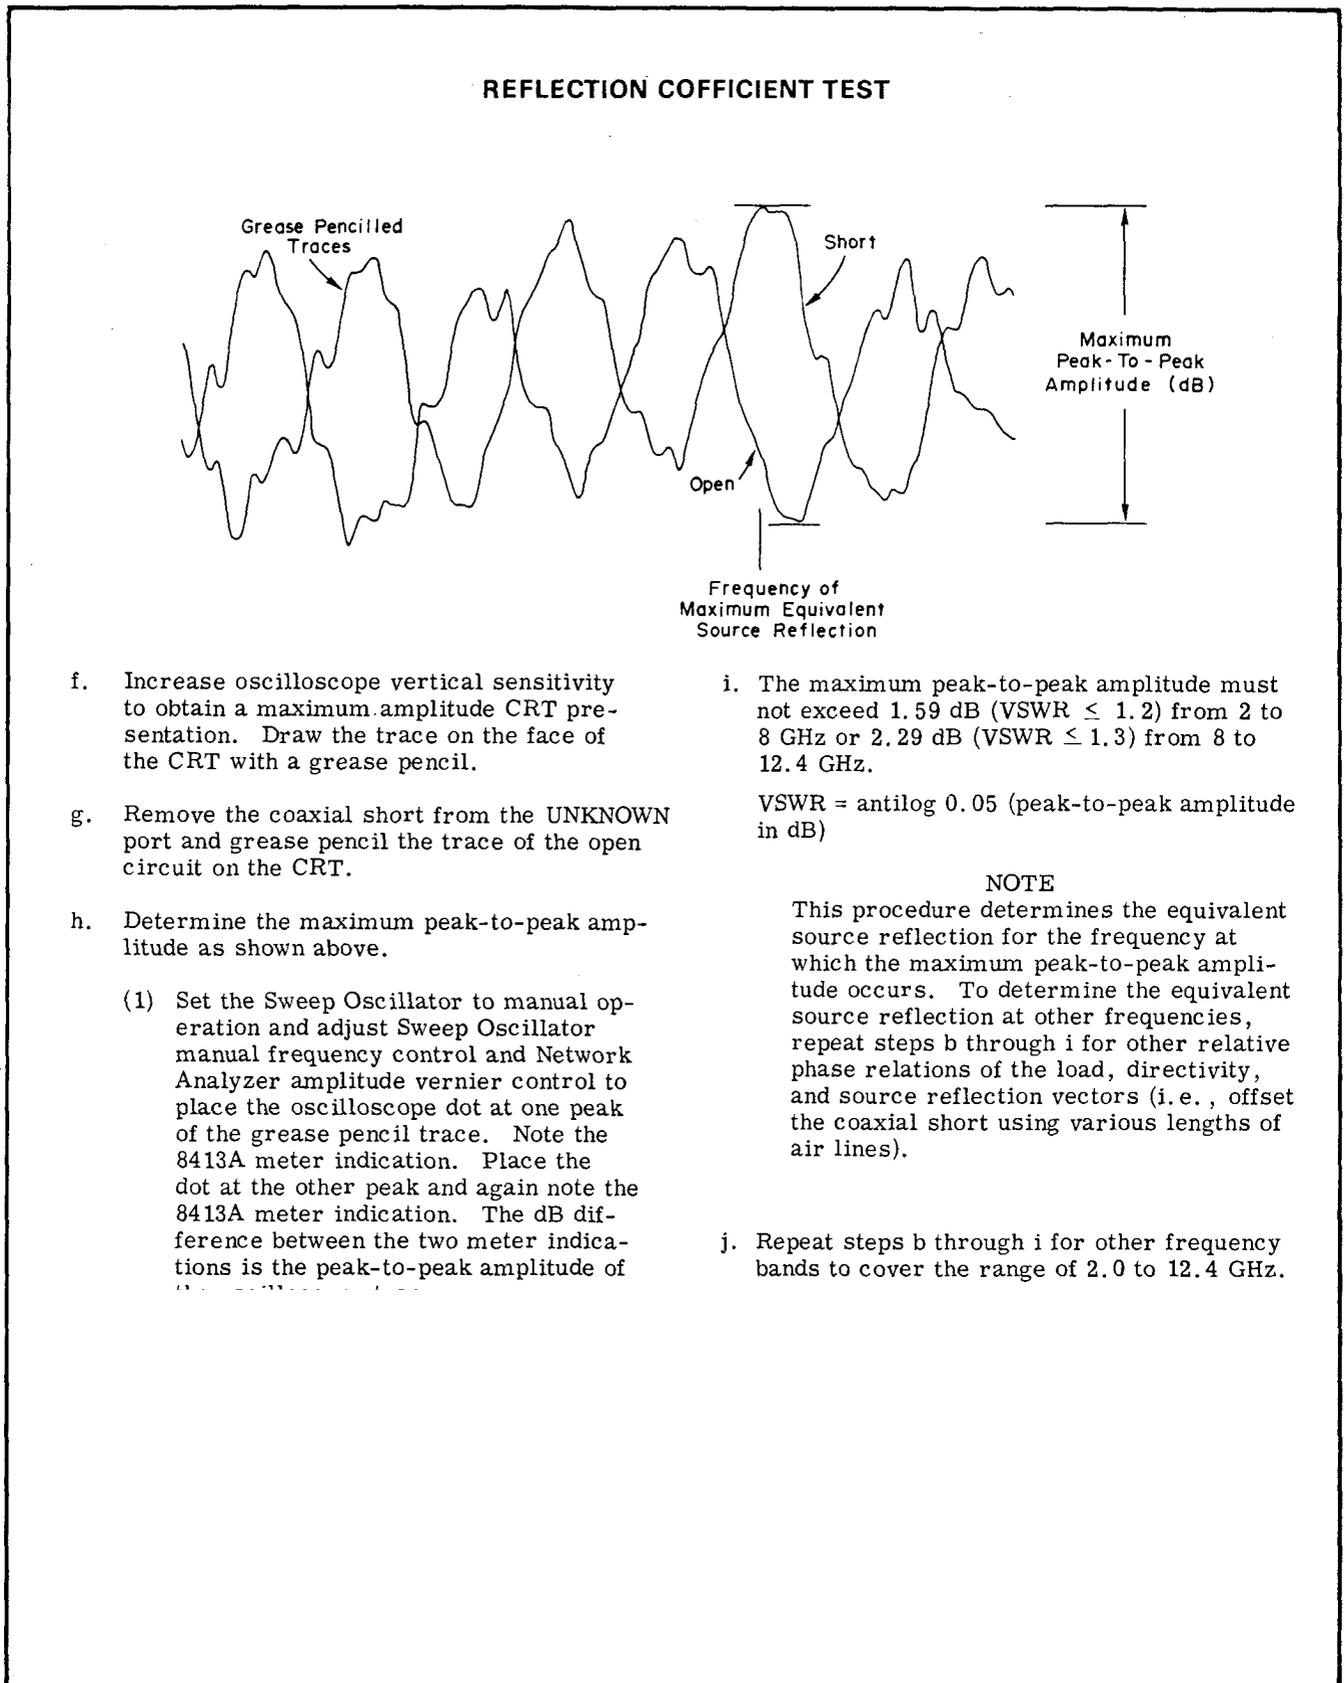


Figure 4-1. Performance Test (Sheet 4 of 4)

5. Unsolder the white and green wires (which come through the deck) from the A5 Assembly.
6. Remove the six coaxial switch mounting screws accessible from the bottom of the instrument.
7. Remove the A5, A6, and A7 Assemblies from the instrument as one unit.
8. Disconnect the switch to be replaced and unsolder the appropriate white and green wires. Mark the wires so they may be soldered to the proper terminals on the new switch.

Installation. To install the A5, A6, and A7 Assemblies:

1. Assemble the three coaxial switches into one unit.
2. Solder the white and green wires removed in step 8 of the removal procedure.
3. Insert the A5, A6, and A7 Assemblies into the 8743A as one unit. Do not install mounting screws.
4. Connect cables W6 and W9 to the appropriate switches and tighten each connector.
5. Connect cable W7 to the A6 Assembly and tighten connector.
6. Install the large thin securing nut to the TEST output connector.
7. Install the six coaxial switch mounting screws. Insure that green and white wires are not routed or pinched between switches and mounting deck.
8. Solder the wires removed in step 5 of the removal procedure, matching wire colors to the wires previously installed.
9. Perform the insertion loss troubleshooting procedure in Figure 4-2. If sharp power variations occur during any check, vary the torque on each coaxial switch connector, while observing the frequency response curve, until power variation is minimum.

Model 8743A

RF TROUBLESHOOTING

Introduction.

8743A RF troubles can be divided into two general categories, repeatability and insertion loss. Repeatability problems are generally caused by the RF coaxial switches, and insertion loss problems are generally caused by connectors or cables. Because the troubleshooting approach for each of these problems is different, this service note discusses each category separately.

Repeatability.

NOTE

Repeatability is a supplemental performance characteristic and not an instrument specification.

Repeatability is the change in insertion loss when the coaxial switches are cycled and is normally not a factor in measurement accuracy. The change in 8743A insertion loss when the coaxial switches are cycled is typically less than 0.2 dB. When the equipment is calibrated in one mode of operation and reflection and transmission measurements are both made without recalibrating, repeatability can degrade measurement accuracy. For best accuracy the equipment should be calibrated and measurements made in one mode of operation to keep insertion loss the same for both calibration and measurement.

Repeatability problems are generally due to the center conductor flipper inside the switch not making contact with the same pressure each time the switch is cycled. To isolate a repeatability problem to a single switch, use the following procedure.

Transmission Check. Setup the 8743A, Network Analyzer, and Display Unit to calibrate for a transmission measurement (connect a through section between the 8743A UNKNOWN and TRANSMISSION RETURN ports). Cycle the coaxial switches by alternately pressing the TRANS and REFL push-buttons while observing the transmission display for repeatability.

Reflection Check. Setup the 8743A, Network Analyzer, and Display Unit to calibrate for a reflection measurement (connect a coaxial short to the 8743A UNKNOWN port). Cycle the coaxial switches by alternately pressing the TRANS and REFL pushbuttons while observing the display for repeatability. Determine the faulty switch as follows:

1. If a repeatability problem occurred in both the REFLECTION and TRANSMISSION checks, replace A6 Test Port Relay Assembly (HP Part No. 08743-60009).
2. If a repeatability problem occurred in the REFLECTION check only, replace A5 Unknown Port Relay Assembly (HP Part No. 08743-60011).
3. If a repeatability problem occurred in the TRANSMISSION check only, replace A7 Transmission Return Port Relay Assembly (HP Part No. 08743-60010).

Insertion Loss.

Insertion loss problems are generally caused by a discontinuity in a connector or cable. The indication that a problem may exist is an increase or decrease in the Network Analyzer's displayed magnitude at one or more frequencies during calibration. The Network Analyzer displays the ratio of reference channel to test channel power; therefore, a loss of power in the reference channel will appear on the display as an increase in test channel power. The direction of a spike in the displayed trace isolates the trouble to either the reference or test channel. Generally a discontinuity will show up at higher frequencies; therefore, troubleshooting should be done in X-band and then the instrument should be checked over the remaining operating range. To isolate an insertion loss problem, perform the troubleshooting procedure in Figure 4-2.

COAXIAL SWITCH REPLACEMENT PROCEDURE.

Removal. To remove the A5, A6, and A7 Assemblies:

1. Remove the 8743A top and bottom covers.
2. Remove circuit board assemblies A1 and A3.
3. Remove cable W7 as follows:
 - a. Remove the large thin nut securing the TEST output connector to the sub-deck.
 - b. Disconnect W7 from the A6 Assembly using a 3/4 inch open-end wrench, and slide as much of the cable as possible through the hole in the sub-deck.
4. Loosen W6 and W9's connectors to the A5 and A7 assemblies using a 3/4 inch open-end wrench.

Section IV

Step 1

Connect equipment as shown in Figure 4-2. Set sweep oscillator for maximum leveled power over frequency band of interest.

Step 2

Press TRANS pushbutton. Monitor TEST output frequency response. Power should vary less than 2 dB from maximum to minimum. (Refer to response curve A).

NO
NO
Response curve indicates a relative increase in power at one or more frequencies. Disconnect W3 (rear-panel external REFERENCE LINE). Connect crystal detector to W2J1 (rear-panel connector for REFERENCE LINE closest to side panel). Monitor TEST port frequency response. Power should have no sharp spikes or holes and should vary less than about 2 dB from maximum to minimum.

YES
NO
Troubleshoot W2 and associated connectors. (See Note 2.)

Troubleshoot W3, W4, W5 and associated connectors. (See Notes 1 and 2.)

Response curve indicates a relative decrease in power at one or more frequencies. Troubleshoot Flexible Arm, W7, W8, W9, A6, A7, and associated connectors.
Note
W7, W8, and A6 are common to two RF paths; therefore, perform step 3. If step 3 checks OK, the trouble is most likely the Flexible Arm, W8 or A7. (See Note 2.)

Step 3

Disconnect through section from UNKNOWN port and press REFL pushbutton. Monitor TEST output frequency response with UNKNOWN port open and shorted. The average of the two traces should vary less than 2.0 dB (refer to response curve B) and the maximum to minimum at any frequency (equivalent source reflection) should be less than 1.6 dB from 2 to 8 GHz or 2.3 dB from 8 to 12.4 GHz.

NO
If the maximum to minimum at any frequency is greater than 1.6 dB from 2 to 8 GHz or 2.3 dB from 8 to 12.4 GHz, replace DC1 and its 10-dB attenuator. (See Note 5.) If the average of the two traces is greater than 2 dB, troubleshoot W6, W7, W8, A5 and A6, and associated connectors. If step 2 checked OK trouble is most likely W6 or A5. If both step 2 and step 3 indicate a trouble, connect the thermistor mount to the UNKNOWN port and monitor the frequency response. If the response curve indicates a relative decrease, trouble is most likely W8. If the UNKNOWN port frequency response is OK, the trouble is most likely A6 or W7.

Figure 4-2. Insertion Loss Troubleshooting (Sheet 2 of 4)

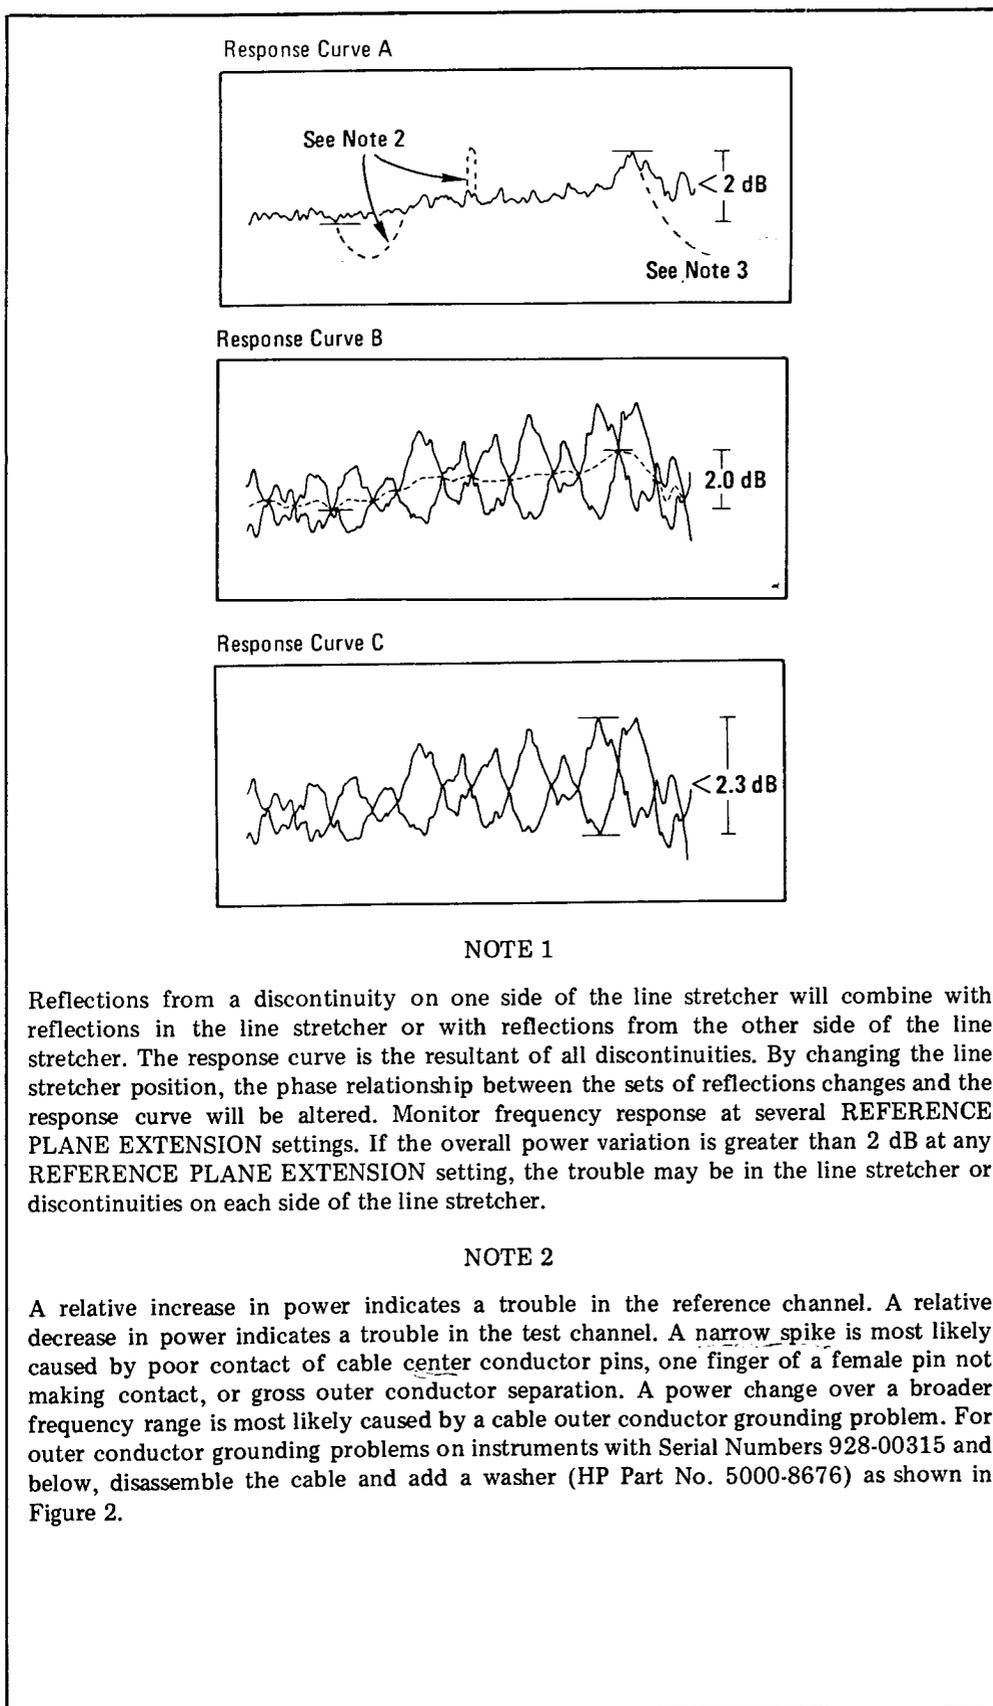


Figure 4-2. Insertion Loss Troubleshooting (Sheet 3 of 4)

NOTE 3

If a cable's center conductor is not centered it may distort a switch's center conductor contact and cause an increase in insertion loss. The increased insertion loss is most likely to occur from 11 to 12.4 GHz (See Response Curve A.)

NOTE 4

Although cable ends appear to be perfect they may still present a discontinuity. Also trimming these cable ends requires special tools. Therefore, if you are unable to eliminate a discontinuity, replace the suspected cable.

NOTE 5

Directional Coupler DC1 (HP Part No. 08743-60005) includes a tuned 10 dB attenuator. If the troubleshooting procedure step 3 indicates a trouble in DC1 the problem could be the 10 dB attenuator. Check the coupler directivity using the Operating and Service Manual Performance Test Procedure. If the directivity is OK the trouble is most likely the 10 dB attenuator. The attenuator may be replaced using the following procedure:

CAUTION

Do not unscrew flat head screws, or brass attenuator housing connector. If the brass parts move, directivity may be degraded.

1. Using a 1/2 inch open end wrench, hold the brass attenuator housing connector to keep it from rotating. Using plastic jawed, or padded vise grip pliers, unscrew the round stainless steel part (not the part with the flats).
2. Remove attenuator cartridge. Do not remove gold plated center conductor contacts. A special tool is required to install these contacts.
3. Install a new attenuator cartridge (HP Part No. 08743-60014) with a washer on each side of the cartridge.

NOTE

The marked end of the cartridge has the lowest reflection and should go into the coupler.

4. Install the round stainless steel part removed in step 1.

Figure 4-2. Insertion Loss Troubleshooting (Sheet 3 of 4)

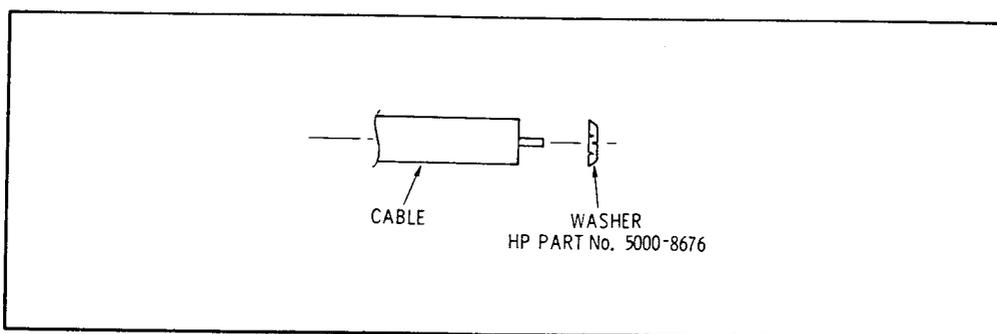


Figure 4-3. Position of Outer Conductor Washer

SECTION V REPLACEABLE PARTS

5-1. INTRODUCTION.

5-2. This section contains information for ordering replaceable parts. Parts are listed in alpha-numerical order by reference designation together with their HP stock numbers and descriptions.

5-3. ORDERING INFORMATION.

5-4. When ordering a replacement part listed in Table 5-1:

a. Quote the Hewlett-Packard stock number for the part.

b. Address the order or inquiry to the nearest Hewlett-Packard sales and service office listed at the rear of this manual.

5-5. To order a part not listed in the tables:

a. Give a complete description of the part including its function and location.

b. Give the instrument model number and complete serial number.

c. Address the order of inquiry to the nearest Hewlett-Packard sales and service office listed at the rear of this manual.

REFERENCE DESIGNATORS

A = assembly	F = fuse	MP = mechanical part	V = vacuum, tube, neon bulb, photocell, etc.
B = motor	FL = filter	P = plug	VR = voltage regulator
BT = battery	IC = integrated circuit	Q = transistor	W = cable
C = capacitor	J = jack	R = resistor	X = socket
CP = coupler	K = relay	RT = thermistor	Y = crystal
CR = diode	L = inductor	S = switch	Z = tuned cavity, network
DL = delay line	LS = loud speaker	T = transformer	
DS = device signaling (lamp)	M = meter	TB = terminal board	
E = misc electronic part	MK = microphone	TP = test point	

ABBREVIATIONS

A = amperes	H = henries	N/O = normally open	RMO = rack mount only
AFC = automatic frequency control	HDW = hardware	NPO = negative positive zero (zero temperature coefficient)	RMS = root-mean square
AMPL = amplifier	HEX = hexagonal	NPN = negative-positive-negative	RWV = reverse working voltage
BFO = beat frequency oscillator	HG = mercury	NRFR = not recommended for field replacement	S-B = slow-blow
BE CU = beryllium copper	HR = hour(s)	NSR = not separately replaceable	SCR = screw
BH = binder head	HZ = hertz	OBD = order by description	SE = selenium
BP = bandpass	IF = intermediate freq	OH = oval head	SECT = section(s)
BRS = brass	IMPG = impregnated	OX = oxide	SEMICON = semiconductor
BWO = backward wave oscillator	INCD = incandescent	P = peak	SI = silicon
CCW = counter-clockwise	INCL = include(s)	PC = printed circuit	SIL = silver
CER = ceramic	INS = insulation(ed)	PF = picofarads = 10 ⁻¹² farads	SL = slide
CMO = cabinet mount only	INT = internal	PH BRZ = phosphor bronze	SPG = spring
COEF = coefficient	K = kilo = 1000	PHL = Phillips	SPL = special
COM = common	LH = left hand	PIV = peak inverse voltage	SST = stainless steel
COMP = composition	LIN = linear taper	PNP = positive-negative-positive	SR = split ring
COMPL = complete	LK WASH = lock washer	P/O = part of	STL = steel
CONN = connector	LOG = logarithmic taper	POLY = polystyrene	TA = tantalum
CP = cadmium plate	LPF = low pass filter	PORC = porcelain	TD = time delay
CRT = cathode-ray tube	M = milli = 10 ⁻³	POS = position(s)	TGL = toggle
CW = clockwise	MEG = meg = 10 ⁶	POT = potentiometer	THD = thread
DEPC = deposited carbon	MET FLM = metal film	PP = peak-to-peak	TI = titanium
DR = drive	MET OX = metallic oxide	PT = point	TOL = tolerance
ELECT = electrolytic	MFR = manufacturer	PWV = peak working voltage	TRIM = trimmer
ENCAP = encapsulated	MHZ = mega hertz	RECT = rectifier	TWT = traveling wave tube
EXT = external	MINAT = miniature	RF = radio frequency	U = micro = 10 ⁻⁶
F = farads	MOM = momentary	RH = round head or right hand	VAR = variable
FH = flat head	MTG = mounting		VDCW = dc working volts
FIL H = fillister head	MY = "mylar"		W/ = with
FXD = fixed	N = nano (10 ⁻⁹)		W = watts
G = giga (10 ⁹)	N/C = normally closed		WIV = working inverse voltage
GE = germanium	NE = neon		WW = wirewound
GL = glass	NI PL = nickel plate		W/O = without
GRD = ground(ed)			

Table 5-1. Reference Designation Index

Reference Designation	Part No.	Description #	Note
A1	08743-60001	POWER SUPPLY ASSY	
A1C1	0160-2930	C:FXD CER 0.01 UF +80-20% 100VDCW	
A1C2	0180-0141	C:FXD ELECT 50 UF +75-10% 50VDCW	
A1CR1	1901-0026	DIODE:SILICON 0.75A 200PIV	
A1CR2	1901-0026	DIODE:SILICON 0.75A 200PIV	
A1CR3	1901-0026	DIODE:SILICON 0.75A 200PIV	
A1CR4	1901-0026	DIODE:SILICON 0.75A 200PIV	
A1CR5	1901-0200	DIODE:SILICON 3A 100PIV	
A1CR6	1902-3193	DIODE BREAKDOWN:13.3V 5%	
A1Q1	1854-0071	TRANSISTOR:SILICON NPN	
A1Q2	1854-0039	TRANSISTOR:SILICON 2N3053	
A1Q3	1854-0071	TRANSISTOR:SILICON NPN	
A1R1	0698-3640	R:FXD MET OX 1.8K OHM 5% 2W	
A1R2	0757-0421	R:FXD MET FLM 825 OHM 1% 1/8W	
A1R3	0757-0199	R:FXD MET FLM 21.5K OHM 1% 1/8W	
A1R4	0811-1672	R:FXD WW 3.3 OHM 5% 2W	
A1R5	0698-3154	R:FXD MET FLM 4.22K OHM 1% 1/8W	
A1R6	0757-0438	R:FXD MET FLM 5.11K OHM 1% 1/8W	
A1R7	2100-1758	R:VAR WW 1K OHM 10% LIN 1/2W	
A2	08743-60002	SWITCH ASSY	
A2CR1	1901-0025	DIODE:SILICON 100WV 100MA	
A2CR2	1901-0025	DIODE:SILICON 100WV 100MA	
A2DS1	2140-0213	LAMP:INCANDESCENT 28V 0.04A	
A2DS2	2140-0213	LAMP:INCANDESCENT 28V 0.04A	
A2Q1	1854-0071	TRANSISTOR:SILICON NPN	
A2Q2	1854-0071	TRANSISTOR:SILICON NPN	
A2R1	0757-0438	R:FXD MET FLM 5.11K OHM 1% 1/8W	
A2R2	0698-3450	R:FXD MET FLM 42.2K OHM 1% 1/8W	
A2R3	0757-0438	R:FXD MET FLM 5.11K OHM 1% 1/8W	
A2R4	0757-0438	R:FXD MET FLM 5.11K OHM 1% 1/8W	
A2R5	0698-3450	R:FXD MET FLM 42.2K OHM 1% 1/8W	
A2R6	0757-0438	R:FXD MET FLM 5.11K OHM 1% 1/8W	
A2R7	0757-1000	R:FXD MET FLM 51.1 OHM 1% 1/2W	
A2S1		NOT SEPARATELY REPLACEABLE	
A2S2		NOT SEPARATELY REPLACEABLE	
A3	08743-60038	RELAY DRIVER ASSY	
A3C1	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A3CR1	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR2	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR3	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR4	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR5	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR6	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR7	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR8	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR9	1901-0025	DIODE:SILICON 100WV 100MA	
A3CR10	1901-0025	DIODE:SILICON 100WV 100MA	

See introduction to this section for ordering information

Table 5-1. Reference Designation Index (Cont.)

Reference Designation	Part No.	Description #	Note
A3CR11	1902-0551	DIODE BREAKDOWN:6.19V 5%	
A3Q1	1854-0039	TRANSISTOR:SILICON 2N3053	
A3Q2	1854-0039	TRANSISTOR:SILICON 2N3053	
A3Q3	1853-0012	TRANSISTOR:SILICON PNP	
A3Q4	1853-0012	TRANSISTOR:SILICON PNP	
A3Q5	1854-0071	TRANSISTOR:SILICON NPN	
A3Q6	1853-0020	TRANSISTOR:SILICON PNP	
A3Q7	1853-0020	TRANSISTOR:SILICON PNP	
A3Q8	1854-0071	TRANSISTOR:SILICON NPN	
A3Q9	1854-0071	TRANSISTOR:SILICON NPN	
A3R1	0698-3408	R:FXD MET FLM 2.15K OHM 1% 1/2W	
A3R2	0698-3408	R:FXD MET FLM 2.15K OHM 1% 1/2W	
A3R3	0757-0199	R:FXD MET FLM 21.5K OHM 1% 1/8W	
A3R4	0757-0443	R:FXD MET FLM 11.0K OHM 1% 1/8W	
A3R5	0698-0084	R:FXD MET FLM 2.15K OHM 1% 1/8W	
A3R6	0757-0442	R:FXD MET FLM 10.0K OHM 1% 1/8W	
A3R7	0698-0084	R:FXD MET FLM 2.15K OHM 1% 1/8W	
A3R8	0757-0442	R:FXD MET FLM 10.0K OHM 1% 1/8W	
A3R9	0698-3136	R:FXD MET FLM 17.8K OHM 1% 1/8W	
A3R10	0757-0290	R:FXD MET FLM 6.19K OHM 1% 1/8W	
A3R11	0757-0442	R:FXD MET FLM 10.0K OHM 1% 1/8W	
A3R12	0757-1078	R:FXD MET FLM 1.47K OHM 1% 1/2W	
A3R13	0698-3406	R:FXD MET FLM 1.33K OHM 1% 1/2W	
A3R14	0698-3406	R:FXD MET FLM 1.33K OHM 1% 1/2W	
A3R15	0757-0462	R:FXD MET FLM 75K OHM 1% 1/8W	
A4	08741-60004	LINE STRETCHER ASSY	
A5	08743-60011	RELAY ASSY,UNKNOWN PORT	
A6	08743-60009	RELAY ASSY,TEST PORT	
A7	08743-60010	RELAY ASSY,TRANSMISSION RETURN PORT	
C1	0180-0198	C:FXD ELECT 1500 UF 50/60VDCW	
DC1	08743-60005	DIRECTIONAL COUPLER(TEST)	
DC2	08743-60004	DIRECTIONAL COUPLER(INPUT)	
DS1	2140-0244	LAMP:GLOW	
F1	2110-0336 2110-0340	FUSE:CARTRIDGE 1/2A 250V SLOW-BLOW(115VAC) FUSE:CARTRIDGE 0.25A SLOW-BLOW(230VAC)	
J1	1251-0085	CONNECTOR:FEMALE 36-PIN MINIATURE	
J2	1251-2357	SOCKET:3-PIN(AC POWER)	
Q1	1854-0072	TRANSISTOR:SILICON NPN 2N3054	
R1	0698-3162	R:FXD MET FLM 46.4K OHM 1% 1/8W	
S1	3101-1244	SWITCH:PUSHBUTTON SPDT(AC AND PILOT LIGHT)	
S2	3101-1235	SWITCH:SLIDE DPDT(115/230V AC)	
T1	9100-2728	TRANSFORMER:24.4V	
W1	8120-1348	CABLE ASSY:POWER CORD	
W2	08743-20021	CABLE ASSY:DC2 TO W3	
W3	08745-20064	CABLE ASSY:EXTERNAL REFERENCE LINE	

See introduction to this section for ordering information

Table 5-1. Reference Designation Index (Cont.)

Reference Designation	Part No.	Description #	Note
W4	08743-20023	CABLE ASSY:W3 TO A4	
W5	08743-20024	CABLE ASSY:A4 TO A8	
W6	08743-20033	CABLE ASSY:A5 TO DC1	
W7	08743-20026	CABLE ASSY:A6 TO TEST OUTPUT	
W8	08743-20027	CABLE ASSY:DC2 TO UNKNOWN PORT	
W9	08743-20035	CABLE ASSY:A7 TO TRANSMISSION RETURN PORT	
XF1	1400-0084	FUSEHOLDER:EXTRACTOR POST TYPE	
		MISCELLANEOUS	
	0370-0770	LENS	
	5000-6469	LABEL:PUSHBUTTON "TRANS"	
	5000-6470	LABEL:PUSHBUTTON "REFL"	
	08743-60014	10 DB ATTENUATOR CARTRIDGE	
		THIS MANUAL IMPLEMENTS A DIFFERENT COLOR SCHEME FOR THE STANDARD INSTRUMENT. COLORS PRIOR TO THIS CHANGE ARE NOW AVAILABLE AS OPTIONS. REFER TO THE LIST BELOW.	
		8743A STANDARD - INDICATES COLOR SCHEME FOR THE 8740A BEGINNING WITH INSTRUMENTS SERIAL PREFIXED 1226. (INCLUDES MINT GRAY FRONT PANEL AND OLIVE GRAY CABINET).	
		8743A OPTION A85 - INDICATES LIGHT GRAY FRONT PANEL.	
		8743A OPTION X95 - INDICATES COLOR SCHEME FOR 8743A PRIOR TO SERIAL PREFIX 1226. (INCLUDES LIGHT GRAY FRONT PANEL AND BLUE-GRAY CABINET).	
	0370-0974	PUSHBUTTON, JADE GRAY(STANDARD)	
	0370-0767	PUSHBUTTON, GRAY(OPT A85, X95)	
	0370-0975	BEZEL:END CAP(LEFT)JADE GRAY(STANDARD)	
	0370-0765	BEZEL:END CAP(LEFT)GRAY(OPT A85, X95)	
	0370-0976	BEZEL:END CAP(RIGHT)JADE GRAY(STANDARD)	
	0370-0766	BEZEL:END CAP(RIGHT)GRAY(OPT A85, X95)	
	5000-8705	SIDE COVER:REAR,OLIVE GRAY(STANDARD)	
	5000-0736	SIDE COVER:REAR,BLUE-GRAY(OPT X95)	
	5000-8707	SIDE COVER:FRONT,OLIVE GRAY(STANDARD)	
	5000-0737	SIDE COVER:FRONT,BLUE-GRAY(OPT X95)	
	5040-0351	BEZEL:COUNTER,MINT GRAY(STANDARD)	
	5040-0204	BEZEL:COUNTER,GRAY(OPT A85, X95)	
	5060-0268	COVER ASSY:BOTTOM,OLIVE GRAY(STANDARD)	
	5060-0228	COVER ASSY:BOTTOM,BLUE-GRAY(OPT X95)	
	5060-8737	RETAINER:HANDLE ASSY,OLIVE GRAY(STANDARD)	
	5060-0766	RETAINER:HANDLE ASSY,BLUE-GRAY(OPT X95)	
	08743-00018	PANEL:REAR,MINT GRAY(STANDARD)	
	08743-00002	PANEL:REAR,LIGHT GRAY(OPT X95)	
	08743-00019	COVER ASSY:TOP,OLIVE GRAY(STANDARD)	
	08743-00004	COVER ASSY:TOP,BLUE-GRAY(OPT X95)	
	08743-00020	TOP COVER:REAR CORNER,OLIVE GRAY(STANDARD)	
	08743-00005	TOP COVER:REAR CORNER,BLUE-GRAY(OPT X95)	
	08743-00021	FILLER PLATE:CENTER,OLIVE GRAY(STANDARD)	
	08743-00006	FILLER PLATE:CENTER,BLUE-GRAY(OPT X95)	
	08743-00022	FILLER PLATE:SIDE,OLIVE GRAY(STANDARD)	
	08743-00007	FILLER PLATE:SIDE,BLUE-GRAY(OPT X95)	

See introduction to this section for ordering information

Reference Designation	Part No.	Description #	Note
	08743-00024 08743-00013 08743-00023 08743-00014 08745-20068 08745-2019 08745-20069 08745-2020	PANEL: FRONT, MINT GRAY(STANDARD) PANEL: FRONT, LIGHT GRAY(OPT A85, X95) SUB-DECK, OLIVE GRAY(STANDARD) SUB-DECK, BLUE-GRAY(OPT X95) TRIM: LOWER FRAME, MINT GRAY(STANDARD) TRIM: LOWER FRAME, LIGHT GRAY(OPT A85, X95) TRIM: UPPER FRAME, MINT GRAY(STANDARD) TRIM: UPPER FRAME, LIGHT GRAY(OPT A85, X95)	

See introduction to this section for ordering information

SECTION VI SCHEMATIC DIAGRAMS

6-1. INTRODUCTION.

6-2. The schematic diagrams in this section represent the circuits electrically. They are not wiring diagrams, though wire colors are given where practical.

6-3. The circuits are arranged according to signal flow; consequently, some switch and circuit assemblies may be shown in part on more than one diagram. If so, the reference designation is preceded by P/O, for "Part Of", and is followed by a notation of the

number of parts into which the assembly has been divided.

6-4. Some of the general information obtainable from the schematic diagrams is shown in Figure 6-1. Notes and explanations of symbols pertaining to all the diagrams are contained in Figure 6-2. Notes about specific components, circuits, or conditions are given on the diagram to which they apply.

6-5. As an aid to finding components and assemblies in the set of diagrams, each diagram has a box labelled Reference Designations that contains all the reference designations appearing on the diagram.

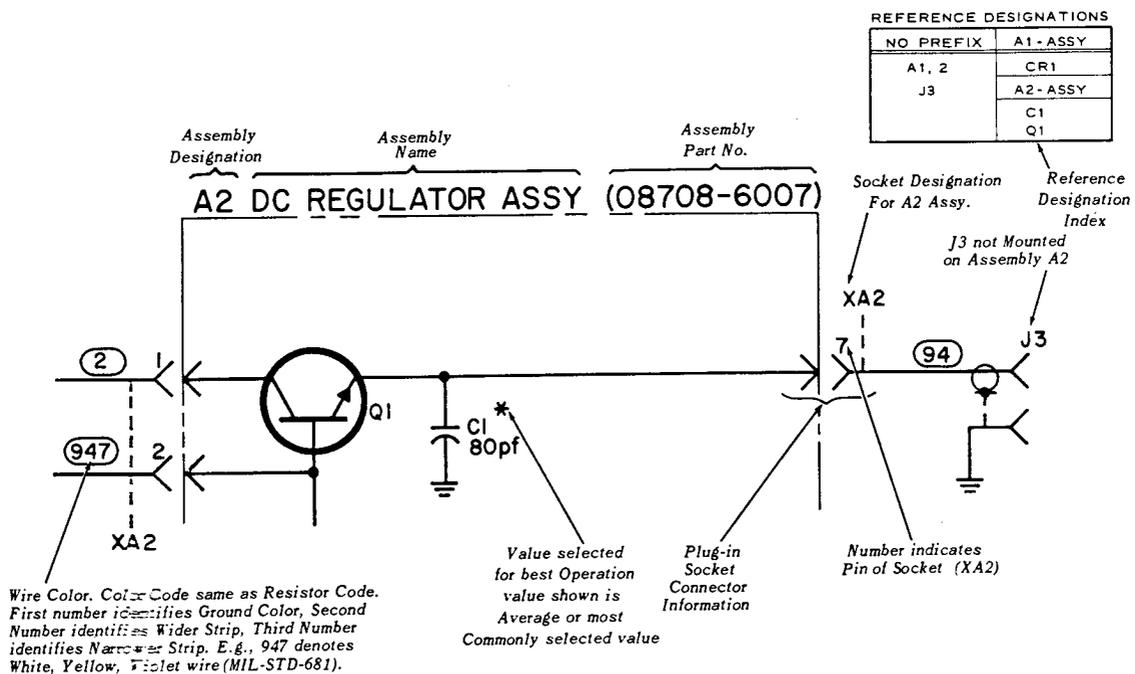


Figure 6-1. General Information on Schematic Diagrams

1. Resistance in ohms, capacitance in microfarads unless otherwise noted.
2. Voltages shown on schematic diagrams taken with HP 414A AUTOVOLTMETER: input resistance 100 M Ω , accuracy $\pm(1\%$ of reading $+0.5\%$ of full scale).
3. Unless otherwise indicated on schematic, voltages taken with negative terminal of voltmeter connected to A7TP2.
4. * Asterisk denotes a factory-selected value. Value shown is typical. Part may be omitted.
5. P/O = Part Of.
6.  Encloses front panel designations.
 Encloses rear panel designation.
7.  Circuit assembly borderline.
 Other assembly borderline.
8.  Numbers in circles on circuit assemblies show locations of test points. Matching numbers are etched on the circuit assemblies.
9.  Encloses wire color code. Code used (MIL-STD-681) is the same as the resistor color code. First number identifies the ground color, second number the wider stripe, and the third number identifies the narrower stripe. E. G.,  denotes white ground, yellow wide stripe, violet narrow stripe.
10.  Voltage regulator (breakdown) diode.
11.  Power Supply Common (not chassis ground).
12.  Screwdriver adjustment.
13.  Panel control.
14.  Heavy dashed line indicates feedback path.
15.  Wiper moves toward CW with clockwise rotation of control as viewed from shaft or knob.

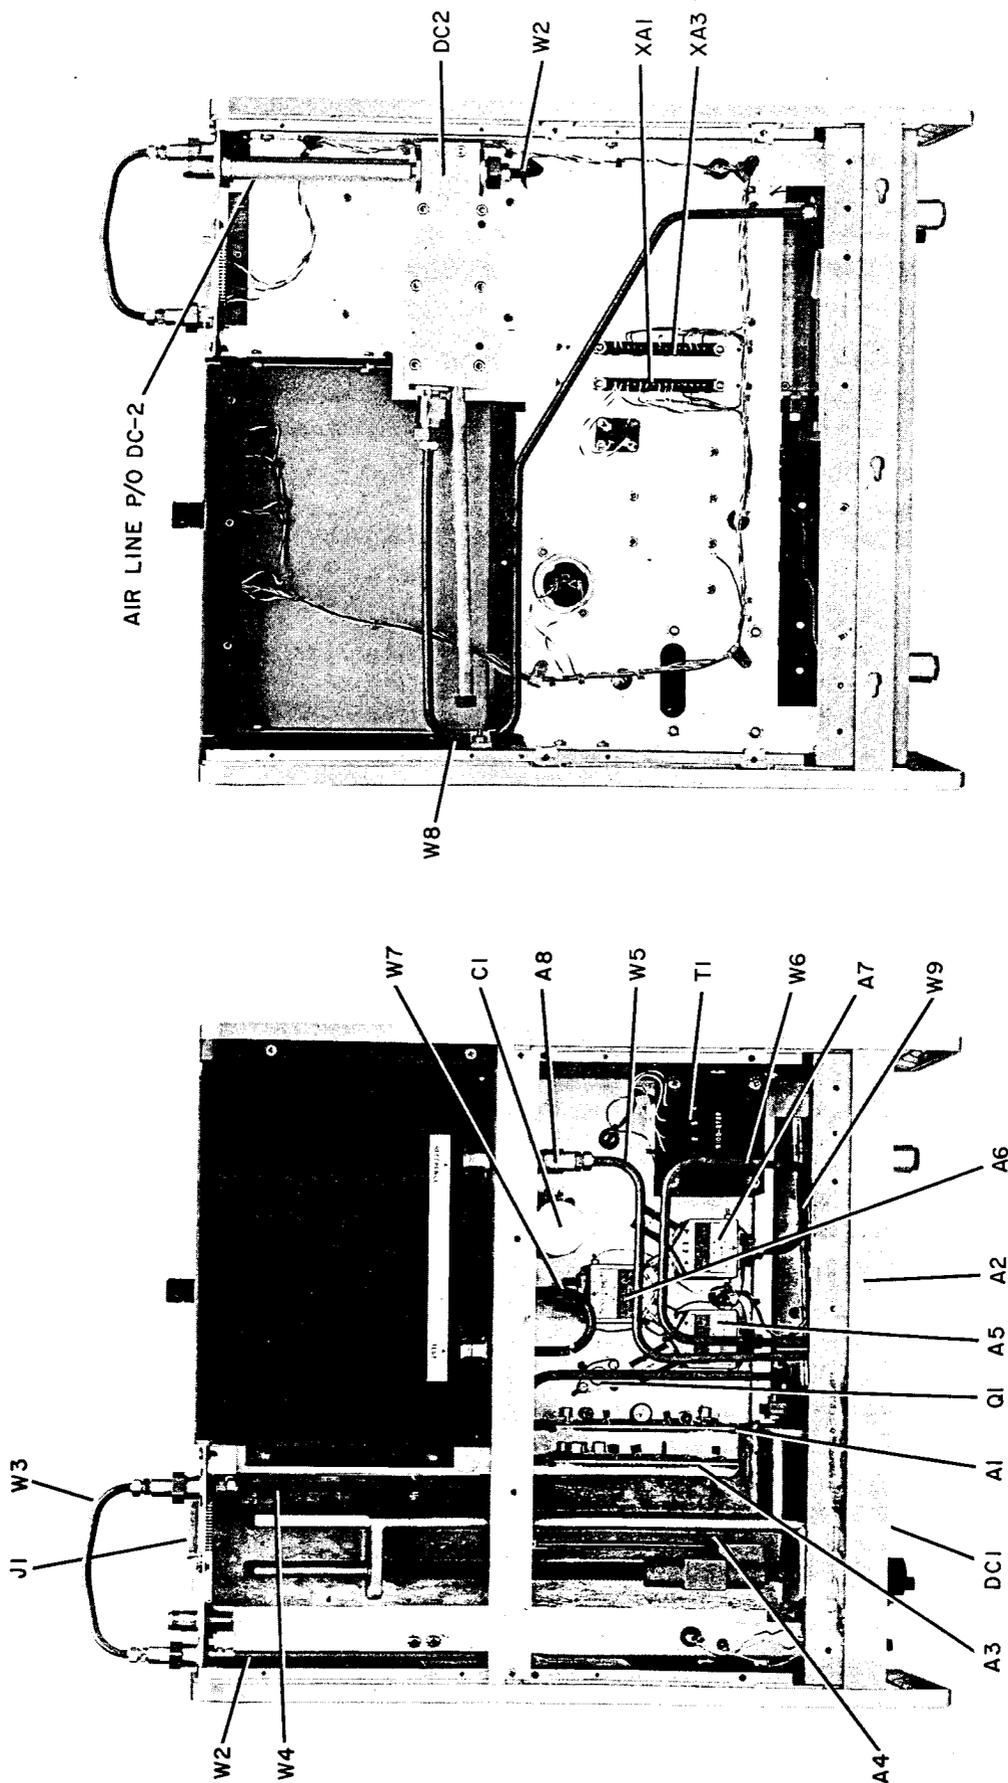


Figure 6-3. 8743A Component Identification, Top View

Figure 6-4. 8743A Component Identification, Bottom View


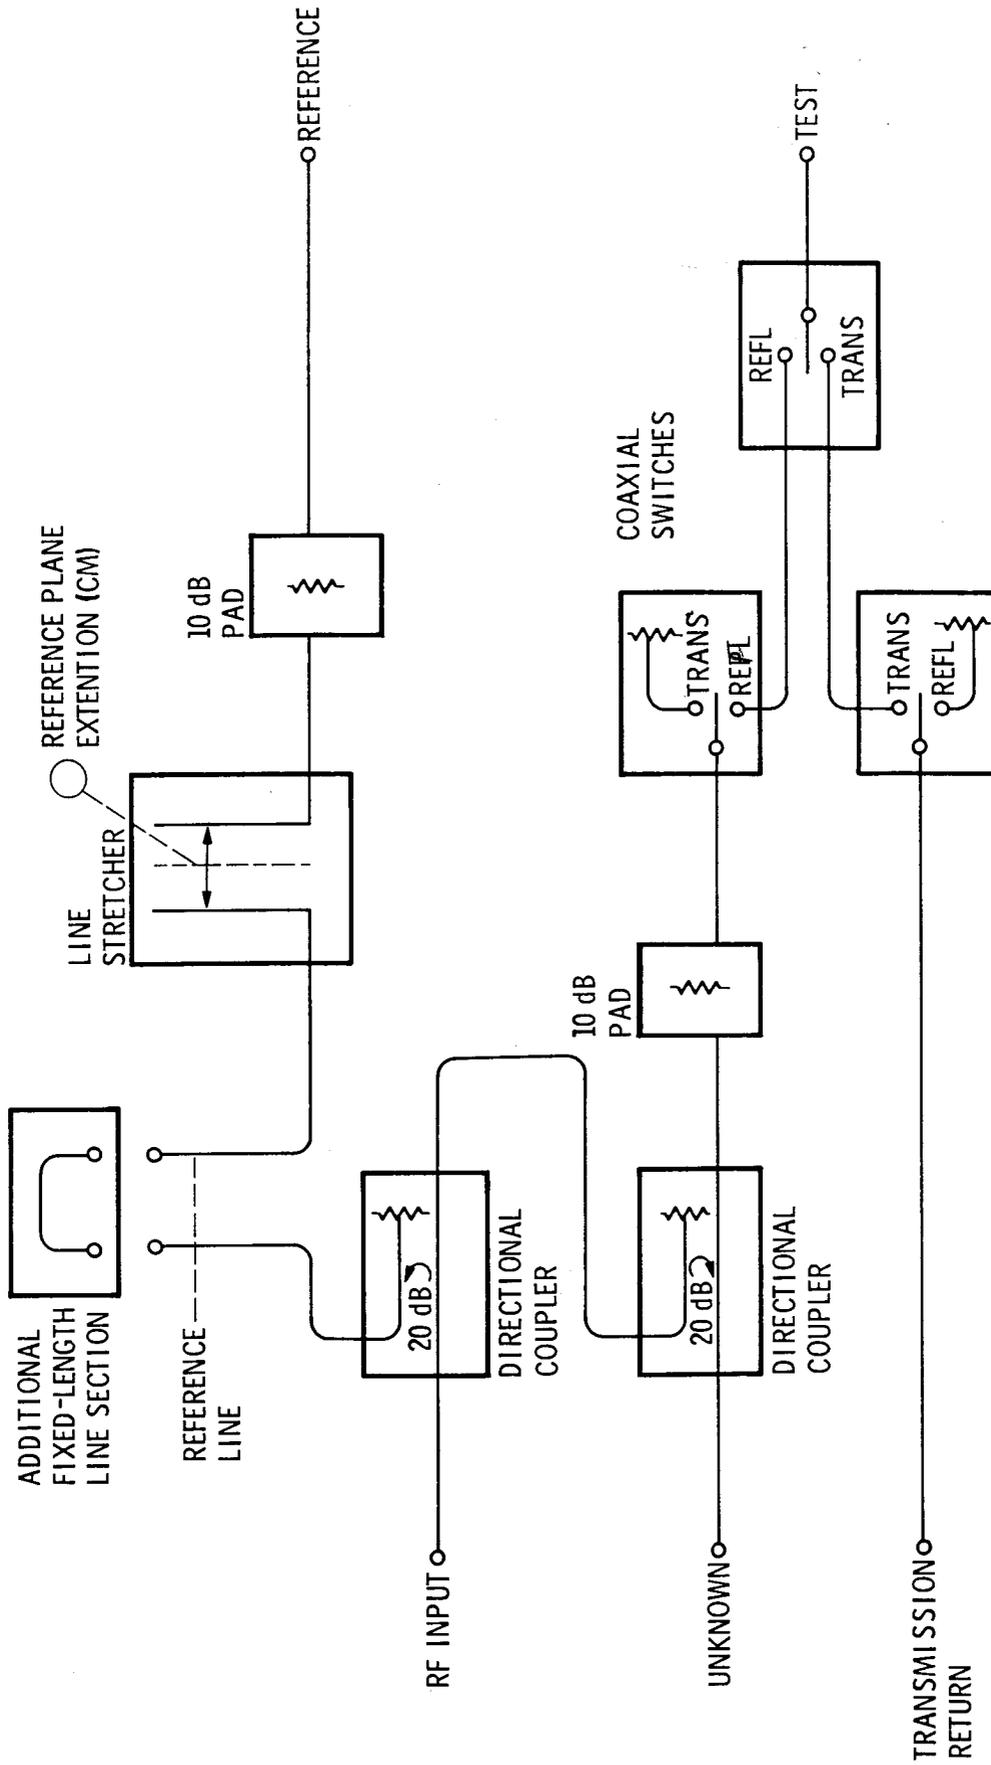


Figure 6-5. Simplified RF Schematic Diagram


MANUAL CONTROL

REFLECTION

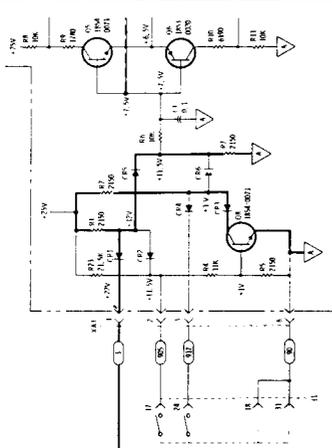

REFLECTION
A high output from the flip-flop reverse biases CR1. With CR1 open the majority of current through R1 flows through CR5 and R7. The voltage across R7 is > 6V which turns Q5 on and Q6 off.


TRANSMISSION

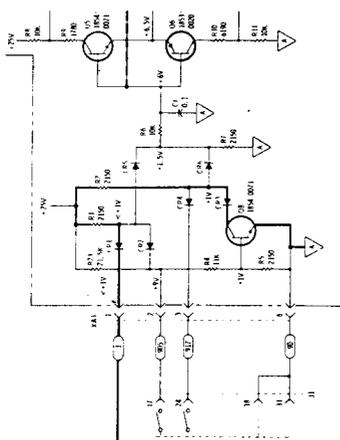

TRANSMISSION
A low output from the flip-flop causes CR1 to conduct which reverse biases CR5. The voltage across R7 decreases to < 3V which turns Q5 off and Q6 on.

REMOTE CONTROL


REFLECTION

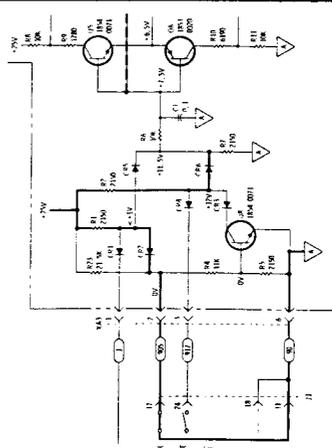

REMOTE OPERATION SELECT
Shorting pin 17 to pin 18 or 36 of J1 causes CR2 to conduct and clamps R1-CR5 junction to about +1V. With R1-CR5 junction clamped the flip-flop output has no effect, and CR5 is open. Thus manual (front-panel) operation is disabled.

REFLECTION
Shorting pin 17 to pin 18 or 36 of J1 cuts Q9 off by shorting base to emitter. With Q9 cut off CR6 conducts and the voltage across R7 is high (> 6V) which turns Q5 on and Q6 off.

TRANSMISSION

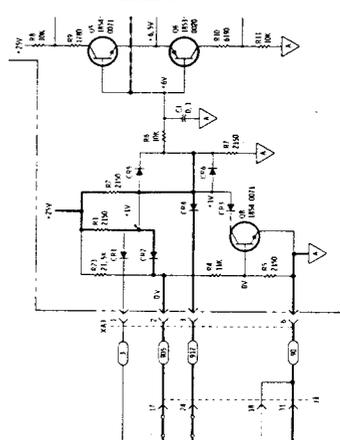


REMOTE OPERATION SELECT
Shorting pin 17 to pin 18 or 36 of J1 causes CR2 to conduct and clamps R1-CR5 junction to about +1V. With R1-CR5 junction clamped the flip-flop output has no effect, and CR5 is open. Thus manual (front-panel) operation is disabled.

TRANSMISSION
Shorting pin 24 to pin 18 or 36 of J1 causes CR4 to conduct and CR6 is open. The voltage across R7 is low (< 3V) which turns Q5 off and Q6 on.

Figure 6-7. Relay Driver Input Circuit Talking Schematic Diagram

FLIP-FLOP. In manual or front panel operation the flip-flop controls the relay driver circuit. The flip-flop output is taken from the collector or Q2. Depressing the REFLECTOR pushbutton grounds the base of Q2, cutting Q2 off. The output is then high. Depressing the TRANS pushbutton cuts Q1 off. When Q1 is cut-off its collector is high which causes Q2 to conduct. The output of Q2 is then low.

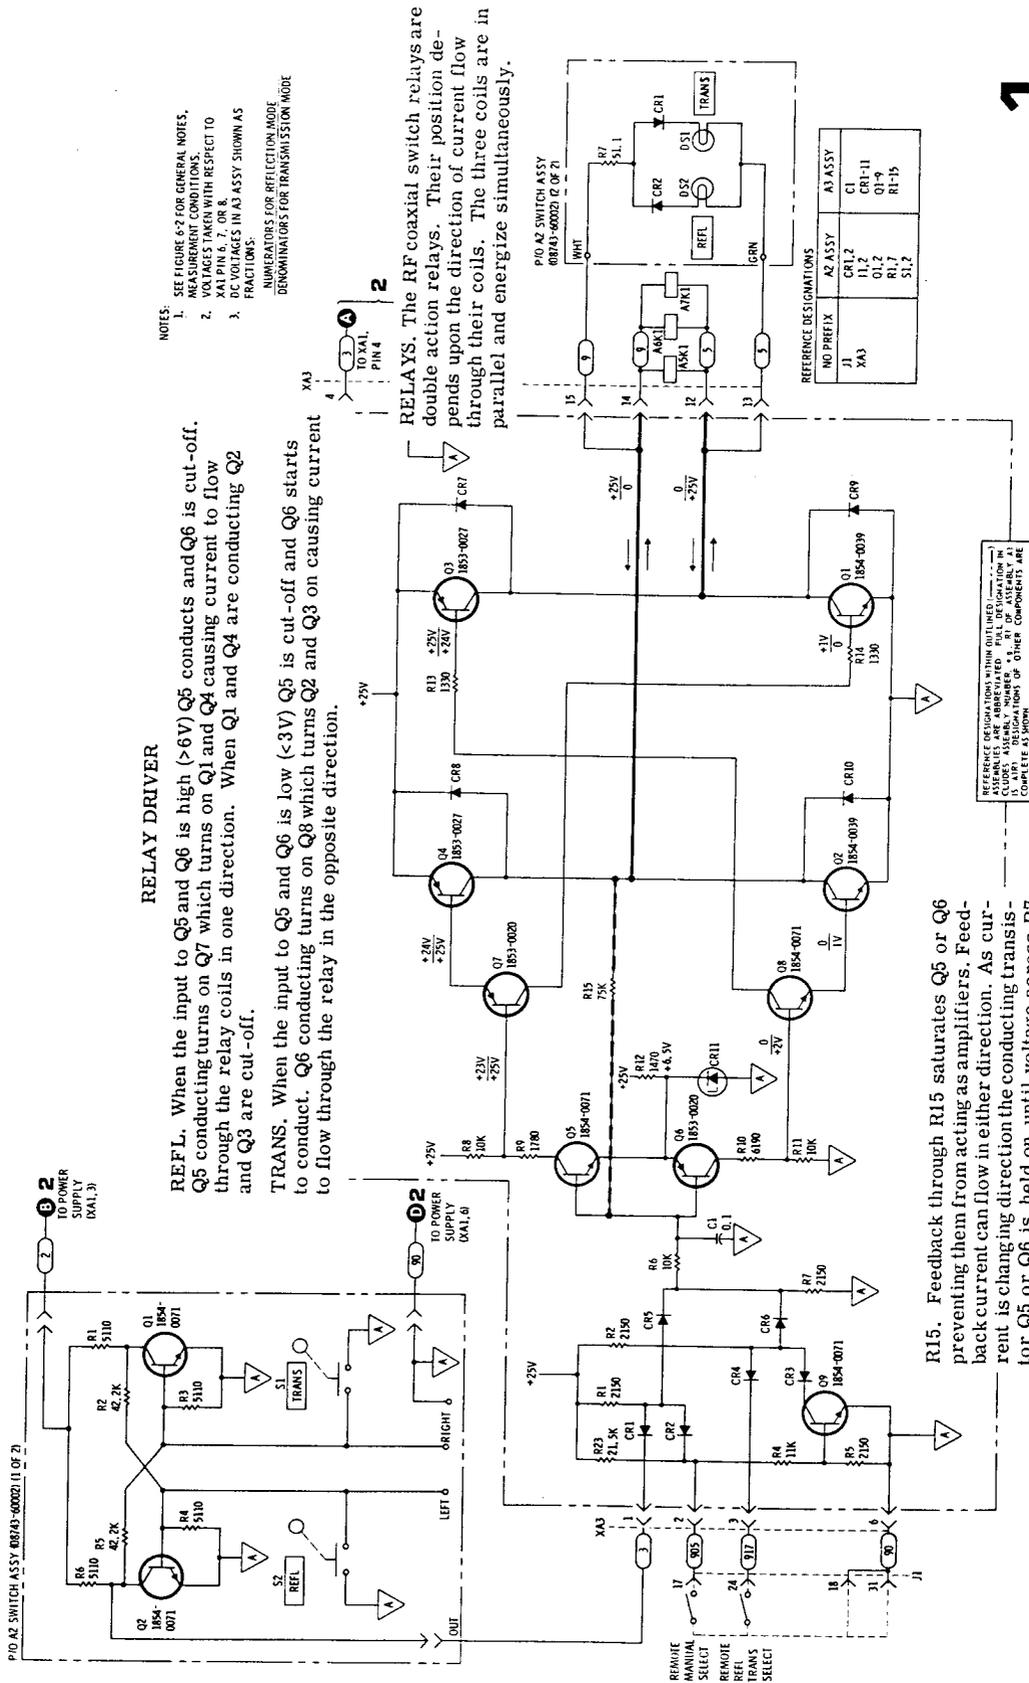

RELAY DRIVER

REFL. When the input to Q5 and Q6 is high (>6V) Q5 conducts and Q6 is cut-off. Q5 conducting turns on Q7 which turns on Q1 and Q4 causing current to flow through the relay coils in one direction. When Q1 and Q4 are conducting Q2 and Q3 are cut-off.

TRANS. When the input to Q5 and Q6 is low (<3V) Q5 is cut-off and Q6 starts to conduct. Q6 conducting turns on Q8 which turns Q2 and Q3 on causing current to flow through the relay in the opposite direction.

RELAYS. The RF coaxial switch relays are double action relays. Their position depends upon the direction of current flow through their coils. The three coils are in parallel and energize simultaneously.

- NOTES:**
- SEE FIGURE 6-7 FOR GENERAL NOTES, MEASUREMENT CONDITIONS.
 - VOLTAGES TAKEN WITH RESPECT TO XA1 PIN 6, 7, OR 8.
 - DC VOLTAGES IN A3 ASSY SHOWN AS FRACTIONS.
- NUMERATORS FOR REFLECTION MODE DENOMINATORS FOR TRANSMISSION MODE**

R15. Feedback through R15 saturates Q5 or Q6 preventing them from acting as amplifiers. Feedback current can flow in either direction. As current is changing direction the conducting transistor Q5 or Q6 is held on until voltage across R7 passes through the range of $\approx 3V$ to $\approx 6V$, preventing the relay driver from switching on noise. If the relay driver is in TRANS mode it will not switch to REFL mode until voltage across R7 is above +6V. If the relay driver is in REFL mode, it will not switch to TRANS mode until voltage across R7 is below 3V.

REFERENCE DESIGNATIONS WITH OULINED CIRCLES, ASSEMBLY NUMBER 5, SET OF ASSEMBLY #1 COMPLETE AS SHOWN

REFERENCE DESIGNATIONS

NO PREFIX	A2 ASSY	A3 ASSY
J1	CR1,2	C1
XA3	11,2	CR1-11
	01,2	01-9
	R1,7	R1-15
	51,2	

Figure 6-8. Relay Driver Talking Schematic Diagram

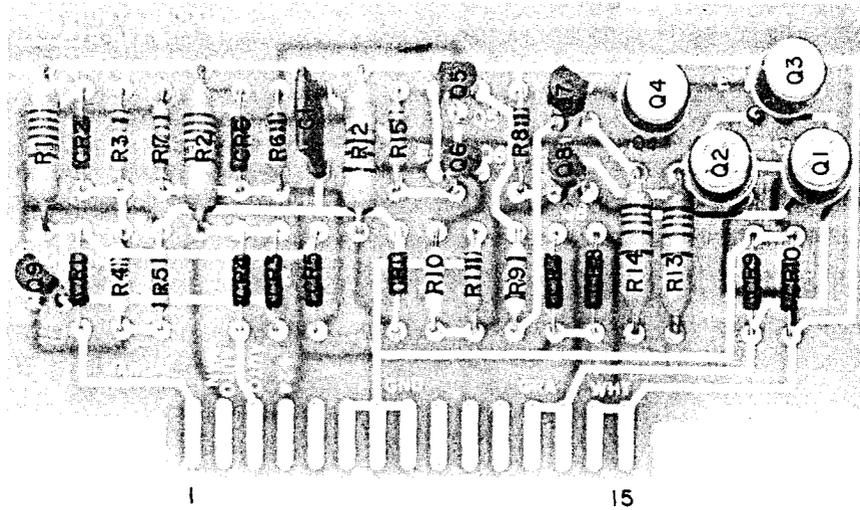


Figure 6-9. Relay Driver Assy Component Identification
 (Applies to A3 Assembly, HP Part No. 08743-60038
 except for Q1 through Q4, which are identified on
 the PC Board.)

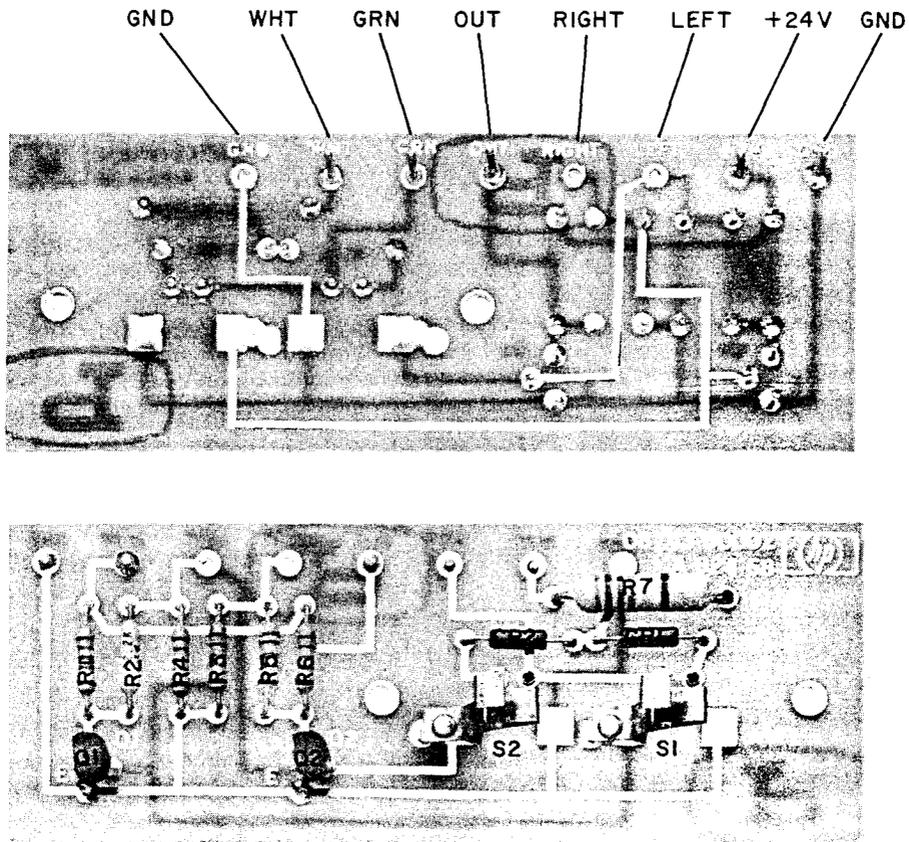


Figure 6-10. Switch Assy Component Identification

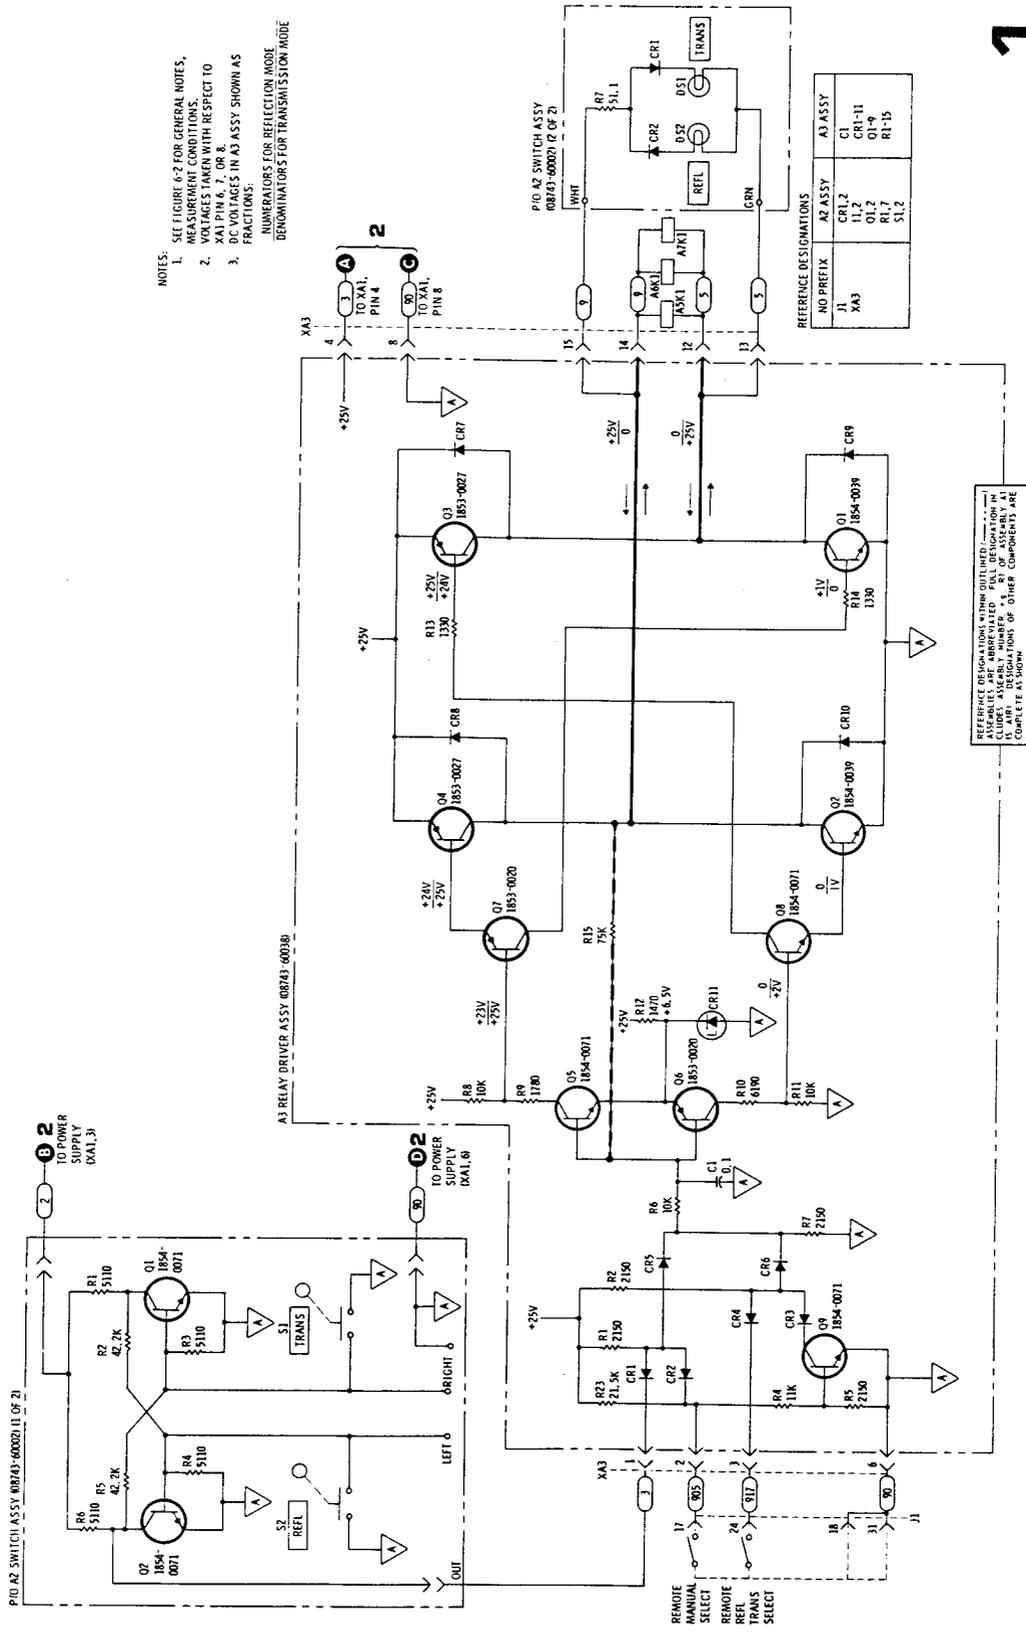


Figure 6-11. Relay Driver Assy Schematic Diagram

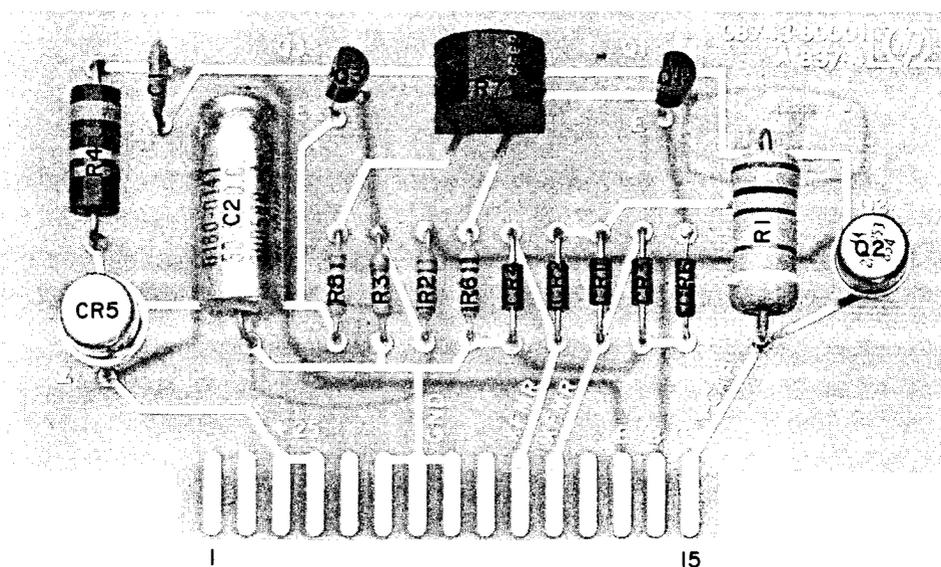


Figure 6-12. Power Supply Assy Component Identification



MANUAL CHANGES

To adapt this manual to instruments with Serial Numbers listed in the table below, make the indicated manual changes.

Information for adapting this manual to instruments with Serial Numbers not listed below may be included in a yellow MANUAL CHANGES insert supplied with this manual. Information about Serial Numbers not covered in any of these ways can be obtained from the nearest Hewlett-Packard office.

► NEW ITEM.

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES	SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
834-	A, B, C, D		
917, 928	B, C, D		
968-, 990-	C, D		
1141	D		

CHANGE A

Page 5-3, Table 5-1:

Change A3R12 to HP Part No. 0757-0816 R: FXD MET FLM 681 OHM 1% 1/2W.

Change A3R15 to HP Part No. 0757-0458 R: FXD MET FLM 51.1K OHM 1% 1/8W.

CHANGE B

Page 5-3, Table 5-1:

Change F1 (115V) to HP Part No. 2110-0008 FUSE: 1/2A SLOW-BLOW.

Change F1 (230V) to HP Part No. 2110-0340 FUSE: 0.25A SLOW-BLOW.


Change S1 to HP Part No. 3101-0100 (Same description).

Change S2 to HP Part No. 3101-1235 (Same description).

Change W1 to HP Part No. 8120-0078 (Same description).

Page 6-11, Figure 6-13:

Replace power supply primary circuit with partial schematic shown below.

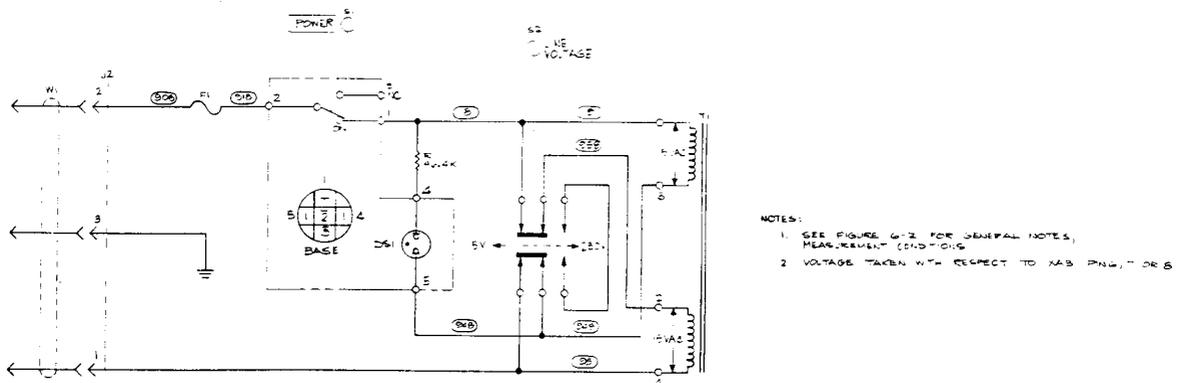

CHANGE C

Page 5-2, Table 5-1:

Change A1R4 to HP Part No. 0811-1672 R: FXD WW 0.82 OHM 5% 2W.

Change A3 to HP Part No. 08743-60003 (Same description).

CHANGE D


Page 3-15, Figure 3-12:

Use the following Figure 3-12 in place of the Figure 3-12 shown in the manual.

Page 5-4, Table 5-1:

Delete 08743-00024 listing.

PUSHBUTTON LAMP REPLACEMENT

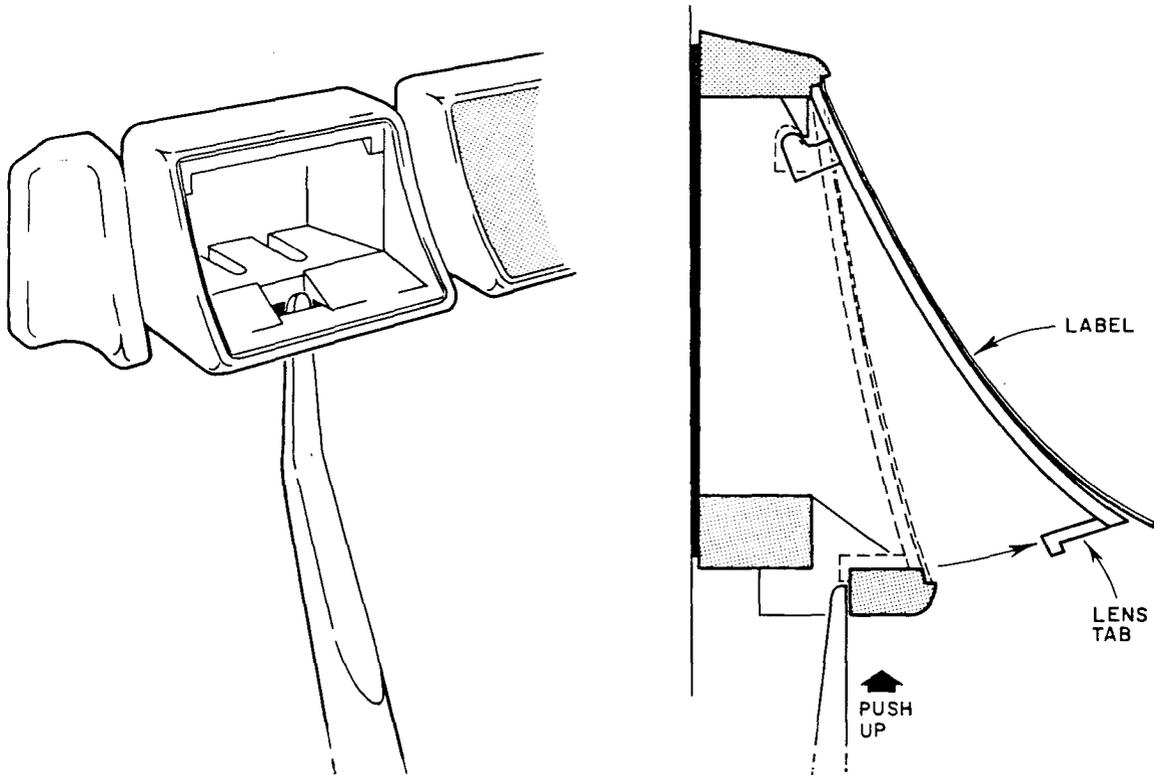

1. **DO NOT REMOVE PUSHBUTTON.** Remove pushbutton lens and label by inserting a soldering aid or other small, blunt tool in the slot in the bottom of the pushbutton. Press tool forward against lens tab to release lens and label. If pushbutton comes out see NOTE in Step 3.
2. Remove defective lamp. A needle-nose pliers or tweezers can be used as an extracting tool. Install new lamp (HP part number 2140-0213).
3. Press lens and label into place in pushbutton opening.

NOTE:

- If the pushbutton has been removed:
- a. Reinstall pushbutton, lens and label removed.
 - b. Insert the metal contactor in slot of pushbutton as shown. If contactor is not inserted in slot properly, switch may stay on at all times.

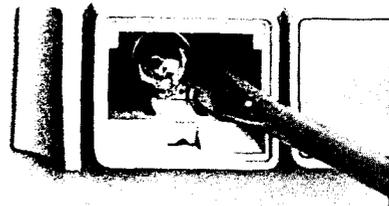


Figure A-1. Pushbutton Lamp Replacement

HEWLETT  **PACKARD**
SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA

Telectra
Empresa Técnica de Equipamentos
Electrónicos S.A.R.L.
R. Barbosa Rodrigues, 42-4 DT
Cava Postal, 6487
Luanda
Tel: 355156
Cable: TELECTRA Luanda

AUSTRALIA

Hewlett-Packard Australia Pty Ltd
31-41 Joseph Street
Blackburn, Victoria 3130
P.O. Box 36
Doncaster East, Victoria 3109
Tel: 895651
Telex: 31-024
Cable: HEWPARD Melbourne

Hewlett-Packard Australia Pty Ltd

31 Bridge Street
Pymble
New South Wales 2073
Tel: 4496566
Telex: 21561
Cable: HEWPARD Sydney
Hewlett-Packard Australia Pty Ltd
153 Greenhill Road
Parkside, S.A. 5063
Tel: 2725911
Telex: 62536
Cable: HEWPARD Adelaide
Hewlett-Packard Australia Pty Ltd
141 Stirling Highway
Needlands, W.A. 6009
Tel: 3865455
Telex: 33859
Cable: HEWPARD Perth
Hewlett-Packard Australia Pty Ltd
121 Wollongong Street
Fyshwick, A.C.T. 2609
Tel: 804244
Telex: 62650
Cable: HEWPARD Canberra
Hewlett-Packard Australia Pty Ltd
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, Queensland 4000
Tel: 225144
Cable: HEWPARD Brisbane

BANGLADESH

The General Electric Co. of Bangladesh Ltd
Magnet House 72
Dilkusha Commercial Area
Motijheel, Dhaca 2
Tel: 252415, 252419
Telex: 734
Cable: GECDAC Dhaca

ETHIOPIA

Abelja Abdulmalik
P.O. Box 2635
Addis Ababa
R. Barossa Rodrigues, 42-4 DT
Cava Postal, 6487
Luanda
Tel: 355156
Cable: TELECTRA Luanda

GUAM

Medical Only
Guam Medical Supply, Inc.
Suite C, Airport Plaza
P.O. Box 8547
Tamuning 96911
Tel: 646-4513
Cable: EARMED Guam

HONG KONG

Schmidt & Co. (Hong Kong) Ltd
Wing On Centre, 26th Floor
Connaught Road, C
Hong Kong
Tel: 5-455644
Telex: 74766 SCHMC HX

INDIA

Blue Star Ltd
Kasturi Buildings
Jamsheer Tata Rd
Bombay 400 020
Tel: 29 50 21
Telex: 011-2156
Cable: BLUEFROST
Blue Star Ltd
Salas
414-2 Vir Savarkar Marg
Prabhadevi
Bombay 400 025
Tel: 45 78 87
Telex: 011-4093
Cable: FROSTBLUE
Blue Star Ltd
Band Box House
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 011-3751
Cable: BLUESTAR
Blue Star Ltd
Shri Deep
Stadium Road
Ahmedabad 380 014
Tel: 42880
Telex: 234
Cable: BLUEFROST
Blue Star Ltd
7 Hare Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 021-7655
Cable: BLUESTAR
Blue Star Ltd
Bhandari House
7th & 8th Floor
91 Nehru Place
New Delhi 110 024
Tel: 634770 & 635166
Telex: 031-2463
Cable: BLUESTAR

INDONESIA

BERCA Indonesia P.T.
P.O. Box 496 Jkt
Jin. Abu. Muir 62
Jakarta
Tel: 349255, 349886
Telex: 46748 BERSIL IA
Cable: BERSAL
BERCA Indonesia P.T.
P.O. Box 174 Sby
23 Jin. Jimerto
Surabaya
Tel: 42027
Cable: BERCAson

ISRAEL

Electronics Engineering Div.
of Motorola Israel Ltd
16, Kremenetski Street
P.O. Box 25016
Tel-Aviv
Tel: 36973
Telex: 33569 34154
Cable: BASTEL Tel-Aviv

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakayama 5-chome
Yodogawa-ku, Osaka-shi
Osaka 532
Tel: 06-304-6021
Telex: 523-3624
Yokogawa-Hewlett-Packard Ltd.
29-21, Takado-Higashi 3-chome
Suginami-ku, Tokyo 168
Tel: 03-331-6111
Telex: 232-2024 YHP-Tokyo
Cable: YHPMARKET TOK 23 724

Blue Star Ltd

Blue Star House
11-11A, Magarath Road
Bangalore 560 025
Tel: 55668
Telex: 042-430
Cable: BLUESTAR
Blue Star Ltd
Meekashi Mandiram
xxx 1678 Mahatma Gandhi Rd
Cochin 682 016
Tel: 32069, 32161, 32282
Telex: 0865-514
Cable: BLUESTAR

Blue Star Ltd

Blue Star Ltd
1-1-117-1
Sarom Devi Road
Secunderabad 500 003
Tel: 70126, 70127
Telex: 015-459
Cable: BLUEFROST
Blue Star Ltd
2-34 Kodambakkam High Road
Madras 500 034
Tel: 82056
Telex: 041-379
Cable: BLUESTAR

Blue Star Ltd

Blue Star Ltd
154B-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452
Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Hachiumi Building
4th Floor
3-4, Tsukuba
Kumagaya, Satama 360
Tel: 0485-24-6563

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

Blue Star Ltd
15th Floor, Dayongak Bldg - 25-5, 1-A
Chong-Moo-Ro, Chung-Ku
Seoul
Tel: 021-6811, 778-3401 2 3 4
Telex: 22575

Blue Star Ltd

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA
Hewlett-Packard Ges m b H
Handelska-52
P O Box 7
A-1205 Vienna
Tel: 3616277
Cable HEWPAK Vienna
Telex 75923 HEWPAK A

BAHRAIN
Medical Only
Wag Pharmacy
P O Box 648
Bahrain
Tel: 54886, 56123
Telex 8550 WAEL GJ
Cable WAELPHARM

Belgium
Analytical Only
A. Hamdiya Trading
and Contracting
P O Box 20074
Manama
Tel: 259978 259958
Telex 8895 KALDIA GJ

BELGIUM
Hewlett-Packard Benelux
S A N V
Avenue du Col-Vert, 1
1170 Brussels
Tel: 102 560 50 50
Cable PALOBEN Brussels
Telex 23-494 paloben br

CYPRUS
Kypronics
15 Gregorios Xenopoulos Street
P O Box 1152
Nicosia
Tel: 45628/29
Cable: Kypronics Paphos
Telex 3018

CZECHOSLOVAKIA
Vývojová a Provozní Závadna
Výzkumný Ústav Lékařské, Biologické
Jedlička 6
CS-86346
Bratislava-Kramare
Tel: 4251
Telex 93229

DDR
Entwicklungsinst. der TU Dresden
Forschungsinstitut Mensberg
DDR-7305
Walheim/Meinsberg
Tel: 37 667
Telex 37400 nps dk
Export Contact AG Zuerich
Guenther Forger
Schlegelstrasse 15
1040 Berlin
Tel: 401412
Telex 1118899

DENMARK
Hewlett-Packard A/S
Datavej 52
DK-3460 Birkerød
Tel: 021 81 66 40
Cable HEWPAK AS
Telex 37409 nps dk
Hewlett-Packard A/S
Navervej 1
DK-8600 Silkeborg
Tel: 061 92 71 66
Telex 37400 nps dk
Cable HEWPAK AS

EGYPT
I E A
International Engineering Associates
24 Hussein Hegazi Street
Kasi-el-Am
Cairo
Tel: 23 829
Telex 93830
Cable INTENGASSO
SAMITRO
Samir Amin Trading Office
18 Abdel Aziz Gawash
Abdine-Cairo
Tel: 24932
Cable SAMITRO CAIRO

FINLAND
Hewlett-Packard OY
Nahkahuontu 5
P O Box 9
SF-00211 Helsinki 21
Tel: 19016923031

FRANCE
Hewlett-Packard France
Avenue des Tropiques
Les Ulis
Boite Postale No 6
91401 Orsay-Cedex
Tel: (1) 907 78 25
Telex 602048F
Hewlett-Packard France
Chemin des Moulins
B P 162
69130 Ecullly
Tel: (78) 33 81 25
Telex 310617F
Hewlett-Packard France
Pérence de la Cèdre
31081 Toulouse-Le Mirail
Tel: (61) 40 11 12
Telex 510957F
Hewlett-Packard France
Le Ligoures
Bureau de vente de Marseilles
B.P. 162
13100 Aix-en-Provence
Tel: (42) 59 41 02
Hewlett-Packard France
2, Allée de la Bourgneffe
35100 Rennes
Tel: (99) 51 42 44
Telex 740912F
Hewlett-Packard France
18, rue du Canal de la Marne
67000 Schiltigheim
Tel: (88) 83 08 10
Telex 890141F
Hewlett-Packard France
Immeuble pérence
Rue van Gogh
93650 Villeueuve D Ascq
Tel: (20) 91 41 25
Telex 160124F
Hewlett-Packard France
Bureau de vente
Centre d'affaires Paris-Nord
Blanc-Mesnil
Rue de la Commune de Paris
B P 300
93153 Le Blanc Mesnil Cédex
Tel: 011 931 88 50
Hewlett-Packard France
Alding Pdt Kennedy
33700 Merignac
Tel: (56) 97 22 69
Hewlett-Packard France
France-Evy; immeuble Lorraine
Tel: 518741
Export Contact AG Zuerich
Guenther Forger
Schlegelstrasse 15
1040 Berlin
Tel: 401412
Telex 1118899

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50-04-1
Cable HEWPAKSA Frankfurt
Telex 04 3249 hpfm d
Hewlett-Packard GmbH
Technisches Büro Boblingen
Erdinger Strasse 110
D-7030 Boblingen Wurttemberg
Tel: (0703) 667-1
Cable HEWPAK Boblingen
Telex 07265739 bpb
Hewlett-Packard GmbH
Technisches Büro Dusseldorf
Emanuel-Leutez-Str 1 (Seestern)
D-4000 Dusseldorf
Tel: (0211) 59711
Tel: (0185) 86 533 hpfm d
Hewlett-Packard GmbH
Technisches Büro Hamburg
Wengensstrasse 23
D-2000 Hamburg 1
Tel: (040) 24 13 93

ICELAND
Medical Only
Elding Trading Company Inc
Hafnarvöllur, Tryggvögúlu
P O Box 895
IS-Reykjavik
Tel: 1 58 20 13 63 03
Cable: ELDING Reykjavik

IRAN
Hewlett-Packard Iran Ltd
No. 13, Fourteenth St
Mir Emdad Avenue
P O Box 41 2419
Tehran
Tel: 851082-5
Telex 213405 hewp ir

IRELAND
Hewlett-Packard Ltd
King Street Lane
Winninagh, Wokingham
Berks RG11 5AR
GB-England
Tel: (0734) 78 47 74
Telex 847178
Cable Hewpie London
Hewlett-Packard Ltd
330 North Sheladale Ave
Indianapolis 46250
Tel: (317) 842-1000
Telex 810-260-1797

IOWA
2415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466

KENTUCKY
Medical Only
3901 Atkinson Dr
Suite 407 Atkinson Square
Louisville 40218
Tel: (502) 456-1573

LOUISIANA
P O Box 1449
3229-39 Williams Boulevard
Kenner 70063
Tel: (504) 443-6201

MARYLAND
7121 Standard Drive
Parkway Industrial Center
Hanover 21076
Tel: (301) 796-7700
Telex 710-862-1943

**2 Choke Cherry Road
Rockville 20850
Tel: (301) 946-6370
Telex 710-828-9684**

MASSACHUSETTS
32 Hartwell Ave
Lexington 02173
Tel: (617) 861-8960
Telex 710-326-8904

MICHIGAN
3385 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400
Telex 724 West Centre Ave
Kalamazoo 49002
Tel: (606) 323-8362

MINNESOTA
2400 N. Prior Ave
St. Paul 55113
Tel: (612) 636-0700

MISSISSIPPI
322 N. Main Plaza
Jackson 39206
Tel: (601) 982-9363

MISSOURI
11131 Colorado Ave
Kansas City 64137
Tel: (816) 763-8000
Telex 910-771-2087

**1024 Executive Parkway
St. Louis 63141
Tel: (314) 878-0200**

NEBRASKA
Medical Only
710 Mercy Road
Suite 101
Omaha 68106
Tel: (402) 392-0948

NEVADA
Las Vegas
Tel: (702) 736-6610

NEW JERSEY
W 120 Century Rd
Paramus 07652
Tel: (201) 265-5000
Telex 710-890-4951

**16500 Scripps Road
Cleveland 44130
Tel: (216) 255-3330
Telex 910-255-3330**

**Crystal Brook Professional
Building, Route 35
Eatontown 07724
Tel: (201) 542-1364**

NEW MEXICO
Station E
1300 Lomas Blvd., N. E
Albuquerque 87123
Tel: (505) 292-1330
Telex 910-989-1185

**156 Wyatt Drive
Las Cruces 88001
Tel: (905) 526-2484
Telex 910-9983-0550**

ITALY
Hewlett-Packard Italiana S.p.A.
Via G. Vittorio 9
20063 Cernusco
Sul Naviglio (MI)
Tel: (02) 903591
Telex 311046 HEWPAKIT
Hewlett-Packard Italiana S.p.A.
Via Turazza 14
35100 Padova
Tel: (049) 664588
Telex 31612 HEWPAKIT
Poland
Hewlett-Packard Italiana S.p.A.
Via G. Armellini 10
1-00143 Roma
Tel: (06) 54 69 61
Telex 615-4
Cable HEWPAKIT Roma
Tel: (06) 91611-7
Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza 94
I-10133 Torino
Tel: (011) 662245-659308
Medical Calculators Only
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43 G C
I-95126 Catania
Tel: (095) 37 05 04
Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco A
I-40137 Bologna
Tel: (051) 30767-300040

JORDAN
Mouster Cousins Co
P O Box 1367
Amman
Tel: 24907-39907
Cable: INTERCAG JO 1456
Cable MOUASHERCO

KUWAIT
Al-Khaldiya Trading & Contracting
P O Box 830-Salat
Kuwait
Tel: 47 9910-41 1726

LUXEMBURG
Hewlett-Packard Benelux
S A N V
Avenue du Col-Vert, 1
(Greenkaaglaan)
1170 Brussels
Tel: 102 560 50 50
Cable PALOBEN Brussels
Telex 23 494

MOROCCO
Doubeau
81 rue Karachi
Casablanca
Tel: 304 81 82
Telex 23051 22822
Cable MATERIO
Gerop
3, rue d'Agadir
Casablanca
Tel: 272093 5
Telex 23739
Cable GEREP-CASA
Cociger
31 rue Omar Sjaoui
Casablanca
Tel: 27 65 40
Telex 21737 23003
Cable COGEDIR

NETHERLANDS
Hewlett-Packard Benelux N V
Van Heuven Goedhartlaan 121
P O Box 667
NL-Amstelveen 1134
Tel: (020) 47 20 21

NORWAY
Hewlett-Packard Norge A S
Osterdalen 18
P O Box 34
1345 Osteras
Tel: (02) 1711 80
Telex 16621 hpnas n
Hewlett-Packard Norge A S
Nygaardsgaten 114
5000 Bergen

POLAND
Hewlett-Packard (Techniczne)
Hewlett-Packard
Ul. Stawki 2 5P
00-950 Warszawa
Tel: 33 25 88 39 67 43
Telex 81 24 53 hewa pl
Ninbaur
Buro Obslugi Technicznej
01-447 Warszawa
ul. Wolska 6
Poland
Zaklady Naprawcze Sprzetu
i Medycznego
Plac Karmelitański Paryskiej 6
90-007 Lodz
Tel: 334-41 337-63
Telex 866981

PORTUGAL
Tectra-Empresa Técnica de Equipamentos Eléctricos S a r l
Rua Rodrigo da Fonseca 103
P O Box 2531
P-Lisbon 1
Tel: (1) 58 60 72
Cable TECTRA Lisbon
Telex 12598
Medical only
Mundinter
Intercomércio Mundial de Comércio
S A
P O Box 2761
Avenida Antonio Augusto
de Aguiar 138
P - Lisbon
Tel: (1) 53 21 31 7
Telex 16691 munter p
Cable INTERCAMBIO Lisbon

QATAR
Nasser Trading & Contracting
P O Box 1563
Doha
Tel: 22170
Telex 4439 NASSER
Cable NASSER

RUMANIA
Hewlett-Packard Reprezentanta
Bd. in Balcescu 16
Bucuresti
Tel: 80 23 13 88 85
Telex 10404
I n t r e p r i n d e r e a P e n t r u
Intrindere
S Reparatia Utilizator de Calcul
B-dul Prof. Dimitrie Pompei 6
Bucuresti-Sectorul 2
Tel: 88-20-70 88-24-40 88-67-95
Telex 118

SAUDI ARABIA
Modern Electronic
Establishment (Head Office)
P O Box 10228, Baghdadah Street
Jeddah
Tel: 27 798
Telex 40025
Cable ELECTA JEDDAH
Modern Electronic
Establishment (Branch)
P O Box 2728
Riyadh
Tel: 8258 65232
Cable RADUFCO
Modern Electronic
Establishment (Branch)
P O Box 193
Al-Khobar
Tel: 44878-44813

SPAIN
Hewlett-Packard Española S A
Calle Jerez 3
E-Madrid 16
Tel: 11 458 26 00 (10 lines)
Telex 23515 hpe
Hewlett-Packard Española S A
Colonia Mirasierra
Edificio Juban
1345 Costa Brava 13
Madrid 34
Hewlett-Packard Española S A
Milanesado 21-23
E-Barcelona 17
Tel: 13 203 6200 (5 lines)

SWEDEN
Hewlett-Packard Sverige AB
Eriemsgatan 3 Fack
S-16: Bromma 20
Tel: 081 730 05 50
Telex 10721
Cable MEASUREMENTS
Stockholm
Hewlett-Packard Sverige AB
Frotsgatan 30
S-421 32 Västra Frölunda
Tel: (031) 49 09 50
Telex 10721 wa Bromma office

SWITZERLAND
Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
P O Box 307
CH-8592 Schlieren-Zürich
Tel: (01) 7305340
Telex 53933 hpag ch
Cable HPAC CH
Hewlett-Packard (Schweiz) AG
Château Bloc 19
CH-1215 Le Lignon-Geneva
Tel: 022 96 03 22
Telex 27333 hpag ch
Cable HEWPAKAG Geneva

SYRIA
General Electronic Inc.
Nur-Basha-Ahmad Ebn Kays Street
P O Box 5781
Damascus
Tel: 33 24 67
Cable ELECTROBOR DAMASCUS
Medical/Personal Calculator only
Sawar B Co
Place Azém
P O Box 2308
Damascus
Tel: 66 367-18 697-14 268
Suleiman Hail El Mlaw
P O Box 2528
Mamoun Bitar Street, 56-58
Damascus Tel: 11 46 63

TUNISIA
Tunisie Electronique
31 Avenue de la Liberté
Tunis
Tel: 280 144
Cable 11er Av de Carthage
Tunis
Tel: 253 821
Telex 12318 CABAM TN

TURKEY
TEKNİM Company Ltd
Riza San Petliye
Kadiköy No 3
Kadiköyere, Ankara
Tel: 275800
Telex 42755
Teknim Corp Ltd
Baskinbulvarı 55 12
Yükselistanbul
Tel: 613 546
Telex 23540
Medical only
E M A
Muhendish Kollendi Sireti
Yuksek Edem Sokak 41 6
Yuksekkadeci
Ankara
Tel: 25 265 7030
Cable EMATRADE Ankara
Analytical only
Yilmaz Ozyurek
Mim. Mudafaa Cag 16 6
Kilias

UKRAINE
Hewlett-Packard
Representative Office USSR
Pokrovsky Boulevard 4 17-kw
Moscow 101000
Tel: 294 20 24
Telex 7675 newpak su

USSR
Hewlett-Packard
Representative Office USSR
Pokrovsky Boulevard 4 17-kw
Moscow 101000
Tel: 294 20 24
Telex 7675 newpak su

YUGOSLAVIA
Igora Standard Hewlett-Packard
Križevička 38 VII
61100 Ljubljana
Tel: 31 56 79 32 76 74

UNITED STATES

ALABAMA
P O Box 4207
8290 Whitesburg Dr
Huntsville 35892
Tel: (205) 881-4561
8933 E. Roebuck Blvd
Birmingham 35206
Tel: (205) 836-2202 3

ARIZONA
2336 E Magnolia St
Phoenix 85034
Tel: (602) 244-1361
2424 East Aragon Rd
Tucson 85708
Tel: (602) 889-4661

***ARKANSAS**
Medical Service Only
P O Box 5646
Brady Station
Little Rock 72215
Tel: (501) 376-1844

CALIFORNIA
1579 W Shaw Ave
Fresno 93771
Tel: (209) 224-0582
1430 East Orangethorpe Ave
Fullerton 92631
Tel: (714) 870-1000
2938 Lanesmith Boulevard
North Hollywood 91604
Tel: (818) 677-1262
Telex 910-499-2671
5400 West Rosecrans Blvd
P O Box 92105
World Way Postal Center
Los Angeles 90009
Tel: (213) 776-7500
Telex 910-325-8608
*Los Angeles
Tel: (213) 776-7500
3003 Santa Monica Boulevard
Santa Clara 95050
Tel: (408) 988-7000
*Ridgecrest
Tel: (714) 446-6165
646 W North Market Blvd
Sacramento 95824
Tel: (916) 929-7222

**9606 Aero Drive
P O Box 23333
San Diego 92123
Tel: (714) 279-3200
*Tarzana
Tel: (213) 705-3344**

COLORADO
5600 OTC Parkway
Englewood 80110
Tel: (303) 771-3455

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
Telex 710-465-2029

FLORIDA
P O Box 24210
2727 N.W. 62nd Street
Ft. Lauderdale 33309
Tel: (305) 972-2600
4428 Emerson Street
Unit 103
Jacksonville 32207
Tel: (904) 725-6333
P O Box 13910
6177 Lake Eleanor Dr
Orlando 32809
Tel: (305) 859-2900
P O Box 12826
Suite 5 Bldg 1
Iowa Park North
Pensacola 32575
Tel: (904) 476-8422

GEORGIA
P O Box 105005
450 Interstate North Parkway
Atlanta 30348
Tel: (404) 955-1500
Medical Service Only
*Augusta 30903
Tel: (404) 736-0592
P O Box 2103
1172 N Davis Drive
Warner Robins 31098
Tel: (812) 922-0449

HAWAII
2875 So. King Street
Honolulu 96826
Tel: (808) 955-4455

ILLINOIS
5201 Tolliver Dr.
Rolling Meadows 60008
Tel: (312) 255-9800
*Tarzana
Tel: (213) 705-3344

INDIANA
7301 North Sheladale Ave
Indianapolis 46250
Tel: (317) 842-1000
Telex 810-260-1797

IOWA
2415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466

KENTUCKY
Medical Only
3901 Atkinson Dr
Suite 407 Atkinson Square
Louisville 40218
Tel: (502) 456-1573

LOUISIANA
P O Box 1449
3229-39 Williams Boulevard
Kenner 70063
Tel: (504) 443-6201

MARYLAND
7121 Standard Drive
Parkway Industrial Center
Hanover 21076
Tel: (301) 796-7700
Telex 710-862-1943

**2 Choke Cherry Road
Rockville 20850
Tel: (301) 946-6370
Telex 710-828-9684**

MASSACHUSETTS
32 Hartwell Ave
Lexington 02173
Tel: (617) 861-8960
Telex 710-326-8904

MICHIGAN
3385 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400
Telex 724 West Centre Ave
Kalamazoo 49002
Tel: (606) 323-8362

MINNESOTA
2400 N. Prior Ave
St. Paul 55113
Tel: (612) 636-0700

MISSISSIPPI
322 N. Main Plaza
Jackson 39206
Tel: (601) 982-9363

MISSOURI
11131 Colorado Ave
Kansas City 64137
Tel: (816) 763-8000
Telex 910-771-2087

**1024 Executive Parkway
St. Louis 63141
Tel: (314) 878-0200**

NEBRASKA
Medical Only
710 Mercy Road
Suite 101
Omaha 68106
Tel: (402) 392-0948

NEVADA
Las Vegas
Tel: (702) 736-6610

NEW JERSEY
W 120 Century Rd
Paramus 07652
Tel: (201) 265-5000
Telex 710-890-4951

**16500 Scripps Road
Cleveland 44130
Tel: (216) 255-3330
Telex 910-255-3330**

**Crystal Brook Professional
Building, Route 35
Eatontown 07724
Tel: (201) 542-1364**

NEW MEXICO
Station E
1300 Lomas Blvd., N. E
Albuquerque 87123
Tel: (505) 292-1330
Telex 910-989-1185

**156 Wyatt Drive
Las Cruces 88001
Tel: (905) 526-2484
Telex 910-9983-0550**

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
Telex 710-444-4961
650 Perinton Hill Office Park
Fairport 14450
Tel: (516) 223-9950
Telex 516-253-0392
New York Pennsylvania Plaza
55th floor
34th street & 8th Avenue
New York 10001
Tel: (212) 971-0800
8656 East Molloy Road
Syracuse 13211
Tel: (315) 455-2486
1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
*NORTH CAROLINA
6625 Roanoke Way
Greensboro 27405
Tel: (919) 852-1800

OHIO
Medical Computer Only
Bldg 300
1201 Kampaer Rd
Cincinnati 45226
Tel: (513) 671-7400
16500 Scripps Road
Cleveland 44130
Tel: (216) 255-3330
Telex 910-255-3330

**330 Progress Rd
Dayton 45449
Tel: (513) 855-6202
104 Kingsmill Parkway
Columbus 43229
Tel: (614) 436-1041**

OKLAHOMA
P O Box 22008
6301 N. Merigan Avenue
Oklahoma City 73112
P O Box 1220-
9920 E 42nd Street
Richardson 75080
Tulsa 74145

OREGON
17890 SW Lower Boones
Ferry road
Tualatin 97062
Tel: (503) 620-3350

PENNSYLVANIA
1000 Pennsylvania Plaza
Pittsburgh 15226
Tel: (412) 782-0400
1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7030
TELEX 510-660-2670
P O Box 6442
6541-C N Tremont Road
Pittsburgh 15260
Tel: (412) 782-6453
11 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
*PENNSYLVANIA
6625 Roanoke Way
Greensboro 27405
Tel: (919) 852-1800

Puerto Rico
Hewlett-Packard Inter-Américas
Puerto Rico Branch Office
Edif. 205 Ung Country Club
Carolina 00924
Tel: (809) 762-7255
Telex 344 0514

SOUTH CAROLINA
P O Box 6442
6541-C N Tremont Road
Pittsburgh 15260
Tel: (412) 782-6453
11 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
*SOUTH CAROLINA
6625 Roanoke Way
Greensboro 27405
Tel: (919) 852-1800

Texas
4171 North Mesa
Suite 110
El Paso 79902
Tel: (915) 533-3555
P O Box 1220-
9920 E 42nd Street
Richardson 75080
Tulsa 74145

TEXAS
4171 North Mesa
Suite 110
El Paso 79902
Tel: (915) 533-3555
P O Box 1220-
9920 E 42nd Street
Richardson 75080
Tulsa 74145

UTAH
2156 South 2270 West Street
Salt Lake City 84119
Tel: (801) 974-2711

VIRGINIA
P O Box 12372
Norfolk 23502
Tel: (804) 462-2671
P O Box 9665
2914 Mountain View Road
Richmond 23276
Tel: (804) 283-3431

WASHINGTON
5000 4th Avenue N.E.
2051 W. S.E. E
Bellevue 98004
Tel: (206) 454-3511
Tel: (206) 443-2448
P O Box 4510
Spokane 99202
Tel: (509) 653-0554

***WEST VIRGINIA**
Hewlett-Packard
Representative Office
Charleston
Tel: (804) 346-1640

WISCONSIN
9304 West Lincoln Ave
West Allis 53227
Tel: (414) 541-6550

FOR U.S. AREAS NOT LIS
Contact your regional office.
Near you: Atlanta, Georgia,
Northridge, California,
Rockville, Maryland, Rolling W
Hampshire, their complete
addresses are listed above

*Service Only

K4XL's  **BAMA**

This manual is provided **FREE OF CHARGE** from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>