ManualsPlus.com

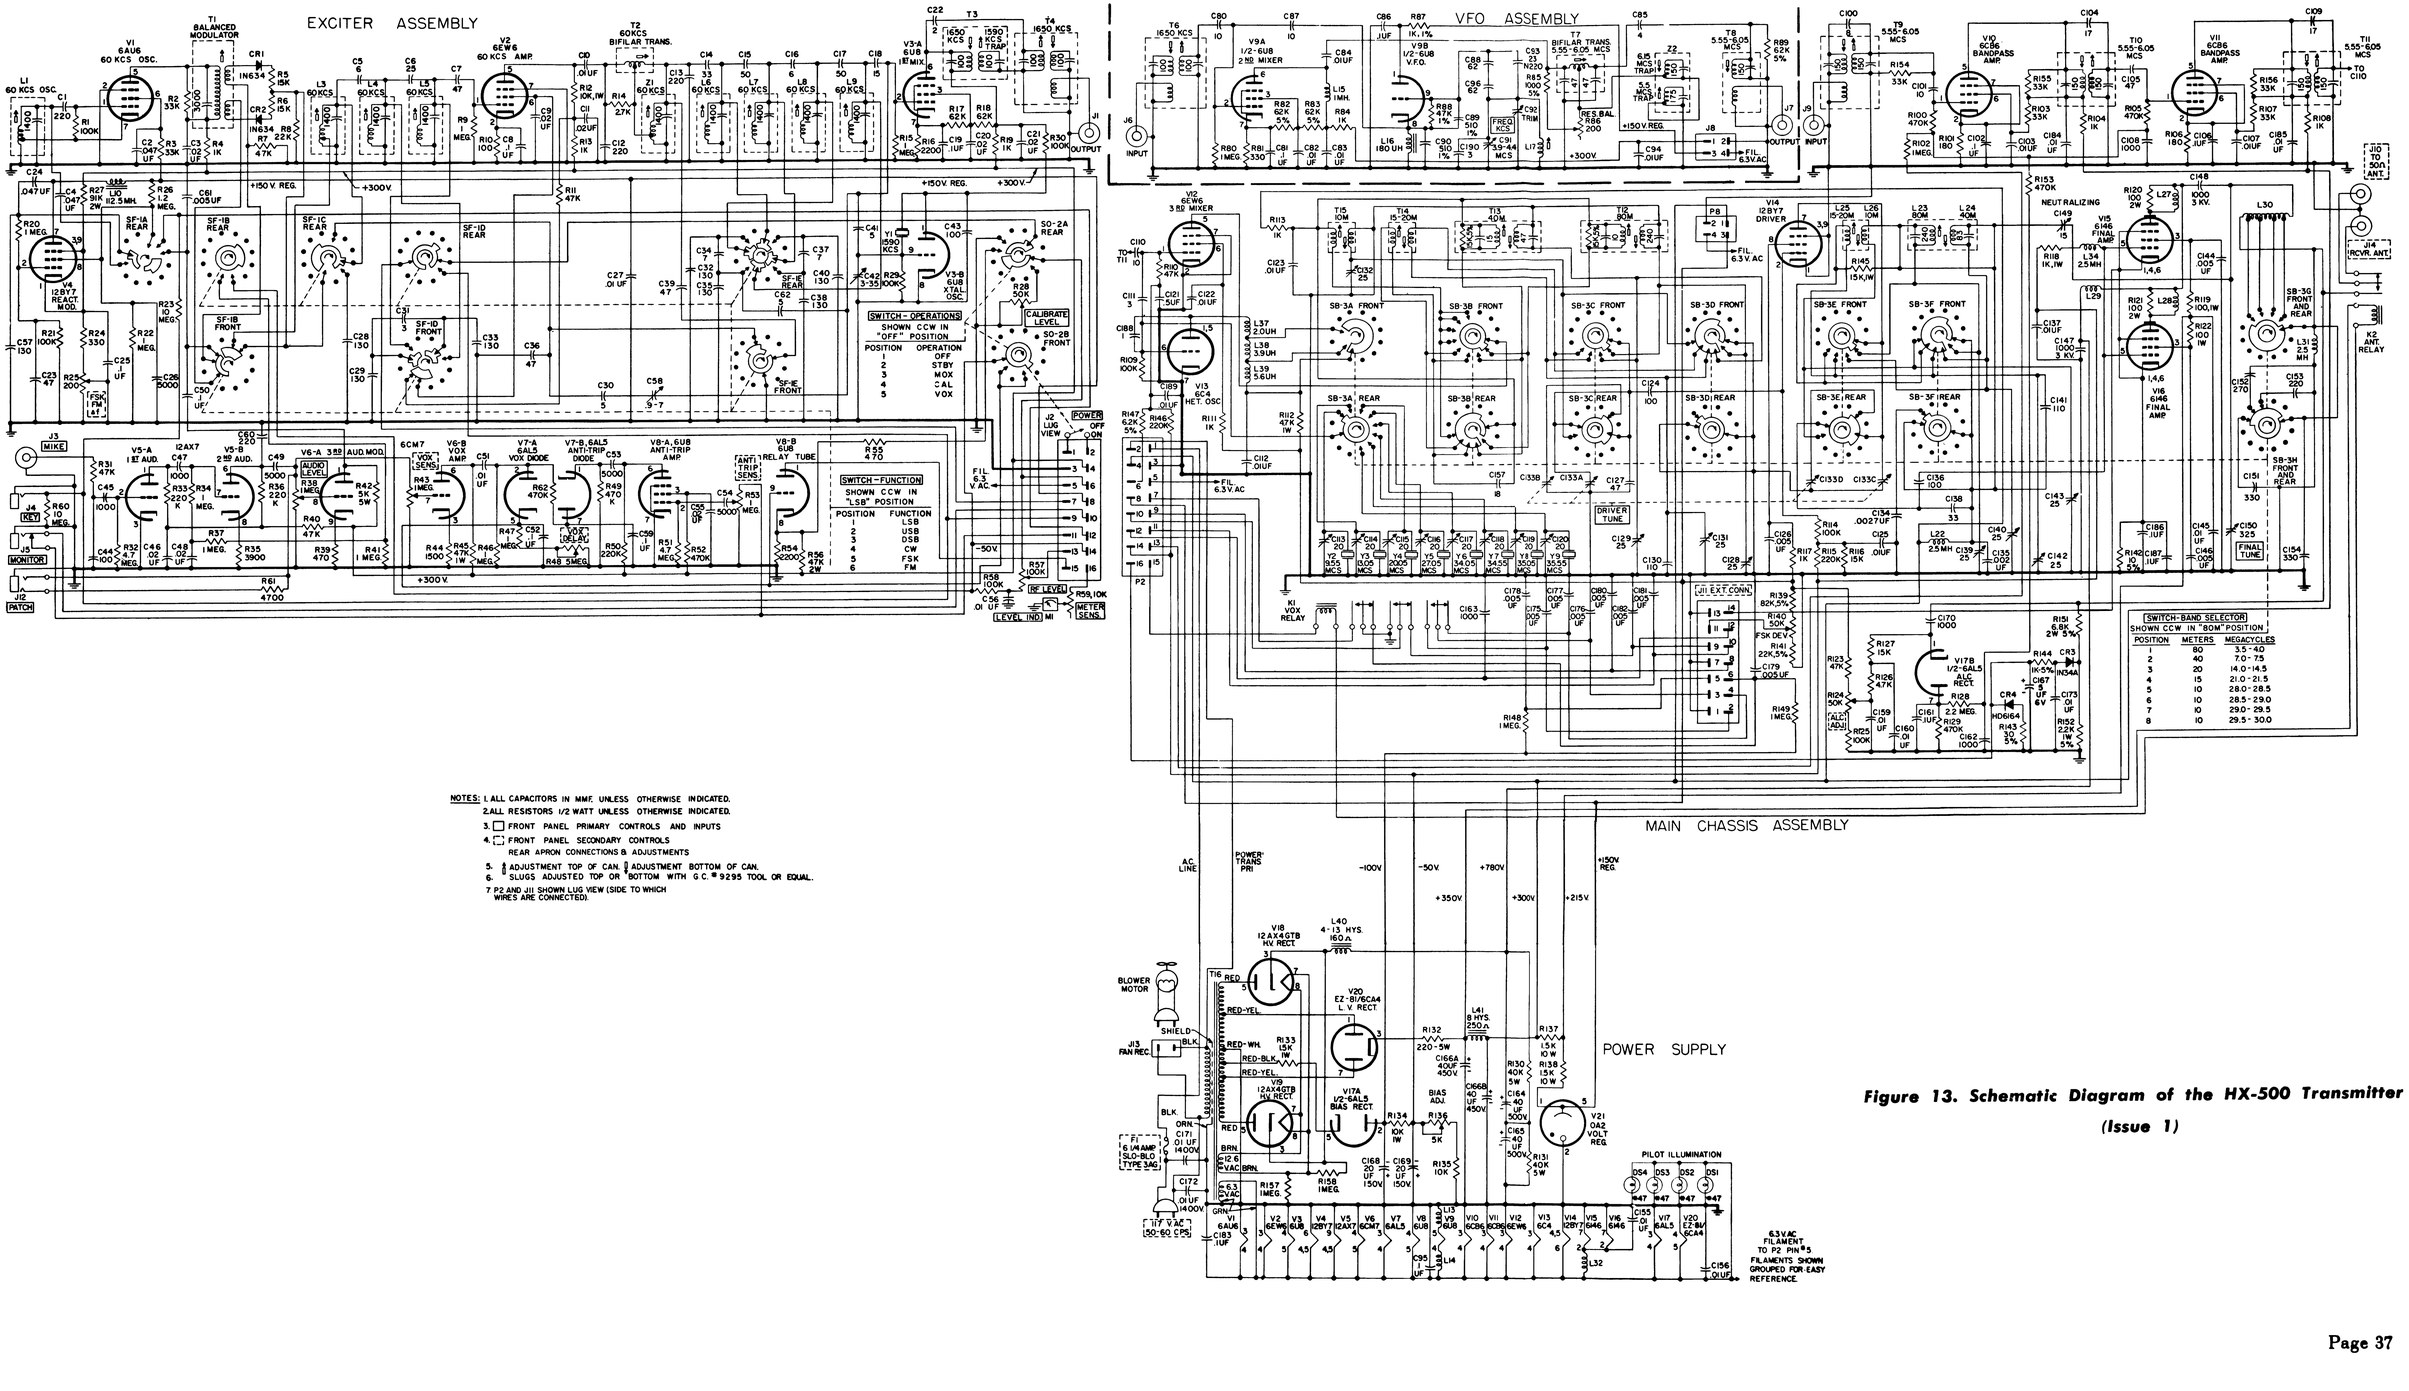

NOTES: 1. ALL CAPACITORS IN MMF. UNLESS OTHERWISE INDICATED.
2. ALL RESISTORS 1/2 WATT UNLESS OTHERWISE INDICATED.
3. ☐ FRONT PANEL PRIMARY CONTROLS AND INPUTS
4. ⬚ FRONT PANEL SECONDARY CONTROLS
REAR APRON CONNECTIONS & ADJUSTMENTS
5. ⅜ ADJUSTMENT TOP OF CAN. ⅜ ADJUSTMENT BOTTOM OF CAN.
6. SLUGS ADJUSTED TOP OR BOTTOM WITH G.C. # 9295 TOOL OR EQUAL.
7. P2 AND J11 SHOWN LUG VIEW (SIDE TO WHICH WIRES ARE CONNECTED).

Figure 13. Schematic Diagram of the HX-500 Transmitter (Issue 1)