


FINAL ASSEMBLY

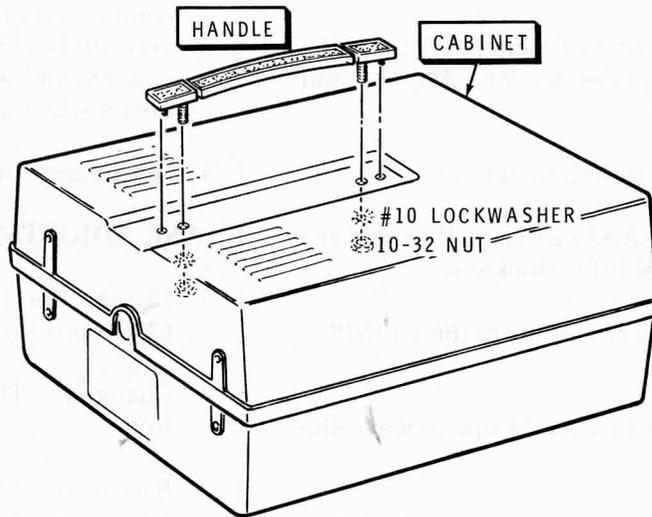

Detail 7-1A

Refer to Pictorial 7-1 (Illustration Booklet, Page 25) for the following steps.

- () Refer to Detail 7-1A and mount the handle in the holes provided in the cabinet. Use #10 lockwashers and 10-32 nuts.
- () Place a soft cloth on your work surface. Then position the Oscilloscope face down on the cloth.
- () Remove the protective backing from the blue and white label and press the label in place on the rear of the chassis. Always mention the numbers on this label in any communications you have with the Heath Company about this kit.
- () Carefully slide the cabinet down over the chassis. Be sure the front edge of the cabinet is inside the lip around the outer edge of the cabinet front.
- () Secure the cabinet to the chassis with eight #8 \times 5/8" hex washer head screws. Tighten the four rear screws first.
- () Remove the protective backing from the power consumption label and press the label in place on the rear of the cabinet.

This completes the "Final Assembly." Proceed to the "Operation" section of the Manual.