

Programmer's Guide

Agilent Technologies

8719ET/ES Network Analyzer

8720ET/ES Network Analyzer

8722ET/ES Network Analyzer

8753ET/ES Network Analyzer



Agilent Technologies

Part Number 08753-90475

Printed in USA

June 2002

Supersedes February 2001

© Copyright 1999–2002 Agilent Technologies, Inc.


How to Use This Guide

This guide uses the following conventions:

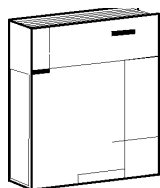
Front Panel Key	This represents a key physically located on the instrument.
SOFTKEY	This represents a “softkey”, a key whose label is determined by the instrument firmware.
Computer Font	This represents text displayed on the instrument’s screen, text on a computer display, or a programming command.

NOTE	All model numbers and part numbers published in this document are HP/Agilent numbers, unless otherwise specified.
-------------	---

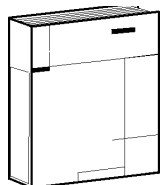
Documentation Map



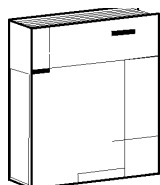
The *Installation and Quick Start Guide* provides procedures for installing, configuring, and verifying the operation of the analyzer. It also will help you familiarize yourself with the basic operation of the analyzer.



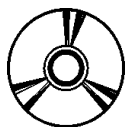
The *User's Guide* shows how to make measurements, explains commonly-used features, and tells you how to get the most performance from your analyzer.



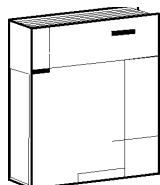
The *Reference Guide* provides reference information, such as specifications, menu maps, and key definitions.



The *Programmer's Guide* provides general GPIB programming information, a command reference, and example programs. The *Programmer's Guide* contains a CD-ROM with example programs.



The **CD-ROM** provides the *Installation and Quick Start Guide*, the *User's Guide*, the *Reference Guide*, and the *Programmer's Guide* in PDF format for viewing or printing from a PC.



The *Service Guide* provides information on calibrating, troubleshooting, and servicing your analyzer. The *Service Guide* is not part of a standard shipment and is available only as Option 0BW. A CD-ROM with the *Service Guide* in PDF format is included for viewing or printing from a PC.

Agilent Technologies Sales and Service Offices

- **UNITED STATES**

- Instrument Support Center
Agilent Technologies Company
(800) 403-0801

- **EUROPEAN FIELD OPERATIONS**

- Headquarters
Agilent Technologies S.A.
150, Route du Nant-d'Avril
1217 Meyrin 2/ Geneva
Switzerland
(41 22) 780.8111
- France
Agilent Technologies France
1 Avenue Du Canada
Zone D'Activite De Courtaboeuf
F-91947 Les Ulis Cedex
France
(33 1) 69 82 60 60
- Germany
Agilent Technologies GmbH
Agilent Technologies Strasse
61352 Bad Homburg v.d.H
Germany
(49 6172) 16-0
- Great Britain
Agilent Technologies Ltd.
Eskdale Road, Winnersh Triangle
Wokingham, Berkshire RG41 5DZ
England
(44 118) 9696622

- **INTERCON FIELD OPERATIONS**

- Headquarters
Agilent Technologies Company
3495 Deer Creek Rd.
Palo Alto, CA 94304-1316
USA
(415) 857-5027
- Japan
Agilent Technologies Japan, Ltd.
Measurement Assistance Center
9-1 Takakura-Cho, Hachioji-shi
Tokyo 192-8510, Japan
TEL (81)-426-56-7832
FAX (81)-426-56-7840
- Australia
Agilent Technologies Australia Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
(61 3) 895-2895
- Singapore
Agilent Technologies Singapore (Pte.) Ltd.
150 Beach Road
#29-00 Gateway West
Singapore 0718
(65) 291-9088
- Canada
Agilent Technologies (Canada) Ltd.
17500 South Service Road Trans-Canada Highway
Kirkland, Quebec H9J 2X8
Canada
(514) 697-4232
- Taiwan
Agilent Technologies Taiwan
8th Floor, H-P Building
337 Fu Hsing North Road
Taipei, Taiwan
(886 2) 712-0404
- China
China Agilent Technologies Co.
38 Bei San Huan X1 Road
Shuang Yu Shu
Hai Dian District
Beijing, China
(86 1) 256-6888

1. Alphabetical Command Reference

Symbol Conventions.....	1-2
AB	1-3
ADAP1	1-3
ADDR	1-4
ADPT	1-5
ALC	1-5
ALTAB	1-6
ANAB	1-7
ANAI	1-8
AR	1-9
ASEG	1-9
ASSS	1-10
ATT	1-11
AUTO	1-12
AUXC	1-13
AVER	1-14
BACI	1-15
BANDPASS	1-15
BEEP	1-16
BLAD	1-17
BR	1-17
BWLIMDB	1-18
BWLIMDISP	1-18
BWLIMMAX	1-19
BWLIMMIN	1-19
BWLIMSTAT	1-20
BWLIMTEST	1-20
BWLIMVAL	1-21
C	1-22
CAL1	1-23
CALF	1-24
CALI	1-25
CALK	1-27
CALN	1-29
CALPOW	1-29
CALSPORT	1-30
CALZ	1-31
CBRI	1-32
CENT	1-32
CHAN	1-33
CHOPAB	1-34
CLAD	1-34
CLASS	1-35
CLEA	1-36
CLEAL	1-37
CLEABIT	1-37
CLEASEQ	1-38
CLEL	1-38

CLES	1-39
CLER	1-39
COAD	1-40
COAX	1-40
COLO	1-41
COLOR	1-42
CONS	1-43
CONT	1-43
CONV	1-44
COPY	1-45
CORI	1-45
CORR	1-46
COU	1-46
CSWI	1-47
CWFREQ	1-48
CWTIME	1-48
D1DIVD2	1-49
D2XUPCH	1-50
D4XUPCH	1-51
DATI	1-52
DCONV	1-52
DEBU	1-53
DECRLOOC	1-53
DEFC	1-54
DEFLPRINT	1-55
DEFLTCPIO	1-56
DEFS	1-57
DEL	1-58
DELA	1-59
DEMO	1-60
DFLT	1-61
DIRS	1-62
DISC	1-63
DISM	1-64
DISP	1-65
DIVI	1-66
DONE	1-66
DONM	1-67
DOSEQ	1-67
DOWN	1-68
DUAC	1-68
DUPLSEQ	1-69
ECALAB?	1-69
ECALCONT	1-70
ECALDONE	1-71
ECALERC	1-71
ECALFREQS	1-72
ECALFUL2	1-72
ECALISOAVG	1-73

ECALMANTHRU.....	1-73
ECALMODID	1-74
ECALMODINF.....	1-75
ECALMODSELA	1-76
ECALMODSELB	1-76
ECALNFREQS.....	1-77
ECALOMII	1-77
ECALPAUSED	1-78
ECALRERC	1-78
ECALS11.....	1-79
ECALS22.....	1-79
EDIT	1-80
EDITRLIM	1-81
ELED	1-82
EMIB	1-82
ENTO	1-83
ERCDONE	1-83
ESB?	1-84
ESE	1-84
ESNB	1-85
ESR?	1-85
EXTD	1-86
EXTM	1-87
EXTRCHAN	1-88
EXTT	1-89
SFIXE	1-90
FORM	1-91
FORMAT	1-92
FREQ	1-93
FREQOFFS	1-94
FRER	1-95
FULP	1-95
FWD	1-96
GATE	1-97
GATS	1-98
GOSUB	1-99
HARM	1-100
HOLD	1-101
IDN?	1-101
IF	1-102
IFBW	1-103
IMAG	1-104
INCRLOOC	1-104
INI	1-105
INPU	1-106
INSM	1-109
INT	1-110
INTE	1-111
ISO	1-112

KEY	1-113
KITD	1-114
KOR?	1-114
LAB	1-115
LABE	1-116
LEF	1-119
LIM	1-120
LIMI	1-122
LIMT	1-123
LINFREQ	1-124
LINM	1-124
LINT	1-125
LIS	1-126
LISTTYPE	1-127
LISV	1-128
LO	1-129
LOA	1-131
LOAD	1-132
LOADSEQ	1-133
LOGFREQ	1-133
LOGM	1-134
LOOC	1-134
LOWP	1-135
LRN	1-135
MANTRIG	1-136
MARK	1-137
MAXF	1-140
MEAS	1-141
MEASTAT	1-142
MENU	1-143
MINF	1-144
MINMAX	1-145
MINU	1-145
MODI1	1-146
MODS	1-146
NEWSEQ	1-147
NEXP	1-147
NOOP	1-148
NUMG	1-148
NUMR	1-149
OFL	1-150
OFS	1-151
OMII	1-152
OPC	1-152
OPEP	1-153
OUTP	1-154
OUTP Reference Tables	1-160
P	1-162
PARA	1-163

PARAL	1-164
PAUS	1-165
PCB	1-165
PCOL	1-166
PENN	1-167
PHAO	1-168
PHAS	1-168
PLOS	1-169
PLOT	1-169
PLT	1-170
PMTRTTIT	1-171
POIN	1-172
POL	1-173
PORE	1-174
PORT	1-175
PORTP	1-176
POWE	1-177
POWL	1-178
POWM	1-179
POWR	1-180
POWS	1-181
POWT	1-181
PRAN	1-182
PREP	1-182
PRES	1-183
PRI	1-184
PRIN	1-185
PRINTALL	1-186
PRN	1-187
PTOS	1-189
PURG	1-189
PWMC	1-190
PWRLOSS	1-191
PWRMCAL	1-191
PWRR	1-192
Q	1-192
RAI	1-193
RAWOFFS	1-194
READ	1-195
REAL	1-195
RECA	1-196
RECO	1-197
REF	1-198
REF	1-199
REFT	1-200
REIC	1-200
RERCDONE	1-201
RESC	1-201
RESD	1-202

RESPDONE	1-203
REST	1-203
RETP	1-204
REV	1-205
RF	1-206
RFLP	1-207
RIG	1-208
RLIMLINE	1-208
RLIMM	1-209
RLIMSTP	1-209
RLIMSTR	1-210
RLIMTEST	1-210
RLIMVAL	1-211
RSCO	1-211
RST	1-212
S	1-213
SADD	1-214
SAMC	1-214
SAV	1-215
SAVECSV	1-217
SAVEJPG	1-217
SAVEUSEK	1-218
SAVU	1-219
SCAL	1-219
SCAP	1-220
SDEL	1-221
SDON	1-222
SEA	1-223
SEDI	1-224
SEG	1-225
SEL	1-226
SELBND	1-227
SELL	1-228
SEQ	1-229
SEQWAIT	1-229
SET	1-230
SHOM	1-231
SING	1-232
SLI	1-233
SLOP	1-234
SM8	1-235
SMI	1-236
SMOO	1-237
SOFR	1-237
SOFT	1-238
SOUP	1-238
SPAN	1-239
SPEC	1-240
SPEG	1-243

SPLD	1-243
SPLID	1-244
SRE	1-245
SSTAN	1-246
STAR	1-247
STB?	1-247
STDD	1-248
STDT	1-249
STEPSWP	1-250
STOP	1-251
STOR	1-252
STORSEQ	1-253
STPSIZE	1-253
SVCO	1-254
SWE	1-255
SWPSTART	1-256
SWR	1-256
TAK	1-257
TAKE4	1-258
TALKLIST	1-258
TERI	1-259
TESS?	1-259
TIMDTRAN	1-260
TIMESTAM	1-260
STINT	1-261
TIT	1-262
TITT	1-263
TRA	1-264
TRACK	1-265
TRAP	1-265
TRL	1-266
TSSWI	1-267
TST?	1-267
TSTIO	1-268
TSTP	1-269
TTL	1-270
UCONV	1-271
UP	1-271
USEPASC	1-272
USESENS	1-272
VELOFACT	1-273
VIEM	1-273
VOFF	1-274
WAIT	1-274
WAVD	1-275
WAVE	1-275
WID	1-276
WIND	1-277
WRSK	1-278

2. Introduction to Instrument Control

Using This Chapter	2-2
Instrument Control using the VXIplug&play Driver	2-3
Requirements	2-3
Installing the VXIplug&play Driver	2-3
System Setup	2-4
Verifying the Bus Connection	2-5
Controlling the Analyzer with the VXIplug&play Driver	2-7
Instrument Control using HP BASIC	2-9
Required Equipment	2-9
System Setup and GPIB Verification	2-10
Sending Commands	2-12

3. GPIB Programming

Analyzer Command Syntax	3-2
Code Naming Convention	3-2
Valid Characters	3-3
Units	3-4
Command Formats	3-4
Analyzer Operation	3-6
Held Commands	3-6
Operation Complete	3-6
GPIB Operation	3-7
Device Types	3-7
GPIB Bus Structure	3-8
GPIB Requirements	3-10
GPIB Operational Capabilities	3-11
Bus Device Modes	3-12
Setting GPIB Addresses	3-14
Response to GPIB Meta-Messages (IEEE-488 Universal Commands)	3-14
IEEE 488.2 Common Commands	3-16
Calibration	3-17
Display Graphics	3-20
User Graphics Units	3-20
HP-GL Commands	3-20
Disk File Names	3-23

4. Reading Analyzer Data

Output Queue	4-2
Command Query	4-2
Identification	4-2
Output Syntax	4-3
Marker Data	4-4
Array-Data Formats	4-6
Trace-Data Transfers	4-8
Stimulus-Related Values	4-9

5. Data Processing Chain

Using This Chapter	5-2
Data Arrays	5-3
Common Output Commands	5-4
Fast Data Transfer Commands	5-5
Data Levels	5-6
Pre-Raw Data	5-6
Raw Data	5-6
Error Coefficients	5-6
Error-Corrected Data	5-6
Formatted Data	5-7
Learn String and Calibration-Kit String	5-7

6. Error Reporting

Using This Chapter	6-2
Status Reporting	6-3
The Status Byte	6-6
The Event-Status Register and Event-Status Register B	6-7
Error Output	6-8
Error Messages in Numerical Order	6-9

7. Programming Examples

Using This Chapter	7-2
Measurement Process	7-3
Step 1. Setting Up the Instrument	7-3
Step 2. Calibrating the Test Setup	7-3
Step 3. Connecting the Device under Test	7-4
Step 4. Taking the Measurement Data	7-4
Step 5. Post-Processing the Measurement Data	7-4
Step 6. Transferring the Measurement Data	7-4
Programming Examples	7-5
Program Information	7-8
Analyzer Features Helpful in Developing Programming Routines	7-8
Measurement Setup Examples	7-10
Example 1A: Setting Parameters	7-10
Example 1B: Verifying Parameters	7-21
Measurement Calibration Examples	7-23
Calibration Kits	7-24
Example 2A: Response Calibration	7-24
Example 2B: 1-Port Calibration	7-26
Example 2C: Enhanced Response Calibration	7-30
Example 2D: Full 2-Port Measurement Calibration	7-33
Example 2E: Adapter Removal Calibration	7-38
Example 2F: Using Raw Data to Create a Calibration (Simmcal)	7-41
Example 2G: Take4 — Error Correction Processed on an External PC	7-48
Measurement Data Transfer Examples	7-56
Trace-Data Formats and Transfers	7-56
Example 3A: Data Transfer Using Markers	7-57

Example 3B: Data Transfer Using FORM 4 (ASCII Transfer)	7-59
Example 3C: Data Transfer Using Floating-Point Numbers	7-62
Example 3D: Data Transfer Using Frequency-Array Information	7-64
Example 3E: Data Transfer Using FORM 1 (Internal-Binary Format)	7-67
Measurement Process Synchronization Examples	7-69
Status Reporting	7-69
Example 4A: Using the Error Queue	7-70
Example 4B: Generating Interrupts	7-72
Example 4C: Power Meter Calibration	7-75
Analyzer System Setup Examples	7-79
Saving and Recalling Instrument States	7-79
Example 5A: Using the Learn String	7-79
Example 5B: Reading Calibration Data	7-81
Example 5C: Saving and Restoring the Analyzer Instrument State	7-84
List-Frequency and Limit-Test Table Examples	7-87
Using List Frequency Sweep Mode	7-87
Example 6A: Setting Up a List Frequency Table in Stepped List Mode	7-88
Example 6B: Setting Up a List Frequency Table in Swept List Mode	7-90
Example 6C: Selecting a Single Segment from a Table of Segments	7-94
Using Limit Lines to Perform PASS/FAIL Tests	7-96
Example 6D: Setting Up a Limit-Test Table	7-96
Example 6E: Performing PASS/FAIL Tests While Tuning	7-99
Report Generation Examples	7-102
Example 7A: Operation Using Talker/Listener Mode	7-102
Example 7B: Controlling Peripherals Using Pass-Control Mode	7-104
Example 7C: Printing with the Parallel Port	7-107
Example 7D: Plotting to a File and Transferring the File Data to a Plotter	7-109
Example 7E: Reading Plot Files from a Disk	7-111
Example 7F: Reading ASCII Disk Files to the Instrument Controller's Disk File	7-118
Mixer Measurement Example.	7-122
Example 8A: Comparison of Two Mixers — Group Delay, Amplitude or Phase	7-122
Limit Line and Data Point Special Functions	7-126
Overview	7-126
Constants Used Throughout This Document	7-131
Output Limit Test Pass/Fail Status Per Limit Segment	7-131
Output Pass/Fail Status for All Segments	7-132
Output Minimum and Maximum Point Per Limit Segment	7-133
Output Minimum and Maximum Point for All Segments	7-134
Output Data Per Point	7-137
Output Data Per Range of Points	7-138
Output Limit Pass/Fail by Channel	7-138

A. Preset Conditions

Preset State	A-2
--------------------	-----

B. Command Listings

Alphabetical List of Commands	B-2
OPC-Compatible List of Commands.....	B-9

1 Alphabetical Command Reference

Symbol Conventions

<num>	Required numerical data.
<choice1 choice2 ... choicen>	An appendage that is part of the command. For example, <code>FORMAT<DOS LIF></code> indicates that the actual commands are <code>FORMATDOS</code> and <code>FORMATLIF</code> .
<\$>	Indicates a character string operand which must be enclosed by double quotes.
	An either/or choice in appendages or optional data.
[]	Optional data.

NOTE A terminator indicates the end of a command string, and this manual uses a semicolon as the terminator in all syntax examples. The network analyzer also interprets line feeds and GPIB end or identify (EOI) messages as terminators.

Terminators are not necessary for the analyzer to interpret commands correctly, however in the case of a syntax error, the analyzer will attempt to recover at the next terminator. Therefore, it is recommended that you each command include a terminator.

NOTE Because this chapter is an “Alphabetical Command Reference,” the commands have been listed alphabetically, rather than by function, in both the “Syntax” sections and the “Description” sections. Therefore, commands grouped together in the “Syntax” sections, are grouped alphabetically and/or due to common syntax form, not necessarily due to common functionality.

NOTE The softkeys listed in the “Front Panel Equivalents” tables may not be in the first menu viewed when the associated hardkey is pressed. In many cases, more than one key press will be required to locate the softkey. Refer to your analyzer’s reference guide for the exact location of any softkey.

NOTE Some commands that do not have an associated query syntax can be queried by sending the command (without a value) and then sending the `OUTPACTI` command, as in the following example that queries the segment power value:

```
10 OUTPUT 716;"SEGPOWER;OUTPACTI;"
```

Many of the commands that *do* have a listed query syntax can also be queried in this manner.

AB

Syntax

AB; *or* AB?;

Description

Command	Description	Range	Query Response
AB	Measures and displays A/B on the active channel.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
AB		

ADAP1

Syntax

ADAP1<num>[S]; *or* ADAP1?;

NOTE This command only applies to ES model analyzers.

Description

Command	Description	Range	Query Response
ADAP1	Sets adapter electrical delay.	±10 seconds	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ADAP1		

ADDR

ADDR

Syntax

ADDR<CONT|DISC|LSRC|PERI|PLOT|POWM|PRIN><num>; or
ADDR<CONT|DISC|LSRC|PERI|PLOT|POWM|PRIN>?;

Description

Sets the GPIB address for the following peripherals.

Command	Description	Range	Query Response
ADDRCONT	Controller GPIB address. The address where control is returned after a pass control.	integers 0–30	<num>< ^L _F >
ADDRDISC	External disk drive GPIB address.	integers 0–30	<num>< ^L _F >
ADDRLSRC ¹	LO source GPIB address.	integers 0–30	<num>< ^L _F >
ADDRPERI	Peripheral GPIB address (for sequencing). See also TITTPERI.	integers 0–30	<num>< ^L _F >
ADDRPLOT	Plotter GPIB address.	integers 0–30	<num>< ^L _F >
ADDRPOWM	Power meter GPIB address.	integers 0–30	<num>< ^L _F >
ADDRPRIN	Printer GPIB address.	integers 0–30	<num>< ^L _F >

1. This command only applies to 8753ET/ES analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
ADDRCONT	Local	ADDRESS: CONTROLLER
ADDRDISC	Local	ADDRESS: DISK
ADDRLSRC	Local	LO SOURCE ADDRESS
ADDRPERI	Seq	PERIPHERAL GPIB ADDR
ADDRPLOT	Local	PLTR PORT GPIB
ADDRPOWM	Local	ADDRESS: P MTR/GPIB
ADDRPRIN	Local	PRNTR PORT GPIB

ADPT

Syntax

ADPT<COAX|WAVE>; or ADPT<COAX|WAVE>;

Description

Command	Description	Range	Query Response
ADPTCOAX	Sets adapter to coaxial.	N/A	<0 1>< ^L _F >
ADPTWAVE	Sets adapter to waveguide.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ADPTCOAX		ADAPTER COAX
ADPTWAVE		ADAPTER WAVEGUIDE

ALC

Syntax

ALC<ON|OFF>; or ALC?;

Description

Command	Description	Range	Query Response
ALC	ALC control. For service use only.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ALC		ALC ON OFF

ALTAB

ALTAB**Syntax**

ALTAB; *or* ALTAB?;

Description

Command	Description	Range	Query Response
ALTAB	Places the analyzer in the alternate inputs measurement mode, where A and B measurements are made on alternate sweeps. See also “CHOPAB.”	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ALTAB		ALTERNATE A and B ¹
ALTAB		ALTERNATE RFL/TRAN ²

1. ES models only.

2. ET models only.

ANAB


Syntax

ANAB<ON|OFF>; or ANAB?;

Description

Command	Description	Range	Query Response
ANAB	Enables and disables the analog bus for service use.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ANAB		

ANAI

Syntax

ANAI<num>; or ANAI?;

ANAI; or ANAI?;

Description

Command	Description	Range	Query Response
ANAI ¹	Measures and displays the data at the auxiliary input (ANALOG IN).	integers 1–31	<0 1><L _F >
ANAI ²	Measures and displays the data at the auxiliary input (ANALOG IN).	N/A	<0 1><L _F >

1. When the analog bus is enabled (ANABON), this command requires that the complementary information (<num>) be sent.
2. When the analog bus is disabled (ANABOFF), this command does not require the <num> parameter.

Front Panel Equivalents

Command	Hardkey	Softkey
ANAI		ANALOG IN Aux Input

AR

Syntax

AR; *or* AR?;

Description

Command	Description	Range	Query Response
AR	Measures and displays A/R on the active channel.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
AR	Meas	A/R

ASEG

Syntax

ASEG; *or* ASEG?;

Description

Command	Description	Range	Query Response
ASEG	Uses all segments for list frequency sweep. See also “SSEG.”	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ASEG	Sweep Setup	ALL SEGS SWEEP

ASSS

Syntax

ASSS;

Description

Command	Description	Range	Query Response
ASSS	Asserts the sequence status bit to in-turn generate SRQ.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ASSS		ASSERT SRQ

ATT

Syntax





ATT<A|B|P1|P2><num>[DB]; or ATT<A|B|P1|P2>;

Description

Command	Description	Range	Query Response
ATT ¹	Selects the amount of attenuation at attenuator A.	0–55 dB	<num><L _F >
ATTB ¹	Selects the amount of attenuation at attenuator B.	0–55 dB	<num><L _F >
ATTP1 ²	Selects the amount of attenuation at PORT 1.	0–70 dB	<num><L _F >
ATTP2 ²	Selects the amount of attenuation at PORT 2.	0–70 dB	<num><L _F >

1. This command only applies to 8720E series analyzers with Option 085.
2. This command only applies to 8753ES Option 011 analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
ATT ¹	 Power	ATTENUATOR A
ATTB ¹	 Power	ATTENUATOR B
ATTP1 ²	 Power	ATTENUATOR PORT 1
ATTP2 ²	 Power	ATTENUATOR PORT 2

1. This command only applies to 8720E series analyzers with Option 085.
2. This command only applies to 8753ES Option 011 analyzers.

AUTO


Syntax

AUTO;

Description

Command	Description	Range	Query Response
AUTO	Auto scale the active channel.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
AUTO		AUTOSCALE

AUXC


Syntax

AUXC<ON|OFF>; or AUXC?;

Description

Command	Description	Range	Query Response
AUXC	Enables and disables auxiliary channels 3 and 4. OPC-compatible.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
AUXC		AUX CHAN ON OFF

EXAMPLE

10	OUTPUT 716;"CHAN1;AUXCON;"	<i>Turns on channel 3</i>
20	OUTPUT 716;"CHAN2;AUXCON;"	<i>Turns on channel 4</i>

AVER

Syntax

AVERFACT<num>; or AVERFACT?;
AVERO<ON|OFF>; or AVERO?;
AVERREST;

Description

Command	Description	Range	Query Response
AVERFACT	Sets the averaging factor on the active channel.	integers 0–999	<num>< ^L _F >
AVERO	Turns averaging on and off on the active channel.	N/A	<0 1>< ^L _F >
AVERREST	Restarts the averaging on the active channel.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
AVERFACT		AVERAGING FACTOR
AVERO		AVERAGING ON OFF
AVERREST		AVERAGING RESTART

BACI


Syntax

BACI<num>; *or* BACI?;

Description

Command	Description	Range	Query Response
BACI	Sets the background intensity of the display.	integers 0–100	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BACI		BACKGROUND INTENSITY

BANDPASS

Syntax

BANDPASS; *or* BANDPASS?;

Description

Command	Description	Range	Query Response
BANDPASS	Selects the time domain bandpass mode.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BANDPASS		BANDPASS

BEEP



BEEP**Syntax**

BEEP<DONE|WARN|FAIL><ON|OFF>; or BEEP<DONE|WARN|FAIL>;

Description

Command	Description	Range	Query Response
BEEPDONE	Causes the analyzer's warning beeper to sound at the completion of functions such as save, done with calibration standard, and data trace saved.	N/A	<0 1>< ^L _F >
BEEPFAIL	Causes the analyzer's warning beeper to sound in the event of a limit test failure.	N/A	<0 1>< ^L _F >
BEEPWARN	Causes the analyzer's warning beeper to sound when a warning message is generated.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BEEPDONE		BEEP DONE ON OFF
BEEPFAIL		BEEP FAIL ON OFF
BEEPWARN		BEEP WARN ON OFF

BLAD


Syntax

BLAD<ON|OFF>; *or* BLAD?;

Description

Command	Description	Range	Query Response
BLAD	Blanks the display.	N/A	<0 1>>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BLAD		BLANK DISPLAY

BR

Syntax

BR; *or* BR?;

Description

Command	Description	Range	Query Response
BR	Measures and displays B/R on the active channel.	N/A	<0 1>>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BR		B/R

BWLIMDB

Syntax

BWLIMDB<num>; *or* BWLIMDB?;

Description

Command	Description	Range	Query Response
BWLIMDB	Enters the <i>N dB Point</i> , the amplitude below the peak that is used to measure the filter's bandwidth.	0.001 to 300 dB	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BWLIMDB	System	N DB POINTS

BWLIMDISP

Syntax

BWLIMDISP<ON|OFF>; *or* BWLIMDISP?;

Description

Command	Description	Range	Query Response
BWLIMDISP	Turns the measured bandwidth value in the upper left corner of the display on and off. The measured bandwidth value is displayed near the bandwidth Pass/Wide/Narrow message...	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
BWLIMDISP	System	BW DISPLAY on OFF

BWLIMMAX

Syntax


BWLIMMAX<num>[HZ|KHZ|MHZ|GHZ]; *or* BWLIMMAX?;

Description

Command	Description	Range	Query Response
BWLIMMAX	Enters the maximum bandwidth value. If the measured bandwidth is greater than this value, the filter fails the bandwidth test.	stimulus range ¹	<num><L _F >

1. Refer to “Preset State and Memory Allocation” in your analyzer's reference guide.

Front Panel Equivalents

Command	Hardkey	Softkey
BWLIMMAX		MAXIMUM BANDWIDTH

BWLIMMIN

Syntax

BWLIMMIN<num>[HZ|KHZ|MHZ|GHZ]; *or* BWLIMMIN?;

Description

Command	Description	Range	Query Response
BWLIMMIN	Enters the minimum bandwidth value. If the measured bandwidth is less than this value, the filter fails the bandwidth test.	stimulus range ¹	<num><L _F >

1. Refer to “Preset State and Memory Allocation” in your analyzer's reference guide.

Front Panel Equivalents

Command	Hardkey	Softkey
BWLIMMIN		MINIMUM BANDWIDTH

BWLIMSTAT

Syntax

BWLIMSTAT;

Description

Command	Description	Range	Response
BWLIMSTAT	Returns the results of the bandwidth test. A returned value of 0 indicates that the filter passed the bandwidth test. A returned value of -1 indicates that the filter failed the bandwidth test because it is narrower than the bandwidth limit. A returned value of 1 indicates that the filter failed the bandwidth test because it is wider than the bandwidth limit.	N/A	$\langle -1 0 1 \rangle \langle L_F \rangle$

No Front Panel Equivalents

GPIB only: no front panel equivalent.

BWLIMTEST

Syntax

BWLIMTEST<ON|OFF>; *or* BWLIMTEST?;

Description

Command	Description	Range	Query Response
BWLIMTEST	Turns the bandwidth test on and off.	N/A	$\langle 0 1 \rangle \langle L_F \rangle$

Front Panel Equivalents

Command	Hardkey	Softkey
BWLIMTEST	System	BW TEST on OFF

BWLIMVAL

Syntax

BWLIMVAL ;

Description

Command	Description	Range	Response
BWLIMVAL	Returns the measured bandwidth value.	N/A	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

C**C****Syntax**

C<0|1|2|3><num>;

Description

Command	Description	Range	Query Response
C0	These commands set the open capacitance values of an open circuit while it is being defined as a calibration standard.	$\pm 10\text{M} \times (10^{-15} \text{ F})$	N/A
C1		$\pm 10\text{M} \times (10^{-27} \text{ F})$	N/A
C2		$\pm 10\text{M} \times (10^{-36} \text{ F})$	N/A
C3		$\pm 10\text{M} \times (10^{-45} \text{ F})$	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
C0		C0
C1		C1
C2		C2
C3		C3

CAL1

Syntax

CAL1;

Description

Command	Description	Range	Query Response
CAL1	Accepted for compatibility with the 8510, where its function is to begin a calibration sequence. (Selects 1-port calibration.)	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CAL1		

CALF

Syntax

CALF<CALF|FREQ><num>; or CALF<CALF|FREQ>;

CALF<SENA|SENB>;

Description

Command	Description	Range	Query Response
CALFCALF	Sets the power meter sensor calibration factor.	0–200%	<num>< ^L _F >
CALFFREQ	Selects the frequency for the power meter sensor calibration factor correction.	stimulus range ¹	<num>< ^L _F >
CALFSENA	Edits the power sensor A calibration factor table.	N/A	N/A
CALFSENB	Edits the power sensor B (438A power meter only) calibration factor table.	N/A	N/A

1. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
CALFCALF		CAL FACTOR
CALFFREQ		FREQUENCY
CALFSENA		CAL FACTOR SENSOR A
CALFSENB		CAL FACTOR SENSOR B

CALI

Syntax

CALI<ERC|EREFL|RERC|FUL2|RAI|RESP|S111|S221|TRL2>; *or*

CALI<ERC|EREFL|RERC|FUL2|RAI|RESP|S111|S221|TRL2>;

Description

Command	Description	Range	Query Response
CALIERC	Begins the sequence for a forward enhanced response calibration.	N/A	<0 1>< ^L _F >
CALIEREFL	Turns the enhanced reflection response on or off.	N/A	<0 1>< ^L _F >
CALIRERC ¹	Begins the sequence for a reverse enhanced response calibration.	N/A	<0 1>< ^L _F >
CALIFUL2 ^{1,2}	Begins the sequence for a short, load, open, thru (SLOT) 2-port calibration.	N/A	<0 1>< ^L _F >
CALIRAI	Begins the sequence for a response and isolation calibration.	N/A	<0 1>< ^L _F >
CALIRESP	Begins the sequence for a response calibration.	N/A	<0 1>< ^L _F >
CALIS111	Begins the sequence for an S11 1-port calibration (ES models), or a reflection 1-port calibration (ET models).	N/A	<0 1>< ^L _F >
CALIS221 ¹	Begins the sequence for an S22 1-port calibration.	N/A	<0 1>< ^L _F >
CALITRL2 ¹	Begins the sequence for a thru, reflect, line <i>or</i> line, reflect, match (TRL*/LRM*) 2-port calibration.	N/A	<0 1>< ^L _F >

1. ES models only

2. The result of the query command only tells if the particular type of calibration is currently active. It does not provide information on the status of the cal sequence.

Front Panel Equivalents

Command	Hardkey	Softkey
CALIERC		ES models: S11/S21 ENH. RESP. ET models: TRAN/REFL ENH. RESP.
CALIRERC		S22/S12 ENH. RESP. ¹
CALIEREFL		ENH. REFL. on OFF
CALIFUL2		FULL 2-PORT ¹
CALIRAI		RESPONSE & ISOL'N
CALIRESP		RESPONSE
CALIS111		ES models: S11 1-PORT ET models: REFLECTION 1-PORT
CALIS221		S22 1-PORT ¹
CALITRL2		TRL/LRM 2-PORT ¹

1. ES models only.

CALK

Syntax

CALK<24MM|292MM|292S|32F|35MC|35MD|35ME|716|7MM|N50|N75|TRLK|USED>; or
 CALK<24MM|292MM|292S|32F|35MC|35MD|35ME|716|7MM|N50|N75|TRLK|USED>;

Description

Command	Description	Range	Query Response
CALK24MM	Selects a 2.4-mm calibration kit (85056A/D) as the default cal kit.	N/A	<0 1>< ^L _F >
CALK292MM	Selects a 2.92-mm calibration kit as the default cal kit.	N/A	<0 1>< ^L _F >
CALK292S	Selects a 2.92* calibration kit (85056K) as the default cal kit.	N/A	<0 1>< ^L _F >
CALK32F	Selects a 32F calibration kit (85032F) as the default cal kit.	N/A	<0 1>< ^L _F >
CALK35MC ¹	Selects a 3.5-mm calibration kit (85033C) as the default cal kit.	N/A	<0 1>< ^L _F >
CALK35MD	Selects a 3.5-mm calibration kit (85052 for 8720ET/ES series analyzers, and 85033D/E for 8753ET/ES analyzers) as the default cal kit.	N/A	<0 1>< ^L _F >
CALK35ME	Selects a 33D/E calibration kit (85033D/E) as the default cal kit for all analyzers.	N/A	<0 1>< ^L _F >
CALK716	Selects a 7-16 calibration kit (85038) as the default cal kit.	N/A	<0 1>< ^L _F >
CALK7MM	Selects a 7-mm calibration kit (85050 series for 8720ET/ES series analyzers, and 85031B for 8753ET/ES analyzers) as the default cal kit.	N/A	<0 1>< ^L _F >
CALKN50	Selects a type-N 50 ohm calibration kit (85054 for 8720ET/ES series analyzers, and 85032B/E for 8753ET/ES analyzers) as the default cal kit.	N/A	<0 1>< ^L _F >
CALKN75	Selects a type-N 75 ohm calibration kit (85036B/E) as the default cal kit.	N/A	<0 1>< ^L _F >
CALKTRLK	Selects a TRL 3.5-mm calibration kit (85052C) as the default cal kit.	N/A	<0 1>< ^L _F >
CALKUSED	Selects a user-defined calibration kit.	N/A	<0 1>< ^L _F >

1. Use CALK35MM for the 8752C and 8753D analyzers to select the 85033C cal kit.

Front Panel Equivalents

Command	Hardkey	Softkey
CALK24MM		2.4mm 85056
CALK292MM		2.92mm other kits
CALK292S		2.92* 85056K
CALK32F		N 50Ω 85032F
CALK35MC		3.5mmC 85033C
CALK35MD		3.5mmD 85052 ¹ 3.5mmD 85033D/E ²
CALK35ME		3.5mmD 85033D/E
CALK716		7-16 85038
CALK7MM		7mm 85050 ¹ 7mm 85031 ²
CALKN50		N 50Ω 85054 ¹ N 50Ω 85032B/E ²
CALKN75		N 75Ω 85036
CALKTRLK		TRL 3.5mm 85052C
CALKUSED		USER KIT

1. 8719ET/ES, 8720ET/ES, 8722ET/ES series analyzers
2. 8753ET/ES analyzers

CALN

Syntax

CALN; or CALN?;

Description

Command	Description	Range	Query Response
CALN	Turns calibration type to “off.” See also “CORR.” A response of “O” indicates that the correction is “ON”.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

CALPOW

Syntax

CALPOW;

NOTE This command only applies to 8720E series analyzers.

Description

Command	Description	Range	Query Response
CALPOW	Provides access to the power meter calibration functions.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CALPOW		PWRMTR CAL

CALSPORT

Syntax

CALSPORT<1|2>;

NOTE These commands only apply to ES models.

Description

Command	Description	Range	Query Response
CALSPORT1	Recalls cal set associated with PORT 1 for adapter removal.	N/A	N/A
CALSPORT2	Recalls cal set associated with PORT 2 for adapter removal.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CALSPORT1		RECALL CAL PORT 1
CALSPORT2		RECALL CAL PORT 2

CALZ

Syntax

CALZ<LINE|SYST>; or CALZ<LINE|SYST>;

NOTE These commands only apply to ES models.

Description

Command	Description	Range	Query Response
CALZLINE	Establishes the line or match standard(s) as the characteristic impedance for a TRL/LRM calibration.	N/A	<0 1>< ^L _F >
CALZSYST	Establishes the system Z ₀ (see “SETZ”) as the characteristic impedance for a TRL/LRM calibration.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CALZLINE		CAL Z0: LINE Z0
CALZSYST		CAL Z0: SYSTEM Z0

CBRI

Syntax

CBRI<num>; or CBRI?;

Description

Command	Description	Range	Query Response
CBRI	Adjusts the color brightness of the selected display feature.	integers 0–100	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CBRI	Display	BRIGHTNESS

CENT

Syntax

CENT<num>[HZ|DB]; or CENT?;

Description

Command	Description	Range	Query Response
CENT	Sets the center stimulus value. If a list frequency segment is being edited, sets the center of the list segment.	stimulus range ¹	<num>< ^L _F >

1. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
CENT	Center or Sweep Setup	SEGMENT: CENTER

CHAN

Syntax

CHAN<1|2|3|4>;





Description

Command	Description	Range	Query Response
CHAN1	Makes channel 1 the active channel. OPC-compatible.	N/A	N/A
CHAN2	Makes channel 2 the active channel. OPC-compatible.	N/A	N/A
CHAN3	Makes channel 3 the active channel. OPC-compatible.	N/A	N/A
CHAN4	Makes channel 4 the active channel. OPC-compatible.	N/A	N/A

NOTE These commands should use OPC? to prevent timing errors with subsequent commands. Example code written in BASIC:

```
10 OUTPUT 716;"OPC?;CHAN2;"
20 OUTPUT 716;X
```

Front Panel Equivalents

Command	Hardkey	Softkey
CHAN1		N/A
CHAN2		N/A
CHAN3		N/A
CHAN4		N/A

CHOPAB

Syntax

CHOPAB; or CHOPAB?;

Description

Command	Description	Range	Query Response
CHOPAB	Places the analyzer in the chop measurement mode. See also “ ALTAB. ”	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CHOPAB		CHOP A and B ¹
CHOPAB		CHOP RFL/TRAN ²

1. ES models only.

2. ET models only.

CLAD

Syntax

CLAD;

Description

Command	Description	Range	Query Response
CLAD	Class done (modify cal kit, specify class).	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CLAD		SPECIFY CLASS DONE

CLASS

Syntax

CLASS<11A|11B|11C|22A|22B|22C>;

Description

These commands call reflection standard classes during a calibration sequence. If only one standard is in the class, it is measured. If there is more than one, the standard being used must be selected with STAN<A|B|C|D|E|F|G>. If there is only one standard in the class, these commands are OPC-compatible.

Command	Description	Range	Query Response
CLASS11A	S11A: S11 (forward reflection) 1-port, open	N/A	N/A
CLASS11B	S11B: S11 (forward reflection) 1-port, short	N/A	N/A
CLASS11C	S11C: S11 (forward reflection) 1-port, load	N/A	N/A
CLASS22A ¹	S22A: S22 (reverse reflection) 1-port, open	N/A	N/A
CLASS22B ¹	S22B: S22 (reverse reflection) 1-port, short	N/A	N/A
CLASS22C ¹	S22C: S22 (reverse reflection) 1-port, load	N/A	N/A

1. ES models only.

EXAMPLE To measure the female open of a type-N cal kit:

OUTPUT 716;"CLASS11A;OPC?;STANB;"
ENTER OPC;

Front Panel Equivalents

Command	Hardkey	Softkey
CLASS11A		S11A
CLASS11B		S11B
CLASS11C		S11C
CLASS22A		S22A
CLASS22B		S22A
CLASS22C		S22A

CLEA

Syntax

CLEA<num>;

CLEAREG<num>;

CLEARALL;

Description

Command	Description	Range	Query Response
CLEA	Clears the indicated save/recall registers. OPC-compatible.	integers 1–5	N/A
CLEAREG	Clears save/recall registers 01 through 31. CLEAREG01 through CLEAREG05 are the same as CLEA1 through CLEA5. OPC-compatible.	two-digit integers 01–31	N/A
CLEARALL	Clears all the save/recall registers. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CLEA		CLEAR
CLEAREG		CLEAR
CLEARALL		CLEAR ALL

CLEAL


Syntax

CLEAL;

Description

Command	Description	Range	Query Response
CLEAL	Clears the limit line list. Should be preceded by EDITLIML.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CLEAL		

CLEABIT

Syntax

CLEABIT<num>; or CLEABIT?;

Description

Command	Description	Range	Query Response
CLEABIT	Clears the specified bit on the GPIO.	integers 0–7	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CLEABIT		

CLEASEQ

Syntax

CLEASEQ<num>;

Description

Command	Description	Range	Query Response
CLEASEQ	Clears the indicated sequence from the internal registers.	integers 1–6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CLEASEQ	Seq	CLEAR SEQUENCE

CLEL

Syntax

CLEL;

Description

Command	Description	Range	Query Response
CLEL	Clears the currently selected list. This could be a frequency list, power loss list, or limit test list. Must be preceded by an “EDIT” command.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CLEL	Sweep Setup or Cal	CLEAR LIST YES

CLES

Syntax

CL[E]S;

Description

Command	Description	Range	Query Response
CLES	Clears the status byte register, the event-status registers, and the enable registers.	N/A	N/A
CLS	Same as CLES.	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

CLER

Syntax

CLER;

Description

Command	Description	Range	Query Response
CLER	Clears (or deletes) the all of existing ripple test limits.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CLER		

COAD

Syntax

COAD; or COAD?;

Description

Command	Description	Range	Query Response
COAD	Selects coaxial electrical delay. See also “WAVD.”	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
COAD	Scale Ref	COAXIAL DELAY

COAX

Syntax

COAX; or COAX?;

Description

Command	Description	Range	Query Response
COAX	Selects coaxial offsets instead of waveguide while defining a standard during a cal kit modification.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
COAX	Cal	COAX

COLO

Syntax

COLO<CH1D|CH2D|CH3D|CH4D|CH1M|CH2M|CH3M|CH4M|GRAT|TEXT|LREF|WARN>;

Description

These commands select the indicated display feature for color modification:

Command	Description	Range	Query Response
COLOCH1D	Channel 1 data and limit line.	N/A	N/A
COLOCH2D	Channel 2 data and limit line.	N/A	N/A
COLOCH3D	Channel 3 data and limit line.	N/A	N/A
COLOCH4D	Channel 4 data and limit line.	N/A	N/A
COLOCH1M	Channel 1 memory.	N/A	N/A
COLOCH2M	Channel 2 memory.	N/A	N/A
COLOCH3M	Channel 3 memory.	N/A	N/A
COLOCH4M	Channel 4 memory.	N/A	N/A
COLOGRAT	Graticule.	N/A	N/A
COLOTEXT	Text.	N/A	N/A
COLOLREF	Reference line.	N/A	N/A
COLOWARN	Warning.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
COLOCH1D	Display	CH1 DATA LIMIT LN
COLOCH2D	Display	CH2 DATA LIMIT LN
COLOCH3D	Display	CH3 DATA LIMIT LN
COLOCH4D	Display	CH4 DATA LIMIT LN
COLOCH1M	Display	CH1 MEM
COLOCH2M	Display	CH2 MEM
COLOCH3M	Display	CH3 MEM
COLOCH4M	Display	CH4 MEM
COLOGRAT	Display	GRATICULE
COLOTEXT	Display	TEXT
COLOLREF	Display	REF LINE
COLOWARN	Display	WARNING

COLOR

Syntax

COLOR<num>; or COLOR?;

Description

Command	Description	Range	Query Response
COLOR	Adjusts the color saturation for the selected display feature.	integers 0–100	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
COLOR	Display	COLOR

CONS

Syntax

CONS;

Description

Command	Description	Range	Query Response
CONS	Continues the paused sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
CONS		

CONT


Syntax

CONT; *or* CONT?;

Description

Command	Description	Range	Query Response
CONT	Places the analyzer in continuous sweep trigger mode.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CONT		

CONV

Syntax

CONV<1DS|OFF|YREF|YTRA|ZREF|ZTRA>; or CONV<1DS|OFF|YREF|YTRA|ZREF|ZTRA>;

Description

These 6 commands convert the S-parameter data to:

Command	Description	Range	Query Response
CONV1DS	Inverted S-parameters.	N/A	<0 1>< ^L _F >
CONVOFF	Turns S-parameter conversion off.	N/A	<0 1>< ^L _F >
CONVYREF	Y:reflection (admittance).	N/A	<0 1>< ^L _F >
CONVYTRA	Y:transmission (admittance).	N/A	<0 1>< ^L _F >
CONVZREF	Z:reflection (impedance).	N/A	<0 1>< ^L _F >
CONVZTRA	Z:transmission (impedance).	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CONV1DS	Meas	CONVERSION 1/S
CONVOFF	Meas	CONVERSION OFF
CONVYREF	Meas	CONVERSION Y:Refl
CONVYTRA	Meas	CONVERSION Y:Trans
CONVZREF	Meas	CONVERSION Z:Refl
CONVZTRA	Meas	CONVERSION Z:Trans

COPY

Syntax

COPY<FRFT|FRRT>;

Description

Command	Description	Range	Query Response
COPYFRFT	Copies labels from file titles.	N/A	N/A
COPYFRRT	Copies labels from register titles.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
COPYFRFT	Save/Recall	COPY FROM FILE TITLE
COPYFRRT	Save/Recall	COPY FROM REG TITLES

CORI

Syntax

CORI<ON|OFF>; or CORI?;

Description

Command	Description	Range	Query Response
CORI	Turns interpolative error correction on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CORI	CAL	INTERPOL ON OFF

CORR

Syntax

CORR<ON|OFF>; or CORR?;

Description

Command	Description	Range	Query Response
CORR	Turns error correction on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CORR	CAL	CORRECTION ON OFF

COU

Syntax

COU<C|P><ON|OFF>; or COU<C|P>;

Description

Command	Description	Range	Query Response
COUC	Couples and uncouples the stimulus between the channels.	N/A	<0 1>< ^L _F >
COUP	Couples the power when channel coupling is turned off with the COUCOFF command.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
COUC	Sweep Setup	COUPLED CH ON OFF
COUP	Power	CHAN POWER COUPLED / UNCOUPLD

CSWI

Syntax

CSWI<ON|OFF>; or CSWI?;

NOTE These commands only apply to ES models.

Description

See also [“TSSWI” on page 1-267](#).

Command	Description	Range	Query Response
CSWION	Selects test set continuous switching. When continuous switching is on, the analyzer measures all four S-parameters each time before displaying the data for a full 2-port cal measurement.	N/A	N/A
CSWIOFF	Selects test set hold mode. The analyzer measures all four S-parameters once and then measures the desired parameter continuously. This is known as a fast 2-port cal measurement and it is less accurate than a full 2-port calibrated measurement.	N/A	N/A
CSWI?	Queries whether continuous switching is on or off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CSWION		TESTSET SW CONTINUOUS
CSWIOFF		TESTSET SW HOLD

CWFREQ

Syntax

CWFREQ<num>[HZ|DB]; or CWFREQ?;

Description

Command	Description	Range	Query Response
CWFREQ	Sets the CW frequency for power sweep and CW frequency modes. While the list frequency table segment is being edited, it sets the center frequency of the current segment. See also “ MARKCENT .”	stimulus range ¹	<num><L _F >

1. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in the analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
CWFREQ	Sweep Setup	CW FREQ

CWTIME

Syntax

CWTIME; or CWTIME?;

Description

Command	Description	Range	Query Response
CWTIME	Selects CW time as the sweep type.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
CWTIME	Sweep Setup	CW TIME

D1DIVD2


Syntax

D1DIVD2<ON|OFF>; or D1DIVD2?;

Description

Command	Description	Range	Query Response
D1DIVD2	This command divides the data in channel 2 by the data in channel 1, and then displays the result on channel 2. Dual display must be turned on first with the DUACON command.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
D1DIVD2		D2/D1 to D2 ON OFF

D2XUPCH

Syntax

D2XUPCH<2|3>; or D2XUPCH<2|3>;

Description

Command	Description	Range	Query Response
D2XUPCH2	Sets up a two-graticule display with channel 2 on top.	N/A	<0 1>< ^L _F >
D2XUPCH3	Sets up a two-graticule display with channel 3 on top.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
D2XUPCH2	Display	2x:[1&2][3&4]
D2XUPCH3	Display	2x:[1&3][2&4]

D4XUPCH



Syntax

D4XUPCH<2|3>; or D4XUPCH<2|3>;

Description

Command	Description	Range	Query Response
D4XUPCH2	Sets up a four-graticule display with channel 2 in the upper right quadrant of the display.	N/A	<0 1>< ^L _F >
D4XUPCH3	Sets up a four-graticule display with channel 3 in the upper right quadrant of the display.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
D4XUPCH2		4x:[1][2][3][4]
D4XUPCH3		4x:[1][3][2][4]

DATI

DATI


Syntax

DATI;

Description

Command	Description	Range	Query Response
DATI	Stores the data trace in channel memory. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DATI		DATA → MEMORY

DCONV

Syntax

DCONV;

NOTE This command applies to all 8753ET/ES analyzers, and to 8720E series analyzers with Option 089.

Description

Command	Description	Range	Query Response
DCONV	Selects down converter for mixer measurements.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DCONV		DOWN CONVERTER

DEBU

Syntax

DEBU<ON|OFF>; *or* DEBU?;

Description

Command	Description	Range	Query Response
DEBU	Turns the GPIB debug mode on and off. When on, the analyzer scrolls incoming GPIB commands across the display.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DEBU	Local	GPIB DIAG

DECRLOOC

Syntax

DECRLOOC;

Description

Command	Description	Range	Query Response
DECRLOOC	Decrements the sequencing loop counter by 1.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DECRLOOC	Seq	DECR LOOP COUNTER

DEFC

DEFC**Syntax**

DEFC;

Description

Command	Description	Range	Query Response
DEFC	Sets the default colors for all display features.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DEFC	Display	DEFAULT COLORS

DEFLPRINT

Syntax

DEFLPRINT;

Description

Command	Description	Range	Query Response
DEFLPRINT	Sets the printer to the conditions listed in Table 1-1 .	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DEFLPRINT		DEFAULT PRNT SETUP

Table 1-1 Printer Default Conditions

Print		Monochrome
Auto-feed		On
Print Colors:		
Ch 1 Data		Magenta
Ch 1 Memory		Green
Ch 2 Data		Blue
Ch 2 Memory		Red
Graticule		Cyan
Warning		Black
Text		Black

DEFLTCPIO

Syntax

DEFLTCPIO;

Description

Command	Description	Range	Query Response
DEFLTCPIO	Sets up the copy default state as listed in Table 1-2 .	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent

Table 1-2 Default Copy State

Plotter Type:	PLOTTER	Printer Type:	DESKJET
Plotter Port:	SERIAL	Printer Port:	PARALLEL
Baud Rate:	9600	Baud Rate:	19200
Handshake:	Xon-Xoff	Handshake:	Xon-Xoff
GPIB Address:	5	GPIB Address:	1
Parallel Port:	COPY		

DEFS

Syntax

DEFS<num>;

Description

Command	Description	Range	Query Response
DEFS	Begins standard definition during cal kit modification. “<num>” is the standard number.	integers 1–8	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DEFS		DEFINE STANDARD

DEL

Syntax


DEL<0|RFXM>; or DEL<0|RFXM>;

DELR<num>; or DELR<num>;

Description

Command	Description	Range	Query Response
DELO	Turns delta marker mode off.	N/A	<0 1><L _F >
DELR	Makes the indicated marker the delta reference.	integers 1–5	<0 1><L _F >
DELRFXM	Makes the fixed marker the delta reference.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DELO		
DELR		
DELRFXM		

DELA


Syntax

DELA; *or* DELA?;

Description

Command	Description	Range	Query Response
DELA	Displays the data formatted as group delay.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DELA		

DEMO**DEMO****Syntax**

DEMO<AMPL|OFF|PHAS>; or DEMO<AMPL|OFF|PHAS>;

Description

Command	Description	Range	Query Response
DEMOAMPL	Turns on transform demodulation and sets the transform demodulation to amplitude demodulation. Only has a meaningful effect with a CW time transform.	N/A	<0 1>< ^L _F >
DEMOOFF	Turns the transform demodulation function off.	N/A	<0 1>< ^L _F >
DEMOPHAS	Sets the transform demodulation to phase demodulation. Only has a meaningful effect with a CW time transform.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DEMOAMPL	System	DEMOD: OFF
DEMOOFF	System	DEMOD: AMPLITUDE
DEMOPHAS	System	DEMOD: PHASE

DFLT

Syntax

DFLT;

Description

Command	Description	Range	Query Response
DFLT	Sets the plotter to the default conditions listed in Table 1-3 .	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DFLT		DEFAULT PLOT SETUP

Table 1-3 Plotter Default Conditions

Plot Data	On		Pen Number:	
Plot Mem	On		Data	2
Plot Grat	On		Memory	5
Plot Text	On		Graticule	1
Plot Mkr	On		Text	7
Auto-feed	On		Marker	7
Scale Plot	Full		Line Type:	
Plot Speed	Fast		Data	7
			Memory	7

DIRS

Syntax

DIRS<num>; or DIRS?;

Description

Command	Description	Range	Query Response
DIRS	Sets the number of files in the directory at disk initialization. LIF only.	integers 256–8192	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DIRS	Save/Recall	DIRECTORY SIZE

DISC

Syntax

DISC<UNIT|VOLU><num>; or DISC<UNIT|VOLU>;

Description

Command	Description	Range	Query Response
DISCUNIT	Specifies which disk in an external multiple-disk drive to be used for save/recall.	integers 0–30	<num><L _F >
DISCVOLU	Specifies which volume of an external multiple-volume disk drive to be used for save/recall.	integers 0–30	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DISCUNIT	Local	DISK UNIT NUMBER
DISCVOLU	Local	VOLUME NUMBER

DISM

Syntax

DISM<ON|OFF>; *or* DISM?;

Description

Command	Description	Range	Query Response
DISM	When on, displays the response and stimulus values for all markers that are turned on; when off, only the active marker's value is displayed.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DISM		

DISP

Syntax






DISP<DATA|DATM|DDM|DMM|MEMO>; or DISP<DATA|DATM|DDM|DMM|MEMO>;

Description

These commands display the indicated combinations of data and trace memory on the active channel.

Command	Description	Range	Query Response
DISPDATA	Data only.	N/A	<0 1>< ^L _F >
DISPDATM	Data and memory.	N/A	<0 1>< ^L _F >
DISPDDM	Data divided by memory (linear division, log subtraction). See also “ DIVL .”	N/A	<0 1>< ^L _F >
DISPDMM	Data minus memory (linear subtraction). See also “ MINU .”	N/A	<0 1>< ^L _F >
DISPMEMO	Memory only.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DISPDATA		DISPLAY: DATA
DISPDATM		DATA and MEMORY
DISPDDM		DATA/MEM
DISPDMM		DATA-MEM
DISPMEMO		MEMORY

DIVI

DIVI


Syntax

DIVI; or DIVI?;

Description

Command	Description	Range	Query Response
DIVI	Data divided by memory (linear division, log subtraction). See also “ DISPDDM. ”	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DIVI		

DONE

Syntax

DONE;

Description

Command	Description	Range	Query Response
DONE	Done with a class of standards, during a calibration. Only needed when multiple standards are measured to complete the class. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DONE		

DONM

Syntax

DONM;

Description

Command	Description	Range	Query Response
DONM	Done modifying a test sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DONM		

DOSEQ

Syntax

DOSEQ<num>;

Description

Command	Description	Range	Query Response
DOSEQ	Begins execution of the selected sequence.	integers 1–6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DOSEQ		

DOWN

DOWN**Syntax**

DOWN;

Description

Command	Description	Range	Query Response
DOWN	Decrements the value displayed in the active entry area (emulates pressing the down-arrow key).	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DOWN		N/A


DUAC**Syntax**

DUAC<ON|OFF>; or DUAC?;

Description

Command	Description	Range	Query Response
DUAC	Turns dual channel display on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
DUAC		DUAL CHAN ON OFF

DUPLSEQ

Syntax

DUPLSEQ<num>SEQ<num>;

Description

Command	Description	Range	Query Response
DUPLSEQ	Duplicates SEQ<num> to SEQ<num>.	integers 1–6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
DUPLSEQ		DUPLICATE SEQUENCE

ECALAB?

Syntax

ECALAB?;

Description

Command	Description	Range	Query Response
ECALAB?	Queries the analyzer for the currently selected module. This query returns the integer “1” if the “A” module is selected or the integer “0” if the “B” module is selected.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent

ECALCONT

Syntax

ECALCONT;

Description

Command	Description	Range	Query Response
ECALCONT	Continues a paused ECal during a manual thru operation or a dual module operation. This command is used with the polling command “ECALPAUSED” on page 1-78 which returns the integer “1” when paused or the integer “0” when not paused.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ECALCONT		CONTINUE ECal

ECALDONE

Syntax

ECALDONE;

Description

Command	Description	Range	Query Response
ECALDONE	This command is designed to be used in a polling loop to determine if the ECal operation is finished. The command returns information immediately. The integer “1” is returned if the ECal has completed the calibration or returns the integer “0” if the ECal is not finished.	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent

ECALERC

Syntax

ECALERC;

Description

Command	Description	Range	Query Response
ECALERC ¹	Performs an ECal forward enhanced response calibration.	N/A	N/A

1. For ES analyzers, S_{11}/S_{21} enhanced response is performed. For ET analyzers, transmission / reflection enhanced response is performed.

Front Panel Equivalents

Command	Hardkey	Softkey
ECALERC		ES models: S11/21 ENH. RESP. ET models: TRAN/REFL ENH. RESP.

ECALFREQS

Syntax

ECALFREQS;

Description

Command	Description	Range	Response
ECALFREQS	Extracts an array of the factory calibration frequency values that are stored in the ECal module. Before using this command, use “ECALNFREQS” on page 1-77 to determine the number of frequency points stored in the module. Use this number to dimension the array for data from the ECALFREQS command. This is an ASCII transfer.	varies with ECal module	<array><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent

ECALFUL2

Syntax

ECALFUL2;

Description

Command	Description	Range	Query Response
ECALFUL2 ¹	Performs an ECal full two-port calibration.	N/A	N/A

1. This command is not valid with ET analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
ECALFUL2		FULL 2-PORT

ECALISOAVG

Syntax

ECALISOAVG<NUM>; *or* ECALISOAVG?;

Description

Command	Description	Range	Query Response
ECALISOAVG	Sets the number of averages in the ECal isolation averages function.	1-999	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ECALISOAVG		ISOLATION AVERAGES

ECALMANTHRU

Syntax

ECALMANTHRU<ON|OFF>; *or* ECALMANTHRU?;

Description

Command	Description	Range	Query Response
ECALMANTHRUON	Sets manual thru to “on.”	N/A	<0 1>< ^L _F >
ECALMANTHRUOFF	Sets manual thru to “off.”	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ECALMANTHRUON		MAN ’ L THRU ON off
ECALMANTHRUOFF		MAN ’ L THRU on OFF

ECALMODID

Syntax

ECALMODID;

Description

Command	Description	Range	Response
ECALMODID	This command returns the selected ECal module model number and serial number in string form. Model number output: MODEL NUMBER: XXXXX-XXXXX Serial number output: SERIAL NUMBER: XXXXX	N/A	$\langle \$ \rangle \langle {}^L_F \rangle$

Front Panel Equivalents

GPIB only: no front panel equivalent

ECALMODINF

Syntax

ECALMODINF;

Description

Command	Description	Range	Response
ECALMODINF	This command returns string variables on the following information on the selected ECal module. Model Number: xxxxx-xxxxx Serial Number: xxxxx Connector Type: connector type Last Certification: ddmmyear Module Number of Points: xxx Module Start Frequency: xxxxx¹ Module Stop Frequency: xxxxxxxxx¹ Suggested Warmup Time: xxx SECONDS Module Warmup Status: xxx² For an example of the output data, refer to the description on module information in the user's guide in the “<i>Calibrating for Increased Measurement Accuracy</i>” chapter.	N/A	<array><L _F >

1. Output in hertz.
2. Can be polled in a loop to return the latest warmup time. When warmup time is finished, the string “READY” will be returned.

Front Panel Equivalents

Command	Hardkey	Softkey
ECALMODINF		MODULE INFO

ECALMODSELA

Syntax

ECALMODSELA;

Description

Command	Description	Range	Query Response
ECALMODSELA	Sets the active module to “A”. If no module is connected to “A”, error message 222 “ECal MODULE NOT RESPONDING” will be set in the error buffer.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ECALMODSELA		MODULE A b

ECALMODSELB

Syntax

ECALMODSELB;

Description

Command	Description	Range	Query Response
ECALMODSELB	Sets the active module to “B”. If no module is connected to “B”, error message 222 “ECal MODULE NOT RESPONDING” will be set in the error buffer.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ECALMODSELB		MODULE a B

ECALNFREQS

Syntax

ECALNFREQS;

Description

Command	Description	Range	Response
ECALNFREQS	Extracts the number of the factory calibration frequency points that are stored in the ECal module. Use this command to determine the size of the array to put the frequency values returned from the command “ ECALFREQS ” on page 1-72 .	varies with ECal module	<num>< ^L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent

ECALOMII

Syntax

ECALOMII<ON|OFF>; or ECALOMII?;

Description

Command	Description	Range	Query Response
ECALOMIIION	Sets omit isolation to “on.”	N/A	<0 1>< ^L _F >
ECALOMIIIOFF	Sets omit isolation to “off.”	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ECALOMIIION		OMIT ISOL ON off
ECALOMIIIOFF		OMIT ISOL on OFF

ECALPAUSED

Syntax

ECALPAUSED;

Description

Command	Description	Range	Query Response
ECALPAUSED	This command is designed to be used in a polling loop to determine if the ECal operation is in the pause stage of a manual thru and a dual module calibration. Used with the command “ECALCONT” on page 1-70 . Returns the integer “1” if the ECal is paused or returns the integer “0” if the ECal is not paused.	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent

ECALRERC

Syntax

ECALRERC;

Description

Command	Description	Range	Query Response
ECALRERC ¹	Starts an ECal reverse enhanced response calibration.	N/A	N/A

1. For ES analyzers, an S_{22} / S_{12} enhanced response is performed. This command is not valid with ET analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
ECALRERC		S22/12 ENH. RESP.

ECALS11

Syntax

ECALS11;

Description

Command	Description	Range	Query Response
ECALS11 ¹	Performs an ECal S_{11} one- port reflection calibration.	N/A	N/A

1. For ES analyzers, an S_{11} one port calibration is performed. For ET analyzers, a reflection one-port calibration is performed.

Front Panel Equivalents

Command	Hardkey	Softkey
ECALS11		ES models: S11 1-PORT ET models: REFLECTION 1-PORT

ECALS22

Syntax

ECALS22;

Description

Command	Description	Range	Query Response
ECALS22 ¹	Performs an ECal S_{22} one- port reflection calibration.	N/A	N/A

1. This command is not valid with ET analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
ECALS22		S22 1-PORT

EDIT

Syntax

EDIT<DONE|LIML|LIST>;

Description

Command	Description	Range	Query Response
EDITDONE	Done editing list frequency, limit table, cal sensor table, or power loss list. OPC-compatible.	N/A	N/A
EDITLIML	Begins editing limit table.	N/A	N/A
EDITLIST	Begins editing list frequency table.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
EDITDONE	System or Sweep Setup or Cal	DONE
EDITLIML	System	EDIT LIMIT LINE
EDITLIST	Sweep Setup	EDIT LIST

EDITRLIM


Syntax

EDITRLIM;

Description

Command	Description	Range	Query Response
EDITRLIM	Begins the editing of the ripple limit list.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
EDITRLIM		

ELED

Syntax

ELED<num>[S]; or ELED?;

Description

Command	Description	Range	Query Response
ELED	Sets the electrical delay offset.	±10 seconds	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
ELED	Scale Ref	ELECTRICAL DELAY

EMIB

Syntax

EMIB;

Description

Command	Description	Range	Query Response
EMIB	Sends out a beep during a sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
EMIB	Seq	EMIT BEEP

ENTO


Syntax

ENTO;

Description

Command	Description	Range	Query Response
ENTO	Removes displayed information from the active entry area on the screen.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ENTO		N/A

ERCDONE

Syntax

ERCDONE;

Description

See also “[RERCDONE](#)” on [page 1-201](#) for reverse enhanced response calibration on ES model analyzers.

Command	Description	Range	Query Response
ERCDONE	Completes the forward enhanced response calibration sequence. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ERCDONE		DONE FWD ENH RESP

ESB?

Syntax

ESB?;

Description

Command	Description	Range	Query Response
ESB?	Query only. Outputs event-status register B.	N/A	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

ESE

Syntax

ESE<num>; or ESE?;

Description

Command	Description	Range	Query Response
ESE	Enables the selected event-status register bits to be summarized by bit 5 in the status byte. An event-status register bit is enabled when the corresponding bit in the operand <num> is set.	integers 0–255	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

ESNB

Syntax

ESNB<num>; *or* ESNB?;

Description

Command	Description	Range	Query Response
ESNB	Enables the selected event-status register B bits to be summarized by bit 2 in the status byte. An event-status register bit is enabled when the corresponding bit in the operand <num> is set.	integers 0–4095	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

ESR?

Syntax

ESR?;

Description

Command	Description	Range	Query Response
ESR?	Query only. Outputs event-status register.	N/A	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

EXTD

Syntax

EXTD;

Description

Command	Description	Range	Query Response
EXTD	Selects the external disk as the active storage device.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
EXTD	Save/Recall	EXTERNAL DISK

EXTM

Syntax

EXTM<DATA|DATO|FORM|GRAP|RAW><ON|OFF>; or EXTM<DATA|DATO|FORM|GRAP|RAW>;


Description

These commands include the indicated information when an instrument state is stored to the internal floppy disk drive or an external disk.

Command	Description	Range	Query Response
EXTMDATA	Adds error corrected data (real and imaginary pairs) along with the other files. ¹	N/A	<0 1>< ^L _F >
EXTMDATO	Selected data arrays only (real and imaginary pairs), without instrument states or calibrations. Always saves the data array, even if it hasn't been selected. ¹	N/A	<0 1>< ^L _F >
EXTMFORM	Formatted trace data. Uses currently selected format for data.	N/A	<0 1>< ^L _F >
EXTMGRAP	User graphics.	N/A	<0 1>< ^L _F >
EXTMRAW	Raw data arrays (real and imaginary pairs).	N/A	<0 1>< ^L _F >

1. See [Figure 5-1 on page 5-3](#). This error corrected data is the same as that output by the OUTPDATA command.

Front Panel Equivalents

Command	Hardkey	Softkey
EXTMDATA		DATA ARRAY ON OFF
EXTMDATO		DATA ONLY
EXTMFORM		FORMAT ARY ON OFF
EXTMGRAP		GRAPHICS ON OFF
EXTMRAW		RAW ARRAY ON OFF

EXTRCHAN

Syntax


EXTRCHAN<ON|OFF>; or EXTRCHAN?;

NOTE This command only applies to 8720E series analyzers.

Description

Command	Description	Range	Query Response
EXTRCHAN	Sets the internal phase lock reference selection switch on or off. This allows the analyzer to receive its R channel input through the R CHANNEL IN port (EXTRCHANON) or from its own internal source (EXTRCHANOFF).	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
EXTRCHAN		EXT R CHAN ON OFF

EXTT

Syntax




EXTT<ON|OFF>; *or* EXTT?;

EXTT<HIGH|LOW|POIN>;

Description

Command	Description	Range	Query Response
EXTT	Activates or deactivates the external trigger mode. OPC-compatible.	N/A	<0 1>< ^L _F >
EXTTHIGH	Sets the external trigger line high.	N/A	N/A
EXTTLOW	Sets the external trigger line low.	N/A	N/A
EXTTPOIN	Sets the external trigger to auto-trigger on point. OPC-compatible.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
EXTTON		EXT TRIG ON SWEEP
EXTTOFF		TRIGGER: TRIG OFF
EXTTHIGH	GPIB only: no front panel equivalent.	
EXTTLOW	GPIB only: no front panel equivalent.	
EXTTPOIN		EXT TRIG ON POINT

FIXE

FIXE**Syntax**

FIXE;

Description

Command	Description	Range	Query Response
FIXE	Specifies a fixed load, as opposed to a sliding load or offset load, when defining a standard during a cal kit modification.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
FIXE		FIXED

FORM

Syntax

FORM<1|2|3|4|5>;

Description

These 5 commands set the data format for array transfers in and out of the instrument:

Command	Description	Range	Query Response
FORM1	The analyzer's internal binary format, 6 bytes-per-data point. The array is preceded by a four-byte header. The first two bytes represent the string "#A", the standard block header. The second two bytes are an integer representing the number of bytes in the block to follow. FORM1 is best applied when rapid data transfers, not to be modified by the computer nor interpreted by the user, are required.	N/A	N/A
FORM2	IEEE 32-bit floating-point format, 4 bytes-per-number, 8 bytes-per-data point. The data is preceded by the same header as in FORM1. Each number consists of a 1-bit sign, an 8-bit biased exponent, and a 23-bit mantissa. FORM2 is the format of choice if your computer is not a PC, but supports single-precision floating-point numbers.	N/A	N/A
FORM3	IEEE 64-bit floating-point format, 8 bytes-per-number, 16 bytes-per-data point. The data is preceded by the same header as in FORM1. Each number consists of a 1-bit sign, an 11-bit biased exponent, and a 52-bit mantissa. This format may be used with double-precision floating-point numbers. No additional precision is available in the analyzer data, but FORM3 may be a convenient form for transferring data to your computer.	N/A	N/A
FORM4	ASCII floating-point format. The data is transmitted as ASCII numbers, as described in "Output Syntax" on page 4-3 . There is no header. The analyzer always uses FORM4 to transfer data that is not related to array transfers (i.e. marker responses and instrument settings). Data is comma delimited.	N/A	N/A
FORM5	PC-DOS 32-bit floating-point format with 4 bytes-per-number, 8 bytes-per-data point. The data is preceded by the same header as in FORM1. The byte order is reversed with respect to FORM2 to comply with PC-DOS formats. If you are using a PC-based controller, FORM5 is the most effective format to use.	N/A	

Front Panel Equivalents

GPIB only: no front panel equivalent.

FORMAT

Syntax

FORMAT<DOS|LIF>;

Description

These commands define the format to use on disk initializations:

Command	Description	Range	Query Response
FORMATDOS	Selects DOS as the disk format.	N/A	N/A
FORMATLIF	Selects LIF as the disk format.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
FORMATDOS	Save/Recall	FORMAT: DOS
FORMATLIF	Save/Recall	FORMAT: LIF

FREO


Syntax

FREO;

Description

Command	Description	Range	Query Response
FREO	Frequency blank. Turns frequency notation off. Once the frequency notation has been turned off (blanked), it cannot be turned back on until a preset or recall is initiated.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
FREO		FREQUENCY BLANK

FREQOFFS

Syntax


FREQOFFS<ON|OFF>; or FREQOFFS?;

NOTE This command only applies to 8753ET/ES analyzers, and to 8720E series analyzers with Option 089.

Description

Command	Description	Range	Query Response
FREQOFFS	Activates the frequency offset instrument mode. OPC-compatible.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
FREQOFFS		FREQ OFFS ON OFF

FRER

Syntax

FRER; *or* FRER?;

Description

Command	Description	Range	Query Response
FRER	Places the analyzer in GPIB free run mode. (Same as continuous sweep trigger mode.) See “ CONT. ”	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
FRER	Sweep Setup	CONTINUOUS

FULP

Syntax

FULP; *or* FULP?;

Description

Command	Description	Range	Query Response
FULP	Selects full page plotting, as opposed to plotting in one of the four quadrants.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
FULP	Copy	FULL PAGE

FWD

FWD**Syntax**

FWD<I|M|T>;

Description

These commands are OPC-compatible if there is only one standard in the class. If there is just one standard, that standard is measured automatically. If there is more than one standard in the class, the standard being used must be selected with the STAN command.

Command	Description	Range	Query Response
FWDI	Selects the forward isolation calibration class during a 2-port calibration sequence.	N/A	N/A
FWDM	Selects the forward match calibration class during a 2-port calibration sequence.	N/A	N/A
FWDT	Selects the forward transmission calibration class during a 2-port calibration sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
FWDI		FWD ISOL'N
FWDM		FWD MATCH
FWDT		FWD TRANS

GATE

Syntax

GATEO<ON|OFF>; or GATEO?;

GATE<CENT|SPAN|STAR|STOP><num>[HZ|DB]; or GATE<CENT|SPAN|STAR|STOP>;





Description

Command	Description	Range	Query Response
GATEO ¹	Turns the time domain gate on or off.	N/A	<0 1><L _F >
GATECENT	Sets the center time for the time domain gate.	stimulus range ²	<num><L _F >
GATESPAN	Sets the time span for the time domain gate.	stimulus range ²	<num><L _F >
GATESTAR	Sets the start time for the time domain gate.	stimulus range ²	<num><L _F >
GATESTOP	Sets the stop time for the time domain gate.	stimulus range ²	<num><L _F >

1. OPC-compatible.

2. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
GATEO		GATE ON OFF
GATECENT		GATE: CENTER
GATESPAN		GATE: SPAN
GATESTAR		GATE: START
GATESTOP		GATE: STOP

GATS

Syntax




GATS<MAXI|MINI|NORM|WIDE>; or GATS<MAXI|MINI|NORM|WIDE>;

Description

These commands set the time domain gate shape:

Command	Description	Range	Query Response
GATSMAXI	Maximum	N/A	<0 1>< ^L _F >
GATSMINI	Minimum	N/A	<0 1>< ^L _F >
GATSNORM	Normal	N/A	<0 1>< ^L _F >
GATSWIDE	Wide	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
GATSMAXI		GATE SHAPE MAXIMUM
GATSMINI		GATE SHAPE MINIMUM
GATSNORM		GATE SHAPE NORMAL
GATSWIDE		GATE SHAPE WIDE

GOSUB

Syntax

GOSUB<num>;

Description

Command	Description	Range	Query Response
GOSUB	Invokes a sequence as a subroutine.	integers 1–6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
GOSUB		

HARM

HARM

Syntax

HARM<OFF|SEC|THIR>; or HARM<OFF|SEC|THIR>;



NOTE This command only applies to 8753ES/ET analyzers with Option 002.

Description

These commands activate the harmonic measurement mode, Option 002. They are all OPC-compatible:

Command	Description	Range	Query Response
HARMOFF	Turns off harmonic mode.	N/A	<0 1>< ^L _F >
HARMSEC	Measures the second harmonic.	N/A	<0 1>< ^L _F >
HARMTHIR	Measures the third harmonic.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
HARMOFF		HARMONIC OFF
HARMSEC		HARMONIC SECOND
HARMTHIR		HARMONIC THIRD

HOLD


Syntax

HOLD; *or* HOLD?;

Description

Command	Description	Range	Query Response
HOLD	Puts the sweep trigger into hold mode.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
HOLD		

IDN?

Syntax

IDN?;

Description

Command	Description	Range	Query Response
IDN?	Query only. Outputs the identification string: HEWLETT PACKARD, 87NNEX, xxxxxxxxxxx, X.XX where 87NNEX is the model number of the instrument, xxxxxxxxxxx is the serial number of the instrument, and X.XX is the firmware revision of the instrument.	N/A	See command description

Front Panel Equivalents

GPIB only: no front panel equivalent.

IF**IF****Syntax**

IF<BIHIGH|BILOW|LCEQZE|LCNEZE|LTFAIL|LTPASS>;

Description

These 6 commands branch an executing sequence to a new sequence if the following condition is satisfied.

Command	Description	Range	Query Response
IFBIHIGH	Tests the specified input GPIO bit (see “ PARAIN ”). If high, invokes the sequence which follows.	N/A	N/A
IFBILOW	Tests the specified input GPIO bit (see “ PARAIN ”). If low, invokes the sequence which follows.	N/A	N/A
IFLCEQZE	If loop counter equals zero, then do the sequence that follows.	N/A	N/A
IFLCNEZE	If loop counter does not equal zero, then do the sequence that follows.	N/A	N/A
IFLTFAIL	If limit test fails, then do sequence that follows.	N/A	N/A
IFLTPASS	If limit test passes, then do sequence that follows.	N/A	N/A

EXAMPLE To designate the new sequence, each of the following commands must be followed by the SEQ<num> command (where <num> = 1 through 6). For example:

```
10  OUTPUT 716;"IFLCEQZE;"           If loop counter equals zero, then
20  OUTPUT 716;"SEQ4;"              Execute sequence 4
```

Or the new sequence can be designated as part of the command itself.
For example:

```
10  OUTPUT 716;"IFLCEQZESEQ4;"      If loop counter equals zero, then
                                     execute sequence 4
```


Front Panel Equivalents

Command	Hardkey	Softkey
IFBIHIGH	Seq	IF BIT H
IFBILOW	Seq	IF BIT L
IFLCEQZE	Seq	IF LOOP COUNTER=0
IFLCNEZE	Seq	IF LOOP COUNTER<>0
IFLTFAIL	Seq	IF LIMIT TEST FAIL
IFLTPASS	Seq	IF LIMIT TEST PASS

IFBW

Syntax

IFBW<num>[HZ]; or IFBW?;

Description

Command	Description	Range	Query Response
IFBW	Sets the IF bandwidth.	Choose from 10, 30, 100, 300, 1000, 3000, 3700, 6000	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
IFBW	Avg	IF BW []

IMAG

Syntax

IMAG; *or* IMAG?;

Description

Command	Description	Range	Query Response
IMAG	Selects the imaginary display format.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
IMAG	Format	IMAGINARY

INCRLOOC

Syntax

INCRLOOC;

Description

Command	Description	Range	Query Response
INCRLOOC	Increments the sequencing loop counter by 1.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
INCRLOOC	Seq	INCR LOOP COUNTER

INI



Syntax

INI<D|E>;

Description

Command	Description	Range	Query Response
INID	Initializes the internal disk. All previous information on the disk will be destroyed.	N/A	N/A
INIE	Initializes the external disk. All previous information on the disk will be destroyed. Requires pass control when using the GPIB port.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
INID		FORMAT INT DISK
INIE		FORMAT EXT DISK

INPU

Syntax

INPU CALC<num><array>;
 INPU<CALC|DATA|FORM><array>;
 INPU LEAS<learnstring>; or INPU LEAS?;
 INPU PMCAL<1|2><array>;
 INPU RAW<1|2|3|4><array>;

Description

All of these commands (with a few noted exceptions) input an array and require that you set the format for data transfers with the FORM command. All of these commands have an associated OUTPut command that is used to transfer data from the analyzer. See “OUTP,” later in this chapter.

Command	Description	Range	Query Response
INPU CALC	Error coefficient array ¹ <num>.	two-digit integers 01–12	N/A
INPU CALK ²	Inputs a cal kit array in FORM1 only. Can be read out with the OUTCALK command. After the transfer, the data should be saved into the user cal kit area with the SAVEUSEK command.	N/A	N/A
INPU DATA	Inputs an error corrected data array, using the current setting of the FORM command.	N/A	N/A
INPU FORM	Inputs a formatted data array, using the current setting of the FORM command.	N/A	N/A
INPU LEAS ²	Inputs a learn string in FORM1 only. Can be read out with the OUTPLEAS command, or with INPU LEAS?.	N/A	<data><L _F >
INPU PMCAL1 ²	Inputs power meter calibration arrays for channel 1 into the analyzer in FORM4 only. Values should be entered as 100 × power meter reading in dB.	N/A	N/A
INPU PMCAL2 ²	Inputs power meter calibration arrays for channel 2 into the analyzer in FORM4 only. Values should be entered as 100 × power meter reading in dB.	N/A	N/A
INPU RAW1	Inputs raw data array 1 (S ₁₁ data). After the data is received, the analyzer stops sweeping, error-corrects the data, then formats and displays the data.	N/A	N/A
INPU RAW2	Inputs raw data array 2 (S ₂₁ data). After the data is received, the analyzer stops sweeping, error-corrects the data, then formats and displays the data.	N/A	N/A

Command	Description	Range	Query Response
INPURAW3	Inputs raw data array 3 (S_{12} data). After the data is received, the analyzer stops sweeping, error-corrects the data, then formats and displays the data.	N/A	N/A
INPURAW4	Inputs raw data array 4 (S_{22} data). After the data is received, the analyzer stops sweeping, error-corrects the data, then formats and displays the data.	N/A	N/A

1. These commands input an individual error coefficient array. Before sending an array, issue a CALIXXXX; command, where XXXX specifies the calibration type. (See “CALI” earlier in this book.) Then input the array or arrays. Lastly store the data with the SAVC command. The instrument goes into hold, displaying uncorrected data. Complete the process by triggering a sweep, with the CONT command (for continuous sweep) or the SING command (for a single sweep). See Table 1-4 for the contents of the different arrays.
2. Does not require a preceding “FORM” command.

Table 1-4 Error Coefficient Arrays

Array	Response	Response and Isolation	1-port	Enhanced Response	2-port ¹	TRL/LRM
01	E_R or E_T	$E_X (E_D)^2$	E_D	E_D	E_{DF}	E_{DF}
02		$E_T (E_R)$	E_S	E_S	E_{SF}	E_{SF}
03			E_R	E_R	E_{RF}	E_{RF}
04				E_X	E_{XF}	E_{XF}
05				E_L^3	E_{LF}	E_{LF}
06				E_T	E_{TF}	E_{TF}
07					E_{DR}	E_{DR}
08					E_{SR}	E_{SR}
09					E_{RR}	E_{RR}
10					E_{XR}	E_{XR}
11					E_{LR}	E_{LR}
12					E_{TR}	E_{TR}

1. One path, 2-port cal duplicates arrays 1 to 6 in arrays 7 to 12.
2. Response and isolation corrects for crosstalk and transmission tracking in transmission measurements, and for directivity and reflection tracking in reflection measurements.
3. This term is used to generate the calibration coefficients, but is not used during measurement error correction.

Meaning of first subscript:

D: directivity
S: source match
R: reflection tracking
X: crosstalk or isolation
L: load match
T: transmission tracking

Meaning of second subscript:

F: forward
R: reverse

Front Panel Equivalents

GPIB only: no front panel equivalent.

INSM

Syntax

INSM<EXSA|EXSM|NETA|TUNR>; or INSM<EXSA|EXSM|NETA|TUNR>;


Description

These commands select the instrument mode.

Command	Description	Range	Query Response
INSMEXSA ¹	External source, auto. OPC-compatible.	N/A	<0 1><L _F >
INSMEXSM ¹	External source, manual. OPC-compatible.	N/A	<0 1><L _F >
INSMNETA	Standard network analyzer. OPC-compatible.	N/A	<0 1><L _F >
INSMTUNR	Tuned receiver. OPC-compatible.	N/A	<0 1><L _F >

1. This command only applies to 8753ET/ES analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
INSMEXSA		EXT SOURCE AUTO
INSMEXSM		EXT SOURCE MANUAL
INSMNETA		NETWORK ANALYZER
INSMTUNR		TUNED RECEIVER

INT

INT**Syntax**


INT<D|M>;

Description

These commands select the active storage device.

Command	Description	Range	Query Response
INTD	Selects the internal disk as the active storage device.	N/A	N/A
INTM	Selects the internal memory as the active storage device.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
INTD		INTERNAL DISK
INTM		INTERNAL MEMORY

INTE


Syntax

INTE<num>; *or* INTE?;

Description

Command	Description	Range	Query Response
INTE	Sets the display intensity, 50 to 100 percent.	integers 50–100	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
INTE		INTENSITY

ISO

Syntax

ISO<D|L|OP>;

Description

Command	Description	Range	Query Response
ISOD	Done with isolation subsequence in a 2-port or enhance response calibration. OPC-compatible.	N/A	N/A
ISOL	Begins the isolation subsequence step in a 2-port calibration.	N/A	N/A
ISOOP	Selects isolation for one path, two port calibration.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
ISOD		ISOLATION DONE
ISOL		ISOLATION
ISOOP		ISOLATION

KEY

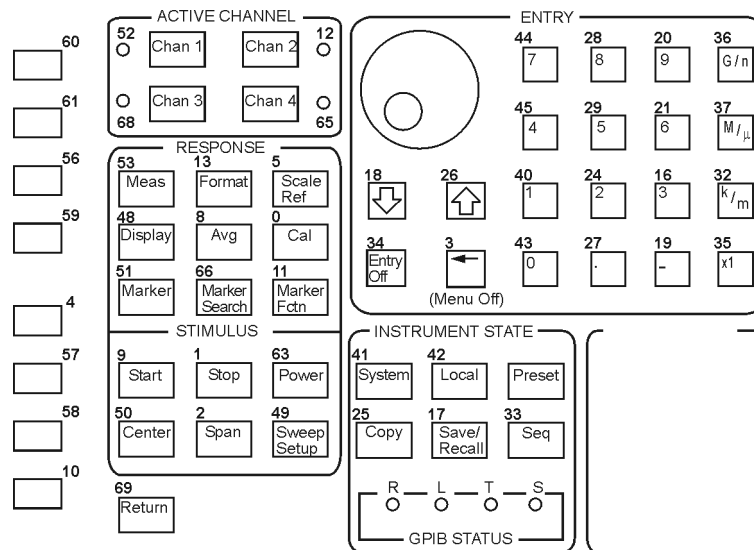
Syntax

KEY<num>; or KEY?;

Description

Command	Description	Range	Query Response
KEY	Emulates pressing a front panel key. It does not matter if the front-panel is in remote mode. See Figure 1-1 for key codes.	integers 1–69	<num>< ^L _F >

Figure 1-1 Key Codes



ca51e

Front Panel Equivalents

GPIB only: no front panel equivalent.

KITD

Syntax

KITD;

Description

Command	Description	Range	Query Response
KITD	Calibration kit done. This is the last step in modifying a cal kit.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
KITD		KIT DONE (MODIFIED)

KOR?

Syntax

KOR?;

Description

Command	Description	Range	Query Response
KOR?	Queries and outputs the last key code ¹ or front panel knob count: • If the reply is positive, it is a key code. • If it is negative, then set bit 15 equal to bit 14, and the resulting two-byte integer is the front panel knob count. It can be either positive or negative. There are about 120 counts per turn.	N/A	<num>< ^L _F >

1. See [Figure 1-1 on page 1-113](#) for front panel key codes.

Front Panel Equivalents

GPIB only: no front panel equivalent.

LAB

Syntax

LAB<K|S><\$>;

Description

These commands enter a string <\$> as either a cal kit label, or a cal standard label.

Command	Description	Range for<\$>	Query Response
LABK	Enters a cal kit label during a cal kit modification.	≤ 10 characters	N/A
LABS	Enters a cal standard's label during standard definition.	≤ 10 characters	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LABK		LABEL KIT
LABS		LABEL STD

LBE

LBE**Syntax**

LBE<FWD|FWD|RESI|RESP|REVM|REVT><\$>;
 LBE<S11A|S11B|S11C|S22A|S22B|S22C><\$>;
 LBE<TRLL|TRLT|TRLR|TLFM|TLFT|TLRM|TLRT|TRFM|TRRM|TTFM|TTFT|TTRM|TTRT><\$>;

Description

These commands enter a string (<\$>) as the label for a standard class during a cal kit modification. The string length must not exceed 10 characters.

Command	Description	Range for<\$>	Query Response
LABEFWDM	Forward match	≤ 10 characters	N/A
LABEFWDT	Forward transmission	≤ 10 characters	N/A
LABERESI	Response, response and isolation	≤ 10 characters	N/A
LABERESP	Response	≤ 10 characters	N/A
LABEREVM	Reverse match	≤ 10 characters	N/A
LABEREVT	Reverse transmission	≤ 10 characters	N/A
LABES11A	S11A (opens)	≤ 10 characters	N/A
LABES11B	S11B (shorts)	≤ 10 characters	N/A
LABES11C	S11C (loads)	≤ 10 characters	N/A
LABES22A	S22A (opens)	≤ 10 characters	N/A
LABES22B ¹	S22B (shorts)	≤ 10 characters	N/A
LABES22C	S22C (loads)	≤ 10 characters	N/A
LABETRLL	TRL line or match	≤ 10 characters	N/A
LABETRLT	TRL thru	≤ 10 characters	N/A
LABETRLR	TRL reflect	≤ 10 characters	N/A
LABETLFM	TRL, Line, Forward, Match	≤ 10 characters	N/A
LABETLFT	TRL, Line, Forward, Trans	≤ 10 characters	N/A
LABETLRM	TRL, Line, Reverse, Match	≤ 10 characters	N/A
LABETLRT	TRL, Line, Reverse, Trans	≤ 10 characters	N/A
LABETRFM	TRL, Reflect, Forward, Match	≤ 10 characters	N/A
LABETRRM	TRL, Reflect, Reverse, Match	≤ 10 characters	N/A
LABETTFM	TRL, Thru, Forward, Match	≤ 10 characters	N/A

Command	Description	Range for<\$>	Query Response
LABETTFT	TRL, Thru, Forward, Trans	≤ 10 characters	N/A
LABETTRM	TRL, Thru, Reverse, Match	≤ 10 characters	N/A
LABETTRT	TRL, Thru, Reverse, Trans	≤ 10 characters	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LABEFWDM		FWD MATCH
LABEFWDT		FWD TRANS
LABERESI		RESPONSE & ISOL'N
LABERESP		RESPONSE
LABEREVM		REV MATCH
LABEREVT		REV TRANS
LABES11A		S11A
LABES11B		S11B
LABES11C		S11C
LABES22A		S22A
LABES22B		S22B
LABES22C		S22C
LABETRLL		S11C
LABETRLT		FWD TRANS
LABETRLR		S11A
LABETLFM		S11B
LABETLFT		FWD TRANS
LABETLRM		S22B
LABETLRT		S22C
LABETRFM		S11A
LABETRRM		S22A
LABETTFM		FWD MATCH
LABETTFT		FWD TRANS
LABETTRM		REV MATCH
LABETTRT		REV TRANS

LEF

Syntax

LEF<L|U>; *or* LEF<L|U>;

Description

Command	Description	Range	Query Response
LEFL	Selects a plot in the left lower quadrant.	N/A	<0 1>< ^L _F >
LEFU	Selects a plot in the left upper quadrant.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LEFL		LEFT LOWER
LEFU		LEFT UPPER

LIM

Syntax

LIM<D|L|M|S|U><num>[DB|HZ];

Description

These commands edit a limit test segment. The limit table editing is begun with EDITLIML;, and a segment is brought up for editing with SEDI<num>; or added using SADD;. The segment is closed with SDON;, the table is closed with EDITDONE;.

Command	Description	Range	Query Response
LIMD	Sets the limit delta value while editing a limit line segment.	amplitude range ¹	see “Note” below
LIML	Sets the lower limit value.	amplitude range ¹	see “Note” below
LIMM	Sets the middle limit value.	amplitude range ¹	see “Note” below
LIMS	Sets the limit stimulus break point.	stimulus range ²	see “Note” below
LIMU	Sets the upper limit value.	amplitude range ¹	see “Note” below

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units. For linear magnitude: ± 500 units. For SWR: ± 500 units. The scale is always positive, and has minimum values of 0.001 dB, 10e-12 degrees, 10e-15 seconds, and 10 picounits.
2. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.




NOTE

Currently these commands can be queried by sending the command followed by the OUTPACTI command, as in the following example to query the upper limit value:

```
10 OUTPUT 716;"LIMU;OUTPACTI;"
```

Future revisions of firmware may support the standard query form (which currently always returns a zero) for these commands.

Front Panel Equivalents

Command	Hardkey	Softkey
LIMD		DELTA LIMITS
LIML		LOWER LIMIT
LIMM		MIDDLE VALUE
LIMS		STIMULUS VALUE
LIMU		UPPER LIMIT

LIMI

LIMI

Syntax

LIMI<AMPO|STIO><num>[HZ|DB]; or LIMI<AMPO|STIO>;
 LIMI<LINE|TEST><ON|OFF>; or LIMI<LINE|TEST>;
 LIMIMAOF;

Description

These commands are used to define and display limit testing.

Command	Description	Range	Query Response
LIMIAMPO	Enters the limit line amplitude offset.	amplitude range ¹	<num><L _F >
LIMILINE	Turns the display of the limit lines on and off.	N/A	<0 1><L _F >
LIMIMAOF	Marker to limit offset. Centers the limit lines about the current marker position using the limit amplitude offset function.	N/A	N/A
LIMISTIO	Enters the stimulus offset of the limit lines.	stimulus range ²	<num><L _F >
LIMITEST	Turns limit testing on and off.	N/A	<0 1><L _F >

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units. For linear magnitude: ± 500 units. For SWR: ± 500 units. The scale is always positive, and has minimum values of 0.001dB, 10e-12 degrees, 10e-15 seconds, and 10 picounits.
2. For frequency or power sweeps, refer to "Preset State and Memory Allocation," in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
LIMIAMPO	System	AMPLITUDE OFFSET
LIMILINE	System	LIMIT LINE ON OFF
LIMIMAOF	System	MARKER → AMP. OFS.
LIMISTIO	System	STIMULUS OFFSET
LIMITEST	System	LIMIT TEST ON OFF

LIMT

Syntax



LIMT<FL|SL|SP>; or LIMT<FL|SL|SP>;

Description

These commands edit a limit test segment. The limit table editing is begun with EDITLIML;, and a segment is brought up for editing with SEDI N; or added using SADD;. The segment is closed with SDON;, the table is closed with EDITDONE;.

Command	Description	Range	Query Response
LIMTFL	Makes the segment a flat line.	N/A	<0 1>< ^L _F >
LIMTSL	Makes the segment a sloping line.	N/A	<0 1>< ^L _F >
LIMTSP	Makes the segment a single point.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LIMTFL		FLAT LINE
LIMTSL		SLOPING LINE
LIMTSP		SINGLE POINT

LINFREQ

Syntax

LINFREQ; *or* LINFREQ?;

Description

Command	Description	Range	Query Response
LINFREQ	Selects a linear frequency sweep.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LINFREQ	Sweep Setup	LIN FREQ

LINM

Syntax

LINM; *or* LINM?;

Description

Command	Description	Range	Query Response
LINM	Selects the linear magnitude display format.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LINM	Format	LIN MAG

LINT

Syntax

LINT<DATA|MEMO><num>;

Description

Command	Description	Range	Query Response
LINTDATA	Enters the line type for plotting data.	integers 0–10	N/A
LINTMEMO	Enters the line type for plotting memory.	integers 0–10	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LINTDATA		LINE TYPE DATA
LINTMEMO		LINE TYPE MEMORY

LIS

Syntax

LISFREQ; or LISFREQ?;

LIS<IFBWM|PWRM><ON|OFF>; or LIS<IFBWM|PWRM>;

Description

List frequency functions.

Command	Description	Range	Query Response
LISFREQ	Selects the list frequency sweep mode.	N/A	<0 1>< ^L _F >
LISIFBWM	Enables/disables the IFBW setting for a list-frequency table in swept list mode.	N/A	<0 1>< ^L _F >
LISPWRM	Enables/disables the power setting for a list-frequency table in swept list mode.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LISFREQ	Sweep Setup	LIST FREQ
LISIFBWM	Sweep Setup	LIST IF BW ON OFF
LISPWRM	Sweep Setup	LIST POWER ON OFF

LISTTYPE

Syntax

LISTTYPE<LSTP|LSWP>; or LISTTYPE?;



Description

Command	Description	Range	Query Response ¹
LISTTYPELSTP	Selects the stepped list mode for use with a list-frequency table.	N/A	<0 1>< ^L _F >
LISTTYPELSWP	Selects the swept list mode for use with a list-frequency table.	N/A	<0 1>< ^L _F >

1. 0 = stepped list mode

1 = swept list mode

Front Panel Equivalents

Command	Hardkey	Softkey
LISTTYPELSTP		LIST TYPE: STEPPED
LISTTYPELSWP		LIST TYPE: SWEPT

LISV

Syntax

LISV;

Description

Command	Description	Range	Query Response
LISV	Activates the list values function. Requesting a plot (or print) copies only the current page. See also “NEXP,” “PREP,” “PLOT,” “PRINALL,” and “PRINTALL.”	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LISV		

LO

Syntax

LOCONT<ON|OFF>; *or* LOCONT?;

LO<FREQ|FSTAR|FSTOP|POWER|PSTAR|PSTOP><num>[HZ|DB]; *or*

LO<FREQ|FSTAR|FSTOP|POWER|PSTAR|PSTOP>;

LO<FSWE|PSWE>;

Description








These commands setup and control the LO.

Command	Description	Range	Query Response
LOCONT ¹	Turns external LO control on/off.	N/A	<0 1>< ^L _F >
LOFREQ ²	Sets the LO frequency value in the analyzer.	frequency range of instrument	<num>< ^L _F >
LOFSTAR ¹	Sets the LO start frequency.	frequency range of instrument	<num>< ^L _F >
LOFSTOP ¹	Sets the LO stop frequency.	frequency range of instrument	<num>< ^L _F >
LOFSWE ¹	Selects the LO sweep frequency mode.	N/A	N/A
LOPOWER ¹	Sets the LO power level.	frequency range of instrument	<num>< ^L _F >
LOPSTAR ¹	Sets the LO start power level.	frequency range of instrument	<num>< ^L _F >
LOPSTOP ¹	Sets the LO stop power level.	frequency range of instrument	<num>< ^L _F >
LOPSWE ¹	Selects the LO power sweep mode.	N/A	N/A

1. This command only applies to 8753ES/ET analyzers, using an external source that accepts 8350-style source commands. Requires use of pass control.
2. See also “VOFF.”

LO

Front Panel Equivalents

Command	Hardkey	Softkey
LOCONT		LO CONTROL ON OFF
LOFREQ		LO FREQUENCY ¹ FREQUENCY: CW ²
LOFSTAR		FREQUENCY: START
LOFSTOP		FREQUENCY: STOP
LOFSWE		FREQUENCY: SWEEP
LOPOWER		POWER: FIXED
LOPSTAR		POWER: START
LOPSTOP		POWER: STOP
LOPSWE		POWER: SWEEP

1. 8753ET/ES

2. 8720E series

LOA

Syntax

LOA<N|O>;

Description

Command	Description	Range	Query Response
LOAN	Measures the load as <i>not</i> being offset when a standard has been defined as an offset load (see “OFLS”).	N/A	N/A
LOAO	Measures the load as being offset when a standard has been defined as an offset load (see “OFLS”).	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LOAN		LOAD NO OFFSET
LOAO		LOAD OFFSET

LOAD

LOAD

Syntax

LOAD<num>;

Description

Command	Description	Range	Query Response
LOAD	Loads the file from disk using the file name provided by the preceding TITF<num>; command. The actual file loaded depends on the file title in the file position specified by the TITF<num> command. Requires pass control mode when using the GPIB port.	integers 1–5	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LOAD		

LOADSEQ

Syntax

LOADSEQ<num>;

Description

Command	Description	Range	Query Response
LOADSEQ	Loads the file from disk with the name indicated by the previous TITSEQ<num> command. The actual file loaded depends on the file title in the file position specified in the TITSEQ<num> command. Requires pass control mode when using the GPIB port.	integers 1 to 6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LOADSEQ		

LOGFREQ


Syntax

LOGFREQ; or LOGFREQ?;

Description

Command	Description	Range	Query Response
LOGFREQ	Selects a log frequency sweep.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LOGFREQ		

LOGM

Syntax

LOGM; *or* LOGM?;

Description

Command	Description	Range	Query Response
LOGM	Selects the log magnitude display format.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LOGM	Format	LOG MAG

LOOC

Syntax

LOOC<num>;

Description

Command	Description	Range	Query Response
LOOC	Sets the value of the sequencing loop counter.	integers 0–32,760	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
LOOC	Seq	LOOP COUNTER

LOWP

Syntax

LOWP<IMPU|STEP>; or LOWP<IMPU|STEP>;

Description

Command	Description	Range	Query Response
LOWPIMPU	Turns on the low pass impulse transform.	N/A	<0 1>< ^L _F >
LOWPSTEP	Turns on the low pass step transform.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
LOWPIMPU	System	LOW PASS IMPULSE
LOWPSTEP	System	LOW PASS STEP

LRN

Syntax

LRN<data>; or LRN?;

Description

Command	Description	Range	Query Response
LRN?	Same as “ OUTPLEAS ” (output learn string).	N/A	<data>< ^L _F >
LRN	Same as “ INPULEAS ” (input learn string).	learnstring	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

MANTRIG

MANTRIG


Syntax

MANTRIG; *or* MANTRIG?;

Description

Command	Description	Range	Query Response
MANTRIG	Sets the trigger mode to manual trigger on point. OPC-compatible.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
MANTRIG		MANUAL TRG ON POINT

MARK

Syntax

MARK<1|2|3|4|5><num>; or MARK<1|2|3|4|5>;

MARK<BUCK|FAUV|FSTI|FVAL><num>; or MARK<BUCK|FAUV|FSTI|FVAL>;

MARK<CONT|COUP|DISC|MAXI|MINI|OFF|UNCO>; or

MARK<CONT|COUP|DISC|MAXI|MINI|OFF|UNCO>;

MARK<CENT|CW|DELA|MIDD|REF|SPAN|STAR|STIM|STOP|ZERO>;

Description

Command	Description	Range	Query Response
MARK1	Makes marker 1 active and sets its stimulus value.	stimulus range ¹	<num><L _F >
MARK2	Makes marker 2 active and sets its stimulus value.	stimulus range ¹	<num><L _F >
MARK3	Makes marker 3 active and sets its stimulus value.	stimulus range ¹	<num><L _F >
MARK4	Makes marker 4 active and sets its stimulus value.	stimulus range ¹	<num><L _F >
MARK5	Makes marker 5 active and sets its stimulus value.	stimulus range ¹	<num><L _F >
MARKBUCK	Places the active marker on a specific sweep point (bucket). <num> is the bucket number.	0 to (number-of-points – 1) See footnote ² .	<num><L _F >
MARKCENT	Sets the center stimulus value to that of the active marker's stimulus value.	N/A	N/A
MARKCONT	Places the markers continuously on the trace, not on discrete points (interpolates the marker values between discrete points).	N/A	<0 1><L _F >
MARKCOUP	Couples the markers between the channels, as opposed to MARKUNCO.	N/A	<0 1><L _F >
MARKCW	Sets the CW frequency to the active marker's frequency.	N/A	N/A
MARKDELA	Sets electrical length so group delay is zero at the active marker's stimulus.	N/A	N/A
MARKDISC	Places the markers on the discrete measurement points.	N/A	<0 1><L _F >

Command	Description	Range	Query Response
MARKFAUV	Sets the auxiliary value of the fixed marker position. Works in coordination with MARKFVAL and MARKFSTI.	amplitude range ³	<num><L _F >
MARKFSTI	Sets the stimulus position of the fixed marker.	stimulus range ¹	<num><L _F >
MARKFVAL	Sets the value of the fixed marker position.	amplitude range ³	<num><L _F >
MARKMAXI	Same as SEAMAX (search for maximum on current channel's trace).	N/A	<0 1><L _F >
MARKMIDD	Makes the marker amplitude the limit segment middle value during a limit segment edit.	N/A	N/A
MARKMINI	Same as SEAMIN (search for minimum on current channel's trace).	N/A	<0 1><L _F >
MARKOFF	Turns all markers and marker functions off.	N/A	<0 1><L _F >
MARKREF	Sets the reference value to that of the active marker's amplitude.	N/A	N/A
MARKSPAN	Sets the span for the entire trace to that of the span between the active marker and the delta reference marker.	N/A	N/A
MARKSTAR	Sets the start stimulus to that of the active marker's.	N/A	N/A
MARKSTIM	During a limit segment edit, sets the limit stimulus break point to that of the active marker's.	N/A	N/A
MARKSTOP	Sets the stop stimulus to that of the active marker's.	N/A	N/A
MARKUNCO	Uncouples the markers between channels, as opposed to MARKCOUP.	N/A	<0 1><L _F >
MARKZERO	Places the fixed marker at the active marker position and makes it the delta reference.	N/A	N/A

1. For frequency or power sweeps, refer to "Preset State and Memory Allocation," in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.
2. For example, on a 201 point sweep, <num> can range from 0 to 200.
3. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units. For linear magnitude: ± 500 units. For SWR: ± 500 units. The scale is always positive, and has minimum values of 0.001dB, $10e-12$ degrees, $10e-15$ seconds, and 10 picounits.

Front Panel Equivalents

Command	Hardkey	Softkey
MARK _n	Marker	MARKER n
MARKBUCK	GPIB only: no front panel equivalent.	
MARKCENT	Marker Fctn	MARKER → CENTER
MARKCONT	Marker Fctn	MARKERS: CONTINUOUS
MARKCOUP	Marker Fctn	MARKERS: COUPLED
MARKCW	System	MARKER → CW
MARKDELA	Marker Fctn	MARKER → DELAY
MARKDISC	Marker Fctn	MARKERS: DISCRETE
MARKFAUV	Marker	FIXED MKR AUX VALUE
MARKFSTI	Marker	FIXED MKR STIMULUS
MARKFVAL	Marker	FIXED MKR VALUE
MARKMAXI	Marker Search	SEARCH: MAX
MARKMIDD	System	MARKER → MIDDLE
MARKMINI	Marker Search	SEARCH: MIN
MARKOFF	Marker	all OFF
MARKREF	Scale Ref	MARKER → REFERENCE
MARKSPAN	Marker Fctn	MARKER → SPAN
MARKSTAR	Marker Fctn	MARKER → START
MARKSTIM	System	MARKER → STIMULUS
MARKSTOP	Marker Fctn	MARKER → STOP
MARKUNCO	Marker Fctn	MARKERS: UNCOUPLED
MARKZERO	Marker	MKR ZERO

MAXF

Syntax

MAXF<num>[GHZ];

Description

Command	Description	Range	Query Response
MAXF	Sets the maximum valid frequency of a standard being defined during a cal kit modification.	0–1000 GHz	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
MAXF		MAXIMUM FREQUENCY

MEAS

Syntax

MEAS<A|B|R>; or MEAS<A|B|R>;

Description

Command	Description	Range	Query Response
MEASA	Measures and displays input A on the active channel.	N/A	<0 1>< ^L _F >
MEASB	Measures and displays input B on the active channel.	N/A	<0 1>< ^L _F >
MEASR	Measures and displays input R on the active channel.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
MEASA		
MEASB		
MEASR		

MEASTAT

MEASTAT


Syntax

MEASTAT<ON|OFF>; *or* MEASTAT?;

Description

Command	Description	Range	Query Response
MEASTAT	Turns trace statistics on and off.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
MEASTAT		MEASURE: STATS

MENU

Syntax

MENU<ON|OFF|AVG|CAL|COPY|DISP|FORM|MARK|MEAS|MRKF|POWE|RECA|SAVE|SCAL|SEQU|SRCH|STIM|SWEET|SYST>;

Description

Command	Description	Range	Query Response
MENUON	Turns the softkey menu on.	N/A	N/A
MENUOFF	Blanks the softkey menu. Use with caution, as this may give unusual results when setting up an instrument state. Recommend setting up states using MENUON (default) and, when setup is complete, using MENUOFF.	N/A	N/A
MENUAVG	Brings up the menu associated with the Avg front panel key.	N/A	N/A
MENUCAL	Brings up the menu associated with the Cal front panel key.	N/A	N/A
MENUCOPY	Brings up the menu associated with the Copy front panel key.	N/A	N/A
MENUDISP	Brings up the menu associated with the Display front panel key.	N/A	N/A
MENUFORM	Brings up the menu associated with the Format front panel key.	N/A	N/A
MENUMARK	Brings up the menu associated with the Marker front panel key.	N/A	N/A
MENUMEAS	Brings up the menu associated with the Meas front panel key.	N/A	N/A
MENUMRKF	Brings up the menu associated with the Marker Fctn front panel key.	N/A	N/A
MENUSRCH	Brings up the menu associated with the Marker Search front panel key.	N/A	N/A
MENUPOWE	Brings up the menu associated with the Power front panel key.	N/A	N/A
MENURECA	Brings up the menu associated with the Save/Recall front panel key	N/A	N/A

MINF

Command	Description	Range	Query Response
MENUSAVE	Brings up the menu associated with the Save/Recall front panel key	N/A	N/A
MENUSCAL	Brings up the menu associated with the Scale Ref front panel key.	N/A	N/A
MENUSEQU	Brings up the menu associated with the Seq front panel key.	N/A	N/A
MENUSTIM	Brings up the menu associated with the Sweep Setup front panel key.	N/A	N/A
MENUSWEE	Brings up the menu associated with the Sweep Setup front panel key.	N/A	N/A
MENUSYST	Brings up the menu associated with the System front panel key.	N/A	N/A

Front Panel Equivalents

Press the associated hardkey listed above.

MINF**Syntax**

MINF<num>[GHZ];

Description

Command	Description	Range	Query Response
MINF	Sets the minimum valid frequency of a standard being defined during a cal kit modification.	0–1000 GHz	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
MINF	Cal	MINIMUM FREQUENCY

MINMAX

Syntax

MINMAX<ON|OFF>; or MINMAX?;

Description

Command	Description	Range	Query Response
MINMAX	Enables/disables min/max recording per segment. Min and max values are recorded per limit segment. Limit testing need not be active.	N/A	<0 1>< ^L _F >

For more information refer to [“Limit Line and Data Point Special Functions” on page 7-126.](#)

Front Panel Equivalents

GPIO only: no front panel equivalent.

MINU

Syntax

MINU; or MINU?;

Description

Command	Description	Range	Query Response
MINU	Data minus memory (linear subtraction). See also “DISPDMM.”	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
MINU	Display	DATA-MEM

MODI1

Syntax

MODI1;

Description

Command	Description	Range	Query Response
MODI1	Begins the modify cal kit sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
MODI1		MODIFY []

MODS

Syntax

MODS;

NOTE This command only applies to ES model analyzers.

Description

Command	Description	Range	Query Response
MODS	Computes new cal set using adapter removal.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
MODS		REMOVE ADAPTER

NEWSEQ

Syntax

NEWSEQ<num>;

Description

Command	Description	Range	Query Response
NEWSEQ	Begins a new sequence, or modifies an existing sequence.	integers 1–6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
NEWSEQ		NEW SEQ / MODIFY SEQ

NEXP

Syntax

NEXP;

Description

Command	Description	Range	Query Response
NEXP	Displays the next page of the operating parameters list. (Use OPEP to display the operating parameters list.)	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
NEXP		NEXT PAGE

NOOP

Syntax

NOOP;

Description

Command	Description	Range	Query Response
NOOP	Creates a cycle that has no operation. OPC-compatible.	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

NUMG

Syntax

NUMG<num>;

Description

Command	Description	Range	Query Response
NUMG	Activates the indicated number of groups of sweeps. A group is whatever is needed to update the current parameter once. This function restarts averaging if it is enabled. OPC-compatible.	integers 1–999	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
NUMG	Sweep Setup	NUMBER of GROUPS

NUMR

Syntax

NUMR<num>; *or* NUMR?;

Description

Command	Description	Range	Query Response
NUMR	Sets the number of power meter readings per point used during a power meter calibration.	integers 1–100	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
NUMR		NUMBER of READINGS

OFL

OFL**Syntax**

OFL<D|S>;

Description

Command	Description	Range	Query Response
OFLD	Offset loads done.	N/A	N/A
OFLS	Selects the calibration standard load as being an offset load (as opposed to a sliding or fixed load) during a cal kit modification.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
OFLD		OFFSET LOAD DONE
OFLS		LOAD OFFSET

OFS

Syntax

OFS<D|L|Z><num>;

Description

These commands specify the offset value for the indicated parameter for a standard being defined during a cal kit modification.

Command	Description	Range	Query Response
OFSD	Delay offset.	± 1 second	N/A
OFSL	Loss offset.	0–1000 T Ω /s	N/A
OFSZ	Impedance offset.	0.1–500 Ω	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
OFSD	Cal	OFFSET DELAY
OFSL	Cal	OFFSET LOSS
OFSZ	Cal	OFFSET Z0

OMII

OMII

Syntax

OMII;

Description

Command	Description	Range	Query Response
OMII	Omits the isolation step of a calibration sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
OMII		OMIT ISOLATION

OPC

Syntax

OPC; *or* OPC?;

Description

Command	Description	Range	Query Response ¹
OPC	Operation complete. Reports the completion of the next command received by setting bit 0 in the event-status register, or by replying to an interrogation if OPC? is issued.	N/A	<0 1><L _F >

1. 0 = next command not yet completed
1 = next command completed

Front Panel Equivalents

GPIB only: no front panel equivalent.

OPEP

Syntax

OPEP;

Description

Command	Description	Range	Query Response
OPEP	Presents a list of key operating parameters. Requesting a plot (or print) copies only the current page. See also “NEXP,” “PREP,” “PLOT,” “PRINALL,” and “PRINTALL.”	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
OPEP		OP PARAMS

OUTP

NOTE Because this chapter is an “Alphabetical Command Reference,” the output commands have been listed alphabetically, rather than by function, in both the “Syntax” section and the “Description” section. Therefore, commands grouped together in the “Syntax” section are grouped alphabetically and/or due to common syntax form, not necessarily due to common functionality.

Syntax

OUTP<ACTI | AMAX | AMIN | APER>;
OUTP<CALC | ICAL><num>;
OUTP<CALK | CHAN | DATA | DATF | DATP | DATR | ERRO | FAIP | FORF | FORM>;
OUTPFARPLPT;
OUTP<IDEN | KEY | LEAS>;
OUTP<IPMCL | PMCAL><num>;
OUTP<MARK | MEMO | MEMF | MSTA | MWID | MWIL | OPTS | PLOT>;
OUTPLIM<num>;
OUTPLIM<F | L | M>;
OUTP<PRE | RAF | RAW><num>;
OUTP<PRIN | PRNALL>;
OUTP<RFFR | SEGAF | SEGAM | SEGF | SEGM>;
OUTPRPLBNDALL;
OUTPRPLBNDPF;
OUTPRPLBNDVAL;
OUTPSEQ<num>;
OUTP<SERN | STAT | TITL>;

Description

NOTE Most commands that output an array require that you set the format for data transfers with the **FORM** command.

Many of these commands have an associated **INPUT** command that is used to transfer data to the analyzer. See “[Symbol Conventions](#)” on page 1-2 for a list of input commands.

Command	Description	Range	Response
OUTPACTI	Outputs the value of the active function, or the last active function if the active entry area is off. The value is returned in ASCII format.	N/A	<\$>< ^L _F >
OUTPAMAX ¹	Outputs the max values for all limit line segments. This is an ASCII transfer (FORM4).	N/A	<array>< ^L _F >
OUTPAMIN ¹	Outputs the min values for all limit line segments. This is an ASCII transfer (FORM4).	N/A	<array>< ^L _F >
OUTPAPER	Outputs the smoothing aperture in stimulus units, rather than as a percentage.	N/A	<num>< ^L _F >
OUTPCALC	Outputs the selected error coefficient array for the active cal on the active channel. ²	two-digit integers 01–12	<array>< ^L _F >
OUTPCALK	Outputs the currently active calibration kit, as a string of less than 1000 bytes. The data is in FORM1.	N/A	<\$>< ^L _F >
OUTPFARPLPT	Outputs the onscreen failed ripple point information in the following comma-separated value format: the number of failed points followed by pairs of numbers representing the first failed frequency, first failure value, second failed frequency, second failure value, and so on.	N/A	<num,array>< ^L _F >
OUTPCHAN	Outputs the active channel number: 1, 2, 3, or 4.	N/A	<num>< ^L _F >
OUTPDATA	Outputs the error-corrected data from the active channel in real/imaginary pairs. See Figure 5-1 on page 5-3 .	N/A	<array>< ^L _F >
OUTPDATF	Fast data transfer command for OUTPDATA. ³	N/A	<array>< ^L _F >
OUTPDATP	Outputs the trace data indexed by point (see “SELPT”).	N/A	<num,num>< ^L _F >
OUTPDATR	Outputs the trace data for a range of points (see “SELMINPT,” “SELMAXPT”). This is an ASCII (FORM4) transfer.	N/A	<array>< ^L _F >
OUTPERRO	Outputs the oldest error message in the error queue. Sends the error number first, and then the error message itself, as an ASCII (FORM4) string no longer than 50 characters.	N/A	<num,\$>< ^L _F >

Command	Description	Range	Response
OUTPFAIP	This command is similar to OUTPLIMF except that it reports the number of failures first, followed by the stimulus and trace values for each failed point in the test. ASCII format. ¹	N/A	<array>< ^L _F >
OUTPFORM	Fast data transfer command for OUTPFORM. Only the first number of the OUTPFORM data pair is transferred, unless the current format is polar or Smith chart; in those cases, both numbers (real and imaginary) are transferred. ³ See also Table 1-6 on page 1-161 .	N/A	<array>< ^L _F >
OUTPFORM	Outputs the formatted display data array from the active channel, in current display units. See Table 1-6 on page 1-161 .	N/A	<array>< ^L _F >
OUTPICAL	Outputs the selected interpolated error coefficient array for the active cal on the active channel. ²	two-digit integers 01–12	<array>< ^L _F >
OUTPIDEN	Outputs the identification string for the analyzer in the form: HEWLETT PACKARD, 87NNEX, xxxxxxxxxx, X.XX where 87NNEX is the model number of the instrument, xxxxxxxxxx is the serial number of the instrument, and X.XX is the firmware revision of the instrument. (Same as the “IDN?” command.)	N/A	<\$>< ^L _F >
OUTPIPMCL	Outputs the interpolated power meter calibration array for channel 1 or channel 2. Values are returned as 100 times the interpolated power meter reading in dB. This is an ASCII transfer (FORM4).	integers 1 or 2	<array>< ^L _F >
OUTPKEY	Outputs the key code of the last key pressed in ASCII format. An invalid key is reported with a 63, a knob turn with a –1. See Figure 1-1 on page 1-113 for the front-panel key codes.	N/A	<num>< ^L _F >
OUTPLEAS	Outputs the learn string, which contains the entire front panel state, the limit table, and the list frequency table. It is always in binary format not intended for decoding.	N/A	<learnstring>< ^L _F >
OUTPLIM	Outputs the status of the limit test for the channel selected with <num>. ^{1,4}	integers 1–4	<0 1 –1>< ^L _F >
OUTPLIMF	Outputs the limit test results for each failed point, followed by the number of failed points. This is an ASCII transfer. ^{1,5}	N/A	<array>< ^L _F >

Command	Description	Range	Response
OUTPLIML	Outputs the limit test results for each point in the sweep. This is an ASCII transfer. ^{1,4,5}	N/A	<array><L _F >
OUTPLIMM	Outputs the limit test results at the active marker. ^{1,4,5}	N/A	<num,num,num,num> <L _F >
OUTPMARK	Outputs the active marker values. The first two numbers are the marker response values, and the last is the stimulus value. See Table 1-6 on page 1-161 for the meaning of the response values as a function of display format.	N/A	<num,num,num><L _F >
OUTPMEMF	Fast data transfer command for OUTPMEMO. ³	N/A	<array><L _F >
OUTPMEMO	Outputs the memory trace from the active channel. The data is in real/imaginary pairs, and can be treated the same as data read with the OUTPDATA command. See Figure 5-1 on page 5-3 .	N/A	<array><L _F >
OUTPMSTA	Outputs the marker statistics in ASCII format: mean, standard deviation, and peak-to-peak variation in that order. If statistics is not on, it is turned on to generate current values and turned off again. See also “MEASTAT.”	N/A	<num,num,num><L _F >
OUTPMWID	Outputs the marker bandwidths search results in ASCII format: bandwidth, center, and Q in that order. If widths is not on, it is turned on to generate current values and then turned off again.	N/A	<num,num,num><L _F >
OUTPMWIL	Outputs the marker bandwidths search results in ASCII format: bandwidth, center, Q, and loss in that order. If widths is not on, it is turned on to generate current values and turned off again.	N/A	<num,num,num,num> <L _F >
OUTPOPTS	Outputs an ASCII string of the options installed in the analyzer.	N/A	<\$><L _F >
OUTPPLOT	Outputs the HP-GL plot string in ASCII format to the GPIB port. Can be directed to a plotter, or read into the computer.	N/A	<\$><L _F >
OUTPPMCAL	Outputs the power meter calibration array for channel 1 or channel 2. A default array is used if a power meter calibration sweep, TAKCS, has not been performed. Values are returned as 100 times the power meter reading in dB. This is an ASCII transfer (FORM4).	integers 1 or 2	<array><L _F >

OUTP

Command	Description	Range	Response
OUTPPRE	Outputs pre-raw data array <num>. Pre-raw data is raw data but without sampler correction or attenuator offsets applied. These offsets are not necessary for data that will be fully error corrected. Use in conjunction with Take4 mode only. ⁶	integers 1–4: 1=S ₁₁ data 2=S ₂₁ data 3=S ₁₂ data 4=S ₂₂ data	<array><L _F >
OUTPPRIN	Outputs a PCL raster dump of the display, intended for a graphics printer.	N/A	<\$><L _F >
OUTPPRNALL	Outputs all of the list values or the current page of operating parameters in ASCII format. Activate the desired function by preceding this command with either the LISV or the OPEP command, respectively. ⁷	N/A	Rows of data separated by a <L _F >. Ends with <L _F ><L _F >.
OUTPRAF	Fast data transfer of the selected raw data array. ^{3,6} See Figure 5-1 on page 5-3 .	integers 1–4: 1=S ₁₁ data 2=S ₂₁ data 3=S ₁₂ data 4=S ₂₂ data	<array><L _F >
OUTPRAW	Outputs the selected raw data array. ⁶ See Figure 5-1 on page 5-3 .	integers 1–4: 1=S ₁₁ data 2=S ₂₁ data 3=S ₁₂ data 4=S ₂₂ data	<array><L _F >
OUTPRFFR	Outputs the external source RF frequency. The instrument must be in external source mode, using either INSMEXSA or INSMEXSM. ⁸	N/A	<num><L _F >
OUTPRPLBNDALL	Outputs the measured ripple values for all active frequency bands in the following comma-separated value format: the number of bands followed by pairs of numbers representing the first band number (1), ripple value of first band, second band number (2), ripple value of second band, and so on.	N/A	<num,array><L _F >
OUTPRPLBNDPF	Outputs the pass/fail status for selected frequency band (see “SELBND”) as “1” (band passes) or as “0” (band fails).	N/A	<0 1><L _F >
OUTPRPLBNDVAL	Outputs the ripple value for selected frequency band (see “SELBND”).	N/A	<num><L _F >
OUTPSEGAFF	Outputs the segment number and its limit test status for all active segments. This is an ASCII transfer. ^{1,4}	N/A	<array><L _F >

Command	Description	Range	Response
OUTPSEGAM	Outputs the limit test min/max for all segments. Outputs the segment number, max stimulus, max value, min stimulus, min value for all active segments. This is an ASCII transfer. ^{1,4}	N/A	<array>< ^L _F >
OUTPSEGF	Outputs the limit test status for a specified segment. See also “SELSEG.” ^{1,4}	N/A	<0 1 -1>< ^L _F >
OUTPSEGM	Outputs limit test min/max for a specified segment. See also “SELSEG.” ¹	N/A	<num,num>< ^L _F >
OUTPSEQ	Outputs the specified sequence listing to the GPIB port.	integers 1–6	<\$>< ^L _F >
OUTPSERN	Outputs a string that contains the serial number of the analyzer.	N/A	<\$>< ^L _F >
OUTPSTAT	Returns the status byte as an ASCII integer (0–255) that can be interpreted as the 8-bit status byte. Refer to “The Status Byte” on page 6-6 for more information about the status byte. This command is the same as “STB?”	N/A	<num>< ^L _F >
OUTPTITL	Outputs the display title in ASCII format.	N/A	<\$>< ^L _F >

1. Refer to “Limit Line and Data Point Special Functions” on page 7-126.
2. See Table 1-5 for the contents of the different arrays. Each array is output in the currently set form determined by the FORM command. The data is in real/imaginary pairs, with the same number of pairs as points in the sweep.
3. This is one of four fast-data-transfer commands. These commands circumvent the internal “byte handler” routine and output trace dumps as block data. In other words, the analyzer outputs the entire array without allowing any process swapping to occur. FORM4 (ASCII) data transfer times are not affected by these routines. However, there are speed improvements with binary data formats.
4. Values returned for limit test status are: 0 (fail), 1 (pass), or -1 (no limit).
5. This command outputs the limit test results. The results consist of four fields. First is the stimulus value for the point. Second is an integer indicating test status. Third is the upper limit at that point. Fourth is the lower limit at that point. If there are no limits at that point, the third and fourth fields are zero.
6. If there is *not* a currently active 2-port cal (full 2-port or TRL), this command will only output data for whichever measurement is currently selected on the active channel, regardless of which number (<1 | 2 | 3 | 4>) is appended to the command.
7. The I/O needs to be set to terminate upon two consecutive <^L_F>s when using this command.
8. This command only applies to 8753ET/ES analyzers.

Front Panel Equivalents

GPIB only: no front panel equivalent.

OUTP Reference Tables

Table 1-5 Error Coefficient Arrays

Array	Response	Response and Isolation	1-port	Enhanced Response	2-port ¹	TRL/LRM
01	E_R or E_T	$E_X (E_D)^2$	E_D	E_D	E_{DF}	E_{DF}
02		$E_T (E_R)$	E_S	E_S	E_{SF}	E_{SF}
03			E_R	E_R	E_{RF}	E_{RF}
04				E_X	E_{XF}	E_{XF}
05				E_L^3	E_{LF}	E_{LF}
06				E_T	E_{TF}	E_{TF}
07					E_{DR}	E_{DR}
08					E_{SR}	E_{SR}
09					E_{RR}	E_{RR}
10					E_{XR}	E_{XR}
11					E_{LR}	E_{LR}
12					E_{TR}	E_{TR}

1. One path, 2-port cal duplicates arrays 1 to 6 in arrays 7 to 12.
2. Response and isolation corrects for crosstalk and transmission tracking in transmission measurements, and for directivity and reflection tracking in reflection measurements.
3. This term is used to generate the calibration coefficients, but is not used during measurement error correction.

Meaning of first subscript:

D: directivity
S: source match
R: reflection tracking
X: crosstalk or isolation
L: load match
T: transmission tracking

Meaning of second subscript:

F: forward
R: reverse

Table 1-6 Units as a Function of Display Format

Display Format	Marker Mode	OUTPMARK		OUTPFORM		MARKER READOUT*	
		value 1	value 2	value 1	value 2	value	aux value
LOG MAG		dB	†	dB	†	dB	†
PHASE		degrees	†	degrees	†	degrees	†
DELAY		seconds	†	seconds	†	seconds	†
SMITH CHART	LIN MKR	lin mag	degrees	real	imag	lin mag	degrees
	LOG MKR	dB	degrees	real	imag	dB	degrees
	Re/Im	real	imag	real	imag	real	imag
	R + jX	real ohms	imag ohms	real	imag	real ohms	imag ohms
	G + jB	real Siemens	imag Siemens	real	imag	real Siemens	imag Siemens
POLAR	LIN MKR	lin mag	degrees	real	imag	lin mag	degrees
	LOG MKR	dB	degrees	real	imag	dB	degrees
	Re/Im	real	imag	real	imag	real	imag
LIN MAG		lin mag	†	lin mag	†	lin mag	†
SWR		SWR	†	SWR	†	SWR	†
REAL		real	†	real	†	real	†
IMAGINARY		imag	†	imag	†	imag	†
*The marker readout values are the marker values displayed in the upper right-hand corner of the display. They also correspond to the value and auxiliary value associated with the fixed marker. †Value 2 is not significant in this format, though it is included in data transfers.							

P

P

Syntax

P<DATA|GRAT|MEM|MKR|SOFT|TEXT><ON|OFF>; or

P<DATA|GRAT|MEM|MKR|SOFT|TEXT>?;

Description

When plotting data you can choose whether or not the following parts are plotted or not.

Command	Description	Range	Query Response
PDATA	Selects whether trace data is plotted.	N/A	<0 1>< ^L _F >
PGRAT	Selects whether the graticule is plotted.	N/A	<0 1>< ^L _F >
PMEM	Selects whether the memory trace is plotted.	N/A	<0 1>< ^L _F >
PMKR	Selects whether markers are plotted.	N/A	<0 1>< ^L _F >
PSOFT	Selects whether softkeys are plotted.	N/A	<0 1>< ^L _F >
PTEXT	Selects whether text is plotted.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PDATA		PLOT DATA ON OFF
PGRAT		PLOT GRAT ON OFF
PMEM		PLOT MEM ON OFF
PMKR		PLOT MKR ON OFF
PSOFT	GPIB only: no front panel equivalent	
PTEXT		PLOT TEXT ON OFF

PARA

Syntax

PARA<IN|OUT><num>; or PARA<IN|OUT>;

Description

Command	Description	Range	Query Response
PARAIN	Specifies the input GPIO bit to be used by IFBIHIGH and IFBILOW tests.	integers 0–4	<num><L _F >
PARAOUT	Programs all GPIO output bits at once.	integers 0–255	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PARAIN		PARALLEL IN BIT NUMBER
PARAOUT		PARALLEL OUT ALL

PARAL

PARAL

Syntax

PARAL<GPIO|CPY>; or PARAL?;

Description

Command	Description	Range	Query Response ¹
PARALGPIO	Selects use of the parallel port for general purpose I/O (GPIO).	N/A	<0 1><L _F >
PARALCPY	Selects use of the parallel port for the copy function.	N/A	<0 1><L _F >

1. 0 = copy
1 = GPIO

Front Panel Equivalents

Command	Hardkey	Softkey
PARALGPIO	Local	PARALLEL GPIO
PARALCPY	Local	PARALLEL COPY

PAUS

Syntax

PAUS;

Description

Command	Description	Range	Query Response
PAUS	Inserts a pause into a sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PAUS		

PCB

Syntax

PCB<num>; or PCB?;

Description

Command	Description	Range	Query Response
PCB	Controller GPIB address. The address where control is returned after a pass control. (Same as ADDRCONT.)	integers 0–30	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PCB		

PCOL

Syntax

PCOL<DATA|MEMO><num><color>;

PCOL<GRAT|REFL|TEXT|WARN><color>;

Description

These commands select the color for printing the indicated display feature where <color> is one of the following: <WHITE|CYAN|MAGENTA|BLUE|YELLOW|GREEN|RED|BLACK>.

Command	Description	Range	Query Response
PCOLDATA	Channel <num> data.	integers 1–4	N/A
PCOLMEMO	Channel <num> memory.	integers 1–4	N/A
PCOLGRAT	Graticule.	N/A	N/A
PCOLREFL	Reference line.	N/A	N/A
PCOLTEXT	Display text.	N/A	N/A
PCOLWARN	Warning text.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PCOLDATA		CH n DATA
PCOLMEMO		CH n MEM
PCOLGRAT		GRATICULE
PCOLREFL		REF LINE
PCOLTEXT		TEXT
PCOLWARN		WARNING

PENN

Syntax

PENN<DATA|GRAT|MARK|MEMO|TEXT><num>;

Description

These commands select the pen number, <num>, for plotting the indicated display feature for the active channel.

Command	Description	Range	Query Response
PENNDATA	Data trace.	integers 0–10	N/A
PENNGRAT	Graticule.	integers 0–10	N/A
PENNMARK	Markers and marker text.	integers 0–10	N/A
PENNMEMO	Memory trace.	integers 0–10	N/A
PENNTXT	Text and user graphics.	integers 0–10	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PENNDATA		PEN NUM DATA
PENNGRAT		PEN NUM GRATICULE
PENNMARK		PEN NUM MARKER
PENNMEMO		PEN NUM MEMORY
PENNTXT		PEN NUM TEXT

PHAO

Syntax

PHAO<num>; or PHAO?;

Description

Command	Description	Range	Query Response
PHAO	Sets the phase offset.	0–360 degrees	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PHAO	Scale Ref	PHASE OFFSET

PHAS

Syntax

PHAS; or PHAS?;

Description

Command	Description	Range	Query Response
PHAS	Selects the phase display format.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PHAS	Format	PHASE

PLOS

Syntax

PLOS<FAST|SLOW>;

Description

Command	Description	Range	Query Response
PLOSSLOW	Selects the slow pen-speed for plotting. (Slow is useful for transparency plotting.)	N/A	N/A
PLOFAST	Selects the fast pen-speed for plotting.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PLOSSLOW		PLOT SPEED SLOW
PLOFAST		PLOT SPEED FAST

PLOT

Syntax

PLOT;

Description

Command	Description	Range	Query Response
PLOT	Initiates a plot. Requires pass control mode when using the GPIB port.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PLOT		PLOT

PLT

Syntax

PLTHNDSHK<XON|DTR>; or PLTHNDSHK<XON|DTR>;

PLTPRT<DISK|HPIB|PARA|SERI>; or PLTPRT<DISK|HPIB|PARA|SERI>;

PLTTRAUTF<ON|OFF>; or PLTTRAUTF?;

PLTTRBAUD<num>; or PLTTRBAUD?;

PLTTRFORF;

PLTTYP<HPGL|PLTR>;

Description

Command	Description	Range	Query Response
PLTHNDSHK	Selects the plotter handshake mode as either Xon-Xoff or DTR-DSR.	N/A	<0 1>< ^L _F > ¹
PLTPRTDISK	Sets the plotter port to disk (either internal disk or external disk).	N/A	<0 1>< ^L _F >
PLTPRTHPIB	Sets the plotter port to GPIB.	N/A	<0 1>< ^L _F >
PLTPRTPARA	Sets the plotter port to parallel.	N/A	<0 1>< ^L _F >
PLTPRTSERI	Sets the plotter port to serial.	N/A	<0 1>< ^L _F >
PLTTRAUTF	Turns the plotter auto feed on and off.	N/A	<0 1>< ^L _F >
PLTTRBAUD	Sets the plotter baud rate.	Choose from: 1200, 2400, 4800, 9600, 19200	<num>< ^L _F >
PLTTRFORF	Sends a form feed to the plotter.	N/A	N/A
PLTTYPHPGL	Selects HP-GL compatible <i>printer</i> as the plotter type.	N/A	N/A
PLTTYPPLTR	Selects <i>plotter</i> as the plotter type.	N/A	N/A

1. A one is returned for DTR-DSR, and a zero is returned for Xon-Xoff.

Front Panel Equivalents

Command	Hardkey	Softkey
PLTHNDSHK	Local	XMIT CNTRL
PLTPRTDISK	Local	PLTR PORT DISK
PLTPRTHPIB	Local	PLTR PORT GPIB
PLTPRTPARA	Local	PLTR PORT PARALLEL
PLTPRTSERI	Local	PLTR PORT SERIAL
PLTTRAUTF	Copy	AUTO-FEED ON OFF
PLTRBAUD	Local	PLOTTER BAUD RATE
PLTRFORF	Copy	PLOTTER FORM FEED
PLTTYHPGL	Local	PLTR TYPE HPGL PRT
PLTTYPPLTR	Local	PLTR TYPE PLOTTER

PMTRTTIT

Syntax

PMTRTTIT;

Description

Command	Description	Range	Query Response
PMTRTTIT	Reads value from power meter or peripheral at the power meter's GPIB address into title string.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PMTRTTIT	Seq	PMTR/GPIB TO TITLE

POIN

POIN**Syntax**

POIN<num>; or POIN?;

Description

Command	Description	Range	Query Response
POIN	Sets the number of points in the sweep, or in a sweep segment.	Choose from: 3, 11, 21, 26, 51, 101, 201, 401, 801, 1601	<num>< ^L _F >

NOTE This command should be followed by a wait equal to 2 sweeps. Example wait code written in BASIC:


OUTPUT 716;"POIN801;"

OUTPUT 716;"SWET?;"

ENTER 716;T

WAIT 2*T

Front Panel Equivalents

Command	Hardkey	Softkey
POIN		NUMBER of POINTS

POL

Syntax

POL<A|MLIN|MLOG|MRI>; or POL<A|MLIN|MLOG|MRI>;

Description

Command	Description	Range	Query Response
POLA	Selects the polar display format.	N/A	<0 1>< ^L _F >
POLMLIN	Selects linear as the marker readout format for polar display.	N/A	<0 1>< ^L _F >
POLMLOG	Selects log as the marker readout format for polar display.	N/A	<0 1>< ^L _F >
POLMRI	Selects real/imaginary as the marker readout format for polar display.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
POLA	Format	POLAR
POLMLIN	Marker Fctn	LIN MKR
POLMLOG	Marker Fctn	LOG MKR
POLMRI	Marker Fctn	Re/Im MKR

PORE

Syntax

PORE<ON|OFF>; *or* PORE?;

Description

Command	Description	Range	Query Response
PORE	Turns port extensions on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PORE		EXTENSIONS ON OFF

PORT

Syntax

PORT<1|2|A|B|R|T><num>[S]; or PORT<1|2|A|B|R|T>?;

Description

These commands set the port extension length for the indicated port or input. Ports 1 and 2 refer to the test set ports.

Command	Description	Range	Query Response
PORT1	Port 1	±10 seconds	<num><L _F >
PORT2	Port 2	±10 seconds	<num><L _F >
PORTA	Input A	±10 seconds	<num><L _F >
PORTB	Input B	±10 seconds	<num><L _F >
PORTR	Reflection Port	±10 seconds	<num><L _F >
PORTT	Transmission Port	±10 seconds	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PORT1		EXTENSION PORT 1
PORT2		EXTENSION PORT 2
PORTA		EXTENSION INPUT A
PORTB		EXTENSION INPUT B
PORTR		EXTENSION REFL PORT
PORTT		EXTENSION TRANS PORT

PORTP

Syntax

PORTP<CPLD|UNCPLD>; or PORTP?;

Description

Command	Description	Range	Query Response ¹
PORTP	Selects either coupled or uncoupled for the port powers of a given channel.	N/A	<0 1><L _F >

1. 0 = uncoupled
1 = coupled

Front Panel Equivalents

Command	Hardkey	Softkey
PORTP		PORT POWER COUPLED / UNCOUPLD

POWE

Syntax



POWE<num>[DB]; or POWE?;

Description

Command	Description	Range	Query Response
POWE	Sets the output power level.	output power range of your analyzer ¹	<num><L _F >

1. The output power range of your analyzer depends upon the model and installed options. Refer to your analyzer's reference guide to determine the power range of your analyzer.

Front Panel Equivalents

Command	Hardkey	Softkey
POWE		N/A
		POWER

POWL

Syntax

POWL<FREQ|LOSS><num>; or POWL<FREQ|LOSS>;

POWLLIST;

Description

Command	Description	Range	Query Response
POWLFREQ	Selects the frequency for which a power loss correction is entered. This must be followed by a POWLLOSS<num>; command, which sets the value.	stimulus range ¹	<num><L _F >
POWLLIST	Begins editing a power loss list for a power meter calibration.	N/A	N/A
POWLLOSS	Sets the loss value for a particular frequency, set by POWLFREQ, in the power loss list.	–9900 to 9900 dB	<num><L _F >

1. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in your analyzer’s reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
POWLFREQ		FREQUENCY
POWLLIST		POWER LOSS
POWLLOSS		LOSS

POWM

Syntax

POWM<ON|OFF>; or POWM?;

Description

Command	Description	Range	Query Response
POWM	Designates whether the 436A (ON) or the 437B/438A (OFF) is to be used as the power meter.	N/A	<0 1>< ^L _F > ¹

1. A one is returned for 436A, and a zero is returned for 437B/438A.

Front Panel Equivalents

Command	Hardkey	Softkey
POWM	Local	POWER MTR: 438 / 436

POWR

POWR

Syntax

POWR<num>;


NOTE No spaces are permitted between “POWR” and the numeric entry.

Description

Command	Description	Range	Query Response
POWR	Sets the source power range. See also “PRAN.”	integers ¹ 00–11	N/A

1. Use two-digit integers 00 through 07 for 8753ET/ES analyzers. Use two-digit integers 00 through 11 for 8720E series analyzers.

Front Panel Equivalents

Command	Hardkey	Softkey
POWR		RANGE n

POWS


Syntax

POWS; *or* POWS?;

Description

Command	Description	Range	Query Response
POWS	Selects power sweep, from the sweep type menu.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
POWS		POWER SWEEP

POWT

Syntax

POWT<ON|OFF>; *or* POWT?;

Description

Command	Description	Range	Query Response
POWT	Sets source power on or off. Works the opposite of the SOUP command. Sending POWTON turns source power off. Sending POWTOFF turns source power on.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
POWT		POWER TRIP ON OFF ¹

1. 8753ES Option 011 analyzers only.

PRAN

PRAN

Syntax


PRAN<num>;

Description

Command	Description	Range	Query Response
PRAN	Sets the source power range. See also “POWER.”	integers ¹ 0–7 integers ² 01–12	N/A

1. Use single-digit integers 0 through 7 for 8753ET/ES analyzers. PRAN0 through PRAN7 are used for ranges 0 through 7.
2. Use two-digit integers 01 through 12 for 8720E series analyzers. PRAN01 through PRAN12 are used for ranges 0 through 11.

Front Panel Equivalents

Command	Hardkey	Softkey
PRAN		RANGE n

PREP

Syntax

PREP;

Description

Command	Description	Range	Query Response
PREP	Displays the previous page of the operating parameters list. (Use OPEP to display the operating parameters list.)	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PREP		PREVIOUS PAGE

PRES


Syntax



PRES;

Description

Command	Description	Range	Query Response
PRES	Presets the analyzer to the factory preset state. OPC-compatible. See also Appendix A , “Preset Conditions.”	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PRES		N/A

NOTE Pressing the  key on the analyzer will either invoke the factory preset state, or a user-selected state (if one has been set up). Sending the PRES command will *always* invoke the factory preset state. This is true even if the analyzer is currently set up to recall a user preset state when the  key is pressed. For more information on user presets, see your analyzer’s user’s guide.

NOTE This command should use OPC? to prevent timing errors with subsequent commands. Example code written in BASIC:

```
10 OUTPUT 716;"OPC?;PRES;"
20 ENTER 716;X
```

PRI

PRI**Syntax**

PRI<C|S>; or PRI<C|S>;

Description

Command	Description	Range	Query Response
PRIC	Selects color print (as opposed to monochrome).	N/A	<0 1>< ^L _F >
PRIS	Selects standard (monochrome) print.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PRIC		PRINT: COLOR
PRIS		PRINT: MONOCHROME

PRIN

Syntax

PRINALL;

PRINSEQ<num>;

Description

Command	Description	Range	Query Response
PRINALL	Copies the display, in raster graphics mode, to a printer. Requires pass control when using the GPIB port. (Use PRINTALL to send ASCII data to the printer.)	N/A	N/A
PRINSEQ	Begins printing the sequence selected.	integers 1–6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PRINALL		
PRINSEQ		

PRINTALL


Syntax

PRINTALL;

Description

Command	Description	Range	Query Response
PRINTALL	Prints all list values or operating and marker parameters in ASCII text mode. Requires pass control mode when using the GPIB port.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PRINTALL		

PRN

Syntax

PRNHNDSHK<XON|DTR>; or PRNHNDSHK<XON|DTR>;
 PRNPRT<HPIB|PARA|SERI>; or PRNPRT<HPIB|PARA|SERI>;
 PRNTRAUTF<ON|OFF>; or PRNTRAUTF;;
 PRNTRBAUD<num>; or PRNTRBAUD;;
 PRNTRFORF;
 PRNTYP<540|DJ|EP|LJ|PJ|TJ>;

Description

Command	Description	Range	Query Response
PRNHNDSHK	Selects the printer handshake mode as either Xon-Xoff or DTR-DSR.	N/A	<0 1>< ^L _F > ¹
PRNPRTHPIB	Sets the printer port to GPIB.	N/A	<0 1>< ^L _F >
PRNPRTPARA	Sets the printer port to parallel.	N/A	<0 1>< ^L _F >
PRNPRTSERI	Sets the printer port to serial.	N/A	<0 1>< ^L _F >
PRNTRAUTF	Turns ON and OFF the printer auto feed.	N/A	<0 1>< ^L _F >
PRNTRBAUD	Sets the printer baud rate.	Choose from: 1200, 2400, 4800, 9600, 19200	<num>< ^L _F >
PRNTRFORF	Sends a form feed to the printer.	N/A	N/A
PRNTYP540	Selects the DeskJet 540 or 850C printer as the printer type.	N/A	N/A
PRNTYPDJ	Selects the DeskJet printer as the printer type.	N/A	N/A
PRNTYPEP	Selects the Epson ESC/P2 printer control language-compatible printer as the printer type.	N/A	N/A
PRNTYPLJ	Selects the LaserJet printer as the printer type.	N/A	N/A
PRNTYPPJ	Selects the PaintJet printer as the printer type.	N/A	N/A
PRNTYPTJ	Selects the ThinkJet printer as the printer type.	N/A	N/A

1. A one is returned for DTR-DSR, and a zero is returned for Xon-Xoff.

PRN

Front Panel Equivalents

Command	Hardkey	Softkey
PRNHNDSHK	Local	XMIT CNTRL
PRNPRTHPIB	Local	PRNTR PORT GPIB
PRNPRTPARA	Local	PRNTR PORT PARALLEL
PRNPRTSERI	Local	PRNTR PORT SERIAL
PRNTRAUTF	Copy	AUTO-FEED ON OFF
PRNTRBAUD	Local	PRINTER BAUD RATE
PRNTRFORF	Copy	PRINTER FORM FEED
PRNTYP540	Local	PRNTR TYPE DJ 540
PRNTYPDJ	Local	PRNTR TYPE DESKJET
PRNTYPEP	Local	PRNTR TYPE EPSON-P2
PRNTYPLJ	Local	PRNTR TYPE LASERJET
PRNTYPPJ	Local	PRNTR TYPE PAINTJET
PRNTYPTJ	Local	PRNTR TYPE THINKJET

PTOS

Syntax

PTOS;

Description

Command	Description	Range	Query Response
PTOS	Pauses the sequence; to be followed by selection one of the 6 sequences (SEQ<num>).	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PTOS		PAUSE TO SELECT

PURG

Syntax

PURG<num>;

Description

Command	Description	Range	Query Response
PURG	Purges the file from disk using the file name provided by the preceding TITF<num>; command. The actual file purged depends on the file title in the file position specified by the TITF<num> command. Requires pass control mode when using the GPIB port.	integers 1–5	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
PURG		PURGE

PWWC

Syntax

PWWC<EACS|OFF|ONES><num>; or PWWC<EACS|OFF|ONES>?;

Description

These commands select the type of power meter calibration desired, and set the drive port cal power.

Command	Description	Range	Query Response
PWWCEACS	Power meter calibration done with each sweep.	−100 to 100 dB	<0 1>< ^L _F >
PWWCOFF	Turns off power meter calibration.	−100 to 100 dB	<0 1>< ^L _F >
PWWCONES	Power meter cal done on one sweep. A calibration sweep should be taken (TAKCS) after selecting a one sweep power meter calibration, to ensure a valid calibration.	−100 to 100 dB	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PWWCEACS		EACH SWEEP
PWWCOFF		PWR MTR CAL OFF
PWWCONES		ONE SWEEP

PWRLOSS

Syntax

PWRLOSS<ON|OFF>; or PWRLOSS?;

Description

Command	Description	Range	Query Response
PWRLOSS	Selects whether or not to use the power loss table for a power meter calibration.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PWRLOSS		PWR LOSS ON OFF

PWRMCAL

Syntax

PWRMCAL<num>[DB]; or PWRMCAL?;

Description

Command	Description	Range	Query Response
PWRMCAL	Displays the power meter cal menu and sets the drive port cal power.	–100 to 100 dB	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
PWRMCAL		PWR MTR CAL

PWRR

Syntax


PWRR<PMAN|PAUTO>; or PWRR?;

Description

Command	Description	Range	Query Response
PWRR	Selects whether the power range is in auto or manual mode.	N/A	<0 1>< ^L _F > ¹

1. 0 = manual mode
1 = auto mode

Front Panel Equivalents

Command	Hardkey	Softkey
PWRR		PWR RANGE AUTO MAN

Q

Syntax

Q<num>; or Q?;

Description

Command	Description	Range	Query Response
Q	Selects a sequence. See also “ SEQ. ”	integers 1–6	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
Q		SEQUENCE x SEQ x

RAI

Syntax

RAI<D|ISOL|RESP>;

Description

Command	Description	Range	Query Response
RAID	Completes the response and isolation cal sequence. OPC-compatible.	N/A	N/A
RAIISOL	Calls the isolation class for the response and isolation calibration.	N/A	N/A
RAIRESP	Calls the response class for the response and isolation calibration.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RAID		DONE RESP ISOL'N CAL
RAIISOL		ISOL'N STD
RAIRESP		RESPONSE

RAWOFFS

Syntax

RAWOFFS<ON|OFF>; or RAWOFFS?;

Description

Command	Description	Range	Query Response
RAWOFFS	Selects whether sampler and attenuator offsets are on or off.	N/A	<0 1>< ^L _F >

By turning raw offsets off (RAWOFFSOFF), a full two-port error correction can be performed without including the effects of the offsets. It also saves substantial time at recalls and during frequency changes (see SM8). Raw offsets follow the channel coupling. RAWOFFS and SAMC are linked in that when one changes state, so does the other. See [“Example 2G: Take4 — Error Correction Processed on an External PC”](#) on page 7-48.

Front Panel Equivalents

Command	Hardkey	Softkey
RAWOFFS	System	RAW OFFSET ON OFF

READ

Syntax

READ<DATE | TIME>;

Description

Command	Description	Range	Query Response
READDATE	Outputs the date in the following string format: DD MMM YYYY.	N/A	N/A
READTIME	Outputs the time in the following string format: HH:MM:SS.	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

REAL


Syntax

REAL; *or* REAL?;

Description

Command	Description	Range	Query Response
REAL	Sets the display format to real.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
REAL		REAL

RECA

Syntax

RECA<num>;

RECAREG<num>;

Description

Command	Description	Range	Query Response
RECA	Recalls the indicated internal register. OPC-compatible.	integers 1–5	N/A
RECAREG	Recalls save/recall registers 01 through 31. RECAREG01 through RECAREG05 are the same as RECA1 through RECA5. OPC-compatible.	two-digit integers 01–31	N/A

NOTE These commands should use OPC? to prevent timing errors with subsequent commands. Example code written in BASIC:

```
10 OUTPUT 716;"OPC?;RECA1;"
20 OUTPUT 716;X
```

Front Panel Equivalents

Command	Hardkey	Softkey
RECA		RECALL
RECAREG		RECALL

RECO


Syntax

RECO;

Description

Command	Description	Range	Query Response
RECO	Recalls previously saved display colors.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RECO		RECALL COLORS

REF

REF**Syntax**

REF<D|L|OP>;

Description

Command	Description	Range	Query Response
REFD	Completes the reflection calibration subsequence of a 2-port calibration. OPC-compatible.	N/A	N/A
REFL	Begins the reflection calibration subsequence of a 2-port calibration.	N/A	N/A
REFOP	Begins the reflection calibration subsequence for one-path, 2-port calibration.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
REFD		STANDARDS DONE
REFL		REFLECTION
REFOP		REFLECTION

REF

Syntax



REF<P|V><num>; or REF<P|V>;

Description

Command	Description	Range	Query Response
REFP	Enters the reference position. 0 is the bottom, 10 is the top of the graticule.	integers 0–10	<num><L _F >
REFV	Enters the reference line value.	amplitude range ¹	<num><L _F >

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units. For linear magnitude: ± 500 units. For SWR: ± 500 units. The scale is always positive, and has minimum values of 0.001dB, 10e–12 degrees, 10e–15 seconds, and 10 picounits.

Front Panel Equivalents

Command	Hardkey	Softkey
REFP		
REFV		

REFT

Syntax

REFT;

Description

Command	Description	Range	Query Response
REFT	Recalls file titles from disk. Requires pass control if using an external disk drive on GPIB.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
REFT	Save/Recall	READ FILE TITLES

REIC

Syntax

REIC<num>[DB];

Description

Command	Description	Range	Query Response
REIC	Sets the power level reference value for a receiver calibration.	amplitude range ¹	N/A

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units. For linear magnitude: ± 500 units. For SWR: ± 500 units. The scale is always positive, and has minimum values of 0.001dB, $10e-12$ degrees, $10e-15$ seconds, and 10 picounits.

Front Panel Equivalents

Command	Hardkey	Softkey
REIC	Cal	RECEIVER CAL

RERCDONE

Syntax

RERCDONE;

NOTE This command applies to ES model analyzers only.

Description

Command	Description	Range	Query Response
RERCDONE	Completes the reverse enhanced response calibration sequence. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RERCDONE		DONE REV ENH RESP

RESC

Syntax

RESC;

Description

Command	Description	Range	Query Response
RESC	Resume a previously started cal sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RESC		RESUME CAL SEQUENCE

RESD

Syntax

RESD;

Description

Command	Description	Range	Query Response
RESD	Restores the measurement display after viewing the operating parameters or list values.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RESD		RESTORE DISPLAY

RESPDONE

Syntax

RESPDONE;

Description

Command	Description	Range	Query Response
RESPDONE	Completes the response calibration sequence. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RESPDONE		DONE:

REST


Syntax

REST;

Description

Command	Description	Range	Query Response
REST	Measurement restart.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
REST		MEASURE RESTART

RETP

Syntax


RETP<ON|OFF>; *or* RETP?;

NOTE This command only applies to 8720E series analyzers.

Description

Command	Description	Range	Query Response
RETP	Turns retrace power on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
RETP		RETRACE PWR

REV

Syntax

REV<I|M|T>;

NOTE These commands only apply to ES models.

Description

These commands are OPC-compatible if there is only one standard in the class. If there is just one standard, that standard is measured automatically. If there is more than one standard in the class, the class command only calls another menu.

Command	Description	Range	Query Response
REVI	Calls the reverse isolation calibration class during a full 2-port calibration.	N/A	N/A
REVM	Calls the reverse match calibration class during a full 2-port calibration.	N/A	N/A
REVT	Calls the reverse transmission calibration class during a full 2-port calibration.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
REVI		REV ISOL'N
REVM		REV MATCH
REVT		REV TRANS

RF

Syntax

RF<GTLO|LTLO>;

Description

These 2 commands are used in frequency offset mode measurements.

Command	Description	Range	Query Response
RFGTLO	Sets RF greater than LO.	N/A	N/A
RFLTLO	Sets RF less than LO.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RFGTLO		RF > LO
RFLTLO		RF < LO

RFLP

Syntax

RFLP; *or* RFLP?;

NOTE This command only applies to ET models.

Description

Command	Description	Range	Query Response
RFLP ¹	Sets the measurement mode to “Reflection.” (See also “S11.”)	N/A	<0 1>< ^L _F >

1. This command can also be used on ES models to set the measurement mode to “Refl:FWD S11.”

Front Panel Equivalents

Command	Hardkey	Softkey
RFLP	Meas	REFLECTION

RIG

Syntax

RIG<L|U>; *or* RIG<L|U>;

Description

Command	Description	Range	Query Response
RIGL	Selects a plot in the lower right quadrant.	N/A	<0 1>< ^L _F >
RIGU	Selects a plot in the upper right quadrant.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
RIGL		RIGHT LOWER
RIGU		RIGHT UPPER

RLIMLINE


Syntax

RLIMLINE<ON|OFF>; *or* RLIMLINE?;

Description

Command	Description	Range	Query Response
RLIMLINE	Turns the lines that represent the ripple test limits on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
RLIMLINE		RIPL LIMIT on OFF

RLIMM

Syntax

RLIMM<num>[DB]; *or* RLIMM?;

Description

Command	Description	Range	Query Response
RLIMM	Sets the value of the maximum allowable ripple limit for current frequency band.	0.01 to 100 dB	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
RLIMM		MAXIMUM RIPPLE

RLIMSTP

Syntax


RLIMSTP<num>[HZ|KHZ|MHZ|GHZ]; *or* RLIMSTP?;

Description

Command	Description	Range	Query Response
RLIMSTP	Sets the stop frequency of the current frequency band.	stimulus range ¹	<num><L _F >

1. Refer to “Preset State and Memory Allocation” in your analyzer's reference guide.

Front Panel Equivalents

Command	Hardkey	Softkey
RLIMSTP		MAXIMUM FREQUENCY

RLIMSTR

Syntax

RLIMSTR<num>[HZ|KHZ|MHZ|GHZ]; *or* RLIMSTR?;

Description

Command	Description	Range	Query Response
RLIMSTR	Sets the start frequency of the current ripple limit.	stimulus range ¹	<num><L _F >

1. Refer to “Preset State and Memory Allocation” in your analyzer’s reference guide.

Front Panel Equivalents

Command	Hardkey	Softkey
RLIMSTR	System	MINIMUM FREQUENCY

RLIMTEST

Syntax

RLIMTEST<ON|OFF>; *or* RLIMTEST?;

Description

Command	Description	Range	Query Response
RLIMTEST	Turns the ripple limit test on and off.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
RLIMTEST	System	RIPL TEST on OFF

RLIMVAL


Syntax

RLIMVAL<OFF | ABS | MAR>;

Description

Command	Description	Range	Query Response
RLIMVAL	Displays the ripple limit value of the selected band (see “SELBND”) in absolute format (ABS) or margin format (MAR). OFF turns the displayed ripple limit value off.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RLIMVAL		

RSCO


Syntax

RSCO;

Description

Command	Description	Range	Query Response
RSCO	Resets display colors to the factory default settings.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RSCO		

RST


Syntax


RST;

Description

Command	Description	Range	Query Response
RST	Presets the analyzer to the factory preset state. OPC-compatible. See Appendix A , “Preset Conditions.”	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
RST		N/A

NOTE Pressing the  key on the analyzer will either invoke the factory preset state, or a user-selected state (if one has been set up). Sending the RST command will *always* invoke the factory preset state. This is true even if the analyzer is currently set up to recall a user preset state when the  key is pressed. For more information on user presets, see your analyzer’s user’s guide.

S

Syntax

S<11|12|21|22>; or S<11|12|21|22>;

Description

Command	Description	Range	Query Response
S11	Forward reflection measurement ¹ (See also “RFLP.”)	N/A	<0 1><L _F >
S12	Reverse transmission measurement ²	N/A	<0 1><L _F >
S21	Forward transmission measurement ³ (See also “TRAP.”)	N/A	<0 1><L _F >
S22	Reverse reflection measurement ²	N/A	<0 1><L _F >

1. The S11 command can also be used on ET models to set the measurement mode to “Reflection.”
2. The S12 and S22 commands do not apply to ET models.
3. The S21 command can also be used on ET models to set the measurement mode to “Transmissn.”

Front Panel Equivalents

Command	Hardkey	Softkey
S11		Refl:FWD S11 (A/R)
S12		Trans:REV S12 (A/R)
S21		Trans:FWD S21 (B/R)
S22		Refl:REV S22 (B/R)

SADD

Syntax

SADD;

Description

Command	Description	Range	Query Response
SADD	Adds a new segment to the table during a list-frequency, limit-table, cal sensor table, or power loss table edit.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SADD	System or Sweep Setup or Cal	SEGMENT ADD

SAMC

Syntax

SAMC<ON|OFF>; or SAMC?;

Description

Command	Description	Range	Query Response
SAMC	Selects whether sampler correction is on or off. SAMC and RAWOFFS are linked in that when one changes state, so does the other.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SAMC	System	SAMPLR COR ON OFF

SAV

Syntax

SAV<1|2|C|ERC|RERC|T>;

Description

Command	Description	Range	Query Response
SAV1	Completes the 1-port calibration sequence. OPC-compatible.	N/A	N/A
SAV2	Completes the 2-port calibration sequence. OPC-compatible.	N/A	N/A
SAVC	Completes the transfer of error correction coefficients back into the instrument. OPC-compatible.	N/A	N/A
SAVERC	Completes the enhanced response calibration sequence. OPC-compatible.	N/A	N/A
SAVRERC ¹	Completes the reverse enhanced response calibration sequence. OPC-compatible.	N/A	N/A
SAVT	Completes the TRL/LRM calibration sequence. OPC-compatible.	N/A	N/A

1. ES models only.

Front Panel Equivalents

Command	Hardkey	Softkey
SAV1		DONE 1-PORT CAL
SAV2		DONE 2-PORT CAL
SAVC	GPIB only: no front panel equivalent	
SAVERC		DONE FWD ENH RESP
SAVRERC		DONE REV ENH RESP
SAVT		DONE TRL/LRM

SAVE

Syntax


SAVE<num>;

SAVEREG<num>;

Description

Command	Description	Range	Query Response
SAVE	Saves to save/recall registers 1 through 5. OPC-compatible.	integers 1–5	N/A
SAVEREG	Saves to save/recall registers 01–31. SAVEREG01 through SAVEREG05 are the same as SAVE1 through SAVE5. OPC-compatible.	two-digit integers 01–31	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SAVE		
SAVEREG		

SAVECSV


Syntax

SAVECSV;

Description

Command	Description	Range	Query Response
SAVECSV	Saves the current measurement to the disk drive in the comma-separated value (CSV) format.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SAVECSV		SAVE FILE when GRAPH FMT [] is set to CSV and FILETYPE: GRAPHIC is selected.

SAVEJPG

Syntax

SAVEJPG;

Description

Command	Description	Range	Query Response
SAVEJPG	Saves the current display to the disk drive in the JPG format. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SAVEJPG		SAVE FILE when GRAPH FMT [] is set to JPG and FILETYPE: GRAPHIC is selected.

SAVEUSEK

Syntax

SAVEUSEK;

Description

Command	Description	Range	Query Response
SAVEUSEK	Stores the active calibration kit as the user kit.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SAVEUSEK		SAVE USER KIT

SAVU

Syntax

SAVU<ASCII | BINA>;

Description

Command	Description	Range	Query Response
SAVUASCII	Selects ASCII format for saving to disk. Conforms to CITIFile specifications.	N/A	N/A
SAVUBINA	Selects binary format for saving to disk.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SAVUASCII	Save/Recall	SAVE USING ASCII
SAVUBINA	Save/Recall	SAVE USING BINARY

SCAL

Syntax

SCAL<num>; or SCAL?;

Description

Command	Description	Range	Query Response
SCAL	Sets the trace scale factor.	amplitude range ¹	<num><L _F >

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units. For linear magnitude: ± 500 units. For SWR: ± 500 units. The scale is always positive, and has minimum values of 0.001dB, 10e-12 degrees, 10e-15 seconds, and 10 picounits.

Front Panel Equivalents

Command	Hardkey	Softkey
SCAL	Scale Ref	SCALE / DIV

SCAP

Syntax

SCAP<FULL | GRAT>;

Description

Command	Description	Range	Query Response
SCAPFULL	Selects a full plot.	N/A	N/A
SCAPGRAT	Selects a plot where the graticule is expanded to the plotter's P1 and P2.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SCAPFULL		SCALE PLOT FULL
SCAPGRAT		SCALE PLOT GRAT

SDEL

Syntax

SDEL ;

Description

Command	Description	Range	Query Response
SDEL	Deletes the current segment while editing a list frequency, a limit table, or a power loss list.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SDEL	System or Sweep Setup Cal	SEGMENT DELETE

SDON

Syntax

SDON;

Description

Command	Description	Range	Query Response
SDON	Closes a segment after editing a list frequency, a limit table, or a power loss list.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SDON	System or Sweep Setup or Cal	DONE

SEA

Syntax

SEA<L|R>;

SEA<MAX|MIN|OFF>; or SEA<MAX|MIN|OFF>;

SEATARG<num>; or SEATARG?;

Description

These commands control the marker searches. The marker searches place the active marker according to the indicated search criteria. The search is continuously updated if tracking is ON (see [“TRACK”](#)).

Command	Description	Range	Query Response
SEAL	Search left for next occurrence of the target value.	N/A	N/A
SEAMAX	Search for trace maximum on the current channel.	N/A	<0 1>< ^L _F >
SEAMIN	Search for trace minimum on the current channel.	N/A	<0 1>< ^L _F >
SEAOFF	Turns the marker search off.	N/A	<0 1>< ^L _F >
SEAR	Search right for next occurrence of the target value.	N/A	N/A
SEATARG	Set the search target amplitude.	amplitude range ¹	<num>< ^L _F >

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units.
For linear magnitude: ± 500 units. For SWR: ± 500 units.

Front Panel Equivalents

Command	Hardkey	Softkey
SEAL	Marker Search	SEARCH LEFT
SEAMAX	Marker Search	SEARCH: MAX
SEAMIN	Marker Search	SEARCH: MIN
SEAOFF	Marker Search	SEARCH: OFF
SEAR	Marker Search	SEARCH RIGHT
SEATARG	Marker Search	SEARCH: TARGET

SEDI

Syntax

SEDI<num>; or SEDI?;

Description

Command	Description	Range	Query Response
SEDI	During either a frequency, limit, or power loss table edit, selects segment <num> for editing.	state dependent ¹	<num><L _F >

1. Range for frequency segment = 1 to 30
Range for limit test segment = 1 to 18
Range for power loss table segment = 1 to 12

Front Panel Equivalents

Command	Hardkey	Softkey
SEDI	System or Sweep Setup or Cal	EDIT SEGMENT

SEG

Syntax

SEG<IFBW|POWER><num>;

Description

Command	Description	Range	Query Response
SEGIFBW	Sets the IFBW for the active segment of a list-frequency table in swept list mode.	Choose from 10, 30, 100, 300, 1000, 3000, 3700, 6000	see “Note” below
SEGPOWER	Sets the power for the active segment of a list-frequency table in swept list mode.	output power range of your analyzer ¹	see “Note below

1. The output power range is dependent upon the model and option configuration of your analyzer. Refer to your analyzer's reference guide to determine the output power range of your analyzer.



NOTE

Currently these commands can be queried by sending the command followed by the OUTPACTI command, as in the following example to query the upper limit value:

```
10 OUTPUT 716;"SEGIFBW;OUTPACTI;"
```

Future revisions of firmware may support the standard query form (which currently always returns a zero) for these commands.

Front Panel Equivalents

Command	Hardkey	Softkey
SEGIFBW		SEGMENT IF BW
SEGPOWER		SEGMENT POWER

SEL

Syntax

SEL<MAXPT|MINPT|PT|SEG><num>; or SEL<MAXPT|MINPT|PT|SEG>?;

Description

Command	Description	Range	Query Response
SELMAXPT	Selects the last point number in the range of points that the OUTPDATR command will report.	0 to n-1, where n=number of points	<num>< ^L _F >
SELMINPT	Selects the first point number in the range of points that the OUTPDATR command will report.	0 to n-1, where n=number of points	<num>< ^L _F >
SELPT	Selects the point number that the OUTPDATP command will report.	0 to n-1, where n=number of points	<num>< ^L _F >
SELSEG	Selects the segment number to report on for the OUTPSEGF and OUTPSEGM commands.	integers 1-18	<num>< ^L _F >

NOTE For the definition of a limit segment, see [“Limit Line and Data Point Special Functions” on page 7-126](#).

Front Panel Equivalents

GPIB only: no front panel equivalent.

SELBND


Syntax

SELBND<num>; *or* SELBND?;

Description

Command	Description	Range	Query Response
SELBND	Selects the ripple frequency band for the following commands: OUTPRPLBNDPF, OUTPRPLBNDVAL, and RLIMVAL.	integers 1–12	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SELBND		

SELL

Syntax

SELL<num>; or SELL?;

Description

Command	Description	Range	Query Response
SELL	Selects the learn string revision (LRN) or OUTPLEAS, INPULEAS to be used by the analyzer. The valid parameters are: • 0: Defaults to current revision. • 201: Revision 8753B & 8720A series 2.01 • 300: Revision 8753B 3.00 • 401: Revision 8753C 4.01 • 402: Revision 8753C 4.02 • 412: Revision 8753C 4.12 • 413: Revision 8753C 4.13 • 500: Revision 8753D 5.00 • 520: Revision 8753D 5.20 • 526: Revision 8753D 5.26 • 534: Revision 8753D 5.34 • 536: Revision 8753D 5.36 • 538: Revision 8753D 5.38 • 540: Revision 8753D 5.40 • 542: Revision 8753D 5.42 • 546: Revision 8753D 5.46 • 548: Revision 8753D 5.48 • 612: Revision 8753D & 8720D 6.12 • 614: Revision 8753D & 8720D series 6.14 • 710: Revision 8753E 7.10 • 712: Revision 8753D & 8720D series 7.12 • 714: Revision 8753D 7.14 • 740: Revision 8753D & 8720D series 7.40 • 748: Revision 8753D & 8720D series 7.48	See "Description."	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

SEQ

Syntax

SEQ<num>; *or* SEQ?;

Description

Command	Description	Range	Query Response
SEQ	Selects a sequence. See also “Q”.	integers 1–6	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SEQ		SEQUENCE x SEQ x

SEQWAIT

Syntax

SEQWAIT<num>[S]; *or* SEQWAIT?;

Description

Command	Description	Range	Query Response
SEQWAIT	Tells the instrument to wait <num> seconds during a sequence.	0.1 to 3000 s	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SEQWAIT		WAIT X

SET

SET

Syntax

SET<BIT|Z><num>; or SET<BIT|Z>;

SET<DATE|TIME><\$>;

SETF;


SET<RREFL|RRTHRU>; or SET<RREFL|RRTHRU>;

Description

Command	Description	Range	Query Response
SETBIT	Sets the specified bit on the GPIO.	integers 0–7	<num>< ^L _F >
SETDATE	Sets the date in the following format: DD MMM YYYY, where DD is the day and must be 2 digits, MMM is the month and must be three alpha characters (JAN, FEB, MAR, APR, MAY, JUN, JUL, AUG, SEP, OCT, NOV, DEC), and YYYY is the year and must be 4 digits.	See “Description.”	N/A
SETF	Sets the frequency for low pass transform, Option 010.	N/A	N/A
SETRTHRU ¹	Sets the reference thru for a TRL cal.	N/A	<0 1>< ^L _F >
SETRREFL ¹	Sets the reference reflect for a TRL cal.	N/A	<0 1>< ^L _F >
SETTIME	Sets the time in the following format: HH:MM:SS, where HH is the hour, MM is minutes, SS is seconds, and each must be 2 digits.	See “Description.”	N/A
SETZ	Sets the characteristic impedance of the measurement system.	0.1 to 500 Ω	<num>< ^L _F >

1. ES models only.

Front Panel Equivalents

Command	Hardkey	Softkey
SETBIT		SET BIT
SETDATE		SET DAY SET MONTH SET YEAR

Command	Hardkey	Softkey
SETF	(System)	SET FREQ LOW PASS
SETRTHRU	(Cal)	SET REF: THRU
SETRREFL	(Cal)	SET REF: REFLECT
SETTIME	(System)	SET MINUTES SET HOUR ROUND SECONDS
SETZ	(Cal)	SET Z0

SHOM

Syntax

SHOM;

Description

Command	Description	Range	Query Response
SHOM	Displays the desired softkey menu during a sequence.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SHOM	(Seq)	SHOW MENUS

SING


Syntax

SING;

Description

Command	Description	Range	Query Response
SING	Single sweep. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SING		SINGLE

SLI

Syntax

SLI<D|L|S>;

Description

Command	Description	Range	Query Response
SLID	Sliding load done.	N/A	N/A
SLIL	Specifies the standard as a sliding load during a standard definition as part of a cal kit modification, as opposed to a fixed or offset load.	N/A	N/A
SLIS	Sliding load set. OPC-compatible.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SLID		SLIDING LOAD DONE
SLIL		SLIDING
SLIS		SLIDE is SET

SLOP

Syntax

SLOPE<num>; or SLOPE?;


SLOPO<ON|OFF>; or SLOPO?;

NOTE These commands only apply to 8753ET/ES analyzers.

Description

Command	Description	Range	Query Response
SLOPE	Enters the power slope value.	–2 to 2 dB/GHz	<num>< ^L _F >
SLOPO	Selects whether the power slope is on or off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SLOPE		SLOPE
SLOPO		SLOPE ON OFF

SM8

Syntax


SM8<ON|OFF>; or SM8?;

NOTE This command only applies to 8753ET/ES analyzers.

Description

Command	Description	Range	Query Response
SM8	Selects whether spur avoidance is on or off. Selecting spur avoidance off, along with selecting sampler and attenuator offsets off (see “RAWOFFS”), saves substantial time at recalls and during frequency changes. Spur avoidance is always coupled between channels: select SM8OFF to turn off spur avoidance for all channels. See “Example 2G: Take4 — Error Correction Processed on an External PC” on page 7-48.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SM8		

SMI

Syntax

SMI<C|MGB|MLIN|MLOG|MRI|MRX>; or SMI<C|MGB|MLIN|MLOG|MRI|MRX>?;

Description

Command	Description	Range	Query Response
SMIC	Selects Smith chart display format.	N/A	<0 1>< ^L _F >
SMIMGB	Selects G+jB (conductance and susceptance) marker readout on a Smith chart.	N/A	<0 1>< ^L _F >
SMIMLIN	Selects linear magnitude marker readout on a Smith chart.	N/A	<0 1>< ^L _F >
SMIMLOG	Selects log magnitude marker readout on a Smith chart.	N/A	<0 1>< ^L _F >
SMIMRI	Selects real/imaginary pairs (resistance and reactance) marker readout on a Smith chart.	N/A	<0 1>< ^L _F >
SMIMRX	Selects R + jX marker readout on a Smith chart.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SMIC	Format	SMITH CHART
SMIMGB	Marker Fctn	G + jB MKR
SMIMLIN	Marker Fctn	LIN MKR
SMIMLOG	Marker Fctn	LOG MKR
SMIMRI	Marker Fctn	Re/Im MKR
SMIMRX	Marker Fctn	R + jX MKR

SMOO

SMOOAPER<num>; or SMOOAPER?;
SMOOO<ON|OFF>; or SMOOO?;

Description

Command	Description	Range	Query Response
SMOOAPER	Sets the smoothing aperture as a percent of the trace.	0.05 to 20%	<num>< ^L _F >
SMOOO	Selects whether smoothing is on or off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SMOOAPER		SMOOTHING APERTURE
SMOOO		SMOOTHING ON OFF

SOFR


Syntax

SOFR;

Description

Command	Description	Range	Query Response
SOFR	Displays the firmware revision on the screen.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SMOOAPER		FIRMWARE REVISION

SOFT

Syntax

SOFT<num>;

Description

Command	Description	Range	Query Response
SOFT	Acts as though the indicated softkey was pressed.	integers 1–8	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

SOUP

Syntax

SOUP<ON|OFF>; or SOUP?;

Description

Command	Description	Range	Query Response
SOUP	Selects whether the source power is on or off.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SOUP		SOURCE PWR ON OFF

SPAN

Syntax

SPAN<num>[HZ|DB]; or SPAN?;

Description

Command	Description	Range	Query Response
SPAN	Sets the stimulus span value. If a list frequency segment is being edited, sets the span of the list segment.	stimulus range ¹	<num><L _F >

1. For frequency or power sweeps, refer to "Preset State and Memory Allocation," in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
SPAN	Span	N/A
	Sweep Setup	SPAN

SPEC

Syntax

SPEC<\$><num, num, ..., num>;

Description

The following commands initiate the SPECIFY CLASS part of modifying a cal kit. With each command, send the analyzer a series of standard numbers to be included in the class. When the class is full, send the CLAD command to terminate the specification.

Command	Description	Range for <num,num,...>	Query Response
SPECFWDM	Forward match	standard numbers 1–8	N/A
SPECFWDT	Forward transmission	standard numbers 1–8	N/A
SPECRESP	Response	standard numbers 1–8	N/A
SPECRESI	For Resp & Isol, specifies the response standards	standard numbers 1–8	N/A
SPECREVM	Reverse match	standard numbers 1–8	N/A
SPECREVT	Reverse transmission	standard numbers 1–8	N/A
SPECS11A	S11A	standard numbers 1–8	N/A
SPECS11B	S11B	standard numbers 1–8	N/A
SPECS11C	S11C	standard numbers 1–8	N/A
SPECS22A	S22A	standard numbers 1–8	N/A
SPECS22B	S22B	standard numbers 1–8	N/A
SPECS22C	S22C	standard numbers 1–8	N/A
SPECTRLL	TRL Line or Match	standard numbers 1–8	N/A
SPECTRLT	TRL Thru	standard numbers 1–8	N/A

Command	Description	Range for <num,num,...>	Query Response
SPECTRLR	TRL Reflection	standard numbers 1–8	N/A
SPECTRFM	TRL, Reflect, Forward, Match. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTRRM	TRL, Reflect, Reverse, Match. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTLFM	TRL, Line, Forward, Match. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTLFT	TRL, Line, Forward, Trans. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTLRM	TRL, Line, Reverse, Match. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTLRT	TRL, Line, Reverse, Trans. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTTFM	TRL, Thru, Forward, Match. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTTFT	TRL, Thru, Forward, Trans. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTTRM	TRL, Thru, Reverse, Match. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A
SPECTTRT	TRL, Thru, Reverse, Trans. Compatible with the 8753D revisions 5.00 through 5.48.	standard numbers 1–8	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SPECFWDM		FWD MATCH
SPECFWDT		FWD TRANS
SPECRESI		RESPONSE & ISOL'N
SPECRESP		RESPONSE

Command	Hardkey	Softkey
SPECREVM		REV MATCH
SPECREVT		REV TRANS
SPECS11A		S11A
SPECS11B		S11B
SPECS11C		S11C
SPECS22A		S22A
SPECS22B		S22B
SPECS22C		S22C
SPECTRL		TRL LINE or MATCH
SPECTRLT		TRL THRU
SPECTRLR		TRL REFLECT
SPECTRFM		S11A
SPECTRRM		S22A
SPECTLFM		S11B
SPECTLFT		S11C
SPECTLRM		S22B
SPECTLRT		S22C
SPECTTFM		FWD MATCH
SPECTTFT		FWD TRANS
SPECTTRM		REV MATCH
SPECTTRT		REV TRANS

SPEG


Syntax

SPEG;

Description

Command	Description	Range	Query Response
SPEG	Displays the specify gate menu.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SPEG		SPECIFY GATE

SPLD


Syntax

SPLD<ON|OFF>; *or* SPLD?;

Description

Command	Description	Range	Query Response
SPLD	Turns the split display mode on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SPLD		SPLIT DISP ON OFF

SPLID




Syntax

SPLID<1|2|4>; or SPLID<1|2|4>;

Description

Command	Description	Range	Query Response
SPLID1	Puts all displayed channels on one full-size graticule.	N/A	<0 1>< ^L _F >
SPLID2	Puts all displayed channels on two graticules.	N/A	<0 1>< ^L _F >
SPLID4	Puts each displayed channel on a separate graticule.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SPLID1		SPLIT DISP 1X
SPLID2		SPLIT DISP 2X
SPLID4		SPLIT DISP 4X

SRE

Syntax

SRE<num>; *or* SRE?;

Description

Command	Description	Range	Query Response
SRE	Service request enable. A bit set in <num> enables the corresponding bit in the status byte to generate an SRQ.	integers 0–255	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

SSEG

Syntax

SSEG<num>; *or* SSEG?;

Description

Command	Description	Range	Query Response
SSEG	Selects the desired segment of the frequency list for a list frequency sweep. See also “ASEG”.	integers 1–30	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SSEG	Sweep Setup	SINGLE SEG SWEEP

STAN

STAN

Syntax

STAN<A|B|C|D|E|F|G>;

Description

Standards A through G are associated with softkeys 1 through 7, respectively.

Command	Description	Range	Query Response
STANA	These 7 commands (OPC-compatible) select a standard from a class during a calibration sequence. If a class is requested, as in CLASS11A (S11 1-port cal) the analyzer will do one of two things: - If there is only one standard in the class, it will measure that standard automatically. - If there are several standards in the class, then one of these commands must be used to select one of these standards, causing it to be measured.	N/A	N/A
STANB		N/A	N/A
STANC		N/A	N/A
STAND		N/A	N/A
STANE		N/A	N/A
STANF		N/A	N/A
STANG		N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
STANA		standard listed under softkey 1
STANB		standard listed under softkey 2
STANC		standard listed under softkey 3
STAND		standard listed under softkey 4
STANE		standard listed under softkey 5
STANF		standard listed under softkey 6
STANG		standard listed under softkey 7

STAR

Syntax


STAR<num>[HZ|DB]; or STAR?;

Description

Command	Description	Range	Query Response
STAR	Sets the start stimulus value. If a list frequency segment is being edited, sets the start of the list segment.	stimulus range ¹	<num><L _F >

1. For frequency or power sweeps, refer to "Preset State and Memory Allocation," in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
STAR		N/A
		SEGMENT: START

STB?

Syntax

STB?;

Description

Command	Description	Range	Query Response
STB?	Query only. Outputs the status byte in ASCII format (FORM4). Same as OUTPSTAT.	N/A	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

STDD

Syntax

STDD;

Description

Command	Description	Range	Query Response
STDD	Standard done, terminating a define standard sequence, while modifying a cal kit.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
STDD		STD DONE (DEFINED)

STDT

Syntax

STDT<ARBI|DELA|LOAD|OPEN|SHOR>; or STDT<ARBI|DELA|LOAD|OPEN|SHOR>;

Description

The following commands select the standard “type” after the standard number has been entered during a modify cal kit sequence.

Command	Description	Range	Query Response
STDTARBI	Arbitrary impedance	N/A	<0 1>< ^L _F >
STDTDELA	Delay/thru	N/A	<0 1>< ^L _F >
STDTLOAD	Load	N/A	<0 1>< ^L _F >
STDTOPEN	Open	N/A	<0 1>< ^L _F >
STDTSHOR	Short	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
STDTARBI		STD TYPE: ARBITRARY IMPEDANCE
STDTDELA		STD TYPE: DELAY/THRU
STDTLOAD		STD TYPE: LOAD
STDTOPEN		STD TYPE: OPEN
STDTSHOR		STD TYPE: SHORT

STEPSWP

Syntax

STEPSWP<ON|OFF>; or STEPSWP?;

NOTE This command only applies to 8720E series analyzers.

Description

Command	Description	Range	Query Response
STEPSWP	Turns step sweep mode on or off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
STEPSWP	Sweep Setup or System	STEP SWP ON OFF

STOP

Syntax


STOP<num>[HZ|DB]; or STOP?;

Description

Command	Description	Range	Query Response
STOP	Sets the stop stimulus value. If a list frequency segment is being edited, sets the stop of the list segment.	stimulus range ¹	<num><L _F >

1. For frequency or power sweeps, refer to "Preset State and Memory Allocation," in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
STOP		N/A
		SEGMENT: STOP

STOR

Syntax

STOR<num>;

Description

This command stores the indicated file on disk. Used with the INTD and EXTD commands to designate the internal or external disk. Requires pass control when used with a disk drive on GPIB.

Command	Description	Range	Query Response
STOR	Stores the current instrument state to disk using the file name provided by the preceding TITF<num> command.	integers 1–5	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
STOR	Save/Recall	STORE

STORSEQ

Syntax

STORSEQ<num>;

Description

Command	Description	Range	Query Response
STORSEQ	Stores the instrument state of the indicated sequence to disk. Used with the INTD and EXTD commands to designate the internal or external disk. Requires pass control mode when using the GPIB port.	integers 1 to 6	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
STORSEQ		STORE SEQ

STPSIZE

Syntax


STPSIZE<num>[HZ|DB]; or STPSIZE?;

Description

Command	Description	Range	Query Response
STPSIZE	Sets the step size while editing a list frequency segment.	stimulus range ¹	<num><L _F >

1. For frequency or power sweeps, refer to “Preset State and Memory Allocation,” in your analyzer's reference guide. For CW time: 0 to 24 hours. For frequency sweep, transform on: $\pm 1/\text{frequency step}$. For CW time sweep, transform on: $\pm 1/\text{time step}$.

Front Panel Equivalents

Command	Hardkey	Softkey
STPSIZE		STEP SIZE

SVCO


Syntax

SVCO;

Description

Command	Description	Range	Query Response
SVCO	Saves display colors.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
SVCO		

SWE

Syntax

SWEA;

SWET<num>[S]; or SWET?;



Description

Command	Description	Range	Query Response
SWEA	Automatically selects the fastest sweep time based on the current analyzer settings for number of points, IF bandwidth, sweep mode, averaging condition and frequency span.	N/A	N/A
SWET	Sets the sweep time. (Setting SWET0 is equivalent to sending the SWEA command.)	0–86,400 s	<num><L _F >

NOTE The SWET command should be followed by a wait equal to 2 sweeps. Example wait code written in BASIC:

```
10 OUTPUT 716;"SWET.1;"  
20 WAIT 2*.1
```

Front Panel Equivalents

Command	Hardkey	Softkey
SWEA		SWEEP TIME AUTO
SWET		SWEEP TIME MANUAL

SWPSTART

Syntax

SWPSTART;

Description

Command	Description	Range	Query Response
SWPSTART	Initiates a sweep and immediately releases the GPIB bus, allowing the analyzer to initiate data output as soon as the appropriate data is ready. Use in conjunction with Take4 mode only. See “Example 2G: Take4 — Error Correction Processed on an External PC” on page 7-48 . OPC-compatible.	N/A	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

SWR

Syntax

SWR; or SWR?;

Description

Command	Description	Range	Query Response
SWR	Selects the SWR display format.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
SWR	Format	SWR

TAK

Syntax

TAK<CS|RS>;

Description

Command	Description	Range	Query Response
TAKCS	Begins a power meter calibration sweep. Requires pass control when using the GPIB port.	N/A	N/A
TAKRS	Begins a receiver calibration sweep.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TAKCS		TAKE CAL SWEEP
TAKRS		TAKE RCVR CAL SWEEP

TAKE4

TAKE4

Syntax

TAKE4<ON|OFF>; *or* TAKE4?;

Description

Command	Description	Range	Query Response
TAKE4	Initiates a mode in which every measurement cycle is characterized by sweeping in both the forward and reverse directions and collecting raw data for all four S-parameters. The sweeping can occur when a SWPSTART or SING command is received or when the analyzer is in continuous, number of groups, or external trigger mode. See “Example 2G: Take4 — Error Correction Processed on an External PC” on page 7-48.	N/A	<0 1><L _F >

Front Panel Equivalents

GPIO only: no front panel equivalent.

TALKLIST

Syntax

TALKLIST; *or* TALKLIST?;

Description

Command	Description	Range	Query Response
TALKLIST	Selects the talker listener mode.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TALKLIST	Local	TALKER/LISTENER

TERI

Syntax

TERI<num>;

Description

Command	Description	Range	Query Response
TERI	Specifies the terminal impedance of an arbitrary impedance standard during a cal kit modification.	0–1 k Ω	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TERI		TERMINAL IMPEDANCE

TESS?

Syntax

TESS?;

Description

Command	Description	Range	Query Response
TESS?	Query only. Queries whether a test set is connected. Returns a one on the standard analyzer. This command is compatible with the 8753D.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

TIMDTRAN

TIMDTRAN**Syntax**

TIMDTRAN<ON|OFF>; or TIMDTRAN?;

Description

Command	Description	Range	Query Response
TIMDTRAN	Turns the time domain transform on and off (Option 010).	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TIMDTRAN	System	TRANSFORM ON OFF

TIMESTAM**Syntax**

TIMESTAM<ON|OFF>; or TIMESTAM?;

Description

Command	Description	Range	Query Response
TIMESTAM	Turns timestamp on and off for prints and plots. The timestamp adds the date and time to the print or plot.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TIMESTAM	System	TIME STAMP ON OFF

TINT


Syntax

TINT<num>; *or* TINT?;

Description

Command	Description	Range	Query Response
TINT	Adjusts the tint for the selected display feature.	integers 0–100	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TINT		TINT

TIT

TIT**Syntax**

TIT<F|R|REG|SEQ><num><\$>;

TIT<L|P><\$>;

TITSQ;

Description

Command	Description	Range	Query Response
TITF	Titles the indicated file numbers.	<num>: 1–5 <\$>: 10 char. max.	N/A
TITL	Enters a new display title.	48 characters max	N/A
TITP	Titles the plot to disk file.	10 characters max	N/A
TITR	Titles the indicated internal register.	<num>: 1–5 <\$>: 10 char. max.	N/A
TITREG	Titles save/recall registers 01 through 31. TITREG01 through TITREG05 are the same as TITR1 through TITR5.	<num>: 01–31 <\$>: 10 char. max.	N/A
TITSEQ	Selects the sequence to be titled.	<num>: 1–6 <\$>: 10 char. max.	N/A
TITSQ	Provides access to the sequence title functions.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TITF	Save/Recall	FILE NAME
TITL	Display	TITLE
TITP	Save/Recall	PLOT NAME
TITR	Save/Recall	TITLE
TITREG	Save/Recall	TITLE
TITSEQ	Seq	Same as pressing “title seq,” “sequence x seq x,” and then entering a title.
TITSQ	Seq	TITLE SEQUENCE

TITT

Syntax

TITT<MEM|PERI|PMTR|PRIN>;

Description

Command	Description	Range	Query Response
TITTMEM	Sends the title string to trace memory.	N/A	N/A
TITTPERI	Sends the title string to the peripheral GPIB address.	N/A	N/A
TITTPMTR	Sends the title string to the power meter's GPIB address.	N/A	N/A
TITTPRIN	Sends the title string to the printer's GPIB address.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TITTMEM		TITLE TO MEMORY
TITTPERI		TITLE TO PERIPHERAL
TITTPMTR		TITLE TO P MTR/GPIB
TITTPRIN		TITLE TO PRNTR/GPIB

TRA

TRA**Syntax**

TRA<D|N|OP>;

Description

Command	Description	Range	Query Response
TRAD	Completes the transmission calibration subsequence of a 2-port calibration or enhanced response calibration. OPC-compatible.	N/A	N/A
TRAN	Begins the transmission calibration subsequence of a 2-port calibration or enhanced response calibration.	N/A	N/A
TRAOP	Begins the transmission calibration subsequence for one-path, 2-port calibration.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TRAD		STANDARDS DONE
TRAN		TRANSMISSN
TRAOP		TRANSMISSN

TRACK


Syntax

TRACK<ON|OFF>; *or* TRACK?;

Description

Command	Description	Range	Query Response
TRACK	Turns marker search tracking on and off.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TRACK		TRACKING ON OFF

TRAP

Syntax

TRAP; *or* TRAP?;

NOTE This command only applies to ET models.

Description

Command	Description	Range	Query Response
TRAP ¹	Selects “Transmissn” as the measurement mode for the active channel.	N/A	<0 1>< ^L _F >

1. This command can also be used on ES models to set the measurement mode to “Trans:FWD S21.”

Front Panel Equivalents

Command	Hardkey	Softkey
TRAP		TRANSMISSN

TRL

TRL**Syntax**

TRL<L1|L2|R1|R2|T>;

Description

Command	Description	Range	Query Response
TRLL1	Measures TRL Line/match for Port 1 during a TRL/LRM 2-port calibration.	N/A	N/A
TRLL2	Measures TRL Line/match for Port 2 during a TRL/LRM 2-port calibration.	N/A	N/A
TRLR1	Measures TRL S11 reflect during a TRL/LRM 2-port calibration.	N/A	N/A
TRLR2	Measures TRL S22 reflect during a TRL/LRM 2-port calibration.	N/A	N/A
TRLT	Measures TRL thru during a TRL/LRM 2-port calibration.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TRLL1		LN/MATCH 1
TRLL2		LN/MATCH 2
TRLR1		S11 REFL
TRLR2		S22 REFL
TRLT		THRU

TSSWI

Syntax

TSSWI<num>; or TSSWI?;

NOTE These commands only apply to ES models.

Description

See also “CSWI” on page 1-47.

Command	Description	Range	Query Response
TSSWI	Sets number of sweeps for test set switching. ¹	integers 0–999	<num><L _F >

1. 0 = test set hold, 1= continuous, 2–999 = number of sweeps

Front Panel Equivalents

Command	Hardkey	Softkey
TSSWI		TESTSET SW n Sweeps

TST?

Syntax

TST?;

Description

Command	Description	Range	Query Response
TST?	Query only. Causes a self test and returns a zero if the test is passed.	N/A	<num><L _F >

Front Panel Equivalents

GPIB only: no front panel equivalent.

TSTIO

Syntax

TSTIO<FWD|REV><num>; or TSTIO<FWD|REV>?;

Description

Both of these commands define 3 bits, D0 through D2, on the test set connector I/O. Be careful that you do not also set a value to ATTP1 and ATTP2 as there is interaction between these commands and they will change the values you have set for D0 through D2 and will couple the channels together. Values for ATTP1 and ATTP2 translate to the following values for D0 through D2:

ATTP1/ATTP2	D0–D2
0 dB	7
10 dB	6
20 dB	5
30 dB	4
40 dB	3
50 dB	2
60 dB	1
70 dB	0

Command	Description	Range	Query Response
TSTIOFWD	Defines D0–D2 on the test set connector I/O for chan 1 and chan 2 forward setting.	integers 0–7	<num>< ^L _F >
TSTIOREV	Defines D0–D2 on the test set connector I/O for chan 1 and chan 2 reverse setting.	integers 0–7	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TSTIOFWD		TESTSET I/O REV
TSTIOREV		TESTSET I/O FWD

TSTP

Syntax

TSTP<P1|P2>;

NOTE This command only applies to ES models.

Description

Command	Description	Range	Query Response
TSTP	Selects test port 1 or 2 for non-S-parameter measurements.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
TSTP		TESTPORT ONE TWO

TTL

TTL**Syntax**

TTL<HPULS|LPULS|OH|OL>; *or* TTL<HPULS|LPULS|OH|OL>;

Description

Command	Description	Range	Query Response
TTLHPULS	TTL normally low, high pulse at end of sweep.	N/A	<0 1>< ^L _F >
TTL LPULS	TTL normally high, low pulse at end of sweep.	N/A	<0 1>< ^L _F >
TTL OH	Sets TTL continuously high.	N/A	<0 1>< ^L _F >
TTL OL	Sets TTL continuously low.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
TTLHPULS		END SWEEP HIGH PULSE
TTL LPULS		END SWEEP LOW PULSE
TTL OH		TTL OUT HIGH
TTL OL		TTL OUT LOW

UCONV

Syntax

UCONV;

NOTE This command applies to all 8753ET/ES analyzers, and to 8720E series analyzers with Option 089.

Description

Command	Description	Range	Query Response
UCONV	Selects up-converter for mixer measurements.	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
UCONV		UP CONVERTER

UP

Syntax

UP;

Description

Command	Description	Range	Query Response
UP	Increments the value displayed in the active entry area (emulates pressing the up-arrow key).	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
UP		N/A

USEPASC

Syntax

USEPASC; or USEPASC?;

Description

Command	Description	Range	Query Response
USEPASC	Puts the analyzer in pass control mode.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
USEPASC	Local	USE PASS CONTROL

USESENS

Syntax

USESENS<A|B>;

Description

These commands select the sensor input being used with the 438A power meter. For the 436A or 437B, the A sensor is always used.

Command	Description	Range	Query Response
USESENSA	Sensor A.	N/A	N/A
USESENSB	Sensor B (available with 438A only).	N/A	N/A

Front Panel Equivalents

Command	Hardkey	Softkey
USESENSA	Cal	USE SENSOR A
USESENSB	Cal	USE SENSOR B

VELOFACT

Syntax

VELOFACT<num>; or VELOFACT?;

Description

Command	Description	Range	Query Response
VELOFACT	Enters the velocity factor of the transmission medium.	0 to 10	<num>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
VELOFACT	CAL	VELOCITY FACTOR

VIEM

Syntax

VIEM<ON|OFF>; or VIEM?;

Description

Command	Description	Range	Query Response
VIEMON	Displays the mixer measurement trace.	N/A	<0 1>< ^L _F >
VIEMOFF	Displays the mixer measurement setup.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
VIEMON	System	VIEW MEASURE
VIEMOFF	System	VIEW SETUP DIAG

VOFF


Syntax

VOFF<num>; or VOFF?;

Description

Command	Description	Range	Query Response
VOFF	Sets the local oscillator frequency for use in frequency offset mode. See also “LOFREQ.”	frequency range of analyzer	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
VOFF		 ¹  ²

1. 8753ET/ES
2. 8720E series

WAIT

Syntax

WAIT;

Description

Command	Description	Range	Query Response
WAIT	Waits for a clean sweep when used with the OPC command.	N/A	N/A

WAVD


Syntax

WAVD<num>[HZ]; or WAVD?;

Description

Command	Description	Range	Query Response
WAVD	Sets the waveguide cutoff value. This value is then used in the phase equation for electrical delay. (See also “COAD”.)	0 to 999 GHz	<num><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
WAVD		

WAVE

Syntax

WAVE; or WAVE?;

Description

Command	Description	Range	Query Response
WAVE	Specifies a waveguide standard while defining a standard as part of a cal kit modification, as opposed to coaxial.	N/A	<0 1><L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
WAVE		

WID

WID

Syntax

WIDT<ON|OFF>; or WIDT?;

WIDV<num>; or WIDV?;

Description

Command	Description	Range	Query Response
WIDT	Turns the bandwidth search on and off.	N/A	<0 1>< ^L _F >
WIDV	Enters the widths search parameter.	amplitude range ¹	<num>< ^L _F >

1. For log mag: ± 500 dB. For phase: ± 500 degrees. For Smith chart and Polar: ± 500 units.
For linear magnitude: ± 500 units. For SWR: ± 500 units.

Front Panel Equivalents

Command	Hardkey	Softkey
WIDT	Marker Search	WIDTHS ON OFF
WIDV	Marker Search	WIDTH VALUE

WIND

Syntax

WIND<MAXI | MINI | NORM>;

WINDOW<num>; or WINDOW?;






WINDUSEM<ON | OFF>; or WINDUSEM?;

Description

These 5 commands set the window for the transform (Option 010, time domain):

Command	Description	Range	Query Response
WINDMAXI	Maximum	N/A	N/A
WINDMINI	Minimum	N/A	N/A
WINDNORM	Normal	N/A	N/A
WINDOW	Enters arbitrary window.	state dependent	<num>< ^L _F >
WINDUSEM	Turns the trace memory on or off as the window shape.	N/A	<0 1>< ^L _F >

Front Panel Equivalents

Command	Hardkey	Softkey
WINDMAXI	 System	WINDOW: MAXIMUM
WINDMINI	 System	WINDOW: MINIMUM
WINDNORM	 System	WINDOW: NORMAL
WINDOW	 System	WINDOW
WINDUSEM	 System	USE MEMORY ON OFF

WRSK

Syntax

WRSK<num><\$>;

Description

Command	Description	Range	Query Response
WRSK	Enters new softkey labels into the indicated softkey positions. Initial use of these commands requires previous commands MENUFORM; and MENUOFF;.	<num>: integers 1–8 <\$>: 10 char. max.	N/A

Front Panel Equivalents

GPIB only: no front panel equivalent.

2 Introduction to Instrument Control

Using This Chapter

This chapter is an introduction to the remote operation of your analyzer using an external controller. The chapter is divided into two main sections:

- “Instrument Control using the VXIplug&play Driver” on page 2-3
- “Instrument Control using HP BASIC” on page 2-9

You should be familiar with the operation of the analyzer before attempting to remotely control the analyzer via the General Purpose Interface Bus (GPIB). See your analyzer’s user’s guide and reference guide for operating information.

This manual is not intended to teach programming or to discuss GPIB theory except at an introductory level.

Programming examples that demonstrate the remote operation of the analyzer are documented in [Chapter 7](#), “[Programming Examples](#),” and are also provided on the CD-ROM that was shipped with this manual. All example programs are provided in HP BASIC, and most are also provided in Visual C++ and Visual BASIC for use with the *VXIplug&play* driver.

Instrument Control using the VXIplug&play Driver

VXIplug&play is a term indicating conformance to a set of system-level standards produced by the VXIplug&play Systems Alliance. The charter of the alliance was “to improve the effectiveness of VXI-based solutions by increasing ease-of-use and improving the interoperability of multi-vendor VXI systems.”

Installing the VXIplug&play driver on your computer will allow you to control the analyzer via common programming environments without having to learn the instrument-specific mnemonics.

Requirements

The VXIplug&play driver for your analyzer is designed for a PC operating Windows 95 or Windows NT version 3.51 or higher. The driver requires a virtual instrument software architecture (VISA)-compatible GPIB interface, and the VISA I/O Library version 1.1 or higher. The driver is compatible with the following programming environments:

- Microsoft Visual Basic, version 4.0 or higher
- Microsoft Visual C++, version 4.0 or higher
- Borland C++, version 4.5 or higher
- HP VEE, version 3.2 or higher
- National Instruments LabWindows/CVI, version 4.0.1 or higher
- National Instruments LabVIEW, version 4.0.1 or higher

Installing the VXIplug&play Driver

NOTE	This procedure assumes that you have installed a VISA-compatible GPIB interface and the VISA I/O library, version 1.1 or higher. It also assumes that you have installed—and are familiar with—one of the programming environments listed above.
-------------	--

1. The install program for the VXIplug&play driver for your analyzer is located in the root directory of the CD-ROM that accompanied this manual. The file is titled “875x.exe”
 - a. If you need to order a new CD-ROM, contact Agilent Technologies and order part number 08753-10039.
 - b. You can also download the file from the Web. Go to **<http://www.tm.agilent.com>** and follow the “Software and Driver” and “Instrument Driver” links.
2. Run “875x.exe” to install the VXIplug&play driver on your computer. The default directory that is used by the install-shield is **vxipnp\winxx\hp875x**, where winxx designates the operating system in use by your computer, such as winnt, win95, etc.
3. If you have difficulty installing the VXIplug&play driver, contact Agilent Technologies by calling the nearest sales or service office. Refer to **[“Agilent Technologies Sales and Service Offices” on page iv](#)** for a list of contacts.

System Setup

1. Use an GPIB interconnect cable (such as 10833A/B/C/D) to connect the analyzer to the GPIB interface card on your computer.
2. Switch on the computer.
3. Switch on the analyzer.
 - a. To verify the analyzer's address, press:

(Local) SET ADDRESSES ADDRESS: 87xx

The analyzer has only one GPIB interface, though it occupies two addresses: one for the instrument and one for the display. The display address is equal to the instrument address with the least-significant bit incremented. The display address is automatically set each time the instrument address is set.

The default analyzer addresses are:

- 16 for the instrument
- 17 for the display

CAUTION Other devices connected to the bus cannot occupy the same address as the analyzer or the display.

The analyzer should now be displaying the instrument's address in the upper right section of the display. If the address is not 16, return the address to its default setting (16) by pressing:

(16) (x1) (Preset)

- b. Set the system control mode to either “pass-control” or “talker/listener” mode. These are the only control modes in which the analyzer will accept commands over GPIB. For more information on control modes, see [“Bus Device Modes” on page 3-12](#). To set the system-control mode, press:

(Local) TALKER/LISTENER

or

(Local) USE PASS CONTROL

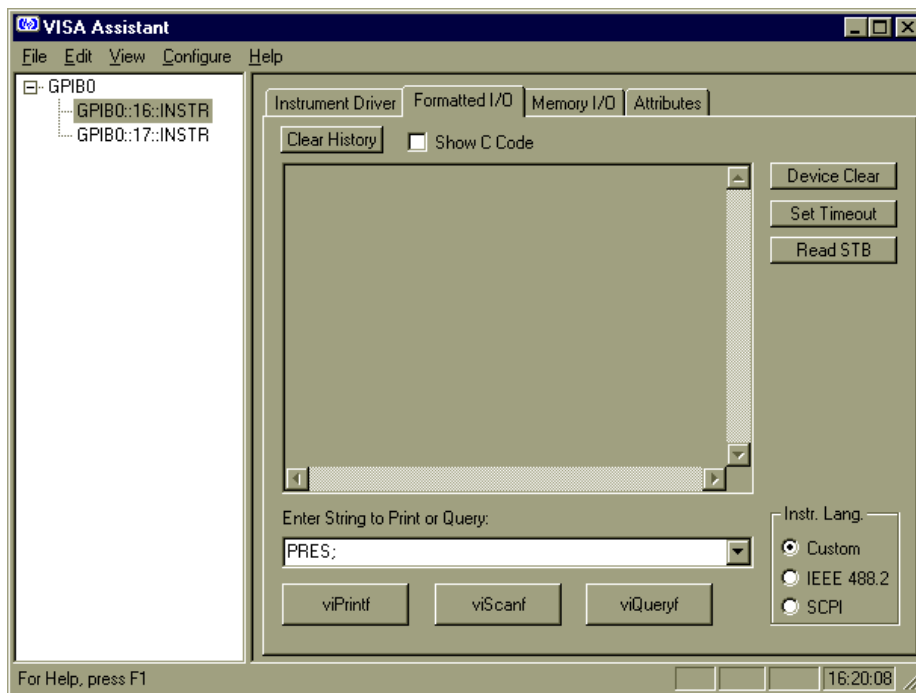
Verifying the Bus Connection

Check the interface bus connection and operation by following the appropriate procedure (for the type of interface card you are using) below.

Interface Bus Verification Procedure (GPIB Interface Card)

1. Check the bus connection by running the VISA Assistant in the I/O Libraries. The VISA Assistant will automatically report what it finds on the bus. Refer to [Figure 2-1](#). Notice that the VISA Assistant is reporting instruments at addresses 16 and 17. As mentioned earlier, these addresses designate the instrument and its display, respectively.

Figure 2-1 VISA Assistant Window

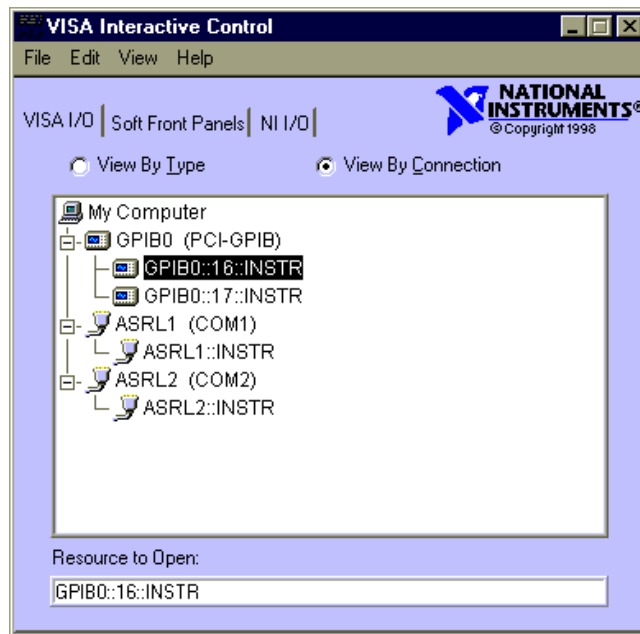


2. To further verify GPIB operation, send a preset command to the analyzer by doing the following in the VISA Assistant window (refer to [Figure 2-1](#)):
 - a. Single-click on “GPIB0::16::INSTR” to highlight it.
 - b. Make sure that the “Formatted I/O” tab is selected.
 - c. Enter PRES; in the text box.
 - d. Click on “viPrintf.”
 - e. This command should preset the analyzer. If an instrument preset does not occur, there is a problem. Check all GPIB address settings and physical connections. Most GPIB problems are caused by an incorrect address or faulty/loose GPIB cables.

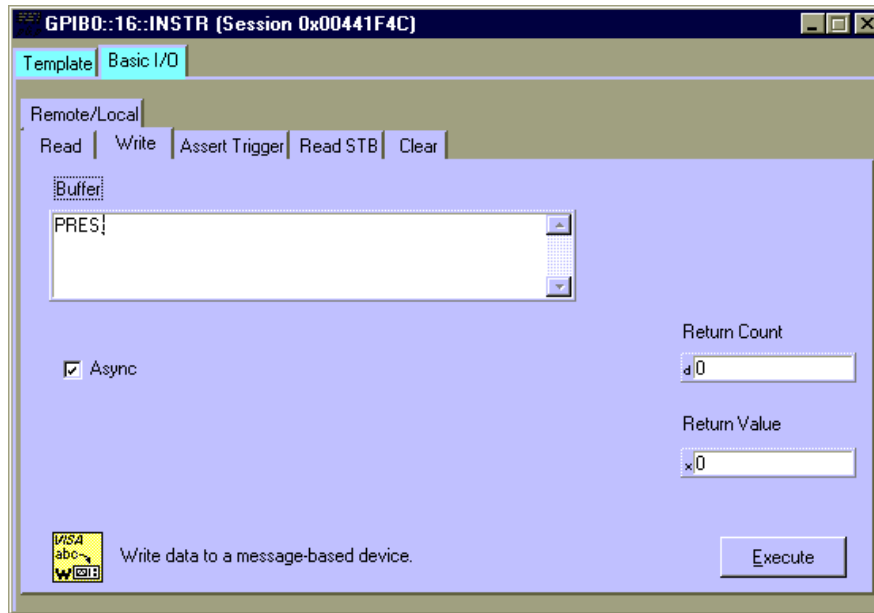
Interface Bus Verification Procedure (National Instruments Card)

1. Check the bus connection by running Win32 VISA Interactive Control. When this program is run, it automatically reports what it finds on the bus. Refer to [Figure 2-2](#). Notice that the program is reporting instruments at addresses 16 and 17. As mentioned earlier, these addresses designate the instrument and its display, respectively.

Figure 2-2 Win32 VISA Interactive Control Window: Bus Report



2. To further verify GPIB operation, double click on “GPIB0::16::INSTR” and then perform the following steps. Refer to [Figure 2-3](#) for a view of the window you will be using.
 - a. Make sure that the “Basic I/O” tab is selected.
 - b. Click on the “Write” tab.
 - c. Enter `PRES;` in the “Buffer” text box.
 - d. Click on “Execute.”
 - e. This command should preset the analyzer. If an instrument preset does not occur, there is a problem. Check all GPIB address settings and physical connections. Most GPIB problems are caused by an incorrect address or faulty/loose GPIB cables.

Figure 2-3 Win32 VISA Interactive Control: Sending a Command

Controlling the Analyzer with the VXIplug&play Driver

The “Programming Examples” CD-ROM that was shipped with this manual includes many example programs that can be used to control your analyzer. Example programs written for Visual C++ are located in the “vc” directory on the CD-ROM, and example programs written for Visual BASIC are located in the “vb” directory. These examples are also available within the Windows help file for the VXIplug&play driver. The following sections provide some information on using the VXIplug&play driver with the Visual C++ and Visual BASIC programming environments. Refer to [Chapter 7](#), “Programming Examples,” for detailed information on each of the example programs.

Using Visual BASIC to Control the Analyzer

When using Visual BASIC, you will need to include the two files listed below in your project. They were installed on your computer in the following directories when you installed the driver:

- \vxipnp\winxx\hp875x\hp875x.bas
- \vxipnp\winxx\include\visa32.bas

NOTE The directories shown above are the default locations for these files. (“winxx” indicates the operating system you are using, such as winnt, win95, etc.) If you designated a different path during installation, you will need to amend the path above to include the specific path that you indicated during installation.

Using Visual C++ to Control the Analyzer

When using Visual C++, you will need to include the file listed below in your project. The file was installed on your computer in the following directory when you installed the driver:

`\vxi\np\winxx\lib\msc\hp875x_32.lib`

NOTE	The directory shown above is the default location for this file. ("winxx" indicates the operating system you are using, such as winnt, win95, etc.) If you designated a different path during installation, you will need to amend the path above to include the specific path that you indicated during installation.
-------------	--

Instrument Control using HP BASIC

This section describes how to control the analyzer using HP BASIC 6.2 (or higher), or HP BASIC for Windows 6.3 (or higher) on one of the following computers:

- HP 9000 Series 200/300
- HP 9000 Series 700 with HP BASIC-UX
- PC with a GPIB interface card installed

For more information on HP BASIC, see [Table 2-1](#). For more information concerning the General Purpose Interface Bus, see [Table 2-2](#).

Table 2-1 Additional BASIC 6.2 Programming Information

Description	HP/Agilent Part Number
HP BASIC 6.2 Programming Guide	98616-90010
HP BASIC 6.2 Language Reference (2 Volumes)	98616-90004
Using HP BASIC for Instrument Control, Volume I	82303-90001
Using HP BASIC for Instrument Control, Volume II	82303-90002
HP BASIC for Windows Manual Set	E2060-90100

Table 2-2 Additional GPIB Information

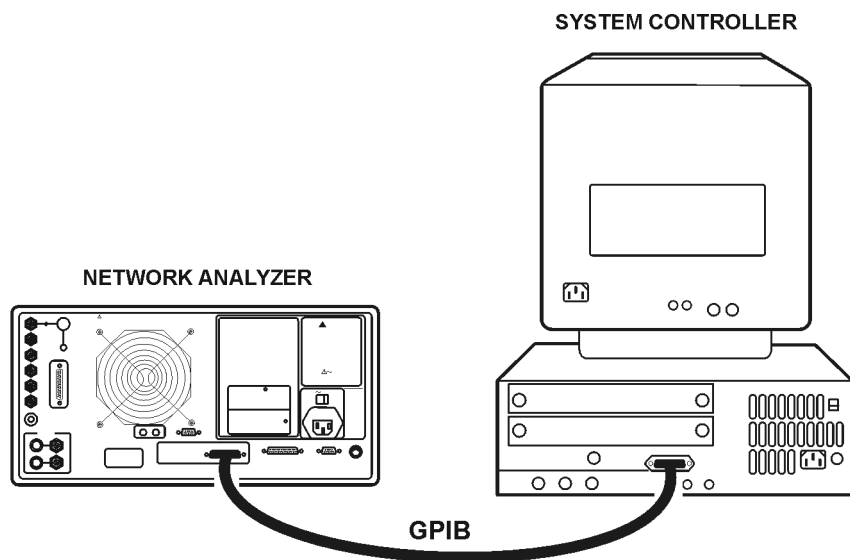
Description	HP/Agilent Part Number
HP BASIC 6.2 Interface Reference	98616-90013
Tutorial Description of the General Purpose Interface Bus	5021-1927

Required Equipment

- Computer running HP BASIC 6.2 (or higher) or HP BASIC for Windows 6.3 (or higher)
- Supported GPIB interface card
- GPIB interconnect cables (such as 10833A/B/C/D)

System Setup and GPIB Verification

Figure 2-4 The Network Analyzer System with Controller



cl52ets

1. Connect the analyzer to the computer with an GPIB cable as shown in [Figure 2-4](#).
2. Switch on the computer, and launch HP BASIC or HP BASIC for Windows.
3. Switch on the analyzer.
 - a. To verify the analyzer's address, press:

Local **SET ADDRESSES** **ADDRESS: 87xx**

The analyzer has only one GPIB interface, though it occupies two addresses: one for the instrument and one for the display. The display address is equal to the instrument address with the least-significant bit incremented. The display address is automatically set each time the instrument address is set.

The default analyzer addresses are:

- 16 for the instrument
- 17 for the display

CAUTION Other devices connected to the bus cannot occupy the same address as the analyzer.

The analyzer displays the instrument's address in the upper right section of the display. If the address is not 16, return the address to its default setting (16) by pressing:

16 **x1** **Preset**

- b. Set the system control mode to either “pass-control” or “talker/listener” mode. These are the only control modes in which the analyzer will accept commands over GPIB. For more information on control modes, see “Bus Device Modes” on page 3-12. To set the system-control mode, press:

(Local) TALKER/LISTENER

or

(Local) USE PASS CONTROL

4. Check the interface bus by performing a simple command from the computer controller. Type the following command on the controller:

OUTPUT 716;"PRES;" **(Execute)** or **(Return)**

NOTE HP 9000 Series 300 computers use the **(Return)** key as both execute and enter. Some other computers may have an **(Enter)**, **(Execute)**, or **(Exec)** key that performs the same function. For reasons of simplicity, the notation **(Return)** is used throughout this document.

This command should preset the analyzer. If an instrument preset does not occur, there is a problem. Check all GPIB addresses and connections. Most GPIB problems are caused by an incorrect address or faulty/loose GPIB cables.

Sending Commands

A remote controller can manipulate the functions of the analyzer by sending commands to the analyzer via the General Purpose Interface Bus (GPIB). The commands used are specific to the analyzer. Remote commands executed over the bus take precedence over manual commands executed from the instrument's front panel. Remote commands are executed as soon as they are received by the analyzer. A command only applies to the active channel (except in cases where functions are coupled between channels). Most commands are equivalent to front-panel hardkeys and softkeys.

Command Structure in BASIC

Consider the following BASIC command for setting the analyzer's start frequency to 50 MHz:

```
OUTPUT 716;"STAR 50 MHZ;"
```

The command structure in BASIC has several different elements:

the BASIC command statement	OUTPUT - The BASIC data-output statement.
the appendage	716 - The data is directed to interface 7 (GPIB), and on to the device at address 16 (the analyzer). This appendage is terminated with a semicolon. The next appendage is STAR, the instrument mnemonic for setting the analyzer's start frequency.
data	50 - a single operand used by the root mnemonic STAR to set the value.
unit	MHZ - the units that the operand is expressed in.
terminator	; - indicates the end of a command, enters the data, and deactivates the active-entry area.

The "STAR 50 MHZ;" command performs the same function as pressing the following keys on the analyzer's front panel:

Start 50 M/μ

STAR is the root mnemonic for the start key, 50 is the data, and MHZ are the units. Where possible, the analyzer's root mnemonics are derived from the equivalent key label. Otherwise they are derived from the common name for the function. [Chapter 1](#), "Alphabetical Command Reference," lists all the root mnemonics and all the different units accepted.

The semicolon (;) following MHZ terminates the command within the analyzer. It removes start frequency from the active-entry area, and prepares the analyzer for the next command. If there is a syntax error in a command, the analyzer will ignore the command and look for the next terminator. When it finds the next terminator, it starts processing incoming commands normally. Characters between the syntax error and the next terminator are lost. A line feed also acts as a terminator. The BASIC OUTPUT statement transmits a carriage return/line feed following the data. This can be suppressed by putting a semicolon at the end of the statement.

The OUTPUT 716; statement will transmit all items listed (as long as they are separated by commas or semicolons) including:

- literal information enclosed in quotes,
- numeric variables,
- string variables,
- and arrays.

A carriage return/line feed is transmitted after each item. Again, this can be suppressed by terminating the commands with a semicolon. The analyzer automatically goes into remote mode when it receives an OUTPUT command from the controller. When this happens, the front-panel remote (R) and listen (L) GPIB status indicators illuminate. In remote mode, the analyzer ignores any data that is input with the front-panel keys, with the exception of **Local**. Pressing **Local** returns the analyzer to manual operation, unless the universal GPIB command LOCAL LOCKOUT 7 has been issued. There are two ways to exit from a local lockout. Either issue the LOCAL 7 command from the controller or cycle the line power on the analyzer.

Setting a parameter such as start frequency is just one form of command the analyzer will accept. It will also accept simple commands that require no operand at all. For example, execute:

```
OUTPUT 716;"AUTO;"
```

In response, the analyzer autoscales the active channel. Autoscale only applies to the active channel, unlike start frequency, which applies to both channels as long as the channels are stimulus-coupled.

The analyzer will also accept commands that switch various functions on and off. For example, to switch on dual-channel display, execute:

```
OUTPUT 716;"DUACON;"
```

DUACON is the analyzer root mnemonic for "dual-channel display on." This causes the analyzer to display both channels. To go back to single-channel display mode, for example, switching off dual-channel display, execute:

```
OUTPUT 716;"DUACOFF;"
```

The construction of the command starts with the root mnemonic DUAC (dual-channel display) and ON or OFF is appended to the root to form the entire command.

The analyzer does not distinguish between upper- and lower-case letters. For example, execute:

```
OUTPUT 716;"auto;"
```

NOTE The analyzer also has a debug mode to aid in troubleshooting systems. When the debug mode is ON, the analyzer scrolls incoming GPIB commands across the display. To manually activate the debug mode, press **Local** **GPIB DIAG ON**. To deactivate the debug mode from the controller, execute:

```
OUTPUT 716;"DEBUOFF;"
```

Command Query

Suppose the operator has changed the power level from the front panel. The computer can find the new power level using the analyzer's command-query function. If a question mark is appended to the root of a command, the analyzer will output the value of that function.

For instance, `POWE 7 DB;` sets the analyzer's output power to 7 dB, and `POWE?;` outputs the current RF output power at the test port to the system controller. For example:

Type `SCRATCH` and press `(Return)` to clear old programs.

Type `EDIT` and press `(Return)` to access the edit mode. Then type in:

```
10 OUTPUT 716;"POWE?;"
20 ENTER 716;Reply
30 DISP Reply
40 END
```

NOTE Most commands can also be queried by sending the command (without a value) and then sending the `OUTPACTI` command, as in the following example that queries the power value:

```
10 OUTPUT 716;"POWE;OUTPACTI;"
```

Running the Program The computer will display the preset source-power level in dBm. Change the power level by pressing `(Local)` `(Power)` `(XX)` `(x1)`. Now run the program again.

When the analyzer receives `POWE?`, it prepares to transmit the current RF source-power level. The BASIC statement `ENTER 716` allows the analyzer to transmit information to the computer by addressing the analyzer to talk. This illuminates the analyzer front-panel talk (T) light. The computer places the data transmitted by the analyzer into the variables listed in the `ENTER` statement. In this case, the analyzer transmits the output power, which gets placed in the variable `Reply`.

The `ENTER` statement takes the stream of binary-data output from the analyzer and reformats it back into numbers and ASCII strings. With the formatting set to its default state, the `ENTER` statement will format the data into real variables, integers, or ASCII strings, depending on the variable being filled. The variable list must match the data the analyzer has to transmit. If there are not enough variables, data is lost. If there are too many variables for the data available, a BASIC error is generated.

The formatting done by the `ENTER` statement can be changed. For more information on data formatting, see [“Array-Data Formats” on page 4-6](#). The formatting can be deactivated to allow binary transfers of data. Also, the `ENTER USING` statement can be used to selectively control the formatting.

ON/OFF commands can be also be queried. The reply is a one (1) if the function is active, a zero (0) if it is not active. Similarly, if a command controls a function that is underlined on the analyzer softkey menu when active, querying that command yields a one (1) if the command is underlined, a zero (0) if it is not. For example, press **Meas**. Though there are seven options on the measurement menu, only one is underlined at a time. The underlined option will return a one (1) when queried.

For instance, rewrite line 10 as:

```
10 OUTPUT 716;"DUAC?;"
```

Run the program once and note the result. Then press **Local** **Display** **DUAL CHAN** to toggle the display mode, and run the program again.

Another example is to rewrite line 10 as:

```
10 OUTPUT 716;"PHAS?;"
```

In this case, the program will display a one (1) if phase is currently being displayed. Since the command only applies to the active channel, the response to the PHAS? inquiry depends on which channel is active.

Operation Complete

Occasionally, there is a need to query the analyzer as to when certain analyzer operations have completed. For instance, a program should not have the operator connect the next calibration standard while the analyzer is still measuring the current one. To provide such information, the analyzer has an "operation complete" reporting mechanism, or OPC command, that will indicate when certain key commands have completed operation. The mechanism is activated by sending either OPC or OPC? immediately before an OPC-compatible command. When the command completes execution, bit 0 of the event-status register will be set. If OPC was queried with OPC?, the analyzer will also output a one (1) when the command completes execution.

As an example, type SCRATCH and press **Return**.

Type EDIT and press **Return**.

Type in the following program:

```
10 OUTPUT 716;"SWET 3 S;OPC?;SING;"  
                                     Set the sweep time to 3 seconds, and OPC a single sweep.  
  
20 DISP "SWEEPING"  
  
30 ENTER 716;Reply                  The program will halt at this point until the analyzer  
                                     completes the sweep and issues a one (1).  
  
40 DISP "DONE"  
  
50 END
```

Running the Program Running this program causes the computer to display the sweeping message as the instrument executes the sweep. The computer will display DONE just as the instrument goes into hold. When DONE appears, the program could then continue on, being assured that there is a valid data trace in the instrument.

Preparing for Remote (GPIB) Control

At the beginning of a program, the analyzer is taken from an unknown state and brought under remote control. This is done with an abort/clear sequence. ABORT 7 is used to halt bus activity and return control to the computer. CLEAR 716 will then prepare the analyzer to receive commands by:

- clearing syntax errors
- clearing the input-command buffer
- clearing any messages waiting to be output

The abort/clear sequence readies the analyzer to receive GPIB commands. The next step involves programming a known state into the analyzer. The most convenient way to do this is to preset the analyzer by sending the PRES (preset) command. If preset cannot be used, the status-reporting mechanism may be employed. When using the status-reporting register, CLES (Clear Status) can be transmitted to the analyzer to clear all of the status-reporting registers and their enables.

Type SCRATCH and press **Return**.

Type EDIT and press **Return**. Type in the following program:

10 ABORT 7	<i>This halts all bus action and gives active control to the computer.</i>
20 CLEAR 716	<i>This clears all GPIB errors, resets the GPIB interface, and clears the syntax errors. It does not affect the status-reporting system.</i>
30 OUTPUT 716;"PRES;"	<i>Presets the instrument. This clears the status-reporting system, as well as resets all of the front-panel settings, except for the GPIB mode and the GPIB addresses.</i>
40 END	<i>Running this program brings the analyzer to a known state, ready to respond to GPIB control.</i>

The analyzer will not respond to GPIB commands unless the remote line is asserted. When the remote line is asserted, the analyzer is addressed to listen for commands from the controller. In remote mode, all the front-panel keys are disabled (with the exception of **Local** and the line-power switch). ABORT 7 asserts the remote line, which remains asserted until a LOCAL 7 statement is executed.

Another way to assert the remote line is to execute:

REMOTE 716

This statement asserts the analyzer's remote-operation mode and addresses the analyzer to listen for commands from the controller. Press any front-panel key except **Local**. Note that none of the front-panel keys will respond until **Local** has been pressed.

Local can also be disabled with the sequence:

```
REMOTE 716  
LOCAL LOCKOUT 7
```

After executing the code above, none of front-panel keys will respond. The analyzer can be returned to local mode temporarily with:

```
LOCAL 716
```

As soon as the analyzer is addressed to listen, it goes back into local-lockout mode. The only way to clear the local-lockout mode, aside from cycling line power, is to execute:

```
LOCAL 7
```

This command un-asserts the remote line on the interface. This puts the instrument into local mode and clears the local-lockout command. Return the instrument to remote mode by pressing:

Local TALKER/LISTENER

or

Local USE PASS CONTROL

I/O Paths

One of the features of HP BASIC is the use of input/output paths. The instrument may be addressed directly by the instrument's device number as shown in the previous examples. However, a more sophisticated approach is to declare I/O paths such as: `ASSIGN @Nwa TO 716`. Assigning an I/O path builds a look-up table in the computer's memory that contains the device-address codes and several other parameters. It is easy to quickly change addresses throughout the entire program at one location. I/O operation is more efficient because it uses a table, in place of calculating or searching for values related to I/O. In the more elaborate examples where file I/O is discussed, the look-up table contains all the information about the file. Execution time is decreased, because the computer no longer has to calculate a device's address each time that device is addressed.

For example:

Type `SCRATCH` and press **Return**.

Type `EDIT` and press **Return**.

Type in the following program:

```
10 ASSIGN @Nwa TO 716      Assigns the analyzer to ADDRESS 716.  
20 OUTPUT @Nwa;"STAR 50 MHZ;"  Sets the analyzer's start frequency to 50 MHz.
```

NOTE	The use of I/O paths in binary-format transfers allows the user to quickly distinguish the type of transfer taking place. I/O paths are used throughout the examples and are highly recommended for use in device input/output.
-------------	---

3 GPIB Programming

Analyzer Command Syntax

Code Naming Convention

The analyzer GPIB commands are derived from their front-panel key titles (where possible), according to this naming convention:

Simple commands are the first four letters of the function they control, as in **POWE**, the command name for power. If the function label contains two words, the first three mnemonic letters are the first three letters of the first word, and the fourth mnemonic letter is the first letter of the second word. For example, **ELED** is derived from electrical delay.

If there are many commands grouped together in a category, as in markers or plotting pen numbers, the command is increased to 8 letters. The first four letters are the category label and the last four letters are the function specifier. As an example, category pen numbers are represented by the command **PENN**, which is used in combination with several functions such as **PENNDATA**, **PENNMEMO**.

The code naming guidelines, listed in [Table 3-1](#), are used in order to:

- make commands more meaningful and easier to remember
- maintain compatibility with other products (including the 8510 series analyzers)

NOTE	There are times when these guidelines are not followed due to technical considerations.
-------------	---

Table 3-1 Code Naming Convention

Convention	Key Title	For GPIB Code Use	Example
One word	Power	First four letters	POWE
	Start		STAR
Two words	ELECTRICAL DELAY	First three letters of first word, first letter of second word	ELED
	SEARCH RIGHT		SEAR
Two words in a group	MARKER → CENTER	Four letters of both	MARKCENT
	GATE → SPAN		GATESPAN
Three words	CAL KIT N 50 Ω	First three Letters of first word, first letter of second word, first four letters of third word	CALKN50
	PEN NUM DATA		PENNDATA

Some codes require appendages (ON, OFF, 1, 2, etc.). Codes that do not have a front-panel equivalent are GPIB only commands. They use a similar convention based on the common name of the function.

Valid Characters

The analyzer accepts the following ASCII characters:

- letters
- numbers
- decimal points
- +/–
- semicolons (;)
- quotation marks (“)
- carriage returns (CR)
- linefeeds (LF)

Both upper- and lower-case letters are acceptable. Carriage returns, leading zeros, spaces, and unnecessary terminators are ignored, except for those within a command or appendage. If the analyzer does not recognize a character as appropriate, it generates a syntax error message and recovers at the next terminator.

Units

The analyzer can input and output data in basic units such as Hz, dB, seconds, etc.

S	Seconds	HZ	Hertz
V	Volts	DB	dB or dBm

Input data is assumed to be in basic units (see above) unless one of the following units is used (upper and lower case are equivalent):

MS	Milliseconds	KHZ	Kilohertz
US	Microseconds	MHZ	Megahertz
NS	Nanoseconds	GHZ	Gigahertz
PS	Picoseconds	FS	Femtoseconds

Command Formats

The GPIB commands accepted by the analyzer can be grouped into five input-syntax types. The analyzer does not distinguish between upper- and lower-case letters.

General Structure:

The general syntax structure is: [code][appendage][data][unit][terminator]

The individual sections of the syntax code are explained below.

- [code]** The root mnemonic (these codes are described in the [Chapter 1](#), “Alphabetical Command Reference.”)
- [appendage]** A qualifier attached to the root mnemonic. Possible appendages are ON or OFF (toggle a function on or off), or integers, which specify one capability out of several. There must be no spaces or symbols between the code and the appendage.
- [data]** A single operand used by the root mnemonic, usually to set the value of a function. The data can be a number or a character string. Numbers are accepted as integers or decimals, with power of ten specified by E (for example, STAR 0.2E+10; sets the start frequency to 2 GHz). Note the space between the root mnemonic and the operand. Character strings must be enclosed by double quotation marks.
- For example:*
- A title string using RMB BASIC would look like:
OUTPUT 716;"TITL""Unit1""";"
where the first two "" are an escape so that RMB BASIC will interpret the third "" properly.
- [unit]** The units of the operand, if applicable. If no units are specified, the analyzer assumes the basic units as described previously. The data is entered into the function when either units or a terminator are received.

[terminator] Indicates the end of the command, enters the data, and switches the active-entry area off. A semicolon (;) is the recommended terminator.

CAUTION Terminators are not necessary for the analyzer to interpret commands correctly. But in the event of a syntax error, the analyzer will attempt to recover at the next terminator. Therefore, it is recommended that each command include a terminator. The analyzer also interprets line feeds and GPIB end or identify (EOI) messages as terminators.

Syntax

Each command entry listed in [Chapter 1](#), “Alphabetical Command Reference,” includes the proper syntax for the command. The conventions used are as follows:

<num>	Required numerical data.
<choice1 choice2 ... choicen>	An appendage that is part of the command. For example, <code>FORMAT<DOS LIF></code> indicates that the actual commands are <code>FORMATDOS</code> and <code>FORMATLIF</code> .
<\$>	Indicates a character string operand which must be enclosed by double quotes.
	An either/or choice in appendages or optional data.
[]	Optional data.

Syntax Example For example, the following is provided as the syntax for the ATT command:

`ATT<A|B|P1|P2><num>[DB]; or ATT<A|B|P1|P2>?;`

If you are interested in the attenuation at port 1 of the analyzer, here are some of the commands you could use:

<code>ATTP120DB;</code>	<i>Sets the attenuation at port 1 to 20 dB.</i>
<code>ATTP120;</code>	<i>Also sets the attenuation at port 1 to 20 dB. (Note that the units, “DB,” are enclosed in square brackets, which designate optional information.)</i>
<code>ATTP1?;</code>	<i>Queries the analyzer for the current attenuation at port 1.</i>

Analyzer Operation

Held Commands

The analyzer cannot process GPIB commands while executing certain key commands known as “held” commands. For example, `SING;` is a held command because it requires the analyzer to take one sweep of data before executing any other commands.

Once a held command is received, the analyzer will read new commands into the input buffer, but it will not begin the execution of any commands until the completion of the held command. When the 15-character input buffer is full, the analyzer will put hold on the bus until it is able to process the commands in the buffer.

NOTE	Commands that call a calibration class are held if there is just one standard in the class, since such commands trigger a measurement.
-------------	--

Operation Complete

Occasionally, there is a need to know when certain analyzer operations have been completed. There is an operation-complete function (OPC) that allows a synchronization of programs with the execution of certain key commands. This mechanism is activated by issuing `OPC;` or `OPC?;` prior to an OPC-compatible command. The status byte or ESR operation-complete bit will then be set after the execution of the OPC-compatible command. For example, issuing `OPC;SING;` causes the OPC bit to be set when the single sweep is finished. Issuing `OPC?;` in place of `OPC;` causes the analyzer to output a one (1) when the command execution is complete. The analyzer will halt the computer by not transmitting the one (1) until the command has completed. For example, executing `OPC?;PRES;`, and then immediately querying the analyzer causes the bus to halt until the instrument preset is complete and the analyzer outputs a one (1).

As another example, consider the timing of sweep completion. Send the command string `SWET 3 S;OPC?;SING;` to the analyzer. This string sets the analyzer sweep time to 3 seconds, and then waits for completion of a single sweep to respond with a one (1). The computer should be programmed to read the number one (1) response from the analyzer indicating completion of the single sweep. At this point a valid trace exists and the trace data could be read into the computer.

For a list of OPC-compatible commands, refer to [Appendix B](#), “Command Listings.”

GPIB Operation

The general purpose interface bus (GPIB) is Agilent Technologies' hardware, software, documentation, and support for IEEE 488.2 and IEC-625 worldwide standards for interfacing instruments. This interface allows you to operate the analyzer and peripherals via two methods:

- with an external system controller
- with the network analyzer in system-controller mode

Device Types

The GPIB employs a party-line bus structure in which up to 15 devices can be connected on one bus. The interface consists of 16 signal lines and 8 ground lines within a shielded cable. With this cabling system, many different types of devices including instruments, computers, power meters, plotters, printers, and disk drives can be connected in parallel.

Every GPIB device must be capable of performing one or more of the following interface functions:

Talker

A "talker" is a device capable of transmitting device-dependent data when addressed to talk. There can be only one active talker at any given time. Examples of this type of device include:

- power meters
- disk drives
- voltmeters
- counters
- tape readers

The network analyzer performs as a talker when it sends trace data or marker information over the bus.

Listener

A listener is a device capable of receiving device-dependent data over the interface when addressed to listen. There can be as many as 14 listeners connected to the interface at any given time. Examples of this type of device include:

- printers
- power supplies
- signal generators

The network analyzer performs as a listener when it is controlled over the bus by a system controller.

Controller

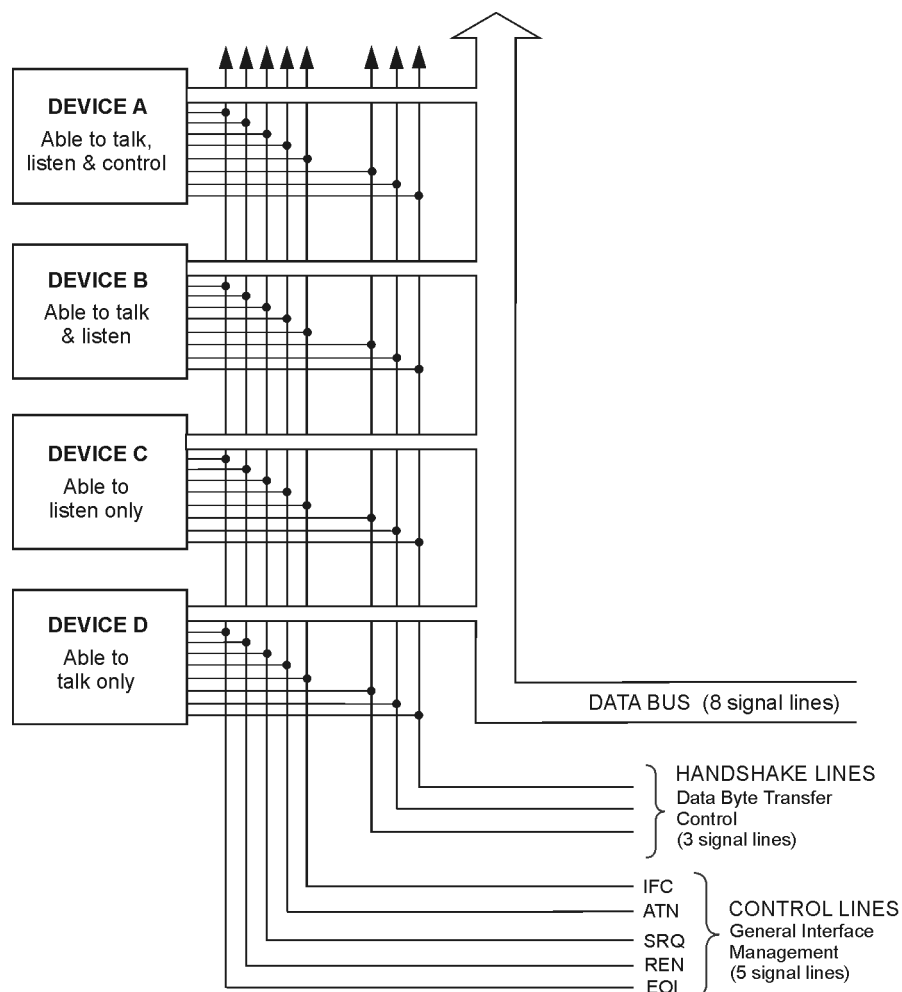
A controller is defined as a device capable of:

- managing the operation of the bus
- addressing talkers and listeners

There can only be one active controller on the interface at any time. Examples of controllers include desktop computers, minicomputers, workstations, and the network analyzer. In a multiple-controller system, active control can be passed between controllers, but there can only be one *system* controller connected to the interface. The system controller acts as the master and can regain active control at any time. The analyzer is an active controller when it plots, prints, or stores to an external disk drive in the pass-control mode. The analyzer is also a system controller when it is operating in the system controller mode.

GPIB Bus Structure

Figure 3-1 GPIB Bus Structure



cl54ets

Data Bus

The data bus consists of 8 bidirectional lines that are used to transfer data from one device to another. Programming commands and data transmitted on these lines are typically encoded in ASCII, although binary encoding is often used to speed up the transfer of large arrays. Both ASCII and binary data formats are available to the analyzer. In addition, every byte transferred over GPIB undergoes a handshake to insure valid data.

Handshake Lines

A three-line handshake scheme coordinates the transfer of data between talkers and listeners. To ensure data integrity in multiple-listener transfers, this technique forces data transfers to occur at the transfer rate of the slowest device connected to the interface. With most computing controllers and instruments, the handshake is performed automatically, making it transparent to the programmer.

Control Lines

The data bus also has five control lines. The controller uses these lines to address devices and to send bus commands.

IFC (Interface Clear) This line is used exclusively by the system controller. When this line is true (low), all devices (whether addressed or not) unaddress and revert to an idle state.

ATN (Attention) The active controller uses this line to define whether the information on the data bus is command-oriented or data-oriented. When this line is true (low), the bus is in the command mode, and the data lines carry bus commands. When this line is false (high), the bus is in the data mode, and the data lines carry device-dependent instructions or data.

SRQ (Service Request) This line is set true (low) when a device requests service and the active controller services the requesting device. The network analyzer can be enabled to pull the SRQ line for a variety of reasons such as requesting control of the interface, for the purposes of printing, plotting, or accessing a disk.

REN (Remote Enable) This line is used exclusively by the system controller. When this line is set true (low), the bus is in the remote mode, and devices are addressed by the controller to either listen or talk. When the bus is in remote mode and a device is addressed, it receives instructions from the system controller via GPIB rather than from its front panel (pressing **Local** returns the device to front-panel operation). When this line is set false (high), the bus and all of the connected devices return to local operation.

EOI (End or Identify) This line is used by a talker to indicate the last data byte in a multiple-byte transmission, or by an active controller to initiate a parallel-poll sequence. The analyzer recognizes the EOI line as a terminator, and it pulls the EOI line with the last byte of a message output (data, markers, plots, prints, error messages). The analyzer does not respond to parallel poll.

GPIB Requirements

Number of Interconnected Devices:

15 maximum.

Interconnection Path Maximum Cable Length:

20 meters maximum or 2 meters per device (whichever is less).

Message Transfer Scheme:

Byte serial, bit parallel asynchronous data transfer using a 3-line handshake system.

Data Rate:

Maximum of 1 megabyte-per-second over the specified distances with tri-state drivers. Actual data rate depends on the transfer rate of the slowest device connected to the bus.

Address Capability:

Primary addresses: 31 talk, 31 listen. A maximum of 1 talker and 14 listeners can be connected to the interface at given time.

Multiple-Controller Capability:

In systems with more than one controller (such as this instrument), only one controller can be active at any given time. The active controller can pass control to another controller, but only the system controller can assume unconditional control. Only one *system* controller is allowed.

GPIB Operational Capabilities

On the network analyzer's rear panel, next to the GPIB connector, there is a list of GPIB device subsets as defined by the IEEE 488.2 standard. The analyzer has the following capabilities:

SH1	Full-source handshake.
AH1	Full-acceptor handshake.
T6	Basic talker, answers serial poll, unaddresses if MLA is issued. No talk-only mode.
L4	Basic listener, unaddresses if MTA is issued. No listen-only mode.
SR1	Complete service request (SRQ) capabilities.
RL1	Complete remote/local capability including local lockout.
PP0	Does not respond to parallel poll.
DC1	Complete device clear.
DT1	Responds to a Group Execute Trigger (GET) in the hold-trigger mode.
C1,C2,C3	System controller capabilities in system-controller mode.
C10	Pass control capabilities in pass-control mode.
E2	Tri-state drivers.
LE0	No extended listener capabilities.
TE0	No extended talker capabilities.

These codes are completely explained in the IEEE Std 488 documents, published by:

The Institute of Electrical and Electronic Engineers, Inc.
345 East 47th Street
New York, New York 11017

Or, visit their Web site at <http://standards.ieee.org>

GPIB Status Indicators

When the analyzer is connected to other instruments over the GPIB, the GPIB status indicators illuminate to display the current status of the analyzer. The GPIB status indicators are located in the instrument-state function block on the front panel of the network analyzer.

R = Remote Operation

L = Listen mode

T = Talk mode

S = Service request (SRQ) asserted by the analyzer

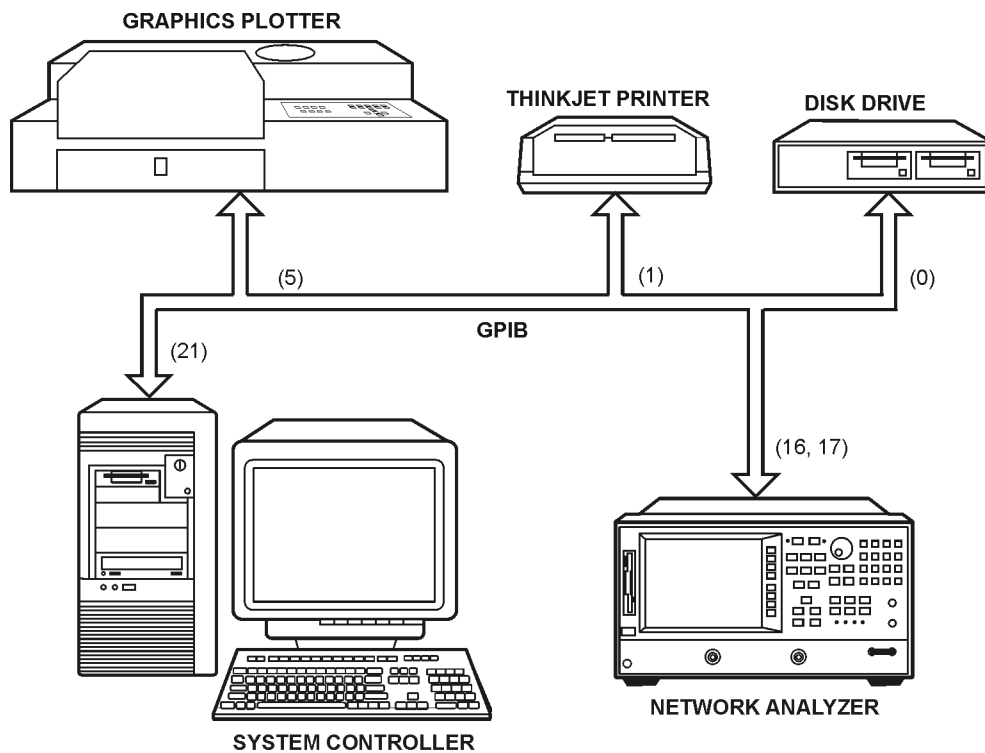
Bus Device Modes

The analyzer uses a single-bus architecture. The single bus allows both the analyzer and the host controller to have complete access to the peripherals in the system.

Three different controller modes are possible in an GPIB system:

- system-controller mode
- talker/listener mode
- pass-control mode

Figure 3-2 Analyzer Single Bus Concept



System-Controller Mode

This mode allows the analyzer to control peripherals directly in a stand-alone environment (without an external controller). This mode must be selected manually from the analyzer's front panel. It can only be used if no active computer or instrument controller is connected to the system via GPIB. If an attempt is made to set the network analyzer to the system-controller mode when another controller is connected to the interface, the following message is displayed on the analyzer's display screen:

"ANOTHER SYSTEM CONTROLLER ON GPIB BUS"

The analyzer must be set to the system-controller mode in order to access peripherals from the front panel. In this mode, the analyzer can directly control peripherals (plotters, printers, disk drives, power meters, etc.) and the analyzer may plot, print, store on external disk or perform power meter functions.

NOTE Do not attempt to use this mode for programming. Agilent recommends using an external instrument controller when programming. See the following section, “[Talker/Listener Mode](#).”

Talker/Listener Mode

This is the mode that is normally used for remote programming of the analyzer. In talker/listener mode, the analyzer and all peripheral devices are controlled from an external instrument controller. The controller can command the analyzer to talk and other devices to listen. The analyzer and peripheral devices cannot talk directly to each other unless the computer sets up a data path between them. This mode allows the analyzer to act as either a talker or a listener, as required by the controlling computer for the particular operation in progress.

Pass-Control Mode

This mode allows the computer to control the analyzer via GPIB (as with the talker/listener mode), but also allows the analyzer to take control of the interface in order to plot, print, or access a disk. During an analyzer-controlled peripheral operation, the host computer is free to perform other internal tasks (i.e. data or display manipulation) while the analyzer is controlling the bus. After the analyzer-controlled task is completed, the analyzer returns control to the system controller.

NOTE Performing an instrument preset does not affect the selected bus mode, although the bus mode will return to talker/listener mode if the line power is cycled. To set the bus mode from the front panel, use the **Local** key.

Analyzer Bus Modes

As discussed earlier, under GPIB control, the analyzer can operate in one of three modes: talker/listener, pass-control, or system-controller mode.

In talker/listener mode, the analyzer behaves as a simple device on the bus. While in this mode, the analyzer can make a plot or print using the **OUTPLOT**; or **OUTPPRIN**; commands. The analyzer will wait until it is addressed to talk by the system controller and then dump the display to a plotter/printer that the system controller has addressed to listen. Use of the commands **PLOT**; and **PRINALL**; require control to be passed to another controller.

In pass-control mode, the analyzer can request control from the system controller and take control of the bus if the controller addresses it to take control. This allows the analyzer to take control of printers, plotters, and disk drives on an as-needed basis. The analyzer sets event-status register bit 1 when it needs control of the interface, and the analyzer will transfer control back to the system controller at the completion of the operation. It will pass control back to its controller address, specified by **ADDRCONT**.

The analyzer can also operate in the system-controller mode. This mode is only used when there is no remote controller on the bus. In this mode, the analyzer takes control of the bus, and uses it whenever it needs to access a peripheral. While the analyzer is in this mode, no other devices on the bus can attempt to take control. Specifically, the REN, ATN, and IFC lines must remain unasserted, and the data lines must be freed by all but the addressed talker.

Setting GPIB Addresses

In systems interfaced using GPIB, each instrument on the bus is identified by an GPIB address. This address code must be different for each instrument on the bus. These addresses are stored in short-term, non-volatile memory and are not affected when you press **Preset** or cycle the power. The analyzer occupies two GPIB addresses: the instrument itself and the display. The display address is derived from the instrument address by complementing the instrument's least-significant bit. Hence, if the instrument is at an even address, the display occupies the next higher address. If the instrument is at an odd address, the display occupies the next lower address.

The analyzer addresses are set by pressing **Local** **SET ADDRESSES**. In system-controller mode, the addresses must be set for the plotter, printer, disk drive, and power meter.

The default address for the analyzer is device 16, and the display address is device 17.

NOTE	There is also an address for the system controller. This address refers to the controller when the network analyzer is being used in pass-control mode. This is the address that control is passed back to when the analyzer-controlled operation is complete.
-------------	--

Response to GPIB Meta-Messages (IEEE-488 Universal Commands)

Abort

The analyzer responds to the abort message (IFC) by halting all listener, talker, and controller functions.

Device Clear

The analyzer responds to the device clear commands (DCL, SDC) by clearing the input and output queues, and clearing any GPIB errors. The status registers and the error queue are unaffected.

Local

The analyzer will go into local mode if the local command (GTL) is received, the remote line is unasserted, or the front-panel local key is pressed. Changing the analyzer's GPIB status from remote to local does not affect any of the front-panel functions or values.

Local Lockout

If the analyzer receives the local-lockout command (LLO) while it is in remote mode, it will disable the entire front panel except for the line power switch. A local-lockout condition can only be cleared by releasing the remote line, although the local command (GTL) will place the instrument temporarily in local mode.

Parallel Poll

The analyzer does not respond to parallel-poll configure (PPC) or parallel-poll unconfigure (PPU) messages.

Pass Control

If the analyzer is in pass-control mode, is addressed to talk, and receives the take-control command (TCT), from the system control it will take active control of the bus. If the analyzer is not requesting control, it will immediately pass control to the system controller's address. Otherwise, the analyzer will execute the function for which it sought control of the bus and then pass control back to the system controller.

Remote

The analyzer will go into remote mode when the remote line is asserted and the analyzer is addressed to listen. While the analyzer is held in remote mode, all front-panel keys (with the exception of **Local**) are disabled. Changing the analyzer's GPIB status from remote to local does not affect any front-panel settings or values.

Serial Poll

The analyzer will respond to a serial poll with its status byte, as defined in [“Status Reporting” on page 6-3](#). To initiate the serial-poll sequence, address the analyzer to talk and issue a serial-poll enable command (SPE). Upon receiving this command, the analyzer will return its status byte. End the sequence by issuing a serial-poll disable command (SPD). A serial poll does not affect the value of the status byte, and it does not set the instrument to remote mode.

Trigger

In hold mode, the analyzer responds to device trigger by taking a single sweep. The analyzer responds only to selected-device trigger (SDT). This means that it will not respond to group execute-trigger (GET) unless it is addressed to listen. The analyzer will not respond to GET if it is not in hold mode.

IEEE 488.2 Common Commands

IEEE 488.2 defines a set of common commands. All instruments are required to implement a subset of these commands, specifically those commands related to status reporting, synchronization and internal operations. The rest of the common commands are optional. The following list details which of these IEEE 488.2 common commands are implemented in the analyzer and the response of the analyzer when the command is received.

*CLS	Clears the instrument Status Byte by emptying the error queue and clearing all event registers, also cancels any preceding *OPC command or query (does not change the enable registers or transition filters).
*ESE <num>	Sets bits in the Standard Event Status Enable Register — current setting is saved in non-volatile memory.
*ESE?	Reads the current state of the Standard Event Status Enable Register.
*ESR?	Reads and clears the current state of the Standard Event Status Register.
*IDN?	Returns a string that uniquely identifies the analyzer. The string is of the form: HEWLETT PACKARD, 87NNE, 0, X.XX where 87NNE is the model number of the instrument and X.XX is the firmware revision of the instrument.
*LRN?	This returns a string of device specific characters that, when sent back to the analyzer will restore the instrument state active when *LRN? was sent. Data formatting (ENTER USING "-K" in HP BASIC) or a similar technique should be used to ensure that the transfer does not terminate on a carriage return or line feed (both <C _R > and <L _F > are present in the learn string as part of the data).
*OPC	Operation complete command. The analyzer will generate the OPC message in the Standard Event Status Register when all pending overlapped operations have been completed (e.g. a sweep, or a preset).
*OPC?	Operation complete query. The analyzer will return an ASCII "1" when all pending overlapped operations have been completed.
*PCB <num>	Sets the pass-control-back address (the address of the controller before a pass control is executed).
*RST	Executes a device reset and cancels any pending *OPC command or query.
*SRE <num>	Sets bits in the Service Request Enable Register. Current setting is saved in non-volatile memory.
*SRE?	Reads the current state of the Service Request Enable Register.
*STB?	Reads the value of the instrument Status Byte. This is a non-destructive read—the Status Byte is cleared by the *CLS command.

- *TST? Returns the result of a complete self-test. An ASCII 0 indicates no failures found. Any other character indicates a specific self-test failure. Does not perform any self-tests. See your analyzer's service guide for further information.
- *WAI Prohibits the instrument from executing any new commands until all pending overlapped commands have been completed.

Calibration

Measurement calibration over GPIB follows the same command sequence as a calibration from the front-panel. For detailed information on measurement calibration, refer to your analyzer's user's guide.

1. Start by selecting a calibration kit, such as 50 ohm type-N (CALKN50;).
2. Select a calibration type, such as S11 1-port (CALIS111;).
3. Call each class used by the calibration type, such as FORWARD: OPEN (CLASS11A;). During a 2-port calibration, the reflection, transmission, and isolation subsequences must be opened before the classes in the subsequence are called, and then closed at the end of each subsequence.
4. If a class has more than one standard in it, select a standard from the menu presented (STANA to STANG).
5. If, during a calibration, two standards are measured to satisfy one class, the class must be closed with DONE;.
6. Declare the calibration done, such as with DONE 1-PORT CAL (SAV1;).

The STANA to STANG commands will hold off the GPIB until completion because they trigger a sweep. If a class has only one standard in it, which means that it will trigger a sweep when called, the class command will also hold off the GPIB.

NOTE Since different cal kits can have a different number of standards in a given class, any automated calibration sequence is valid only for a specific cal kit.

Table 3-2 Relationship between Calibrations and Classes

Class	Response	Response & Isolation	S11 1-port	S22 1-port	One path 2-port	Full 2-port	TRL/ LRM	Fwd Enh Resp	Rev Enh Resp
Reflection: ¹					•	•	•	•	•
S11A, RE FW MTCH			•		•	•	•	•	
S11B, LN FW MTCH			•		•	•	•	•	
S11C, LN FW TRAN			•		•	•	•	•	
S22A, LN RV MTCH				•		•	•		•
S22B, LN RV TRAN				•		•	•		•
S22C, LN RV TRAN				•		•	•		•
Transmission: ¹					•	•	•	•	•
Forward match					•	•	•	•	
Forward trans					•	•	•	•	
Reverse match						•	•		•
Reverse trans						•	•		•
Isolation: ¹					•	•	•	•	•
Forward					•	•	•	•	
Reverse						•	•		•
Response	•								
Response and isolation:									
Response		•							
Isolation		•							
TRL thru: ²							•		
TRL reflect: ²							•		
TRL line or match ² :							•		

1. These subheadings must be called when doing full 2-port calibrations.

2. These subheadings must be called when doing TRL 2-port calibrations

Table 3-3 Error Coefficient Arrays

Array	Response	Response and Isolation	1-port	Enhanced Response	2-port ¹	TRL/LRM
01	E_R or E_T	$E_X (E_D)^2$	E_D	E_D	E_{DF}	E_{DF}
02		$E_T (E_R)$	E_S	E_S	E_{SF}	E_{SF}
03			E_R	E_R	E_{RF}	E_{RF}
04				E_X	E_{XF}	E_{XF}
05				E_L^3	E_{LF}	E_{LF}
06				E_T	E_{TF}	E_{TF}
07					E_{DR}	E_{DR}
08					E_{SR}	E_{SR}
09					E_{RR}	E_{RR}
10					E_{XR}	E_{XR}
11					E_{LR}	E_{LR}
12					E_{TR}	E_{TR}

1. One path, 2-port cal duplicates arrays 1 to 6 in arrays 7 to 12.
2. Response and isolation corrects for crosstalk and transmission tracking in transmission measurements, and for directivity and reflection tracking in reflection measurements.
3. This term is used to generate the calibration coefficients, but is not used during measurement error correction.

Meaning of first subscript:

D: directivity
S: source match
R: reflection tracking
X: crosstalk or isolation
L: load match
T: transmission tracking

Meaning of second subscript:

F: forward
R: reverse

Display Graphics

User Graphics Units

Size of graticule only:

- length = 350 to 4915
- height = 150 to 3950

Size of complete display (graticule plus annotation and softkey labels)

- length = 0 to 5850
- height = 0 to 4095

HP-GL Commands

AF

Erases the user graphics display.

CS

Turns off the measurement display.

Drun,rise

Specifies the direction in which characters are lettered.

run,rise	Direction
1,0	0 degrees
0,1	90 degrees
-1,0	180 degrees
0,-1	270 degrees

DF

Sets the default values.

LB<text><etx>

Labels the display, placing the symbols starting at the current pen position. All incoming characters are printed until the etx symbol is received. The default etx symbol is the ASCII value 3 (not the character 3).

LTa

Specifies line type:

a	line type
0	solid
1	solid
2	short dashes
3	long dashes

OP

Outputs P1 and P2, the scaling limits: 0,0,5850,4095.

PAx,y

Draws from the current pen position to x,y. There can be many pairs of x,y coordinates within one command. They are separated by commas, and the entire sequence is terminated with a semicolon.

PD

Pen down. A line is drawn only if the pen is down.

PG

Erases the user graphics display.

PRx,y

Plot relative: draws a line from the current pen position to a position y up and x over.

PU

Pen up. Stops anything from being drawn.

RS

Turns on the measurement display.

SIh,w

Sets the character size, for height h and width w in centimeters:

h	w	char size
0.16	0.20	smallest
0.25	0.30	
0.33	0.39	
0.41	0.49	largest

SPn

Selects pen n:

n	brightness
0	blank
1	yellow
2	green
3	light blue
4	light red
5	white
6	red
7	blue

Accepted but ignored HP-GL commands

Command	Description
IM	Input service request mask
IP	Input P1,P2 scaling points
IW	Input window
OC	Output current pen position
OE	Output error
OI	Output identity
OS	Output status
SL	Character slant
SR	Relative character size

Disk File Names

Disk files created by the analyzer consist of a state name of up to eight characters, such as “FILTER,” appended with up to two characters. In LIF format, the file name is “FILTERXX.” In DOS format, the filename is “FILTER.XX.” The first appended character is the file type, telling the kind of information in the file. The second appended character is a data index, used to distinguish files of the same type.

Error-corrected data, raw data, formatted data, memory traces, and calibration files are FORM 3 data files (IEEE 64-bit floating point format). The other files are not meant to be decoded. [Table 3-4](#) lists the appended characters and their meanings.

Table 3-4 File Suffix Character Meaning

Char 1	Meaning	Char 2	Meaning
I, P	Instrument state		
W	Four-channel instrument state		
G	Graphics	1	Display graphics
D	Error-corrected data	1 2 3 4	Channel 1 Channel 2 Channel 3 Channel 4
		2	Channel 2
R	Raw data	1 to 4	Channel 1/Channel 3, raw arrays 1 to 4
		5 to 8	Channel 2/Channel 4, raw arrays 1 to 4
F	Formatted data	1 2 3 4	Channel 1 Channel 2 Channel 3 Channel 4
M	Memory trace	1 2 3 4	Channel 1 Channel 2 Channel 3 Channel 4
C	Cal kit	K	
1	Cal data, channel 1	O 1 to 9 A B C	Stimulus state Coefficients 1 to 9 Coefficient 10 Coefficient 11 Coefficient 12
2	Cal data, channel 2	0 to C	Same as channel 1

Table 3-4 File Suffix Character Meaning

Char 1	Meaning	Char 2	Meaning
F	Full page (HP-GL plot)	P	
L	Left (HP-GL plot)	L U	Lower Upper
R	Right (HP-GL plot)	L U	Lower Upper
S	Error-corrected data (S2P)	1 2	Channel 1 Channel 2

4 Reading Analyzer Data

Output Queue

Whenever an output-data command is received, the analyzer puts the data into the output queue (or buffer) where it is held until the system controller outputs the next read command. The queue, however, is only one event long: the next output-data command will overwrite the data already in the queue. Therefore, it is important to read the output queue immediately after every query or data request from the analyzer.

Command Query

All instrument functions can be queried to find the current on/off state or value. For instrument state commands, append the question mark character (?) to the command to query the state of the functions. Suppose the operator has changed the power level from the analyzer's front panel. The computer can ascertain the new power level using the analyzer's command-query function. If a question mark is appended to the root of a command, the analyzer will output the value of that function. For instance, `POWE 7DB;` sets the source power to 7 dB, and `POWE?;` outputs the current RF source power at the test port. When the analyzer receives `POWE?;`, it prepares to transmit the current RF source power level. This condition illuminates the analyzer front-panel talk light (T). In this case, the analyzer transmits the output power level setting to the controller.

On/off commands can also be queried. The reply is a one (1) if the function is on, or a zero (0) if it is off. For example, if a command controls an active function that is underlined on the analyzer display, querying that command yields a one (1) if the command is underlined or a zero (0) if it is not. As another example, there are nine options on the format menu and only one option is underlined at a time. Only the underlined option will return a one when queried.

For instance, send the command string `DUAC?;` to the analyzer. If dual-channel display is switched on, the analyzer will return a one (1) to the instrument controller.

Similarly, to determine if phase is being measured and displayed, send the command string `PHAS?;` to the analyzer. In this case, the analyzer will return a one (1) if phase is currently being displayed. Since the command only applies to the active channel, the response to the `PHAS?;` query depends on which channel is active.

Identification

The analyzer's response to `IDN?;` is "HEWLETT PACKARD,87NNEX,xxxxxxxxxx,X.XX" where 87NNEX is the model number of the instrument, xxxxxxxxxxxx is the serial number, and X.XX is the firmware revision of the instrument.

The analyzer also has the capability to output its serial number with the command `OUTPSERN;`, and to output its installed options with the command `OUTPOPTS;`.

Output Syntax

The following three types of data are transmitted by the analyzer in ASCII format:

- response to query
- certain output commands
- ASCII floating-point (FORM4) array transfers

Marker-output commands and queried commands are output in ASCII format only, meaning that each character and each digit is transmitted as a separate byte, leaving the receiving computer to reconstruct the numbers and strings. Numbers are transmitted as 24-character strings, consisting of:

Figure 4-1 FORM4 (ASCII) Data-Transfer Character String



cl57ets

Sign	'-' for negative, blank for positive.
3 digits	Digits to the left of the decimal point.
Decimal Point	Standard decimal point.
15 digits	Digits to the right of the decimal point.
E	Exponent notation.
Sign (in exponent)	'-' for negative, '+' for positive.
Exponent	Two digits for the exponent.

When multiple numbers are sent, the numbers are separated by commas. When number pairs are sent, the numbers are separated by a comma and terminated with a line feed, $\langle L_F \rangle$.

Marker Data

The analyzer offers several options for outputting trace-related data. Data can be selectively read from the trace using the markers, or the entire trace can be read by the controller. If only specific information is required (such as a single point on the trace or the result of a marker search), the marker output command can be used to read the information. Specific data points can be read using the OUTPDATP or OUTPDATR commands. These commands allow a much faster data transfer than when using markers to output specific data points. For more information on these commands, see [“Limit Line and Data Point Special Functions” on page 7-126](#).

A marker must first be assigned to the desired frequency before it can be used to read the trace data. This is accomplished using the marker commands. The controller sends a marker command followed by a frequency within the trace-data range. If the actual desired frequency was not sampled, the markers can be set to continuous mode and the desired marker value will be linearly interpolated from the two nearest points. This interpolation can be prevented by putting the markers into discrete mode. Discrete mode allows the marker to only be positioned on a measured trace-data point.

As an alternative, the analyzer can be programmed to choose the stimulus value by using the **Marker Search** functions. Maximum, minimum, target value, or bandwidth search can be automatically determined with **Marker Search** functions. To continually update the search, switch the marker tracking on. The trace-value search will remain activated until one of the following occurs:

- The search is switched off.
- The tracking is switched off.
- All markers are switched off.

Marker data can be output to a controller by using analyzer commands. These commands cause the analyzer to transmit three numbers: marker value 1, marker value 2, and marker stimulus value. For example, in log-magnitude display mode we get the log magnitude at the marker (value 1), zero (value 2), and the marker frequency. See [Table 4-1](#) for a complete listing of all the possibilities for values 1 and 2. The four possibilities for the marker stimulus value are:

- frequency
- time (as in time domain, Option 010 only)
- CW time
- power (in power sweep mode)

Table 4-1 Units as a Function of Display Format

Display Format	Marker Mode	OUTPMARK		OUTPFORM		Marker Readout ¹	
		Value 1	Value 2	Value 1	Value 2	Value	Aux Value
LOG MAG		dB	N/S ²	dB	N/S ²	dB	N/S
PHASE		degrees	N/S ²	degrees	N/S ²	degrees	N/S
DELAY		seconds	N/S ²	seconds	N/S ²	seconds	N/S
SMITH CHART	LIN MKR	lin mag	degrees	real	imag	lin mag	degrees
	LOG MKR	dB	degrees	real	imag	dB	degrees
	Re/Im	real	imag	real	imag	real	imag
	R + jX	real ohms	imag ohms	real	imag	real ohms	imag ohms
	G + jB	real Siemens	imag Siemens	real	imag	real Siemens	imag Siemens
POLAR	LIN MKR	lin mag	degrees	real	imag	lin mag	degrees
	LOG MKR	dB	degrees	real	imag	dB	degrees
	Re/Im	real	imag	real	imag	real	imag
LIN MAG		lin mag	N/S ²	lin mag	N/S ²	lin mag	N/S
SWR		SWR	N/S ²	SWR	N/S ²	SWR	N/S
REAL		real	N/S ²	real	N/S ²	real	N/S
IMAGINARY		imag	N/S ²	imag	N/S ²	imag	N/S

1. The marker readout values are the marker values displayed in the upper right-hand corner of the display. They also correspond to the value and auxiliary value associated with the fixed marker.
2. Value 2 is not significant in this format, though it is included in data transfers. See also [“Fast Data Transfer Commands” on page 5-5](#).

Array-Data Formats

The analyzer can transmit and receive arrays in the analyzer's internal binary format as well as four different numeric formats. The current format is set with the **FORM1**, **FORM2**, **FORM3**, **FORM4**, and **FORM5** commands. These commands do not affect learnstring transfers, calibration-kit string transfers, or non-array transfers, such as command query, or output marker values.

A transmitted array will be output in the current format, and the analyzer will attempt to read incoming arrays according to the current format. Each data point in an array is a pair of numbers, usually a real/imaginary pair. The number of data points in each array is the same as the number of points in the current sweep.

The five formats are described below:

- | | |
|--------------|--|
| FORM1 | The analyzer's internal binary format, 6 bytes-per-data point. The array is preceded by a four-byte header. The first two bytes represent the string "#A", the standard block header. The second two bytes are an integer representing the number of bytes in the block to follow. FORM1 is best applied when rapid data transfers, not to be modified by the computer nor interpreted by the user, are required. |
| FORM2 | IEEE 32-bit floating-point format, 4 bytes per number, 8 bytes-per-data point. The data is preceded by the same header as in FORM1. Each number consists of a 1-bit sign, an 8-bit biased exponent, and a 23-bit mantissa. FORM2 is the format of choice if your computer is not a PC, but supports single-precision floating-point numbers. |
| FORM3 | IEEE 64-bit floating-point format, 8 bytes per number, 16 bytes-per-data point. The data is preceded by the same header as in FORM1. Each number consists of a 1-bit sign, an 11-bit biased exponent, and a 52-bit mantissa. This format may be used with double-precision floating-point numbers. No additional precision is available in the analyzer data, but FORM3 may be a convenient form for transferring data to your computer. |
| FORM4 | ASCII floating-point format. The data is transmitted as ASCII numbers, as described previously in "Output Syntax" on page 4-3 . There is no header. The analyzer always uses FORM4 to transfer data that is not related to array transfers (i.e. marker responses and instrument settings). |
| FORM5 | PC-DOS 32-bit floating-point format with 4 bytes-per-number, 8 bytes-per-data point. The data is preceded by the same header as in FORM1. The byte order is reversed with respect to FORM2 to comply with PC-DOS formats. If you are using a PC-based controller, FORM5 is the most effective format to use. |

The analyzer terminates each transmission by asserting the EOI interface line with the last byte transmitted. [Table 4-2](#) offers a comparative overview of the five array-data formats.

Table 4-2 Network Analyzer Array-Data Formats

Format Type	Type of Data	Bytes per Data Value	Bytes per point 2 data values	(201 pts) Bytes per trace	Total Bytes with header
FORM 1	Internal Binary	N/A	6	1206	1210
FORM 2	IEEE 32-bit Floating-Point	4	8	1608	1612
FORM 3	IEEE 64-bit Floating-Point	8	16	3216	3220
FORM 4	ASCII Numbers	24 (Typical)	50 (Typical)	10,050 (Typical)	10,050 ¹ (Typical)
FORM 5	PC-DOS 32-bit Floating-Point	4	8	1608	1612

1. FORM4 does not use a header.

Trace-Data Transfers

Transferring trace-data from the analyzer using an instrument controller can be divided into three steps:

1. Allocating an array to receive and store the data
2. Commanding the analyzer to transmit the data
3. Accepting the transferred data

Data residing in the analyzer is always stored in pairs for each data point (to accommodate real/imaginary pairs). Hence, the receiving array must be two elements wide, and as deep as the number of points in the array being transferred. Memory space for the array must be declared before any data can be transferred from the analyzer to the computer.

As mentioned earlier, the analyzer can transmit data over GPIB in five different formats. The type of format affects what kind of data array is declared (real or integer), because the format determines what type of data is transferred. Programming examples of data transfers using different formats are discussed in [“Measurement Data Transfer Examples” on page 7-56](#). For information on the various types of data that can be obtained (raw data, error-corrected data, etc.), see [“Data Levels” on page 5-6](#).

For information on transferring trace-data by selected points, see [“Limit Line and Data Point Special Functions” on page 7-126](#).

NOTE	“Example 7F: Reading ASCII Disk Files to the Instrument Controller's Disk File” on page 7-118 explains how to access disk files from a computer.
-------------	--

Stimulus-Related Values

Frequency-related values are calculated for the analyzer display. The start and stop frequencies or center and span frequencies of the selected frequency range are available to the programmer.

In a linear frequency range, the frequency values can be easily calculated because the trace data points are equally spaced across the trace. Relating the data from a linear frequency sweep to frequency can be done by querying the start frequency, the frequency span, and the number of points in the trace.

Given that information, the frequency of point n in a linear-frequency sweep is represented by the equation:

$$F = \text{StartFrequency} + (n - 1) \times \frac{\text{Span}}{(\text{Points} - 1)}$$

In most cases, this is an easy solution for determining the related frequency value that corresponds with a data point. This technique is illustrated in [“Example 3B: Data Transfer Using FORM 4 \(ASCII Transfer\)” on page 7-59](#).

When using log sweep or a list-frequency sweep, the points are not evenly spaced over the frequency range of the sweep. In these cases, an effective way of determining the frequencies of the current sweep is to use the OUTPLIML command. Although this command is normally used for limit lines, it can also be used to identify all of the frequency points in a sweep. Limit lines do not need to be on in order to read the frequencies directly out of the instrument with the OUTPLIML command. Refer to [“Example 3D: Data Transfer Using Frequency-Array Information” on page 7-64](#).

NOTE	Another method of identifying all of the frequency points in a sweep is to use the marker commands MARKBUCK<num> and OUTPMARK in a “FOR NEXT” programming loop that corresponds to the number of points in the sweep. MARKBUCK<num> places a marker at a point in the sweep, where <num> is the number of the point in a sweep, and OUTPMARK outputs the stimulus value as part of the marker data.
-------------	---

5 Data Processing Chain

Using This Chapter

This chapter describes the manner in which the analyzer processes measurement data. Measurement data processes include:

- [“Data Arrays” on page 5-3](#)
- [“Common Output Commands” on page 5-4](#)
- [“Fast Data Transfer Commands” on page 5-5](#)
- [“Data Levels” on page 5-6](#)
- [“Learn String and Calibration-Kit String” on page 5-7](#)

NOTE Refer to [“OUTP” on page 1-154](#) for detailed information (such as proper syntax) for the output commands discussed in this chapter.

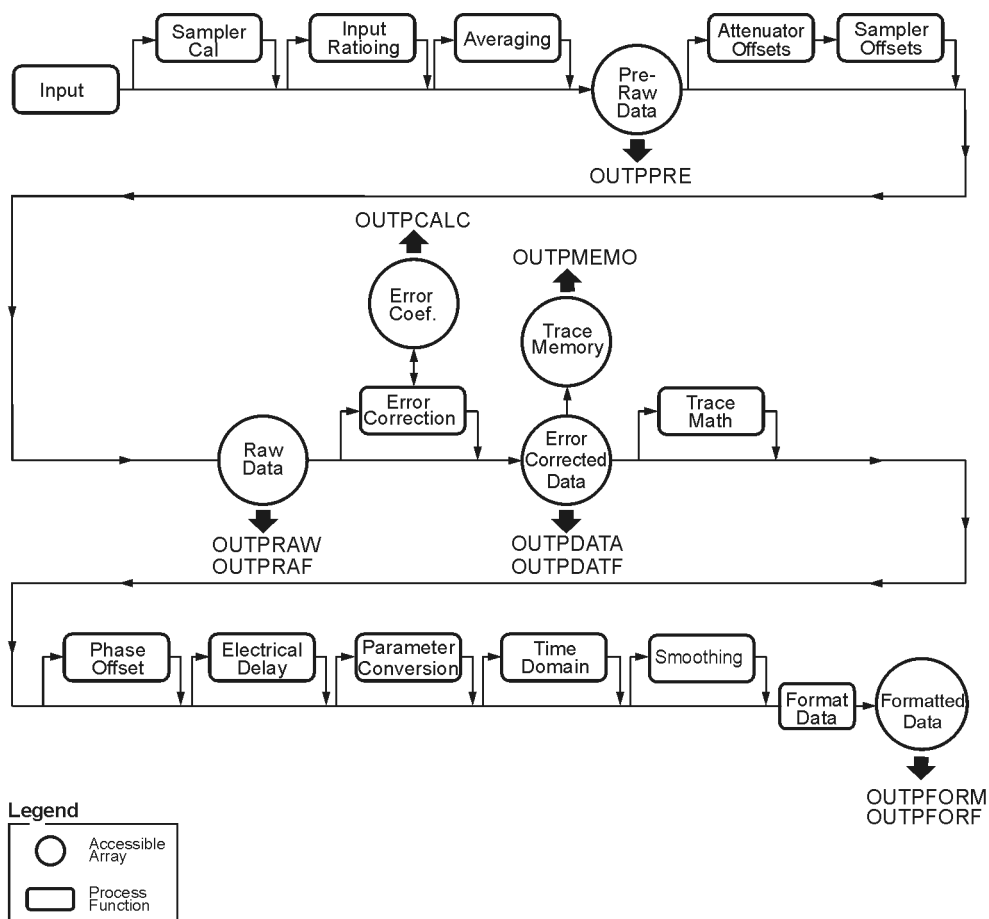
Data Arrays

Figure 5-1 shows the different kinds of data available within the instrument:

- pre-raw measured data
- raw measured data
- error-corrected data
- formatted data
- trace memory
- calibration coefficients

Trace memory can be directly output to a controller with OUTPMEMO;, but it cannot be directly transmitted back.

Figure 5-1 The Data-Processing Chain For Measurement Outputs



qg61e

Common Output Commands

All the data-output commands are designed to insure that the data transmitted reflects the current state of the instrument:

- OUTPDATA, OUTPRAW, OUTPFORM, OUTPDATF, OUTPRAF and OUTPFORF will not transmit data until all formatting functions have completed.
- OUTPPRE transmits data in conjunction with Take4 mode and the SWPSTART command. Refer to [“Example 2G: Take4 — Error Correction Processed on an External PC” on page 7-48.](#)
- OUTPLIML, OUTPLIMM, and OUTPLIMF will not transmit data until the limit test has occurred (if activated).
- OUTPMARK will activate a marker if a marker is not already selected. It will also insure that any current marker searches have been completed before transmitting data.
- OUTPMSTA ensures that the statistics have been calculated for the current trace before transmitting data. If the statistics are not activated, it will activate the statistics long enough to update the current values before deactivating the statistics.
- OUTPMWID ensures that a bandwidth search has been executed for the current trace before transmitting data. If the bandwidth-search function is not activated, it will activate the bandwidth-search function long enough to update the current values before switching off the bandwidth-search functions.

Fast Data Transfer Commands

The analyzer has four distinct fast data transfer commands. These commands circumvent the internal “byte handler” routine and output trace dumps as block data. In other words, the analyzer outputs the entire array without allowing any process swapping to occur. FORM4, ASCII data transfer times are not affected by these routines. However, there are speed improvements with binary data formats. The following is a description of the four fast data transfer commands:

- **OUTPDATF** outputs the error corrected data from the active channel in the current output format. This data may be input to the analyzer using the **INPUDDATA** command.
- **OUTPFORF** outputs the formatted display trace array from the active channel in the current output format. Only the first number in each of the **OUTPFORF** data pairs is actually transferred for the display formats LOG MAG, PHASE, group DELAY, LIN MAG, SWR, REAL and IMAGinary. Because the data array does not contain the second value for these display formats, the **INPUFORM** command may not be used to re-input the data back into the analyzer. The second value may not be significant in some display formats (see [Table 4-1 on page 4-5](#)) thus reducing the number of bytes transferred.
- **OUTPMEMF** outputs the memory trace from the active channel. The data is in real/imaginary pairs, and, as such, may be input back into the memory trace using **INPUDDATA** or **INPUFORM** followed by the **DATI** command.
- **OUTPRAF** outputs the raw measurement data trace. The data may be input back into the memory trace using the **INPURAW** command.

Data Levels

Different levels of data can be read out of the instrument. Refer to the data-processing chain in [Figure 5-1](#). The following sections describe the different types of data that are available from the network analyzer.

Pre-Raw Data

This is the raw data without sampler correction or attenuator offsets applied. With raw offsets turned off, the calibration coefficients generated can be transferred to an external controller and used with the data gathered using the OUTPPRE commands. Refer to [“Example 2G: Take4 — Error Correction Processed on an External PC” on page 7-48](#). If a 2-port measurement calibration is active, or Take4 mode is on, the four arrays refer to S_{11} , S_{21} , S_{12} , and S_{22} respectively. This data is represented in real/imaginary pairs.

Raw Data

The basic measurement data, reflecting the stimulus parameters, IF averaging, and IF bandwidth. If a full 2-port measurement calibration is activated, there are actually four raw arrays kept: one for each raw S-parameter. The data can be output to a controller with the OUTPRAW commands. Normally, only raw 1 is available, and it holds the current parameter. If a 2-port measurement calibration is active, the four arrays refer to S_{11} , S_{21} , S_{12} , and S_{22} respectively. This data is represented in real/imaginary pairs.

Error Coefficients

The results of a measurement calibration are arrays containing error coefficients. These error coefficients are then used in the error-correction routines. Each array corresponds to a specific error term in the error model. Your analyzer's user's guide details which error coefficients are used for specific calibration types, as well as the arrays those coefficients can be found in. Not all calibration types use all 12 arrays. The data is stored as real/imaginary pairs.

Error-Corrected Data

This is the raw data with error-correction applied. The array represents the currently measured parameter, and is stored in real/imaginary pairs. The error-corrected data can be output to a controller with the OUTPDATA; command. The OUTPMEMO; command reads the trace memory, if available. The trace memory also contains error-corrected data. Note that neither raw nor error-corrected data reflect such post-processing functions as electrical-delay offset, trace math, or time-domain gating.

Formatted Data

This is the array of data actually being displayed. It reflects all post-processing functions such as electrical delay and time domain. The units of the array output depend on the current display format. See [Table 4-1 on page 4-5](#) for the various units defined as a function of display format.

Generally, formatted data is the most useful of the five data levels, because it is the same information the operator sees on the display. However if post-processing is unnecessary (such as in some cases involving smoothing), error-corrected data may be more desirable. Error-corrected data also affords the user the opportunity to input the data to the network analyzer and apply post-processing at another time.

Learn String and Calibration-Kit String

The learn string is a summary of the instrument state. It includes all the front-panel settings, the limit-test tables, and the list-frequency table for the current instrument state. It does not include calibration data or the information stored in the save/recall registers.

The learn string can be output to a controller with the `OUTPLEAS;` command, which commands the analyzer to start transmitting the binary string. The string has a fixed length for a given firmware revision. The array has the same header as in FORM 1. Refer to [“Example 5A: Using the Learn String” on page 7-79](#).

The calibration kit includes a set of key characteristics of the calibration standards used to determine the calibration accuracy. There are default kits for several different connector types. There is also space for a user-defined calibration kit. The command `OUTPCALK` outputs the currently active calibration kit as a binary string in FORM 1. As with the learn string, the calibration-kit string has a fixed length for a given firmware revision.

6 Error Reporting

Using This Chapter

This chapter describes the analyzer's error-reporting process. The error-reporting processes include:

- “Status Reporting” on page 6-3
- “The Status Byte” on page 6-6
- “The Event-Status Register and Event-Status Register B” on page 6-7
- “Error Output” on page 6-8
- “Error Messages in Numerical Order” on page 6-9

Status Reporting

The analyzer status reporting structure is depicted in [Figure 6-1](#). Refer to [Table 6-1](#), [Table 6-2](#), and [Table 6-3](#) for a description of each bit within the status reporting structure.

Figure 6-1 Status Reporting Structure

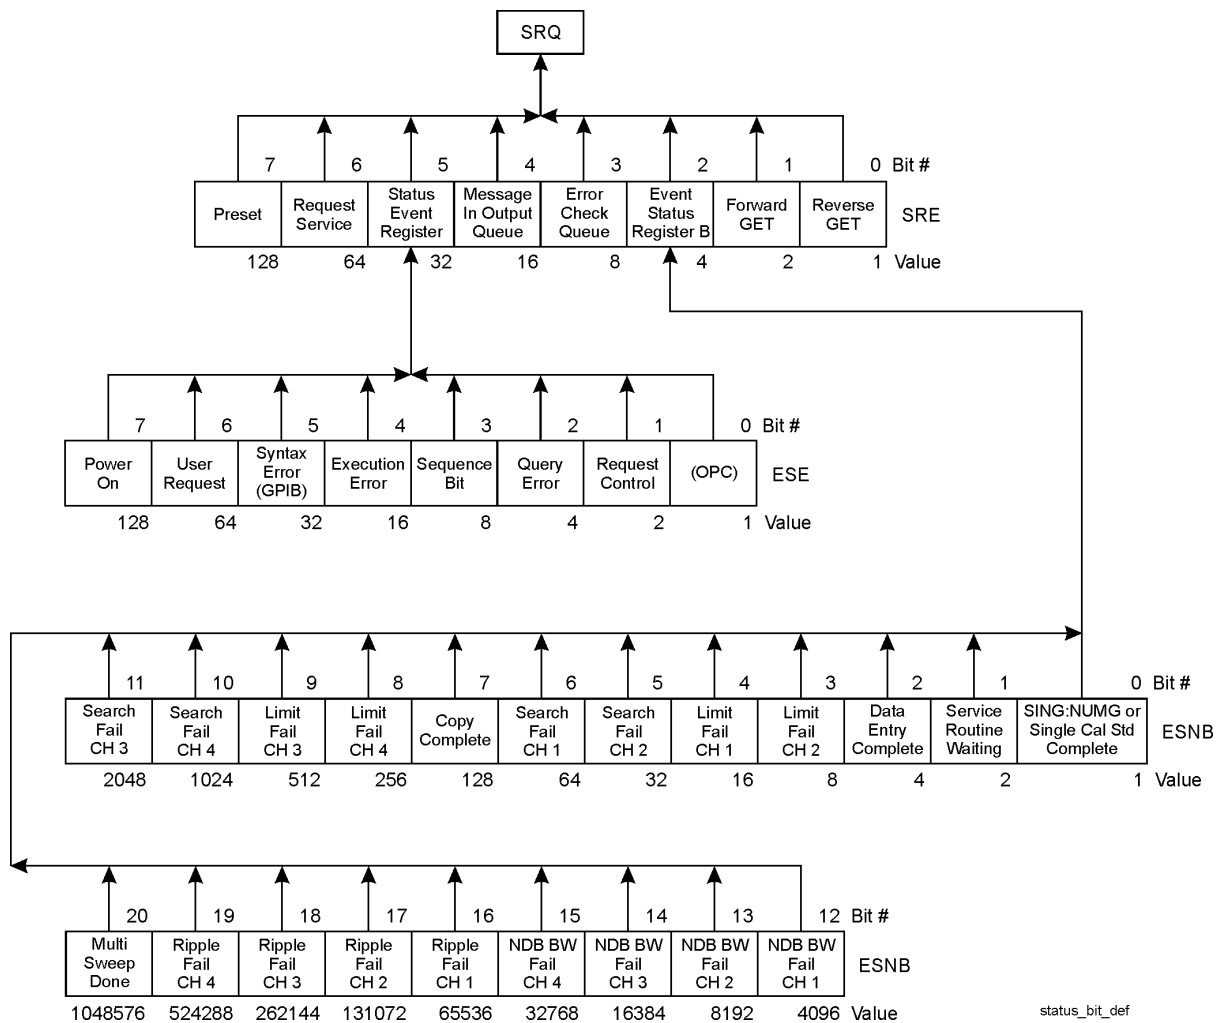


Table 6-1 Status Byte: Status Bit Definitions

Status Byte		
Bit	Name	Definition
0	Waiting for reverse GET	Not available.
1	Waiting for forward GET	Not available.
2	Check event-status register B	One of the enabled bits in event status register B has been set.
3	Check error queue	An error has occurred and the message has been placed in the error queue, but has not been read yet.
4	Message in output queue	A command has prepared information to be output, but it has not been read yet.
5	Check event-status register	One of the enabled bits in the event-status register has been set.
6	Request service	One of the enabled status-byte bits is causing an SRQ.
7	Preset	An instrument preset has been executed.

Table 6-2 Event Status Register: Status Bit Definitions

Bit	Name	Definition
0	Operation complete	A command for which OPC has been enabled has completed operation.
1	Request control	The analyzer has been commanded to perform an operation that requires control of a peripheral, and needs control of GPIB. Requires pass-control mode.
2	Query error	The analyzer has been addressed to talk but there is nothing in the output queue to transmit.
3	Sequence Bit	A sequence has executed the assert SRQ command.
4	Execution error	A command was received that could not be executed.
5	Syntax error	The incoming GPIB commands contained a syntax error. The syntax error can only be cleared by a device clear or an instrument preset.
6	User request	The operator has pressed a front-panel key or turned the RPG.
7	Power on	A power-on sequence has occurred since the last read of the register.

Table 6-3 Event Status Register B: Status Bit Definitions

Bit	Name	Definition
0	Single sweep, number of groups, or calibration step complete	A single sweep, group, or calibration step has been completed since the last read of the register.
1	Service routine waiting or done	An internal service routine has completed operation, or is waiting for an operator response.
2	Data entry complete	A terminator key has been pressed or a value entered over GPIB since the last read of the register.
3	Limit failed, Channel 2	Limit test failed on Channel 2.
4	Limit failed, Channel 1	Limit test failed on Channel 1.
5	Search failed, Channel 2	A marker search was executed on Channel 2, but the target value was not found.
6	Search failed, Channel 1	A marker search was executed on Channel 1, but the target value was not found.
7	Copy Complete	A copy has been completed since the last read of the register.
8	Limit failed, Channel 4	Limit test failed on Channel 4.
9	Limit failed, Channel 3.	Limit test failed on Channel 3.
10	Search failed, Channel 4.	A marker search was executed on Channel 4, but the target value was not found.
11	Search failed, Channel 3.	A marker search was executed on Channel 3, but the target value was not found.
12	NDB bandwidth failed, Channel 1.	The NDB (number of dB below peak) Bandwidth test failed on Channel 1.
13	NDB bandwidth failed, Channel 2.	The NDB (number of dB below peak) Bandwidth test failed on Channel 2.
14	NDB bandwidth failed, Channel 3.	The NDB (number of dB below peak) Bandwidth test failed on Channel 3.
15	NDB bandwidth failed, Channel 4.	The NDB (number of dB below peak) Bandwidth test failed on Channel 4.
16	Ripple failed, Channel 1.	The Ripple test failed on Channel 1.
17	Ripple failed, Channel 2.	The Ripple test failed on Channel 2.
18	Ripple failed, Channel 3.	The Ripple test failed on Channel 3.
19	Ripple failed, Channel 4.	The Ripple test failed on Channel 4.
20	Multi Sweep Done	Multiple sweep calibration is complete.

The Status Byte

The analyzer has a status-reporting mechanism that reports information about specific analyzer functions and events. The status byte (consisting of summary bits) is the top-level register (see [Figure 6-1](#)). Each bit reflects the condition of another register or queue. If a summary bit is set (equals 1), the corresponding register or queue should be read to obtain the status information and clear the condition. Reading the status byte does not affect the state of the summary bits. The summary bits always reflect the condition of the summarized queue or register.

The status byte can be read by a serial poll or by using the command `OUTPSTAT`. `OUTPSTAT` does not automatically put the instrument in remote mode, thus giving the operator access to the analyzer front-panel functions. `OUTPSTAT` will return an ASCII (text) integer (0–255) that can be interpreted as the 8-bit status byte. Using the `OUTPSTAT` command will not necessarily return the same status byte value as when using a serial poll because the “Message in Output Queue” bit is always set when using `OUTPSTAT`.

The status byte:

- summarizes the error queue
- summarizes two event-status registers that monitor specific conditions inside the instrument
- contains a bit that is set when the instrument is issuing a service request (SRQ) over GPIB
- contains a bit that is set when the analyzer has data to transmit over GPIB

Any bit in the status byte can be selectively enabled to generate a service request (SRQ) when set. Setting a bit in the service-request-enable register with the `SRE $nn$` command enables the corresponding bit in the status byte. The units variable nn represents the binary equivalent of the bit in the status byte. For example, `SRE24`; enables status-byte bits 3 and 4 (since $2^3 + 2^4 = 24$) and disables all the other bits. `SRE` will not affect the state of the status-register bits.

The sequencing bit can be set during the execution of a test sequence to assert an SRQ.

The status byte also summarizes two queues: the output queue and the error queue. (The error queue is described in the next section.) When the analyzer outputs information, it puts the information in the output queue where it resides until the controller reads it. The output queue is only one event long. Therefore, the next output request will clear the current data. The summary bit is set whenever there is data in the output queue.

The Event-Status Register and Event-Status Register B

The event-status register and event-status register B are the other two registers in the status-reporting structure (see [Figure 6-1](#)). They are selectively summarized by bits in the status byte via enable registers. The event-status registers consist of latched bits.

A latched bit is set at the beginning of a specific trigger condition in the instrument. It can only be cleared by reading the register. The bit will not be reactivated until the condition occurs again. If a bit in one of these two registers is enabled, it is summarized by the summary bit in the status byte. The registers are enabled using the commands `ESEnn;` and `ESNBnn;`, both of which work in the same manner as `SREnn`. The units variable *nn* represents the binary equivalent of the bit in the status byte.

If a bit in one of the event-status registers is enabled, and therefore, the summary bit in the status byte is enabled, an SRQ will be generated. The SRQ will not be cleared until one of the five following conditions transpire:

- The event-status register is read, clearing the latched bit.
- The summary bit in the status byte is disabled.
- The event-status register bit is disabled.
- The status registers are cleared with the `CLES;` command.
- An instrument preset is performed.

Service requests generated when there are error messages or when the instrument is waiting for the group execute trigger (GET) command are cleared by:

- reading the errors
- issuing GET (disabling the bits)
- clearing the status registers

Error Output

When an error condition is detected in the analyzer, a message is generated, displayed on the analyzer's display screen, and placed in the error queue. Error messages consist of an error number followed by an ASCII string no more than 50 characters long. The string contains the same message that appears on the analyzer's display. The error queue holds up to 20 error messages in the order in which they occur. The error messages remain in the error queue until the errors are read by the system controller using the command `OUTPERRO`. The `OUTPERRO` command outputs one error message.

NOTE	The error queue can only be cleared by performing an instrument preset or by cycling the line power. In order to keep the queue up-to-date, it is important to read all of the messages out of the queue each time errors are detected.
-------------	---

Error Messages in Numerical Order

For explanations and suggestions in finding the cause of the error messages, refer to your analyzer's reference guide. Some error numbers have been omitted due to obsoleted error messages.

Error Number	Error
1	OPTIONAL FUNCTION; NOT INSTALLED
2	INVALID KEY
3	CORRECTION CONSTANTS NOT STORED
4	PHASE LOCK CAL FAILED
5	NO IF FOUND: CHECK R INPUT LEVEL
6	POSSIBLE FALSE LOCK
7	NO PHASE LOCK: CHECK R INPUT LEVEL
8	PHASE LOCK LOST
9	LIST TABLE EMPTY
10	CONTINUOUS SWITCHING NOT ALLOWED
11	SWEEP TIME INCREASED
12	SWEEP TIME TOO FAST
13	AVERAGING INVALID ON NON-RATIO MEASURE
14	FUNCTION NOT VALID
15	NO MARKER DELTA - SPAN NOT SET
16	TRANSFORM, GATE NOT ALLOWED
17	DEMODULATION NOT VALID
21	POWER SUPPLY HOT!
22	POWER SUPPLY SHUT DOWN!
23	PROBE POWER SHUT DOWN!
24	PRINTER: not on, not connect, wrong address
25	PRINT ABORTED
26	PLOTTER: not on, not connect, wrong address
27	PLOT ABORTED
28	PLOTTER NOT READY-PINCH WHEELS UP
30	REQUESTED DATA NOT CURRENTLY AVAILABLE
31	ADDRESSED TO TALK WITH NOTHING TO SAY

Error Number	Error
32	WRITE ATTEMPTED WITHOUT SELECTING INPUT TYPE
33	SYNTAX ERROR
34	BLOCK INPUT ERROR
35	BLOCK INPUT LENGTH ERROR
36	SYST CTRL OR PASS CTRL IN LOCAL MENU
37	ANOTHER SYSTEM CONTROLLER ON GPIB
38	DISK: not on, not connected, wrong address
39	DISK HARDWARE PROBLEM
40	DISK MEDIUM NOT INITIALIZED
41	NO DISK MEDIUM IN DRIVE
42	FIRST CHARACTER MUST BE A LETTER
43	ONLY LETTERS AND NUMBERS ARE ALLOWED
44	NOT ENOUGH SPACE ON DISK FOR STORE
45	NO FILE(S) FOUND ON DISK
46	ILLEGAL UNIT OR VOLUME NUMBER
47	INITIALIZATION FAILED
48	DISK IS WRITE PROTECTED
49	DISK WEAR-REPLACE DISK SOON
50	TOO MANY SEGMENTS OR POINTS
51	INSUFFICIENT MEMORY
54	NO VALID MEMORY TRACE
55	NO VALID STATE IN REGISTER
56	INSTRUMENT STATE MEMORY CLEARED
57	OVERLOAD ON INPUT R, POWER REDUCED
58	OVERLOAD ON INPUT A, POWER REDUCED (ES) OVERLOAD ON REFL PORT, POWER REDUCED (ET)
59	OVERLOAD ON INPUT B, POWER REDUCED (ES) OVERLOAD ON TRANS PORT, POWER REDUCED (ET)
61	SOURCE PARAMETERS CHANGED
62	NOT VALID FOR PRESENT TEST SET
63	CALIBRATION REQUIRED
64	CURRENT PARAMETER NOT IN CAL SET

Error Number	Error
65	CORRECTION AND DOMAIN RESET
66	CORRECTION TURNED OFF
67	DOMAIN RESET
68	ADDITIONAL STANDARDS NEEDED
69	NO CALIBRATION CURRENTLY IN PROGRESS
70	NO SPACE FOR NEW CAL. CLEAR REGISTERS
71	MORE SLIDES NEEDED
72	EXCEEDED 7 STANDARDS PER CLASS
73	SLIDES ABORTED (MEMORY REALLOCATION)
74	CALIBRATION ABORTED
75	FORMAT NOT VALID FOR MEASUREMENT
77	WRONG DISK FORMAT, INITIALIZE DISK
111	DEADLOCK
112	SELF TEST #n FAILED
113	TEST ABORTED
114	NO FAIL FOUND
115	TROUBLE! CHECK SETUP AND START OVER
116	POWER METER INVALID
117	PWR MTR: NOT ON/CONNECTED OR WRONG ADDRS
118	POWER METER NOT SETTLED
119	DEVICE: not on, not connect, wrong address
123	NO MEMORY AVAILABLE FOR INTERPOLATION
124	SELECTED SEQUENCE IS EMPTY
125	DUPLICATING TO THIS SEQUENCE NOT ALLOWED
126	NO MEMORY AVAILABLE FOR SEQUENCING
127	CAN'T STORE/LOAD SEQUENCE, INSUFFICIENT MEMORY
130	D2/D1 INVALID WITH SINGLE CHANNEL
131	FUNCTION NOT VALID DURING MOD SEQUENCE
132	MEMORY FOR CURRENT SEQUENCE IS FULL
133	THIS LIST FREQ INVALID IN HARM/3 GHZ RNG
140	FREQ OFFSET ONLY VALID IN NETWORK ANALYZER MODE

Error Number	Error
141	STOP/CW FREQ + OFFSET MUST BE < 3 GHz
144	NO LIMIT LINES DISPLAYED
148	EXTERNAL SOURCE MODE REQUIRES CW TIME
150	LOG SWEEP REQUIRES 2 OCTAVE MINIMUM SPAN
151	SAVE FAILED / INSUFFICIENT MEMORY
152	D2/D1 INVALID: CH1 CH2 NUM PTS DIFFERENT
153	SEQUENCE MAY HAVE CHANGED, CAN'T CONTINUE
154	INSUFFICIENT MEMORY, PWR MTR CAL OFF
157	SEQUENCE ABORTED
159	CH1 (CH2) TARGET VALUE NOT FOUND
161	PRESS [MENU], SELECT CW (IF) FREQ, THEN SWEPT LO
162	EXT SRC: NOT ON/CONNECTED OR WRONG ADDR
163	FUNCTION ONLY VALID DURING MOD SEQUENCE
164	TOO MANY NESTED SEQUENCES. SEQ ABORTED
165	PARALLEL PORT NOT AVAILABLE FOR GPIO
166	PRINT/PLOT IN PROGRESS, ABORT WITH LOCAL
167	PARALLEL PORT NOT AVAILABLE FOR COPY
168	INSUFFICIENT MEMORY FOR PRINT/PLOT
169	GPIB COPY IN PROGRESS, ABORT WITH LOCAL
170	COPY: device not responding; copy aborted
171	PRINTER: paper error
172	PRINTER: not on line
173	PRINTER: not connected
174	PRINTER: power off
175	PRINTER: error
176	PRINTER: busy
177	PRINTER: not handshaking
178	print color not supported with EPSON
179	POWER OUT MAY BE UNLEVELED
180	DOS NAME LIMITED TO 8 CHARS + 3 CHAR EXTENSION
181	BAD FREQ FOR HARMONIC OR FREQ OFFSET

Error Number	Error
182	LIST MODE OFF: INVALID WITH LO FREQ
183	BATTERY FAILED. STATE MEMORY CLEARED
184	BATTERY LOW! STORE SAVE REGS TO DISK
185	CANNOT FORMAT DOS DISKS ON THIS DRIVE
186	OK TO ALTER CORRECTION CONSTANTS?
187	SWEEP MODE CHANGED TO CW TIME SWEEP
188	DIRECTORY FULL
189	DISK READ/WRITE ERROR
190	DISK MESSAGE LENGTH ERROR
191	EXT SOURCE NOT READY FOR TRIGGER
192	FILE NOT FOUND
193	ASCII: MISSING 'BEGIN' statement
194	ASCII: MISSING 'CITIFILE' statement
195	ASCII: MISSING 'DATA' statement
196	ASCII: MISSING 'VAR' statement
197	FILE NOT FOUND OR WRONG TYPE
198	NOT ALLOWED DURING POWER METER CAL
199	CANNOT MODIFY FACTORY PRESET
200	ALL REGISTERS HAVE BEEN USED
201	FUNCTION NOT VALID FOR INTERNAL MEMORY
202	FUNCTION NOT AVAILABLE
203	CANNOT READ/WRITE HFS FILE SYSTEM
204	FREQS CANNOT BE CHANGED, TOO MANY POINTS
205	LIMIT TABLE EMPTY
206	ARGUMENT OUT OF RANGE
207	POWER OUT MAY BE UNLEVELED
208	EXT R CHAN MUST BE ON FOR FREQUENCY OFFSET MODE
209	SWEEP MUST BE STEPPED FOR FREQUENCY OFFSET MODE
211	OVERLAP! LIST TYPE CHANGED TO STEPPED
212	ANALOG BUS DISABLED IN 6 kHz IFBW
213	RANGE CAUSED POWER LVL CHANGE IN LIST

Error Number	Error
214	CORRECTION ON: AUX CHANNEL(S) RESTORED
215	CAUTION: CORRECTION OFF: AUX CHANNEL(S) DISABLED
218	CAUTION: FLOPPY DISK IS FULL
219	ECal MODULE NOT IN RF PATH
220	SELECTED MODULE OUTSIDE START-STOP FREQ RANGE
221	ECal SELECT OTHER MODULE
222	ECal MODULE NOT RESPONDING
223	ISOL AVGS < SWP AVGS
224	ECal FAILED

7 Programming Examples

Using This Chapter

This chapter provides explanations and listings for the example programs that are included on the “Programming Examples” CD-ROM (part number 08753-10039) that accompanied this manual. A description of the typical measurement process is also included in the “[Measurement Process](#)” section, starting on [page 7-3](#).

All of the examples on the CD-ROM are provided in HP BASIC, and most are also provided in Visual C++ and Visual BASIC for use with the provided *VXIplug&play* driver. See [Chapter 2](#), “[Introduction to Instrument Control](#),” for information on using HP BASIC, and installing and using the *VXIplug&play* driver.

NOTE

“[Example 1A: Setting Parameters](#)” on [page 7-10](#) includes program listings for HP BASIC, Visual C++, and Visual BASIC. These listings are provided for you to see a comparison of the different programming languages. The rest of the examples in this manual only include the HP BASIC listing. You can readily view *all* of the programs by accessing the CD-ROM that was shipped with this manual. The programs are in the following three directories on the CD-ROM:

- \hpbasic (HP BASIC programs)
 - \vc (Visual C++ programs)
 - \vb (Visual BASIC programs)
-

Measurement Process

This section explains how to organize instrument commands into a measurement sequence. A typical measurement sequence consists of the following steps:

1. setting up the instrument
2. calibrating the test setup
3. connecting the device under test
4. taking the measurement data
5. post-processing the measurement data
6. transferring the measurement data

Step 1. Setting Up the Instrument

Define the measurement by setting all of the basic measurement parameters. These include:

- the sweep type
- the frequency span
- the sweep time
- the number of points (in the data trace)
- the RF power level
- the type of measurement
- the IF averaging
- the IF bandwidth

You can quickly set up an entire instrument state, using the save/recall registers and the learn string. The learn string is a summary of the instrument state compacted into a string that the computer reads and retransmits to the analyzer. See [“Example 5A: Using the Learn String” on page 7-79](#).

Step 2. Calibrating the Test Setup

After you have defined an instrument state, you should perform a measurement calibration. Although it is not required, a measurement calibration improves the accuracy of your measurement data.

The following list describes several methods to calibrate the analyzer:

- Stop the program and perform a calibration from the analyzer's front panel.
- Use the computer to guide you through the calibration, as discussed in [“Measurement Calibration Examples” on page 7-23](#).
- Transfer the calibration data from a previous calibration back into the analyzer, as discussed in [“Example 5C: Saving and Restoring the Analyzer Instrument State” on page 7-84](#).

Step 3. Connecting the Device under Test

After you connect your test device, you can use the computer to speed up any necessary device adjustments such as limit testing, bandwidth searches, and trace statistics.

Step 4. Taking the Measurement Data

Measure the device response and set the analyzer to hold the data. This captures the data on the analyzer display.

By using the single-sweep command (SING), you can ensure a valid sweep. When you use this command, the analyzer completes all stimulus changes before starting the sweep, and does not release the GPIB hold state until it has displayed the formatted trace. Then when the analyzer completes the sweep, the instrument is put into hold mode, freezing the data. Because single sweep is OPC-compatible, it is easy to determine when the sweep has been completed.

The number-of-groups command (NUMGn) triggers multiple sweeps. It is designed to work the same as single-sweep command. NUMGn is useful for making a measurement with an averaging factor n (n can be 1 to 999). Both the single-sweep and number-of-groups commands restart averaging.

Step 5. Post-Processing the Measurement Data

[Figure 5-1 on page 5-3](#) shows the process functions used to affect the data after you have made an error-corrected measurement. These process functions have parameters that can be adjusted to manipulate the error-corrected data prior to formatting. They do not affect the analyzer's data gathering. The most useful functions are trace statistics, marker searches, electrical-delay offset, time domain, and gating.

After performing and activating a full 2-port measurement calibration, any of the four S-parameters may be viewed without taking a new sweep (ES models only).

Step 6. Transferring the Measurement Data

Read your measurement results. All the data-output commands are designed to ensure that the data transmitted reflects the current state of the instrument.

Programming Examples

The following example programs provide you with factory-tested solutions for several remotely-controlled analyzer processes. The programs can be used in their present state or modified to suit specific needs. The programs discussed in this section can be found on the “Programming Examples” CD-ROM that was shipped with this manual.

Table 7-1 Measurement Setup Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
1A	Setting Parameters	page 7-10	EXAMP1A EXAMP1A.CPP EXAMP1A.FRM
1B	Verifying Parameters	page 7-21	EXAMP1B EXAMP1B.CPP EXAMP1B.FRM

Table 7-2 Measurement Calibration Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
2A	Response Calibration	page 7-24	EXAMP2A EXAMP2A.CPP EXAMP2A.FRM
2B	1-Port Measurement Calibration	page 7-26	EXAMP2B EXAMP2B.CPP EXAMP2B.FRM
2C	Enhanced Response Calibration	page 7-30	EXAMP2C EXAMP2C.CPP EXAMP2C.FRM
2D	Full 2-Port Measurement Calibration ¹	page 7-33	EXAMP2D EXAMP2D.CPP EXAMP2D.FRM
2E	Adapter Removal Calibration ¹	page 7-38	EXAMP2E EXAMP2E.CPP EXAMP2E.FRM
2F	Using Raw Data to Create a Calibration (Simmcal) ¹	page 7-41	EXAMP2F EXAMP2F.CPP EXAMP2F.FRM
2G	Take4 — Error Correction Processed on an External PC ¹	page 7-48	EXAMP2G EXAMP2G.CPP EXAMP2G.FRM

1. For ES models only.

Table 7-3 Measurement Data Transfer Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
3A	Data Transfer Using Markers	page 7-57	EXAMP3A EXAMP3A.CPP EXAMP3A.FRM
3B	Data Transfer Using FORM 4 (ASCII Transfer)	page 7-59	EXAMP3B
3C	Data Transfer Using Floating-Point Numbers	page 7-62	EXAMP3C
3D	Data Transfer Using Frequency-Array Information	page 7-64	EXAMP3D EXAMP3D.CPP EXAMP3D.FRM
3E	Data Transfer Using FORM 1 (Internal Binary Format)	page 7-67	EXAMP3E

Table 7-4 Measurement Process Synchronization Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
4A	Using the Error Queue	page 7-70	EXAMP4A EXAMP4A.CPP EXAMP4A.FRM
4B	Generating Interrupts	page 7-72	EXAMP4B
4C	Power Meter Calibration ¹	page 7-75	EXAMP4C

1. This example program will not work with HP BASIC for Windows.

Table 7-5 Measurement Process Synchronization Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
5A	Using the Learn String	page 7-79	EXAMP5A
5B	Reading Calibration Data	page 7-81	EXAMP5B
5C	Saving and Restoring the Analyzer Instrument State	page 7-84	EXAMP5C EXAMP5C.CPP EXAMP5C.FRM

Table 7-6 Limit-Line Testing Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
6A	Setting Up a List-Frequency Table in Stepped List Mode	page 7-88	EXAMP6A EXAMP6A.CPP EXAMP6A.FRM
6B	Setting Up a List-Frequency Table in Swept List Mode	page 7-90	EXAMP6B EXAMP6B.CPP EXAMP6B.FRM
6C	Selecting a Single Segment from a Table of Segments	page 7-94	EXAMP6C EXAMP6C.CPP EXAMP6C.FRM
6D	Setting Up a Limit Test Table	page 7-96	EXAMP6D EXAMP6D.CPP EXAMP6D.FRM
6E	Performing PASS/FAIL Tests while Tuning	page 7-99	EXAMP6E EXAMP6E.CPP EXAMP6E.FRM

Table 7-7 Report Generation Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
7A	Operation Using Talker/Listener Mode	page 7-102	EXAMP7A
7B	Controlling Peripherals Using Pass-Control Mode ¹	page 7-104	EXAMP7B
7C	Printing with the Parallel Port	page 7-107	EXAMP7C EXAMP7C.CPP EXAMP7C.FRM
7D	Plotting to a File and Transferring the File Data to a Plotter	page 7-109	EXAMP7D EXAMP7D.CPP EXAMP7D.FRM
7E	Reading Plot Files From a Disk ¹	page 7-111	EXAMP7E EXAMP7E.CPP EXAMP7E.FRM
7F	Reading ASCII Disk Files to the Instrument Controller's Disk File	page 7-118	EXAMP7F EXAMP7F.CPP EXAMP7F.FRM

1. This example program will not work with HP BASIC for Windows.

Table 7-8 Mixer Measurement Example Programs

Example Number	Description	Refer to	File Name(s) on CD-ROM
8A	Comparison of Two Mixers—Group Delay, Amplitude or Phase ¹	page 7-122	EXAMP8A

1. For use with 8753ET/ES analyzers, and with 8719/20/22ES analyzers that have Option 089 installed.

Program Information

The following information is provided for every HP BASIC example program included on the “Programming Examples” CD-ROM:

- A program description
- An outline of the program's processing sequence
- A step-by-step instrument-command-level tutorial explanation of the program including:
 - ☐ The command mnemonic and command name for the GPIB instrument command used in the program.
 - ☐ An explanation of the operations and affects of the GPIB instrument commands used in the program.

Analyzer Features Helpful in Developing Programming Routines

Analyzer-Debug Mode

The analyzer-debug mode aids you in developing programming routines. The analyzer displays the commands being received. If a syntax error occurs, the analyzer displays the last buffer and points to the first character in the command line that it could not understand.

You can enable this mode from the front panel by pressing **Local** **GPIB DIAG ON**. The debug mode remains activated until you preset the analyzer or deactivate the mode. You can also enable this mode over the GPIB using the DEBUON; command and disable the debug mode using the DEBUOFF; command.

User-Controllable Sweep

There are three important advantages to using the single-sweep mode:

1. The user can initiate the sweep.
2. The user can determine when the sweep has completed.
3. The user can be confident that the trace data has be derived from a valid sweep.

Execute the command string OPC?;SING; to place the analyzer in single-sweep mode and trigger a sweep. Once the sweep is complete, the analyzer returns an ASCII character one (1) to indicate the completion of the sweep.

NOTE	The measurement cycle and the data acquisition cycle must always be synchronized. The analyzer must complete a measurement sweep for the data to be valid.
-------------	--

Measurement Setup Examples

The programs included in this section provide the option to perform instrument-setup functions for the analyzer from a remote controller. Example 1A is a program designed to set up the analyzer's measurement parameters. Example 1B is a program designed to verify the measurement parameters.

Example 1A: Setting Parameters

In general, the procedure for setting up measurements on the network analyzer via GPIB follows the same sequence as if the setup was performed manually. There is no required order, as long as the desired frequency range, number of points, and power level are set prior to performing the calibration first, and the measurement second.

This example sets the following parameters:

- data display formats
- number of channels displayed, and number of graticules to display them in
- frequency range

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The analyzer is adjusted to measure return loss (S_{11}) on channel 1 and display as log magnitude.
- The analyzer is adjusted to measure return loss (S_{11}) on channel 2 and display the phase.
- The dual-channel display mode is activated.
- The system operator is prompted to enter the frequency range of the measurement.
- The displays are autoscaled.
- The system operator is prompted to press "Enter" on the computer keyboard to view four types of measurements simultaneously.
- Channels 3 and 4 are turned on.
- Channel 2 is adjusted to measure transmission (S_{21}) displayed in log magnitude, and then the display is autoscaled.
- Channel 3 is adjusted to measure reflected power (A) displayed in log magnitude, and then the display is autoscaled.
- Channel 4 is adjusted to measure transmitted power (B) displayed in log magnitude, and then the display is autoscaled.
- The four channels are each displayed in a separate graticule.
- The analyzer is released from remote control and the program ends.

BASIC Program Listing

```

10 ! This program demonstrates setup of various measurement parameters such
20 ! as start frequency, stop frequency, etc. The program first selects one
30 ! type of measurement to be viewed using dual-channel display format.
40 ! The specified start and stop frequencies are then programmed and the
50 ! analyzer display is autoscaled. The program concludes by displaying
60 ! four types of measurements simultaneously.
70 !
80 ! EXAMP1A
90 !
100 ! ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
110 !
120 ! CLEAR SCREEN
130 ! Initialize the system
140 ! ABORT 7 ! Generate an IFC (Interface Clear)
150 ! CLEAR @Nwa ! SDC (Selected Device Clear) analyzer
160 ! OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
170 ! ENTER @Nwa;Reply ! Read in the 1 returned
180 !
190 ! Set up measurement and display
200 ! OUTPUT @Nwa;"CHAN1;" ! Channel 1
210 ! OUTPUT @Nwa;"AUXCOFF;" ! Turn off auxiliary channel, if it is on
220 ! OUTPUT @Nwa;"S11;" ! Return Loss (Reflection) measurement
230 ! OUTPUT @Nwa;"LOGM;" ! Log magnitude display
240 !
250 ! OUTPUT @Nwa;"CHAN2;" ! Channel 2
260 ! OUTPUT @Nwa;"AUXCOFF;" ! Turn off auxiliary channel, if it is on
270 ! OUTPUT @Nwa;"S11;" ! Return Loss (Reflection) measurement
280 ! OUTPUT @Nwa;"PHAS;" ! Phase display
290 !
300 ! OUTPUT @Nwa;"DUACON;" ! Dual channel display
310 !
320 ! Request start and stop frequency
330 ! INPUT "ENTER START FREQUENCY (MHz):",F_start
340 ! INPUT "ENTER STOP FREQUENCY (MHz):",F_stop
350 !
360 ! Program the analyzer settings
370 ! OUTPUT @Nwa;"STAR";F_start;"MHZ;" ! Set the start frequency
380 ! OUTPUT @Nwa;"STOP";F_stop;"MHZ;" ! Set the stop frequency
390 !
400 ! Autoscale the displays
410 ! OUTPUT @Nwa;"CHAN1;AUTO;" ! Autoscale channel 1 display
420 ! OUTPUT @Nwa;"CHAN2;AUTO;" ! Autoscale channel 2 display
430 !
440 ! PRINT "The display should now be autoscaled."
450 ! INPUT "Press RETURN to view four types of measurements simultaneously",X
460 !
470 ! OUTPUT @Nwa;"CHAN1;AUXCON;" ! Turn on auxiliary channel (Channel 3)
480 ! OUTPUT @Nwa;"CHAN2;AUXCON;" ! Turn on auxiliary channel (Channel 4)
490 !
500 ! Channel 2 Insertion Loss (Transmission) measurement
510 ! OUTPUT @Nwa;"S21;"
520 ! OUTPUT @Nwa;"LOGM;AUTO;" ! Channel 2 log magnitude and autoscale
530 !
540 ! Channel 3 Reflected Power measurement
550 ! OUTPUT @Nwa;"CHAN3;MEASA;"
560 ! OUTPUT @Nwa;"LOGM;AUTO;" ! Channel 3 log magnitude and autoscale

```

```

570 !
580 ! Channel 4 Transmitted Power measurement
590 OUTPUT @Nwa;"CHAN4;MEASB;"
600 OUTPUT @Nwa;"LOGM;AUTO;"          ! Channel 4 log magnitude and autoscale
610 !
620 OUTPUT @Nwa;"SPLID4;"            ! Display as four separate graticules
630 !
640 OUTPUT @Nwa;"OPC?;WAIT;"         ! Wait for the analyzer to finish
650 ENTER @Nwa;Reply                 ! Read the 1 when complete
660 LOCAL @Nwa                       ! Release HP-IB control
670 END

```

Visual C++ Program Listing

```

#include <stdlib.h>
#include <stdio.h>
#include <conio.h>

#include "visa.h"
#include "875x_cpp.h"

ViStatus initialize(ViRsrc Nwa, ViBoolean id_query, ViBoolean do_reset, ViPSession
vi_ptr);
ViStatus checkErr(ViSession vi, ViStatus err_status);

/*****
/* hp875x Instrument Driver EXAMPLE #1A
/*
/* This program demonstrates setup of various measurement parameters such
/* as start frequency, stop frequency, etc. The program first selects one
/* type of measurement to be viewed using dual-channel display format.
/* The specified start and stop frequencies are then programmed and the
/* analyzer display is autoscaled. The program concludes by displaying
/* four types of measurements simultaneously.
*****/

int main ()
{
ViSessionvi;
ViStatuserrr_status;
ViRsrc      nwa;
ViReal64    f_start;
ViReal64    f_stop;
ViBoolean   reply;

printf("Example 1a --\n");
printf("This program demonstrates setup of various measurement parameters such\n");
printf("as start frequency, stop frequency, etc. The program first selects one\n");
printf("type of measurement to be viewed using dual-channel display format.\n");
printf("The specified start and stop frequencies are then programmed and the\n");
printf("analyzer display is autoscaled. The program concludes by displaying\n");
printf("four types of measurements simultaneously.\n\n");

nwa = "GPIB0::16::INSTR";

// Initialize the instrument
initialize(nwa, VI_FALSE, VI_TRUE, &vi);

// Set the timeout to 3000 msec (3 sec)

```

```
err_status = hp875x_timeOut(vi, 3000);
checkErr(vi, err_status);

// Set up measurement and display

// Channel 1
err_status = hp875x_channelSelect(vi, hp875x_CH1);
checkErr(vi, err_status);
// Turn auxiliary channel off.
err_status = hp875x_auxChannel(vi, hp875x_CH1, hp875x_OFF);
checkErr(vi, err_status);
// Return Loss measurement, no parameter conversion
// For 8719ET/8720ET/8722ET/8753ET, hp875x_S_PAR11 is interpreted as hp875x_REFL
err_status = hp875x_measType(vi, hp875x_S_PAR11, hp875x_CONV_OFF);
checkErr(vi, err_status);
// Log magnitude display
err_status = hp875x_displaySelect(vi, hp875x_CH1, hp875x_DISP_DATA, hp875x_DISP_LOGM);
checkErr(vi, err_status);
// Channel 2
err_status = hp875x_channelSelect(vi, hp875x_CH2);
checkErr(vi, err_status);
// Turn auxiliary channel off.
err_status = hp875x_auxChannel(vi, hp875x_CH2, hp875x_OFF);
checkErr(vi, err_status);
// Return Loss measurement, no parameter conversion
err_status = hp875x_measType(vi, hp875x_S_PAR11, hp875x_CONV_OFF);
checkErr(vi, err_status);
// Phase display
err_status = hp875x_displaySelect(vi, hp875x_CH2, hp875x_DISP_DATA, hp875x_DISP_PHAS);
checkErr(vi, err_status);
// Dual channel display (single graticule)
err_status = hp875x_dualSplit(vi, hp875x_DUAL_CHAN_ON, hp875x_SPLIT_CHAN_OFF);
checkErr(vi, err_status);
// Request start and stop frequency
printf("Enter Start Frequency (MHz)\n");
scanf("%lf", &f_start);
f_start *= 1000000;
printf("Enter Stop Frequency (MHz)\n");
scanf("%lf", &f_stop);
f_stop *= 1000000;
// Program the frequency settings
err_status = hp875x_frequency(vi, hp875x_FREQ_STRT_STOP, f_start, f_stop);
checkErr(vi, err_status);
// Autoscale the displays
err_status = hp875x_channelSelect(vi, hp875x_CH1);
checkErr(vi, err_status);
err_status = hp875x_autoscale(vi);
checkErr(vi, err_status);
err_status = hp875x_channelSelect(vi, hp875x_CH2);
checkErr(vi, err_status);
err_status = hp875x_autoscale(vi);
checkErr(vi, err_status);
printf("The display should now be autoscaled.\n");
printf("Press any key on the computer keyboard to view four types of measurements\n");
printf("simultaneously on the network analyzer display.\n");
// Wait for keyboard input, then remove character from buffer
while (!_kbhit());
while (_kbhit()) getch();
```

```

// Channel 1
err_status = hp875x_channelSelect(vi, hp875x_CH1);
checkErr(vi, err_status);
// Turn auxiliary channel on.
err_status = hp875x_auxChannel(vi, hp875x_CH1, hp875x_ON);
checkErr(vi, err_status);
// Channel 2
err_status = hp875x_channelSelect(vi, hp875x_CH2);
checkErr(vi, err_status);
// Turn auxiliary channel on.
err_status = hp875x_auxChannel(vi, hp875x_CH2, hp875x_ON);
checkErr(vi, err_status);
// Channel 2 Insertion Loss measurement, no parameter conversion
// For 8719ET/8720ET/8722ET/8753ET, hp875x_S_PAR21 is interpreted as hp875x_TRANS
err_status = hp875x_measType(vi, hp875x_S_PAR21, hp875x_CONV_OFF);
checkErr(vi, err_status);
// Log magnitude and autoscale
err_status = hp875x_displaySelect(vi, hp875x_CH2, hp875x_DISP_DATA, hp875x_DISP_LOGM);
checkErr(vi, err_status);
err_status = hp875x_autoscale(vi);
checkErr(vi, err_status);
// Channel 3 Reflected Power measurement, no parameter conversion
err_status = hp875x_channelSelect(vi, hp875x_CH3);
checkErr(vi, err_status);
err_status = hp875x_measType(vi, hp875x_IN_MA, hp875x_CONV_OFF);
checkErr(vi, err_status);
// Log magnitude and autoscale
err_status = hp875x_displaySelect(vi, hp875x_CH3, hp875x_DISP_DATA, hp875x_DISP_LOGM);
checkErr(vi, err_status);
err_status = hp875x_autoscale(vi);
checkErr(vi, err_status);
// Channel 4 Transmitted Power measurement, no parameter conversion
err_status = hp875x_channelSelect(vi, hp875x_CH4);
checkErr(vi, err_status);
err_status = hp875x_measType(vi, hp875x_IN_MB, hp875x_CONV_OFF);
checkErr(vi, err_status);
// Log magnitude and autoscale
err_status = hp875x_displaySelect(vi, hp875x_CH4, hp875x_DISP_DATA, hp875x_DISP_LOGM);
checkErr(vi, err_status);
err_status = hp875x_autoscale(vi);
checkErr(vi, err_status);
// Display all 4 measurements, each in a separate graticule, Channel 3 in upper right
err_status = hp875x_dualSplit4Parm(vi, hp875x_DUAL_CHAN_ON, hp875x_DISP_4_GRAT,
hp875x_DISP_2_CHAN3_TOP, hp875x_DISP_4_CHAN3_UPR);
checkErr(vi, err_status);
// Wait for analyzer to finish
err_status = hp875x_opc_Q(vi, "WAIT", &reply);
checkErr(vi, err_status);
// Close the session
err_status = hp875x_close(vi);
checkErr(vi, err_status);
printf("Program completed\n");
return(0);
}

ViStatus initialize(ViRsrc Nwa, ViBoolean id_query, ViBoolean do_reset, ViPSession
vi_ptr)
{

```



```

ViSession    vi;
ViStatuserr_status;
ViChar       err_message[256];

/* Note that this function can verify that the instrument specified is an */
/* hp875x (id_query=VI_TRUE) and can send a reset to the instrument      */
/* (do_reset=VI_TRUE).                                                    */

err_status = hp875x_init(Nwa, id_query, do_reset, &vi);

if (( err_status < VI_SUCCESS ) || ( vi == VI_NULL ))
{
    printf("\ninit failed with return code %d\n", err_status);
    if ( vi != VI_NULL )
    {
        hp875x_error_message(vi,err_status,err_message);
        printf("  Error Status:  %d\n", err_status);
        printf("  Error Message: %s\n", err_message);
    }
    exit (err_status);
}

*vi_ptr = vi;

return(VI_SUCCESS);
}

ViStatus checkErr (ViSession vi, ViStatus err_status)
{
    ViInt32    inst_err;
    ViChar     err_message[256];

    if(VI_SUCCESS > err_status)
    {
        /* Send a device clear to ensure communication with */
        /* the instrument.                                     */

        hp875x_dcl(vi);

        /* If the driver is set to detect instrument errors, and */
        /* an instrument error is detected, the error code is     */
        /* hp875x_INSTR_ERROR_DETECTED (see 875x_cpp.h). In this */
        /* case, query the instrument for the error and display   */
        /* it. Otherwise, the error is a driver error. Query the */
        /* driver for the error and display it.                   */

        if(hp875x_INSTR_ERROR_DETECTED == err_status)

        {
            hp875x_error_query(vi, &inst_err, err_message);
            printf("Instrument Error : %ld, %s\n", inst_err, err_message);

        }
        else
        {
            hp875x_error_message(vi, err_status, err_message);
            printf("Driver Error : %ld, %s\n", err_status, err_message);
        }
    }
}

```

```

    }

    /* Optionally reset the instrument, close the */
    /* instrument handle, and exit the program.    */

    /* hp875x_reset(vi); */
    /* hp875x_close(vi); */
    /* exit(err_status); */
    return VI_TRUE;
}

return VI_SUCCESS ;
}

```

Visual BASIC Program Listing

```

VERSION 5.00
Begin VB.Form frmExample1a
    Caption           = "hp875x Visual Basic Programming Example 1a"
    ClientHeight      = 5610
    ClientLeft        = 1140
    ClientTop         = 1515
    ClientWidth       = 5895
    LinkTopic         = "Form1"
    PaletteMode       = 1 'UseZOrder
    ScaleHeight       = 5610
    ScaleWidth        = 5895
    Begin VB.ListBox lstText
        Height         = 4350
        ItemData       = "frmExamp1a.frx":0000
        Left           = 360
        List           = "frmExamp1a.frx":0002
        TabIndex       = 2
        Top            = 120
        Width          = 5175
    End
    Begin VB.CommandButton cmdQuit
        Caption        = "Quit"
        Height         = 495
        Left           = 3120
        TabIndex       = 1
        Top            = 4800
        Width          = 1455
    End
    Begin VB.CommandButton cmdExecute
        Caption        = "Execute Program"
        Height         = 495
        Left           = 1200
        TabIndex       = 0
        Top            = 4800
        Width          = 1455
    End
End
Attribute VB_Name = "frmExample1a"
Attribute VB_GlobalNameSpace = False
Attribute VB_Creatable = False
Attribute VB_PredeclaredId = True
Attribute VB_Exposed = False

```

```

/*****
* hp875x Instrument Driver EXAMPLE #1A
*
* This program demonstrates setup of various measurement parameters such
* as start frequency, stop frequency, etc. The program first selects one
* type of measurement to be viewed using dual-channel display format.
* The specified start and stop frequencies are then programmed and the
* analyzer display is autoscaled. The program concludes by displaying
* four types of measurements simultaneously.
*****/

```

```
Private Sub cmdExecute_Click()
```

```

Dim vi          As Long
Dim err_status  As Long
Dim nwa         As String
Dim retString   As String
Dim msg         As String
Dim f_start     As Double
Dim f_stop      As Double
Dim iRetVal     As Integer
Dim reply       As Integer

```

```

lstText.Clear
lstText.AddItem "Example 1a --"
lstText.AddItem "This program demonstrates setup of various measurement parameters
such"
lstText.AddItem "as start frequency, stop frequency, etc. The program first selects
one"
lstText.AddItem "type of measurement to be viewed using dual-channel display format."
lstText.AddItem "The specified start and stop frequencies are then programmed and the"
lstText.AddItem "analyzer display is autoscaled. The program concludes by displaying"
lstText.AddItem "four types of measurements simultaneously."
lstText.AddItem ""

```

```
nwa = "GPIB0::16::INSTR"
```

```

' Initialize the instrument
Call initialize(nwa, VI_FALSE, VI_TRUE, vi)

```

```

' Set the timeout to 3000 msec (3 sec)
err_status = hp875x_timeOut(vi, 3000)
Call checkErr(vi, err_status)

```

```
' Set up measurement and display
```

```

' Channel 1
err_status = hp875x_channelSelect(vi, hp875x_CH1)
Call checkErr(vi, err_status)
' Turn auxiliary channel off.
err_status = hp875x_auxChannel(vi, hp875x_CH1, hp875x_OFF)
Call checkErr(vi, err_status)
' Return Loss measurement, no parameter conversion
' For 8719ET/8720ET/8722ET/8753ET, hp875x_S_PAR11 is interpreted as hp875x_REFL
err_status = hp875x_measType(vi, hp875x_S_PAR11, hp875x_CONV_OFF)
Call checkErr(vi, err_status)
' Log magnitude display
err_status = hp875x_displaySelect(vi, hp875x_CH1, hp875x_DISP_DATA, hp875x_DISP_LOGM)

```

```

Call checkErr(vi, err_status)
' Channel 2
err_status = hp875x_channelSelect(vi, hp875x_CH2)
Call checkErr(vi, err_status)
' Turn auxiliary channel off.
err_status = hp875x_auxChannel(vi, hp875x_CH2, hp875x_OFF)
Call checkErr(vi, err_status)
' Return Loss measurement, no parameter conversion
err_status = hp875x_measType(vi, hp875x_S_PAR11, hp875x_CONV_OFF)
Call checkErr(vi, err_status)
' Phase display
err_status = hp875x_displaySelect(vi, hp875x_CH2, hp875x_DISP_DATA, hp875x_DISP_PHAS)
Call checkErr(vi, err_status)
' Dual channel display (single graticule)
err_status = hp875x_dualSplit(vi, hp875x_DUAL_CHAN_ON, hp875x_SPLIT_CHAN_OFF)
Call checkErr(vi, err_status)
' Request start and stop frequency
retString = InputBox$("Enter Start Frequency (MHz)", frmExample1a.Caption)
If retString = "" Then Exit Sub
f_start = Val(retString) * 1000000# ' Convert to real value in Hz
retString = InputBox$("Enter Stop Frequency (MHz)", frmExample1a.Caption)
If retString = "" Then Exit Sub
f_stop = Val(retString) * 1000000# ' Convert to real value in Hz
' Program the frequency settings
err_status = hp875x_frequency(vi, hp875x_FREQ_STRT_STOP, f_start, f_stop)
Call checkErr(vi, err_status)
' Autoscale the displays
err_status = hp875x_channelSelect(vi, hp875x_CH1)
Call checkErr(vi, err_status)
err_status = hp875x_autoscale(vi)
Call checkErr(vi, err_status)
err_status = hp875x_channelSelect(vi, hp875x_CH2)
Call checkErr(vi, err_status)
err_status = hp875x_autoscale(vi)
Call checkErr(vi, err_status)
msg = "The display should now be autoscaled." & Chr$(13) & Chr$(10)
msg = msg & "Click OK to view four types of measurements "
msg = msg & "simultaneously on the network analyzer display."
iRetVal = MsgBox(msg, vbOKCancel, frmExample1a.Caption)
If iRetVal = vbCancel Then Exit Sub
' Channel 1
err_status = hp875x_channelSelect(vi, hp875x_CH1)
Call checkErr(vi, err_status)
' Turn auxiliary channel on.
err_status = hp875x_auxChannel(vi, hp875x_CH1, hp875x_ON)
Call checkErr(vi, err_status)
' Channel 2
err_status = hp875x_channelSelect(vi, hp875x_CH2)
Call checkErr(vi, err_status)
' Turn auxiliary channel on.
err_status = hp875x_auxChannel(vi, hp875x_CH2, hp875x_ON)
Call checkErr(vi, err_status)
' Channel 2 Insertion Loss measurement, no parameter conversion
' For 8719ET/8720ET/8722ET/8753ET, hp875x_S_PAR21 is interpreted as hp875x_TRANS
err_status = hp875x_measType(vi, hp875x_S_PAR21, hp875x_CONV_OFF)
Call checkErr(vi, err_status)
' Log magnitude and autoscale
err_status = hp875x_displaySelect(vi, hp875x_CH2, hp875x_DISP_DATA, hp875x_DISP_LOGM)

```

```

Call checkErr(vi, err_status)
err_status = hp875x_autoscale(vi)
Call checkErr(vi, err_status)
' Channel 3 Reflected Power measurement, no parameter conversion
err_status = hp875x_channelSelect(vi, hp875x_CH3)
Call checkErr(vi, err_status)
err_status = hp875x_measType(vi, hp875x_IN_MA, hp875x_CONV_OFF)
Call checkErr(vi, err_status)
' Log magnitude and autoscale
err_status = hp875x_displaySelect(vi, hp875x_CH3, hp875x_DISP_DATA, hp875x_DISP_LOGM)
Call checkErr(vi, err_status)
err_status = hp875x_autoscale(vi)
Call checkErr(vi, err_status)
' Channel 4 Transmitted Power measurement, no parameter conversion
err_status = hp875x_channelSelect(vi, hp875x_CH4)
Call checkErr(vi, err_status)
err_status = hp875x_measType(vi, hp875x_IN_MB, hp875x_CONV_OFF)
Call checkErr(vi, err_status)
' Log magnitude and autoscale
err_status = hp875x_displaySelect(vi, hp875x_CH4, hp875x_DISP_DATA, hp875x_DISP_LOGM)
Call checkErr(vi, err_status)
err_status = hp875x_autoscale(vi)
Call checkErr(vi, err_status)
' Display all 4 measurements, each in a separate graticule, Channel 3 in upper right
err_status = hp875x_dualSplit4Parm(vi, hp875x_DUAL_CHAN_ON, hp875x_DISP_4_GRAT,
hp875x_DISP_2_CHAN3_TOP, hp875x_DISP_4_CHAN3_UPR)
Call checkErr(vi, err_status)
' Wait for analyzer to finish
err_status = hp875x_opc_Q(vi, "WAIT", reply)
Call checkErr(vi, err_status)
' Close the session
err_status = hp875x_close(vi)
Call checkErr(vi, err_status)
' Display "Example Completed" message box
iRetVal = MsgBox("The example has completed", vbOKOnly, frmExample1a.Caption)
End Sub

Private Sub cmdQuit_Click()
    ' Close the application
    End
End Sub

Public Sub initialize(ByVal nwa As String, ByVal id_query As Integer, ByVal do_reset
As Integer, vi As Long)

Dim err_status As Long
Dim err_msg As String * 256

' Note that this function will verify that the instrument
' specified is an hp875x (id_query=VI_TRUE) and will send
' a reset to the instrument (do_reset=VI_TRUE).

err_status = hp875x_init(nwa, id_query, do_reset, vi)

If ((err_status < VI_SUCCESS) Or (vi = VI_NULL)) Then

    msg = "init failed with return code " & err_status

```

```
        If (vi <> VI_NULL) Then
            err_status = hp875x_error_message(vi, err_status, err_msg)
            msg = msg & ", Error Status: " & err_status

            msg = msg & ", Error Message: " & err_msg
        End If
        MsgBox msg, vbInformation, frmExample1a.Caption
    End
End If
End Sub

Sub checkErr(ByVal vi As Long, ByVal err_status As Long)

    Dim inst_err          As Long
    Dim err_message       As String * 250
    Dim retStatus         As Long

    Dim nl
    nl = Chr(10)

    If VI_SUCCESS > err_status Then

        'Send a device clear to ensure communication with 'the instrument.

        retStatus = hp875x_dcl(vi)

        If (hp875x_INSTR_ERROR_DETECTED = err_status) Then

            'query the instrument for the error
            retStatus = hp875x_error_query(vi, inst_err, err_message)

            msg = "CHECK :Instrument Error :" & inst_err & nl & "Error Message = " &
err_message

            MsgBox msg, vbOKOnly, frmExample1a.Caption
        Else
            'get the driver error message
            retStatus = hp875x_error_message(vi, err_status, err_message)
            msg = "CHECK :Driver Error :" & errStatus & nl & "Error Message = " &
err_message

            MsgBox msg, vbInformation, frmExample1a.Caption
        End If
    End If

    ' optionally reset the instrument, close the instrument handle

    'retStatus=hp875x_reset(vi)
    'retStatus=hp875x_close(vi)

End Sub
```

Example 1B: Verifying Parameters

This example shows how to read analyzer settings into your controller. Appending a “?” to a command that sets an analyzer parameter will return the value of that setting. Parameters that are set as ON or OFF when queried will return a zero (0) if off or a one (1) if active. Parameters are returned in ASCII format, FORM 4. This format varies in length from 1 to 24 characters-per-value. In the case of marker or other multiple responses, the values are separated by commas.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The number of points in the trace is queried and dumped to a printer.
- The start frequency is queried and output to a printer.
- The averaging is queried and output to a printer.
- The analyzer is released from remote control and the program ends.

Running the Program

The analyzer is preset. The preset values are returned and printed out for: the number of points, the start frequency, and the state of the averaging function. The analyzer is released from remote control and the program ends.

BASIC Program Listing

```
10 ! This program performs some example queries of network analyzer
20 ! settings. The number of points in a trace, the start frequency
30 ! and if averaging is turned on, are determined and displayed.
40 !
50 ! EXAMP1B
60 !
70 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
80 !
90 CLEAR SCREEN
100 ! Initialize the system
110 ABORT 7 ! Generate an IFC (Interface Clear)
120 CLEAR @Nwa ! SDC (Selected Device Clear)
130 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
140 ENTER @Nwa;Reply ! Read in the 1 returned
150 !
160 ! Query network analyzer parameters
170 OUTPUT @Nwa;"POIN?;" ! Read in the default trace length
180 ENTER @Nwa;Num_points
190 PRINT "Number of points ";Num_points
200 PRINT
210 !
220 OUTPUT @Nwa;"STAR?;" ! Read in the start frequency
230 ENTER @Nwa;Start_f
240 PRINT "Start Frequency ";Start_f
250 PRINT
260 !
270 OUTPUT @Nwa;"AVERO?;" ! Averaging on?
```

```
280 ENTER @Nwa;Flag
290 PRINT "Flag =";Flag;" ";
300 IF Flag=1 THEN                                ! Test flag and print analyzer state
310   PRINT "Averaging ON"
320 ELSE
330   PRINT "Averaging OFF"
340 END IF
350 !
360 OUTPUT @Nwa;"OPC?;WAIT;"                      ! Wait for the analyzer to finish
370 ENTER @Nwa;Reply                              ! Read the 1 when complete
380 LOCAL @Nwa                                    ! Release HP-IB control
390 END
```

Measurement Calibration Examples

This section shows you how to coordinate a measurement calibration over GPIB. You can use the following sequence for performing either a manual measurement calibration, or a remote measurement calibration via GPIB:

1. Select the calibration type.
2. Measure the calibration standards.
3. Declare the calibration done.

The actual sequence depends on the calibration kit and changes slightly for 2-port calibrations, which are divided into three calibration sub-sequences. The following examples are included:

- Example 2A is a program designed to perform a response calibration.
- Example 2B is a program designed to perform a 1-port measurement calibration.
- Example 2C is a program designed to perform an enhanced response calibration.
- Example 2D is a program designed to perform a full 2-port measurement calibration. (For use with ES models only).
- Example 2E is a program designed to accurately measure a “non-insertable” 2-port device, using adapter removal. (For use with ES models only.)
- Example 2F is a program designed to use raw data to create a calibration, sometimes called Simmcal. (For use with ES models only.)
- Example 2G is a program designed to offload the calculation of the 2-port error corrected data to an external computer. (For use with ES models only.)

Example programs 2A through 2D illustrate how to perform different types of calibrations using any of the following calibration kits:

Network Analyzer	Calibration Kits
8753ET/ES	85031B (7-mm)
	85032B/E (type-N 50 Ω)
8720E series analyzers	85052B/D (3.5-mm)
	85056A/D (2.4-mm)

If you wish to use a different calibration kit, modify the example program accordingly. These programs simplify the calibration by providing explicit directions on the analyzer display while allowing the user to run the program from the controller keyboard. More information on selecting calibration standards can be found in your analyzer's user's guide.

NOTE	For type-N connectors, the sex of the connector that the calibration standard will mate to must be observed. These programs assume that the connector on PORT 1 (REFLECTION port on ET models) is a female test port and that PORT 2 (TRANSMISSION port on ET models) is a male test port.
-------------	--

Calibration Kits

The calibration kit tells the analyzer what standards to expect at each step of the calibration. The set of standards associated with a given calibration is termed a “class.” For example, measuring the short during a 1-port measurement calibration is one calibration step. All of the shorts that can be used for this calibration step make up the class, which is called class S11B. For the 7-mm and the 3.5-mm cal kits, class S11B uses only one standard. For type-N cal kits, class S11B contains two standards: male and female shorts.

When doing a 1-port measurement calibration using a 7- or 3.5-mm calibration kit, selecting **SHORT** automatically measures the short because the class contains only one standard. When doing the same calibration in type-N, selecting **SHORT** brings up a second menu, allowing the operator to select which standard in the class is to be measured. The sex listed refers to the test port: if the test port is female, then the operator selects the female short option. Once the standard has been selected and measured, the **DONE** key must be pressed to exit the class.

Doing a 1-port measurement calibration over GPIB is very similar. When using a 7- or 3.5-mm calibration kit, sending CLASS11B will automatically measure the short. In type-N, sending CLASS11B brings up the menu with the male and female short options. To select a standard, use STANA or STANB. The STAN command is appended with the letters A through G, corresponding to the standards listed under softkeys 1 through 7, softkey 1 being the topmost softkey.

The STAN command is OPC-compatible. A command that calls a class is only OPC-compatible if that class has only one standard in it. If there is more than one standard in a class, the command that calls the class brings up another menu, and there is no need to query it. DONE; must be sent to exit the class.

Example 2A: Response Calibration

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The appropriate calibration kit is selected.
- The softkey menu is deactivated.
- The response calibration sequence is run.
- The response calibration data is saved.
- The softkey menu is activated.
- The analyzer is released from remote control and the program ends.

Running the Program

NOTE This program does not modify the instrument state in any way. Before running the program, set up the desired instrument state.

The program assumes that the test ports have a 7-mm, type-N 50 Ω , 3.5-mm, or 2.4-mm interface or an adapter set using a 7-mm, type-N 50 Ω , 3.5-mm, or 2.4-mm interface. The prompts appear just above the message line on the analyzer display. Pressing (Enter) on the controller keyboard continues the program and measures the standard. The program will display a message when the measurement calibration is complete.

BASIC Program Listing

```
10 ! This program guides the operator through a response calibration
20 ! using a thru (cable). The operator must choose from one of the
30 ! following calibration kits:
40 !
50 ! Analyzer      Cal Kits
60 ! -----
70 ! 8753ES/ET     HP 85031B (7 mm), HP 85032B/E (Type N 50 ohm)
80 !
90 ! 8719ES/ET     HP 85052B/D (3.5 mm), HP 85056A/D (2.4 mm)
100 ! 8720ES/ET      "           ,           "
110 ! 8722ES/ET      "           ,           "
120 !
130 ! The routine Waitforkey displays a message on the instrument's
140 ! display and the console, to prompt the operator to connect the
150 ! calibration standard. Once the standard is connected, the
160 ! ENTER key on the computer keyboard is pressed to continue.
170 !
180 ! EXAMP2A
190 !
200 ! ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
210 !
220 ! CLEAR SCREEN
230 ! Initialize the system
240 ! ABORT 7                          ! Generate an IFC (Interface Clear)
250 ! CLEAR @Nwa                      ! SDC (Selected Device Clear)
260 ! Select CAL kit type
270 ! PRINT "Enter one of the following numbers:"
280 ! PRINT "1 to use the HP 85031B kit (8753),"
290 ! PRINT "2 to use the HP 85032B/E kit (8753),"
300 ! PRINT "3 to use the HP 85052B/D kit (8719/8720/8722),"
310 ! PRINT "4 to use the HP 85056A/D kit (8719/8720/8722)"
320 ! INPUT Kit
330 ! SELECT Kit
340 ! CASE 1
350 !     OUTPUT @Nwa;"CALK7MM;"
360 ! CASE 2
370 !     OUTPUT @Nwa;"CALKN50;"
380 ! CASE 3
390 !     OUTPUT @Nwa;"CALK35MD;"
400 ! CASE ELSE
410 !     OUTPUT @Nwa;"CALK24MM;"
420 ! END SELECT
```

```

430 !
440 OUTPUT @Nwa;"MENUOFF;"          ! Turn softkey menu off.
450 !
460 OUTPUT @Nwa;"CALIRESP;"        ! Response CAL initiated
470 !
480 CALL Waitforkey("CONNECT THRU BETWEEN PORTS")
490 IF Kit=2 THEN
500     OUTPUT @Nwa;"OPC?;STANE;"    ! Select the fifth standard, E
510 ELSE
520     OUTPUT @Nwa;"OPC?;STANC;"    ! Select the third standard, C
530 END IF
540 ENTER @Nwa;Reply                ! Read in the 1 returned
550 !
560 DISP "COMPUTING CALIBRATION COEFFICIENTS"
570 !
580 OUTPUT @Nwa;"OPC?;RESPDONE;"    ! Finished with the CAL cycle
590 ENTER @Nwa;Reply                ! Read in the 1 returned
600 !
610 DISP "RESPONSE CAL COMPLETED. CONNECT TEST DEVICE."
620 OUTPUT @Nwa;"MENUON;"          ! Turn on the softkey menu
630 !
640 OUTPUT @Nwa;"OPC?;WAIT;"        ! Wait for the analyzer to finish
650 ENTER @Nwa;Reply                ! Read the 1 when complete
660 LOCAL @Nwa                     ! Release HP-IB control
670 !
680 END
690 !
700 ! ***** Subroutines *****
710 !
720 Waitforkey: ! Prompt routine to read a keypress on the controller
730 SUB Waitforkey(Lab$)
740 !   Position and display text on the analyzer display
750     OUTPUT 717;"PG;PU;PA390,3700;PD;LB";Lab$;"", PRESS ENTER WHEN READY;"&CHR$(3)
760 !
770     DISP Lab$&"   Press ENTER when ready";! Display prompt on console
780     INPUT A$                      ! Read ENTER key press
790 !
800     OUTPUT 717;"PG;"              ! Clear analyzer display
810 SUBEND

```

Example 2B: 1-Port Calibration

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The appropriate calibration kit is selected.
- The softkey menu is deactivated.
- The 1-port calibration sequence is run.
- The 1-port calibration data is saved.
- The softkey menu is activated.
- The analyzer is released from remote control and the program ends.

Running the Program

NOTE This program does not modify the instrument state in any way. Before running the program, set up the desired instrument state.

The program assumes that the test ports have a 7-mm, type-N 50 Ω , 3.5-mm, or 2.4-mm interface or an adapter set using a 7-mm, type-N 50 Ω , 3.5-mm, or 2.4-mm interface. The prompts appear just above the message line on the analyzer display. Pressing (Enter) on the controller keyboard continues the program and measures the standard. The program will display a message when the measurement calibration is complete.

BASIC Program Listing

```
10 ! This program guides the operator through a 1-port calibration.
20 ! The operator must choose one of the following calibration kits:
30 !
40 ! Analyzer      Cal Kits
50 ! -----
60 ! 8753ES/ET     HP 85031B (7 mm), HP 85032B/E (Type N 50 ohm)
70 !
80 ! 8719ES/ET     HP 85052B/D (3.5 mm), HP 85056A/D (2.4 mm)
90 ! 8720ES/ET           "           ,           "
100 ! 8722ES/ET          "           ,           "
110 !
120 ! The routine Waitforkey displays a message on the instrument's
130 ! display and the console, to prompt the operator to connect the
140 ! calibration standard. Once the standard is connected, the
150 ! ENTER key on the computer keyboard is pressed to continue.
160 !
170 ! EXAMP2B
180 !
190 ! ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
200 !
210 ! CLEAR SCREEN
220 ! Initialize the system
230 ! ABORT 7                          ! Generate an IFC (Interface Clear)
240 ! CLEAR @Nwa                      ! SDC (Selected Device Clear)
250 ! Select CAL kit type
260 ! PRINT "Enter one of the following numbers:"
270 ! PRINT "1 to use the HP 85031B kit (8753),"
280 ! PRINT "2 to use the HP 85032B/E kit (8753),"
290 ! PRINT "3 to use the HP 85052B/D kit (8719/8720/8722),"
300 ! INPUT "4 to use the HP 85056A/D kit (8719/8720/8722)",Kit
310 ! SELECT Kit
320 ! CASE 1
330 !     OUTPUT @Nwa;"CALK7MM;"
340 ! CASE 2
350 !     OUTPUT @Nwa;"CALKN50;"
360 ! CASE 3
370 !     OUTPUT @Nwa;"CALK35MD;"
380 ! CASE ELSE
390 !     OUTPUT @Nwa;"CALK24MM;"
400 ! END SELECT
410 !
420 ! OUTPUT @Nwa;"MENUOFF;"          ! Turn softkey menu off.
```

```

430 !
440 OUTPUT @Nwa;"CALIS111;" ! S11 1 port CAL initiated
450 !
460 ! Open reflection CAL
470 CALL Waitforkey("CONNECT OPEN AT PORT 1 (REFLECTION PORT)")
480 IF Kit=2 THEN
490     OUTPUT @Nwa;"CLASS11A;"
500     OUTPUT @Nwa;"OPC?;STANB;" ! Select the second standard, B
510 ELSE
520     OUTPUT @Nwa;"OPC?;CLASS11A;" ! Only one standard in class
530 END IF
540 ENTER @Nwa;Reply ! Read in the 1 returned
550 OUTPUT @Nwa;"DONE;" ! Finished with class standards
560 !
570 ! Short reflection CAL
580 CALL Waitforkey("CONNECT SHORT AT PORT 1 (REFLECTION PORT)")
590 IF Kit=2 THEN
600     OUTPUT @Nwa;"CLASS11B;"
610     OUTPUT @Nwa;"OPC?;STANB;" ! Select the second standard, B
620 ELSE
630     OUTPUT @Nwa;"OPC?;CLASS11B;" ! Only one standard in class
640 END IF
650 ENTER @Nwa;Reply ! Read in the 1 returned
660 OUTPUT @Nwa;"DONE;" ! Finished with class standards
670 !
680 ! Reflection load CAL
690 CALL Waitforkey("CONNECT LOAD AT PORT 1 (REFLECTION PORT)")
700 IF Kit=3 OR Kit=4 THEN
710     OUTPUT @Nwa;"CLASS11C;"
720     OUTPUT @Nwa;"OPC?;STANA;" ! Select the first standard, A
730 ELSE
740     OUTPUT @Nwa;"OPC?;CLASS11C;" ! Only one standard in class
750 END IF
760 ENTER @Nwa;Reply ! Read in the 1 returned
770 OUTPUT @Nwa;"DONE;" ! Finished with class standards
780 !
790 DISP "COMPUTING CALIBRATION COEFFICIENTS"
800 !
810 OUTPUT @Nwa;"OPC?;SAV1;" ! Save the ONE PORT CAL
820 ENTER @Nwa;Reply ! Read in the 1 returned
830 !
840 DISP "S11 1-PORT CAL COMPLETED. CONNECT TEST DEVICE."
850 OUTPUT @Nwa;"MENUON;" ! Turn on the softkey menu
860 !
870 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait for the analyzer to finish
880 ENTER @Nwa;Reply ! Read the 1 when complete
890 LOCAL @Nwa ! Release HP-IB control
900 !
910 END
920 !
930 ! ***** Subroutines *****
940 !
950 Waitforkey: ! Prompt routine to read a keypress on the controller
960 SUB Waitforkey(Lab$)
970 ! Position and display text on the analyzer display
980 OUTPUT 717;"PG;PU;PA390,3700;PD;LB";Lab$," PRESS ENTER WHEN READY;"&CHR$(3)
990 !
1000 DISP Lab$&" Press ENTER when ready";! Display prompt on console

```

```
1010    INPUT A$                                ! Read ENTER key press
1020!
1030    OUTPUT 717;"PG;"                       ! Clear analyzer display
1040 SUBEND
```

Example 2C: Enhanced Response Calibration

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The appropriate calibration kit is selected.
- The softkey menu is deactivated.
- The enhanced response calibration sequence is run.
- The enhanced response calibration data is saved.
- The softkey menu is activated.
- The analyzer is released from remote control and the program ends.

Running the Program

NOTE This program does not modify the instrument state in any way. Before running the program, set up the desired instrument state.

The program assumes that the test ports have a 7-mm, type-N 50 Ω , 3.5-mm, or 2.4-mm interface or an adapter set using a 7-mm, type-N 50 Ω , 3.5-mm, or 2.4-mm interface. The prompts appear just above the message line on the analyzer display. Pressing **Enter** on the controller keyboard continues the program and measures the standard. The program will display a message when the measurement calibration is complete.

BASIC Program Listing

```
10 ! This program guides the operator through an enhanced response
20 ! calibration. The operator must choose one of the following
30 ! calibration kits:
40 !
50 ! Analyzer      Cal Kits
60 ! -----
70 ! 8753ES/ET    HP 85031B (7 mm), HP 85032B/E (Type N 50 ohm)
80 !
90 ! 8719ES/ET    HP 85052B/D (3.5 mm), HP 85056A/D (2.4 mm)
100 ! 8720ES/ET      "          ,          "
110 ! 8722ES/ET      "          ,          "
120 !
130 ! The routine Waitforkey displays a message on the instrument's
140 ! display and the console, to prompt the operator to connect the
150 ! calibration standard. Once the standard is connected, the
160 ! ENTER key on the computer keyboard is pressed to continue.
170 !
180 ! EXAMP2C
190 !
200 ! ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
210 !
220 ! CLEAR SCREEN
230 ! Initialize the system
240 ! ABORT 7                          ! Generate an IFC (Interface Clear)
```



```

250 CLEAR @Nwa                                ! SDC (Selected Device Clear)
260 ! Select CAL kit type
270 PRINT "Enter one of the following numbers:"
280 PRINT "1 to use the HP 85031B kit (8753),"
290 PRINT "2 to use the HP 85032B/E kit (8753),"
300 PRINT "3 to use the HP 85052B/D kit (8719/8720/8722),"
310 INPUT "4 to use the HP 85056A/D kit (8719/8720/8722)",Kit
320 SELECT Kit
330 CASE 1
340     OUTPUT @Nwa;"CALK7MM;"
350 CASE 2
360     OUTPUT @Nwa;"CALKN50;"
370 CASE 3
380     OUTPUT @Nwa;"CALK35MD;"
390 CASE ELSE
400     OUTPUT @Nwa;"CALK24MM;"
410 END SELECT
420 !
430 OUTPUT @Nwa;"MENUOFF;"                    ! Turn softkey menu off.
440 !
450 OUTPUT @Nwa;"CALIERC;"                    ! Enhanced response CAL initiated
460 !
470 OUTPUT @Nwa;"REFL;"                       ! Reflection CAL
480 !
490 ! Open reflection CAL
500 CALL Waitforkey("CONNECT OPEN AT PORT 1 (REFLECTION PORT)")
510 IF Kit=2 THEN
520     OUTPUT @Nwa;"CLASS11A;"
530     OUTPUT @Nwa;"OPC?;STANB;"            ! Select the second standard, B
540 ELSE
550     OUTPUT @Nwa;"OPC?;CLASS11A;"        ! Only one standard in class
560 END IF
570 ENTER @Nwa;Reply                          ! Read in the 1 returned
580 OUTPUT @Nwa;"DONE;"                      ! Finished with class standards
590 !
600 ! Short reflection CAL
610 CALL Waitforkey("CONNECT SHORT AT PORT 1 (REFLECTION PORT)")
620 IF Kit=2 THEN
630     OUTPUT @Nwa;"CLASS11B;"
640     OUTPUT @Nwa;"OPC?;STANB;"            ! Select the second standard, B
650 ELSE
660     OUTPUT @Nwa;"OPC?;CLASS11B;"        ! Only one standard in class
670 END IF
680 ENTER @Nwa;Reply                          ! Read in the 1 returned
690 OUTPUT @Nwa;"DONE;"                      ! Finished with class standards
700 !
710 ! Reflection load CAL
720 CALL Waitforkey("CONNECT LOAD AT PORT 1 (REFLECTION PORT)")
730 IF Kit=3 OR Kit=4 THEN
740     OUTPUT @Nwa;"CLASS11C;"
750     OUTPUT @Nwa;"OPC?;STANA;"            ! Select the first standard, A
760 ELSE
770     OUTPUT @Nwa;"OPC?;CLASS11C;"        ! Only one standard in class
780 END IF
790 ENTER @Nwa;Reply                          ! Read in the 1 returned
800 OUTPUT @Nwa;"DONE;"                      ! Finished with class standards
810 !
820 DISP "COMPUTING REFLECTION CALIBRATION COEFFICIENTS"

```

```

830 !
840 OUTPUT @Nwa;"REFD;"          ! Reflection portion complete
850 !
860 OUTPUT @Nwa;"TRAN;"          ! Transmission portion begins
870 !
880 CALL Waitforkey("CONNECT THRU BETWEEN PORTS")
890 DISP "MEASURING FORWARD TRANSMISSION"
900 OUTPUT @Nwa;"OPC?;FWDI;"      ! Measure (forward) transmission
910 ENTER @Nwa;Reply              ! Read in the 1 returned
920 !
930 OUTPUT @Nwa;"OPC?;FWDI;"      ! Measure (forward) load match
940 ENTER @Nwa;Reply              ! Read in the 1 returned
950 !
960 OUTPUT @Nwa;"TRAD;"           ! Transmission CAL complete
970 !
980 INPUT "SKIP ISOLATION CAL? Y OR N.",An$
990 IF An$="Y" THEN
1000     OUTPUT @Nwa;"OMII;"        ! Skip isolation cal
1010     GOTO 1150
1020 END IF
1030 !
1040 CALL Waitforkey("ISOLATE TEST PORTS")
1050 !
1060 OUTPUT @Nwa;"ISOL;"           ! Isolation CAL
1070 OUTPUT @Nwa;"AVERFACT10;"     ! Average for 10 sweeps
1080 OUTPUT @Nwa;"AVEROON;"        ! Turn on averaging
1090 DISP "MEASURING ISOLATION"
1100 OUTPUT @Nwa;"OPC?;FWDI;"      ! Measure (forward) isolation
1110 ENTER @Nwa;Reply              ! Read in the 1 returned
1120 !
1130 OUTPUT @Nwa;"ISOD;AVERO0FF;"  ! Isolation complete averaging off
1140 !
1150 DISP "COMPUTING CALIBRATION COEFFICIENTS"
1160 OUTPUT @Nwa;"OPC?;ERCDONE;"    ! Finished with the CAL cycle
1170 ENTER @Nwa;Reply              ! Read in the 1 returned
1180 !
1190 DISP "ENHANCED RESPONSE CAL COMPLETED. CONNECT TEST DEVICE."
1200 OUTPUT @Nwa;"MENUON;"         ! Turn softkey menu on
1210 !
1220 OUTPUT @Nwa;"OPC?;WAIT;"      ! Wait for the analyzer to finish
1230 ENTER @Nwa;Reply              ! Read the 1 when complete
1240 LOCAL @Nwa                    ! Release HP-IB control
1250 !
1260 END
1270 !
1280 ! ***** Subroutines *****
1290 !
1300 Waitforkey: ! Prompt routine to read a keypress on the controller
1310 SUB Waitforkey(Lab$)
1320 ! Position and display text on the analyzer display
1330     OUTPUT 717;"PG;PU;PA390,3700;PD;LB";Lab$;"", PRESS ENTER WHEN READY;"&CHR$(3)
1340 !
1350     DISP Lab$&" Press ENTER when ready";! Display prompt on console
1360     INPUT A$                      ! Read ENTER key press
1370 !
1380     OUTPUT 717;"PG;"              ! Clear analyzer display
1390 SUBEND

```

Example 2D: Full 2-Port Measurement Calibration

NOTE This program is only valid on ES model analyzers.

A full 2-port calibration removes both the forward- and reverse-error terms so that all four S-parameters of the device under test can be measured.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The appropriate calibration kit is selected.
- The softkey menu is deactivated.
- The 2-port calibration sequence is run.
- The operator is prompted to choose or skip the isolation calibration.
- The softkey menu is activated.
- The analyzer is released from remote control and the program ends.

Running the Program

NOTE This program does not modify the instrument state in any way. Before running the program, set up the desired instrument state.

The program assumes that the test ports have either a 7-mm or 3.5-mm interface or an adapter set using either a 7-mm or 3.5-mm interface. The prompts appear just above the message line on the analyzer display. After the prompt is displayed, pressing **Enter** on the computer console continues the program and measures the standard. The operator has the option of omitting the isolation calibration. If the isolation calibration is performed, averaging is automatically employed to ensure a good calibration. The program will display a message when the measurement calibration is complete.

BASIC Program Listing

```

10 ! This program guides the operator through a full 2-port calibration.
20 ! The operator must choose one of the following calibration kits:
30 !
40 ! Analyzer      Cal Kits
50 ! -----
60 ! 8753ES/ET     HP 85031B (7 mm), HP 85032B/E (Type N 50 ohm)
70 !
80 ! 8719ES/ET     HP 85052B/D (3.5 mm), HP 85056A/D (2.4 mm)
90 ! 8720ES/ET     "          ,          "
100 ! 8722ES/ET     "          ,          "
110 !
120 ! The routine Waitforkey displays a message on the instrument's
130 ! display and the console to prompt the operator to connect the
140 ! calibration standard. Once the standard is connected, the
150 ! ENTER key on the computer keyboard is pressed to continue.
160 !
170 ! EXAMP2D
180 !
190 ! ASSIGN @Nwa TO 716                ! Assign an I/O path to the analyzer
200 !
210 ! CLEAR SCREEN
220 ! Initialize the analyzer
230 ! ABORT 7                          ! Generate an IFC (Interface Clear)
240 ! CLEAR @Nwa                       ! SDC (Selected Device Clear)
250 ! Select CAL kit type
260 ! PRINT "Enter one of the following numbers:"
270 ! PRINT "1 to use the HP 85031B kit (8753),"
280 ! PRINT "2 to use the HP 85032B/E kit (8753),"
290 ! PRINT "3 to use the HP 85052B/D kit (8719/8720/8722),"
300 ! PRINT "4 to use the HP 85056A/D kit (8719/8720/8722)"
310 ! INPUT Kit
320 ! SELECT Kit
330 ! CASE 1
340 !     OUTPUT @Nwa;"CALK7MM;"
350 ! CASE 2
360 !     OUTPUT @Nwa;"CALKN50;"
370 ! CASE 3
380 !     OUTPUT @Nwa;"CALK35MD;"
390 ! CASE ELSE
400 !     OUTPUT @Nwa;"CALK24MM;"
410 ! END SELECT
420 !
430 ! OUTPUT @Nwa;"MENUOFF;"           ! Turn softkey menu off.
440 !
450 ! OUTPUT @Nwa;"CALIFUL2;"         ! Full 2 port CAL
460 !
470 ! OUTPUT @Nwa;"REFL;"             ! Reflection CAL
480 !
490 ! S11 open CAL
500 ! CALL Waitforkey("CONNECT OPEN AT PORT 1")
510 ! IF Kit=2 THEN
520 !     OUTPUT @Nwa;"CLASS11A;"
530 !     OUTPUT @Nwa;"OPC?;STANB;"    ! Select the second standard, B
540 ! ELSE
550 !     OUTPUT @Nwa;"OPC?;CLASS11A;"  ! Only one standard in class
560 ! END IF

```

```

570  ENTER @Nwa;Reply                ! Read in the 1 returned
580  OUTPUT @Nwa;"DONE;"             ! Finished with class standards
590  !
600  ! S11 short CAL
610  CALL Waitforkey("CONNECT SHORT AT PORT 1")
620  IF Kit=2 THEN
630      OUTPUT @Nwa;"CLASS11B;"
640      OUTPUT @Nwa;"OPC?;STANB;"    ! Select the second standard, B
650  ELSE
660      OUTPUT @Nwa;"OPC?;CLASS11B;" ! Only one standard in class
670  END IF
680  ENTER @Nwa;Reply                ! Read in the 1 returned
690  OUTPUT @Nwa;"DONE;"             ! Finished with class standards
700  !
710  ! S11 load CAL
720  CALL Waitforkey("CONNECT LOAD AT PORT 1")
730  IF Kit=3 OR Kit=4 THEN
740      OUTPUT @Nwa;"CLASS11C;"
750      OUTPUT @Nwa;"OPC?;STANA;"    ! Select the first standard, A
760  ELSE
770      OUTPUT @Nwa;"OPC?;CLASS11C;" ! Only one standard in class
780  END IF
790  ENTER @Nwa;Reply                ! Read in the 1 returned
800  OUTPUT @Nwa;"DONE;"             ! Finished with class standards
810  !
820  ! S22 open CAL
830  CALL Waitforkey("CONNECT OPEN AT PORT 2")
840  IF Kit=2 THEN
850      OUTPUT @Nwa;"CLASS22A;"
860      OUTPUT @Nwa;"OPC?;STANA;"    ! Select the second standard, B
870  ELSE
880      OUTPUT @Nwa;"OPC?;CLASS22A;" ! Only one standard in class
890  END IF
900  ENTER @Nwa;Reply                ! Read in the 1 returned
910  OUTPUT @Nwa;"DONE;"             ! Finished with class standards
920  !
930  ! S22 short CAL
940  CALL Waitforkey("CONNECT SHORT AT PORT 2")
950  IF Kit=2 THEN
960      OUTPUT @Nwa;"CLASS22B;"
970      OUTPUT @Nwa;"OPC?;STANA;"    ! Select the second standard, B
980  ELSE
990      OUTPUT @Nwa;"OPC?;CLASS22B;" ! Only one standard in class
1000 END IF
1010 ENTER @Nwa;Reply                ! Read in the 1 returned
1020 OUTPUT @Nwa;"DONE;"             ! Finished with class standards
1030 !
1040 ! S22 load CAL
1050 CALL Waitforkey("CONNECT LOAD AT PORT 2")
1060 IF Kit=3 OR Kit=4 THEN
1070     OUTPUT @Nwa;"CLASS22C;"
1080     OUTPUT @Nwa;"OPC?;STANA;"    ! Select the first standard, A
1090 ELSE
1100     OUTPUT @Nwa;"OPC?;CLASS22C;" ! Only one standard in class
1110 END IF
1120 ENTER @Nwa;Reply                ! Read in the 1 returned
1130 OUTPUT @Nwa;"DONE;"             ! Finished with class standards
1140 !

```

```

1150 DISP "COMPUTING REFLECTION CALIBRATION COEFFICIENTS"
1160 !
1170 OUTPUT @Nwa;"REFD;" ! Reflection portion complete
1180 !
1190 OUTPUT @Nwa;"TRAN;" ! Transmission portion begins
1200 !
1210 CALL Waitforkey("CONNECT THRU [PORT1 TO PORT 2]")
1220 DISP "MEASURING FORWARD TRANSMISSION"
1230 OUTPUT @Nwa;"OPC?;FWDI;" ! Measure forward transmission
1240 ENTER @Nwa;Reply ! Read in the 1 returned
1250 !
1260 OUTPUT @Nwa;"OPC?;FWDI;" ! Measure forward load match
1270 ENTER @Nwa;Reply ! Read in the 1 returned
1280 !
1290 DISP "MEASURING REVERSE TRANSMISSION"
1300 OUTPUT @Nwa;"OPC?;REVJ;" ! Measure reverse transmission
1310 ENTER @Nwa;Reply ! Read in the 1 returned
1320 !
1330 OUTPUT @Nwa;"OPC?;REVJ;" ! Measure reverse load match
1340 ENTER @Nwa;Reply ! Read in the 1 returned
1350 !
1360 OUTPUT @Nwa;"TRAD;" ! Transmission CAL complete
1370 !
1380 INPUT "SKIP ISOLATION CAL? Y OR N.",An$
1390 IF An$="Y" THEN
1400     OUTPUT @Nwa;"OMII;" ! Skip isolation cal
1410     GOTO 1600
1420 END IF
1430 !
1440 CALL Waitforkey("ISOLATE TEST PORTS")
1450 !
1460 OUTPUT @Nwa;"ISOL;" ! Isolation CAL
1470 OUTPUT @Nwa;"AVERFACT10;" ! Average for 10 sweeps
1480 OUTPUT @Nwa;"AVEROON;" ! Turn on averaging
1490 DISP "MEASURING REVERSE ISOLATION"
1500 OUTPUT @Nwa;"OPC?;REVI;" ! Measure reverse isolation
1510 ENTER @Nwa;Reply ! Read in the 1 returned
1520 !
1530 DISP "MEASURING FORWARD ISOLATION"
1540 OUTPUT @Nwa;"OPC?;FWDI;" ! Measure forward isolation
1550 ENTER @Nwa;Reply ! Read in the 1 returned
1560 !
1570 OUTPUT @Nwa;"ISOD;AVERO0FF;" ! Isolation complete averaging off
1580 OUTPUT 717;"PG;" ! Clear analyzer display prompt
1590 !
1600 DISP "COMPUTING CALIBRATION COEFFICIENTS"
1610 OUTPUT @Nwa;"OPC?;SAV2;" ! Save THE TWO PORT CAL
1620 ENTER @Nwa;Reply ! Read in the 1 returned
1630 !
1640 DISP "DONE WITH FULL 2-PORT CAL. CONNECT TEST DEVICE."
1650 OUTPUT @Nwa;"MENUON;" ! Turn softkey menu on
1660 !
1670 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait for the analyzer to finish
1680 ENTER @Nwa;Reply ! Read the 1 when complete
1690 LOCAL @Nwa ! Release HP-IB control
1700 !
1710 END
1720 !

```

```
1730 ! ***** Subroutines *****
1740 !
1750 SUB Waitforkey(Lab$)
1760 ! Position and display prompt on the analyzer display
1770   OUTPUT 717;"PG;PU;PA390,3700;PD;LB";Lab$;", PRESS ENTER WHEN READY;"&CHR$(3)
1780 !
1790   DISP Lab$&"   Press ENTER when ready";   ! Display prompt on console
1800   INPUT A$                                     ! Read ENTER keypress on controller
1810   OUTPUT 717;"PG;"                             ! Clear analyzer display
1820 SUBEND
```

Example 2E: Adapter Removal Calibration

NOTE This program is only valid on ES model analyzers.

This program shows how to accurately measure a “non-insertable” 2-port device. A device is termed “non-insertable” if its connectors do not match those of the analyzer front panel. More information on the adapter removal technique can be found in your analyzer’s user’s guide.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The internal disk is selected as the active storage device.
- The system operator is prompted for the name of the instrument state file which has a 2-port calibration performed for Port 1's connector.
- The calibration arrays for Port 1 are recalled from the corresponding disk file.
- The system operator is prompted for the known electrical delay value of the adapter.
- The new calibration coefficients, with the effects of the adapter removed, are computed by the analyzer using the adapter delay in conjunction with the calibration arrays for both ports.
- The analyzer is released from remote control and the program ends.

CAUTION Do not mistake the line switch for the disk eject button. If the line switch is mistakenly pushed, the instrument will be turned off, losing all settings and data that have not been saved.

Running the Program

The analyzer is initialized and the internal disk drive is selected. The operator is queried for the name of the instrument state file having a 2-port calibration performed for Port 1's connector. The calibration arrays for Port 1 are recalled from the corresponding disk file. The system operator is prompted for the name of the instrument state file having a 2-port calibration performed for Port 2's connector. The calibration arrays for Port 2 are recalled from the corresponding disk file. The system operator is prompted for the known electrical delay of the adapter and this value is written to the analyzer. The calibration coefficients with adapter effects removed are computed and the program ends.

BASIC Program Listing

```

1      ! This program demonstrates how to do adapter removal over HP-IB.
2      !
3      ! EXAMP2E
4      !
5 REAL Delay                      ! Adapter electrical delay in picoseconds
6      !
7 ASSIGN @Nwa TO 716              ! Assign an I/O path for the analyzer
8 CLEAR SCREEN
9      ! Initialize the system
10 ABORT 7                        ! Generate an IFC (Interface Clear)
11 CLEAR @Nwa                     ! SDC (Selected Device Clear) analyzer
12 OUTPUT @Nwa;"OPC?;PRES;"      ! Preset the analyzer and wait
13 ENTER @Nwa;Reply              ! Read in the 1 returned
14      !
15      ! Select internal disk.
16      !
17 OUTPUT @Nwa;"INTD;"
18      !
19      ! Assign file #1 to the filename that has a 2-port
20      ! cal previously performed for Port 1's connector.
21      !
22 PRINT "Enter the name of the instrument state file which"
23 PRINT "has a 2-port cal performed for Port 1's connector"
24 INPUT "",F1$
25 OUTPUT @Nwa;"TITF1""";F1$;"";"
26      !
27      ! Recall the cal set for Port 1.
28      !
29 DISP "Loading cal arrays, please wait"
30 OUTPUT @Nwa;"CALSPORT1;"
31 OUTPUT @Nwa;"OPC?;NOOP;"
32 ENTER @Nwa;Reply
33      !
34      ! Assign file #2 to the filename that has a 2-port
35      ! cal previously performed for Port 2's connector.
36      !
37 CLEAR SCREEN
38 PRINT "Enter the name of the instrument state file which"
39 PRINT "has a 2-port cal performed for Port 2's connector"
40 INPUT "",F2$
41 OUTPUT @Nwa;"INTD;TITF2""";F2$;"";"
42      !
43      ! Recall the cal set for Port 2.
44      !
45 DISP "Loading cal arrays, please wait"
46 OUTPUT @Nwa;"CALSPORT2;"
47 OUTPUT @Nwa;"OPC?;NOOP;"
48 ENTER @Nwa;Reply
49      !
50      ! Set the adapter electrical delay.
51      !
52 INPUT "Enter the electrical delay for the adapter in picoseconds",Delay
53 OUTPUT @Nwa;"ADAP1"&VAL$(Delay)&"PS;"
54      !
55      ! Perform the "remove adapter" computation.
56      !

```

```
57 DISP "Computing cal coefficients..."
58 OUTPUT @Nwa;"MODS;"
59 OUTPUT @Nwa;"OPC?;WAIT;"
60 ENTER @Nwa;Reply
61 LOCAL 7 ! Release HP-IB control
62 DISP "Program completed"
63 END
```

Example 2F: Using Raw Data to Create a Calibration (Simmcal)

NOTE This program is only valid on ES model analyzers.

This program simulates a full 2-port cal by measuring the raw data for each “standard” and then loading it later into the appropriate arrays. The program can be adapted to create additional calibrations using the same arrays. It uses the analyzer’s default 7-mm cal kit.

CAUTION This feature is not currently supported with TRL calibrations.

The following is an outline of the programs' processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initiated.
- The instrument ID is queried so that the program can later branch accordingly for the S11C and S22C (load) classes.
- The number of points is set to correspond to the size of the dimensioned memory arrays and ASCII data format is selected.
- The 7-mm calibration kit is selected, sweep time is set to 1 second, and the analyzer is placed into hold mode.
- S11 measurement is selected for gathering the forward reflection standards.
- The system operator is prompted to connect each of the three standards, one at a time.
- Following each prompt, a single sweep is taken and the raw measured data for that standard is read from the analyzer into a corresponding memory array in the controller.
- S22 measurement is selected for gathering the reverse reflection standards.
- The system operator is prompted in the same manner as before and the raw data for the three standards is measured and stored away as before.
- The system operator is prompted to make the thru connection between Port 1 and Port 2.
- S21 measurement is selected, a single sweep is taken and the raw data is read into an array corresponding to forward transmission.
- S11 measurement is selected, a single sweep is taken and the raw data is read into an array corresponding to forward thru match.
- S12 measurement is selected, a single sweep is taken and the raw data is read into an array corresponding to reverse transmission.
- S22 measurement is selected, a single sweep is taken and the raw data is read into an array corresponding to reverse thru match.
- The analyzer begins the normal 2-port calibration procedure, but with the default beep turned off.
- A single sweep is taken for the measurement of each standard to provide “dummy” data,

which is immediately replaced with the previously measured raw data from the array corresponding to that measurement.

- The analyzer uses the raw data to compute the error coefficients and is placed back into continuous sweep mode.
- The analyzer is released from remote control and the program ends.

Running the Program

The system is initialized, the number of points is set to 51, and the 7-mm calibration kit is selected. Sweep time is set to 1 second and the analyzer is placed into hold mode.

The S11 measurement is selected and the system operator is prompted to connect each of the three forward reflection standards, one at a time. Following each prompt, a single sweep is taken, which concludes with a beep from the external controller.

The S22 measurement is selected for gathering the reverse reflection standards. The system operator is prompted in the same manner as before and the three standards are measured as before.

The system operator is prompted to make the thru connection between Port 1 and Port 2. A single sweep is taken for each of the four S-parameters, each concluding with a beep.

The analyzer begins the normal 2-port calibration procedure, but with the default beep turned off. A single sweep is taken for each measurement of each standard, providing “dummy” data which is immediately replaced with the data from the array corresponding to that measurement. The analyzer computes the error correction coefficients and is placed back into continuous sweep mode. The default beep is re-enabled and the program ends.

BASIC Program Listing

```

10      ! This program simulates a full 2-port cal by first getting the
20      ! raw data for each "standard" and then loading it into the
30      ! appropriate arrays later.  For simplicity, this is done with
40      ! ASCII format, 51 points, and the 7mm calibration kit.  This also
50      ! simplifies the input of the standards because there is only one
60      ! standard associated with each particular class in the 7mm cal kit,
70      ! except for the S11C/S22C classes on the 8719/8720/8722.  The
80      ! program queries the analyzer model number and deals with the
90      ! S11C/S22C classes accordingly.
100     !
110     ! EXAMP2F
120     !
130     DIM Id$(40)           ! String to receive the instrument ID
140     !
150     ! Allocate the arrays. The numbers correspond to the subsequent
160     ! cal coefficient array that will be written.
170     !
180     DIM Array01(1:51,1:2) ! forward OPEN measurement
190     DIM Array02(1:51,1:2) ! forward SHORT
200     DIM Array03(1:51,1:2) ! forward LOAD
210     DIM Array04(1:51,1:2) ! forward ISOLATION if necessary
220     DIM Array05(1:51,1:2) ! forward LOAD MATCH
230     DIM Array06(1:51,1:2) ! forward TRANS
240     DIM Array07(1:51,1:2) ! reverse OPEN
250     DIM Array08(1:51,1:2) ! reverse SHORT

```

```
260 DIM Array09(1:51,1:2) ! reverse LOAD
270 DIM Array10(1:51,1:2) ! reverse ISOLATION if necessary
280 DIM Array11(1:51,1:2) ! reverse LOAD MATCH
290 DIM Array12(1:51,1:2) ! reverse TRANS
300 !
310 ! Initialize the system
320 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
330 ABORT 7 ! Generate an IFC (Interface Clear)
340 CLEAR @Nwa ! SDC (Selected Device Clear) analyzer
350 CLEAR SCREEN
360 !
370 ! Query the instrument ID string
380 OUTPUT @Nwa;"IDN?;"
390 ENTER @Nwa;Id$
400 !
410 Is_8753=POS(Id$,"8753") ! Is_8753 = 0 if not 8753, non-zero if 8753
420 PRINT Is_8753
430 !
440 ! Preset the analyzer, set to 51 points, ASCII format, desired cal
450 ! kit definition (7mm). Sweep time set to 1 second (could be whatever
460 ! user would like), analyzer put in hold mode.
470 !
480 OUTPUT @Nwa;"opc?;pres;"
490 ENTER @Nwa;X
500 OUTPUT @Nwa;"POIN51;FORM4;"
510 OUTPUT @Nwa;"CALK7MM;SWET1S;HOLD;"
520 !
530 ! Select S11 to gather the forward reflection standards
540 ! (open, short, load).
550 !
560 OUTPUT @Nwa;"S11;"
570 INPUT "CONNECT OPEN AT PORT 1",X
580 OUTPUT @Nwa;"opc?;sing;"
590 ENTER @Nwa;X
600 BEEP
610 OUTPUT @Nwa;"OUTPRAW1"
620 ENTER @Nwa;Array01(*)
630 !
640 INPUT "CONNECT SHORT AT PORT 1",X
650 OUTPUT @Nwa;"opc?;sing;"
660 ENTER @Nwa;X
670 BEEP
680 OUTPUT @Nwa;"OUTPRAW1"
690 ENTER @Nwa;Array02(*)
700 !
710 INPUT "CONNECT BROADBAND LOAD AT PORT 1",X
720 OUTPUT @Nwa;"opc?;sing;"
730 ENTER @Nwa;X
740 BEEP
750 OUTPUT @Nwa;"OUTPRAW1"
760 ENTER @Nwa;Array03(*)
770 !
780 ! Now select S22 to gather the reverse reflection standards.
790 !
800 OUTPUT @Nwa;"S22"
810 INPUT "CONNECT OPEN AT PORT 2",X
820 OUTPUT @Nwa;"opc?;sing;"
830 ENTER @Nwa;X
```

```

840  BEEP
850  OUTPUT @Nwa;"OUTPRAW1"
860  ENTER @Nwa;Array07(*)
870  !
880  INPUT "CONNECT SHORT AT PORT 2",X
890  OUTPUT @Nwa;"opc?;sing;"
900  ENTER @Nwa;X
910  BEEP
920  OUTPUT @Nwa;"OUTPRAW1"
930  ENTER @Nwa;Array08(*)
940  !
950  INPUT "CONNECT BROADBAND LOAD AT PORT 2",X
960  OUTPUT @Nwa;"opc?;sing;"
970  ENTER @Nwa;X
980  BEEP
990  OUTPUT @Nwa;"OUTPRAW1"
1000 ENTER @Nwa;Array09(*)
1010 !
1020 INPUT "CONNECT THRU [PORT1 TO PORT 2]",X
1030 !
1040 ! Now select S21 to gather forward transmission raw array.
1050 !
1060 DISP "MEASURING FORWARD TRANSMISSION"
1070 OUTPUT @Nwa;"S21;OPC?;SING;"
1080 ENTER @Nwa;Reply
1090 BEEP
1100 OUTPUT @Nwa;"OUTPRAW1"
1110 ENTER @Nwa;Array06(*)
1120 !
1130 ! Now select S11 to gather forward match raw array.
1140 !
1150 OUTPUT @Nwa;"S11;OPC?;SING;"
1160 ENTER @Nwa;Reply
1170 BEEP
1180 OUTPUT @Nwa;"OUTPRAW1"
1190 ENTER @Nwa;Array05(*)
1200 !
1210 ! Now select S12 for reverse transmission raw array.
1220 !
1230 DISP "MEASURING REVERSE TRANSMISSION"
1240 OUTPUT @Nwa;"S12;OPC?;SING;"
1250 ENTER @Nwa;Reply
1260 BEEP
1270 OUTPUT @Nwa;"OUTPRAW1"
1280 ENTER @Nwa;Array12(*)
1290 !
1300 ! Now select S22 for reverse match raw array.
1310 !
1320 OUTPUT @Nwa;"S22;OPC?;SING;"
1330 ENTER @Nwa;Reply
1340 BEEP
1350 OUTPUT @Nwa;"OUTPRAW1"
1360 ENTER @Nwa;Array11(*)
1370 !
1380 ! Done with gathering measurements except for isolation. If
1390 ! isolation desired, then put forward isolation into 'Array04',
1400 ! reverse isolation into 'Array10'.
1410 !

```

```
1420 ! Now download and let analyzer compute the full 2-port error
1430 ! correction.
1440 !
1450 ! First select the calibration type desired.
1460 !
1470 OUTPUT @Nwa;"CALIFUL2;"
1480 !
1490 ! Turn off the beep indicating standard done.
1500 !
1510 OUTPUT @Nwa;"BEEPDONEOFF;"
1520 !
1530 ! Set up for the reflection standards.
1540 !
1550 OUTPUT @Nwa;"REFL;"
1560 !
1570 ! Input the forward 'open' standard's raw array. For all of
1580 ! these, the analyzer is first taking a "dummy" measurement, goes
1590 ! into hold, then the computer downloads the data using an
1600 ! INPUCALC command which overwrites the "dummy" data with the raw
1610 ! array gathered previously.
1620 !
1630 OUTPUT @Nwa;"OPC?;CLASS11A;"
1640 ENTER @Nwa;Reply
1650 OUTPUT @Nwa;"INPUCALC01",Array01(*)
1660 !
1670 ! Input the forward 'short' standard's raw array.
1680 !
1690 OUTPUT @Nwa;"OPC?;CLASS11B;"
1700 ENTER @Nwa;Reply
1710 OUTPUT @Nwa;"INPUCALC02",Array02(*)
1720 !
1730 ! Input the forward 'load' standards's raw array.
1740 !
1750 IF Is_8753 THEN
1760     OUTPUT @Nwa;"OPC?;CLASS11C;"
1770 ELSE
1780     OUTPUT @Nwa;"CLASS11C;OPC?;STANA;"
1790 END IF
1800 ENTER @Nwa;Reply
1810 OUTPUT @Nwa;"INPUCALC03",Array03(*)
1820 !
1830 ! Input reverse 'open'.
1840 !
1850 OUTPUT @Nwa;"OPC?;CLASS22A;"
1860 ENTER @Nwa;Reply
1870 OUTPUT @Nwa;"INPUCALC07",Array07(*)
1880 !
1890 ! Input reverse 'short'.
1900 !
1910 OUTPUT @Nwa;"OPC?;CLASS22B;"
1920 ENTER @Nwa;Reply
1930 OUTPUT @Nwa;"INPUCALC08",Array08(*)
1940 !
1950 ! Input reverse 'load'.
1960 !
1970 IF Is_8753 THEN
1980     OUTPUT @Nwa;"OPC?;CLASS22C;"
1990 ELSE
```

```

2000     OUTPUT @Nwa;"CLASS22C;OPC?;STANA;"
2010 END IF
2020 ENTER @Nwa;Reply
2030 OUTPUT @Nwa;"INPUCALC09",Array09(*)
2040     !
2050     ! Tell analyzer that reflection measurements done.
2060     !
2070 OUTPUT @Nwa;"REFD;"
2080 DISP "COMPUTING REFLECTION CALIBRATION COEFFICIENTS"
2090     !
2100     ! Now start the transmission standard downloads.
2110     !
2120 OUTPUT @Nwa;"TRAN;"
2130     !
2140     ! Now input the forward transmission raw arrays.
2150     !
2160 OUTPUT @Nwa;"OPC?;FWDI;"
2170 ENTER @Nwa;Reply
2180 OUTPUT @Nwa;"INPUCALC06",Array06(*)
2190     !
2200 OUTPUT @Nwa;"OPC?;FWDI;"
2210 ENTER @Nwa;Reply
2220 OUTPUT @Nwa;"INPUCALC05",Array05(*)
2230     !
2240     ! Now input the reverse transmission arrays.
2250     !
2260     !DISP "MEASURING REVERSE TRANSMISSION"
2270 OUTPUT @Nwa;"OPC?;REVT;"
2280 ENTER @Nwa;Reply
2290 OUTPUT @Nwa;"INPUCALC12",Array12(*)
2300     !
2310 OUTPUT @Nwa;"OPC?;REVM;"
2320 ENTER @Nwa;Reply
2330 OUTPUT @Nwa;"INPUCALC11",Array11(*)
2340     !
2350     ! Tell analyzer that transmission inputs done.
2360     !
2370 OUTPUT @Nwa;"TRAD"
2380     !
2390     ! Omitting isolation for this example. Could be easily
2400     ! incorporating by using method shown for transmission and
2410     ! reflection.
2420     !
2430 OUTPUT @Nwa;"ISOL;"
2440 OUTPUT @Nwa;"OMII;"           ! IF ISOLATION CAL NOT DESIRED
2450     ! Here's how to download isolation. Un-comment these lines.
2460     !
2470 !OUTPUT @Nwa;"OPC?;REVI;" ! reverse isolation term
2480 !ENTER @Nwa;Reply
2490 !OUTPUT @Nwa;"INPUCALC10",Array10(*)
2500     !
2510 !OUTPUT @Nwa;"OPC?;FWDI;" ! forward isolation term
2520 !ENTER @Nwa;Reply
2530 !OUTPUT @Nwa;"INPUCALC04",Array04(*)
2540     !
2550     ! Tell analyzer that done with isolation measurements.
2560     !
2570 OUTPUT @Nwa;"ISOD;"

```



```
2580 DISP "COMPUTING CALIBRATION COEFFICIENTS"
2590 !
2600 ! Tell analyzer to compute full 2-port error coefficients.
2610 !
2620 OUTPUT @Nwa;"OPC?;SAV2;"
2630 ENTER @Nwa;Reply
2640 DISP "DONE"
2650 !
2660 ! Put analyzer back into continuous sweep so that you can verify
2670 ! the proper application of the error correction.
2680 !
2690 OUTPUT @Nwa;"CONT;"
2700 OUTPUT @Nwa;"BEEPDONEON;"      ! Re-enable the beep
2710 LOCAL 7                        ! Release HP-IB control
2720 END
```

Example 2G: Take4 — Error Correction Processed on an External PC

NOTE This program is only valid on ES model analyzers.

Take4 mode offloads the error correction process to an external PC in order to increase throughput on the analyzer.

When using the analyzer with error correction turned off, it will only sweep in one direction, collecting data for the parameter selected under the **Meas** key. To emulate the error correction process in an external computer, you collect the raw data for each of the four S-parameters.

Take4 initiates a mode in which every measurement cycle is characterized by sweeping in both the forward and reverse directions and collecting raw data for all four S-parameters. Using previously extracted calibration arrays, you can then extract the raw data (or the pre-raw data, as explained later in this section) for the S-parameters and perform the error correction in an external computer. When measuring more than one parameter, this process can be done in less time than if using the normal instrument error correction and data transfer (see [Table 7-9 on page 7-50](#)).

NOTE This mode is intended for remote use only. Any attempt to change the measured parameter or any attempt to apply a calibration will turn off the Take4 mode. The displayed trace data is always uncorrected S11, regardless of what the display may indicate.

Using the Take4 mode requires the following steps:

Manual steps:

1. Set up the measurement state.
2. Turn off raw offsets by selecting **System** **CONFIGURE MENU** **RAW OFFSET OFF** . This selection achieves two things:
 - Eliminates attenuator offsets and sampler hardware offsets from the cal arrays, which are generated in the 2-port error correction. This makes the cal arrays and the eventual OUTPPRE arrays compatible, both using pre-raw data.
 - Eliminates sampler correction, a frequency response correction that is normally contained in pre-raw data. This is done because sampler correction is not needed for data that will be fully corrected, and because instrument states recall faster without it. To realize this efficiency, you must also disable spur avoidance (see next step).
3. Optional step: Turn off spur avoidance by selecting **System** **CONFIGURE MENU** **SPUR AVOID OFF** . Spur avoidance creates a table of values as part of the sampler offset table. The creation of this table takes considerable time during a recall of an instrument state. Turning off spur avoidance will save time during frequency changes and instrument state recalls.
4. Perform a 2-port error correction and save it to a register.

5. Connect the device under test (DUT).

The instrument is now configured for the program to read the correction arrays and apply the Take4 mode.

Programming steps:

6. Extract the twelve calibration arrays using the commands OUTPCALC[01-12].

7. Enable Take4 mode using the command TAKE4ON.

8. Take a sweep and extract the four pre-raw or raw arrays.

- To extract pre-raw data arrays (see previous discussion on raw offsets), you can use the commands SWPSTART (initiate a single sweep) with OUTPPRE[1-4]. These commands are more efficient than SING and OUTPRAF[1-4] because the analyzer will respond to OUTPPRE1 and OUTPPRE2 as soon as the forward sweep is done and transfer the data during the reverse sweep. With SING, the GPIB bus is held off until the entire sweep is complete.
- To extract raw data arrays, you can use the commands SING (initiate a single sweep) with OUTPRAW[1-4], or the slightly faster OUTPRAF[1-4]. If the cal arrays were created using **RAW OFFSET ON**, you should use this method so that your measurement data is compatible with the calibration data.

9. Apply the calibration arrays (see [Table 3-3 on page 3-19](#)) to either the pre-raw or raw data as described in programming example 2G and in the user's guide (see the figure titled "Full 2-Port Error Model").

Table 7-9 Measurement Speed: Data Output and Error Correction to an External PC

Mode (data output to external PC)	Time (secs) 1-parameter	Time (secs) 2-parameters	Time (secs) 3-parameters	Time (secs) 4-parameters
Full band, IF BW=3700, 201 points, SPUR AVOID OFF , RAW OFFSET OFF , Blank Display ON				
Take4	0.780	0.780	0.780	0.780
Normal error correction	0.712	0.907	0.970	1.03
Narrow band, IF BW=3700, 201 points, CF=1.8GHz, Span=200MHz, SPUR AVOID OFF , RAW OFFSET OFF , Blank Display ON				
Take4	0.215	0.215	0.215	0.215
Normal error correction	0.151	0.224	0.290	0.350
Take4 mode used in conjunction with an HP Omnibook 5500CT laptop, 133 MHz Pentium, running HP VEE 4.0 as program language.				

Programming example 2G is the complete execution of a two port error correction offloaded to an external PC.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer. Binary mode is used for data transfers in order to get the fastest response.
- The system is initialized.
- The state of raw offsets is queried and turned off if they had been on.
- The analyzer is placed into local mode and the system operator is prompted to set up a 2-port calibration before continuing.
- The calibration coefficients are read from the analyzer into memory arrays.
- The calibration is turned off and the analyzer is placed into TAKE4 mode and HOLD mode.
- The operator is prompted to connect the DUT and select which S-parameter to send back to the analyzer.
- The currently displayed data is saved to the analyzer's internal memory to initialize the memory array.
- The analyzer is set up to display memory only and the default beep is turned off.
- The operator is prompted to press any key to terminate the program.
- A sweep is initiated and the main loop of the program begins.
- After the sweep concludes, the four pre-raw S-parameters are read from the analyzer into an array in the computer.

- The error-corrected (calibrated) S-parameters are calculated using the pre-raw data and calibration coefficients.
- The calibrated data for the S-parameter selected earlier is sent into the analyzer and saved to the analyzer's internal memory.
- A new sweep is initiated and the loop repeats if there has been no keyboard activity.
- Upon exit of the loop, the analyzer is set up to display the active measurement trace.
- The analyzer's internal calibration is turned back on and continuous sweep mode is resumed.
- The analyzer is released from remote control and the program ends.

Running the Program

The analyzer is initialized and raw offsets are turned off. After the analyzer is placed in local mode, the operator is prompted to set up a 2-port calibration before continuing. The resulting calibration coefficients are read from the analyzer into memory arrays.

Next, the calibration is turned off and the analyzer is placed into TAKE4 mode and HOLD mode. After being prompted to connect the DUT, the operator selects which S-parameter to send back to the analyzer. The currently displayed data is saved to the analyzer's internal memory and the analyzer is set up to display memory only. The operator is prompted to press any key to terminate the program, a sweep is initiated and the main loop of the program begins.

After the sweep concludes, the four pre-raw S-parameters are read from the analyzer into memory arrays. The error-corrected (calibrated) S-parameters are calculated and the calibrated data for the S-parameter selected earlier is read into the analyzer and saved to the analyzer's internal memory. A new sweep is initiated and the loop repeats if there has been no keyboard activity.

Upon exit of the loop, the analyzer is set up to display the active measurement trace. The analyzer's internal calibration is turned back on and continuous sweep mode is resumed before the program ends.

BASIC Program Listing

```
1      ! This program demonstrates the TAKE4 mode.
2      ! The program first asks the user to set up the instrument
3      ! with a 2-port calibration.  The subroutine "Read_Cal_co"
4      ! is used to read the 12 term error correction arrays into
5      ! a (N x 12) 2-dimension array (N = number of points).  This will
6      ! be used in the "Calc_2_port" subroutine.  The program turns off
7      ! error correction, puts the analyzer in hold, turns on TAKE4
8      ! mode, and starts a sweep.  The subroutine "Read_4_raw" reads in
9      ! the uncorrected data.  The subroutine "Calc_2_port" calculates
10     ! the error correction and returns the corrected arrays.
11     ! The corrected S-parameter is re-input to the analyzer, stored
12     ! in the memory trace and displayed in memory for a visual
13     ! indication of the take4 function.
14     !
15     ! EXAMP2G
16     !
17     !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
```

```

18      !
19      ! Initialize Arrays and Variables
20      !
21      !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
22      !
23      INTEGER Hdr,Length
24      COMPLEX S11x,S21x,S12x,S22x,D
25      COMPLEX Calcoe(1:1601,1:12)      ! Cal Coefficients
26      COMPLEX S11r(1:1601)             ! Pre-Raw Data
27      COMPLEX S21r(1:1601)             ! Pre-Raw Data
28      COMPLEX S12r(1:1601)             ! Pre-Raw Data
29      COMPLEX S22r(1:1601)             ! Pre-Raw Data
30      COMPLEX S11a(1:1601)             ! Corrected Data
31      COMPLEX S21a(1:1601)             ! Corrected Data
32      COMPLEX S12a(1:1601)             ! Corrected Data
33      COMPLEX S22a(1:1601)             ! Corrected Data
34      !
35      ! Initialize output commands
36      !
37      DIM Out_cmd$(1:12)[10]
38      DATA "OUTPCALC01","OUTPCALC02","OUTPCALC03","OUTPCALC04"
39      DATA "OUTPCALC05","OUTPCALC06","OUTPCALC07","OUTPCALC08"
40      DATA "OUTPCALC09","OUTPCALC10","OUTPCALC11","OUTPCALC12"
41      READ Out_cmd$(*)
42      !
43      ! Setup Network Analyzer
44      !
45      ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
46      ASSIGN @Nwdat TO 716;FORMAT OFF! Binary mode to read and write data
47      ABORT 7                          ! Generate an IFC (Interface Clear)
48      CLEAR @Nwa                       ! SDC (Selected Device Clear) analyzer
49      CLEAR SCREEN
50      !
51      OUTPUT @Nwa;"RAWOFFS?;"          ! Query whether raw offsets are on
52      ENTER @Nwa;I
53      IF I=1 THEN
54      PRINT "Raw offsets must be turned off prior to calibration."
55      PRINT "Turning them off now."
56      OUTPUT @Nwa;"RAWOFFSOFF;"
57      END IF
58      !
59      !
60      Check_for_cal:                   ! Turn on two-port cal, check and read
61      REPEAT
62      LOCAL @Nwa
63      INPUT "Set up a 2-port cal, hit return when ready",A
64      OUTPUT @Nwa;"CORR?;"
65      ENTER @Nwa;I
66      UNTIL I=1
67      !
68      ! Read the Calibration Coefficients
69      !
70      DISP "Reading in Calibration Coefficient Arrays: Please wait."
71      GOSUB Read_cal_co
72      !
73      ! Setup TAKE4 Mode,
74      !
75      OUTPUT @Nwa;"Corroff;take4on;hold;"

```

```

76      !
77      ! Choose an S-Parameter to send back to the Network Analyzer
78      !
79 REPEAT
80 INPUT "SELECT S-Parameter: 1=S11, 2=S21, 3=S12, 4=S22",Disp
81 SELECT Disp
82 CASE 1
83   Title$="S11"
84   Again=0
85 CASE 2
86   Title$="S21"
87   Again=0
88 CASE 3
89   Title$="S12"
90   Again=0
91 CASE 4
92   Title$="S22"
93   Again=0
94 CASE ELSE
95   Again=1
96 END SELECT
97 UNTIL Again=0
98 OUTPUT @Nwa;"TITL""""&Title$&"""";"
99      !
100     ! For this demonstration, we will return corrected values to the
101     ! memory trace. Therefore, display memory only
102     !
103     !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
104     !
105     ! Note:  Displaying MEMORY only inhibits the analyzer's data
106     !         processing. Raw, Data, and Formatted arrays are not
107     !         updated. PreRaw is good.
108     !
109 OUTPUT @Nwa;"DATI;DISPMEMO;BEEPDONEOFF;"
110 PRINT "PRESS ANY KEY TO STOP"
111 Time1=TIMEDATE
112      !
113     ! Take the first sweep
114     !
115 OUTPUT @Nwa;"OPC?;SWPSTART;"
116 Run=1
117 Count=0
118      !
119     ! Now keep looping until any key is pressed
120     !
121 Timefmt:IMAGE "Cycle: ",2D,5X," 2-port Cal: ",2D.DD,X,"secs, + displayed:
",2D.DDD,X,"seconds."
122 ON KBD GOSUB Stop_running
123 REPEAT
124   Count=Count+1
125   ENTER @Nwa;Done           ! Read the OPC from the SWPSTART Command
126   GOSUB Read_4_raw          ! Read the four raw S-parameters
127   GOSUB Calc_2_port         ! Calculate the Corrected S-parameters
128   Time2=TIMEDATE
129   OUTPUT @Nwa;"INPUData;"   ! Input them into the data array
130   OUTPUT @Nwdat;Hdr,Length  ! Data header, same as the cal coeff's
131   SELECT Disp
132   CASE 1

```

```

133 OUTPUT @Nwdat;S11a(*)      ! Send corrected S11 data to analyzer OR
134 CASE 2                    !
135 OUTPUT @Nwdat;S21a(*)      ! Send corrected S21 data to analyzer OR
136 CASE 3                    !
137 OUTPUT @Nwdat;S12a(*)      ! Send corrected S12 data to analyzer OR
138 CASE 4                    !
139 OUTPUT @Nwdat;S22a(*)      ! Send corrected S22 data to analyzer
140 END SELECT
141 OUTPUT @Nwa;"DATI;"        ! Put the data into memory
142 OUTPUT @Nwa;"OPC?;SWPSTART;"! and start another sweep
143 Time3=TIMEDATE
144 DISP USING Timefmt;Count,Time2-Time1,Time3-Time1
145 Time1=TIMEDATE
146 UNTIL Run=0
147 OUTPUT @Nwa;"DISPDATA;CORRON;CONT;"
148 ABORT 7
149 LOCAL @Nwa
150 STOP
151 Stop_running:      ! Terminate program upon keyboard input
152 Run=0
153 OFF KBD
154 RETURN
155 Read_4_raw:      ! Read in the pre-raw arrays
156 A$="OUTPPRE"
157 FOR B=1 TO 4
158 Out_cmd1$=A$&VAL$(B)&";"      ! Build up the OUTPPREXX commands
159 OUTPUT @Nwa;Out_cmd1$
160 ENTER @Nwdat;Hdr,Length      ! Read in the header
161 SELECT B
162     !
163     ! Now read in each raw array
164     !
165 CASE 1
166     ENTER @Nwdat;S11r(*)
167 CASE 2
168     ENTER @Nwdat;S21r(*)
169 CASE 3
170     ENTER @Nwdat;S12r(*)
171 CASE 4
172     ENTER @Nwdat;S22r(*)
173 END SELECT
174 NEXT B
175 RETURN
176 Read_cal_co:      ! This loops through 12 times, reading each cal.
177     ! coefficient. First set up the FORM
178 OUTPUT @Nwa;"FORM3;HOLD;"
179 OUTPUT @Nwa;"POIN?;"
180 ENTER @Nwa;Numpoints
181     !
182     ! Redimension the Calcoe array according to the number of points
183     !
184 REDIM Calcoe(1:Numpoints,1:12)
185     !
186     ! Also redimension all the other arrays used here, as this
187     ! routine only runs once at setup.
188     !
189 REDIM S11a(1:Numpoints)
190 REDIM S21a(1:Numpoints)

```



```

191 REDIM S12a(1:Numpoints)
192 REDIM S22a(1:Numpoints)
193 REDIM S11r(1:Numpoints)
194 REDIM S21r(1:Numpoints)
195 REDIM S12r(1:Numpoints)
196 REDIM S22r(1:Numpoints)
197 FOR Cx=1 TO 12
198   OUTPUT @Nwa;Out_cmd$(Cx)      ! OUTPCALCXC commands
199   ENTER @Nwdat;Hdr,Length      ! Read the header using FORMAT OFF mode
200   FOR N=1 TO Numpoints
201     ENTER @Nwdat;Calcoe(N,Cx) ! Read data using FORMAT OFF mode
202   NEXT N
203 NEXT Cx
204 !
205 RETURN
206 Calc_2_port:      ! Perform 2 Port Calibration
207 FOR N=1 TO Numpoints
208   !
209   ! First correct for crosstalk, directivity, and tracking
210   !
211   ! Subtract Directivity, divide by tracking
212   S11x=(S11r(N)-Calcoe(N,1))/Calcoe(N,3)
213   !
214   ! Subtract Crosstalk, divide by tracking
215   S21x=(S21r(N)-Calcoe(N,4))/Calcoe(N,6)
216   !
217   ! Subtract Crosstalk, divide by tracking
218   S12x=(S12r(N)-Calcoe(N,10))/Calcoe(N,12)
219   !
220   ! Subtract Directivity, divide by tracking
221   S22x=(S22r(N)-Calcoe(N,7))/Calcoe(N,9)
222   !
223   ! Now calculate the common denominator
224   !
225   D=(1+S11x*Calcoe(N,2))*(1+S22x*Calcoe(N,8))-(S21x*S12x*Calcoe(N,5)*Calcoe(N,11))
226   !
227   !
228   ! Now calculate each S-parameter
229   !
230   S11a(N)=((S11x*(1+S22x*Calcoe(N,8)))-(S21x*S12x*Calcoe(N,5)))/D
231   S21a(N)=((1+S22x*(Calcoe(N,8)-Calcoe(N,5)))*(S21x))/D
232   S12a(N)=((1+S11x*(Calcoe(N,2)-Calcoe(N,11)))*(S12x))/D
233   S22a(N)=((S22x*(1+S11x*Calcoe(N,2)))-(S21x*S12x*Calcoe(N,11)))/D
234 NEXT N
235 RETURN
236 END

```

Measurement Data Transfer Examples

There are two methods that can be used to read trace information from the analyzer:

- selectively, using the trace markers
- completely, using the trace-data array

If only specific information (such as a single point on the trace or the result of a marker search) is required, the marker output command can be used to read the information. If all of the trace data is required, see Examples 3B through 3E for examples of the various formats available.

Trace-Data Formats and Transfers

Refer to [Table 7-10 on page 59](#). This table shows the number of bytes required to transfer a 201-point trace in the different formats. As you will see in the first example (FORM 4), ASCII data is the easiest to transfer, but the most time consuming due to the number of bytes in the trace. If you are using a PC-based controller, a more suitable format would be FORM 5. To use any trace data format other than FORM 4 (ASCII data) requires some care in transferring the data to the computer. Data types must be matched to read the bytes from the analyzer directly into the variable array. The computer must be told to stop formatting the incoming data and treat it as a binary-data transfer. All of the binary data formats also have a four-byte header to deal with. The first two bytes are the ASCII characters “#A” that indicate that a fixed length block transfer follows, and the next two bytes form an integer containing the number of bytes in the block to follow. The header must be read in to separate it from the rest of the block data that is to be mapped into an array. “[Array-Data Formats](#)” on [page 4-6](#) discusses the different types of formats and their compositions.

Data may also be transferred from several different locations in the trace-processing chain. These examples will illustrate formatted-data transfers, but other locations in the trace-data processing chains may be accessed. See [Figure 5-1 on page 5-3](#).

In this section, an example of each of the data formats will be shown for comparison. In general, FORM 1 (internal binary format) should be used for traces that are not being utilized for data content. Calibration data that is being transferred to a file and back is good example. See “[Example 3D: Data Transfer Using Frequency-Array Information](#)” on [page 7-64](#).

Arrays which will be interpreted or processed within your program should be in FORM 2, 3 or 5, whichever is appropriate for your computer. Example 3C shows how to transfer a trace in these formats.

In Examples 3B and 3C, the frequency counterpart of each data point in the array is also determined. Many applications generate a frequency and magnitude, or a phase array for the test results. Such data may be required for other data processing applications (such as comparing data from other measurements).

In Example 3B, the frequency data is constructed from the frequency span information. Alternatively, it is possible to read the frequencies directly out of the instrument with the OUTPLIML command. OUTPLIML reports the limit-test results by transmitting the stimulus

point tested, a number indicating the limit-test results, and then the upper and lower limits at that stimulus point (if available). The number indicating the limit results is a -1 for no test, 0 for fail, and 1 for pass. If there are no limits available, the analyzer transmits zeros. For this example, we delete the limit test information and keep the stimulus information.

In Example 3C, the limit-test array is read into the controller and used to provide the values directly from the analyzer memory. Reading from the limit-test array is convenient, although it outputs the results in ASCII format (form 4), which may be slow. If there is no other way to obtain the frequency data, this transfer time may be acceptable. Frequency information becomes more difficult to determine when not using the linear sweep mode. Log-frequency sweeps and list-frequency sweeps have quite different values for each data point. For these special cases, the additional time spent reading out the limit test results is an acceptable solution for obtaining the valid frequency information for each data point in the trace.

Example 3A: Data Transfer Using Markers

Markers are the simplest form of trace-data transfer. A marker may be positioned using one of three methods:

- by a frequency location
- by an actual data point location
- by a trace-data value

In the following example, the marker is positioned on the trace's maximum value. Once positioned on the trace, the trace data at that point can be read into the controller. The marker data is always returned in FORM 4, ASCII format. Each number is sent as a 24-character string. Characters can be digits, signs, or decimal points. All characters should be separated by commas. In the case of markers, three numbers are sent. The display format determines the values of the marker responses. See [Table 4-1 on page 4-5](#).

When using trace data, it is important to control the network analyzer's sweep function (and therefore the trace data) from the computer. Using the computer to control the instrument's sweep ensures that the data you read into the controller is in a quiescent or steady state. It also ensures that the measurement is complete.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The selected frequency span is swept once.
- The marker is activated and placed on the maximum trace value.
- The three marker values are output to the controller and displayed.
- The instrument is returned to local control and the program ends.

Running the Program

Run the program. The analyzer is preset and a sweep is taken. Marker 1 is enabled and positioned on the largest value in the trace. The marker is output to the controller and printed on the controller display. The analyzer is returned to local control. Position the marker using the front panel knob or data-entry keys, and compare the displayed value on the analyzer with the value that was transmitted to the controller.

The three values returned to the controller are:

1. reflection, in dB
2. a non-significant value
3. the stimulus frequency at the maximum point

A non-significant value means that the analyzer returned a value that is meaningless in this data format.

[Table 4-1 on page 4-5](#) provides an easy reference for the types of data returned with the various data-format operational modes.

BASIC Program Listing

```
10  ! This program takes a sweep on the analyzer and turns on a marker.
20  ! The marker is positioned on the trace maximum and the marker data
30  ! is output in ASCII format.
40  !
50  ! EXAMP3A
60  !
70  ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
80  !
90  CLEAR SCREEN
100 ! Initialize the analyzer
110 ABORT 7                          ! Generate an IFC (Interface Clear)
120 CLEAR @Nwa                       ! SDC (Selective Device Clear)
130 OUTPUT @Nwa;"OPC?;PRES;"         ! Preset the analyzer and wait
140 ENTER @Nwa;Reply                 ! Read in the 1 returned
150 !
160 OUTPUT @Nwa;"OPC?;SING"          ! Single sweep mode and wait
170 ENTER @Nwa;Reply                 ! Read 1 when sweep complete
180 !
190 OUTPUT @Nwa;"MARK1;"             ! Turn on marker 1
200 OUTPUT @Nwa;"SEAMAX;"            ! Find the maximum
210 !
220 OUTPUT @Nwa;"OUTPMARK;"          ! Request the current marker value
230 ENTER @Nwa;Value1,Value2,Stim    ! Read three marker values
240 !
250 ! Show the marker data received.
260 PRINT " Value 1"," Value 2","    Stimulus (Hz)"
270 PRINT Value1,Value2,Stim         ! Print the received values
280 PRINT
290 PRINT " Compare the active marker block with the received values"
300 !
310 LOCAL @Nwa                       ! Release HP-IB control
320 END
```

Example 3B: Data Transfer Using FORM 4 (ASCII Transfer)

This example shows you how to transfer a trace array from the analyzer using FORM 4, an ASCII data transfer.

Table 7-10 Analyzer Array-Data Formats

Format type	Type of Data	Bytes per Data Value	Bytes per point 2 data values	(201 pts) Bytes per trace	Total Bytes with header
FORM 1	Internal Binary	3	6	1206	1210
FORM 2	IEEE 32-bit Floating-Point	4	8	1608	1612
FORM 3	IEEE 64-bit Floating-Point	8	16	3216	3220
FORM 4	ASCII Numbers	24 (Typical)	50 (Typical)	10,050 (Typical)	10,050* (Typical)
FORM 5	PC-DOS 32-bit Floating-Point	4	8	1608	1612

*No header is used in FORM 4.

The next most common data transfer is to transfer a trace array from the analyzer. [Table 7-10](#) shows the relationship of the two values-per-point that are transferred to the analyzer. When FORM 4 is used, each number is sent as a 24-character string, each character represented by a digit, sign, or decimal point. Each number is separated from the previous number with a comma. Since there are two numbers-per-point, a 201-point transfer in FORM 4 takes 10,050 bytes. This form is useful only when input-data formatting is difficult with the instrument controller. Refer to [Table 7-10](#) for a comparison with the other formats.

An example of a simple data transfer using FORM 4 (ASCII data transfer) is shown in this program. A fairly common requirement is to create frequency-amplitude data pairs from the trace data. No frequency information is included with the trace data transfer, because the frequency data must be calculated. Relating the data from a linear frequency sweep to frequency can be done by querying the analyzer start frequency, the frequency span, and the number of points in the sweep. Given that information, the frequency of point N in a linear frequency sweep is:

$$F = \text{StartFrequency} + (N - 1) \times \frac{\text{Span}}{(\text{Points} - 1)}$$

Example 3B illustrates this technique. It is a straight-forward solution for linear uniform sweeps. For other sweep types, frequency data is more difficult to construct and may best be read directly from the analyzer's limit-test array. See [“Example 3D: Data Transfer Using Frequency-Array Information”](#) on page 7-64.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.

- The trace-data array is allocated.
- The trace length is set to 11.
- The selected frequency span is swept once.
- The FORM 4, ASCII format is set.
- The formatted trace is read from the analyzer and displayed.
- The frequency increments between the points are calculated.
- The marker is activated and placed at the lowest frequency of the analyzer (50 MHz).
- The instrument is returned to local control and the program ends.

Running the Program

Run the program and watch the controller console. The analyzer will perform an instrument preset. The program will then print out the data values received from the analyzer. The marker is activated and placed at the left-hand edge of the analyzer's display. Position the marker with the knob and compare the values read with the active marker with the results printed on the controller console. The data points should agree exactly. Keep in mind that no matter how many digits are displayed, the analyzer is specified to measure:

- magnitude to a resolution of 0.001 dB
- phase to a resolution of 0.01 degrees
- group delay to a resolution of 0.01 ps

Changing the display format will change the data sent with the OUTPFORM transfer. See [Table 7-10](#) for a list of the specific data that is provided with each format. The data from OUTPFORM reflects all the post processing such as:

- time domain
- gating
- electrical delay
- trace math
- smoothing

BASIC Program Listing

```
10 ! This program shows an ASCII format trace data transfer using form 4.
20 ! The data is received as a string of ASCII characters, 24 characters
30 ! per data point and transferred into a real array in the controller. The
40 ! corresponding frequency data is calculated from the analyzer settings.
50 !
60 ! EXAMP3B
70 !
80 ASSIGN @Nwa TO 716 ! Assign an I/O path to the analyzer
90 !
100 CLEAR SCREEN
110 ! Initialize
120 ABORT 7 ! Generate an IFC (Interface Clear)
130 CLEAR @Nwa ! SDC (Selective Device Clear)
140 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer
150 ENTER @Nwa;Reply ! Read the 1 when complete
160 !
```

```

170 ! Trace values are two elements per point, display format dependent
180 DIM Dat(1:11,1:2)           ! Trace data array
190 !
200 OUTPUT @Nwa;"POIN 11;"      ! Set trace length to 11 points
210 OUTPUT @Nwa;"OPC?;SING;"    ! Single sweep mode and wait
220 ENTER @Nwa;Reply            ! Read reply
230 !
240 OUTPUT @Nwa;"FORM4;"        ! Set form 4 ASCII format
250 OUTPUT @Nwa;"OUTPFORM;"     ! Send formatted trace to controller
260 ENTER @Nwa;Dat(*)           ! Read in data array from analyzer
270 !
280 ! Now to calculate the frequency increments between points
290 OUTPUT @Nwa;"POIN?;"        ! Read number of points in the trace
300 ENTER @Nwa;Num_points
310 OUTPUT @Nwa;"STAR?;"        ! Read the start frequency
320 ENTER @Nwa;Startf
330 OUTPUT @Nwa;"SPAN?;"        ! Read the span
340 ENTER @Nwa;Span
350 !
360 F_inc=Span/(Num_points-1)    ! Calculate fixed frequency increment
370 !
380 PRINT "Point","Freq (MHz)"," Value 1"," Value 2"
390 IMAGE 3D,7X,5D.3D,3X,3D.4D,3X,3D.4D ! Formatting for controller display
400 !
410 FOR I=1 TO Num_points        ! Loop through data points
420   Freq=Startf+(I-1)*F_inc    ! Calculate frequency of data point
430   PRINT USING 390;I,Freq/1.E+6,Dat(I,1),Dat(I,2)! Print analyzer data
440 NEXT I
450 !
460 OUTPUT @Nwa;"MARKDISC;"      ! Discrete marker mode
470 OUTPUT @Nwa;"MARK1 3E+4;"    ! Position marker at 30 KHz
480 !
490 OUTPUT @Nwa;"OPC?;WAIT;"     ! Wait for the analyzer to finish
500 ENTER @Nwa;Reply            ! Read the 1 when complete
510 LOCAL 7                      ! Release HP-IB control
520 !
530 PRINT
540 PRINT "Position the marker with the knob and compare the values"
550 !
560 END

```

Example 3C: Data Transfer Using Floating-Point Numbers

This example program illustrates data transfer using FORM 3 in which data is transmitted in the floating-point formats. FORM 2 is nearly identical except for the IEEE 32-bit format of 4 bytes-per-value. FORM 5 reverses the order of the bytes to conform with the PC conventions for defining a real number.

The block-data formats have a four-byte header. The first two bytes are the ASCII characters “#A” that indicate that a fixed-length block transfer follows, and the next two bytes form an integer containing the number of bytes in the block to follow. The header must be read in so that data order is maintained.

This transfer is more than twice as fast than a FORM 4 transfer. With the FORM 4 transfer, 10,050 bytes are sent ($201 \text{ points} \times 2 \text{ values-per-point} \times 24 \text{ bytes-per-value}$). Using FORM 2 to transfer the data, only 1612 bytes are sent ($201 \text{ points} \times 2 \text{ values-per-point} \times 4 \text{ bytes-per-value}$). See [“Array-Data Formats” on page 4-6](#).

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The integer variables are defined to contain the header information.
- The number of points in the trace is set to 11.
- The selected frequency span is swept once.
- Data-transfer format 3 is set.
- The headers are read from the trace.
- The array size is calculated and allocated.
- The trace data is read in and printed.
- The marker is activated and placed at the lowest frequency of the analyzer (50 MHz).
- The instrument is returned to local control and the program ends.

Running the Program

Run the program. The computer displays the number of elements and bytes associated with the transfer of the trace, as well as the first 10 data points. Position the marker and examine the data values. Compare the displayed values with the analyzer's marker values.

BASIC Program Listing

```
10 ! This program shows how to read in a data trace in IEEE 64 bit
20 ! format. The array header is used to determine the length of the
30 ! array and to allocate the array size.
40 !
50 ! Program Example 3C
60 !
70 CLEAR SCREEN
80 ! Initialize the analyzer
90 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 ASSIGN @Nwadat TO 716;FORMAT OFF ! Binary data path definition
110 !
```



```

120 ABORT 7                                ! Generate an IFC ( Interface Clear)
130 CLEAR @Nwa                            ! SDC (Selected Device Clear)
140 OUTPUT @Nwa;"OPC?;PRES;"             ! Preset the analyzer and wait
150 ENTER @Nwa;Reply                      ! Read the 1 when completed
160 !
170 INTEGER Dheader,Dlength              ! Integer variables for header info
180 Numpoints=11                          ! Number of points in the trace
190 OUTPUT @Nwa;"POIN";Numpoints;";"     ! Set number of points in trace
200 !
210 ! Set up data transfer
220 OUTPUT @Nwa;"OPC?;SING"              ! Single sweep and wait
230 ENTER @Nwa;Reply                     ! Read the 1 when completed
240 !
250 OUTPUT @Nwa;"FORM3;"                 ! Select form 3 format
260 OUTPUT @Nwa;"OUTPFORM;"             ! Send formatted output trace
270 !
280 ENTER @Nwadat;Dheader,Dlength        ! Read headers from trace data
290 !
300 ALLOCATE Dat(1:Dlength/16,1:2)       ! Use length to determine array size
310 ENTER @Nwadat;Dat(*)                 ! Read in trace data
320 !
330 PRINT "Size of array ";Dlength/16;" elements"
340 PRINT "Number of bytes ";Dlength
350 !
360 ! Print out the data array
370 PRINT "Element","Value 1","         Value 2"
380 IMAGE 3D,6X,3D.6D,6X,3D.6D
390 FOR I=1 TO Numpoints                  ! Loop through the data points
400   PRINT USING 380;I,Dat(I,1),Dat(I,2)
410 NEXT I
420 !
430 OUTPUT @Nwa;"MARKDISC;"              ! Discrete marker mode
440 OUTPUT @Nwa;"MARK1 .3E+6;"           ! Position marker at 30 KHz
450 !
460 OUTPUT @Nwa;"OPC?;WAIT;"             ! Wait for the analyzer to finish
470 ENTER @Nwa;Reply                     ! Read the 1 when complete
480 LOCAL @Nwa                           ! Release HP-IB control
490 !
500 PRINT
510 PRINT "Position the marker with the knob and compare the values."
520 !
530 END

```

Example 3D: Data Transfer Using Frequency-Array Information

Example 3C was used to read in the trace-data array. Example 3D explains how to use the limit-test array to read the corresponding frequency values for the completed trace array into the controller. The analyzer is set to sweep from 50 MHz to 200 MHz in log-frequency mode with the number of points in the trace set to 11. This makes it very difficult to compute the frequency-point spacing in the trace. The points are equally spaced across the trace, but not equally spaced in relation to frequency (because the frequency span is displayed in a logarithmic scale, as opposed to a linear scale). The limit-test data array may be read from the analyzer to provide the frequency values for each data point. Four values are read for each data point on the analyzer. The test results and limit values are not used in this example. Only the frequency values are used. This technique is an effective method of obtaining the non-linear frequency data from the analyzer display. The test data and frequencies are printed on the controller display and the marker is enabled to allow the operator to examine the actual locations on the analyzer display.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The integer variables for the header information are defined.
- The number of points in the trace is set to 11.
- The frequency span (50 MHz to 200 MHz) is selected.
- The log-frequency sweep is selected.
- The data-transfer format 3 is set.
- The headers are read from the trace.
- The array size is calculated and allocated.
- The trace data is read in.
- The limit-test array is calculated and allocated.
- The limit-line test array is read in.
- The table header is printed.
- The program cycles through the trace values.
- The trace data and frequency are printed.
- The discrete-marker mode is activated.
- The marker is activated and placed at the lowest frequency of the analyzer (50 MHz).
- The instrument is returned to local control and the program ends.

Running the Program

Run the program. Observe the controller display. The corresponding frequency values are shown with the trace-data values. Position the marker and observe the relationship between the frequency values and the point spacing on the trace. Compare the trace-data values on the analyzer with those shown on the controller display.

BASIC Program Listing

```

10 ! This program shows how to read in a trace and create the frequency
20 ! value associated with the trace data value. EXAMP3C is used to
30 ! read in the data from the analyzer. The start and stop
40 ! frequencies are set to provide two decades of log range. Log sweep
50 ! is set and the frequency data points are read from the limit test
60 ! array and displayed with the data points.
70 !
80 ! EXAMP3D
90 !
100 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
110 ASSIGN @Nwadat TO 716;FORMAT OFF ! Binary path for data transfer
120 !
130 CLEAR SCREEN
140 ! Initialize the analyzer
150 ABORT 7 ! Generate an IFC ( Interface Clear)
160 CLEAR @Nwa ! SDC (Selective Device Clear)
170 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
180 ENTER @Nwa;Reply ! Read the 1 when completed
190 !
200 INTEGER Dheader,Dlength ! Integer variables for header info
210 !
220 OUTPUT @Nwa;"POIN 11;" ! Set trace length to 11 points
230 OUTPUT @Nwa;"STAR 50.E+6;" ! Start frequency 50 MHz
240 OUTPUT @Nwa;"STOP 200.E+6;" ! Stop frequency 200 MHz
250 OUTPUT @Nwa;"LOGFREQ;" ! Set log frequency sweep
260 !
270 ! Set up data transfer
280 OUTPUT @Nwa;"OPC?;SING" ! Single sweep and wait
290 ENTER @Nwa;Reply ! Read the 1 when completed
300 !
310 OUTPUT @Nwa;"FORM3;" ! Select form 3 trace format
320 OUTPUT @Nwa;"OUTPFORM;" ! Output formatted trace
330 !
340 ENTER @Nwadat;Dheader,Dlength ! Read headers from trace data
350 !
360 ALLOCATE Dat(1:Dlength/16,1:2) ! Use length to determine array size
370 ENTER @Nwadat;Dat(*) ! Read in trace data
380 !
390 ! Create the corresponding frequency values for the array
400 !
410 ! Read the frequency values using the limit test array
420 ALLOCATE Freq(1:Dlength/16,1:4) ! Limit line results array
430 ! Limit line values are frequency, test results, upper and lower limits
440 !
450 OUTPUT @Nwa;"OUTPLIML;" ! Request limit line test results
460 ENTER @Nwa;Freq(*) ! Read 4 values per point
470 !
480 ! Display table of freq and data
490 !
500 PRINT " Freq (MHz)","Mag (dB)" ! Print table header
510 FOR I=1 TO 11 ! Cycle through the trace values
520 Freqm=Freq(I,1)/1.E+6 ! Convert frequency to MHz
530 PRINT USING "4D.6D,9X,3D.3D";Freqm,Dat(I,1) ! Print trace data
540 NEXT I
550 !
560 ! Set up marker to examine frequency values

```

```
570 OUTPUT @Nwa;"MARKDISC;"           ! Discrete marker mode
580 OUTPUT @Nwa;"MARK1 10.E+6;"       ! Turn on marker and place at 10 MHz
590 !
600 OUTPUT @Nwa;"OPC?;WAIT;"          ! Wait for the analyzer to finish
610 ENTER @Nwa;Reply                  ! Read the 1 when complete
620 LOCAL @Nwa                        ! Release HP-IB control
630 PRINT                             ! Blank line
640 PRINT "Position marker and observe frequency point spacing"
650 !
660 END
```

Example 3E: Data Transfer Using FORM 1 (Internal-Binary Format)

FORM 1 is used for rapid I/O transfer of analyzer data. It contains the least number of bytes-per-trace and does not require re-formatting in the analyzer. This format is more difficult to convert into a numeric array in the controller.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The integer variables for the header information are defined.
- The string variable for the header is defined.
- The selected frequency span is swept once.
- The internal-binary format is selected.
- The error-corrected data is output from the analyzer.
- The two data-header characters and the two length bytes are read in.
- The string buffer is allocated for data.
- The trace data is read into the string buffer.
- The analyzer is restored to continuous-sweep mode and queried for command completion.
- The instrument is returned to local control and the program ends.

Running the Program

The analyzer is initialized. The header and the number of bytes in the block transfer are printed on the controller display. Once the transfer is complete, the number of bytes in the data string is printed. Compare the two numbers to be sure that the transfer was completed.

BASIC Program Listing

```
10 ! This program is an example of a form 1, internal format data
20 ! transfer. The data is stored in a string dimensioned to the
30 ! length of the data being transferred.
40 !
50 ! EXAMP3E
60 !
70 ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
80 ASSIGN @Nwa_bin TO 716;FORMAT OFF ! Binary path for data transfer
90 !
100 CLEAR SCREEN
110 ! Initialize the analyzer
120 ABORT 7                          ! Send IFC Interface Clear
130 CLEAR @Nwa                       ! SDC (Selective Device Clear)
140 OUTPUT @Nwa;"OPC?;PRES;"        ! Preset the analyzer and wait
150 ENTER @Nwa;Reply                 ! Read the 1 when completed
160 !
170 INTEGER Length                   ! Header length 2 bytes
180 DIM Header$(2)                   ! Header string 2 bytes
```

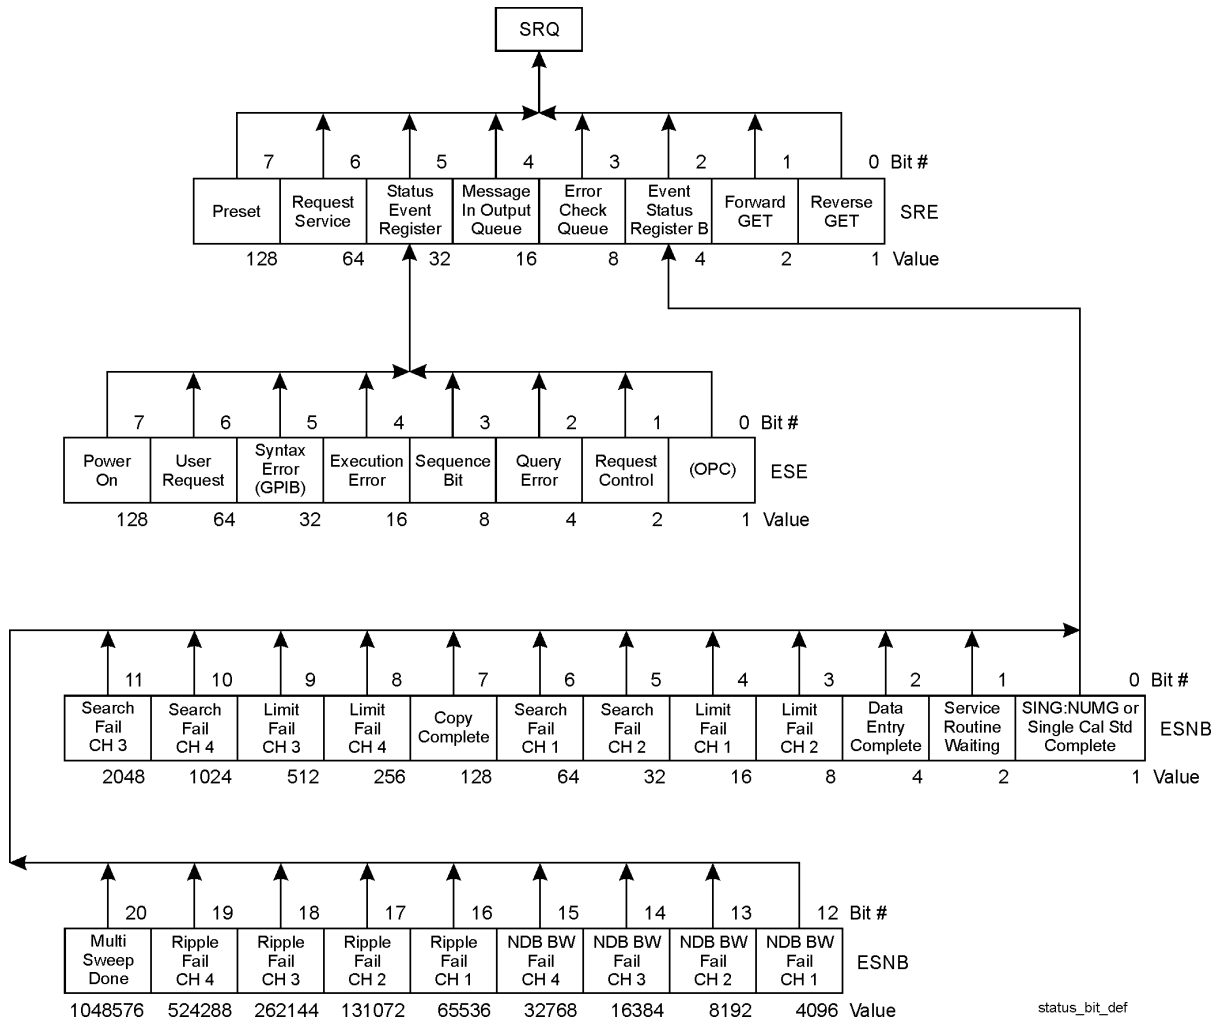
```

190 !
200 OUTPUT @Nwa;"OPC?;SING;"          ! Single sweep and wait
210 ENTER @Nwa;Reply                  ! Read the 1 when completed
220 !
230 OUTPUT @Nwa;"FORM1;"              ! Select internal binary format
240 OUTPUT @Nwa;"OUTPDATA;"           ! Output error corrected data
250 !
260 ! Read in the data header two characters and two bytes for length
270 ! "#,2A"
280 !      # no early termination, terminate when ENTER is complete
290 !      2A read two chars
300 !
310 ENTER @Nwa_bin USING "#,2A";Header$ ! Read header as 2 byte string
320 ENTER @Nwa_bin;Length              ! Read length as 2 byte integer
330 PRINT "Header ";Header$,"Array length";Length
340 !
350 ALLOCATE Data$(Length)             ! String buffer for data bytes
360 ! "+,-K" format statement
370 ! + EOI as a terminator LF is suppressed and read as data
380 ! -K All characters are read and not interpreted LF is included
390 ENTER @Nwa_bin USING "+,-K";Data$  ! Read trace into string array
400 !
410 PRINT "Number of bytes received ";LEN(Data$)
420 !
430 OUTPUT @Nwa;"CONT;"               ! Restore continuous sweep
440 OUTPUT @Nwa;"OPC?;WAIT;"         ! Wait for the analyzer to finish
450 ENTER @Nwa;Reply                  ! Read the 1 when complete
460 !
470 LOCAL @Nwa                        ! Release HP-IB control
480 END

```

Measurement Process Synchronization Examples

Figure 7-1 Status Reporting Structure



Status Reporting

The analyzer has a status reporting mechanism, illustrated in [Figure 7-1](#), that provides information about specific analyzer functions and events. The status byte is an 8-bit register with each bit summarizing the state of one aspect of the instrument. For example, the error queue summary bit will always be set if there are any errors in the queue. The value of the status byte can be read with the GPIB serial poll operation. This command does not automatically put the instrument in remote mode, which gives you access to the analyzer front-panel functions. The status byte can also be read by sending the command OUTPSTAT. Reading the status byte does not affect its value.

The status byte summarizes the error queue, as mentioned before. It also summarizes two event-status registers that monitor specific conditions inside the instrument. The status byte also has a bit (6) that is set when the instrument is issuing a service request over GPIB, and a bit (0) that is set in the event-status register when the analyzer has data to send out over GPIB. See [“Status Reporting” on page 6-3](#) for a discussion of the event-status registers.

Example 4A: Using the Error Queue

The error queue holds up to 20 instrument errors and warnings in the order that they occurred. Each time the analyzer detects an error condition, the analyzer displays a message, and puts the error in the error queue. If there are any errors in the queue, bit 3 of the status byte will be set. The errors can be read from the queue with the OUTPERRO command. OUTPERRO causes the analyzer to transmit the error number and message of the oldest error in the queue.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The error-message string is allocated.
- The analyzer is released from remote control.
- The program begins an endless loop to read the error queue.
- The status byte is read with a serial poll.
- The program tests to see if an error is present in the queue.
- The error-queue bit is set.
- The program requests the content of the error queue.
- The error number and string are read.
- The error messages are printed until there are no more errors in the queue.
- The instrument is returned to local control.
- The controller emits a beep to attract the attention of the operator and resumes searching for errors.

Running the Program

Run the program. The analyzer goes through the preset cycle. Nothing will happen at first. The program is waiting for an error condition to activate the error queue. To cause an error, press a blank softkey. The message CAUTION: INVALID KEY will appear on the analyzer. The computer will beep and print out two error messages. The first line will be the invalid key error message, and the second line will be the NO ERRORS message. To clear the error queue, you can either loop until the NO ERRORS message is received, or wait until the bit in the status register is cleared. In this case, we wait until the status bit in the status register is clear. Note that while the program is running, the analyzer remains in the local mode and the front-panel keys may be accessed.

The error queue will hold up to 20 errors until all the errors are read out or the instrument is preset. It is important to clear the error queue whenever errors are detected. Otherwise, old errors may be mistakenly associated with the current instrument state.

Press **(System)** and then the unlabeled key several times quickly and watch the display. The number of errors observed should correspond to the number of times you pressed the key.

As another example, press **(Cal)** **CORRECTION ON**. A complete list of error messages and their descriptions can be found in your analyzer's reference guide.

The program is in an infinite loop waiting for errors to occur. End the program by pressing **(Reset)** or **(Break)** on the controller keyboard.

NOTE Not all messages displayed by the analyzer are put in the error queue: operator prompts and cautions are not included.

BASIC Program Listing

```

10 ! This program is an example of using the error queue to detect
20 ! errors generated by the analyzer. The status byte is read and
30 ! bit 3 is tested to determine if an error exists. The error queue
40 ! is printed out and emptied.
50 !
60 ! EXAMP4A
70 !
80 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
90 !
100 CLEAR SCREEN
110 ! Initialize the analyzer
120 ABORT 7 ! Generate an IFC (Interface Clear)
130 CLEAR @Nwa ! SDC (Selective Device Clear)
140 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
150 ENTER @Nwa;Reply ! Read the 1 when complete
160 !
170 DIM Error$(50) ! String for analyzer error message
180 !
190 LOCAL @Nwa ! Release analyzer from remote control
200 !
210 LOOP ! Endless loop to read error queue
220 REPEAT
230 Stat=SPOLL(@Nwa) ! Read status byte with serial poll
240 UNTIL BIT(Stat,3) ! Test for error queue present
250 !
260 ! Error queue bit is set
270 REPEAT ! Loop until error number is 0
280 OUTPUT @Nwa;"OUTPERRO;" ! Request error queue contents
290 ENTER @Nwa;Err,Error$ ! Read error number and string
300 PRINT Err,Error$ ! Print error messages
310 UNTIL Err=0 ! No more errors in queue
320 !
330 LOCAL @Nwa ! Release analyzer from remote
340 BEEP 600,.2 ! Beep to attract attention
350 END LOOP ! Repeat error search
360 !
370 END

```

Example 4B: Generating Interrupts

It is also possible to generate interrupts using the status-reporting mechanism. The status-byte bits can be enabled to generate a service request (SRQ) when set. In turn, the instrument controller can be set up to generate an interrupt on the SRQ and respond to the condition which caused the SRQ.

To generate an SRQ, a bit in the status byte is enabled using the command `SREn`. A one (1) in a bit position enables that bit in the status byte. Hence, `SRE 8` enables an SRQ on bit 3, the check-error queue, since the decimal value 8 equals 00001000 in binary representation. Whenever an error is put into the error queue and bit 3 is set, the SRQ line is asserted, illuminating the (S) indicator in the GPIB status block on the front panel of the analyzer. The only way to clear the SRQ is to disable bit 3, re-enable bit 3, or read out all the errors from the queue.

A bit in the event-status register can be enabled so that it is summarized by bit 5 of the status byte. If any enabled bit in the event-status register is set, bit 5 of the status byte will also be set. For example `ESE 66` enables bits 1 and 6 of the event-status register, since in binary, the decimal number 66 equals 01000010. Hence, whenever active control is requested or a front-panel key is pressed, bit 5 of the status byte will be set. Similarly, `ESNBn` enables bits in event-status register B so that they will be summarized by bit 2 in the status byte.

To generate an SRQ from an event-status register, enable the desired event-status register bit. Then enable the status byte to generate an SRQ. For instance, `ESE 32;SRE 32;` enables the syntax-error bit. When the syntax-error bit is set, the summary bit in the status byte will be set. This will, in turn, enable an SRQ on bit 5 of the status byte, the summary bit for the event-status register.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The status registers are cleared.
- The event-status register bit 5 is enabled.
- The status-register bit 5 is enabled.
- The interrupt pointer is enabled and points to a subroutine.
- Two bad commands are sent to the analyzer to generate errors.
- The controller reads a serial-poll byte from GPIB in the event of an interrupt.
- The program tests for an SRQ.
- If the SRQ is not generated by the analyzer, the subroutine stops and displays `SRQ FROM OTHER DEVICE`.
- If the SRQ was generated by the analyzer, the program reads the status byte and event-status register.
- If bit 5 in the event-status register is set, the program prints: `SYNTAX ERROR FROM ANALYZER`.

- If bit 5 in the event-status register is *not* set, the program prints: SYNTAX ERROR BIT NOT SET.
- The SRQ interrupt is re-enabled on the bus.
- At the finish, the interrupt is deactivated.
- The analyzer is released from remote control and the program ends.

Running the Program

Run the program. The computer will preset the analyzer, then pause for a second or two. After pausing, the program sends an invalid command string "STIP 2 GHZ;" to cause a syntax error. This command is intended to be "STOP 2 GHZ;". The computer will display a series of messages from the SRQ-handler routine. The analyzer will display CAUTION: SYNTAX ERROR and the incorrect command, pointing to the first character it did not understand.

The SRQ can be cleared by reading the event-status register and clearing the latched bit, or by clearing the enable registers with CLES. The syntax-error message on the analyzer display can only be cleared by the GPIB Device Clear (DCL) message or Selected Device Clear (SDC) message. Device Clear is not commonly used because it clears every device on the bus. Selected Device Clear can be used to reset the input and output queue and the registers of a specific instrument on the bus. This will also clear all the interrupt definitions.

BASIC Program Listing

```

10 ! This program is an example of using an SRQ based interrupt to
20 ! detect an error condition in the analyzer. In this example, a
30 ! syntax error is generated with an invalid command. The status byte
40 ! is read in and tested. The error queue is read, printed out and
50 ! then cleared.
60 !
70 ! EXAMP4B
80 !
90 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 !
110 CLEAR SCREEN
120 ! Initialize the analyzer
130 ABORT 7 ! Generate and IFC (Interface Clear)
140 CLEAR @Nwa ! SDC (Selective Device Clear)
150 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
160 ENTER @Nwa;Reply ! Read the one from the analyzer
170 !
180 DIM Error$(50) ! String for analyzer error message
190 ! Set up syntax error interrupt
200 OUTPUT @Nwa;"CLES;" ! Clear the status registers
210 !
220 ! Generate SRQ when bit 5 is set
230 OUTPUT @Nwa;"ESE 32;" ! Event status register bit 5 enabled
240 !
250 ! Generate bit 5 in status register when syntax error occurs
260 OUTPUT @Nwa;"SRE 32;" ! Status register bit 5 enabled
270 !
280 ! Setup the interrupt pointer to a subroutine
290 ON INTR 7 GOSUB Srq_det ! When interrupt occurs go to Srq_det

```

```

300 Stat=SPOLL(@Nwa)           ! Clear any pending SRQs
310 ENABLE INTR 7;2           ! Set interrupt on HP-IB bit 2 (SRQ)
320 !
330 DISP "Waiting for bad syntax"
340 WAIT 2                     ! Pause for 2 seconds
350 !
360 OUTPUT @Nwa;"STIP 2GHZ;;"  ! Send bad STOP command syntax
370 !
380 WAIT 2                     ! Pause for 2 seconds
390 DISP ""                   ! Clear display line
400 GOTO Finish                ! Exit program example
410 !
420 !***** Subroutines *****
430 !
440 Srq_det:                   ! SRQ handler
450 Stat=SPOLL(@Nwa)           ! Read serial poll byte from HP-IB
460 PRINT "Stat from Serial Poll";Stat
470 IF BIT(Stat,6) THEN        ! Test for SRQ
480   PRINT "SRQ received from analyzer"
490 ELSE                       ! No SRQ from analyzer
500   PRINT "SRQ from other device"
510   STOP                     ! Stop if not from analyzer
520 END IF
530 !
540 IF BIT(Stat,5) THEN        ! Event status register bit set
550   PRINT "Event Status Register caused SRQ"
560 ELSE                       ! Some other bit set
570   PRINT "Some other bit caused the SRQ"
580   STOP                     ! Stop if bit not set
590 END IF
600 !
610 REPEAT
620   OUTPUT @Nwa;"OUTPERRO;"  ! Read analyzer error queue
630   ENTER @Nwa;Err,Error$    ! Read error number and string
640   PRINT Err,Error$         ! Print error message
650 UNTIL Err=0                ! No more errors in queue
660 !
670 PRINT                      ! White space
680 ENABLE INTR 7;2           ! Re-enable SRQ interrupt on HP-IB
690 RETURN
700 !
710 !***** End Subroutines *****
720 !
730 Finish:                    ! End of program and exit
740 DISP "Finished"
750 OFF INTR 7                 ! Turn off interrupt
760 LOCAL @Nwa                 ! Release HP-IB control
770 END

```

Example 4C: Power Meter Calibration

NOTE This example program will not work with HP BASIC for Windows.

For increased accuracy of the analyzer's PORT 1-output power, a power meter calibration is available. This measurement-accuracy enhancement technique is described in your analyzer's user's guide. The example described will perform the sample and sweep calibration under GPIB remote control.

The power meter is usually connected to PORT 1 for the forward measurements. Its address must be set correctly and it must be connected to the GPIB. The power meter address can be set by pressing: **Local** **SET ADDRESSES** **ADDRESS P MTR/GPIB** and using the  and  keys or the numeric key pad to complete the process. The appropriate command must be selected for the model number of power meter being used. Press **POWER MTR: []** until the model being used is displayed between the brackets.

The correction factors for the power sensor are entered into the analyzer. All of these steps are explained in your analyzer's user's guide.

The number of readings-per-point must also be selected before starting. The number of points directly affects the measurement time of the calibration sequence. The power meter must be triggered and read by the analyzer for each trace point. Typically, two readings-per-point is considered appropriate. More than two readings-per-point could lead to unacceptable processing time.

To control a power meter calibration via GPIB, the analyzer must be set to pass-control mode. The analyzer must step to the next point in the sweep and read the power present at the power meter sensor. For this operation to take place, the system controller must set up the measurement and then pass control to the analyzer to read each data point in the sweep. After reading the data point from the power meter, the analyzer passes control back to the system controller. The analyzer then sets up to measure the next point and again requests control from the system controller. This process continues until the analyzer signals that the entire sweep has been measured point-by-point.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The number of points in the trace is set.
- The number of readings-per-point is set.
- The frequency span is set.

NOTE The frequency span of this example program may need to be modified in order to correspond to the frequency ranges of your analyzer.

- The reference channel is measured.
- The power meter calibration array is allocated.
- The power meter model is chosen.
- The status registers are cleared.
- The request-control summary bit is enabled.
- The pass-control mode is enabled.
- A calibration sweep is taken to begin the sequence.
- The status byte is read until control is requested.
- The computer passes control to the analyzer.
- The display is cleared and the analyzer is set to talker/listener mode.
- The GPIB interface status is read until control is returned.
- The program loops until all the points have been measured.
- The power meter calibration is enabled.
- The calibration data is output to the controller in FORM 4, ASCII format.
- The power meter-calibration factors are read into the controller.
- The analyzer is released from remote control and the program ends.

Running the Program

The analyzer is preset and the power meter-calibration routine begins. The analyzer displays the message "WAITING FOR GPIB CONTROL" when it is requesting control. The system controller display prints "Passing Control" when control is passed to the analyzer. The controller displays "Waiting for request" while the analyzer has control and is reading the power meter.

The interaction of the messages and the movement of the cursor allow observation of the calibration process. Once the calibration is complete, the analyzer displays "POWER METER CAL IS COMPLETE" and the system controller displays "Finished with Power meter Cal".

The power meter-calibration mode (with one sweep of correction data) is enabled and the calibration is switched on. At the completion of the program, talker/listener mode is restored, the event-status registers are cleared (to halt the status-byte interaction), the power meter correction factors are displayed, the sweep is placed in continuous-sweep mode, the analyzer is released from GPIB control, and the program ends.

BASIC Program Listing

```

10 ! This routine does a power meter cal using pass control.
20 ! A measurement cycle takes place on each point of the trace. The
30 ! point is measured by the power meter and the measured value read
40 ! into the analyzer. The command TAKCS; arms this measurement mode.
50 ! The number of measurements is determined by the number of points in
60 ! the trace, the number of readings per point and an extra measurement
70 ! cycle to release the powr meter.
80 ! Control is passed to the analyzer, the point is measured and
90 ! the data is transferred to the analyzer. Control is passed back to
100 ! the controller and the cycle begins again. Serial poll is used to
110 ! read the status byte of the analyzer and test the logic.
120 ! The HP-IB interface status register is monitored to determine when
130 ! control is returned to the interface from the analyzer.
140 !
150 ! EXAMP4C
160 !
170 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
180 !
190 CLEAR SCREEN
200 ! Initialize the analyzer
210 ABORT 7 ! Generate an IFC (Interface Clear)
220 CLEAR @Nwa ! SDC (Selective Device Clear)
230 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
240 ENTER @Nwa;Reply ! Read the 1 when complete
250 !
260 INTEGER Stat
270 !
280 ! Set up the analyzer parameters
290 Numpoints=11 ! Number of points in the trace
300 Numreads=2 ! Number of readings per point
310 Startf=1.00E+8 ! Start frequency
320 Stopf=5.0E+8 ! Stop frequency
330 !
340 OUTPUT @Nwa;"POIN";Numpoints;" ! Set trace length to numpoints
350 OUTPUT @Nwa;"NUMR";Numreads;" ! Set number of readings per point
360 OUTPUT @Nwa;"STAR";Startf ! Set start frequency
370 OUTPUT @Nwa;"STOP";Stopf ! Set stop frequency
380 OUTPUT @Nwa;"MEASR;" ! Measure the reference channel
390 !
400 ALLOCATE Pmcal(1:Numpoints) ! Create power meter cal array
410 !
420 ! Store the original trace for comparison
430 OUTPUT @Nwa;"DATI;"
440 OUTPUT @Nwa;"DISPDATM;"
450 OUTPUT @Nwa;"AUTO;"
460 !
470 ! Select the power meter being used for cal
480 ! OUTPUT @Nwa;"POWM ON;" ! Select 436A power meter
490 OUTPUT @Nwa;"POWMOFF;DEBUON;" ! Select 437B/438A power meter
500 !
510 ! Set analyzer HP-IB, status regs to interrupt on pass control
520 OUTPUT @Nwa;"CLES;" ! Clear status registers
530 OUTPUT @Nwa;"ESE2;" ! Enable request control summary bit
540 OUTPUT @Nwa;"SRE32;" ! SRQ on events status register
550 !
560 PRINT "Beginning Power Meter CAL"

```

```

570 OUTPUT @Nwa;"USEPASC;"          ! Enable pass control operation
580 OUTPUT @Nwa;"TAKCS;"            ! Take Cal Sweep
590 !
600 FOR I=1 TO Numpoints*Numreads+1 ! Points * Number of readings plus 1
610 ! Serial poll does not place analyzer in remote operation
620 ! and does not require the analyzer to process the command.
630 !
640 REPEAT                          ! Repeat until SRQ detected
650   Stat=SPOLL(@Nwa)              ! Serial poll to read status byte
660   DISP "Stat ";Stat;" Waiting for request"
670 UNTIL BIT(Stat,6)              ! SRQ detected for request control
680 OUTPUT @Nwa;"ESR?;"            ! Read status register to clear
690 ENTER @Nwa;Reply               ! Read and discard register value
700 !
710 PRINT "Passing Control"         ! status read and passing control
720 PASS CONTROL @Nwa              ! Pass control to analyzer
730 !
740 REPEAT
750 ! Read HP-IB interface state information register.
760   STATUS 7,6;Hpib              ! Test HP-IB register for control
770 !
780 ! Reading the interface status register does not interact with the
790 ! analyzer. Bit 6 is set when control is returned.
800 !
810   DISP "Waiting for control"
820 UNTIL BIT(Hpib,6)              ! Loop until control is returned
830 NEXT I
840 !
850 PRINT "Finished with Power meter Cal"
860 DISP ""                        ! Clear display message
870 !
880 OUTPUT @Nwa;"TALKLIST;"        ! Restore Talker/Listener operation
890 OUTPUT @Nwa;"CLES;"            ! Clear and reset status byte operation
900 !
910 OUTPUT @Nwa;"PVMCONES;"        ! Power meter cal correct one sweep
920 OUTPUT @Nwa;"OPC?;WAIT;"      ! Wait for the analyzer to finish
930 ENTER @Nwa;Reply              ! Read the 1 when complete
940 !
950 ! Read the power meter cal correction factors
960 OUTPUT @Nwa;"FORM4;"           ! ASCII data format to read cal data
970 OUTPUT @Nwa;"OUTPPMCAL1;"     ! Request the power meter cal factors
980 ENTER @Nwa;Pmcal(*)           ! Read the factors
990 !
1000! Display the power meter cal factors
1010 PRINT "Point","Factor"
1020 FOR I=1 TO Numpoints          ! Cycle through the factors
1030 PRINT I,Pmcal(I)
1040 NEXT I
1050!
1060 LOCAL @Nwa                   ! Release HP-IB control
1070 END

```

Analyzer System Setup Examples

Saving and Recalling Instrument States

NOTE The most efficient option for storing and recalling analyzer states is using the analyzer's internal registers to save the CAL data. Recalling these registers is the fastest solution to restoring analyzer setups. See your analyzer's user's guide for detailed information on the analyzer's internal storage registers.

In the event that all the registers have been used, the internal disk drive is not used, or if internal memory limitations exist, then these external solutions become viable.

The purpose of this example is to demonstrate several programming options for storing and recalling entire instrument states over GPIB. The examples describe two different processes for storing and recalling instrument states. The first example accomplishes the task using the learn string. The second example involves reading both the learn string and the calibration arrays out of the analyzer and storing them to disk or storing them in the system controller itself.

Using the learn string is a very rapid way of saving the instrument state, but using direct disk access has the advantage of automatically storing calibrations, cal kits, and data along with the instrument state.

A complete analyzer setup requires sending the learn string and a calibration array to set the analyzer parameters. The CAL array may also be placed in the analyzer, just as if a calibration was performed. By sending both sets of data, the analyzer may be quickly setup for a measurement.

Several different measurements may be required in the course of testing a device. An efficient way of performing multiple measurements is to send both the calibration array and the learn string, and then perform the measurements.

Example 5A: Using the Learn String

The learn string is a very fast and easy way to read an instrument state. The learn string includes all front-panel settings, the limit table for each channel, and the list-frequency table. It can be read out of the analyzer with the command OUTPLEAS, and input to the analyzer with the command INPULEAS.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The string storage is allocated.
- The learn string is requested.
- The string is read without any processing.

- The analyzer is released from remote control.
- The instrument state is changed by the operator.
- The learn string is sent back to the analyzer.
- The analyzer is released from remote control and the program ends.

Running the Program

Run the program. When the program stops, change the instrument state and press Enter on the controller. The analyzer will be returned to its original state by using the learn string.

BASIC Program Listing

```

1  ! This program shows how to retrieve a learn string from the analyzer
2  ! into a string array. The state of the analyzer is then changed and the
3  ! learn string re-loaded to return the analyzer to the previous settings.
4  !
5  ! EXAMP5A
6  !
7  OPTION BASE 1
8  ASSIGN @Nwa TO 716                      ! Assign an I/O path for the analyzer
9  ASSIGN @Nwa_bin TO 716;FORMAT OFF
10 !
11 CLEAR SCREEN
12 ! Initialize the analyzer
13 ABORT 7                                ! Generate an IFC (Interface Clear)
14 CLEAR @Nwa                             ! SDC (Selected Device Clear)
15 !
16 INTEGER Header,Length                  ! 2-byte header and length of string
17 !
18 OUTPUT @Nwa;"OUTPLEAS;"                ! Output the learn string
19 ENTER @Nwa_bin;Header,Length           ! Read header and length first
20 !
21 ALLOCATE INTEGER State(Length/2)       ! Integer array to contain the string
22 !
23 ENTER @Nwa_bin;State(*)                 ! Read the string
24 LOCAL @Nwa                             ! Release HP-IB control
25 !
26 INPUT "Change state and press ENTER",A$
27 !
28 OUTPUT @Nwa;"INPULEAS;"                ! Send the learnstring to analyzer
29 OUTPUT @Nwa_bin;Header,Length,State(*)
30 DISP "Analyzer state has been restored!"
31 !
32 OUTPUT @Nwa;"OPC?;WAIT;"               ! Wait for the analyzer to finish
33 ENTER @Nwa;Reply                        ! Read the 1 when complete
34 LOCAL @Nwa                             ! Release HP-IB control
35 END

```

Example 5B: Reading Calibration Data

This example demonstrates:

- how to read measurement calibration data out of the network analyzer
- how to read it back into the analyzer
- how to determine which calibration is active

The data used to perform measurement-error correction is stored inside the analyzer in one (or more) of twelve calibration-coefficient arrays. Each array is a specific error coefficient, and is stored and transmitted as an error-corrected data array. Each point is a real/imaginary pair, and the number of points in the array is the same as the number of points in the sweep. The five data formats also apply to the transfer of calibration-coefficient arrays. Your analyzer's user's guide contains information on the storage locations for calibration coefficients and different calibration types.

A computer can read out the error coefficients using the commands OUTPCALC01, OUTPCALC02,...through OUTPCALC12. Each calibration type uses only as many arrays as required, beginning with array 1. Hence, it is necessary to know the type of calibration about to be read out. Attempting to read an array not being used in the current calibration causes the "REQUESTED DATA NOT CURRENTLY AVAILABLE" warning.

A computer can also store calibration coefficients in the analyzer. To do this, declare the type of calibration data about to be stored in the analyzer just as if you were about to perform that calibration. Then, instead of calling up different classes, transfer the calibration coefficients using the INPUCALCnn; commands. The variables nn are a data pair appended to the command representing a calibration number from 01 through 12. When all the coefficients are stored in the analyzer, activate the calibration by issuing the mnemonic SAVC;, and trigger a sweep on the analyzer.

This example reads the calibration coefficients into a very large array, from which they can be examined, modified, stored, or put back into the instrument. If the data is to be directly stored onto disk, it is usually more efficient to use FORM 1 (analyzer's internal-binary format), and to store each coefficient array as it is read in.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- A binary path is assigned.
- The system is initialized.
- The calibration types and number of arrays are defined.
- The integer variables for reading the headers are defined.
- The calibration type and number of arrays are read by the controller.
- The output is formatted in FORM 3.
- The number of points in the trace is read.
- The memory is allocated for the calibration arrays.
- Each calibration array is requested from the analyzer.
- Header information is read with a binary I/O path.

- The elements from each calibration array are read in.
- The next calibration array is requested until all the arrays have been read.
- The calibration type is sent to the analyzer.
- Each calibration array is sent.
- The calibration is activated.
- The analyzer is released from remote control and the program ends.

Running the Program

Before executing the program, perform a calibration.

The program is able to detect which type of calibration is active. With that information, it predicts how many arrays to read out. When all the arrays have been sent to the computer, the program prompts the user. The operator then turns the calibration off or performs a completely different calibration on the analyzer and continues the program. The computer reloads the old calibration. The operator should not preset the analyzer because the instrument settings must be the same as those that were present when the calibration was taken.

NOTE	The retransmitted calibration is associated with the current instrument state: the instrument has no way of knowing the original state associated with the calibration data. For this reason, it is recommended that the learn string be used to store the instrument state whenever calibration data is stored. The next example demonstrates how to reload the analyzer state with both the learn string and the calibration arrays.
-------------	--

BASIC Program Listing

```
10 ! This program shows how to manipulate calibration data from the analyzer.
20 ! It demonstrates how to read calibration data from the analyzer, and
30 ! how to replace it. The type of calibration active is determined and
40 ! the program reads in the correct number of arrays. The number of points
50 ! in the trace, and in the cal array, is determined and used to dimension
60 ! storage arrays.
70 !
80 ! EXAMP5B
90 !
100 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
110 ASSIGN @Nwa_bin TO 716;FORMAT OFF ! Assign binary path
120 !
130 CLEAR SCREEN
140 ! Initialize the analyzer
150 ABORT 7 ! Generate an IFC (Interface Clear)
160 CLEAR @Nwa ! SDC (Selected Device Clear)
170 !
180 ! Data for determining CAL type and number of arrays
190 DATA "CALIRESP",1,"CALIRAI",2,"CALIS111",3
200 DATA "CALIS221",3,"CALIFUL2",12
210 DATA "NOOP",0
220 !
230 INTEGER Hdr,Lgth,I,J ! Integers for reading headers
```

```

240 !
250 READ Calt$,Numb                                ! Read CAL type from data statement
260 IF Numb=0 THEN GOTO 690                        ! If no CAL type is present Exit
270 OUTPUT @Nwa;Calt$;"?;"                        ! Query if CAL type is active
280 ENTER @Nwa;Active                              ! Read 1 if active
290 IF NOT Active THEN GOTO 250                    ! Load another CAL type and re-try
300 !
310 PRINT Calt$,Numb                                ! Active CAL and number of arrays
320 !
330 OUTPUT @Nwa;"FORM3;"                          ! Form 3 IEEE 64 bit floating point
340 OUTPUT @Nwa;"POIN?;"                          ! Request trace length
350 ENTER @Nwa;Poin                                ! Read number of points
360 ALLOCATE Cal(1:Numb,1:Poin,1:2)                ! Arrays for CAL arrays
370 !      Number of arrays, number of points real and imag value per point
380 !
390 FOR I=1 TO Numb                                ! Read arrays
400   OUTPUT @Nwa USING "K,ZZ";"OUTPCALC",I        ! Format I to add 0 in command
410   ENTER @Nwa_bin;Hdr,Lgth                      ! Read header & length from array
420   FOR J=1 TO Poin                              ! Read elements for CAL array
430     ENTER @Nwa_bin;Cal(I,J,1),Cal(I,J,2)      ! Read real & imag pair elements
440   NEXT J                                        ! Next location in array
450 NEXT I                                          ! Next CAL array
460 !
470 ! All CAL arrays have been read
480 !
490 INPUT "PRESS RETURN TO RE-TRANSMIT CALIBRATION",Dum$
500 !
510 OUTPUT @Nwa;"FORM3;"                          ! Use same format as read
520 OUTPUT @Nwa;Calt$;";"                          ! Send CAL type to analyzer
530 !
540 FOR I=1 TO Numb                                ! Send each array in CAL
550   DISP "TRANSMITTING ARRAY: ",I                ! Show array number
560   OUTPUT @Nwa USING "K,ZZ";"INPUCALC",I        ! Send array number 0 format
570   OUTPUT @Nwa_bin;Hdr,Lgth                     ! Send header & array length
580   FOR J=1 TO Poin                              ! Send each array element
590     OUTPUT @Nwa_bin;Cal(I,J,1),Cal(I,J,2)      ! Real and Imag pair
600   NEXT J                                        ! Next element in array
610 NEXT I                                          ! Next array
620 !
630 OUTPUT @Nwa;"SAVC;"                            ! Activate CAL
640 !
650 OUTPUT @Nwa;"CONT;"                            ! Restore continuous sweep
660 OUTPUT @Nwa;"OPC?;WAIT;"                      ! Wait for analyzer to finish
670 ENTER @Nwa;Reply                              ! Read the 1 when complete
680 !
690 DISP "Finished with CAL transfer"
700 LOCAL @Nwa                                    ! Release HP-IB control
710 END

```

Example 5C: Saving and Restoring the Analyzer Instrument State

NOTE The instrument state may also be stored in the analyzer's internal registers. This is the fastest and most efficient method for toggling between instrument states. This example is for use when the analyzer's internal memory is full, or when there are other internal-memory limitations.

This example demonstrates how to use both the learn string and the calibration arrays to completely re-program the analyzer state. If you were performing two entirely different measurements on a device and wanted to quickly change between instrument states and perform the measurements, this example program is a potential solution.

The example will request the learn string and calibration array from the analyzer and store them in a disk file on the system controller. Once the storage is complete, the operator will be prompted to change the state of the analyzer and then re-load the state that was previously stored in the disk file. Once the file is created on the disk, the state information can be retrieved from the controller and restored on the analyzer.

NOTE The disk file can only be created once. Errors will occur if the operator repeatedly tries to recreate the file.

For this example, only a thru calibration will be performed and transferred. This means only one calibration array will be read from the analyzer and written to the disk file with the instrument state. To work with more elaborate calibrations, additional arrays will need to be defined and transferred to the disk file. This is not difficult, but requires some further programming steps which were omitted in the interest of presenting a simple example.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- A binary path is assigned.
- The integers for reading the headers are defined.
- The system is initialized.
- An array is created to hold the learn string.
- The learn string is requested by the controller.
- The number of points in the trace is read.
- The controller allocates an array for the calibration data.
- The calibration data is read into the controller.
- The controller creates and assigns a data file for the calibration array and the learn string.
- The learn string and calibration array are stored in the disk file.
- The operator presses **Enter** on the controller to read the calibration data back into the analyzer.

- The learn string is read from the disk file and output to the analyzer.
- The calibration array is read in from the disk file and stored in the analyzer.
- The analyzer is returned to continuous-sweep mode.
- The analyzer is released from remote control and the program ends.

Running the Program

Set up the analyzer and perform a through calibration.

Run the program. The program prompts the operator to change the state of the analyzer and then press **Enter** to continue. At this point, the analyzer state is stored on the disk file in the controller. Pressing **Enter** will begin the transfer from the disk file to internal arrays within the controller and then on to the analyzer.

Once completed:

- The original state will be restored.
- The analyzer will be sweeping.
- The analyzer will be calibrated.
- COR will be displayed on the analyzer's display.

BASIC Program Listing

```
10 ! This program reads an instrument state and stores it in a disk file.
20 ! The learn string and CAL array are both read into the controller and
30 ! then transferred to a disk file for storage. The file contents are
40 ! then restored to the analyzer.
50 !
60 ! EXAMP5C
70 !
80 OPTION BASE 1
90 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 ASSIGN @Nwa_bin TO 716;FORMAT OFF ! Assign a binary path
110 !
120 INTEGER Header,Str_len,Cal_len ! Integer 2 byte format for headers
130 !
140 CLEAR SCREEN
150 ! Initialize the analyzer
160 ABORT 7 ! Generate an IFC (Interface Clear)
170 CLEAR @Nwa ! SDC (Selected Device Clear)
180 !
190 OUTPUT @Nwa;"OPC?;SING;" ! Place analyzer in single sweep
200 ENTER @Nwa;Reply ! Read the 1 when complete
210 !
220 OUTPUT @Nwa;"OUTPLEAS;" ! Request learn string
230 ENTER @Nwa_bin;Header,Str_len ! Read header and length first
240 ALLOCATE INTEGER State(Str_len/2) ! Integer array to contain the string
250 ENTER @Nwa_bin;State(*) ! Read the string
260 !
270 ! Allocate an array for storing the CAL data
280 OUTPUT @Nwa;"POIN?;" ! Find number of points in trace
290 ENTER @Nwa;Num_points ! Read number to allocate array
300 ALLOCATE Cal_array(1:Num_points,1:2) ! Real and Imag for each point
310 !
320 ! Read Cal array
```

```

330 OUTPUT @Nwa;"FORM3;"          ! Form 3 64 bit floating point data
340 OUTPUT @Nwa;"OUTPCALC01;"      ! Request the cal array
350 !
360 ! Read the #A and 2 byte length as integers
370 ENTER @Nwa_bin;Header,Cal_len,Cal_array(*)    ! Read cal array data
380 !
390 ! Write instrument state data to disk file
400 File$="A:DATAFILE"            ! Example HP BASIC for Windows data
file
410 ! File$ = "DATAFILE:,1406"    ! Example Workstation HP BASIC data
file
420 CREATE BDAT File$,1,Str_len+Cal_len+8        ! Create data file once!
430 ASSIGN @File TO File$                    ! Assign I/O path to file
440 OUTPUT @File;Header,Str_len,State(*)        ! Send learn string to disk file
450 OUTPUT @File;Header,Cal_len,Cal_array(*)    ! Send CAL arrays to disk file
460 ASSIGN @File TO *                        ! Close file
470 !
480 INPUT "Cal data received. Press ENTER to send it back.",A$
490 !
500 ! Read arrays from file
510 !
520 ASSIGN @File TO File$                  ! Open file for reading arrays
530 ENTER @File;Header,Str_len            ! Read learn string headers from file
540 ALLOCATE INTEGER State2(Str_len/2)    ! new learn string array from file
550 ENTER @File;State2(*)                ! Read learn string from file
560 !
570 ENTER @File;Header,Cal_len            ! Read CAL data headers from file
580 Arrsize=Cal_len/16                   ! Array is 2 numbers, 8 bytes per number
590 ALLOCATE Cal_array2(1:Arrsize,1:2)    ! new cal array from file
600 ENTER @File;Cal_array2(*)            ! Read cal array from disk file
610 !
620 ! Send Learn string back
630 OUTPUT @Nwa;"INPULEAS;"              ! Send learn string to analyzer
640 OUTPUT @Nwa_bin;Header,Str_len,State2(*)
650 !
660 ! Send Cal array back
670 OUTPUT @Nwa;"CALIRESP;"              ! Send CAL type (Response)
680 OUTPUT @Nwa;"FORM3;INPUALC01;"      ! Output CAL array to analyzer
690 OUTPUT @Nwa_bin;Header,Cal_len,Cal_array2(*)
700 OUTPUT @Nwa;"OPC?;SAVC;"            ! Save the CAL array
710 ENTER @Nwa;Reply                     ! Read the 1 when complete
720 !
730 OUTPUT @Nwa;"CONT;"                  ! Start the analyzer sweeping
740 OUTPUT @Nwa;"OPC?;WAIT;"            ! Wait for the analyzer to finish
750 ENTER @Nwa;Reply
760 LOCAL @Nwa                          ! Release HP-IB control
770 END

```


List-Frequency and Limit-Test Table Examples

Using List Frequency Sweep Mode

The analyzer normally takes data points spaced at regular intervals across the overall frequency range of the measurement. For example, for a 2 GHz frequency span using 201 points, data will be taken at intervals of 10 MHz. The list frequency sweep mode allows the operator to select the specific points, or frequency spacing between points, at which measurements are to be made. This mode of operation allows flexibility in setting up tests that ensure device performance. By only sampling specific points, measurement time is reduced. List frequency sweeps are also discussed in your analyzer's user's guide.

The following three example programs illustrate the use of the analyzer's list frequency sweep mode to perform arbitrary frequency testing. Examples 6A (Stepped List Mode) and 6B (Swept List Mode) allow the operator to construct a table of list frequency segments which is then loaded into the analyzer's list frequency table. There are a maximum of 30 segments available. Each segment stipulates a start and stop frequency, and the number of data points to be taken over that frequency range. In Example 6B (Swept List Mode), each segment also stipulates a power value and IF bandwidth. List frequency segments can be overlapped in the stepped list mode but not in the swept list mode. The total number of points in all the segments must not exceed 1601.

Examples 6A (Stepped List Mode) and 6B (Swept List Mode) take advantage of the computer's capabilities to simplify creating and editing a list frequency table. The table is entered and completely edited before being transmitted to the analyzer. To simplify the programming task, options such as entering center frequency, frequency span, or step size are not included.

Example 6C lets the operator select a specific segment to “zoom-in.” A single instrument can be programmed to measure several different devices, each with its own frequency range, using a single calibration. When a specific device is connected, the operator selects the appropriate segment for that device.

The command sequence for entering a list frequency table imitates the key sequence followed when entering a table from the front panel: there is a command for every key-press. Editing a segment is also the same as the front-panel key sequence, but the analyzer automatically reorders each edited segment in order of increasing start frequency.

The list frequency information may be acquired using the limit-test results array. The actual stimulus points are available as the first element in the array.

The list frequency table is also carried as part of the learn string. While the table cannot be modified as part of the learn string, it can be stored and recalled with very little effort by storing and recalling the learn string. See [“Example 5A: Using the Learn String” on page 7-79](#) and [“Learn String and Calibration-Kit String” on page 5-7](#) for details on using learn strings.

Example 6A: Setting Up a List Frequency Table in Stepped List Mode

The purpose of this example is to show how to create a list frequency table in stepped list mode and then transmit the table to the analyzer.

In the stepped list mode, the source steps to the next frequency point where it stops long enough for the analyzer to take data. For electrically long devices, this mode ensures that the measurement will not be impacted by IF delay. In addition, this mode provides the most flexibility in specifying the list of frequencies.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The existing list frequencies are edited and cleared.
- The number of segments to define is read in.
- An array for the list segments is defined.
- The parameters for each segment are requested.
- If the operator wants to edit, the segment parameters are re-entered.
- The new list is sent to the analyzer.
- The analyzer is released from remote control and the program ends.

Running the Program

The program displays the frequency list table as it is entered. During editing, the displayed table is updated as each line is edited. The table is not re-ordered. At the completion of editing, the table is entered into the analyzer, and list frequency sweep mode is switched ON. During editing, pressing **Enter** leaves an entry at the old value.

The start frequency, stop frequency, and number of points for the last segment entered may be observed on the analyzer's display.

Activate a marker and select the discrete-marker mode to observe the point spacing. Use an exaggerated scale with just a few points to find the list-frequency spacing between points.

BASIC Program Listing

```
10 ! This program shows how to enter and edit a list frequency table.
20 ! Any existing table is deleted and a new table is defined and
30 ! edited. This list is then sent to the analyzer. Any number of
40 ! segments or points may be entered. Be sure not to enter more than
50 ! 1601 points or 30 segments.
60 !
70 ! EXAMP6A
80 !
90 ! ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 !
110 ! CLEAR SCREEN
120 ! Initialize the analyzer
```

```

130  ABORT 7                                ! Generate an IFC (Interface Clear)
140  CLEAR @Nwa                             ! SDC (Selective Device Clear)
150  OUTPUT @Nwa;"OPC?;PRES;"              ! Preset the analyzer and wait
160  ENTER @Nwa;Reply                       ! Read the 1 when complete
170  !
180  ! Edit the list frequency table and set its type
190  ! LISTTYPE = LSTP (stepped list mode)
200  !
210  OUTPUT @Nwa;"EDITLIST;LISTTYPELSTP;"
220  !
230  OUTPUT @Nwa;"CLEL;"                   ! Clear the existing list frequencies
240  !
250  INPUT "Number of segments?",Numb      ! Read number of segments to define
260  ALLOCATE Table(1:Numb,1:3)           ! Define an array for the list segments
270  !
280  PRINT USING "10A,15A,15A,20A";"SEGMENT","START(MHZ)","STOP(MHZ)","NUMBER OF
POINTS"
290  !
300  FOR I=1 TO Numb                       ! Cycle through the segments and read in the values
310  GOSUB Loadpoin
320  NEXT I
330  !
340  LOOP
350  INPUT "DO YOU WANT TO EDIT? Y OR N",An$
360  EXIT IF An$="N"
370  INPUT "ENTRY NUMBER?",I              ! Get an entry number
380  GOSUB Loadpoin                       ! Go load point
390  END LOOP
400  !
410  OUTPUT @Nwa;"EDITLIST"               ! Send the new list to the analyzer
420  FOR I=1 TO Numb                       ! Send one segment at a time
430  OUTPUT @Nwa;"SADD;"                   ! Add a segment
440  OUTPUT @Nwa;"STAR";Table(I,1);"MHZ;" ! Start frequency
450  OUTPUT @Nwa;"STOP";Table(I,2);"MHZ;" ! Stop frequency
460  OUTPUT @Nwa;"POIN",Table(I,3),";"     ! Number of points
470  OUTPUT @Nwa;"SDON;"                   ! Segment done
480  NEXT I                               ! Next segment to send to the analyzer
490  !
500  OUTPUT @Nwa;"EDITDONE;"              ! Done with list
510  OUTPUT @Nwa;"LISFREQ;"               ! Set list frequency mode
520  !
530  OUTPUT @Nwa;"OPC?;WAIT;"             ! Wait for analyzer to finish
540  ENTER @Nwa;Reply                     ! Read the 1 when complete
550  LOCAL @Nwa                           ! Release HP-IB control
560  STOP                                 ! End of main program
580  ! *****Subroutines *****
590  !
600  Loadpoin:                             ! Sub to read in each segment value
610  INPUT "START FREQUENCY? (MHZ)",Table(I,1) ! Read start frequency
620  INPUT "STOP FREQUENCY? (MHZ)",Table(I,2) ! Read stop frequency
630  INPUT "NUMBER OF POINTS?",Table(I,3)     ! Read number of points in seg
640  IF Table(I,3)=1 THEN Table(I,2)=Table(I,1)! Single point same start stop
650  !
660  ! Print new segment into table on display
670  PRINT TABXY(0,I+1);I;TAB(10);Table(I,1);TAB(25);
680  PRINT Table(I,2);TAB(40),Table(I,3)
690  RETURN
700  END

```

Example 6B: Setting Up a List Frequency Table in Swept List Mode

The purpose of this example is to show how to create two tables: a list frequency table in swept list mode, and a limit-test table. Both tables are then transmitted to the analyzer.

In the swept list mode, the source sweeps through each segment, with the analyzer taking data during the sweep. This can increase throughput by up to 6 times over a stepped sweep. In addition, this mode expands the list table to include a power value and IF bandwidth for each defined segment. The only restriction is that you cannot specify segments with overlapping frequencies. For more information on the swept list mode, refer to your analyzer's user's guide.

The following is an outline of the program's processing sequence:

- An array for the type of limit line is defined and initialized.
- An array for the list table (frequency list and limit lines) is defined and initialized with data.
- An I/O path is assigned for the analyzer.
- The system is initialized.
- A variable is initialized with the number of segments in the list table.
- The analyzer is placed into hold mode and (for ES model analyzers) the port powers are uncoupled for the active channel.
- The existing list frequencies are edited and the analyzer swept list mode is selected.
- The analyzer is instructed to set the IF bandwidth and port power levels according to the values from the list table.
- The new frequency list table is sent to the analyzer.
- The sweep mode is set to list frequency mode and S21 (transmission) measurement. A single sweep is taken.
- The analyzer display is autoscaled.
- The existing limit lines are edited and cleared.
- The new limit table is sent to the analyzer.
- The limit lines and limit test are turned on.
- The analyzer is released from remote control and the program ends.

The program is written as follows:

Running the Program

The program requires no input from the operator. The list frequency table data and limit-test table data is read directly from the program code into the array. Next, the analyzer is set up to respond to the IF bandwidth and port power parameters of the list frequency table. After the list frequency data is entered into the analyzer, the list frequency sweep mode is initiated and a single sweep is taken. Lastly, the limit-test table data is entered into the analyzer and the limit lines and limit test are activated.

The analyzer should now indicate whether the measurement trace passes or fails the limit test.

BASIC Program Listing

```

10 ! This program creates a swept list table for a specific filter measurement.
20 ! The program first builds a list frequency table from a hardcoded set of
30 ! list segments. It then builds a limit table based on the same hardcoded
40 ! data. When modifying the table data below, make sure that no two segments
50 ! overlap in frequency.
60 !
70 ! EXAMP6B
80 !
90 !-----
100! The following constants are used to represent limit line "type"
110! in the table below.
120!
130   No_limit=0
140!
150! 1 = flat line
160! 2 = sloped line
170! 3 = single point (also used to terminate a line segment)
180!-----
190!
200   DIM Limtype$(1:3)[2]
210   DATA FL, SL, SP
220   READ Limtype$(*)
230!
240! The list below has the following entries:
250!   Start: start frequency
260!   Stop: Segment stop
270!   Pts: Segment number of points
280!   P1: Power at port 1
290!   P2: Power at port 2 (ES model analyzers only)
300!   IFBW: Segment IFBW
310!   upper: Upper Limit
320!   lower: Lower Limit
330!   strt type: Limit Line type for start of segment
340!   end type: Limit Line type for end of segment
350!-----
360   DIM Listtable(1:6,1:10)
370   Freqlist: ! |strt|end
380! List: Start | Stop | Pts | P1 | P2 | IFBW | uppr | lower |type|type
390! -----
400! -----
410   DATA 570.000, 588.000, 5, 10, 0, 10, -90, -200, 1, 0
420   DATA 588.000, 598.000, 11, 0, 0, 100, -85, -200, 1, 3
430   DATA 600.000, 664.000, 15, -10, -10, 3700, 0, 0, 0, 0
440   DATA 664.000, 678.000, 100, -10, -10, 3700, 0, -6, 1, 3
450   DATA 678.000, 768.000, 10, -10, -10, 1000, 0, 0, 0, 0
460   DATA 768.000, 768.000, 1, 10, 0, 10, -90, -200, 3, 3
470! -----
480   READ Listtable(*)
490!
500   ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
510!
520   CLEAR SCREEN
530! Initialize the system
540   ABORT 7
550   CLEAR @Nwa
560   OUTPUT @Nwa;"OPC?;PRES;"

```

```

570  ENTER @Nwa;Done
580  Numb=SIZE(Listtable,1)           ! Number of segments in list table
590  OUTPUT @Nwa;"HOLD;"             ! Hold mode allows faster set up
600!
610!  For ET model analyzers, comment out this next line
620  OUTPUT @Nwa;"PORTPUNCPLD;"      ! Uncouple ports
630!
640!  Create the list frequency table from the table above
650!  LISTTYPE = LSWP      (swept list mode)
660!
670  OUTPUT @Nwa;"EDITLIST;LISTTYPELSWP;"
680!
690!  Turn on list power mode for each port (uncoupled)
700!  Turn on list ifbw mode
710!
720  OUTPUT @Nwa;"LISIFBWMON;"        ! IF bandwidth set by list
730  OUTPUT @Nwa;"S21;LISPWRMON;"     ! Port 1 power set by list
740!
750!  For ET model analyzers, comment out this next line
760  OUTPUT @Nwa;"S22;LISPWRMON;"     ! Port 2 power set by list
770!
780  FOR I=1 TO Numb
790    OUTPUT @Nwa;"SADD;STAR";Listtable(I,1);"MHZ;"
800    OUTPUT @Nwa;"STOP";Listtable(I,2);"MHZ;"
810    OUTPUT @Nwa;"POIN";Listtable(I,3);";"
820    OUTPUT @Nwa;"S11;"              ! Port 1 active
830    OUTPUT @Nwa;"SEGPOWER";Listtable(I,4);";"
840!
850!  For ET model analyzers, comment out these next two lines
860    OUTPUT @Nwa;"S22;"              ! Port 2 active
870    OUTPUT @Nwa;"SEGPOWER";Listtable(I,5);";"
880!
890    OUTPUT @Nwa;"SEGI FBW";Listtable(I,6);";"
900    OUTPUT @Nwa;"SDON;"
910  NEXT I
920  OUTPUT @Nwa;"EDITDONE;"
930  OUTPUT @Nwa;"LISFREQ;S21;OPC?;SING;"
940  ENTER @Nwa;Done
950  OUTPUT @Nwa;"AUTOSCAL;WAIT;"
960!
970!  Now create the corresponding limit table
980!
990  OUTPUT @Nwa;"EDITLIML;CLEAL;"    ! Initiate the limit table
1000 FOR I=1 TO Numb
1010   IF Listtable(I,9)<>No_limit THEN
1020     OUTPUT @Nwa;"SADD"             ! Add a new limit segment
1030     OUTPUT @Nwa;"LIMS";Listtable(I,1);"MHZ"
1040     OUTPUT @Nwa;"LIMU";Listtable(I,7)
1050     OUTPUT @Nwa;"LIML";Listtable(I,8)
1060     OUTPUT @Nwa;"LIMT";Limtype$(Listtable(I,9))
1070     OUTPUT @Nwa;"SDON;"
1080     IF Listtable(I,10)<>No_limit THEN !
1090       OUTPUT @Nwa;"SADD "          ! Add a new limit segment
1100       OUTPUT @Nwa;"LIMS";Listtable(I,2);"MHZ"
1110       OUTPUT @Nwa;"LIMT";Limtype$(Listtable(I,10))
1120       OUTPUT @Nwa;"SDON;"
1130     END IF
1140   END IF

```

```
1150 NEXT I
1160 OUTPUT @Nwa;"EDITDONE;LIMILINEon;LIMITESTon;"
1170!
1180 LOCAL @Nwa
1190 END
```

Example 6C: Selecting a Single Segment from a Table of Segments

This example program demonstrates how to define a single segment as the operating-frequency range of the analyzer from a table of segments stored in the controller. The program assumes that a list frequency table has already been entered into the analyzer, either manually, or using the program in Example 6A or Example 6B.

The program first loads the list frequency table into the computer by reading the start and stop frequencies of each segment and the number of points for each segment. The segment's parameters are then displayed on the computer screen, and the operator can choose which segment is to be used by the analyzer. Note that only one segment can be chosen at a time.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The list frequency segment is edited.
- The largest segment number is set.
- The highest segment number is requested.
- The number of actual segments is read in.
- A list frequency table is defined and the segments are read in to the controller from the analyzer.
- The operator selects one of the segments of the sweep.
- The controller “zooms-in” and sweeps the defined segment.
- The operator ends the program by entering segment number “0.”
- The analyzer returns to sweeping all the segments in the table.
- The activation loop is ended and the program ends.

Running the Program

The program will read the parameters for each list-frequency segment from the analyzer, and build a table containing all the segments. The parameters of each segment will be printed on the computer screen. If there are more than 17 segments, the program will pause. Press **(Return)** to see more segments. The maximum number of segments that can be read is 30 (the maximum number of segments the analyzer can hold). Use the computer's **(Page Up)** and **(Page Down)** keys to scroll through the list of segments if there are more than 17.

After all the segments are displayed, the program will prompt the operator for a specific segment to be used. Type in the number of the segment, and the analyzer will then “zoom-in” on that segment. The program will continue looping, allowing continuous selection of different segments. To exit the loop, type **(0)**. This will restore all the segments (with the command ASEG), allowing the analyzer to sweep all of the segments, and the program will terminate.

BASIC Program Listing

```

10 ! This program shows how to select a single segment from a list
20 ! frequency sweep and activate it as the sweep. The list frequency
30 ! table is read from the analyzer and displayed on the computer
40 ! screen. The operator is prompted to select a segment and the
50 ! program then activates it. All the segments are activated upon
60 ! completion.
70 !
80 ! EXAMP6C
90 !
100 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
110 !
120 CLEAR SCREEN
130 ! Initialize the analyzer
140 ABORT 7 ! Generate an IFC (Interface Clear)
150 CLEAR @Nwa ! SDC (Selected Device Clear)
160 !
170 ! Print header for table of existing segments
180 PRINT USING "10A,15A,15A,20A";"SEGMENT","START(MHZ)","STOP(MHZ)","NUMBER OF
POINTS"
190 OUTPUT @Nwa;"EDITLIST;" ! Edit list frequency segment
200 OUTPUT @Nwa;"SEDI30;" ! Set largest segment number
210 OUTPUT @Nwa;"SEDI?;" ! Request number of highest segment
220 ENTER @Nwa;Numsegs ! Read number of actual segments
230 !
240 ! Setup table and read segments from analyzer
250 ALLOCATE Table(1:Numsegs,1:3) ! Allocate table of segments
260 FOR I=1 TO Numsegs ! Cycle through segments
270 GOSUB Readlist ! Read in segment definitions
280 NEXT I ! Next segment
290 !
300 ! Loop and read segment to be activated
310 LOOP ! Request operator to enter segment
320 INPUT "SELECT SEGMENT NUMBER: (0 TO EXIT)",Segment
330 EXIT IF Segment=0 ! Exit point
340 OUTPUT @Nwa;"EDITDONE;";"SSEG";Segment;";" ! Set active segment to sweep
350 END LOOP ! End activation loop
360 !
370 OUTPUT @Nwa;"ASEG;" ! Set all segment sweep
380 DISP "PROGRAM ENDED"
390 !
400 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait for analyzer to finish
410 ENTER @Nwa;Reply ! Read the 1 when complete
420 LOCAL @Nwa ! Release HP-IB control
430 STOP ! End of main program
440 !
450 ! ***** Subroutines *****
460 !
470 Readlist: ! Read segment list from analyzer
480 OUTPUT @Nwa;"EDITLIST;" ! Edit segment list
490 OUTPUT @Nwa;"SEDI",I,";" ! Select segment to edit
500 OUTPUT @Nwa;"STAR;" ! Send start freq to display value
510 OUTPUT @Nwa;"OUTPACTI;" ! Output active function value
520 ENTER @Nwa;Table(I,1) ! Read start frequency
530 OUTPUT @Nwa;"STOP;" ! Send stop freq to display value
540 OUTPUT @Nwa;"OUTPACTI;" ! Output active function value
550 ENTER @Nwa;Table(I,2) ! Read stop frequency

```

```

560 OUTPUT @Nwa;"POIN;"           ! Send number of points to display
570 OUTPUT @Nwa;"OUTPACTI;"       ! Output active function value
580 ENTER @Nwa;Table(I,3)         ! Read number of points
590 !
600 IF I=18 THEN                  ! Pause if more than 17 segments
610 INPUT "PRESS RETURN FOR MORE",A$ ! Read Return to continue
620 END IF
630 ! Print new header for segment data
640 IMAGE 4D,6X,4D.6D,3X,4D.6D,3X,4D ! Format image to disp segment data
650 PRINT USING 640;I;Table(I,1)/1.E+6;Table(I,2)/1.E+6;Table(I,3)
660 RETURN
670 !
680 END

```

Using Limit Lines to Perform PASS/FAIL Tests

There are two steps to performing limit testing on the analyzer via GPIB. First, limit specifications must be defined and loaded into the analyzer. Second, the limits are activated, the device is measured, and its performance to the specified limits is signaled by a pass or fail message on the analyzer's display.

Example 6D illustrates the first step, setting up limits. Example 6E performs the actual limit testing.

Example 6D: Setting Up a Limit-Test Table

The purpose of this example is to show how to create a limit-test table and transmit it to the analyzer.

The command sequence for entering a limit-test table imitates the key sequence followed when entering a table from the analyzer's front panel: there is a command for every key-press. Editing a limit line is also the same as the key sequence, but remember that the analyzer automatically re-orders the table in order of increasing start frequency.

The limit-test table is also carried as part of the learn string. While it cannot be modified as part of the learn string, the learn string can be stored and recalled with very little effort. See ["Example 5A: Using the Learn String" on page 7-79](#) and ["Learn String and Calibration-Kit String" on page 5-7](#) for details on using learn strings.

This example takes advantage of the computer's capabilities to simplify creating and editing the table. The table is entered and completely edited before being transmitted to the analyzer. To simplify the programming task, options such as entering offsets are not included.

This example automates the front-panel operation of entering a limit-test table. Front-panel operation and limits are discussed in your analyzer's user's guide.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The limit lines are edited and cleared.

- The number of limits is requested.
- The limit table is created.
- The string array of limit types is created.
- The operator is prompted to enter the new limit values.
- The new limit table is sent back to the analyzer.
- The limit line is activated.
- The limit test is activated.
- The analyzer is returned to local control and the program ends.

Running the Program

CAUTION This example program will delete any existing limit lines before entering the new limits. If this is not desired, omit the line(s) that clear the existing limits (in this case, the command "CLEL;" contained in LINE 190). This program begins by presetting the analyzer. The programmer will have to add the necessary command lines to set the analyzer to the operating conditions required for testing. The example program will show the limit lines defined, but the limits will always fail without additional analyzer setup.

The program displays the limit table as it is entered. During editing, the displayed table is updated as each line is edited. The table is not reordered. At the completion of editing, the table is entered into the analyzer, and limit-testing mode switched ON. The analyzer will rearrange the table in ascending order starting with the lowest start frequency entry.

During editing, simply pressing **Enter** leaves an entry at the old value.

BASIC Program Listing

```

10 ! This program shows how to create a limit table and send it to the
20 ! analyzer. The operator enters the desired limits when prompted for
30 ! the stimulus value, upper and lower value and type of limit
40 ! desired. Once the table is created, the limits are sent to the
50 ! analyzer and activated.
60 !
70 ! EXAMP6D
80 !
90 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 !
110 CLEAR SCREEN
120 ! Initialize the analyzer
130 ABORT 7 ! Generate an IFC (Interface clear)
140 CLEAR @Nwa ! SDC (Selected Device Clear)
150 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
160 ENTER @Nwa;Reply ! Read the 1 when completed
170 !
180 OUTPUT @Nwa;"EDITLIML;" ! Edit limit lines
190 OUTPUT @Nwa;"CLEL;" ! Clear any existing limits
200 INPUT "NUMBER OF LIMITS?",Numb ! Request the number of limits
210 ALLOCATE Table(1:Numb,1:3) ! Create a table
220 ALLOCATE Limtype$(Numb)[2] ! Create string array of limit types

```

```

230 !
240 ! Print out the header for the table
250 PRINT USING "10A,20A,15A,20A";"SEG","STIMULUS (MHz)","UPPER (dB)","LOWER
(dB)","TYPE"
260 !
270 ! Prompt the operator to enter the limit values
280 FOR I=1 TO Numb ! Cycle through the limits
290 GOSUB Loadlimit ! Go read limit values
300 NEXT I ! Next limit value
310 !
320 ! Allow the operator to edit the array entered
330 LOOP ! Cycle to edit limit lines
340 INPUT "DO YOU WANT TO EDIT? Y OR N",An$
350 EXIT IF An$="N" ! Exit loop on N and send to analyzer
360 INPUT "ENTRY NUMBER?",I ! Read limit number to edit
370 GOSUB Loadlimit ! Go read limit values
380 END LOOP ! Next edit entry
390 !
400 ! Send the limit line array segments to the analyzer
410 OUTPUT @Nwa;"EDITLIML;" ! Edit the limit
420 FOR I=1 TO Numb ! Each segment of the limit
430 OUTPUT @Nwa;"SADD;" ! Add segment
440 OUTPUT @Nwa;"LIMS";Table(I,1);"MHZ" ! Send segment stimulus value
450 OUTPUT @Nwa;"LIMU";Table(I,2);"DB" ! Upper limit value
460 OUTPUT @Nwa;"LIML";Table(I,3);"DB" ! Lower limit value
470 IF Limtype$(I)="FL" THEN OUTPUT @Nwa;"LIMTFL;" ! Flat limit
480 IF Limtype$(I)="SL" THEN OUTPUT @Nwa;"LIMTSL;" ! Sloping limit
490 IF Limtype$(I)="SP" THEN OUTPUT @Nwa;"LIMTSP;" ! Point limit
500 OUTPUT @Nwa;"SDON;" ! Segment done
510 NEXT I ! next segment
520 !
530 OUTPUT @Nwa;"EDITDONE;" ! Edit complete
540 OUTPUT @Nwa;"LIMILINEON;" ! Turn limit line on
550 OUTPUT @Nwa;"LIMITESTON;" ! Turn limit test on
560 !
570 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait for the analyzer to finish
580 ENTER @Nwa;Reply ! Read the 1 when complete
590 !
600 LOCAL @Nwa ! Release HP-IB control
610 STOP ! End of main program
620 !
630 !***** Subroutines *****
640 !
650 Loadlimit: ! Sub to interact to load data
660 INPUT "STIMULUS VALUE? (MHz)",Table(I,1) ! and print table created
670 INPUT "UPPER LIMIT VALUE? (DB)",Table(I,2)
680 INPUT "LOWER LIMIT VALUE? (DB)",Table(I,3)
690 INPUT "LIMIT TYPE? (FL=FLAT, SL=SLOPED, SP=SINGLE POINT)",Limtype$(I)
700 !
710 ! Format and display table values
720 PRINT
TABXY(0,I+1);I;TAB(10);Table(I,1);TAB(30);Table(I,2);TAB(45);Table(I,3);TAB(67);Limty
pe$(I)
730 RETURN ! Next limit value
740 !
750 END

```

Example 6E: Performing PASS/FAIL Tests While Tuning

The purpose of this example is to demonstrate the use of the limit/search-fail bits in event-status register B, to determine whether a device passes the specified limits. Limits can be entered manually, or using Example 6D.

The limit/search-fail bits are set and latched when limit testing or a marker search fails. There are four bits, one for each channel for both limit testing and marker search. See [Figure 6-1 on page 6-3](#) and [Table 4-1 on page 4-5](#) for additional information. Their purpose is to allow the computer to determine whether the test/search executed was successful. They are used in the following sequence:

1. Clear event-status register B.
2. Trigger the limit test or marker search.
3. Check the appropriate fail bit.

When using limit testing, the best way to trigger the limit test is to trigger a single sweep. By the time the single sweep command (SING) finishes, limit testing will have occurred.

NOTE	If the device is tuned during the sweep, it may be tuned into and then out of limit, causing a limit test to qualify as “passed” when the device is not in fact within the specified limits.
-------------	--

When using marker searches (max, min, target, and widths), outputting marker or bandwidth values automatically triggers any related searches. Therefore, all that is required is to check the fail bit after reading the data.

In this example, several consecutive sweeps must qualify as “passing” in order to ensure that the limit-test pass was not extraneous due to the device settling or operator tuning during the sweep. Upon running the program, the number of “passed” sweeps for qualification is entered. For very slow sweeps, a small number of sweeps such as two are appropriate. For relatively fast sweeps, where the device requires time to settle after tuning, as many as six or more sweeps may be more appropriate.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The pass counter is initialized on entry.
- The analyzer takes a sweep.
- The event-status register B byte is output and the channel-1 limit is tested.
- If the device fails the first sweep, the operator is prompted to ensure it is tuned correctly and the device is measured again.
- If the device passes the first sweep, the operator is prompted not to touch the device as testing continues.
- If the device passes the required number of sweeps, the operator is prompted that the device has passed and to connect the next device for testing.
- The program initializes the pass counter and begins to measure the new device.

Running the Program

NOTE This program assumes a response calibration (through calibration) or a full 2-port calibration has been performed prior to running the program.

Set up a limit-test table on channel 1 for a specific device either manually, or using the program in Example 6D.

Run the program, and enter the number of passed sweeps desired for qualification. After entering the qualification number, connect the device. When a sweep passes, the computer beeps. When enough consecutive sweeps qualify the device as “passing,” the computer emits a dual-tone beep to attract the attention of the operator, and then prompts for a new device.

To test the program's pass/fail accuracy, try causing the DUT to fail by loosening the cables connecting the DUT to the analyzer and running the program again.

BASIC Program Listing

```

10  ! This program demonstrates Pass/Fail tests using limit lines. The
20  ! program uses the latch-on-fail limit bits in event status register
30  ! B to determine if the device performance passes the specified test
40  ! limit lines. It then requires that the device passes for multiple
50  ! consecutive sweeps in order to ensure that the device is static in
60  ! the response and not varying. The operator specifies how many sweeps
70  ! are required to pass the test.
80  !
90  ! EXAMP6E
100 !
110 ASSIGN @Nwa TO 716                ! Assign an I/O path for the analyzer
120 !
130 CLEAR SCREEN
140 ! Initialize the analyzer No preset to retain settings for testing
150 ABORT 7                          ! Generate an IFC (Interface Clear)
160 CLEAR @Nwa                       ! SDC (Selected Device Clear)
170 !
180 INPUT "Number of consecutive passed sweeps for qualification?",Qual
190 Pass=0                          ! Initialize pass counter on entry
200 !
210 Tune: DISP "TUNE DEVICE AS NECESSARY" ! Device is not passing warning
220 !
230 Measure:OUTPUT @Nwa;"OPC?;SING;"  ! Single sweep and wait
240 ENTER @Nwa;Reply                 ! Read the 1 when completed
250 !
260 OUTPUT @Nwa;"ESB?;"              ! Event status register B byte
270 ENTER @Nwa;Estat                 ! Reading byte clears the register
280 !
290 IF BIT(Estat,4) THEN              ! Bit 4 is failed limit on channel 1
300     IF Pass>0 THEN BEEP 1200,.05 ! passed before? Now not passing beep
310     Pass=0                       ! Reset pass to 0
320     GOTO Tune                    ! Adjust and measure again
330 END IF
340 !
350 BEEP 2500,.01                    ! Limit test passed passing beep
360 Pass=Pass+1                      ! Increment number of passes
370 DISP "LEAVE DEVICE ALONE"        ! Warn not to adjust as it passed

```

```
380 !
390 IF Pass<Qual THEN GOTO Measure      ! If not enough passes to qualify
400 !
410 ! Device passed
420 DISP "DEVICE PASSED!"              ! Number of passes enough to qualify
430 FOR I=1 TO 10                      ! Announce the device passed and
440     BEEP 1000,.05                  ! prompt operator to connect new
450     BEEP 2000,.01                  ! device to test.
460 NEXT I
470 !
480 INPUT "PRESS RETURN FOR NEXT DEVICE",Dum$
490 Pass=0                             ! Initialize pass counter
500 GOTO Measure                       ! Begin measurement
510 !
520 END
```

Report Generation Examples

The analyzer has three operating modes with respect to GPIB. These modes can be changed by accessing softkeys in the **(Local)** menu. System-controller mode is used when no computer is present. This mode allows the analyzer to control the system. The other two modes allow a remote system controller to coordinate certain actions: in talker/listener mode the remote system controller can control the analyzer, as well as coordinate plotting and printing; and in pass-control mode the remote system controller can pass active control to the analyzer so that the analyzer can plot, print, control a power meter, or load/store to disk. The amount of peripheral interaction is the main difference between talker/listener and pass-control mode.

Example 7A: Operation Using Talker/Listener Mode

The commands OUTPPLOT and OUTPPRIN allow talker/listener mode plotting and printing via a one way data path from the analyzer to the plotter or printer. The computer sets up the path by addressing the analyzer to talk, the plotter to listen, and then releasing control of the analyzer in order to transfer the data. The analyzer will then make the plot or print. When it is finished, it asserts the End or Identify (EOI) control line on GPIB. The controller detects the presence of EOI and re-asserts control of the GPIB. This example program makes a plot using the talker/listener mode.

NOTE	One of the attributes of the OUTPPLOT command is that the plot can include the current softkey menu. The plotting of the softkeys is enabled with the PSOFTON; command and disabled with the PSOFTOFF; command.
-------------	---

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The selected frequency span is swept once.
- The plot command is sent to the analyzer.
- The analyzer is set to talker mode and the plotter is set to listener mode.
- The plot is spooled to the plotter.
- The analyzer is set to listener mode when the controller detects an EOI from the analyzer.
- The controller puts the analyzer back in continuous-sweep mode.
- The analyzer is returned to local control and the program ends.

Running the Program

The analyzer will go into remote, and make the plot. During the plot, the computer will display the message Plotting and waiting for EOI. When the plot is completed, the analyzer asserts the EOI line on the GPIB. The computer detects this and displays the End of plot message.

If a problem arises with the plotter, such as no pen or paper, the analyzer cannot detect the situation because it only has a one-way path of communication. Hence, the analyzer will attempt to continue plotting until the operator intervenes and aborts the plot by pressing the analyzer's **Local** key.

Pressing **Local** will do the following:

- Aborts the plot.
- Causes the warning message CAUTION: PLOT ABORTED.
- Asserts EOI to return control of the bus to the system controller.

Because of possible peripheral malfunctions, it is generally advisable to use pass-control mode, which allows two way communication between the peripherals and the analyzer.

BASIC Program Listing

```

10 ! This example shows a plot operation under the control of the
20 ! analyzer. The analyzer is commanded to output plot data, the
30 ! plotter is addressed to listen, and the analyzer to talk. The
40 ! controller watches for EOI at the end of the plot sequence and
50 ! then regains control of the HP-IB operations.
60 !
70 ! EXAMP7A
80 !
90 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 !
110 CLEAR SCREEN
120 ! Initialize analyzer without preset to preserve data
130 ABORT 7 ! Generate an IFC ( Interface Clear)
140 CLEAR @Nwa ! SDC (Selected Device Clear)
150 !
160 OUTPUT @Nwa;"OPC?;SING;" ! Stop sweep and prepare for plot
170 ENTER @Nwa;Reply ! Read in "1" when completed
180 !
190 OUTPUT @Nwa;"OUTPLOT;" ! Send plot command
200 SEND 7;UNL LISTEN 5 TALK 16 DATA ! Unlisten address devices and plot
210 DISP "Plotting and waiting for EOI"
220 WAIT .5 ! Pause 500 mS to start process
230 !
240 REPEAT ! Loop until EOI detected bit is set
250 STATUS 7,7;Stat ! Read HP-IB interface register 7
260 UNTIL BIT(Stat,11) ! Test bit 11 EOI on HP-IB
270 !
280 End_plot:DISP "End of plot"
290 !
300 OUTPUT @Nwa;"CONT;" ! Restore continuous sweep
310 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait for analyzer to finish
320 ENTER @Nwa;Reply ! Read the 1 when complete
330 LOCAL @Nwa ! Release remote control
340 END

```

Example 7B: Controlling Peripherals Using Pass-Control Mode

NOTE This example program will not work with HP BASIC for Windows.

If the analyzer is in pass-control mode and it receives a command telling it to plot, print, control a power meter, or store/load to disk, it sets bit 1 in the event-status register to indicate that it requires control of the bus. If the computer then uses the GPIB pass-control command to pass control to the analyzer, the analyzer will take control of the bus and access the peripheral. When the analyzer no longer requires control, it will pass control back to the computer.

In this example, the pass-control mode is used to allow the network analyzer to dump a screen display to a printer.

Pass-control mode allows the analyzer to control the printer while sending the screen display to be printed. The analyzer requests control from the instrument controller and the controller allows the analyzer to take control of the GPIB and dump the plot. The instrument controller must not interact with the GPIB while this remote analyzer control is taking place. Once the printer-dump operation is complete, the analyzer passes control back to the controller and the controller continues programming the analyzer.

NOTE The analyzer assumes that the address of the computer is correctly stored in its GPIB addresses menu under **(Local) SET ADDRESSES ADDRESS: CONTROLLER**. If this address is incorrect, control will not return to the computer. Similarly, if control is passed to the analyzer while it is in talker/listener mode, control will not return to the computer.

Control should not be passed to the analyzer before it has set event-status-register bit 1 making it Request Active Control. If the analyzer receives control before the bit is set, control is passed immediately back to the controller.

When the analyzer becomes the active system controller, it is free to address devices to talk and listen as required. The only functions denied the analyzer are the ability to assert the interface clear line (IFC), and the remote line (REN). These are reserved for the master system controller. As the active system controller, the analyzer can send and receive messages from printers, plotters, and disk drives.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- The system is initialized.
- The status registers are cleared.
- Bit 1 of ESR request control is set.
- The ESR interrupt for SRQ is enabled.
- The pass-control mode is enabled.
- The data is dumped to the printer.

- The program loops until the SRQ bit is set.
- The status byte is read with a serial poll.
- The program tests for bit 6, SRQ.
- If SRQ is detected, the program tests for pass control (bit 5 of the status byte).
- If the analyzer requests control, the system controller gives the analyzer control of the bus.
- The program loops and waits for the analyzer to complete the print dump.
- The analyzer reads the interface.
- If bit 6 is active in the controller, control is returned from the analyzer to the controller.
- The status-byte assignments are cleared.
- The analyzer returns to continuous-sweep mode.
- The analyzer is returned to local control and the program ends.

Running the Program

The analyzer will briefly flash the message `WAITING FOR CONTROL`, before actually receiving control and generating the printer output. The computer will display the `Printing from analyzer and waiting for control` message.

When the printer output is complete, the analyzer passes control back to the address stored as the controller address under the `(Local) SET ADDRESSES` menu. The computer will detect the return of active control and exit the wait loop. The controller will display the message `Control returned from analyzer` and then release the analyzer from remote control.

NOTE	Because the program waits for the analyzer's request for control, it can be used to respond to front-panel requests as well. Remove the <code>"PRINALL;"</code> command from the program and run the program. Nothing will happen until the operator requests a print, plot, or disk access from the front panel of the analyzer. For example, press <code>(Local) (Copy)</code> and <code>PRINT MONOCHROME</code> .
-------------	--

BASIC Program Listing

```

10 ! This example shows a pass-control operation to print the display
20 ! under the analyzer HP-IB control. The controller reads the status
30 ! of the analyzer looking for SRQ to indicate that the analyzer is
40 ! requesting control. Once control is passed to the analyzer, the
50 ! controller monitors the status of its interface registers to detect
60 ! when the interface is again the active controller. The analyzer will
70 ! pass control back to the controller when finished.
80 !
90 ! EXAMP7B
100 !
110 ASSIGN @Nwa TO 716           ! Assign an I/O path for the analyzer
120 !
130 CLEAR SCREEN
140 ! Initialize the analyzer without preset to preserve data

```

```

150 ABORT 7                                ! Generate an IFC ( Interface Clear)
160 CLEAR @Nwa                             ! SDC (Selected Device Clear)
170 !
180 OUTPUT @Nwa;"OPC?;SING;"              ! Single sweep and stop for print
190 ENTER @Nwa;Reply                       ! Read in "1" when complete
200 !
210 OUTPUT @Nwa;"CLES;"                   ! Clear status registers
220 OUTPUT @Nwa;"ESE2;"                   ! Enable bit 1 of ESR request control
230 OUTPUT @Nwa;"SRE32;"                  ! Enable ESR interrupt for SRQ
240 !
250 OUTPUT @Nwa;"USEPASC;"                 ! Enable pass control mode
260 OUTPUT @Nwa;"PRINALL;"                ! Begin printer dump
270 !
280 REPEAT                                ! Loop until SRQ bit is set
290   Stat=SPOLL(@Nwa)                    ! Read status byte with serial poll
300 UNTIL BIT(Stat,6)                     ! Test for bit 6, SRQ
310 !
320 Pass_control:                          ! SRQ detected. Test for pass control
330 IF BIT(Stat,5) THEN                   ! Requested pass control
340   PASS CONTROL @Nwa                   ! Send take control message
350 ELSE                                  ! Not bit 5, some other event
360   DISP "SRQ but not request pass control"
370   STOP                                ! Halt program
380 END IF
390 !
400 DISP "Printing from analyzer and waiting for control"
410 !
420 REPEAT                                ! Loop and wait for completion
430   STATUS 7,6;Hpib                     ! Read HP-IB interface register
440 UNTIL BIT(Hpib,6)                     ! Bit 6 is active controller
450 !
460 DISP "Control returned from analyzer"
470 OUTPUT @Nwa;"TALKLIST;"               ! Set talker/listener mode again
480 OUTPUT @Nwa;"CLES;"                   ! Clear status byte assignments
490 !
500 OUTPUT @Nwa;"CONT;"                   ! Start analyzer sweeping again
510 OUTPUT @Nwa;"OPC?;WAIT;"              ! Wait for analyzer to finish
520 ENTER @Nwa;Reply                       ! Read the 1 when complete
530 !
540 LOCAL @Nwa                            ! Release HP-IB control
550 END

```

Example 7C: Printing with the Parallel Port

This program will select the parallel port and program the analyzer to copy its display to a printer. There are a number of commands associated with the serial and parallel ports which allow you to configure output modes such as the baud rate and the handshake type used by the port and the printer. In this example, the parallel port is configured by the program. The interface may also be configured from the analyzer's front-panel keys by pressing **(Local) SET ADDRESSES PRINTER PORT**. This menu allows manual selection of the parallel-interface parameters.

Since the GPIB port is not being used for the copy operation, programming of the analyzer and measurement operations may continue once the copy operation has been initiated. An internal spooler in the analyzer's memory provides buffering of the printer operation. In the example which follows, the status byte of the analyzer is checked to determine when the print operation is complete.

- An I/O path is assigned to the analyzer.
- The analyzer is initialized.
- A single sweep is taken and the analyzer is placed in hold mode.
- The status registers are cleared.
- The copy-complete bit is set and enabled.
- The printer operation and communication modes are set.
- The print command is sent.
- The analyzer is released from remote control and placed in continuous-sweep mode.
- The analyzer is polled until the status bit representing copy complete is detected.
- The analyzer is released from remote control and the program ends.

Running the Program

Run the program. The analyzer is initialized, set to single-sweep mode, and a sweep is taken. The program sets the system up to print the analyzer's display to a printer connected to the parallel port. At this time, the analyzer can continue making measurements as printer prints the display. When the analyzer display has finished printing, the controller displays the message: "DONE", the analyzer is released from GPIB control, and the program ends.

BASIC Program Listing

```
10 ! This program shows how to set up and print the display through the
20 ! parallel printer port.
30 !
40 ! EXAMP7C
50 !
60 ASSIGN @Nwa TO 716           ! Assign an I/O path for the analyzer
70 !
80 CLEAR SCREEN
90 ! Initialize the analyzer without preset to preserve the data
100 ABORT 7                     ! Generate an IFC (Interface Clear)
110 CLEAR @Nwa                  ! SDC (Selected Device Clear)
```

```
120 !
130 OUTPUT @Nwa;"OPC?;SING;"          ! Single sweep and stop for print
140 ENTER @Nwa;Reply                  ! Read the 1 when complete
150 !
160 OUTPUT @Nwa;"CLES;"               ! Clear status registers
170 OUTPUT @Nwa;"ESNB128;"            ! Enable copy complete
180 OUTPUT @Nwa;"SRE4;"               ! Enable Event Status Register B
190 OUTPUT @Nwa;"PRNTRAUTF OFF;"      ! Set printer auto feed off
200 OUTPUT @Nwa;"PRNTYPLJ;"           ! Select LaserJet printer
210 OUTPUT @Nwa;"PRNPRTPARA;"         ! Select parallel port for output
240 !
250 OUTPUT @Nwa;"PRINALL;"            ! Print screen
260 !
270 DISP "PRINTING"
280 !
290 ! Set up next measurement over HP-IB
300 OUTPUT @Nwa;"CONT;"               ! Restore continuous sweep
310 !
320 ! Measurements can continue but wait for print to finish
330 REPEAT                           ! Test for bit 2 (4) ESRB
340 Stat=SPOLL(@Nwa)
350 UNTIL BIT(Stat,2)                 ! Wait for printer to complete
360 !
370 DISP "DONE"
380 LOCAL @Nwa                       ! Release HP-IB control
390 END
```

Example 7D: Plotting to a File and Transferring the File Data to a Plotter

Another report-generation technique is to transfer the plotter string to a disk file, and retrieve and plot the disk file at another time. Test time is increased when a hardcopy plot occurs during the measurement process. It may be more convenient to plot the data at another site or time. One solution to this problem is to capture the plot data using the controller and store it to a disk file. This disk file may then be read from the controller and the contents transferred to a plotter. This next example shows a method of accomplishing this task.

The analyzer is initialized without presetting the analyzer. The data that is in place on the analyzer is not disturbed by the program operation. A large string is dimensioned to hold the plotter commands as they are received from the analyzer. The length of this string depends upon the complexity of the analyzer's display. The analyzer is placed in the single-sweep mode and `OPC?;SING;` is used to make sure that operation is complete before plotting. The plotting begins with the `OUTPLOT;` command.

The string transfer is ended by the controller detecting the EOI line which the analyzer pulls at the end of the transfer. The string transfer terminates and the plot data is now stored in a string in the analyzer.

These strings contain ASCII characters which represent the plotter commands in HP-GL (Hewlett-Packard Graphics Language). A disk file is created and the string is written into the file containing the display-plot commands.

Once the strings are transferred to the disk file, the file pointer is rewound and the data is read out into a string for plotting. The string is sent to the plotter which uses the commands to generate a plot.

The following is an outline of the program's processing sequence:

- An I/O path is assigned for the analyzer.
- An I/O path is assigned for the plotter.
- The system is initialized.
- The string for plotter commands is defined.
- The frequency span is swept once.
- The plotter output is requested and read into the plot string.
- A plot file is created in the controller.
- The plot string is stored into the disk file.
- The plot string is read from the disk file and sent to the plotter.
- The analyzer returns to continuous-sweep mode.
- The analyzer is returned to local control and the program ends.

Running the Program

The program begins by initializing the analyzer and placing it into single-sweep mode. The plotter commands are captured into strings in the controller. The controller display

prompts Plotter output complete. Press RETURN to store on disk. Pressing **(Return)** causes the data to be stored to disk. Once this task is complete, the program prompts once more, Plot to file is complete. Press Return to plot. After pressing **(Return)** again, the string output is sent to the plotter and the plot begins. Once the plot is complete, the program prompts Plot is complete. End of program. and the analyzer begins sweeping and returns to local control.

BASIC Program Listing

```
10 ! This program shows how to read the plotter output from the analyzer
20 ! and store it in a disk file as an ASCII file. The disk file is then
30 ! read back into the controller and the plot commands sent to a
40 ! plotter to generate the plot of the analyzer display. This allows
50 ! plotting at a different time than data collection.
60 !
70 ! EXAMP7D
80 !
90 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
100 ASSIGN @Plt TO 705 ! Assign an I/O path for the plotter
110 !
120 CLEAR SCREEN
130 ! Initialize the analyzer without preset to preserve data
140 ABORT 7 ! Generate an IFC (Interface Clear)
150 CLEAR @Nwa ! SDC (Selected Device Clear)
160 !
170 DIM Plot$[32000] ! Define string for plotter commands
180 !
190 OUTPUT @Nwa;"OPC?;SING;" ! Stop sweep for plot and wait
200 ENTER @Nwa;Reply ! Read the 1 when complete
210 OUTPUT @Nwa;"OUTPLOT;" ! Request plotter output
220 !
230 ENTER @Nwa;Plot$ ! Plotter output of analyzer display
240 !
250 INPUT "Plotter output complete. Press RETURN to store on disk.",Reply$
260 !
270 ! Disk file operations
280 ! Create data file on disk 32000/256 = 125 records
290 !CREATE ASCII "PLOTFILE:,1400",125 ! Use only once to generate file
300 ASSIGN @File TO "PLOTFILE:,1400" ! Assign file I/O path
310 OUTPUT @File;Plot$ ! Write plot string to file
320 !
330 INPUT "Plot to file is complete. Press Return to plot.",A$
340 !
350 ! Read plotter commands from file and send to plotter
360 RESET @File ! Reset file pointer to beginning
370 ENTER @File;Plot$ ! Read plot string from file
380 OUTPUT @Plt;Plot$ ! Send plot string to plotter
390 !
400 !
410 DISP "Plot is complete. End of program."
420 OUTPUT @Nwa;"CONT;" ! Restore continuous sweep
430 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait for analyzer to finish
440 ENTER @Nwa;Reply ! Read the 1 when complete
450 LOCAL @Nwa ! Release HP-IB control
460 END
```


Utilizing PC-Graphics Applications Using the Plot File

You can use Example 7D to generate a plot that can be read into a PC and used in several different graphics generation programs. HP-GL is a commonly recognized graphic format and may be used to transfer information to PC application programs such as CorelDRAW!®, Lotus Freelance® and other graphics packages. By importing the graphics data into these application packages, you can generate reports in many word-processors.

You can then use graphic-data files to generate the following:

- test results documentation
- data sheets from testing results
- archival information for a digital-storage medium

If you would like to create a disk file for graphics processing, modify the previous program to only store the plotter commands to the disk file. Once the file is renamed to include the extension “.hpg”, the PC will have a DOS-format file that can be imported and examined by the graphics package.

Once the HP-GL file is present in the DOS file system, the HP-GL file is imported and examined with the graphics package. The text labels may need to be rescaled, but on the whole, the graphics results are quite usable.

Example 7E: Reading Plot Files from a Disk

NOTE This example program will not work with HP BASIC for Windows.

This example program reads and plots files which have been stored on a LIF formatted disk by the analyzer. The plots may be sent to either a plotter with auto-feed capability, such as the HP 7550B, or an HP-GL/2 compatible printer, such as a LaserJet 4 Series (monochrome) printer or a DeskJet 1200C (color) printer.

NOTE Sending plots to disk is discussed in your analyzer's user's guide.

This section provides detailed information on file naming conventions and instructions on printing multiple plots-per-page.

This program requires HP BASIC 6.0 or greater which provides the use of wild cards with the catalog command.

The peripheral GPIB addresses and the hard copy device selection are hard coded and may need to be changed for different systems configurations. Refer to lines 1130 through 1240 in the example program.

This program example provides the form feeds to separate the plots. If the analyzer has been configured to store multiple plots-per-page, this program will generate those plots. A file naming convention has been devised to allow the program perform several printer-setup functions. These include: initializing the printer for HP-GL/2 at the beginning of a page, configuring the printer to plot multiple plots to the same page, if desired, and then sending a page eject (form feed) to the hardcopy device at the completion of the printing process.

The plot file name is made up of four parts. The first three are generated automatically by the analyzer whenever a plot is requested:

1. the prefix "PLOT"
2. a two-digit sequence number in the range of 00 to 31
3. a two-letter output-format code to indicate the plot quadrant position:
 - LU (Left Upper)
 - LL (Left Lower)
 - RU (Right Upper)
 - RL (Right Lower)
 - FP (Full Page)

For example, the first full page plot to a disk would be named "PLOT00FP." The second plot, to be located in the lower-right hand corner of the page would be named "PLOT01RL," and so on.

The fourth part is an optional character. It is used to indicate that the file is part of a multiple-file plot on the same graticule. See your analyzer's user's guide for information on printing multiple measurements per page.

For detailed information on plotting to disk and outputting the plot files to a printer/plotter see your analyzer's user's guide.

The following is an outline of the program's processing sequence:

- Hardcopy device control strings are created.
- The hardcopy output device is defined.
- The disc storing the file names is cataloged.
- Files that match the name specifier in the file name array (Flnm\$) are counted.
- Flnm\$ is dimensioned for the number of files that match the name specifier.
- The file name array is sorted.
- A form feed is sent to the hardcopy device.
- Each of the files in the file name array is processed and sent to the output device.
 - ☐ The current file name root string is defined.
 - ☐ If the hardcopy device is a printer, then an HP-GL initialization string is output.
 - ☐ Each file which matches the file name root string to the hardcopy device is output.
 - ☐ After a form feed is sent to the hardcopy device, the printing/plotting process begins.

Running the Program

This program allows you to plot or print as many as four analyzer display dumps (stored on a LIF formatted disk) on one side of a single sheet of paper. Refer to the instructions detailed in your analyzer's user's guide.

BASIC Program Listing

```
10 ! This example program reads and plots files which have been stored on
20 ! a LIF formatted disk by the analyzer. The plots are sent to either a
30 ! plotter with auto-feed capability, such as the HP7550B, or an HP-GL/2
40 ! compatible printer, such as the LaserJet 4 series (monochrome) or the
50 ! DeskJet 1200C (color).
60 !
70 ! Sending plots to disk is discussed in the Printing, Plotting and Saving
80 ! Measurement Results section of the analyzer Users Guide. The file
90 ! naming conventions are discussed in this section and will provide more
100 ! details.
110 !
120 ! This program example will provide form feeds to separate the plots. If
130 ! multiple plots per page have been stored, this program will generate
140 ! those plots.
150 ! A file naming convention has been devised to allow the program
160 ! to initialize the printer for HP-GL/2 at the beginning of a
170 ! page, to plot multiple plots to the same page, if desired, and
180 ! when all plots to the same page have been completed then send a
190 ! page eject (form feed) to the hardcopy device.
200 !
210 ! The plot file name is made up of four parts, the first three of which
220 ! are generated automatically by the analyzer whenever a plot is requested:
230 ! The prefix, "PLOT", a two digit sequence number, in the range of 00 to
240 ! 31, a two letter output format code to indicate the plot quadrant
250 ! position or full page, LU (Left Upper), LL (Left Lower), RU (Right
260 ! upper), RL (Right Lower) or FP (Full Page). For example, the first
270 ! full page plot to a disk would be named "PLOT00FP".
280 !
290 ! a. Build hardcopy device control strings.
300 ! b. Define output hardcopy device.
310 ! c. Catalog disc storing the file names which match file name specifier
320 !     in the file name array, Flnm$, and setting the number of files that
330 !     match.
340 ! d. Dimension Flnm$ for the number of files matched.
350 ! e. Sort the file name array.
360 ! f. Form feed the hardcopy device.
370 ! g. Process each of the files in the file name array.
380 !     1. Define the current file name root string.
390 !     2. If hardcopy device is a printer then output HP-GL initialization
400 !        string.
410 !     3. Output each file which matches the file name root string to the
420 !        hardcopy device.
430 !     4. Output a form feed to the hardcopy device.
440 !
450 ! This program requires HP BASIC 6.0 or greater which provides the use of
460 ! wild cards with the catalog command.
470 !
480 ! The peripheral HP-IB addresses and the hard copy device selection are
490 ! hard coded and may need to be changed for different systems
500 ! configurations. See lines 1130 to 1240.
510 !
520 ! EXAMP7E
530 !
540 WILDCARDS UX;ESCAPE "\"           ! Enable HP-UX style wild cards
550 OPTION BASE 1                     ! Set numeric arrays to start at 1
560 DIM Flnm$(1:200)[14]              ! Plot filename array
```

```

570 DIM Hpglinit$(80)           ! Printer HPGL initialization string
580 DIM Srch$(60)              ! Search string for plot filenames
590 DIM Esc_chr$(1)            ! Escape character ASCII 27
600 INTEGER Plt_array1(1:32767) ! Plotter command array
610 INTEGER Plt_array2(1:2,1:32767) ! Additional plot arrays if required
620 INTEGER Plttr              ! Plotter for output
630 INTEGER Prntr              ! Printer for output
640 INTEGER Outputdvc          ! Output device selected
650 INTEGER Root_mtch          ! Root plot file flag
660 INTEGER Flnm_idx           ! Pointer to filename array
670 INTEGER Nbr_files          ! Number of files which are plot files
680 INTEGER Prfx_lngth         ! Length of prefix defined in filename
690 INTEGER Root_lngth         ! Length of root name in file name
700 INTEGER Arry1_sz           ! Number of data works in plot file
710 INTEGER Arry2_sz           ! Number of arrays in plot file
720 INTEGER Plttr_addr         ! Plotter address
730 INTEGER Prntr_addr         ! Printer address
740 REAL Rcrd_lngth           ! Record length in plot file
750 REAL Nmbr_rcrds           ! Number of records in plot file
760 REAL Nmbr_wrds            ! Number of data words in plot file
770 !
780 Esc_chr$=CHR$(27)          ! Escape character (1B hex) ASCII 27 (Decimal)
790 !
800 !   ***   Build control string for printers   ***
810 !
820 ! Build hardcopy device control string containing setup commands for
830 ! printer output.
840 ! Reset, conditional page eject
850 Hpglinit$=Esc_chr$&"E"
860 ! Page size A 8.5 x 11
870 Hpglinit$=Hpglinit$&Esc_chr$&"&12A"
880 ! Landscape orientation
890 Hpglinit$=Hpglinit$&Esc_chr$&"&l10"
900 ! No left margin
910 Hpglinit$=Hpglinit$&Esc_chr$&"&a0L"
920 ! No right margin
930 Hpglinit$=Hpglinit$&Esc_chr$&"&a400M"
940 ! No top margin
950 Hpglinit$=Hpglinit$&Esc_chr$&"&l0E"
960 ! Picture frame size 10.66 inches x 7.847 inches
970 ! (720 decipoints per inch)
980 Hpglinit$=Hpglinit$&Esc_chr$&"*c7680x5650Y"
990 ! Move cursor to anchor point
1000 Hpglinit$=Hpglinit$&Esc_chr$&"*p50x50Y"
1010 ! Set picture frame anchor point
1020 Hpglinit$=Hpglinit$&Esc_chr$&"*c0T"
1030 ! Set CMY palette
1040 Hpglinit$=Hpglinit$&Esc_chr$&"*r-3U"
1050 ! Enter HPGL mode with the cursor (pen) at the PCL current save position
1060 !
1070 ! Exit HPGL mode to accept printer command
1080 Hpgl_exit$=Esc_chr$&"%0A"
1090 !
1100 ! Conditional form feed (page eject)
1110 Form_feed$=Esc_chr$&"E"
1120 !
1130 !   ***   Initialize variables and assign output device   ***
1140 !

```

```
1150 ! Define device selection flags to determine plotter or printer
1160 ! Select device with 1 and set Outputdvc to define it
1170 Plttr=1                      ! Select plotter for output
1180 Prntr=0                      ! Select printer for output
1190 Outputdvc=Plttr             ! define output device as plotter
1200 !
1210 False=0                     ! Define flags for logic tests
1220 True=1
1230 !
1240 Prfx$="PLOT"                ! define plot file name prefix string
1250 !
1260 !   ***   Initialize HP-IB device addresses   ***
1270 !
1280 Prntr_addr=701              ! Printer HP-IB address
1290 Plttr_addr=705             ! Plotter HP-IB address
1300 !
1310 ! Set address of flexible disk drive containing plot files
1320 Msi$=":",1400"
1330 !
1340 ! Define I/O paths for plot output with no formatting on data
1350 IF Outputdvc=Plttr THEN      ! select output device for plotting
1360   ASSIGN @Prntpltdvc TO Plttr_addr;FORMAT OFF    ! Select plotter
1370 ELSE
1380   ASSIGN @Prntpltdvc TO Prntr_slctr;FORMAT OFF    ! Select printer
1390 END IF
1400 !
1410 !   ***   Search disk for plot files   ***
1420 !
1430 ! Define the plot file name specifier: Prefix (Prfx$), two
1440 ! sequence digits([0-9][0-9]), two output format specifier
1450 ! characters ([FLR][LPU]) and an optional character (s)
1460 Srch$=Prfx$&"[0-9][0-9][FLR][LPU]*"
1470 !
1480 ! Catalog the files that match the plot file name specifier by
1490 ! putting the names in the string array Flnm$ and the number of files
1500 ! in the integer Nbr_files. Suppress the catalog header text.
1510 CAT Srch$&Msi$ TO Flnm$(*);COUNT Nbr_files,NO HEADER,NAMES
1520 !
1530 ! If no files are found then print message and stop
1540 IF Nbr_files=0 THEN
1550   PRINT "No files found; program terminated"
1560   STOP
1570 END IF
1580 !
1590 !   ***   Sort the plot file names found   ***
1600 !
1610 ! Re-dimension the file name array to the actual number of files that
1620 ! were found.
1630 REDIM Flnm$(1:Nbr_files)
1640 !
1650 ! Sort the file names into alphabetical order
1660 MAT SORT Flnm$(*)
1670 !
1680 GOSUB Frm_fd                  ! Send a form feed to hardcopy device
1690 PRINT
1700 !
1710 !   ***   Cycle through the filenames and plot the data   ***
1720 !
```

```

1730 Flnm_idx=1                      ! Initialize the Flnm$ array index
1740 Prfx_lngth=LEN(Prfx$)           ! Find the length of the Prfx$ string
1750 !
1760 ! Process each of the files in the Flnm$ array
1770 WHILE Flnm_idx<=Nbr_files
1780     ! Define Root$ = file name prefix string plus the two sequence digits
1790     Root$=Flnm$(Flnm_idx)[1;Prfx_lngth+2]
1800     ! Find length of the Root$
1810     Root_lngth=LEN(Root$)
1820     ! If the two output specifier characters are "FP" (full page) then
1830     ! include them as part of the Root$
1840     IF Flnm$(Flnm_idx)[Root_lngth+1;2]="FP" THEN
1850         Root$=Root$&"FP"
1860         Root_lngth=Root_lngth+2
1870     END IF
1880     !
1890     Root_mtch=True                ! initialize file matches Root$ flag
1900     ! If the ouput device is a printer send HP-GL initiliazation string
1910     IF Outputdvc=Prntr THEN
1920         OUTPUT @Prntpltdvc USING "#,K";Hpglinit$
1930     END IF
1940     !
1950     ! *** Plot files on the same page ***
1960     !
1970     ! While the root portion of the file names match Root$, output the
1980     ! plot files to the same page.
1990     WHILE Root_mtch=True
2000         ! Print the name of the plot file
2010         PRINT Flnm$(Flnm_idx),
2020         ! Output the plot file to the hardcopy device
2030         GOSUB Otpt_fl
2040         ! Increment Flnm$ array index
2050         Flnm_idx=Flnm_idx+1
2060         ! If all plot files have been output or the plot file name does not
2070         ! match Root$ then set Root_Mtch=False to end plotting of the same
2080         ! page.
2090         IF Flnm_idx>Nbr_files THEN
2100             Root_mtch=False
2110         ELSE
2120             IF Root$<>Flnm$(Flnm_idx)[1;Root_lngth] THEN Root_mtch=False
2130         END IF
2140     END WHILE                ! Loop to plot to the same page
2150     !
2160     PRINT
2170     ! Output form feed to output device to eject page
2180     GOSUB Frm_fd
2190 END WHILE                    ! Loop to plot next page
2200 !
2210 STOP
2220 !
2230 ! *****Subroutines *****
2240 !
2250 Otpt_fl: ! Read the file into an array(s) and then output the array(s)
2260 ! to the hardcopy device.
2270 !
2280 ! Open and read the plot file size
2290 ASSIGN @Ldisc TO Flnm$(Flnm_idx)&Msi$
2300 !

```

```
2310 ! Get number of records in file from I/O path status registers
2320 STATUS @Ldisc,3;Nmbr_rcrds
2330 !
2340 ! Get record length
2350 STATUS @Ldisc,4;Rcrd_lngth
2360 !
2370 ! Compute the number of words of data in the file
2380 Nmbr_wrds=Nmbr_rcrds*Rcrd_lngth/2
2390 !
2400 ! Determine the number of arrays necessary to hold the plot file data.
2410 ! The maximum size of an RMB array is 32767. If the number of words of
2420 ! data is greater than 32767 then multiple arrays must be used to hold
2430 ! all of the data.
2440 !
2450 ! Compute the dimensions of Plt_array1 and Plt_array2 that are required
2460 ! to hold the plot data.
2470 Array1_sz=Nmbr_wrds MOD 32767
2480 Array2_sz=INT(Nmbr_wrds/32767)
2490 !
2500 ! Re-dimension Plt_array1 to the correct size
2510 REDIM Plt_array1(1:Array1_sz)
2520 !
2530 ! If the number of words of data is less than 32767 then use one array
2540 IF Array2_sz=0 THEN
2550   ENTER @Ldisc;Plt_array1(*)           ! Read the plot data from the file
2560 ELSE
2570   ! Use 2 arrays to read data
2580   ENTER @Ldisc;Plt_array2(*),Plt_array1(*) ! Read the plot data from file
2590 END IF
2600 !
2610 ASSIGN @Ldisc TO *                   ! Close plot file
2620 !
2630 ! Output the data to the hardcopy device
2640 IF Array2_sz=0 THEN                   ! Only one array <32767 words
2650   OUTPUT @Prntpltdvc;Plt_array1(*)
2660 ELSE                                  ! Data > 32767 so send 2 arrays
2670   OUTPUT @Prntpltdvc;Plt_array2(*),Plt_array1(*)
2680 END IF
2690 RETURN
2700 !
2710 !*****
2720 !
2730 Frm_fd:! Send a form feed (page eject) command to the hardcopy device
2740 IF Outputdvc=Plttr THEN               ! Plotter output
2750   OUTPUT @Prntpltdvc USING "#,K";"PG;"
2760 ELSE                                  ! For printer output. The
2770   ! printer first must exit HP-GL mode before sending form feed command
2780   OUTPUT @Prntpltdvc USING "#,K";Hpgl_exit$&Form_feed$
2790 END IF
2800 RETURN
2810 !
2820 END
```

Example 7F: Reading ASCII Disk Files to the Instrument Controller's Disk File

Another way to access the analyzer's test results is to store the data onto a disk file from the analyzer. This operation generates an ASCII file of the analyzer data in a CITIFILE format. A typical file generated by Example 7F is shown below:

```
CITIFILE A.01.00
#NA VERSION HP8753C.04.13
NAME DATA
VAR FREQ MAG 11
DATA S[1,1] RI
SEG_LIST_BEGIN
SEG 100000000 200000000 11
SEG_LIST_END
BEGIN
8.30566E-1, -1.36749E-1
8.27392E-1, -1.43676E-1
8.26080E-1, -1.52069E-1
8.25653E-1, -1.60003E-1
8.26385E-1, -1.68029E-1
8.26507E-1, -1.77154E-1
8.26263E-1, -1.87316E-1
8.26721E-1, -1.97265E-1
8.2724E-1, -2.07611E-1
8.28552E-1, -2.19940E-1
8.29620E-1, -2.31109E-1
END
```

This data file is stored by the analyzer under remote control or manually from the front panel. See your analyzer's user's guide for more details on manual operation. This program performs the same steps that are required to manually store a file from front panel.

This program stores a file in the same manner as an operator would store a file onto the analyzer's internal disk drive from the front panel.

This example explains the process of storing the data from the analyzer to a file on the internal disk drive. There is also a program to read the data from the file into a data array for further processing or reformatting to another file type. The internal drive will store in the same format that is present on the disk. A new disk may be formatted in either LIF or DOS. For the example, the assumption has been made that the format transformation has already taken place, and there is a file that can be read record by record, from which data can be retrieved.

The goal of this example is to recover an array of stimulus frequency along with the trace-data values. CITIFILES contain the real and imaginary values of each data point. Some further transformation will be required to obtain magnitude values, for example.

The disk file contents for this example are shown above. This file contains more information than will be used in this example. The file is accessed and the records read from the file and printed on the controller display to observe the actual file contents. The file pointer is reset and the records are then read and interpreted for their data contents.

The first six records are skipped for this example. The seventh record contains the stimulus-frequency values and the number of points in the trace. These values are read from the record. The frequency increment, or point spacing, is calculated and used later in

the frequency-data calculations for a point. Two more records are skipped and the next is the first record representing data values. The data values are read in a loop until the values for the number of points have been recovered from the file. The data values are tabulated and printed out on the controller display.

The following is an outline of the program's processing sequence:

- An I/O path is assigned to the analyzer.
- The system is initialized.
- A string is dimensioned to hold a file record.
- The analyzer operating state is set.
- The internal drive is selected for storage (only ASCII data is stored).
- A file name is entered and the data stored into it.
- The operator is prompted to move the disk to the controller disk drive.
- The disk file is read and the contents displayed.
- The file pointer is rewound.
- The file contents are converted to trace data.
- The frequency and complex-data pair is displayed for each point.
- The analyzer is restored to continuous-sweep mode.
- The analyzer is returned to local control and the program ends.

CAUTION	Do not mistake the line switch for the disk eject button. If the line switch is mistakenly pushed, the instrument will be turned off, losing all settings and data that have not been saved.
----------------	--

NOTE	If the command EXTMDATOON is used, it will override all of the other save options (such as EXTMFORMON). Because this type of data is only intended for computer manipulation, the file contents of a EXTMDATOON (data only) save cannot be recalled and displayed on the analyzer.
-------------	--

Running the Program

The analyzer is initialized and the operating range re-defined to an 11-point trace from 100 to 200 MHz. This setup gives a restricted range to be evaluated when the ASCII data file (CITIFILE) is read in from the controller. The operator is prompted for a 5-character filename to use for storing the data. The analyzer is setup for external storage and stores the data file. Once the "pass control/storage/return control" operation is complete, the operator is prompted to place the disk in the controller disk drive and press **Return**. The disk is then read and the records contained in the file are printed on the controller display. A prompt appears, Press return to continue, which allows viewing of the file contents. Once **Return** is pressed, the data records are read and decoded and a table of the stimulus frequency and the data values are printed.

BASIC Program Listing

```
10 ! This program shows how to store an ASCII data file in CITIFILE format
20 ! and retrieve the data with the controller. The disk is written in the
30 ! analyzer system and then moved to the controller disk and the data
40 ! accessed.
50 !
60 ! EXAMP7F
70 !
80 ASSIGN @Nwa TO 716 ! Assign an I/O path for the analyzer
90 !
100 CLEAR SCREEN
110 ABORT 7 ! Generate an IFC (Interface Clear)
120 CLEAR @Nwa ! SDC (Selected Device Clear)
130 OUTPUT @Nwa;"OPC?;PRES;" ! Preset the analyzer and wait
140 ENTER @Nwa;Reply ! Read the 1 when complete
150 !
160 DIM Record$(80) ! String to read the disk records
170 !
180 ! Set up analyzer
190 OUTPUT @Nwa;"STAR100MHZ;" ! Start frequency 100 MHz
200 OUTPUT @Nwa;"STOP 200MHZ" ! Stop frequency 200 MHz
210 OUTPUT @Nwa;"POIN11;" ! Trace length 11 points
220 OUTPUT @Nwa;"OPC?;SING;" ! Single sweep and wait
230 ENTER @Nwa;Reply ! Read in the 1 when complete
240 !
250 ! Program disk storage operation
260 !
270 OUTPUT @Nwa;"INTD;" ! Select internal disk file
280 OUTPUT @Nwa;"EXTMFORMON;" ! Store formatted data
290 OUTPUT @Nwa;"EXTMDATOON;" ! Store data file only
300 INPUT "Enter data file name (5 chars)",File_name$ ! Get file name
310 File_name$=UPC$(File_name$) ! File names are uppercase
320 OUTPUT @Nwa;"TITF1""";File_name$;""";" ! Title for save reg 1
330 OUTPUT @Nwa;"SAVUASCII;" ! Save as ASCII file
340 !
350 OUTPUT @Nwa;"STOR1;" ! Store data to disk file
360 OUTPUT @Nwa;"OPC?;WAIT;" ! Wait until store is complete
370 ENTER @Nwa;Reply
380 !
390 ! File storage is complete
400 !
410 INPUT "Place disk in controller disk drive, then press Return",A$
420 !
430 ! Read data file information
440 !
450 ASSIGN @File TO File_name$&"D1:,1400" ! Open an I/O path for file
460 Record_cnt=1 ! Counter to count records
470 !
480 PRINT CHR$(12); ! Formfeed to clear display
490 PRINT "Contents of data file" ! Show contents of the data file
500 Readfile: !
510 ON END @File GOTO End_file ! Test for end of file and exit
520 ENTER @File;Record$ ! Read ASCII record
530 PRINT Record_cnt,Record$ ! print record on display
540 Record_cnt=Record_cnt+1 ! Increment record counter
550 GOTO Readfile ! Read next record
560 !
```

```

570 End_file: !                               ! Reached the end of file
580 PRINT "End of File. ";Record_cnt-1;" Records found"
590 INPUT "Press Return to continue",A$
600 PRINT CHR$(12);                           ! Formfeed to clear display
610 !
620 ! Read file data into arrays
630 !
640 RESET @File                               ! Rewind file pointer to beginning
650 FOR I=1 TO 6
660   ENTER @File;Record$                     ! Skip first six records
670 NEXT I
680 ENTER @File;Record$                       ! Read frequency data record
690 Record$=Record$[POS(Record$,"")+1]        ! skip SEG to first space + 1
700 Startf=VAL(Record$)                      ! Read start frequency
710 Record$=Record$[POS(Record$,"")+1]        ! Skip to next space + 1
720 Stopf=VAL(Record$)                       ! Read stop frequency
730 Record$=Record$[POS(Record$,"")+1]        ! Skip to next space +1
740 Num_points=VAL(Record$)                  ! Read the number of points
750 PRINT " Number of points in file ";Num_points
760 PRINT                                     ! White space
770 !
780 Freq_inc=(Stopf-Startf)/(Num_points-1) ! Compute frequency increment
790 !
800 ALLOCATE Array(Num_points,2)             ! Allocate array from Num_points
810 ENTER @File;Record$                      ! Skip SEG_LIST_END record
820 ENTER @File;Record$                      ! Skip BEGIN record
830 !
840 ! Read in the data array
850 PRINT "Freq (MHz)  Data 1    Data 2"      ! Table header for data array
860 FOR I=1 TO Num_points                    ! Read in array entries
870   ENTER @File;Record$                   ! Read in the record of 2 entries
880   !
890   Array(I,1)=VAL(Record$)               ! Read first data value
900   Data$=Record$[POS(Record$,"")+1]      ! Skip to comma and next value
910   Array(I,2)=VAL(Data$)                 ! Read second data value
920   !
930   Freq=Startf+(Freq_inc*(I-1))          ! Compute stimulus value for array
940   Freq=Freq/1.E+6                       ! Convert frequency to MHz
950   !
960   PRINT Freq,Array(I,1),Array(I,2)      ! Print data array values
970 NEXT I                                  ! Read next array data points
980 !
990 OUTPUT @Nwa;"CONT;"                    ! Restore continuous sweep
1000 OUTPUT @Nwa;"OPC?;WAIT;"              ! Wait for analyzer to finish
1010 ENTER @Nwa;Reply                       ! Read the 1 when complete
1020 LOCAL @Nwa                             ! Release HP-IB control
1030 END

```

Mixer Measurement Example

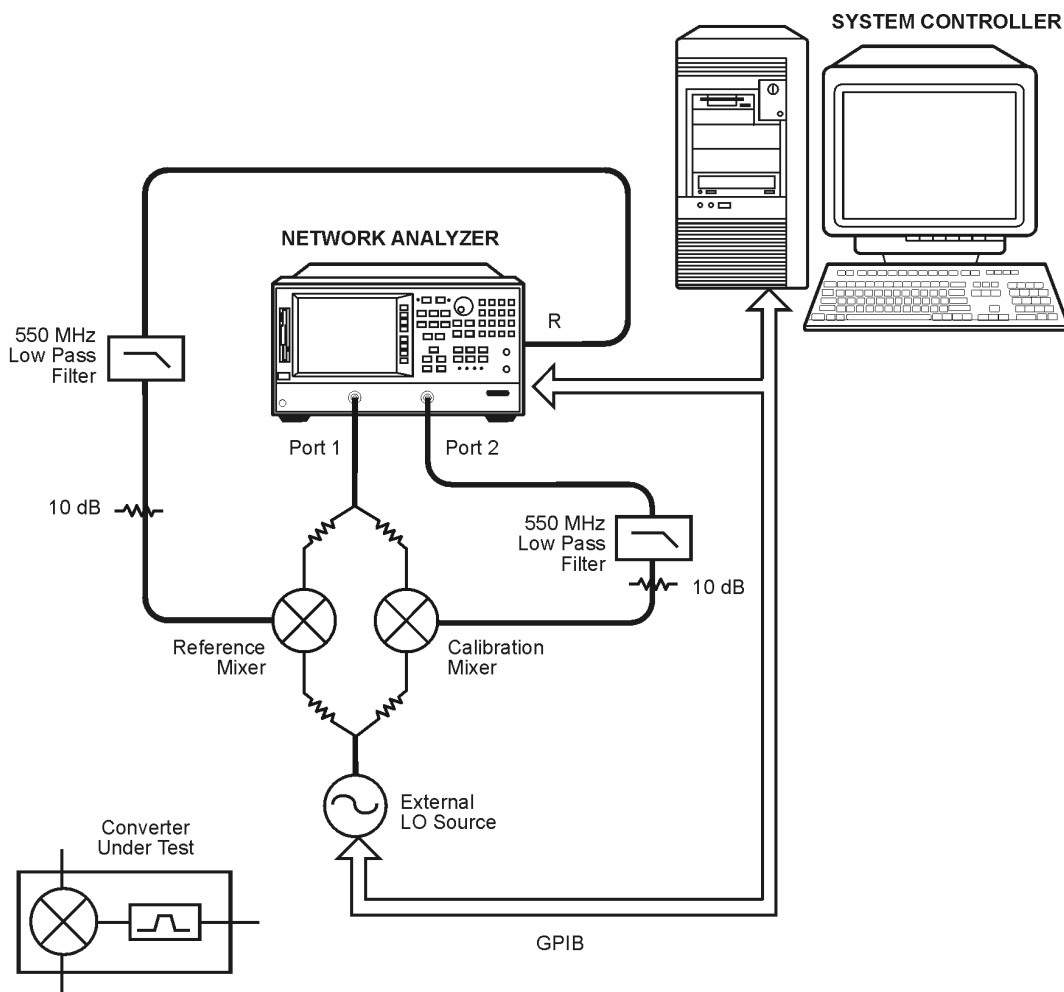
The program included in Example 8A is one of several mixer measurements discussed in your analyzer's user's guide.

NOTE This example program is for use on any 8753ET/ES analyzer and on 8720E series analyzers with Option 089.

Example 8A: Comparison of Two Mixers — Group Delay, Amplitude or Phase

Using this program, you can measure how two mixers compare in terms of group delay, amplitude or phase. Refer to [Figure 7-2](#).

Figure 7-2 Connections: Comparison of Two Mixers — Group Delay, Amplitude or Phase



cl56ets

The following is an outline of the program's processing sequence:

- I/O paths are assigned for the analyzer and external source.
- The system is initialized.
- The system operator is prompted for the LO and IF frequencies.
- The external source frequency and power level are adjusted.
- The analyzer's IF frequency settings and power level are adjusted.
- The frequency offset mode settings are initialized and the mode is activated.
- A response calibration is performed.
- The system operator is prompted for the type of measurement.
- The selected type of measurement is performed and the display is autoscaled.
- The analyzer and source are released from remote control and the program ends.

NOTE When running the program, the following message may appear:
 "CAUTION: PHASE LOCK CAL FAILED". This message is expected and will disappear once the prompted frequency values are entered.

Running the Program

The analyzer and source are initialized and the operator is queried for the LO frequency, IF center frequency and span. The source frequency and power level are set, and the analyzer frequency settings and power level are adjusted as well. The analyzer frequency offset mode settings are adjusted, the frequency offset mode is turned on, and a response calibration is performed. The operator is queried for the type of measurement, which is then performed, and the program ends.

BASIC Program Listing

```

1      ! This program demonstrates swept IF measurement of group delay,
2      ! amplitude tracking or phase tracking of a mixer under test
3      ! relative to a known "calibration mixer". The external source
4      ! (LO) must be prepared to accept SCPI commands.
5      !
6      ! EXAMP8A
7      !
8 ASSIGN @Nwa TO 716           ! Assign an I/O path to the analyzer
9 ASSIGN @Src TO 719           ! Assign an I/O path to the source
10     !
11 CLEAR SCREEN
12     ! Initialize
13 ABORT 7                      ! Generate an IFC (Interface Clear)
14 CLEAR @Nwa                  ! Analyzer SDC (Selected Device Clear)
15 OUTPUT @Nwa;"OPC?;PRES;"    ! Preset the analyzer
16 ENTER @Nwa;Reply            ! Read the 1 when complete
17 CLEAR @Src                  ! Source SDC
18 REMOTE @Src                 ! Prepare source for remote commands
19 OUTPUT @Src;"*RST"          ! Preset the source
20     !

```

```

21      ! Request LO and IF frequency settings
22 INPUT "Enter LO frequency in MHz",Lofreq
23 INPUT "Enter IF center frequency in MHz",Cent
24 INPUT "Enter IF frequency span in MHz",Span
25      !
26      ! Program source settings
27 OUTPUT @Src;"Freq:CW";Lofreq;"MHZ"
28 OUTPUT @Src;"POW:STAT ON"
29 OUTPUT @Src;"POWER:LEVEL 13 DBM; STATE ON"
30      !
31      ! Program analyzer settings
32 OUTPUT @Nwa;"CENT";Cent;"MHZ;"
33 OUTPUT @Nwa;"SPAN";Span;"MHZ;"
34 OUTPUT @Nwa;"PWRR PMAN;"          ! Manual power range
35      !
36      ! The next two lines are optimized for the 8753ES/ET.
37      ! The LOPOWER command will simply return the message
38      ! "FUNCTION NOT AVAILABLE" on an 8720E Series analyzer.
39      ! On an 8722ES, change line 41 to read "POWE -10 DB;"
40      !
41 OUTPUT @Nwa;"POWE 0 DB;"          ! Set power to 0 dBm
42 OUTPUT @Nwa;"LOPOWER 13 DB;"      ! Report LO power to analyzer
43 OUTPUT @Nwa;"LOFREQ";Lofreq;"MHZ;" ! Report LO freq to analyzer
44 OUTPUT @Nwa;"DCONV;"              ! Down conversion
45 OUTPUT @Nwa;"RFLTLO;"             ! RF < LO
46 OUTPUT @Nwa;"FREQOFFS ON;"        ! Turn on frequency offset mode
47 OUTPUT @Nwa;"BR;"                 ! Measure B/R
48 OUTPUT @Nwa;"CALIRESP;"           ! Begin response cal
49 OUTPUT @Nwa;"STANC;"              ! Measure THRU
50 OUTPUT @Nwa;"RESPDONE;"           ! Response cal done
51 REPEAT
52      !
53      ! Request type of measurement
54 PRINT "Enter a number for the type of measurement as follows:"
55 PRINT
56 PRINT "1) Group Delay"
57 PRINT "2) Amplitude Tracking"
58 PRINT "3) Phase Tracking"
59 INPUT "",Meas
60      !
61      ! Perform the selected type of measurement
62 SELECT Meas
63 CASE 1
64   GOSUB Connect_mut
65   OUTPUT @Nwa;"DELA;"              ! GROUP DELAY display format
66   INPUT "Enter electrical delay of calibration mixer in ns",Eled
67   OUTPUT @Nwa;"ELED";Eled;"NS;"
68   OUTPUT @Nwa;"AUTO;"              ! Autoscale the display
69   Again=0
70 CASE 2
71   OUTPUT @Nwa;"LOGM;"              ! LOG MAG display format
72   OUTPUT @Nwa;"DATI;"              ! DATA -> MEMORY
73   GOSUB Connect_mut
74   OUTPUT @Nwa;"DISPDDM;"           ! Display DATA/MEM
75   OUTPUT @Nwa;"AUTO;"              ! Autoscale the display
76   Again=0
77 CASE 3
78   OUTPUT @Nwa;"PHAS;"              ! PHASE display format

```

```
79  OUTPUT @Nwa;"DATI;"          ! DATA -> MEMORY
80  GOSUB Connect_mut
81  OUTPUT @Nwa;"DISPDDM;"       ! Display DATA/MEM
82  OUTPUT @Nwa;"AUTO;"         ! Autoscale the display
83  Again=0
84  CASE ELSE
85  Again=1
86  END SELECT
87  UNTIL Again=0
88  DISP "Program completed"
89  LOCAL 7                      ! Release HP-IB control
90  STOP
91  Connect_mut:                  ! Prompt system operator to replace mixer
92  DISP "Remove calibration mixer, connect MUT, then press Continue"
93  PAUSE
94  RETURN
95  END
```

Limit Line and Data Point Special Functions

The analyzer has special functions in the area of limit testing and in the detection of min/max data points within limit segments. The information in this section will teach you how to use these limit line and data point special functions. The following topics are included:

- Overview
- Constants Used Throughout This Document
- Output Limit Test Pass/Fail Status Per Limit Segment
- Output Pass/Fail Status for All Segments
- Output Minimum and Maximum Point Per Limit Segment
- Output Minimum and Maximum Point For All Segments
- Output Data Per Point
- Output Data Per Range of Points
- Output Limit Pass/Fail by Channel

Overview

The limit line and data point special functions are available as remote commands only. Each command is overviewed in [Table 7-11](#).

Table 7-11 Limit Line and Data Point Special Functions Commands

Action	Mnemonic	Syntax	?	Description
MIN/MAX DATA DETECTION PER LIMIT SEGMENT				
Min/max recording	MINMAX<ON OFF>	2	1,0	Enables/disables min/max recording per segment. Min and max values are recorded per limit segment.
Max values	OUTPAMAX	1		Outputs max values for all limit line segments. OUTPAMAX values and OUTPAMIN values are both output using OUTPSEGAM.
Min values	OUTPAMIN	1		Outputs min values for all limit line segments. OUTPAMIN values and OUTPAMAX values are both output using OUTPSEGAM.
Min/max values	OUTPSEGAM	1		Outputs limit test min/max for all segs. Outputs the segment number, max stimulus, max value, min stimulus, and min value for all active segments.†
Min/max value	OUTPSEGM	1		Outputs limit test min/max for a specified segment. See “SELSEG” on page 1-226 .†
Segment	SELSEG<num>	3	<num>	Selects segment number for the OUTPSEGF and OUTPSEGM commands to report on. <num> can range from 1 to 18.†
OUTPUT TRACE DATA BY SELECTED POINTS				
Last point	SELMAXPT<num>	3	<num>	Selects the last point number in the range of points that the OUTPDATR command will report. <num> can range from 0 to the number of points minus 1.
First point	SELMINPT<num>	3	<num>	Selects the first point number in the range of points that the OUTPDATR command will report. <num> can range from 0 to the number of points minus 1.
Specify point	SELPT<num>	3	<num>	Selects the single point number that the OUTPDATP command will report. <num> can range from 0 to the number of points minus 1.
Data: point	OUTPDATP	1		Outputs a single trace data value indexed by point. (See “SELPT” on page 1-226 .)
Data: range	OUTPDATR	1		Outputs trace data for range of points. (See “SELMINPT” and “SELMAXPT” on page 1-226 .)
† For the definition of a limit segment, see “Example Display of Limit Lines” on page 7-128 .				

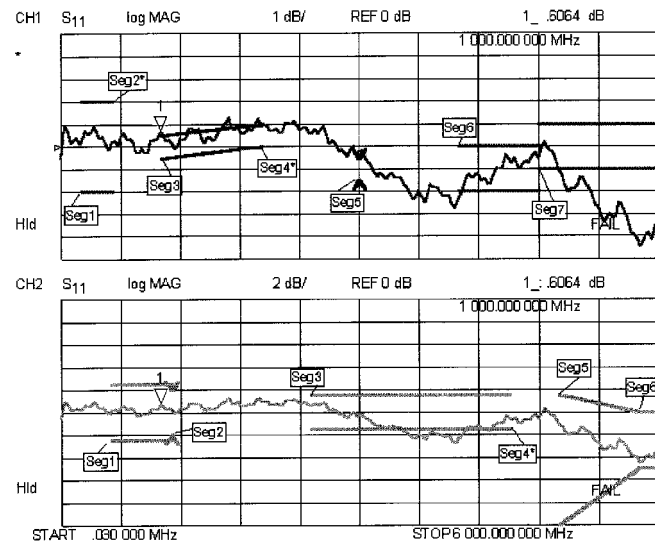
Table 7-11 Limit Line and Data Point Special Functions Commands

Action	Mnemonic	Syntax	?	Description
LIMIT TEST STATUS BY CHANNEL				
Limit test: ch1	OUTPLIM1	1		Outputs status* of limit test for channel 1.
Limit test: ch2	OUTPLIM2	1		Outputs status* of limit test for channel 2.
LIMIT TEST STATUS BY SEGMENT				
Segment	SELSEG<num>	3	<num>	Selects the segment number for the OUTPSEGF and OUTPSEGM commands to report on. <num> can range from 1 to 18.†
Limit test status	OUTPSEGAF	1		Outputs the segment number and its limit test status* for all active segments.†
Limit test status	OUTPSEGF	1		Outputs the limit test status* for a specified segment. See “SELSEG” on page 1-226.†
LIMIT TEST STATUS BY POINT				
Fail report	OUTPFAIP	1		This command is similar to OUTPLIMF except that it reports the number of failures first, followed by the stimulus and trace values for each failed point in the test (note: use command LIMITEST<ON> to function properly).
† For the definition of a limit segment, see “Example Display of Limit Lines” on page 7-128.				
* Values returned for limit test status are: 1 (PASS), 0 (FAIL), –1 (NO_LIMIT)				

Example Display of Limit Lines

The features that output data by limit segment are implemented based on the current definition of a limit segment. The actual limit lines formed by the limit table almost never have a 1-for-1 relationship with the segment numbers in the limit edit table. Out of 18 segments in the limit table, you can create 18 limit lines if (a) all limit segments are contiguous and (b) the last segment extends to the stop frequency. Otherwise, terminating a segment requires a single point which means that constructing a limit line requires two entries (segments) of the limit table. Thus you have a minimum of 9 lines available and those lines will not be referenced by sequential segment numbers.

Figure 7-3 is an example of a screen print of limit lines set up on the two instrument channels. The limit line examples shown are of Flat Line, Slope Line and Single Point Limits. See Table 7-12.

Figure 7-3 Limit Segments Versus Limit Lines

cg65d

Limit Segments

The values in the table below were used to create the limit lines in [Figure 7-3](#).

Table 7-12 Limit Segment Table for Figure 7-3

Segment Num.	Stimulus (Frequency)	Upper Limit (dB)	Lower Limit (dB)	Limit Type
Channel 1				
1	200 MHz	2	-2	Flat Line (FL)
2*	500 MHz	2	-2	Single Point (SP)
3	1000 MHz	0.5	-0.5	Slope Line (SL)
4*	2000 MHz	1	0	Single Point (SP)
5	3000 MHz	-0.5	-1.5	Single Point (SP)
6	4000 MHz	0	-2	Flat Line (FL)
7	4800 MHz	1	-1	Flat Line (FL)
Channel 2				
1	500 MHz	2.5	-2.5	Flat Line (FL)
2	1100 MHz	2	-2	Single Point (SP)
3	2500 MHz	1.5	-1.5	Flat Line (FL)
4*	4500 MHz	1.5	-1.5	Single Point (SP)
5	5000 MHz	1.5	-10	Slope Line (SL)
6	5800 MHz	0	-5	Slope Line (SL)

Table 7-12 Limit Segment Table for Figure 7-3

Segment Num.	Stimulus (Frequency)	Upper Limit (dB)	Lower Limit (dB)	Limit Type
* No test limit-segment is created.				

Note that if a single point limit is used to terminate slope lines, no test limit-segment is created. (See [Figure 7-3: CH1, Seg4.](#)) Also, if a single point limit is used to terminate a flat line, no test limit-segment is created. (See [Figure 7-3: CH1, Seg2.](#)) However, if the single point limit used to terminate the flat line limit has different limit values, a single-point test limit-segment is created. (See [Figure 7-3: CH2, Seg2.](#))

Output Results

[Table 7-13](#) shows the output of the OUTPSEGAM test (min/max of all active segments); note that the segments with asterisks (*) from [Table 7-12](#) have no output in [Table 7-13](#).

Table 7-13 Example Output: OUTPSEGAM (min/max of all segments)

Channel 1 Segment	Freq. at Minimum Value (Hz)	Minimum Value (dB)	Freq. at Maximum Value (Hz)	Maximum Value (dB)
1	480027600	-0.1268225	330028350	0.9590923
3	1140024300	-0.09223454	1680021600	1.258809
5	3000015000	-0.2199298	3000015000	-0.2199298
6	4020009900	-2.203248	4770006150	-0.2444123
7	5820000900	-4.473375	4860005700	0.23913
Channel 2 Segment				
1	780026100	-0.2838693	990025050	0.6258904
2	1110024450	0.2364199	1110024450	0.2364199
3	3960010200	-2.745585	2640016800	0.888033
5	5790001050	-4.136453	5010004950	-1.064739
6	5820000900	-4.472594	6000000000	-3.501008

Constants Used Throughout This Document

NOTE The logic values attached to pass and fail indicators were chosen to be consistent with the current logic used in the standard OUTPLIML and OUTPLIMF commands.

Table 7-14 Pass/Fail/No_Limit Status Constants

Status Definition	Status Indicator
PASS	1
FAIL	0
NO_LIMIT	-1

Table 7-14 is an interpretation of the Pass/Fail/No_Limit status constants. These constants are used to identify the Pass/Fail/No_Limit state on the data strings if status is returned.

Table 7-15 Min/Max Test Constants

String	Stimulus Value	Data Value
NO_DATA	0	-1000

Table 7-15 is an interpretation of the min/max test constants. If the selected segment has no associated limit, the NO_DATA string is generated, which reports a stimulus value of 0 and a data value of -1000.

Output Limit Test Pass/Fail Status Per Limit Segment

Two commands allow you to query the pass/fail test status on a limit segment basis.

- SELSEG<num> will select the segment.
- OUTPSEGF will return the status of the limit test for that segment: 1 (PASS), 0 (FAIL) or -1 (NO_LIMIT) if no limit exists for the selected segment number. Due to the non-sequential numbering of actual limit line segments on the screen, some segment numbers will have no associated limits and will thus return -1 (NO_LIMIT).

Under the following conditions, OUTPSEGF will issue the following errors:

- ☐ If the limit testing is off: "30: Requested Data Not Currently Available." To clear the error message, turn the limit test on.
- ☐ If the limit table is empty: "204: Limit Table Empty" (this is a new message). To clear the error message, enter a limit table.

In both cases, the error is issued and the command responds with -1 (NO_LIMIT).

The argument for SELSEG<num> is limited by the maximum number of segments allowed in the limit table, which is currently 18. The minimum value for the argument is 1. If the user inputs a number that is outside this range, the active entry limits are invoked, causing the analyzer to return the status for limit 18.

Example:

Sending SELSEG3 and OUTPSEGF may return the following:

1 (segment number 3 passed)

NOTE The output is ASCII. Currently, the formatting for integer numbers appears to append a trailing space.

Output Pass/Fail Status for All Segments

The GPIB command OUTPSEGAF will return the number of segments being reported, followed by pairs of data consisting of the segment number and its status. A segment is reported only if it has an associated limit. The output is only valid if limit test is on. See [“Output Limit Test Pass/Fail Status Per Limit Segment” on page 7-131](#).

Example:

Sending OUTPSEGAF may return the following:

3
1, 0
3, 1
5, 0

For an explanation of these results, see [Table 7-16](#).

NOTE A new Line Feed character $\langle^L_F\rangle$ is inserted after the number of segments and after each data pair.

Table 7-16 Example Output: OUTPSEGAF (pass/fail for all segments)

Segments Reported	Segment Number	Status	Status Definition
3			
	1	0	FAIL
	3	1	PASS
	5	0	FAIL

[Table 7-16](#) is an interpretation of the data returned by the command OUTPSEGAF. For clarification, status definition is also included.

Example Program of OUTPSEGAF Using BASIC

The following program is not included on the “Programming Examples” CD-ROM:

```
10 OUTPUT 716; "outpsegaf;"
20 ENTER 716; Numsegs
30 PRINT "Receiving status for"; Numsegs; "segments."
40 IF Numsegs>0 THEN
50   FOR I=1 TO Numsegs
60     ENTER 716; Segnum, Pf
70     PRINT USING "DD, 2X, 8A"; Segnum, Pf
80   NEXT I
```

The example program shows how the OUTPSEGAF command can be used to request the number of active segments and their status. Notice that each segment result must use a new enter command as a line feed terminates each segment data result.

Output Minimum and Maximum Point Per Limit Segment

The command MINMAX<ON|OFF> toggles a feature which records the minimum and maximum data points in all active limit segments. Note that limit testing need not be turned on.

The command OUTPSEGM will report the min/max data for the segment previously selected by SELSEG. The data is returned in a comma delimited string with the segment number, minimum point stimulus, minimum trace value, maximum point stimulus and maximum trace value.

Under the following conditions, OUTPSEGM will issue the following errors:

- If the min/max testing is off: “30: Requested Data Not Currently Available.” To clear the error message, turn the min/max testing on.
- If the limit table is empty: “204: Limit Table Empty” (this is a new message). To clear the error message, enter a new limit table.

When the above error conditions occur, there is no data to report, thus no output is generated.

If the selected segment has no associated limit, the NO_DATA string is generated, which reports a stimulus value of 0 and a data value of -1000.

Example:

Sending SELSEG3 and OUTPSEGM may return the following:

3, 1.900000000E+09, -9.900000E-01, 2.123456789E+09, 2.123456E+00

For an explanation of these results, see [Table 7-17](#).

Table 7-17 Example Output: OUTPSEGM (min/max per segment)

Segment	Min Pt Stimulus (Frequency)	Min Pt Value (dB)	Max Pt Stimulus (Frequency)	Max Pt Value (dB)
3	1.9 GHz	-.99	2.12 GHz	2.12

[Table 7-17](#) is an interpretation of the min/max data returned using the SELSEG and OUTPSEGM commands.

NOTE A new Line Feed character $\langle^L_F\rangle$ is inserted after the segment number and after each data pair.

Output Minimum and Maximum Point for All Segments

Three GPIB commands allow the user to dump the min-or-max or min-and-max values for all active segments:

- OUTPSEGAM: outputs min and max data for each active segment.
- OUTPAMIN: outputs the min data for each active segment.
- OUTPAMAX: outputs the max data for each active segment.

The OUTPSEGAM output consists of:

- The total number of segments being reported.
- The following data for each segment:
 - ☐ segment number
 - ☐ min stimulus
 - ☐ min value
 - ☐ max stimulus
 - ☐ max value

Example:

Sending OUTPUTSEGAM may return the following:

```
5,
1, 1.900000000E+09, -9.900000E-01, 2.123456789E+09, 2.123456E+00
3, 2.300000000E+09, -10.00000E-01, 2.600000000E+09, 3.100000E+00
5, 3.200000000E+09, -10.00000E-01, 3.400000000E+09, 3.100000E+00
7, 4.300000000E+09, -10.00000E-01, 4.700000000E+09, 3.100000E+00
8, 5.000000000E+09, -10.00000E-01, 5.400000000E+09, 3.100000E+00
```

For an explanation of these results, see [Table 7-18](#).

NOTE A new line feed character $\langle L_F \rangle$ is inserted after the segment number and after each data pair.

Table 7-18 Example Output: OUTPUTSEGAM (min/max for all segments)

Segments Reported	Segment Number	Min Pt Stimulus (Frequency)	Min Pt Value (dB)	Max Pt Stimulus (Frequency)	Max Pt Value (dB)
5					
	1	1.9 GHz	-0.99	2.12 GHz	2.12
	3	2.3 GHz	-1.0	2.6 GHz	3.1
	5	3.2 GHz	-1.0	3.4 GHz	3.1
	7	4.3 GHz	-1.0	4.7 GHz	3.1
	8	5.0 GHz	-1.0	5.4 GHz	3.1

[Table 7-18](#) is an interpretation of the min/max data returned using the OUTPUTSEGAM command.

Example Program of OUTPSEGAM Using BASIC

The following program is not included on the Programming Examples CD-ROM:

```
10 Minmax:                !
20 Mm:  IMAGE DD,":",2X,D.DDDE,2X,SD.DDDE,2X,D.DDDE,2X,SD.DDDE
30      PRINT "TESTING: OUTPSEGAM: min/max points for each segment"
40      OUTPUT 716;"minmaxon;"
50      OUTPUT 716;"outpsegam;"
60      ENTER 716;Numsegs
70      PRINT "receiving data for";Numsegs;"segments"
80      FOR I=1 TO Numsegs
90          ENTER 716;Segnum,Minstim,Minval,Maxstim,Maxval
100         PRINT USING Mm; Segnum, Minstim, Minval,Maxstim,
            Maxval
110     NEXT I
```

Output Data Per Point

The GPIB command OUTPDATP returns the value of the selected point using FORM4 (ASCII). The point is selected using the SELPT command. This returns the last point if the selected point is out of range. Otherwise, it uses the same format as that used by the marker value command. These formats are as follows:

Table 7-19 Example Output: OUTPDATP (data per point)

Display Format	Marker Mode	Marker Readout Format	Example Returns	
Log Mag		dB*	-3.521 (dB)	9.7E-39*
Phase		degrees*	157.8 (Deg)	5.3E-15*
Delay		seconds*	0.5068x10-9	0*
Smith Chart	LIN MKR	lin mag, degrees		
	LOG MKR	dB, degrees		
	Re/Im	real, imag		
	R + jX	real, imag ohms	10.37 Ω	9.399 Ω
	G + jB	real, imag Siemens		
POLAR	LIN MKR	lin mag, degrees	0.6667	157.8 (Deg)
	LOG MKR	dB, degrees	-3.521 (dB)	157.8 (Deg)
	Re/Im	real, imag	-0.6173	0.2518
LIN MAG		lin mag *	0.6667	0*
REAL		real *		
SWR		SWR *	5.001	0*
* Value is insignificant, but is included in data transfers.				

The commands in the following example are sent while using the format command LOGM.

Example:

Sending SELPT5 and OUTPDATP may return the following:

-3.513410E+00, 0.00915E+15 (Note that the second number is insignificant.)

Output Data Per Range of Points

The GPIB command OUTPDATR returns the value of the selected points using FORM4 (ASCII). This ASCII format requires many data bytes per point for transfer. For a large number of points, it may be faster to make trace data dumps (OUTPDATA) using a binary format. The range of points is selected using the SELMINPT and SELMAXPT commands (select minimum point, select maximum point of desired point range). These commands return the last max point if the selected points are out of range. Only the SELMAXPT will be returned if the selected minimum point is greater than the selected maximum point.

The commands in the following example are sent while using the format command LOGM.

Example:

Sending SELMINPT5, SELMAXPT7 and OUTPDATR may return the following:

3.880465E-01, 0.000039E-01

1.901648E-01, 1.363988E+11

5.57587E-01, 1.258655E+30 (Note that the second number is insignificant.)

For an explanation of these results see [Table 7-20](#).

NOTE A new line feed character $\langle L_F \rangle$ is inserted after the segment number and after each data pair.

Table 7-20 Example Output: OUTPDATPR (data per range of points)

Point	Value	Value*
5	0.3880465	0.000039E-01
6	0.1901648	1.363988E+11
7	0.557587	1.258655E+30
* These values are insignificant.		

[Table 7-20](#) is an interpretation of the min/max data per range of points returned using the SELMINPT5, SELMAXPT7 and OUTPDATR commands.

Output Limit Pass/Fail by Channel

The GPIB commands OUTPLIM1 and OUTPLIM2 output the status of the limit test for channel 1 and channel 2, respectively.

These commands return the values 1 (PASS), 0 (FAIL), or -1 (NO_LIMIT) if limit testing is disabled. Currently, the results of limit testing can be retrieved by reading a bit in the status register.

Example:

Sending OUTPLIM1 or OUTPLIM2 (channel 1 or channel 2) may return the following:

1 (PASS), 0 (FAIL), or if limit test not enabled then -1 (NO_LIMIT).

A Preset Conditions

Preset State

When the **Preset** key is pressed, the analyzer reverts to a known state called the factory preset state. This state is defined in the tables in this chapter. See [“PRES” on page 1-183](#) and [“RST” on page 1-212](#).

Table A-1 Analyzer Mode

Preset Conditions	Preset Value
Analyzer Mode	Network Analyzer Mode
Frequency Offset Operation ¹	Off
Offset Value ¹	0
High Power: ²	
External R Channel	Off
Attenuator A	0 dB
Attenuator B	0 dB
Harmonic Operation ³	Off

1. Frequency offset operation is standard on 8753ET/ES analyzers, and available with Option 089 on 8720E series analyzers.
2. High power is available with Option 085 on 8719/20/22ES analyzers only.
3. Harmonic operation is available on 8753ET/ES Option 002 analyzers only.

Table A-2 Stimulus Conditions

Preset Conditions	Preset Value
Sweep Type	Linear Frequency
Step Sweep (8720E series only)	Off ¹
Step Sweep (8719/20/22ES Opt. 085 only)	On
Display Mode	Start/Stop
Trigger Type	Continuous
External Trigger	Off
Sweep Time	100 ms, Auto Mode
Start Frequency:	
8720E series	50 MHz
8753ES	30 kHz
8753ES Option 011	300 kHz
8753ES Option 011 w/ Option 006	30 kHz
8753ET	300 kHz
Stop Frequency:	
8719ET/ES	13.51 GHz
8720ET/ES	20.05 GHz
8722ET/ES	40.05 GHz
8753ET/ES	3.0 GHz
8753ET/ES Option 006	6.0 GHz
Frequency Span	(Stop Frequency – Start Frequency)
Start Time	0
Time Span	100 ms
CW Frequency	1000 MHz
Source Power Setting:	
8719ET/ES and 8720ET/ES	0 dBm
8719ET/ES and 8720ET/ES Option 007	10 dBm
8719ET/ES and 8720ET/ES Option 400	0 dBm
8722ET/ES	–10 dBm
8722ET/ES Option 007	–5 dBm
8753ET/ES	0 dBm
Source Power On/Off	On

Table A-2 Stimulus Conditions

Preset Conditions	Preset Value
Start Power:	
8719ET/ES and 8720ET/ES	–15.0 dBm
8719ET/ES and 8720ET/ES Option 007	–10.0 dBm
8719ET/ES and 8720ET/ES Option 400	–20.0 dBm
8722ET/ES	–20.0 dBm
8722ET/ES Option 007	–15.0 dBm
8722ET/ES Option 400	–25.0 dBm
8753ET/ES	–15.0 dBm
Power Slope Setting (8753ES only)	0 dB/GHz
Power Slope On/Off (8753ES only)	Off
Power Span:	
8719ET/ES and 8720ET/ES	20 dB
8722ET/ES	15 dB
8753ET/ES	25 dB
Coupled Power (ES models only)	On
Coupled Channels	On
Coupled Port Power ²	On
Power Range Auto/Manual ²	Auto
Power Range: ²	
8720E series	Range 0
8720E series, Option 400	Range 1
8753ET/ES	Range 0
Number of Points	201
List Freq Sweep Mode	Swept
Frequency List	Empty
Edit Mode	Start/Stop, Number of Points

- Can be changed by pressing **System** **CONFIGURE MENU** **USER SETTINGS** **PRESET SETTINGS** **STEP SWP ON**.
- Not valid on 8753ES Option 011.

Table A-3 Response Conditions

Preset Conditions	Preset Value
Meas Parameter (ES models):	
Channel 1	S11
Channel 2	S21
Channel 3	S12
Channel 4	S22
Meas Parameter (ET models):	
Channel 1	Reflection
Channel 2	Transmission
Channel 3	Reflection
Channel 4	Transmission
Conversion	Off
Format	Log Magnitude (all inputs)
Display	Data
Color Selections	Same as before Preset
Dual Channel	Off
Active Channel	Channel 1
Auxiliary Channel	Off
Frequency Blank	Disabled
Retrace Power ¹	Standard
Test Set Switch (ES models only):	
8753ES Option 011	N/A
8719/20/22ES Option 007 or 085	Hold
All other ES models	Continuous
Split Display	2X
Intensity	If set to $\geq 15\%$, Preset has no effect. If set to $< 15\%$, Preset increases intensity to 15%.
Beeper: Done	On
Beeper: Warning	Off
D2/D1 to D2	Off

Table A-3 Response Conditions

Preset Conditions	Preset Value
Title:	
Channel 1	Empty
Channel 2	Empty
IF Bandwidth	3700 Hz (8753ET/ES) 3000 Hz (8720 E series)
IF Averaging On/Off	Off
IF Averaging Factor	16
Smoothing Aperture On/Off	Off
Smoothing Aperture Setting	1% SPAN
Phase Offset	0 Degrees
Electrical Delay	0 ns
Scale/Division	10 dB/Division

1. 8720E series only.

Table A-4 Calibration Conditions

Preset Conditions	Preset Value
Correction	Off
Calibration Type	None
Calibration Kit: (8719/20)	
8719ET/ES and 8720ET/ES	3.5-mm
8722ET/ES	2.4-mm
8753ES	7-mm type-N, 75 Ω (8753ET/ES Option 075)
8753ET	type-N, 50 Ω
Enhanced Reflection Calibration	Off
System Z0	50 Ω 75 Ω (8753ET/ES Option 075)
Velocity Factor	1
Extensions On/Off	Off
Extensions Setting:	
Port 1	0 s
Port 2	0 s
Input A	0 s
Input B	0 s
Chop A and B (ES models only)	On
Chop RFL & TRN (ET models only)	On
Power Meter Calibration:	Off
Number of Readings	1
Power Loss Correction	Off
Sensor A/B	A
Interpolated Error Correction	On ¹

1. Can be changed by pressing **System** **CONFIGURE MENU**
USER SETTINGS **PRESET SETTINGS** **CAL INTERP OFF**.

Table A-5 Electronic Calibration (ECal) Conditions

Preset Conditions	Preset Value
Module	A (information may not be loaded)
Omit Isolation	On
Isolation Averages	10
Manual Thru	Off

Table A-6 Marker Conditions

Preset Conditions	Preset Value
Markers On/Off	All Markers Off
Marker Setting (all markers)	1 GHz
Last Active Marker	1
Reference Marker	None
Marker Mode	Continuous
Display Markers	On
Delta Marker Mode	Off
Coupling	On
Marker Search	Off
Marker Target Value	-3 dB
Marker Width On/Off	Off
Marker Width Value	-3 dB
Marker Tracking	Off
Marker Stimulus Offset	0 Hz
Marker Value Offset	0 dB
Marker Aux Offset (Phase)	0 Degrees
Marker Statistics	Off
Polar Marker	Lin Mkr
Smith Marker	R+jX Mkr

Table A-7 Limit Conditions

Preset Conditions	Preset Value
Limit Lines	
Limit Lines	Off
Limit Testing	Off
Limit List	Empty
Edit Mode	Upper/Lower Limits
Stimulus Offset	0 Hz
Amplitude Offset	0 dB
Limit Type	Sloping Line
Beep Fail	Off
Ripple Limit	
Ripple Limit	Off
Ripple Test	Off
Bandwidth Limit	
Bandwidth Test	Off
Bandwidth Display	Off
Bandwidth Marker	Off

Table A-8 Time Domain Conditions (Option 010 only)

Preset Conditions	Preset Value
Transform	Off
Transform Type	Bandpass
Start Transform:	
8720 E series analyzers	–1 nanoseconds
8753ET/ES analyzers	–20 nanoseconds
Transform Span:	
8720 E series analyzers	4 nanoseconds
8753ET/ES analyzers	40 nanoseconds
Gating	Off
Gate Shape	Normal
Gate Span:	
8720 E series analyzers	500 picoseconds
8753ET/ES analyzers	20 nanoseconds
Gate Start:	
8720 E series analyzers	–500 picoseconds
8753ET/ES analyzers	–10 nanoseconds
Demodulation	Off
Window	Normal
Use Memory	Off

Table A-9 System Conditions

Preset Conditions	Preset Value
GPIO Addresses	Last Active State
GPIO Mode	Last Active State
Focus	Last Active State
Clock Time Stamp	On
Preset: Factory/User	Last Selected State

Table A-10 Copy Configuration Conditions

Preset Conditions	Preset Value
Parallel Port	Last Active State
Plotter Type	Last Active State
Plotter Port	Last Active State
Plotter Baud Rate	Last Active State
Plotter Handshake	Last Active State
GPIB Address	Last Active State
Printer Type	Last Active State
Printer Port	Last Active State
Printer Baud Rate	Last Active State
Printer Handshake	Last Active State
Printer GPIB Address	Last Active State

Table A-11 Disk Save (Define Store) Configuration Conditions

Preset Conditions	Preset Value
Data Array	Off
Raw Data Array	Off
Formatted Data Array	Off
Graphics	Off
Data Only	Off
Directory Size	Default ¹
Save Using	Binary
Select Disk	Internal Memory
Disk Format	LIF

1. The directory size is calculated as 0.013% of the floppy disk size (which is ≈256) or 0.005% of the hard disk size.

Table A-12 Sequencing Conditions

Preset Conditions	Preset Value
Current Sequence	Pressing Preset turns off sequencing modify (edit) mode and stops any running sequence.
Loop Counter	0
TTL OUT	High

Table A-13 Service Mode Conditions

Preset Conditions	Preset Value
GPIB Diagnostic	Off
Source Phase Lock	Loop On
Sampler Correction (8753ET/ES only)	On
Spur Avoidance (8753ET/ES only)	On
Aux Input Resolution	Low
Analog Bus Node	11 (Aux Input)

Table A-14 Plot Conditions

Preset Conditions	Preset Value
Plot Data	On
Plot Memory	On
Plot Graticule	On
Plot Text	On
Plot Marker	On
Autofeed	On
Plot Quadrant	Full Page
Scale Plot	Full
Plot Speed	Fast
Pen Number:	
Ch1/Ch3 Data	2
Ch2/Ch4 Data	3
Ch1/Ch3 Memory	5
Ch2/Ch4 Memory	6
Ch1/Ch3 Graticule	1
Ch2/Ch4 Graticule	1
Ch1/Ch3 Text	7
Ch2/Ch4 Text	7
Ch1/Ch3 Marker	7
Ch2/Ch4 Marker	7
Line Type:	
Ch1/Ch3 Data	7
Ch2/Ch4 Data	7
Ch1/Ch3 Memory	7
Ch2/Ch4 Memory	7

Table A-15 Print Conditions

Preset Conditions	Preset Value
Printer Mode	Last Active State
Auto-Feed	On
Printer Colors:	
Ch1/Ch3 Data	Magenta
Ch1/Ch3 Mem	Green
Ch2/Ch4 Data	Blue
Ch2/Ch4 Mem	Red
Graticule	Cyan
Warning	Black
Text	Black
Reference Line	Black

Table A-16 Format Conditions

Preset Conditions	Preset Value		
	Scale	Reference Position	Reference Value
Log Magnitude (dB)	10.0	5.0	0.0
Phase (degrees)	90.0	5.0	0.0
Group Delay (ns)	10.0	5.0	0.0
Smith Chart	1.00	N/A	1.0
Polar	1.00	N/A	1.0
Linear Magnitude	0.1	0.0	0.0
Real	0.2	5.0	0.0
Imaginary	0.2	5.0	0.0
SWR	1.00	0.0	1.0

B Command Listings

Alphabetical List of Commands

AB	BWLIMDISP	CALK716
ADAP1	BWLIMMAX	CALKN75
ADDRCONT	BWLIMIN	CALKTRLK
ADDRDISC	BWLIMSTAT	CALKUSED
ADDRLSRC	BWLIMTEST	CALN
ADDRPERI	BWLIMVAL	CALPOW
ADDRPLOT	C0	CALSPORT1
ADDRPOWM	C1	CALSPORT2
ADDRPRIN	C2	CALZLINE
ADPTCOAX	C3	CALZSYST
ADPTWAVE	CAL1	CBRI
ALC	CALFCALF	CENT
ALTAB	CALFFREQ	CHAN1
ANAB	CALFSENA	CHAN2
ANAI	CALFSENB	CHAN3
AR	CALIERC	CHAN4
ASEG	CALIEREFL	CHOPAB
ASSS	CALIFUL2	CLAD
ATTA	CALIONE2	CLASS11A
ATTB	CALIRAI	CLASS11B
ATTP1	CALIRERC	CLASS11C
ATTP2	CALIRESP	CLASS22A
AUTO	CALIS111	CLASS22B
AUXC	CALIS221	CLASS22C
AVERFACT	CALITRL2	CLEA
AVERO	CALK24MM	CLEABIT
AVERREST	CALK292MM	CLEAL
BACI	CALK292S	CLEARALL
BANDPASS	CALK32F	CLEAREG
BEEPDONE	CALK35MC	CLEASEQ
BEEPFail	CALK35MD	CLEL
BEEPWARN	CALK35ME	CLER
BLAD	CALN	CLES
BR	CALK50	CLS
BWLIMDB	CALK7MM	COAD

COAX	D4XUPCH3	ECALFUL2
COLOCH1D	DATI	ECALISOAVG
COLOCH1M	DCONV	ECALMANTHRU
COLOCH2D	DEBU	ECALMODID
COLOCH2M	DECRLOOC	ECALMODINF
COLOCH3D	DEFC	ECALMODSELA
COLOCH3M	DEFLPRINT	ECALMODSELB
COLOCH4D	DEFLTCPIO	ECALNFREQS
COLOCH4M	DEFS	ECALOMII
COLOGRAT	DELA	ECALPAUSED
COLOLREF	DELO	ECALRERC
COLOR	DELR	ECALS11
COLOTEXT	DELRFIXM	ECALS22
COLOWARN	DEMOAMPL	EDITDONE
CONS	DEMOOFF	EDITLIML
CONT	DEMOPHAS	EDITLIST
CONV1DS	DFLT	EDITRLIM
CONVOFF	DIRS	ELED
CONVYREF	DISCUNIT	EMIB
CONVYTRA	DISCVOLU	ENTO
CONVZREF	DISM	ERCDONE
CONVZTRA	DISPDATA	ESB?
COPY	DISPDATM	ESE
COPYFRFT	DISPDDM	ESNB
COPYFRRT	DISPDMM	ESR?
CORI	DISPMEMO	EXTD
CORR	DIVI	EXTMDATA
COUC	DONE	EXTMDATO
COUP	DONM	EXTMFORM
CSWI	DOSEQ	EXTMGRAP
CSWIOFF	DOWN	EXTMRAW
CSWION	DUAC	EXTRCHAN
CWFREQ	DUPLSEQ	EXTT
CWTIME	ECALAB?	EXTTHIGH
D1DIVD2	ECALCONT	EXTTLOW
D2XUPCH2	ECALDONE	EXTTOFF
D2XUPCH3	ECALERC	EXTTON
D4XUPCH2	ECALFREQS	EXTTPOIN

FIXE	INCRLOOC	LABES22C
FORM1	INID	LABETLFM
FORM2	INIE	LABETLFT
FORM3	INPUCALC	LABETLRM
FORM4	INPUCALK	LABETLRT
FORM5	INPUDATA	LABETRFM
FORMATDOS	INPUFORM	LABETRLL
FORMATLIF	INPULEAS	LABETRLR
FREO	INPUPMCAL1	LABETRLT
FREQOFFS	INPUPMCAL2	LABETRRM
FRER	INPURAW1	LABETTFM
FULP	INPURAW2	LABETTFT
FWDI	INPURAW3	LABETTRM
FWDM	INPURAW4	LABETTRT
FWDT	INSMEXSA	LABK
GATECENT	INSMEXSM	LABS
GATEO	INSMNETA	LEFL
GATESPAN	INSMTUNR	LEFU
GATESTAR	INTD	LIMD
GATESTOP	INTE	LIMIAMPO
GATSMAXI	INTM	LIMILINE
GATSMINI	ISOD	LIMIMAOF
GATSNORM	ISOL	LIMISTIO
GATSWIDE	ISOOP	LIMITEST
GOSUB	KEY	LIML
HARMOFF	KITD	LIMM
HARMSEC	KOR?	LIMS
HARMTHIR	LABEFWDM	LIMTFL
HOLD	LABEFWDT	LIMTSL
IDN?	LABERESI	LIMTSP
IFBIHIGH	LABERESP	LIMU
IFBILOW	LABEREVM	LINFREQ
IFBW	LABEREVT	LINM
IFLCEQZE	LABES11A	LINTDATA
IFLCNEZE	LABES11B	LINTMEMO
IFLTFAIL	LABES11C	LISFREQ
IFLTPASS	LABES22A	LISIFBWM
IMAG	LABES22B	LISPWRM

LISTTYPELSTP	MARKFVAL	MINMAX
LISTTYPELSWP	MARKMAXI	MINU
LISV	MARKMIDD	MODI1
LOAD	MARKMINI	MODS
LOADSEQ	MARKOFF	NEWSEQ
LOAN	MARKREF	NEXP
LOAO	MARKSPAN	NOOP
LOCONT	MARKSTAR	NUMG
LOFREQ	MARKSTIM	NUMR
LOFSTAR	MARKSTOP	OFLD
LOFSTOP	MARKUNCO	OFLS
LOFSWE	MARKZERO	OFSD
LOGFREQ	MAXF	OFSL
LOGM	MEASA	OFSZ
LOOC	MEASB	OMII
LOPOWER	MEASR	OPC
LOPSTAR	MEASTAT	OPEP
LOPSTOP	MENUAVG	OUTPACTI
LOPSWE	MENUCAL	OUTPAMAX
LOWPIMPU	MENUCOPY	OUTPAMIN
LOWPSTEP	MENUDISP	OUTPAPER
LRN	MENUFORM	OUTPCALC
LRN?	MENUMARK	OUTPCALK
MANTRIG	MENUMEAS	OUTPCHAN
MARK1	MENUMRKF	OUTPDATA
MARK2	MENUMRKS	OUTPDATF
MARK3	MENUOFF	OUTPDATP
MARK4	MENUON	OUTPDATR
MARK5	MENUPOWE	OUTPERRO
MARKBUCK	MENURECA	OUTPFAIP
MARKCENT	MENUSAVE	OUTPFARPLPT
MARKCONT	MENUSCAL	OUTPFORF
MARKCOUP	MENUSEQU	OUTPFORM
MARKCW	MENUSRCH	OUTPICAL
MARKDELA	MENUSTIM	OUTPIDEN
MARKDISC	MENUSWEE	OUTPIPMCL
MARKFAUV	MENUSYST	OUTPKEY
MARKFSTI	MINF	OUTPLEAS

OUTPLIM	PCOLGRAT	PORTA
OUTPLIMF	PCOLMEMO	PORTB
OUTPLIML	PCOLREFL	PORTP
OUTPLIMM	PCOLTEXT	PORTR
OUTPMARK	PCOLWARN	PORTT
OUTPMEMF	PDATA	POWE
OUTPMEMO	PENNDATA	POWLFREQ
OUTPMSTA	PENNGRAT	POWLLIST
OUTPMWID	PENNNMARK	POWLLOSS
OUTPMWIL	PENNNMEMO	POWM
OUTPOPTS	PENNTTEXT	POWR
OUTPPLOT	PGRAT	POWS
OUTPPMCAL	PHAO	POWT
OUTPPRE	PHAS	PRAN
OUTPPRIN	PLOFAST	PREP
OUTPPRNALL	PLOSSLOW	PRES
OUTPRAF	PLOT	PRIC
OUTPRAW	PLTHNDSHK	PRINALL
OUTPRFFR	PLTPRTDISK	PRINSEQ
OUTPRPLBNDALL	PLTPRTHPIB	PRINTALL
OUTPRPLBNDPF	PLTPRTPARA	PRNHNDSHK
OUTPRPLBNDVAL	PLTPRTSERI	PRNPRTTHPIB
OUTPSEGAF	PLTTRAUTF	PRNPRTPARA
OUTPSEGAM	PLTTRBAUD	PRNPRTSERI
OUTPSEGF	PLTTRFORF	PRNTRAUTF
OUTPSEGM	PLTTYPHPGL	PRNTRBAUD
OUTPSEQ	PLTTYPLTR	PRNTRFORF
OUTPSERN	PMEM	PRNTYP540
OUTPSTAT	PMKR	PRNTYPDJ
OUTPTITL	PMTRTTIT	PRNTYPEP
PARAIN	POIN	PRNTYPLJ
PARALCPY	POLA	PRNTYPPJ
PARALGPIO	POLMLIN	PRNTYPTJ
PARALLEL	POLMLOG	PSOFT
PARAOUT	POLMRI	PTEXT
PAUS	PORE	PTOS
PCB	PORT1	PURG
PCOLDATA	PORT2	PWMCEACS

PWMCOFF	RLIMM	SEGIFBW
PWMCONES	RLIMSTP	SEGPOWER
PWRLOSS	RLIMSTR	SELBND
PWRMCAL	RLIMTEST	SELL
PWRR	RLIMVAL	SELMAXPT
Q	RSCO	SELMINPT
RAID	RST	SELPT
RAISOL	S11	SELSEG
RAIRESP	S12	SEQ
RAWOFFS	S21	SEQWAIT
READDATE	S22	SETBIT
READTIME	SADD	SETDATE
REAL	SAMC	SETF
RECA	SAV1	SETRREFL
RECAREG	SAV2	SETRTHRU
RECO	SAVC	SETTIME
REFD	SAVE	SETZ
REFL	SAVECSV	SHOM
REFOP	SAVEJPG	SING
REFP	SAVERC	SLID
REFT	SAVEREG	SLIL
REFV	SAVEUSEK	SLIS
REIC	SAVRERC	SLOPE
RERCDONE	SAVT	SLOPO
RESC	SAVUASCI	SM8
RESD	SAVUBINA	SMIC
RESPDONE	SCAL	SMIMGB
REST	SCAPFULL	SMIMLIN
RETP	SCAPGRAT	SMIMLOG
REVI	SDEL	SMIMRI
REVM	SDON	SMIMRX
REVT	SEAL	SMOOAPER
RFGTLO	SEAMAX	SMOOO
RFLP	SEAMIN	SOFR
RFLTLO	SEAOFF	SOFT
RIGL	SEAR	SOUP
RIGU	SEATARG	SPAN
RLIMLINE	SEDI	SPECFWDM

SPECFWDT	STB?	TRAN
SPECRESI	STDD	TRAOP
SPECRESP	STD TARBI	TRAP
SPECREVM	STD TDELA	TRLL1
SPECREVT	STD TLOAD	TRLL2
SPECS11A	STD TOPEN	TRLR1
SPECS11B	STD TSHOR	TRLR2
SPECS11C	STEP SWP	TRLT
SPECS22A	STOP	TSSWI
SPECS22B	STOR	TST?
SPECS22C	STORSEQ	TSTIOFWD
SPECTLFM	STPSIZE	TSTIOREV
SPECTLFT	SVCO	TSTP
SPECTLRM	SWEA	TTLHPULS
SPECTLRT	SWET	TTLLPULS
SPECTRFM	SWPSTART	TTLOH
SPECTRLL	SWR	TTLOL
SPECTRLR	TAKCS	UCONV
SPECTRLT	TAKE4	UP
SPECTRRM	TAKRS	USEPASC
SPECTTFM	TALKLIST	USESENSA
SPECTTFT	TERI	USESENSB
SPECTTRM	TESS?	VELOFACT
SPECTTRT	TIMDTRAN	VIEMOFF
SPEG	TIMESTAM	VIEMON
SPLD	TINT	VOFF
SPLID1	TITF	WAIT
SPLID2	TITL	WAVD
SPLID4	TITP	WAVE
SRE	TITR	WIDT
SSEG	TITREG	WIDV
STANA	TITSEQ	WINDMAXI
STANB	TITSQ	WINDMINI
STANC	TITTMEM	WINDNORM
STAND	TITTPERI	WINDOW
STANE	TITTPMTR	WINDUSEM
STANF	TITTPRIN	WRSK
STANG	TRACK	
STAR	TRAD	

OPC-Compatible List of Commands

AUXC	ISOD
CHAN1	MANTRIG
CHAN2	NOOP
CHAN3	NUMG
CHAN4	PRES
CLASS11A	RAID
CLASS11B	RECA
CLASS11C	RECAREG
CLASS22A	REFD
CLASS22B	RERCDONE
CLASS22C	RESPDONE
CLEA	REVI
CLEARALL	REVM
CLEAREG	REVT
DATI	RST
DONE	SAV1
ECALMODSELA	SAV2
ECALMODSELB	SAVC
EDITDONE	SAVE
ERCDONE	SAVEJPG
EXTTOFF	SAVERC
EXTTON	SAVEREG
EXTTPOIN	SAVRERC
FREQOFFS	SAVT
FWDI	SING
FWDM	SLIS
FWDT	STAN
GATEO	SWPSTART
HARMOFF	TRAD
HARMSEC	WAIT
HARMTHIR	
INSMEXSA	
INSMEXSM	
INSMNETA	
INSMTUNR	

Symbols

*CLS, 3-16
*ESE, 3-16
*ESE?, 3-16
*ESR?, 3-16
*IDN?, 3-16
*LRN?, 3-16
*OPC, 3-16
*OPC?, 3-16
*OPT?, 3-16
*PCB, 3-16
*PSC, 3-16
*RST, 3-16
*SRE, 3-16
*SRE?, 3-16
*STB?, 3-16, 3-17
*TRG, 3-17
*TST?, 3-17
*WAI, 3-17
? command, 4-2

Numerics

2.4 mm 85056 softkey, 1-28
2.92* 85056K softkey, 1-28
2.92mm other kits softkey, 1-28
3.5mmC 85033C softkey, 1-28
3.5mmD 85033D/E softkey, 1-28
3.5mmD 85052 softkey, 1-28
7-16 85038 softkey, 1-28
7mm 85031 softkey, 1-28
7mm 85050 softkey, 1-28

A

A, 1-141
A/R, 1-9
AB, 1-3
abort message (IFC), 3-14
abort sequence, 2-16
absolute value, ripple test, 1-211
active segment
 IFBW, 1-225
 power, 1-225
ADAP1, 1-3
adapter
 coax, 1-5
 waveguide, 1-5
adapter coax softkey, 1-5
adapter delay, 1-3
adapter removal
 calibration, 7-33
 coax, 1-5
 compute new cal set, 1-146
 recall cal set, 1-30
 waveguide, 1-5
adapter waveguide softkey, 1-5
add segment, 1-214

ADDR, 1-4
ADDRCONT, 1-4
ADDRDISC, 1-4
address
 capability, 3-10
 controller, 1-4, 1-165
 disk drive, 1-4
 LO Source, 1-4
 pass-control-back, 3-16
 peripheral, 1-4
 plotter, 1-4
 power meter, 1-4
 printer, 1-4
addresses
 GPIB, 3-14
ADDRLSRC, 1-4
ADDRPERI, 1-4
ADDRPLOT, 1-4
ADDRPOWM, 1-4
ADDRPRIN, 1-4
adjust
 brightness, 1-32
 color, 1-42
 tint, 1-261
ADPT, 1-5
ADPTCOAX, 1-5
ADPTWAVE, 1-5
AF, 3-20
AH1 (full-acceptor handshake), 3-11
ALC, 1-5
all markers off, 1-137
all segs sweep, 1-9
ALTAB, 1-6
alternate A and B, 1-6
alternate inputs, 1-6
alternate refl/tran, 1-6
amplitude
 demodulation, 1-60
 offset, 1-122
 tracking, 7-122
amplitude and phase tracking, 7-122
ANAB, 1-7
ANAI, 1-8
analog bus, 1-7, 1-8
analog input, 1-8
analyzer array-data formats, 4-6
analyzer bus mode, 3-13
analyzer command syntax, 3-2
analyzer control of peripherals, 3-12
analyzer data reading, 4-1
analyzer features helpful in developing programs, 7-8
analyzer identification, 4-2

analyzer operating modes, 2-4, 2-11
 pass-control mode, 2-4, 2-11, 7-104
 system-control mode, 2-4, 2-11
 talker/listener, 2-4, 2-11
analyzer operation, 3-6
analyzer single bus concept, 3-12
analyzer status reporting
 structure, 6-3
analyzer-debug mode, 7-8
aperture, smoothing, 1-237
appendage in syntax, 3-4
AR, 1-9
arbitrary impedance, std type, 1-249
array
 data, 1-87
 format, 1-87
array-data formats, 4-6, 7-59
 FORM 1, 7-59
 FORM 2, 7-59
 FORM 3, 7-59
 FORM 4, 7-57, 7-59
 FORM 5, 7-59
arrays
 calibration, 1-106
 error coefficient, 1-108, 1-160, 3-18
arrays of data, 5-3
arrays related to frequency, 4-9
arrow down key, 1-68
arrow up key, 1-271
ASCII
 save format, 1-219
ASCII disk files, 7-118
 reading, 7-118
ascii, print, 1-186
ASEG, 1-9
assert SRQ, 1-10
ASSS, 1-10
ATN (attention) control line, 3-9
ATTA, 1-11
ATTB, 1-11
attention (ATN) control line, 3-9
attenuator, 1-11
attenuator offsets, 1-194, 7-42
ATTP1, 1-11
ATTP2, 1-11
AUTO, 1-12
auto feed
 plotter, 1-170
 printer, 1-187
auto scale, 1-12
aux channel display, 1-13
aux input, 1-8
AUXC, 1-13

- averaging, 1-14
 - restart, 1-14
- averaging factor, 1-14
- averaging factor softkey, 1-14
- averaging on off softkey, 1-14
- averaging restart softkey, 1-14
- AVERFACT, 1-14
- AVERO, 1-14
- AVERREST, 1-14
- B**
- B, 1-141
- B/R, 1-17
- BACI, 1-15
- background intensity, 1-15
- BANDPASS, 1-15
- bandwidth search, marker, 1-276
- bandwidth test
 - display of measurement status, 1-20
 - display of measurement value, 1-18
 - maximum width, 1-19
 - minimum width, 1-19
 - on/off control, 1-20
 - returning measured value, 1-21
 - setting dB point amplitude, 1-18
- bandwidth, IF, 1-103
- basic talker (T6), 3-11
- BASIC, Visual, 2-3
- baud rate
 - plotter, 1-170
 - printer, 1-187
- BEEP, 1-16
- beep
 - emit, 1-82
- BEEPDONE, 1-16
- beeper on done, 1-16
- beeper on warning, 1-16
- beeper, limit test failure, 1-16
- BEEPFAIL, 1-16
- BEEPWARN, 1-16
- bi-directional lines, 3-9
- binary
 - save format, 1-219
- bit clear, 1-37
- bit, GPIO, 1-102
- BLAD, 1-17
- blank display, 1-17
- blank frequency, 1-93
- BR, 1-17
- branching sequences, 1-102
- brightness adjust, 1-32
- bus device modes, 3-12
- bus structure, 3-7, 3-8
- bus, analog, 1-7
- BWLIMDB, 1-18
- BWLIMDISP, 1-18
- BWLIMMAX, 1-19
- BWLIMMIN, 1-19
- BWLIMSTAT, 1-20
- BWLIMTEST, 1-20
- BWLIMVAL, 1-21
- C**
- C++, Visual, 2-3
- C0, 1-22
- C1, 1-22
- C1,C2,C3 (system controller capabilities), 3-11
- C10 (pass control capabilities), 3-11
- C2, 1-22
- C3, 1-22
- ca z0, 1-31
- cal factor, 1-24
- cal kit, 1-218
- modify, 1-146
- cal kit done, 1-114
- cal kits, 1-27, 1-28
- cal power
 - set port 1, 1-191
- cal sensor table
 - edit, 1-24
- cal sweep, 1-257
- CAL1, 1-23
- CALF, 1-24
- CALFCALF, 1-24
- CALFFREQ, 1-24
- CALFSENA, 1-24
- CALFSENB, 1-24
- CALI, 1-25
- calibrate none softkey, 1-29
- calibrating the test setup, 7-3
- calibration
 - adapter removal, 1-30, 1-146, 7-33
 - arrays, 1-154
 - ECal, 1-69
 - electronic calibration, 1-69
 - enhanced reflection, 1-25
 - enhanced response, 1-25, 1-83, 1-201, 1-215
 - enhanced response ECal, 1-71, 1-78
 - external, 7-42
 - isolation, 1-112
 - isolation, omitting, 1-152
 - kit & std labeling, 1-115
 - kit modification, 1-34, 1-90, 1-114, 1-116, 1-144, 1-146, 1-150, 1-151, 1-233, 1-240, 1-248, 1-249, 1-259
 - kit, save, 1-218
 - kits, 1-27
 - LRM, 1-25, 1-31, 1-215, 1-266
 - none, 1-29
 - off, 1-29
 - one-port, 1-23, 1-25, 1-215
 - one-port ECal, 1-79
 - power meter, 1-29, 1-190, 1-257
 - power meter sensor, 1-24
 - reflection, 1-198
 - reflection standard classes, 1-35
 - response, 1-203
 - response and isolation, 1-25, 1-193
 - resume sequence, 1-201
 - simulated, 7-38
 - standard, 1-22
 - standards, 1-246
 - take4, 1-258
 - transmission, 1-264
 - TRL, 1-25, 1-31, 1-215, 1-266
 - two-port, 1-25, 1-96, 1-198, 1-205, 1-215, 1-264, 1-266
 - two-port ECal, 1-72
 - using raw data, 7-38
- calibration arrays, 1-106, 1-160, 3-18
- calibration coefficients, 1-106, 1-160, 3-18, 5-3, 5-6
- calibration command sequence, 3-17
- calibration data
 - inputting, 7-81
 - outputting, 7-81
 - reading, 7-81
- calibration kit string and learn string, 5-7
- calibration kits, 1-27, 7-24
- calibration sequence, begin, 1-25
- calibration type off, 1-29
- calibration/classes relationship, 3-17
- CALIERC, 1-25
- CALIEREFL, 1-25
- CALIFUL2, 1-25
- CALIRAI, 1-25
- CALIRESP, 1-25
- CALIS111, 1-25
- CALIS221, 1-25
- CALITRL2, 1-25
- CALK, 1-27
- CALK24MM, 1-27
- CALK292MM, 1-27
- CALK292S, 1-27
- CALK32F, 1-27
- CALK35MC, 1-27
- CALK35MD, 1-27
- CALK35ME, 1-27

- CALK716, [1-27](#)
- CALK7MM, [1-27](#)
- CALKN50, [1-27](#)
- CALKN75, [1-27](#)
- CALKTRLK, [1-27](#)
- CALKUSED, [1-27](#)
- CALN, [1-29](#)
- CALPOW, [1-29](#)
- CALSPORT1, [1-30](#)
- CALSPORT2, [1-30](#)
- CALZ, [1-31](#)
- CALZLINE, [1-31](#)
- CALZSYST, [1-31](#)
- capacitance, open, [1-22](#)
- CBRI, [1-32](#)
- CD-ROM, part number, [7-2](#)
- CENT, [1-32](#)
- center frequency, [1-32](#)
- chain for data processing, [5-1](#)
- chan power
 - coupling, [1-46](#)
- CHAN1, [1-33](#)
- CHAN2, [1-33](#)
- CHAN3, [1-33](#)
- CHAN4, [1-33](#)
- channel, [1-33](#)
- channels
 - coupled, [1-46](#)
- characters that are valid, [3-3](#)
- chop a and b, [1-34](#)
- chop A and B softkey, [1-34](#)
- chop refl/tran, [1-34](#)
- chop refl/tran softkey, [1-34](#)
- CHOPAB, [1-34](#)
- citifile
 - save format, [1-219](#)
- CLAD, [1-34](#)
- class done, [1-34](#)
- class, done, [1-66](#)
- class, specify, [1-240](#)
- CLASS11A, [1-35](#)
- CLASS11B, [1-35](#)
- CLASS11C, [1-35](#)
- CLASS22A, [1-35](#)
- CLASS22B, [1-35](#)
- CLASS22C, [1-35](#)
- CLEA, [1-36](#)
- CLEABIT, [1-37](#)
- CLEAL, [1-37](#)
- clear bit, [1-37](#)
- clear device, [3-14](#)
- clear limit line list, [1-37](#)
- clear list, [1-38](#), [1-39](#)
- clear register, [1-36](#)
- clear registers, [1-39](#)
- clear sequence, [1-38](#), [2-16](#)
- CLEARALL, [1-36](#)
- CLEAREG, [1-36](#)
- clearing any messages waiting to
 - be output, [2-16](#)
- clearing syntax errors, [2-16](#)
- clearing the input-command
 - buffer, [2-16](#)
- CLESEQ, [1-38](#)
- CLEL, [1-38](#)
- CLER, [1-39](#)
- CLES, [1-39](#)
- clock, [1-195](#)
- close segment, [1-222](#)
- CLS, [1-39](#)
- COAD, [1-40](#)
- COAX, [1-40](#)
- coax adapter, [1-5](#)
- coaxial delay, [1-40](#)
- code naming conventions, [3-2](#)
- code syntax structure, [3-4](#)
- collect raw data, [1-258](#)
- COLO, [1-41](#)
- COLOCH2D, [1-41](#)
- COLOCH2M, [1-41](#)
- COLOLREF, [1-41](#)
- COLOR, [1-42](#)
- color
 - data channel 1, [1-166](#)
 - data channel 2, [1-166](#)
 - data channel 3, [1-166](#)
 - data channel 4, [1-166](#)
 - graticule, [1-166](#)
 - memory channel 1, [1-166](#)
 - memory channel 2, [1-166](#)
 - memory channel 3, [1-166](#)
 - memory channel 4, [1-166](#)
 - reference line, [1-166](#)
 - text, [1-166](#)
 - warning, [1-166](#)
- color reset, [1-211](#)
- colors, [1-166](#)
- colors, default, [1-54](#)
- colors, display, [1-41](#)
- COLOTEXT, [1-41](#)
- COLOWARN, [1-41](#)
- command formats, [3-4](#)
- command query, [4-2](#)
- command structure, [2-12](#)
- command structure elements,
 - [2-12](#)
 - appendage, [2-12](#)
 - BASIC command statement,
 - [2-12](#)
 - data, [2-12](#)
 - terminators, [2-12](#)
 - unit, [2-12](#)
- command syntax, [3-2](#)
- command syntax structure, [3-4](#)
- commands
 - IEEE 488.2, [3-16](#)
 - overlapped, [3-16](#), [3-17](#)
- comma-separated values, saving,
 - [1-217](#)
- complete operation, [3-6](#)
- complete service request
 - capabilities (SR1), [3-11](#)
- compute new cal set, [1-146](#)
- computer controllers, [3-8](#)
- connecting the device under test,
 - [7-4](#)
- CONS, [1-43](#)
- constants, [7-131](#)
- CONT, [1-43](#)
- continue sequence, [1-43](#)
- continuous sweep mode, [1-43](#),
 - [1-95](#)
- control lines, [3-9](#)
- control, pass, [1-272](#)
- controlled sweep, [7-8](#)
- controller
 - address, [1-4](#)
- controller address, [1-165](#)
- controller interface function, [3-8](#)
- CONV1DS, [1-44](#)
- conventions for code naming, [3-2](#)
- conversion
 - S-parameter, [1-44](#)
- CONVOFF, [1-44](#)
- CONVYREF, [1-44](#)
- CONVYTRA, [1-44](#)
- CONVZREF, [1-44](#)
- CONVZTRA, [1-44](#)
- copy display, [1-169](#), [1-185](#)
- copy from file title, [1-45](#)
- copy from reg titles, [1-45](#)
- COPYFRFT, [1-45](#)
- COPYFRRT, [1-45](#)
- CORI, [1-45](#)
- CORR, [1-46](#)
- correction, [1-46](#)
 - interpolative, [1-45](#)
- correction on off softkey, [1-46](#)
- COUC, [1-46](#)
- counter, loop, [1-134](#)
- COUP, [1-46](#)
- coupled channels, [1-46](#)
- coupling
 - port power, [1-176](#)
 - power, [1-46](#)
- CS, [3-20](#)
- CSV files, saving, [1-217](#)
- CSWI, [1-47](#)
- cutoff
 - waveguide, [1-275](#)
- CW freq, [1-48](#)

CW time, 1-48
CWFREQ, 1-48
CWTIME, 1-48

D

SELSEG, 7-126
D1/D2 to channel 2, 1-49
D1DIVD2, 1-49
D2XUPCH2, 1-50
D2XUPCH3, 1-50
D4XUPCH2, 1-51
D4XUPCH3, 1-51
data
 include with disk files, 1-87
data array, 1-87
data arrays, 5-3
data bus, 3-9
data channel 1
 color, 1-166
data channel 2
 color, 1-166
data channel 3
 color, 1-166
data channel 4
 color, 1-166
data for markers, 4-4
data formats and transfers, 7-56
data levels, 5-6
data only
 include with disk files, 1-87
data rate, 3-10
data reading, 4-1
data taking, 7-4
data to memory, 1-52
data transfer, 3-9, 7-4, 7-56
 to a plotter, 7-109
 using floating-point numbers, 7-62
 using FORM 1, 7-67
 using FORM 4, 7-59
 using frequency-array information, 7-64
 using markers, 7-57
Data Transfer Commands
 Fast, 5-5
data transfer for traces, 4-8
data units, 3-4
data/memory, 1-65, 1-66
data-array formats, 4-6
data-memory, 1-65, 1-145
data-processing chain, 5-1
data-transfer character
 definitions, 4-3
date, 1-195, 1-230
DATI, 1-52
DC1 (complete device clear), 3-11
DCONV, 1-52, 1-271
DEBU, 1-53
debug, 1-53
debug mode, 2-13, 7-8
decrement loop counter, 1-53
DECRLOOC, 1-53
default calibration kits, 1-27
default colors, 1-54
default plot setup, 1-61
default print setup, 1-55
DEFC, 1-54
define standard, 1-57
define standard softkey, 1-57
definitions of status bit, 6-3
DEFLPRINT, 1-55
DEFLTCPIO, 1-56
DEFS, 1-57
DELA, 1-59
delay, 1-59
 adapter, 1-3
 coaxial, 1-40
 electrical, 1-82
 set to mkr, 1-137
 waveguide, 1-275
delay/thru, std type, 1-249
delete frequency band list, 1-39
delete segment, 1-221
DELO, 1-58
delta limits, 1-120
delta reference, 1-58
DEMOAMPL, 1-60
demodulation, 1-60
DEMEOFF, 1-60
DEMOPHAS, 1-60
DeskJet, 1-187
DeskJet 540, 1-187
developing program features, 7-8
device
 reset, 3-16
device clear, 3-14
device clear (DC1), 3-11
device connection, 7-4
device trigger, 3-15
device types for GPIB, 3-7
DF, 3-20
DFLT, 1-61
diagnostics, GPIB, 1-53
directory size
 LIF, 1-62
DIRS, 1-62
disabling the front panel, 3-15
DISCUNIT, 1-63
DISCVOLU, 1-63
disk
 external, 1-86
 format, 1-105
 internal, 1-110
 load file, 1-132
disk drive
 address, 1-4
disk drive unit, 1-63
disk drive volume, 1-63
disk file names, 3-23
disk format, 1-92
DISM, 1-64
disp mkr, 1-64
DISPDATA, 1-65
DISPDATM, 1-65
DISPDDM, 1-65
DISPDMM, 1-65
display
 bandwidth test measurement status, 1-20
 bandwidth test measurement value, 1-18
 four channel, 1-51
 restore, 1-202
 ripple test measured value, 1-211
 two channel, 1-50
display A/B, 1-3
display A/R, 1-9
display B/R, 1-17
display blank, 1-17
display colors, 1-41
display data, 1-65
display data mem, 1-65
display data to mem, 1-52
display data/mem, 1-65
display format units, 1-161, 4-5
display graphics, 3-20
display intensity, 1-111
display memory, 1-65
display, color reset, 1-211
DISPMEMO, 1-65
DIVI, 1-66
do sequence, 1-67
does not respond to parallel poll (PPO), 3-11
DONE, 1-66
done, 1-222
 with class, 1-66
 with isolation, 1-112
 with reflection, 1-198
 with transmission, 1-264
done editing segment, 1-222
done modify sequence, 1-67
done resp & isol cal, 1-193
done resp isol'n cal softkey, 1-193
done with segment edit, 1-80
DONM, 1-67
DOS format, 1-92
DOSEQ, 1-67
DOWN, 1-68
down arrow key, 1-68

down converter, [1-52](#), [1-271](#)
 DT1 (responds to a group execute trigger), [3-11](#)
 DUAC, [1-68](#)
 dual channel display, [1-68](#)
 duplicate sequence, [1-69](#)
 DUPLSEQ, [1-69](#)

E

E2 (tri-state drivers), [3-11](#)
 each sweep, [1-190](#)
 ECal
 check all module information, [1-75](#)
 check module factory frequency values, [1-72](#)
 check module factory number of frequency points, [1-77](#)
 check module identification, [1-74](#)
 continue, [1-70](#)
 do forward enhance calibration, [1-78](#)
 do forward enhanced calibration, [1-71](#)
 do full 2-port calibration, [1-72](#)
 do one-port s11, [1-79](#)
 do one-port s22, [1-79](#)
 is calibration done?, [1-71](#)
 is calibration paused?, [1-78](#)
 module query, [1-69](#)
 select module A, [1-76](#)
 select module B, [1-76](#)
 set number of isolation averages, [1-73](#)
 toggle isolation, [1-77](#)
 toggle manual thru, [1-73](#)
 ECal calibration, [1-69](#)
 ECALAB?, [1-69](#)
 ECALCONT, [1-70](#)
 ECALDONE, [1-71](#)
 ECALERC, [1-71](#)
 ECALFREQS, [1-72](#)
 ECALFUL2, [1-72](#)
 ECALISOAVG, [1-73](#)
 ECALMANTHRU, [1-73](#)
 ECALMODID, [1-74](#)
 ECALMODINF, [1-75](#)
 ECALMODSELA, [1-76](#)
 ECALMODSELB, [1-76](#)
 ECALNFREQS, [1-77](#)
 ECALOMII, [1-77](#)
 ECALPAUSED, [1-78](#)
 ECALRERC, [1-78](#)
 ECALS11, [1-79](#)
 ECALS22, [1-79](#)
 edit
 ripple test limit list, [1-81](#)
 edit cal sensor table, [1-24](#)
 edit limit table, [1-80](#)
 edit list, [1-80](#)
 edit power loss range, [1-178](#)
 edit power loss table, [1-178](#)
 edit segment, [1-224](#)
 edit segment done, [1-222](#)
 EDITDONE, [1-80](#)
 EDITLIML, [1-80](#)
 EDITLIST, [1-80](#)
 EDITRLIM, [1-81](#)
 electrical delay, [1-82](#)
 electronic calibration, [1-69](#)
 ELED, [1-82](#)
 EMIB, [1-82](#)
 emit beep, [1-82](#)
 end or identify, [3-4](#)
 end or identify (EOI) control line, [3-9](#)
 end sweep
 high pulse, [1-270](#)
 low pulse, [1-270](#)
 enhanced reflection calibration, [1-25](#)
 enhanced reflection softkey, [1-26](#)
 enhanced response calibration, [1-25](#), [1-83](#), [1-201](#), [1-215](#)
 enhanced response softkey, [1-26](#)
 ENTO, [1-83](#)
 entry off, [1-83](#)
 EOI, [3-4](#)
 EOI (end or identify) control line, [3-9](#)
 Epson-P2, [1-187](#)
 ERCDONE, [1-83](#)
 error coefficient arrays, [1-108](#), [1-160](#)
 error coefficients, [1-106](#), [1-154](#), [3-18](#), [5-6](#)
 error correction, [1-46](#)
 error messages
 numerically listed, [6-9](#)
 error output, [6-8](#)
 error queue, [7-70](#)
 error reporting, [6-1](#)
 error-corrected data, [5-3](#)
 ESB?, [1-84](#)
 ESE, [1-84](#)
 ESNB, [1-85](#)
 ESR?, [1-85](#)
 event status register, [1-85](#)
 event status register B, [1-84](#)
 event-status register, [1-84](#), [1-85](#), [6-3](#), [6-7](#)
 event-status-register B, [7-99](#)
 example

operation using talker/listener mode, [7-102](#)
 plotting plot files stored on disk, [7-111](#)
 printing plot files stored on disk, [7-111](#)
 Reading ASCII Disk Files to the Instrument Controller's Disk File, [7-118](#)
 using the learn string, [7-79](#)
 ext source auto softkey, [1-109](#)
 ext source manual softkey, [1-109](#)
 EXTDD, [1-86](#)
 extended listener capabilities (LEO), [3-11](#)
 extension input A softkey, [1-175](#)
 extension input B softkey, [1-175](#)
 extension on off softkey, [1-174](#)
 extension port 1 softkey, [1-175](#)
 extension port 2 softkey, [1-175](#)
 extension refl port softkey, [1-175](#)
 extension trans port softkey, [1-175](#)
 extensions, port, [1-175](#)
 external calibration, [7-42](#)
 external disk, [1-86](#)
 external PC, [7-42](#)
 external R channel, [1-88](#)
 external source mode, [1-109](#)
 external trigger, [1-89](#)
 EXTMDATA, [1-87](#)
 EXTMDATOON|OFF>, [1-87](#)
 EXTMFORMON|OFF>, [1-87](#)
 EXTMGRAPON|OFF>, [1-87](#)
 EXTMRAWON|OFF>, [1-87](#)
 EXTRCHAN, [1-88](#)
 EXTTHIGH, [1-89](#)
 EXTTLOW, [1-89](#)
 EXTTOFF, [1-89](#)
 EXTTON, [1-89](#)
 EXTTPOIN, [1-89](#)

F

Fast Data Transfer Commands, [5-5](#)
 features helpful in developing programming routines, [7-8](#)
 file
 load, [1-132](#)
 purge, [1-189](#)
 file name, [1-262](#)
 file names
 disk, [3-23](#)
 file titles, [1-45](#), [1-262](#)
 recall, [1-200](#)
 firmware revision, [1-237](#)

- firmware revision identification, 4-2
- FIXE, 1-90
- fixed (load) softkey, 1-90
- fixed load, 1-90
- fixed mkr, 1-137
- flat line type, 1-123
- form 4 data-transfer character string, 4-3
- form feed
 - plotter, 1-170
 - printer, 1-187
- FORM1, 1-91
- FORM1 format, 4-6
- FORM2, 1-91
- FORM2 format, 4-6
- FORM3, 1-91
- FORM3 format, 4-6
- FORM4, 1-91
- FORM4 format, 4-6
- FORM5, 1-91
- FORM5 format, 4-6
- format
 - disk, 1-92
- format display units, 1-161, 4-5
- format external disk, 1-105
- format internal disk, 1-105
- FORMATDOS, 1-92
- FORMATLIF, 1-92
- formats and transfers of trace-data, 7-56
- formats for array-data, 4-6
- formats for commands, 3-4
- formatted data, 5-3
 - include with disk files, 1-87
- forward calibration class, 1-96
- forward isolation, 1-96
- forward match, 1-96
- forward transmission, 1-96
- four channel display, 1-51
- free run, 1-95
- FREO, 1-93
- FREQOFFS, 1-94
- frequency
 - center, 1-32
 - CW, 1-48
 - linear, 1-124
 - log, 1-133
 - span, 1-239
 - start, 1-247
 - stop, 1-251
- frequency band clearing list, 1-39
- frequency bands
 - selecting for ripple test, 1-227
- frequency blank, 1-93
- frequency calculation equation, 7-59
- frequency list, 1-126
- frequency notation, 1-93
- frequency offset, 1-94
- frequency offset value, 1-274
- frequency offsets, 1-94
- frequency, power list, 1-178
- frequency-related arrays, 4-9
- FRER, 1-95
- full 2-port cal, 1-25
- full 2-port softkey, 1-26
- full page, 1-95
- full-acceptor handshake (AH1), 3-11
- full-source handshake (SH1), 3-11
- FULP, 1-95
- FWDI, 1-96
- FWDM, 1-96
- FWDT, 1-96
- G**
- G + jB mkr, 1-236
- gate center time, 1-97
- gate menu, 1-243
- gate shape, 1-98
 - maximum, 1-98
 - minimum, 1-98
 - normal, 1-98
 - wide, 1-98
- gate shape softkeys, 1-98
- gate softkeys, 1-97
- gate span time, 1-97
- gate start time, 1-97
- gate stop time, 1-97
- GATECENT, 1-97
- GATESPAN, 1-97
- GATESTAR, 1-97
- GATESTOP, 1-97
- GATSMAXI, 1-98
- GATSMINI, 1-98
- GATSNORM, 1-98
- GATSWIDE, 1-98
- general structure of syntax, 3-4
- GOSUB, 1-99
- gosub sequence, 1-99
- GPIO
 - address capability, 3-10
 - addresses, 3-14
 - bus structure, 3-7, 3-8
 - command formats, 3-4
 - data rate, 3-10
 - device types, 3-7
 - message transfer scheme, 3-10
 - meta-messages, 3-14
 - multiple-controller capability, 3-10
 - operation, 3-7
 - operational capabilities, 3-11
 - requirements, 3-10
 - status indicators, 3-11
- GPIO diagnostics, 1-53
- GPIO, 1-163, 1-164
- GPIO bit, 1-102, 1-230
- GPIO input bit, 1-163
- GPIO output bits, 1-163
- GPIO, clear bit, 1-37
- graphic files
 - saving as JPG, 1-217
- graphics
 - character size, 3-21
 - default values, 3-20
 - display off, 3-20
 - display on, 3-21
 - draw to x,y, 3-21
 - erase display, 3-20, 3-21
 - label display, 3-20
 - line type, 3-20
 - output scaling limits, 3-21
 - pen down, 3-21
 - pen up, 3-21
 - plot relative, 3-21
 - select pen, 3-22
- graphics commands, 3-20
- graphics, saving, 1-87
- graticule
 - color, 1-166
- graticule color, 1-41
- group delay, 1-59
- group execute trigger response (DT1), 3-11
- guidelines for code naming, 3-2
- H**
- halting all modes and functions, 3-14
- handshake
 - plotter, 1-170
 - printer, 1-187
- handshake lines, 3-9
- HARMOFF, 1-100
- harmonic mode off, 1-100
- harmonics, 1-100
- HARMSEC, 1-100
- HARMTHIR, 1-100
- held commands, 3-6
- helpful features for developing programs, 7-8
- HOLD, 1-101
- HP-GL
 - character size, 3-21
 - commands accepted but ignored, 3-22
 - default values, 3-20

display off, 3-20
display on, 3-21
draw to x,y, 3-21
erase display, 3-20, 3-21
label display, 3-20
line type, 3-20
output scaling limits, 3-21
pen down, 3-21
pen up, 3-21
plot relative, 3-21
select pen, 3-22
HP-GL subset, 3-20

I

identification
 of analyzer, 4-2
 of firmware revision, 4-2
identification string, 1-101
identifying the analyzer, 3-16
IDN?, 1-101, 4-2
IDN?. *See* *IDN?
IEEE 488.2, 3-16
IEEE 488.2 common commands, 3-16
IEEE-488 universal commands, 3-14
IF bandwidth, 1-103
IF BW softkey, 1-103
IFBIHIGH, 1-102
IFBILOW, 1-102
IFBW, 1-103
 active segment, 1-225
IFBW list, 1-126
IFC (abort message), 3-14
IFC (interface clear) control line, 3-9
IFLCEQZE, 1-102
IFLCNEZE, 1-102
IFLTFAIL, 1-102
IFLTPASS, 1-102
IM, 3-22
IMAG, 1-104
imaginary, 1-104
increment loop counter, 1-104
INCRLOOC, 1-104
information on programs, 7-8
INID, 1-105
initialize disk, 1-105
INPU, 1-106
INPUCAL, 1-106
INPUCALK, 1-106
INPUdata, 1-106
INPUFORM, 1-106
INPULEAS, 1-106
INPUPMCAL, 1-106
INPURAW, 1-106
input bit, GPIO, 1-102

input, aux, 1-8
input/output path, 2-17
INSMEXSA, 1-109
INSMEXSM, 1-109
INSMNETA, 1-109
INSMTUNR, 1-109
instrument identification, 1-101
instrument modes, 1-109
instrument setup, 7-3
instrument state summary, 5-7
instrument states, 7-79
 recalling, 7-79, 7-84
 saving, 7-79, 7-84
INTD, 1-110
INTE, 1-111
intensity, 1-111
 background, 1-15
interface addresses, 3-14
interface clear (IFC) control line, 3-9
interface functions
 controller, 3-8
 listener, 3-7
 talker, 3-7
internal disk, 1-110
internal memory, 1-110
interpol on off softkey, 1-45
interpolation, 1-45
interpolative correction, 1-45
interrupts, generating, 7-72
INTM, 1-110
IP, 3-22
ISOD, 1-112
ISOL, 1-112
isolation calibration, 1-112
isolation calibration, omitting, 1-152
isolation done softkey, 1-112
isolation softkey, 1-112
ISOOP, 1-112
IW, 3-22

J

JPG files, saving, 1-217

K

KEY, 1-113
kit
 calibration, 1-218
kit done, 1-114
KITD, 1-114
kits of calibration standards, 7-24
kits, calibration, 1-27
KOR?, 1-114

L

L (listen mode), 3-11
LAB, 1-115
LABEFWDM, 1-116
LABEFWDT, 1-116
label cal kit, 1-115
label class, 1-116
label standard, 1-115
labels, softkey, 1-278
LABERESI, 1-116
LABERESP, 1-116
LABEREVM, 1-116
LABEREVT, 1-116
LABES11A, 1-116
LABES11B, 1-116
LABES11C, 1-116
LABES22A, 1-116
LABES22B, 1-116
LABES22C, 1-116
LABETLFT, 1-116
LABETLRM, 1-116
LABETLRT, 1-116
LABETRFM, 1-116
LABETRLL, 1-116
LABETRLR, 1-116
LABETRLT, 1-116
LABETRRM, 1-116
LABETTFFM, 1-116
LABETTFT, 1-116
LABETTRM, 1-116
LABETTRT, 1-116
LABK, 1-115
LABS, 1-115
LaserJet, 1-187
LB, 3-20
LCD title, 1-262
LE0 (no extended listener capabilities), 3-11
learn string and calibration kit string, 5-7
learn string use example program, 7-79
LEF, 1-119
LEFL, 1-119
left lower, 1-119
left upper, 1-119
LEFU, 1-119
levels of data, 5-6
LIF
 directory size, 1-62
LIF format, 1-92
LIMD, 1-120
LIMI, 1-122
LIMIAMPO, 1-122
LIMILINE, 1-122
LIMIMAO, 1-122
LIMISTIO, 1-122

- limit line amplitude offset, [1-122](#)
 - limit line and data point special functions, [7-126](#)
 - limit line list clear, [1-37](#)
 - limit line on/off, [1-122](#)
 - limit line stimulus offset, [1-122](#)
 - limit lines, [7-96](#)
 - setting up, [7-96](#)
 - limit list
 - editing for ripple test, [1-81](#)
 - limit table, [7-96](#)
 - edit, [1-80](#)
 - limit test beeper, [1-16](#)
 - limit test fail, [1-102](#)
 - limit test on/off, [1-122](#)
 - limit test pass, [1-102](#)
 - limit tests
 - setting up, [7-96](#)
 - LIMITEST, [1-122](#)
 - limit-line table, [7-96](#)
 - limit-line testing, [7-87](#)
 - list frequency table, selecting a single segment, [7-94](#)
 - performing PASS/FAIL tests, [7-96](#)
 - limits
 - displaying ripple test, [1-208](#)
 - limit-test array used to read values example program, [7-64](#)
 - limit-test table, [7-96](#)
 - limit-test tables, [7-87](#)
 - LIML, [1-120](#)
 - LIMM, [1-120](#)
 - LIMS, [1-120](#)
 - LIMTFL, [1-123](#)
 - LIMTSL, [1-123](#)
 - LIMTSP, [1-123](#)
 - LIMU, [1-120](#)
 - lin freq, [1-124](#)
 - lin mag, [1-124](#)
 - lin mkr, [1-173](#), [1-236](#)
 - line feeds, [3-4](#)
 - line type
 - data, [1-125](#)
 - memory, [1-125](#)
 - line/match, [1-266](#)
 - linear sweep, [1-124](#)
 - lines for control, [3-9](#)
 - lines for handshaking, [3-9](#)
 - LINFREQ, [1-124](#)
 - LINM, [1-124](#)
 - LINT, [1-125](#)
 - LINTDATA, [1-125](#)
 - LINTMEMO, [1-125](#)
 - LIS, [1-126](#)
 - LISFREQ, [1-126](#)
 - LISIFBWM, [1-126](#)
 - LISPWRM, [1-126](#)
 - list
 - clear, [1-38](#)
 - edit, [1-80](#)
 - list freq, [1-126](#)
 - list IFBW, [1-126](#)
 - list power, [1-126](#)
 - list sweep, [1-126](#)
 - list type, [1-127](#)
 - list values, [1-128](#)
 - print, [1-186](#)
 - listen mode (L), [3-11](#)
 - listener interface function, [3-7](#)
 - list-frequency mode, [7-87](#)
 - list-frequency sweeps, [7-87](#)
 - list-frequency tables, [7-87](#)
 - LISTTYPE, [1-127](#)
 - LISTTYPELSTP, [1-127](#)
 - LISTTYPELSWP, [1-127](#)
 - LISV, [1-128](#)
 - ln/match, [1-266](#)
 - LO, [1-129](#)
 - lo control, [1-129](#)
 - lo frequency, [1-129](#)
 - LO power level, [1-129](#)
 - lo start frequency, [1-129](#)
 - LO start power level, [1-129](#)
 - lo stop frequency, [1-129](#)
 - LO stop power level, [1-129](#)
 - lo sweep frequency, [1-129](#)
 - LO sweep power level, [1-129](#)
 - LOA, [1-131](#)
 - LOAD, [1-132](#)
 - load
 - fixed, [1-90](#)
 - sliding, [1-233](#)
 - std type, [1-249](#)
 - load file, [1-132](#)
 - load no offset, [1-131](#)
 - load offset, [1-131](#), [1-150](#)
 - load sequence, [1-133](#)
 - LOADSEQ, [1-133](#)
 - LOAN, [1-131](#)
 - LOAO, [1-131](#)
 - local command (GTL), [3-14](#)
 - local lockout, [2-13](#)
 - local lockout command (LLO), [3-15](#)
 - local mode, [2-13](#)
 - LOCONT, [1-129](#)
 - LOFREQ, [1-129](#)
 - LOFSTAR, [1-129](#)
 - LOFSTOP, [1-129](#)
 - LOFSWE, [1-129](#)
 - log mag, [1-134](#)
 - log mkr, [1-173](#), [1-236](#)
 - log sweep, [1-133](#)
 - LOGFREQ, [1-133](#)
 - LOGM, [1-134](#)
 - LOOC, [1-134](#)
 - loop counter, [1-102](#)
 - decrement, [1-53](#)
 - increment, [1-104](#)
 - loop counter value, [1-134](#)
 - LOPOWER, [1-129](#)
 - LOPSTAR, [1-129](#)
 - LOPSTOP, [1-129](#)
 - LOPSWE, [1-129](#)
 - loss, [1-178](#)
 - low pass, [1-230](#)
 - low pass frequency, [1-230](#)
 - low pass impulse, [1-135](#)
 - low pass step, [1-135](#)
 - lower limit
 - segment, [1-120](#)
 - LOWP, [1-135](#)
 - LOWPIMPU, [1-135](#)
 - LOWPSTEP, [1-135](#)
 - LRM calibration, [1-215](#)
 - LRN, [1-135](#)
 - LRN?. *See* *LRN?
 - LTa, [3-20](#)
- M**
- MANTRIG, [1-136](#)
 - manual trigger, [1-136](#)
 - margin value, ripple test, [1-211](#)
 - MARK, [1-137](#)
 - MARKBUCK, [1-137](#)
 - MARKCENT, [1-137](#)
 - MARKCONT, [1-137](#)
 - MARKCOUP, [1-137](#)
 - MARKCW, [1-137](#)
 - MARKDELA, [1-137](#)
 - MARKDISC, [1-137](#)
 - marker
 - delta reference, [1-58](#)
 - fixed, [1-137](#)
 - polar, [1-173](#)
 - reference, [1-58](#)
 - Smith chart, [1-236](#)
 - marker bandwidth search, [1-276](#)
 - marker data, [4-4](#)
 - marker parameters
 - print, [1-186](#)
 - marker positioning, [7-57](#)
 - by data point location, [7-57](#)
 - by frequency location, [7-57](#)
 - by trace-data value, [7-57](#)
 - marker search
 - left, [1-223](#)
 - maximum, [1-223](#)
 - minimum, [1-223](#)

- off, 1-223
 - right, 1-223
 - target, 1-223
 - tracking, 1-265
 - marker statistics, 1-142
 - marker to center, 1-137
 - marker to CW frequency, 1-137
 - marker to delay, 1-137
 - marker to limit offset, 1-122
 - marker to middle
 - segment, 1-137
 - marker to reference, 1-137
 - marker to start, 1-137
 - marker to stimulus
 - segment, 1-137
 - marker to stop, 1-137
 - marker width, 1-276
 - marker zero, 1-137
 - markers
 - continuous, 1-137
 - discrete, 1-137
 - displayed, 1-64
 - markers coupled, 1-137
 - markers off, 1-137
 - markers uncoupled, 1-137
 - MARKFAUV, 1-137
 - MARKFSTI, 1-137
 - MARKFVAL, 1-137
 - MARKMIDD, 1-137
 - MARKMINI, 1-137
 - MARKOFF, 1-137
 - MARKREF, 1-137
 - MARKSPAN, 1-137
 - MARKSTAR, 1-137
 - MARKSTIM, 1-137
 - MARKSTOP, 1-137
 - MARKUNCO, 1-137
 - MARKZERO, 1-137
 - MAXF, 1-140
 - maximum
 - allowable ripple value, 1-209
 - bandwidth value, 1-19
 - maximum frequency, 1-140
 - MEAS, 1-141
 - MEASA, 1-141
 - MEASB, 1-141
 - MEASR, 1-141
 - MEASTAT, 1-142
 - measure stats, 1-142
 - measured value
 - for ripple test, output of, 1-158
 - measurement
 - returning bandwidth test value, 1-21
 - measurement calibration, 3-17
 - measurement channel, 1-33
 - measurement data
 - post-processing, 7-4
 - measurement data taking, 7-4
 - measurement parameters
 - required order, 7-10
 - setting, 7-10
 - verifying, 7-21
 - measurement process, 7-3
 - measurement restart, 1-203
 - measurement setup, 7-10
 - measurement specifications, 7-60
 - group delay, 7-60
 - magnitude, 7-60
 - phase, 7-60
 - measurements
 - saving as graphic files, 1-217
 - saving as text files, 1-217
 - memory, 1-65
 - internal, 1-110
 - memory channel 1
 - color, 1-166
 - memory channel 2
 - color, 1-166
 - memory channel 3
 - color, 1-166
 - memory channel 4
 - color, 1-166
 - MENU, 1-143
 - MENUAVG, 1-143
 - MENUCAL, 1-143
 - MENUCOPY, 1-143
 - MENUDISP, 1-143
 - MENUFORM, 1-143
 - MENUMARK, 1-143
 - MENUMEAS, 1-143
 - MENUMRKF, 1-143
 - MENURECA, 1-143
 - MENUSAVE, 1-143
 - MENUSCAL, 1-143
 - MENUSEQU, 1-143
 - MENUSTIM, 1-143
 - MENUSYST, 1-143
 - message transfer scheme, 3-10
 - meta-messages, 3-14
 - methods of GPIB operation, 3-7
 - middle value
 - segment, 1-120
 - min/max recording, 1-145
 - MINF, 1-144
 - minimum
 - bandwidth value, 1-19
 - minimum frequency, 1-144
 - MINMAX, 1-145
 - MINMAXON|OFF>, 7-126
 - MINU, 1-145
 - mixer measurement display, 1-273
 - mixer measurement setup
 - diagram, 1-273
 - Mixer measurements, 7-122
 - modes
 - analyzer bus, 3-13
 - debug, 7-8
 - pass-control, 3-13
 - system-controller, 3-12
 - talker/listener, 3-13
 - modes for bus device, 3-12
 - MODI1, 1-146
 - modify cal kit, 1-146
 - modify colors, 1-41
 - modify sequence, 1-147
 - modify sequence done, 1-67
 - MODS, 1-146
 - multiple-controller capability, 3-10
- N**
- N 50 ohm 85032B/E softkey, 1-28
 - N 50 ohm 85032F softkey, 1-28
 - N 50 ohm 85054 softkey, 1-28
 - N 75 ohm 85036 softkey, 1-28
 - n dB
 - setting for bandwidth test, 1-18
 - naming conventions, 3-2
 - network analyzer mode, 1-109
 - new sequence, 1-147
 - NEWSEQ, 1-147
 - NEXP, 1-147
 - next page, 1-147
 - no extended talker capabilities (TEO), 3-11
 - no operation, 1-148
 - NOOP, 1-148
 - number, 1-2, 3-5
 - number of GPIB devices allowed, 3-7
 - number of groups, 1-148
 - number of listeners allowed, 3-7
 - number of points, 1-172
 - number of readings, 1-149
 - NUMG, 1-148
 - NUMR, 1-149
- O**
- OC, 3-22
 - OE, 3-22
 - offloading error correction, 7-42
 - offset
 - frequency, 1-94
 - phase, 1-168
 - offset (load) softkey, 1-150
 - offset delay, 1-151
 - offset load, 1-131, 1-150
 - offset load done, 1-150

offset loss, 1-151
offset Z0, 1-151
offsets, sampler and attenuator, 1-194
OFLD, 1-150
OFLS, 1-150
OFSO, 1-151
OFSL, 1-151
OFSZ, 1-151
OI, 3-22
OMII, 1-152
omit isolation, 1-152
on/off control
 bandwidth test, 1-20
 ripple test, 1-210
one sweep, 1-190
one-grid display, 1-244
one-path 2-port cal, 1-25
one-path 2-port softkey, 1-26
one-port calibration, 1-23, 1-25, 1-215
OP, 3-21
op param, 1-153
OPC, 1-152
OPC-compatible commands, 3-6
open
 std type, 1-249
open capacitance values, 1-22
OPEP, 1-153
operating parameters, 1-147, 1-153, 1-182
operation complete, 1-152, 3-6
operation complete commands, 2-15
operation of analyzer, 3-6
operation of GPIB, 3-7
operation using talker/listener mode example program, 7-102
operational capabilities for GPIB, 3-11
OPT?. *See* *OPT?
option 002, harmonics, 1-100
OS, 3-22
OUTP, 1-154
OUTPACTI, 1-154, 2-14
OUTPAMAX, 7-126
OUTPAMIN, 7-126
OUTPCALC, 1-154
OUTPCALK, 1-154
OUTPCHAN, 1-154
OUTPDAPT, 7-126
OUTPDATA, 1-154
OUTPDATE, 1-154
OUTPDATR, 1-154, 7-126
OUTPERRO, 1-154
OUTPFAIP, 1-154, 7-126

OUTPFARPLPT, 1-155
OUTPFORM, 1-154
OUTPFORM, 1-154
OUTPICAL, 1-154
OUTPIDEN, 1-154
OUTPIPMCL, 1-154
OUTPKEY, 1-154
OUTPLEAS, 1-154
OUTPLIM, 1-154
OUTPLIM1, 7-126
OUTPLIM2, 7-126
OUTPLIMF, 1-154
OUTPLIML, 1-154
OUTPLIMM, 1-154
OUTPMARK, 1-154
OUTPMEMF, 1-154
OUTPMEMO, 1-154
OUTPMSTA, 1-154
OUTPMWID, 1-154
OUTPMWIL, 1-154
OUTPOPTS, 1-154
OUTPPLOT, 1-154
OUTPPMCAL, 1-154
OUTPPRE, 7-42
OUTPPRIN, 1-154
OUTPPRNALL, 1-154
OUTPRAF, 1-154
OUTPRAW, 1-154
OUTPRE, 1-154
OUTPRFFR, 1-154
OUTPRPLBNDALL, 1-158
OUTPRPLBNDPF, 1-158
OUTPRPLBNDVAL, 1-158
OUTPSEGAF, 1-154, 7-126
OUTPSEGAM, 1-154, 7-126
OUTPSEGF, 1-154, 7-126
OUTPSEGM, 1-154, 7-126
OUTPSEQ, 1-154
OUTPSERN, 1-154, 7-126
OUTPSTAT, 1-154
OUTPTITL, 1-154
output
 failed ripple test points, 1-155
 plot string, 1-154
 ripple test measured value, 1-158
 ripple test measured values, 1-158
 ripple test pass/fail status, 1-158
Output Data Per Point, 7-137
Output Data Per Range of Points, 7-138
Output Limit Pass/Fail by Channel, 7-138
output limit test min/max, 1-154

Output Limit Test Pass/Fail Status Per Limit Segment, 7-131
output limit test status, 1-154
Output Minimum and Maximum Point For All Segments, 7-134
Output Minimum and Maximum Point Per Limit Segment, 7-133
output of errors, 6-8
Output Pass/Fail Status for All Segments, 7-132
output power, 1-177
output pre-raw data, 1-154
output queue, 4-2
output segment number, 1-154
output serial number, 1-154
output syntax, 4-3
output-data command, 4-2
outputting trace-related data, 4-4
overlapped commands, 3-16, 3-17

P

page, next, 1-147
page, previous, 1-182
PaintJet, 1-187
PARAIN, 1-163
PARAL, 1-164
parallel copy, 1-164
parallel gpio, 1-164
parallel in bit number, 1-163
parallel out all, 1-163
parallel poll configure, 3-15
parallel poll non response (PPO), 3-11
parallel port configure, 1-164
parameters, operating, 1-153
PARAOUT, 1-163
part number for CD-ROM, 7-2
pass control, 1-272
pass control capabilities (C10), 3-11
pass control mode, 3-15
pass/fail status
 for ripple test, output of, 1-158
PASS/FAIL tests, 7-99
pass-control mode, 3-13
pass-control-back address, 3-16
PAUS, 1-165
pause sequence, 1-165
pause to select sequence, 1-189
PAx,y, 3-21
PCB, 1-165
PC-graphics applications example program, 7-111
PCOLDATA1, 1-166
PCOLDATA2, 1-166

- PCOLDATA3, [1-166](#)
- PCOLDATA4, [1-166](#)
- PCOLGRAT, [1-166](#)
- PCOLMEMO1, [1-166](#)
- PCOLMEMO2, [1-166](#)
- PCOLMEMO3, [1-166](#)
- PCOLMEMO4, [1-166](#)
- PCOLREFL, [1-166](#)
- PCOLTEXT, [1-166](#)
- PCOLWARN, [1-166](#)
- PD, [3-21](#)
- PDATA, [1-162](#)
- pen number
 - data, [1-167](#)
 - graticule, [1-167](#)
 - markers, [1-167](#)
 - memory, [1-167](#)
 - text, [1-167](#)
- PENNDATA, [1-167](#)
- PENNGRAT, [1-167](#)
- PENNNMARK, [1-167](#)
- PENNNMEMO, [1-167](#)
- PENNNTEXT, [1-167](#)
- peripheral
 - address, [1-4](#)
- peripheral addresses, [3-14](#)
- PG, [3-21](#)
- PGRAT, [1-162](#)
- PHAO, [1-168](#)
- PHAS, [1-168](#)
- phase, [1-168](#)
- phase and amplitude tracking, [7-122](#)
- phase demodulation, [1-60](#)
- phase offset, [1-168](#)
- phase tracking, [7-122](#)
- PLOS, [1-169](#)
- PLOT, [1-169](#)
- plot data, [1-162](#)
- plot file and PC-graphics example
 - program, [7-111](#)
- plot full page, [1-95](#)
- plot graticule, [1-162](#)
- plot markers, [1-162](#)
- plot memory, [1-162](#)
- plot name, [1-262](#)
- plot quadrant, [1-119](#), [1-208](#)
- plot scale, [1-220](#)
- plot softkeys, [1-162](#)
- plot speed, [1-169](#)
- plot string
 - output, [1-154](#)
- plot text, [1-162](#)
- plotter
 - address, [1-4](#)
 - auto feed, [1-170](#)
 - baud rate, [1-170](#)
 - form feed, [1-170](#)
 - handshake, [1-170](#)
- plotter default setup, [1-61](#)
- plotter port
 - disk, [1-170](#)
 - GPIB, [1-170](#)
 - parallel, [1-170](#)
 - serial, [1-170](#)
- plotter type, [1-170](#)
- plotting
 - to a file, [7-109](#)
- plotting plot files stored on disk
 - example program, [7-111](#)
- plotting, remote, [7-102](#), [7-104](#)
- PLTHNDSHK, [1-170](#)
- PLTPRTDISK, [1-170](#)
- PLTPRTHPIB, [1-170](#)
- PLTPRTPARA, [1-170](#)
- PLTPRTSERI, [1-170](#)
- PLTTRAUTF, [1-170](#)
- PLTTRBAUD, [1-170](#)
- PLTTRFORF, [1-170](#)
- PLTTYPHPGL, [1-170](#)
- PLTTYPLTR, [1-170](#)
- plug&play driver, [2-3](#)
- PMEM, [1-162](#)
- PMKR, [1-162](#)
- pmtr/hpib to title, [1-171](#)
- PMTRTTIT, [1-171](#)
- POIN, [1-172](#)
- point trigger, [1-89](#)
- points
 - specify, [1-172](#)
- POL, [1-173](#)
- POLA, [1-173](#)
- polar, [1-173](#)
- polar markers, [1-173](#)
- POLMLIN, [1-173](#)
- POLMLOG, [1-173](#)
- POLMRI, [1-173](#)
- PORE, [1-174](#)
- PORT 1 attenuator, [1-11](#)
- PORT 2 attenuator, [1-11](#)
- port extensions, [1-174](#), [1-175](#)
- port power coupling, [1-176](#)
- PORT1, [1-175](#)
- PORT2, [1-175](#)
- PORTA, [1-175](#)
- PORTB, [1-175](#)
- PORTP, [1-176](#)
- PORTR, [1-175](#)
- PORTT, [1-175](#)
- post-processing the measurement
 - data, [7-4](#)
- POWE, [1-177](#)
- power
 - active segment, [1-225](#)
 - port, coupling, [1-176](#)
- power coupling, [1-46](#)
- power level, [1-177](#)
- power list, [1-126](#)
- power loss range
 - edit, [1-178](#)
- power loss table, [1-191](#)
 - edit, [1-178](#)
- power meter
 - address, [1-4](#)
- power meter cal, [1-29](#), [1-191](#)
- power meter calibration, [1-190](#), [7-75](#)
- power meter into title string, [1-171](#)
- power meter sensor, [1-272](#)
- power meter sensor calibration, [1-24](#)
- power meter type, [1-179](#)
- power range, [1-182](#), [1-192](#)
- power ranges, [1-180](#)
- power retrace, [1-204](#)
- power slope, [1-234](#)
- power sweep, [1-181](#)
- power trip, [1-181](#)
- power, source, [1-238](#)
- POWLFREQ, [1-178](#)
- POWLLIST, [1-178](#)
- POWLLOSS, [1-178](#)
- POWM, [1-179](#)
- POWR, [1-180](#)
- POWS, [1-181](#)
- POWT, [1-181](#)
- PPO (does not respond to parallel poll, [3-11](#))
- PRAN, [1-182](#)
- PREP, [1-182](#)
- preparing for remote operation, [2-16](#)
- pre-raw data, [7-42](#)
- pre-raw data,output, [1-154](#)
- pre-raw measured data, [5-3](#)
- PRES, [1-183](#)
- preset, [1-183](#), [1-212](#)
- preset state, [A-2](#)
- pre-setting the instrument, [2-16](#)
- previous page, [1-182](#)
- PRIC, [1-184](#)
- PRINALL, [1-185](#)
- PRINSEQ, [1-185](#)
- print, [1-185](#)
- print ascii, [1-186](#)
- print color, [1-184](#)
- print monochrome, [1-184](#)
- print sequence, [1-185](#)
- PRINTALL, [1-186](#)
- printer

- address, 1-4
- auto feed, 1-187
- baud rate, 1-187
- form feed, 1-187
- handshake, 1-187
- printer default setup, 1-55
- printer port
 - GPIO, 1-187
 - parallel, 1-187
 - serial, 1-187
- printer type, 1-187
- printing
 - using the serial port, 7-107
- printing plot files stored on disk
 - example program, 7-111
- printing, remote, 7-102, 7-104
- PRIS, 1-184
- PRNHNDSHK, 1-187
- PRNPRTPIB, 1-187
- PRNPRTPARA, 1-187
- PRNPRTSERI, 1-187
- PRNTRAUTF, 1-187
- PRNTRBAUD, 1-187
- PRNTRFORF, 1-187
- PRNTYP540, 1-187
- PRNTYPDJ, 1-187
- PRNTYPEP, 1-187
- PRNTYPLJ, 1-187
- PRNTYPPJ, 1-187
- PRNTYPTJ, 1-187
- process of measuring, 7-3
- processing after taking
 - measurement data, 7-4
- processing data chain, 5-1
- program debugging, 7-8
- program development features, 7-8
- program example
 - operation using talker/listener mode, 7-102
 - plotting plot files stored on disk, 7-111
 - printing plot files stored on disk, 7-111
 - using the learn string, 7-79
- program information, 7-8
- PRx,y, 3-21
- PSC. *See* *PSC
- PSOFT, 1-162
- PTEXT, 1-162
- PTOS, 1-189
- PU, 3-21
- PURG, 1-189
- purge file, 1-189
- PWMCEACS, 1-190
- PWMCOFF, 1-190
- PWMCONES, 1-190
- PWRLOSS, 1-191
- PWRMCAL, 1-191
- pwrmttr cal, 1-29
- PWRR, 1-192
- PWRRMAN, 1-192
- PWRRPAUTO, 1-192
- Q**
 - Q (sequence command), 1-192
 - query command, 4-2
 - querying commands, 2-14
 - queue for output, 4-2
- R**
 - R, 1-141
 - R (remote operation), 3-11
 - R + jX mkr, 1-236
 - R channel, external, 1-88
 - RAID, 1-193
 - RAIISOL, 1-193
 - RAIRESP, 1-193
 - range
 - power, 1-180, 1-182
 - raw data
 - creating a calibration, 7-38
 - include with disk files, 1-87
 - raw data array, 1-87
 - raw measured data, 5-3
 - raw offsets, 7-42
 - RAWOFFS, 1-194
 - Re/Im mkr, 1-173, 1-236
 - read file titles, 1-200
 - READDATE, 1-195
 - reading analyzer data, 4-1
 - READTIME, 1-195
 - REAL, 1-195
 - RECA, 1-196
 - recall cal port 1 softkey, 1-30
 - recall cal port 2 softkey, 1-30
 - recall cal set
 - port 1, 1-30
 - port 2, 1-30
 - recall colors, 1-197
 - recall register, 1-196
 - recall sequence, 1-133
 - RECAREG, 1-196
 - receiver cal sweep, 1-257
 - receiver calibration, 1-200
 - RECO, 1-197
 - REF, 1-198
 - REFD, 1-198
 - reference line
 - color, 1-166
 - reference line color, 1-41
 - reference marker, 1-58
 - reference position, 1-199
 - reference value, 1-199
 - REFL, 1-198
 - reflection 1-port softkey, 1-26
 - reflection calibration, 1-198
 - reflection measurement, 1-207, 1-213
 - reflection softkey, 1-198
 - reflection standard classes, 1-35
 - REFOP, 1-198
 - REFP, 1-199
 - REFT, 1-200
 - REFV, 1-199
 - register
 - cleas, 1-39
 - service request enable, 3-16
 - register B, event-status, 1-84
 - register recall, 1-196
 - register titles, 1-45
 - register, clear, 1-36
 - register, event-status, 1-84, 1-85
 - REIC, 1-200
 - remote enable (REN) control line, 3-9
 - remote mode, 2-13, 3-15
 - remote operation (R), 3-11
 - remote/local capability (RL1), 3-11
 - remove adapter, 1-146
 - REN (remote enable) control line, 3-9
 - report generation, 7-102
 - reporting of errors, 6-1
 - reporting on status, 6-3
 - reporting status, 7-69
 - RERCDONE, 1-201
 - RESC, 1-201
 - RESD, 1-202
 - reset, 1-183, 1-212
 - reset color, 1-211
 - reset device, 3-16
 - resp & isol cal, 1-193
 - RESPDONE, 1-203
 - response & isol'n cal, 1-25
 - response & isol'n softkey, 1-26
 - response cal, 1-25
 - response calibration, 1-203
 - response softkey, 1-26
 - REST, 1-203
 - restart averaging, 1-14
 - restart measurement, 1-203
 - restore display, 1-202
 - resume cal sequence, 1-201
 - resume cal sequence softkey, 1-201
 - retrace power, 1-204
 - retrace pwr softkey, 1-204
 - reverse isolation, 1-205
 - reverse match, 1-205

- reverse transmission, [1-205](#)
- REVI, [1-205](#)
- revision, firmware, [1-237](#)
- REVM, [1-205](#)
- REVT, [1-205](#)
- RF > LO, [1-206](#)
- RF LO, [1-206](#)
- RFGTLO, [1-206](#)
- RFLP, [1-207](#)
- RFLTLO, [1-206](#)
- right lower, [1-208](#)
- right upper, [1-208](#)
- RIGL, [1-208](#)
- RIGU, [1-208](#)
- ripple test
 - band start frequency, [1-210](#)
 - band stop frequency, [1-209](#)
 - clear frequency band list, [1-39](#)
 - display limits, [1-208](#)
 - display measured value, [1-211](#)
 - edit limit list, [1-81](#)
 - maximum ripple, [1-209](#)
 - on/off control, [1-210](#)
 - output all band measured values, [1-158](#)
 - output measured value, [1-158](#)
 - output pass/fail status, [1-158](#)
 - outputting failed points, [1-155](#)
 - selecting frequency bands, [1-227](#)
- RL1 (complete remote/local capability), [3-11](#)
- RLIMLINE, [1-208](#)
- RLIMM, [1-209](#)
- RLIMSTP, [1-209](#)
- RLIMSTR, [1-210](#)
- RLIMTEST, [1-210](#)
- RLIMVAL, [1-211](#)
- round seconds softkey, [1-230](#)
- routing debugging, [7-8](#)
- RS, [3-21](#)
- RSCO, [1-211](#)
- rules for code naming, [3-2](#)
- S**
- S (service request asserted by the analyzer), [3-11](#)
- S11, [1-207](#), [1-213](#)
- s11 1-port cal, [1-25](#)
- s11 1-port softkey, [1-26](#)
- s11 refl, [1-266](#)
- s11/s12 enhanced response softkey, [1-26](#)
- S12, [1-213](#)
- S21, [1-213](#), [1-265](#)
- S22, [1-213](#)
- s22 1-port cal, [1-25](#)
- s22 1-port softkey, [1-26](#)
- s22 refl, [1-266](#)
- s22/s21 enhanced response softkey, [1-26](#)
- SADD, [1-214](#)
- SAMC, [1-194](#), [1-214](#)
- sampler correction, [1-214](#), [7-42](#)
- sampler offsets, [1-194](#), [7-42](#)
- saturation, color, [1-42](#)
- SAV1, [1-215](#)
- SAV2, [1-215](#)
- SAVC, [1-215](#)
- SAVE, [1-216](#)
- save
 - measurements as graphic files, [1-217](#)
 - measurements as text files, [1-217](#)
- save colors, [1-254](#)
- save file, [1-252](#)
- save register, [1-216](#)
- save sequence, [1-253](#)
- save user cal kit, [1-218](#)
- save using ascii, [1-219](#)
- save using binary, [1-219](#)
- SAVECSV, [1-217](#)
- SAVEJPG, [1-217](#)
- SAVEREG, [1-216](#)
- SAVEUSEK, [1-218](#)
- SAVT, [1-215](#)
- SAVUASCI, [1-219](#)
- SAVUBINA, [1-219](#)
- SCAL, [1-219](#)
- scale
 - auto, [1-12](#)
- scale plot, [1-220](#)
- SCAP, [1-220](#)
- SCAPFULL>, [1-220](#)
- SCAPGRAT, [1-220](#)
- SDEL, [1-221](#)
- SDON, [1-222](#)
- SEAL, [1-223](#)
- SEAMAX, [1-223](#)
- SEAMIN, [1-223](#)
- SEAOFF, [1-223](#)
- SEAR, [1-223](#)
- search, marker, [1-223](#)
- SEATARG, [1-223](#)
- second harmonic, [1-100](#)
- SEDI, [1-224](#)
- SEGIFBW, [1-225](#)
- segment
 - add, [1-214](#)
 - close, [1-222](#)
 - delete, [1-221](#)
 - edit, [1-224](#)
 - min/max, [1-145](#)
- segment done softkey, [1-222](#)
- segment edit done, [1-80](#)
- segment select, [1-245](#)
- segment sweep, [1-9](#)
- SEGPOWER, [1-225](#)
- SELBAND, [1-227](#)
- select first point, [1-226](#)
- select last point, [1-226](#)
- select point number, [1-226](#)
- select segment number, [1-226](#)
- select sequence, [1-192](#), [1-229](#)
- self-test, [3-17](#)
- SELL, [1-228](#)
- SELMAXPT, [1-226](#), [7-126](#)
- SELMINPT, [1-226](#), [7-126](#)
- SELPT, [1-226](#), [7-126](#)
- SELSEG, [1-226](#), [7-126](#)
- sensor input selection, [1-272](#)
- SEQ, [1-102](#), [1-192](#), [1-229](#)
- sequence
 - clear, [1-38](#)
 - continue, [1-43](#)
 - do, [1-67](#)
 - duplicate, [1-69](#)
 - gosub, [1-99](#)
 - load, [1-133](#)
 - modify, [1-147](#)
 - modify done, [1-67](#)
 - new, [1-147](#)
 - pause to select, [1-189](#)
 - print, [1-185](#)
 - recall, [1-133](#)
 - select, [1-192](#), [1-229](#)
 - store, [1-253](#)
 - title, [1-262](#)
- sequence branching, [1-102](#)
- sequence pause, [1-165](#)
- sequence status bit, [1-10](#)
- sequence wait, [1-229](#)
- sequencing, [1-102](#)
- SEQWAIT, [1-229](#)
- serial poll, [3-15](#)
- service request, [7-72](#)
 - enable register, [3-16](#)
- service request (SRQ) control line, [3-9](#)
- service request asserted by the analyzer (S), [3-11](#)
- set bandwidth, [1-103](#)
- set bit, [1-230](#)
- set day softkey, [1-230](#)
- set freq low pass softkey, [1-230](#)
- set hour softkey, [1-230](#)
- set minutes softkey, [1-230](#)
- set month softkey, [1-230](#)
- set reference
 - reflect, [1-230](#)

- thru, 1-230
- set seconds softkey, 1-230
- set year softkey, 1-230
- set z0 softkey, 1-230
- SETBIT, 1-230
- SETDATE, 1-230
- SETF, 1-230
- SETRREFL, 1-230
- SETRTHRU, 1-230
- SETTIME, 1-230
- setting GPIB addresses, 3-14
- setting up the instrument, 7-3
- setup diagram, mixer measurements, 1-273
- SETZ, 1-230
- SH1 (full-source handshake), 3-11
- SHOM, 1-231
- short
 - std type, 1-249
- show menus, 1-231
- SIh,w, 3-21
- simmcal, 7-38
- SING, 1-232
- single bus concept, 3-12
- single point type, 1-123
- single seg sweep, 1-245
- single sweep, 1-232
- SL, 3-22
- SLID, 1-233
- sliding (load) softkey, 1-233
- sliding load, 1-233
 - done, 1-233
 - set, 1-233
- SLIL, 1-233
- SLIS, 1-233
- SLOP, 1-234
- SLOPE, 1-234
- sloping line type, 1-123
- SLOPO, 1-234
- SM8, 1-235
- SMIC, 1-236
- SMIMGB, 1-236
- SMIMLIN, 1-236
- SMIMLOG, 1-236
- SMIMRI, 1-236
- SMIMRX, 1-236
- Smith chart, 1-236
- SMOOAPER, 1-237
- SMOOO, 1-237
- smoothing, 1-237
- smoothing aperture, 1-237
- smoothing aperture softkey, 1-237
- smoothing on off softkey, 1-237
- SOFR, 1-237
- SOFT, 1-238
- softkey, 1-146, 1-238
- softkey labels, 1-278
- SOUP, 1-238
- source power, 1-177
- source power on/off, 1-238
- source power range, 1-182
- SPAN, 1-239
- S-parameters, 1-213
- SPECFWDM, 1-240
- SPECFWDT, 1-240
- specify class, 1-240
- specify class done, 1-34
- specify gate menu, 1-243
- specify points, 1-172
- SPECRESI, 1-240
- SPECRESP, 1-240
- SPECREVM, 1-240
- SPECREVT, 1-240
- SPECS11A, 1-240
- SPECS11B, 1-240
- SPECS11C, 1-240
- SPECS22A, 1-240
- SPECS22B, 1-240
- SPECS22C, 1-240
- SPECTLFT, 1-240
- SPECTLRM, 1-240
- SPECTLRT, 1-240
- SPECTRFM, 1-240
- SPECTRLL, 1-240
- SPECTRLR, 1-240
- SPECTRLT, 1-240
- SPECTRRM, 1-240
- SPECTTTFM, 1-240
- SPECTTTFT, 1-240
- SPECTTRM, 1-240
- SPECTTRT, 1-240
- SPEG, 1-243
- SPLD, 1-243
- SPLID, 1-244
- SPLID1, 1-244
- SPLID2, 1-244
- SPLID4, 1-244
- split display, 1-243, 1-244
- SPn, 3-22
- spur avoidance, 1-235, 7-42
- SR, 3-22
- SR1 (complete service request capabilities), 3-11
- SRE, 1-245
- SRE. See *SRE
- SRE?. See *SRE?
- SRQ (service request) control line, 3-9
- SSEG, 1-245
- STANA, 1-246
- STANB, 1-246
- STANC, 1-246
- STAND, 1-246
- standard
 - calibration, 1-246
- standard defined, 1-248
- standard definition, 1-57
- standard event status register, 3-16
- standard labelling, 1-115
- standard offsets, 1-151
- standard type, 1-249
- standard, calibration, 1-22
- standards done softkey, 1-198
- STANE, 1-246
- STANF, 1-246
- STANG, 1-246
- STAR, 1-247
- start frequency, 1-247
 - ripple test bands, 1-210
- statistics
 - marker, 1-142
- status bit definitions, 6-3
- status bit, sequence, 1-10
- status byte, 1-247, 3-16, 6-3, 6-6, 7-69
 - clearing, 3-16
- status constants, 7-131
- status indicators, 3-11
- status register, 1-85
- status register B, 1-84
- status reporting, 6-3, 7-69
- STB?, 1-247
- STB?. See *STB?
- STDD, 1-248
- STDT, 1-249
- STDTARBI, 1-249
- STDTDELA, 1-249
- STDTLOAD, 1-249
- STDTOPEN, 1-249
- STDTSHOR, 1-249
- step down, 1-68
- step size, 1-253
- step up, 1-271
- stepped list mode, 1-127, 7-88
- stepped sweep, 1-250
- STEPSWP, 1-250
- stimulus offset softkey, 1-122
- stimulus value
 - segment, 1-120
- STOP, 1-251
- stop frequency, 1-251
 - ripple test bands, 1-209
- STOR, 1-252
- storage
 - disk, 1-86, 1-110
 - internal memory, 1-110
- store sequence, 1-253
- store to disk, 1-252
- STORSEQ, 1-253

-
- STPSIZE, 1-253
 - string for calibration kit, 5-7
 - structure of command syntax, 3-4
 - structure of GPIB bus, 3-8
 - structure of status reporting, 6-3
 - SVCO, 1-254
 - SWEA, 1-255
 - sweep
 - hold, 1-101
 - power, 1-181
 - segment, 1-9, 1-245
 - sweep start, 1-256
 - sweep time, 1-255
 - sweep user-controlled, 7-8
 - sweep, stepped, 1-250
 - swept list mode, 1-127, 7-90
 - SWET, 1-255
 - SWPSTART, 1-256, 7-42
 - SWR, 1-256
 - synchronization, 7-69
 - syntax for commands, 3-2
 - syntax for output, 4-3
 - syntax structure, 3-4
 - syntax types, 3-5
 - system controller capabilities
 - (C1,C2,C3), 3-11
 - system setups, 7-79
 - reading calibration data, 7-81
 - system-controller mode, 3-12
 - T**
 - T (talk mode), 3-11
 - T6 (basic talker), 3-11
 - TAKCS, 1-257
 - take cal sweep, 1-258
 - take cal sweep softkey, 1-257
 - take rcvr cal sweep softkey, 1-257
 - TAKE4, 1-258
 - Take4 mode, 1-154, 1-194, 1-235, 1-256, 1-258, 7-42
 - TAKE4ON, 7-42
 - take-control command, 3-15
 - taking the measurement data, 7-4
 - TAKRS, 1-257
 - talk mode (T), 3-11
 - talker interface function, 3-7
 - talker/listener, 1-258
 - talker/listener mode, 3-13
 - talker/listener mode operation
 - example program, 7-102
 - TALKLIST, 1-258
 - TE0 (no extended talker capabilities), 3-11
 - TERI, 1-259
 - terminal impedance, 1-259
 - terminators, 3-4
 - TESS?, 1-259
 - test port selection, 1-269
 - test set switching, 1-47, 1-267
 - test setup calibration, 7-3
 - testset I/O, 1-268
 - testset sw softkey, 1-47, 1-267
 - text
 - color, 1-166
 - text color, 1-41
 - text files
 - saving as CSV, 1-217
 - ThinkJet, 1-187
 - third harmonic, 1-100
 - thru, 1-266
 - TIMDTRAN, 1-260
 - time, 1-195, 1-230
 - CW, 1-48
 - time domain, 1-260
 - gate menu, 1-243
 - low pass freq, 1-230
 - window, 1-277
 - time domain bandpass, 1-15
 - time domain gating, 1-97, 1-98
 - time specify, 1-255
 - time stamp, 1-260
 - time, sweep, 1-255
 - TIMESTAM, 1-260
 - TINT, 1-261
 - TITF, 1-262
 - TITF0, 1-262
 - TITL, 1-262
 - title
 - LCD, 1-262
 - title disk file, 1-262
 - title features, 1-262
 - title plot file, 1-262
 - title register, 1-262
 - title sequence, 1-262
 - title string to trace memory, 1-263
 - title to peripheral, 1-263
 - title to power meter, 1-263
 - title to printer, 1-263
 - TITP, 1-262
 - TITR, 1-262
 - TITREG, 1-262
 - TITSEQ, 1-262
 - TITSQ, 1-262
 - TITTMEM, 1-263
 - TITTPERI, 1-263
 - TITTPMTR, 1-263
 - TITTPRIN, 1-263
 - trace memory, 5-3
 - trace-data formats and transfers, 7-56
 - trace-data transfers, 4-8
 - trace-related data, 4-4
 - TRACK, 1-265
 - tracking, marker search, 1-265
 - TRAD, 1-264
 - TRAN, 1-264
 - transfer of data, 3-9
 - transferring plot-file data to a plotter example program, 7-111
 - transferring plot-file data to a printer example program, 7-111
 - transferring the measurement data, 7-4
 - transfers and formats of trace-data, 7-56
 - transfers of trace-data, 4-8
 - transform, 1-260
 - transform demodulation, 1-60
 - transform window, 1-277
 - transmission cal, 1-264
 - transmission measurement, 1-213, 1-265
 - transmission/reflection enhanced response softkey, 1-26
 - TRAOP, 1-264
 - TRAP, 1-265
 - TRG. *See* *TRG
 - trigger
 - continuous, 1-43, 1-95
 - external, 1-89
 - hold, 1-101
 - manual, 1-136
 - number of groups, 1-148
 - single, 1-232
 - trigger device, 3-15
 - trip power, 1-181
 - tri-state drivers (E2), 3-11
 - TRL 3.5mm 85052C softkey, 1-28
 - trl/lrm 2-port softkey, 1-26
 - trl/lrm cal, 1-25
 - TRL/LRM calibration, 1-215
 - TRLL1, 1-266
 - TRLL2, 1-266
 - TRLR1, 1-266
 - TRLR2, 1-266
 - TRLT, 1-266
 - troubleshooting, 2-11, 2-13
 - TSSWI, 1-267
 - TST?, 1-267
 - TST?. *See* *TST?
 - TSTIOFWD, 1-268
 - TSTIOREV, 1-268
 - TSTP, 1-269
 - TSTPP1, 1-269
 - TSTPP2, 1-269
 - TTL out high, 1-270
 - TTL out high/low, 1-270
 - TTL out low, 1-270
 - TTLHPULS, 1-270

-
- TTLLPULS, [1-270](#)
 - TTLOH, [1-270](#)
 - TTLOL, [1-270](#)
 - tuned receiver mode, [1-109](#)
 - two channel display, [1-50](#)
 - two-grid display, [1-244](#)
 - two-port calibration, [1-25](#), [1-198](#),
[1-205](#), [1-215](#), [1-264](#), [1-266](#)
 - types of syntax, [3-5](#)
 - U**
 - units, [3-4](#)
 - units as a function of display
format, [1-161](#), [4-5](#)
 - universal commands, [3-14](#)
 - UP, [1-271](#)
 - up arrow key, [1-271](#)
 - upper limit
segment, [1-120](#)
 - use pass control, [1-272](#)
 - use sensor A, [1-272](#)
 - use sensor B, [1-272](#)
 - USEPASC, [1-272](#)
 - user graphics
include with disk files, [1-87](#)
 - user kit softkey, [1-28](#)
 - user-controllable sweep, [7-8](#)
 - user-defined cal kits, [1-27](#)
 - user-defined kit
save, [1-218](#)
 - USESENSA, [1-272](#)
 - USESENSB, [1-272](#)
 - V**
 - valid characters, [3-3](#)
 - velocity factor, [1-273](#)
 - velocity factor softkey, [1-273](#)
 - VELOFACT, [1-273](#)
 - VIEM, [1-273](#)
 - view measurement, [1-273](#)
 - view mixer measurement, [1-273](#)
 - Visual BASIC, [2-3](#)
 - Visual C++, [2-3](#)
 - VOFF, [1-274](#)
 - volume number, [1-63](#)
 - VXIplug&play driver, [2-3](#)
 - W**
 - WAIT, [1-274](#)
 - wait x softkey, [1-229](#)
 - waiting-for-group-execute-trigger
[3-15](#)
 - waiting-for-reverse-get bit, [3-15](#)
 - warning
color, [1-166](#)
 - warning color, [1-41](#)
 - WAVD, [1-275](#)
 - WAVE, [1-275](#)
 - waveguide, [1-275](#)
 - waveguide adapter, [1-5](#)
 - waveguide cutoff, [1-275](#)
 - waveguide delay, [1-275](#)
 - WIDT, [1-276](#)
 - width value, [1-276](#)
 - widths, search, [1-276](#)
 - WIDV, [1-276](#)
 - WINDMAXI, [1-277](#)
 - WINDMINI, [1-277](#)
 - WINDNORM, [1-277](#)
 - WINDOW, [1-277](#)
 - window
maximum, [1-277](#)
 - minimum, [1-277](#)
 - normal, [1-277](#)
 - shape, [1-277](#)
 - value, [1-277](#)
 - window softkeys, [1-277](#)
 - WINDUSEM, [1-277](#)
 - WRSK, [1-278](#)
 - X**
 - xmit control, [1-170](#), [1-187](#)
 - Z**
 - Z0, [1-230](#)