


SERVICE MANUAL

TS-530S/SP/D* (*: KOREA MARKET ONLY)

SP-230, VFO-240, AT-230, PK-3*

HF TRANSCEIVER

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

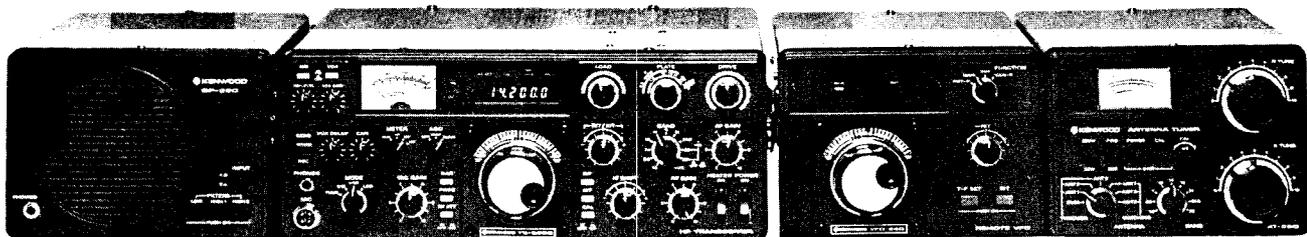

SP-230

TS-530S

VFO-240

AT-230

CONTENTS

SPECIFICATION	2	COUNTER UNIT (X54-1540-00)	19
CIRCUIT DESCRIPTION	3	PARTS LIST	20
AC VOLTAGE CONVERSION	9	PACKING	27
INSIDE VIEWS	10	DISASSEMBLY	28
PC BOARD VIEWS/CIRCUIT DIAGRAMS		ADJUSTMENTS	33
RECTIFIER UNIT (X43-1370-02)	11	LEVEL DIAGRAM	45
ANT RELAY BOARD (J25-3015-04)	11	VFO-240	46
SWITCH BOARD (J25-3016-03)	11	AT-230	48
FINAL UNIT (X56-1380-00)	11	SCHMATIC ABBREVIATION	51
VFO UNIT (X40-1170-00)	12,13	SCHMATIC DIAGRAM (S TYPE)	53
AF UNIT (X49-1150-00)	12,13	SCHMATIC DIAGRAM (SP/D TYPE)	53,54
IF UNIT (X48-1310-00)	14,15	BLOCK DIAGRAM	54
PLL UNIT (X50-1680-01)	16,17	SP-230	BACK COVER
RF UNIT (X44-1360-01)	18	PK-3	BACK COVER

SPECIFICATIONS

[GENERAL]

Frequency Range	160 m Band 1.8 ~ 2.0 MHz 80 m Band 3.5 ~ 4.0 MHz 40 m Band 7.0 ~ 7.3 MHz 30 m Band 10.1 ~ 10.15 MHz (10.0 MHz WWV) 20 m Band 14.0 ~ 14.35 MHz * 17 m Band 18.068 ~ 18.168 MHz 15 m Band 21.0 ~ 21.45 MHz * 12 m Band 24.89 ~ 24.99 MHz 10 m Band 28.0 ~ 29.7 MHz
Modes	SSB/CW
Frequency Stability	Within 1 kHz during the first hour after 1 minute of warmup. Within 100 Hz during any 30 minute period thereafter.
Power Requirement	110VAC/120VAC/240VAC, 50/60 Hz
Power Consumption	Transmit: 295 watts Receive: 27 watts (with heaters off)
Dimensions	333 (13.3) x 133 (5.3) x 333 (13.3) mm (inch)
Weight	12.8 kg (28.2 lbs)

[TRANSMITTER]

	TS-530S/SP	TS-530D
* Final Power Input.....	220W PEP for SSB operation 180W DC for CW operation	160W PEP for SSB operation 130W DC for CW operation
Audio Input Impedance	50Ω ~ 50 kΩ	
RF Output Impedance	50Ω ~ 75Ω	
Carrier Suppression	Better than 40 dB	
Sideband Suppression	Better than 50 dB	
Spurious Radiation	Better than 60 dB	
Harmonic Radiation	Better than 40 dB	
Audio Freq. Response	400 to 2,600 Hz, within -6 dB	
ALC Input	-10V DC Max	
Linear Amp Relay Contact Rating	100V DC 1A	

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

[RECEIVER]

Receiver Sensitivity	0.25 μV at 10 dB S + N/N
Image Ratio	Better than 60 dB
IF Rejection	Better than 70 dB
Receiver Selectivity	
SSB/CW	2.4 kHz (-6 dB), 4.2 kHz (-60 dB)
CW Optional Filter	
YK-88C 500 Hz (-6 dB), 1.5 kHz (-60 dB)	
YK-88CN 270 Hz (-6 dB), 1.1 kHz (-60 dB)	
SSB Optional Filter	
YK-88SN 1.8 kHz (-6 dB), 3.3 kHz (-60 dB)	
Notch-filter Attenuation	Better than 20 dB (1.5 kHz)
Audio Output Impedance	8 ~ 16Ω
Audio Output	1.5W (8Ω)

NOTE: The circuit and ratings may be changed without notice due to developments in technology.

NOTE: For the TS-530SP shipped to the USA, and for the TS-530D.

* Will transmit on the 17 and 12 meter bands.

Diodes installed for preventing accidental transmission before government Amateur authorization.

CIRCUIT DESCRIPTION

INTRODUCTION

The TS-530 is a single conversion transceiver with an intermediate frequency of 8.83 MHz.

In transmission, an SSB signal generated at 8.83 MHz is mixed with the PLL local oscillator output to produce the final transmission frequency. The circuitry is hybrid with vacuum tubes used only in the driver (12BY7A) and final-stage power amplifier (6146B's).

The PLL circuit generates a heterodyne frequency for each band and a counter reference signal from a single crystal oscillator.

The TS-530 incorporates an IF SHIFT circuit, VOX (also used for CW semi-break-in), side tone circuit, speech processor, noise blanker, XTAL calibrator, and etc.

RECEIVER CIRCUIT

The signal coming from the antenna is routed through a step-up antenna coil via an RF ATT switch and IF trap. MOS FET Q1,3SK73 amplifies this signal. Approximately 9 dB of negative feedback is applied to the RF amplifier to reduce noise and expanded dynamic range. The signal passes through buffer amplifier Q2, 2SK125 and is mixed with the PLL VCO output by a balanced mixer (Q3,Q4 : 2SK125). The DOUBLE SIDE-BAND signal is now converted to the intermediate frequency, 8.83 MHz.

Entering the IF unit, this signal is amplified by Q1(2SK125), passes through ceramic filter CF1 and the NB gating circuit, and is applied to the crystal filter whose center frequency is 8.83 MHz.

The SINGLE SIDE-BAND signal leaving the crystal filter is amplified by Q2~Q4(3SK73) and is then demodulated to an audio signal by the product detector consisting of D16~D19 (1N60 x4).

In the AF unit, the audio signal is amplified by Q2(2SC2240) passes through the AF GAIN control, and after being amplified by the power amplifier Q6 (MB3712), drives the speaker.

Item	Rating
Nominal center frequency (fo)	8.830 MHz
3dB Bandwidth	fo±5 kHz or more, total 25 kHz or more
20dB Bandwidth	90 kHz or less
Ripple (Within 3dB bandwidth)	1 dB or less
Spurious response	14 dB or more within fo±1.5 MHz
Input and output impedance	330Ω

**Table 1 Ceramic filter (L72-0324-05)
SFE8.83MF (IF unit, CF1)**

Item	Rating
Center frequency	8830 kHz
Center frequency deviation	Within ±150 Hz at 6 dB
Pass bandwidth	±1.2 kHz or more at 6 dB
Attenuation bandwidth	±1.5 kHz or less at 20 dB
	±2.2 kHz or less at 60 dB
	±3.0 kHz or less at 80 dB
Ripple	2 dB or less
Loss	6 dB or less
Guaranteed attenuation	80 dB or more within ±3 kHz to ±1 MHz
Input and output impedance	monolithic 600Ω//15pF

**Table 2 Crystal (monolithic) filter (L71-0208-05)
YK-88S (IF unit, XF1)**

TRANSMITTER CIRCUIT

Audio input picked up by the microphone comes to the IF unit and is amplified by Q11, 12, 15 and 16. The input circuit adapts to any microphone impedance of from 500 ohms to 50 kohms. This amplified signal is converted into a DSB signal by the balanced modulator D27~D30 (1N60 x4), passes through buffer amplifier Q18 (2SK19) and an 8.83 MHz crystal filter, and the output appears as a SSB signal. The SSB signal is amplified by Q2 (3SK73) and is applied to the transmitter mixer in the RF unit. The transmitter mixer is a double balanced mixer consisting of Q6 and Q7 (3SK73), which mixes the SSB signal with the PLL VCO output to generate the final transmission frequency. The signal is then amplified by the driver (V1 : 12BY7A) and then by the final power amplifier (two 6146B's) and is applied to the antenna via a π-matching network.

PLL CIRCUIT

The PLL signal is synthesized from the VFO, CAR and VCO outputs. The TS-530S employs a programmable divider in the PLL to synthesize the heterodyne frequency from the standard reference oscillator frequency. This simplifies the PLL circuit by eliminating the need for a separate HET XTAL for each band.

Frequency organization of the PLL circuit is shown in Fig. 1, the circuit diagram in Fig. 2, and frequency organization in other circuits is summarized in Table 4. Please refer to Fig. 1 when reading the following description of PLL circuit operation. MIX (3), a double balanced mixer, mixes the CAR output with the VFO output. MIX (2), which operates for the 18MHz band and above, mixes either 10 MHz, in the 14 and 18 MHz bands, or 20 MHz, in the 21, 24.5 and 28 MHz bands, with the output of MIX (3) to generate the appropriate frequency needed for each band, as shown in Table 4.

CIRCUIT DESCRIPTION

This is mixed with the VCO output for each band by MIX (1) to a frequency given in **Table 4**, which is then routed through LPF (1), amplified, and wave-shaped to a digital signal. A programmable divider divides this signal into a 500 kHz output. This programmable divider is preset, as shown in **Table 4**, by the BCD signal which is counter-generated from information coming from the band switch. The phase comparator used is a Motorola MC4044P. The loop filter is made of completely discrete components to minimize VCO spurious content. Six VCOs cover all bands. If the PLL unlocks for any reason, it will be detected from the phase comparator output. This will turn off the VCO output to prevent spurious radiation and, at the same time, the display will be blanked to inform the operator of unlock status.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

BAND	RX, Tx frequency (MHz)	VCO (MHz)	MIX (1) input (MHz)	MIX (1) output (MHz)	Division ratio	DCBA
1.5	1.5 ~2.0	10.33 ~10.83	14.33 ~14.83	4.0	1/8	1 0 0 0
3.5	3.5 ~4.0	12.33 ~12.83	14.33 ~14.83	2.0	1/4	1 1 0 0
7	7.0 ~7.5	15.83 ~16.33	14.33 ~14.83	1.5	1/3	1 1 0 1
10	10.0 ~10.5	18.83 ~19.33	14.33 ~14.83	4.5	1/9	0 1 1 1
14	14.0 ~14.5	22.83 ~23.33	24.33 ~24.83	1.5	1/3	1 1 0 1
18	18.0 ~18.5	26.83 ~27.33	24.33 ~24.83	2.5	1/5	1 0 1 1
21	21.0 ~21.5	29.83 ~30.33	34.33 ~34.83	4.5	1/9	0 1 1 1
24.5	24.5 ~25.0	33.33 ~33.83	34.33 ~34.83	1.0	1/2	1 1 1 0
28	28.0 ~28.5	36.83 ~37.33	"	2.5	1/5	1 0 1 1
28.5	28.5 ~29.0	37.33 ~37.83	"	3.0	1/6	1 0 1 0
29	29.0 ~29.5	37.83 ~38.33	"	3.5	1/7	1 0 0 1
29.5	29.5 ~30.0	38.33 ~38.83	"	4.0	1/8	1 0 0 0

Table 3 Frequency chart

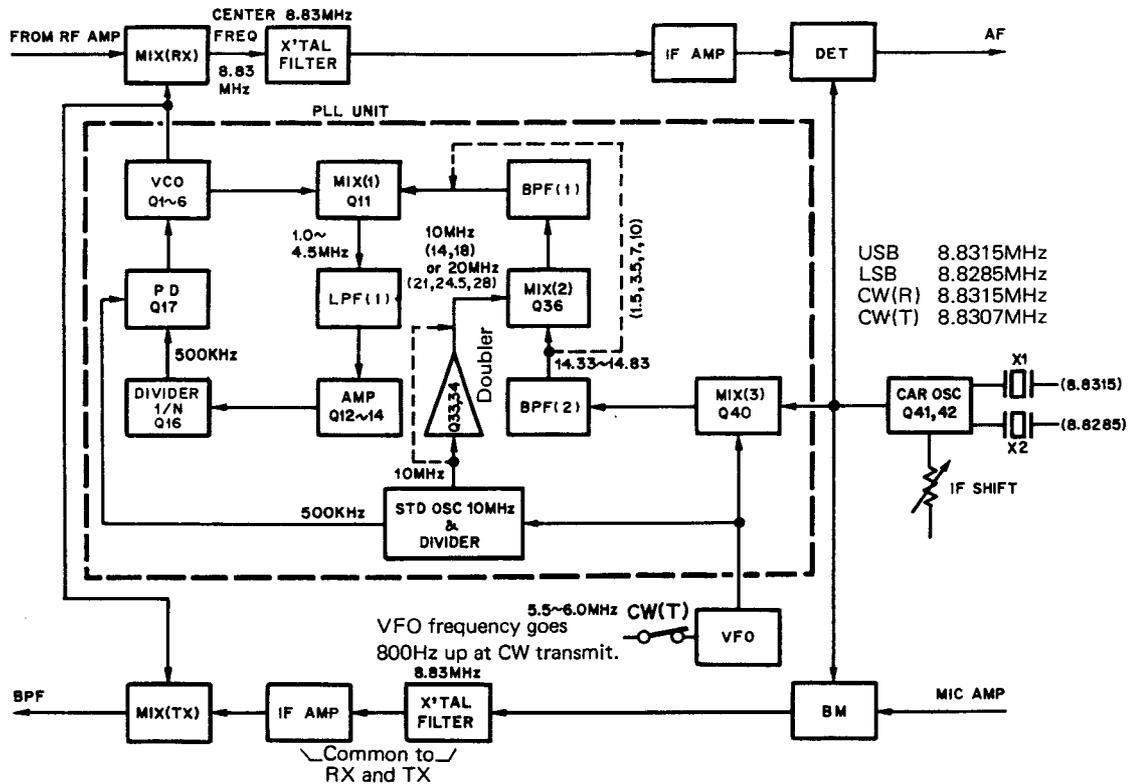


Fig. 1 TS-530 Frequency configuration

CIRCUIT DESCRIPTION

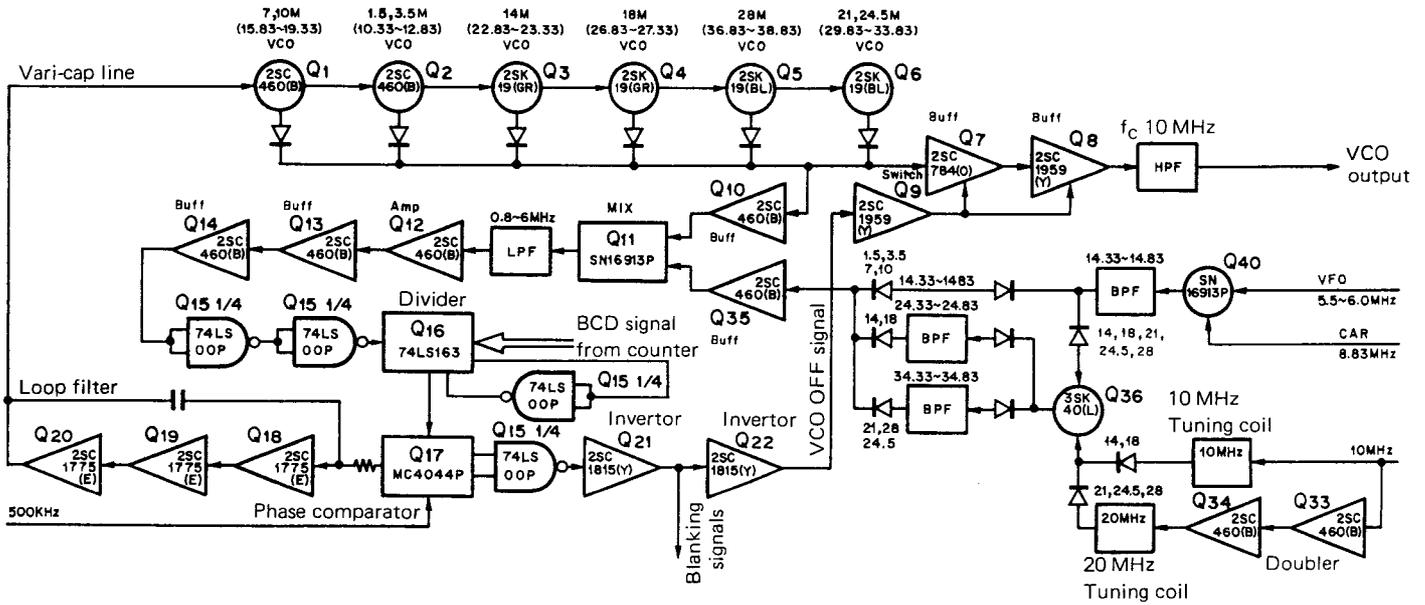


Fig. 2 TS-530 PLL circuit configuration

COUNTER

This counts the 500 kHz to 1 MHz signal which the PLL unit generates by mixing the VFO output with 5 MHz (halved from the 10 MHz reference frequency). Gate, latch, and preset pulses are generated from a 10 Hz pulse generated by dividing 1 kHz, supplied from the PLL, by 100.

BAND	100K	1 M	10M	DCBA	0.5	BAND	100K	1 M	10M	DCBA	0.5
1.5	0	1	0	1 0 0 0	H	21	5	0	2	0 1 1 1	L
3.5	0	3	0	1 1 0 0	H	24.5	0	4	2	1 1 1 0	H
7	5	6	0	1 1 0 1	L	28	5	7	2	1 0 1 1	L
10	5	9	0	0 1 1 1	L	28.5	0	8	2	1 0 1 0	H
14	5	3	1	1 1 0 1	L	29	5	8	2	1 0 0 1	L
18	5	7	1	1 0 1 1	L	29.5	0	9	2	1 0 0 0	H

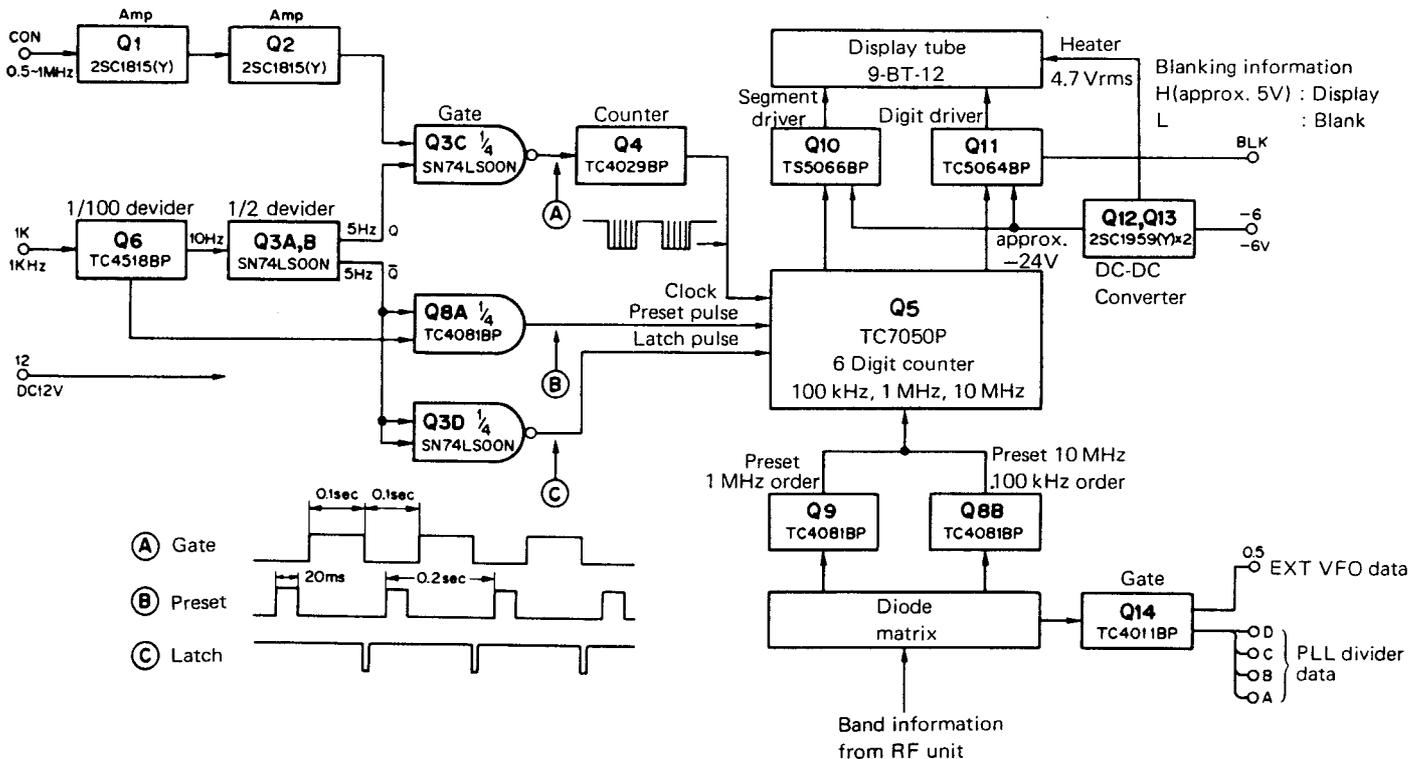


Fig. 3 Counter unit block diagram

CIRCUIT DESCRIPTION

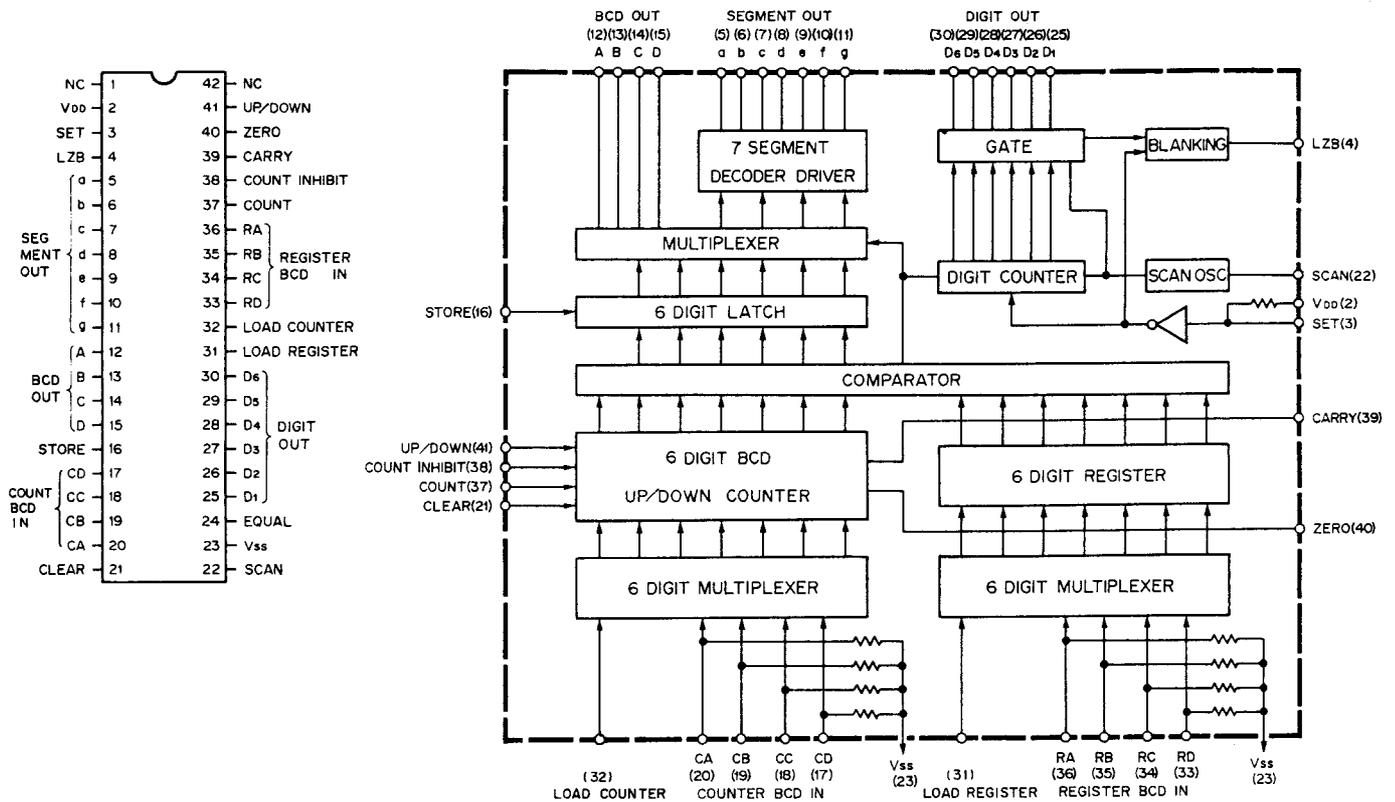


Fig. 4 TS5070P (Counter unit, Q5)


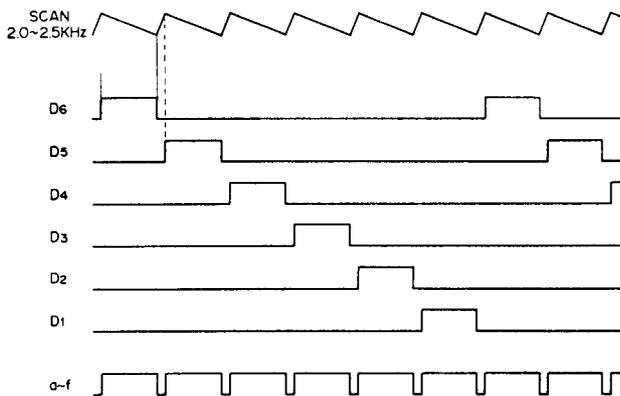


Fig. 5 TC5070P Timing chart

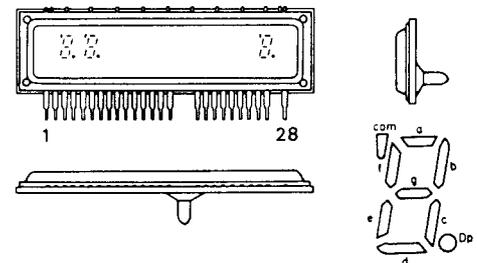

PIN NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14
CONNECTION	F	Nc	G _a	Nc	Nc	G _b	g	f	G ₇	e	d	G ₆	Nc	Nc
	15	16	17	18	19	20	21	22	23	24	25	26	27	28
	G _s	N _p	N _p	G ₄	D _p	G ₃	c	b	G ₂	a	COM	G ₁	N _p	F

Fig. 6 Indicating tube 9-BT-12

Q5 (TC5070P) is a presettable, 6-digit BCD counter which incorporates a 6-digit latch, 6-digit dynamic drive digital counter, and 7-segment decoder/driver. Band information supplied from the RF unit is applied to a diode matrix to preset the 100 kHz, 1 MHz and 10 MHz digits. Preset values are given in Fig. 3. For instance, to preset 14.000 MHz, with a 500 kHz counter input signal, the 10 MHz value is preset to 1, 1 MHz to 3, and 100 kHz to 5, and the 500 kHz

counter input signal is subtracted from 14.000 MHz. (If no counter input signal were present, 13.500 MHz would be displayed). Q5 supplies the display tube drivers with 7-segment information and dynamic drive control signals to light the fluorescent display tube.

In the counter unit, a diode matrix generates frequency division information and supplies the PLL unit with this information. If the PLL unlocks, a BLK (Blanking Low) signal will be applied to the digit driver IC (Q11) to blank the fluorescent display tube.

CIRCUIT DESCRIPTION

CAR OSCILLATOR

The CAR oscillator consists of a crystal controlled oscillator which uses two crystals : one for LSB and the other for USB and CW . Frequencies generated are shown in **Fig. 1**. The oscillating frequency can be varied by the IF SHIFT control during reception.

VFO

The VFO range is 5.5~6.0 MHz. Its oscillating frequency is automatically shifted 800 Hz up during CW transmission so that the actual operating frequency is always displayed.

CIRCUIT FEATURES

1. Optional filters available

The TS-530 is equipped with an 8.83 MHz IF filter with a bandwidth of 2.4 kHz. Narrow filters are separately available.

Installation of optional filters

One or two of the YK88SN, YK88C and YK88CN optional filters can be installed in the TS-530. Jumpers A and B (for filter switching) on the IF unit must be repositioned as shown in the following table.

Install each optional filter in the specified position on the IF unit PC board. To install both a YK88C and YK88CN, install the YK88C in the SSB NARROW FILTER position and the YK88CN in the CW FILTER position.

Option filter YK-8800	MODE		SSB		CW	
	Jumper destination		NAR SW		NAR SW	
	B	A	OFF	ON	OFF	ON
SN	SSB	SSN	2.4 kHz	1.8 kHz	2.4 kHz	1.8 kHz
C	SSB	CW	2.4 kHz	Reception impossible	2.4 kHz	500 Hz
CN	SSB	CW	2.4 kHz	Reception impossible	2.4 kHz	270 Hz
SN + C	SSB	CW	2.4 kHz	1.8 kHz	2.4 kHz	500 Hz
	SSN	CW	2.4 kHz	1.8 kHz	1.8 kHz	500 Hz
SN + CN	SSB	CW	2.4 kHz	1.8 kHz	2.4 kHz	270 Hz
	SSN	CW	2.4 kHz	1.8 kHz	1.8 kHz	270 Hz
C + CN	SSN	CW	2.4 kHz	500 Hz	500 Hz	270 Hz

Table 4 Installation of optional filters

Item	Rating
Center frequency f_0	8830 kHz
Center frequency deviation	8830 kHz \pm 150 Hz at 6 dB
6 dB bandwidth	\pm 900 Hz or more
60 dB bandwidth	\pm 1800 Hz or less
Guaranteed attenuation	80 dB or more within f_0 \pm 2.5 kHz to \pm 1 MHz
Ripple	2 dB or less
Loss	3 dB \pm 2 dB
Input and output impedance	600 Ω // 15 pF

Table 5 SSB crystal filter (L71-0220-05) YK-88SN (option)

Item	Rating
Center frequency f_0	8830.7 kHz
Center frequency deviation	f_0 \pm 150 Hz at 6 dB
6 dB bandwidth	\pm 250 Hz or more
60 dB bandwidth	\pm 900 Hz or less
Ripple	2 dB or less
Loss	6 dB \pm 2 dB
Guaranteed attenuation	80 dB or more within f_0 \pm 2 kHz to \pm 1 MHz
Input and output impedance	600 Ω // 15 pF

Table 6 CW crystal filter (L71-0211-05) YK-88C (Option)

Item	Rating
Center frequency f_0	8830.7 kHz
Center frequency deviation	f_0 \pm 50 Hz at 6 dB
6 dB bandwidth	\pm 125 Hz or more
60 dB bandwidth	\pm 600 Hz or less
Ripple	2 dB or less
Loss	8 dB \pm 2 dB
Guaranteed attenuation	80 dB or more within f_0 \pm 2 kHz to \pm 1 MHz
Input and output impedance	600 Ω // 15 pF

Table 7 CW crystal filter (L71-0221-05) YK-88CN (Option)

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351894 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

CIRCUIT DESCRIPTION

2. IF SHIFT operation

The IF SHIFT circuit shifts the passband of the IF circuit without changing the receiving frequency. The relative position of the passband of the IF filter to the received signal is shifted when the IF SHIFT control is turned as shown in Fig. 7. The IF SHIFT circuit block diagram is shown in Fig. 8.

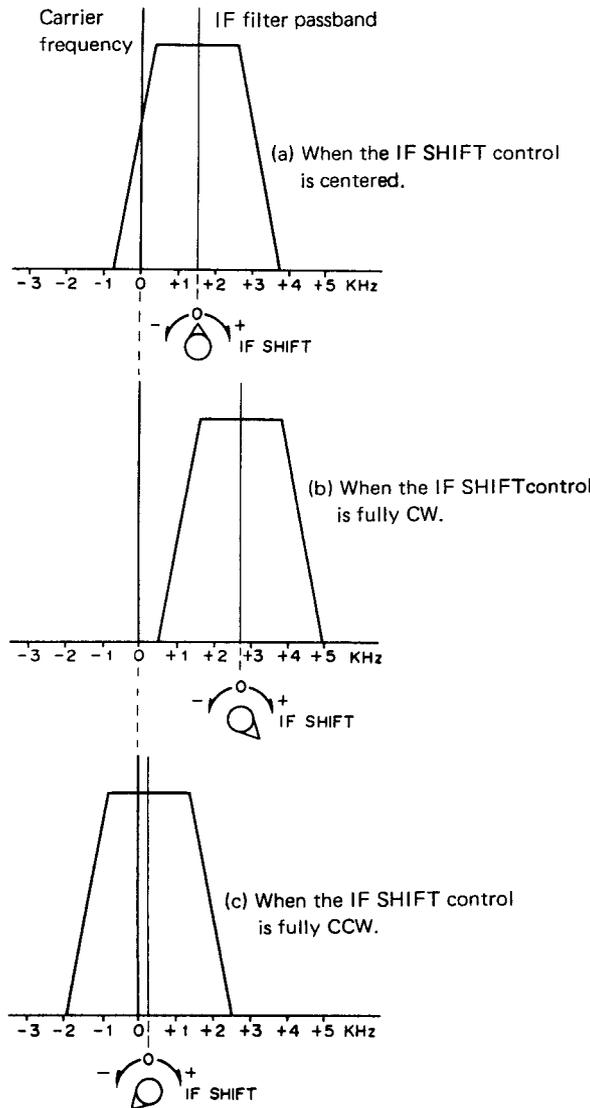


Fig. 7 IF SHIFT operation (for USB mode)

Frequencies within the PLL loop satisfy the following relationship.

$$N \cdot 500 \text{ kHz} = f_{BPF1} - f_{VCO} \tag{1}$$

where N : divisor of programmable divider

500 kHz : phase reference frequency

f_{BPF1} : input frequency to MIX (1)

f_{VCO} : VCO frequency

For example, in the case of 14 MHz reception, f_{BPF1} is given by eq. (1) as

$$f_{BPF1} = 10 \text{ MHz} + f_{BPF2} \tag{2}$$

where 10 MHz : band setting frequency

$$f_{BPF2} = f_{VFO} + f_{CAR} \tag{3}$$

where f_{VFO} : VFO frequency

f_{CAR} : carrier frequency

By substituting eq. (3) into eq.(2) and eq.(2) into eq.(1)

$$f_{VCO} = 10 \text{ MHz} + f_{VFO} + f_{CAR} - N \cdot 500 \text{ kHz}$$

$$\therefore f_{CAR} = f_{VCO} + (N \cdot 500 \text{ kHz} - 10 \text{ MHz} - f_{VFO})$$

Assuming that f_{VFO} is constant, when f_{CAR} is varied by $\pm \Delta f$,

$$\begin{aligned} f_{CAR} \pm \Delta f &= [f_{VCO} + (N \cdot 500 \text{ kHz} - 10 \text{ MHz} - f_{VFO})] \pm \Delta f \\ &= (f_{VCO} \pm \Delta f) + (N \cdot 500 \text{ kHz} - 10 \text{ MHz} - f_{VFO}) \end{aligned}$$

Thus, f_{VCO} varies by $\pm \Delta f$ as f_{CAR} is varied by $\pm \Delta f$.

The receiving frequency, f_R is given by

$$f_R = f_{VCO} - f_{CAR} \tag{4}$$

Therefore, when f_{CAR} is shifted by $+\Delta f$, receiving frequency f'_R is given by

$$\begin{aligned} f'_R &= (f_{VCO} + \Delta f) - (f_{CAR} + \Delta f) \\ &= f_{VCO} - f_{CAR} \end{aligned} \tag{5}$$

From equations (4) and (5),

$$f_R = f'_R$$

Thus the receiving frequency does not vary even if f_{CAR} is varied. However,

$$f_R = f_{VCO} - \text{IF frequency}$$

so the IF frequency varies as f_{VCO} varies.

This means that the relative position of the IF filter passband to the carrier position (of the received signal) is shifted by the same amount as the f_{VCO} variation.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

CIRCUIT DESCRIPTION/AC VOLTAGE CONVERSION

3. Speech processor [Part of IF unit (X48-1310-00)]

This is an audio compression speech processor. When the processor switch is OFF, the audio signal amplified by Q11 (on the IF unit) passes through buffer amplifier Q12 (2SC1815Y) and is then applied to the MIC pot via diode switch D24 (1S1555).

When the processor switch is ON, the audio signal amplified by Q12 is applied to the AGC-type speech processor consisting of Q13 (μ PC1158H2), Q14 (2SC1815Y) and D26 (1N60). The speech processor effectively increases the "talk power" of the audio signal and feeds it to MIC pot via diode switch D25 (1S1555).

When the processor is ON, the ALC time constant is shortened by turning Q30 (2SK30A) in the AF unit OFF to heighten processor effect.

4. RIT/XIT operation

Conventional RIT function is provided by the RIT/XIT control. By also turning the XIT switch ON, the transmission frequency is shifted to the same frequency as received under RIT control.

TS-530(K) AC VOLTAGE CONVERSION

To operate the TS-530S (K) on 240V AC, the power transformer split primaries must be rewired from parallel to series connection.

1. Unplug the AC power cable.
2. Remove the bottom cover.
3. Remove the jumper wires between the two ϕ terminals and two 120 terminals on the bottom of the power transformer.
4. Connect the adjacent 120 and ϕ terminals at the middle of the transformer. This will provide 240V AC operation. For 220V AC operation, change the wires from 120 to 100 winding.
5. Change the AC fuse from 6A to 4A. Tag the power cord at the back of the radio to indicate that the transformer is strapped for 240V AC, and the power fuse should be 4A, and not 6A.
6. Replace the bottom cover and reconnect power to verify your work.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk



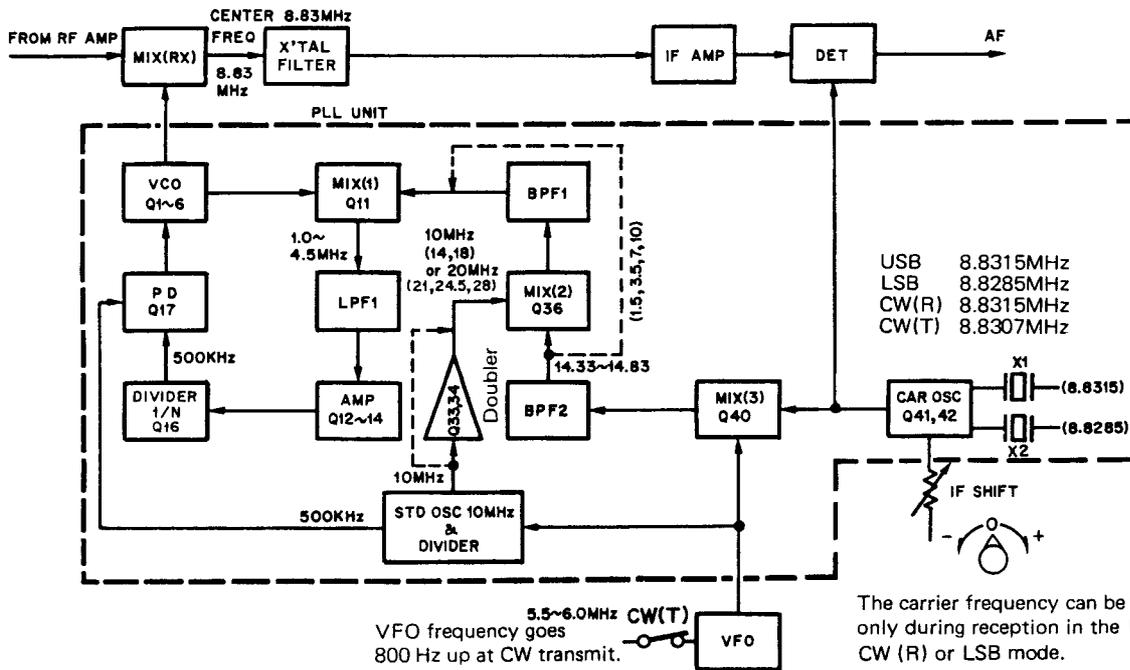



Fig. 8 IF SHIFT Block diagram

INSIDE VIEWS



TOP VIEW

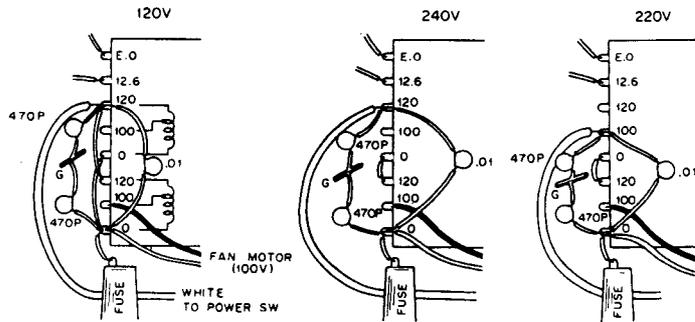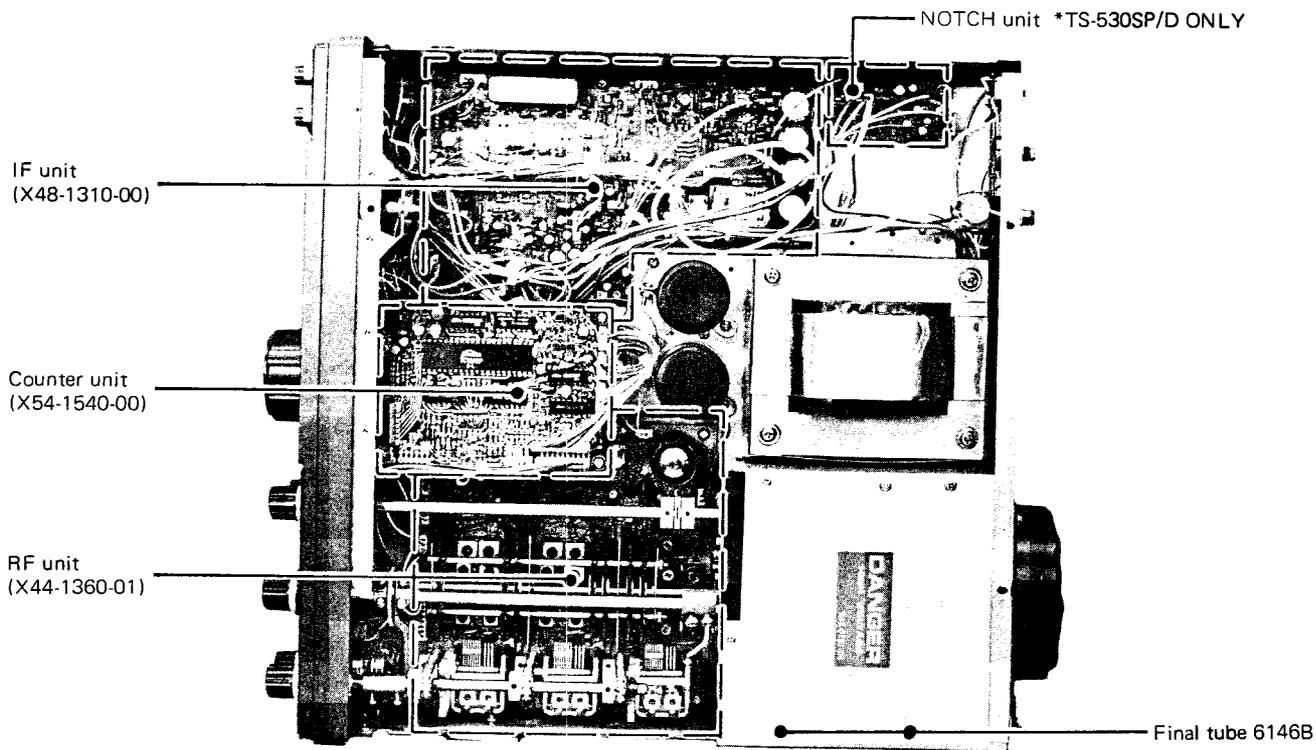


BOTTOM VIEW

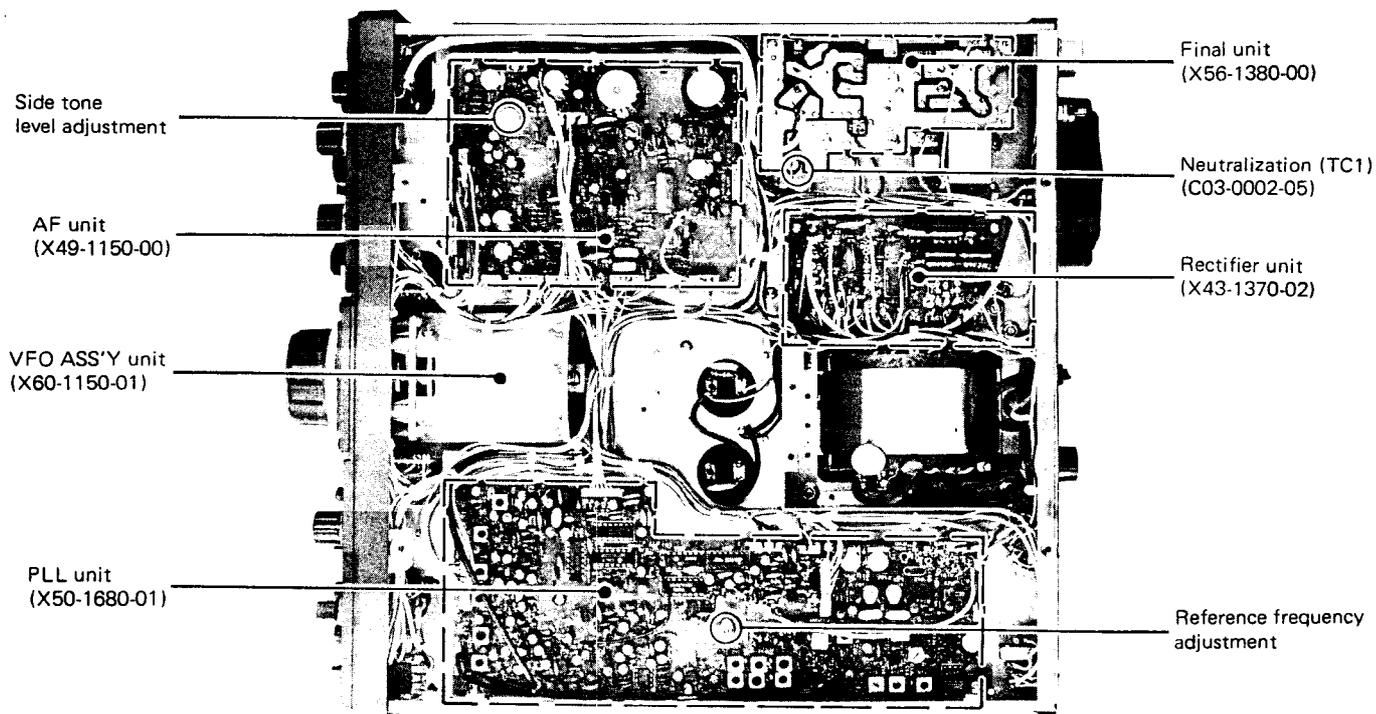

▼ VFO UNIT (X40-1170-00) View from component side

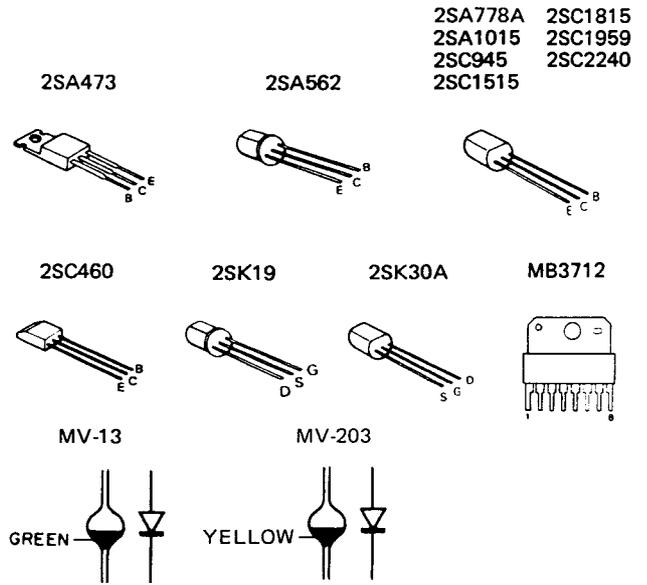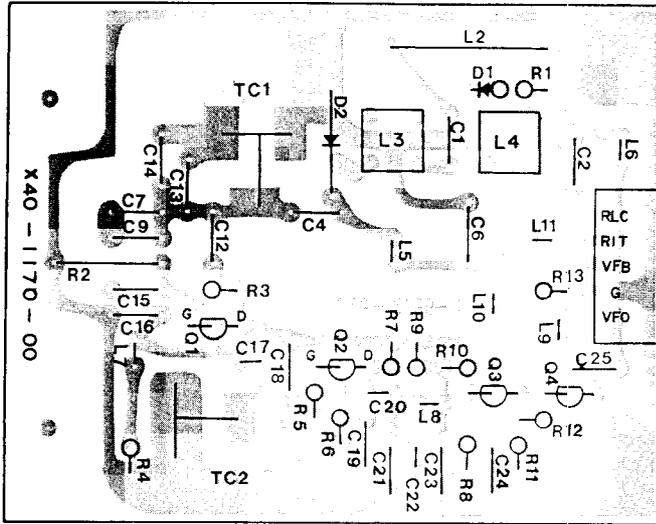


▼ AF UNIT (X49-1150-00) View from component side

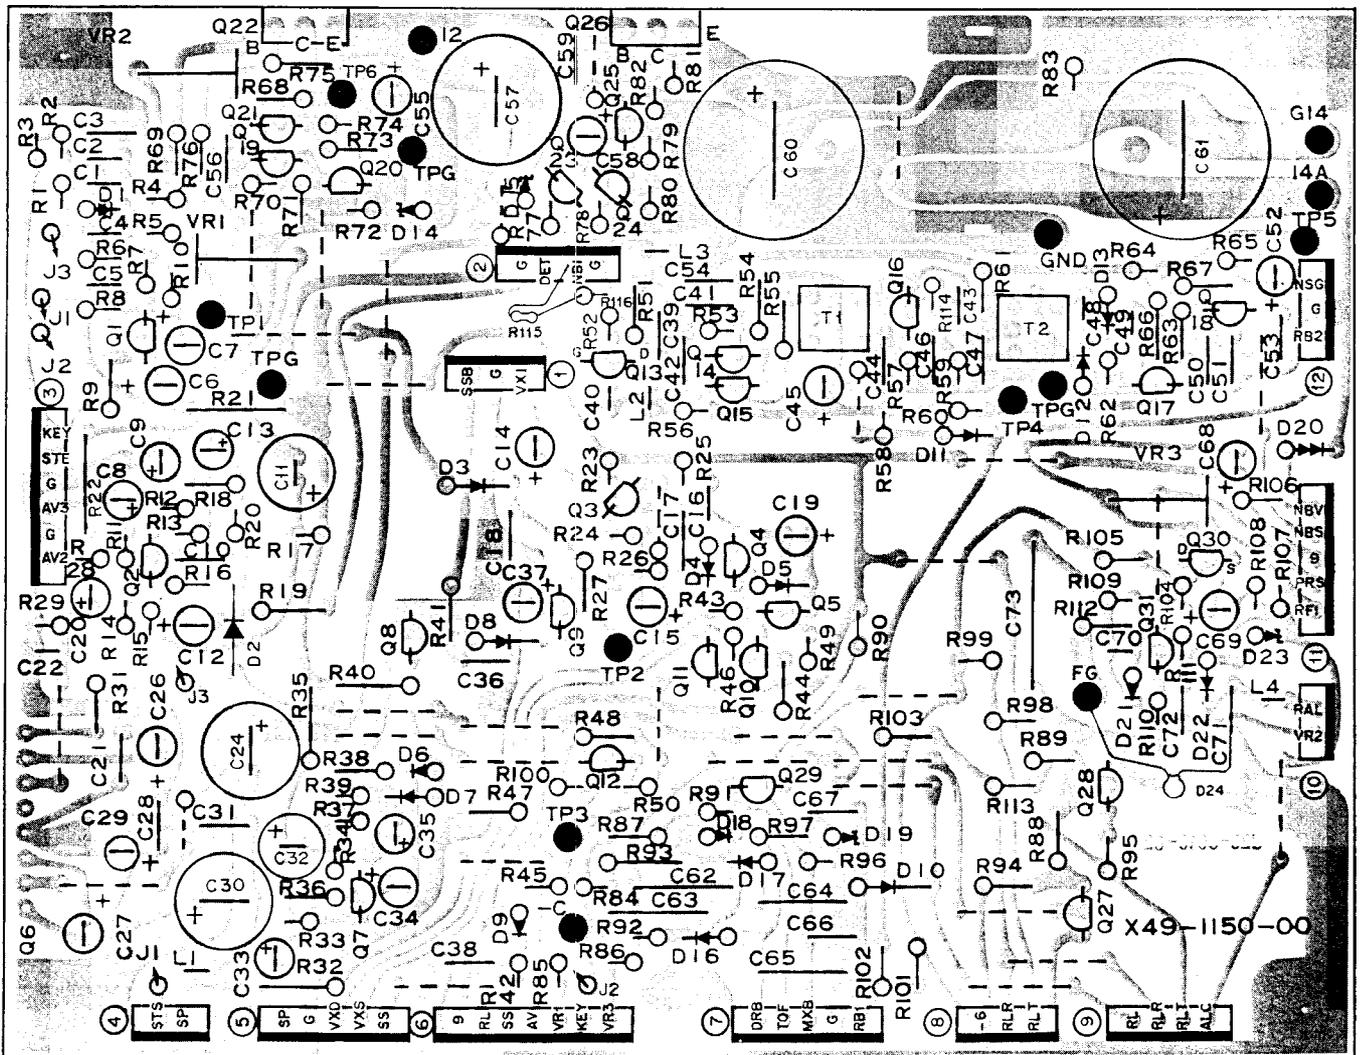

VFO UNIT (X40-1170-00)


- Q1, 2 : 25K19(Y)
- Q3 : 25C460(B)
- Q4 : 25C1959(Y)
- D1 : 1S2588
- D2 : 1SV53A

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@maurtron.co.uk

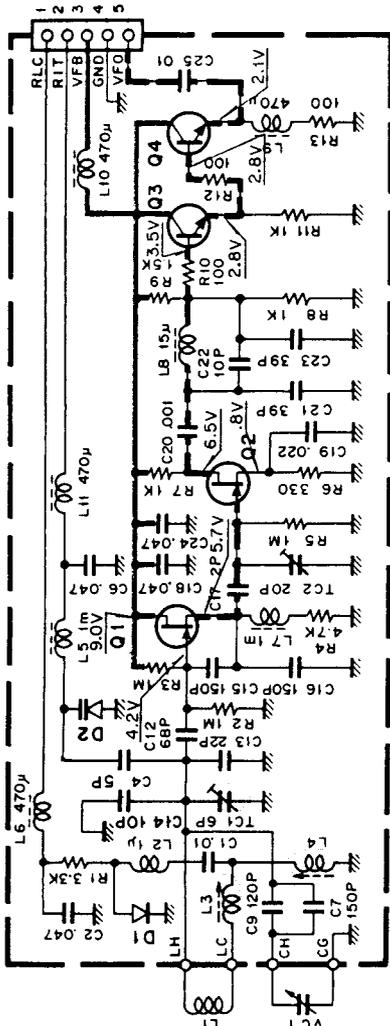


AF UNIT (X49-1150-00)

- D1-4, 6-10, 18, 21 : 1S1555
- D5, 12, 13 : 1N60
- D11 : MV-13
- D14 : X2-085
- D15 : X2-090
- D16, 17, 22 : V06B
- D19, 23 : WZ-203
- D20 : MV-203
- D24 : ERZD03DK331

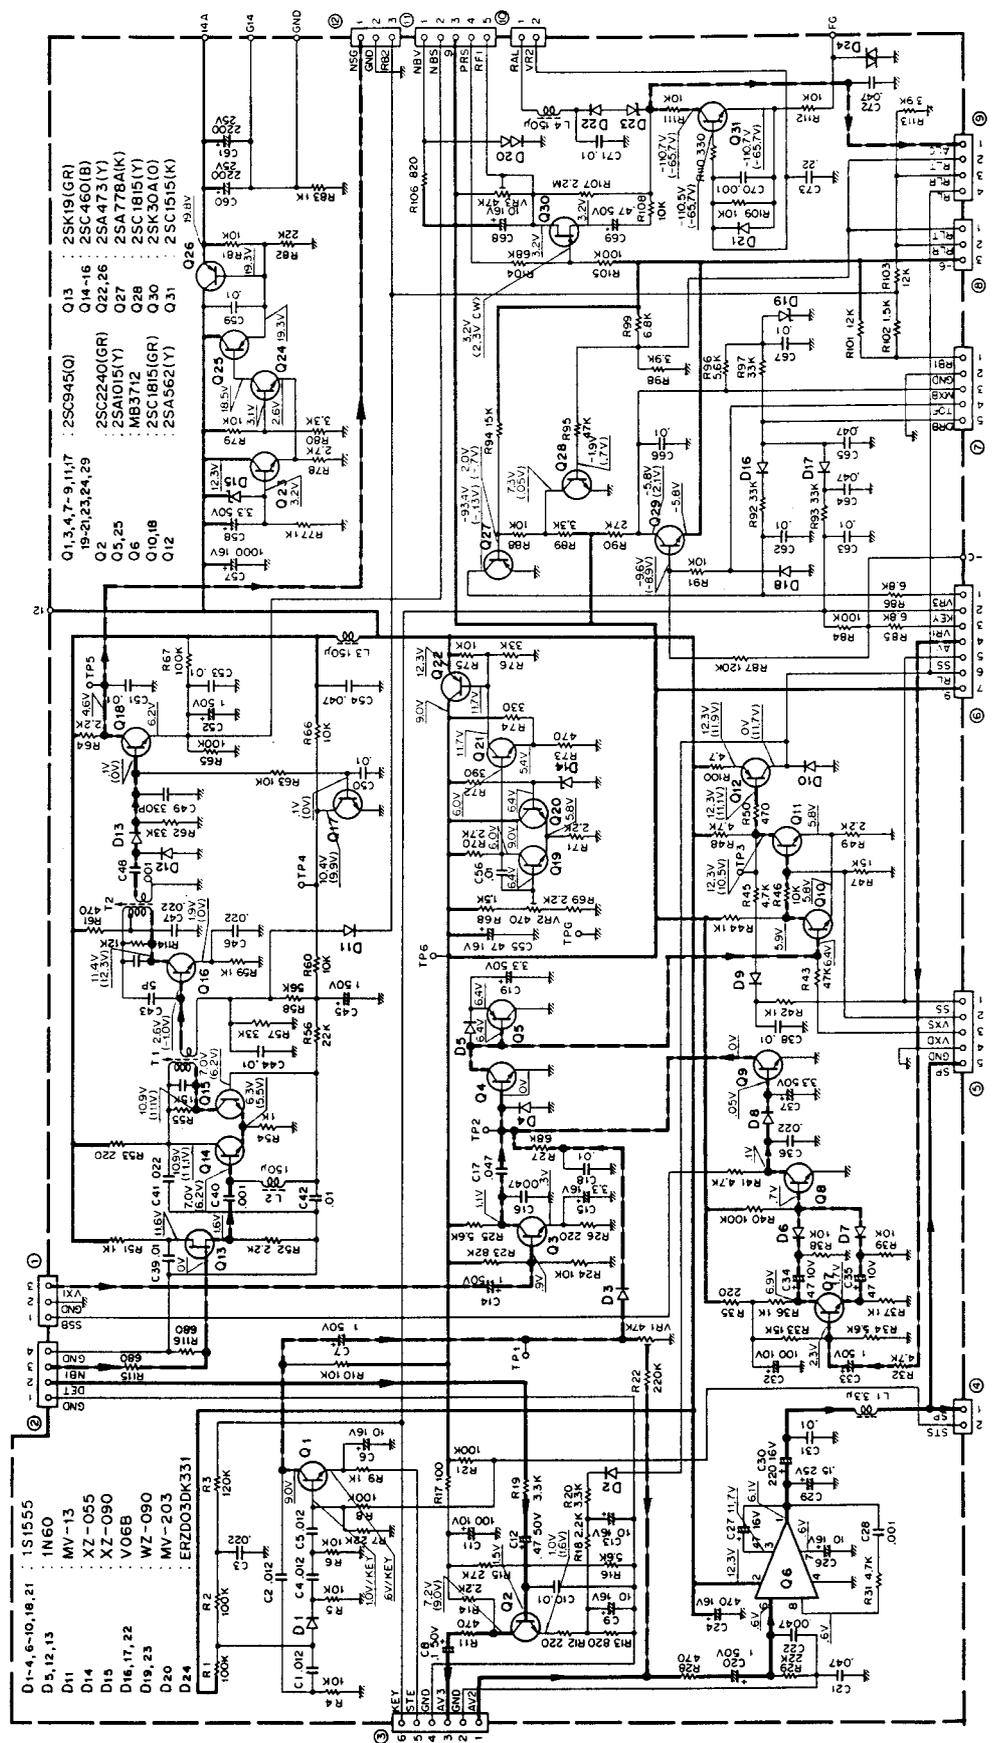


▼ IF UNIT (X48-1310-00) View from component side

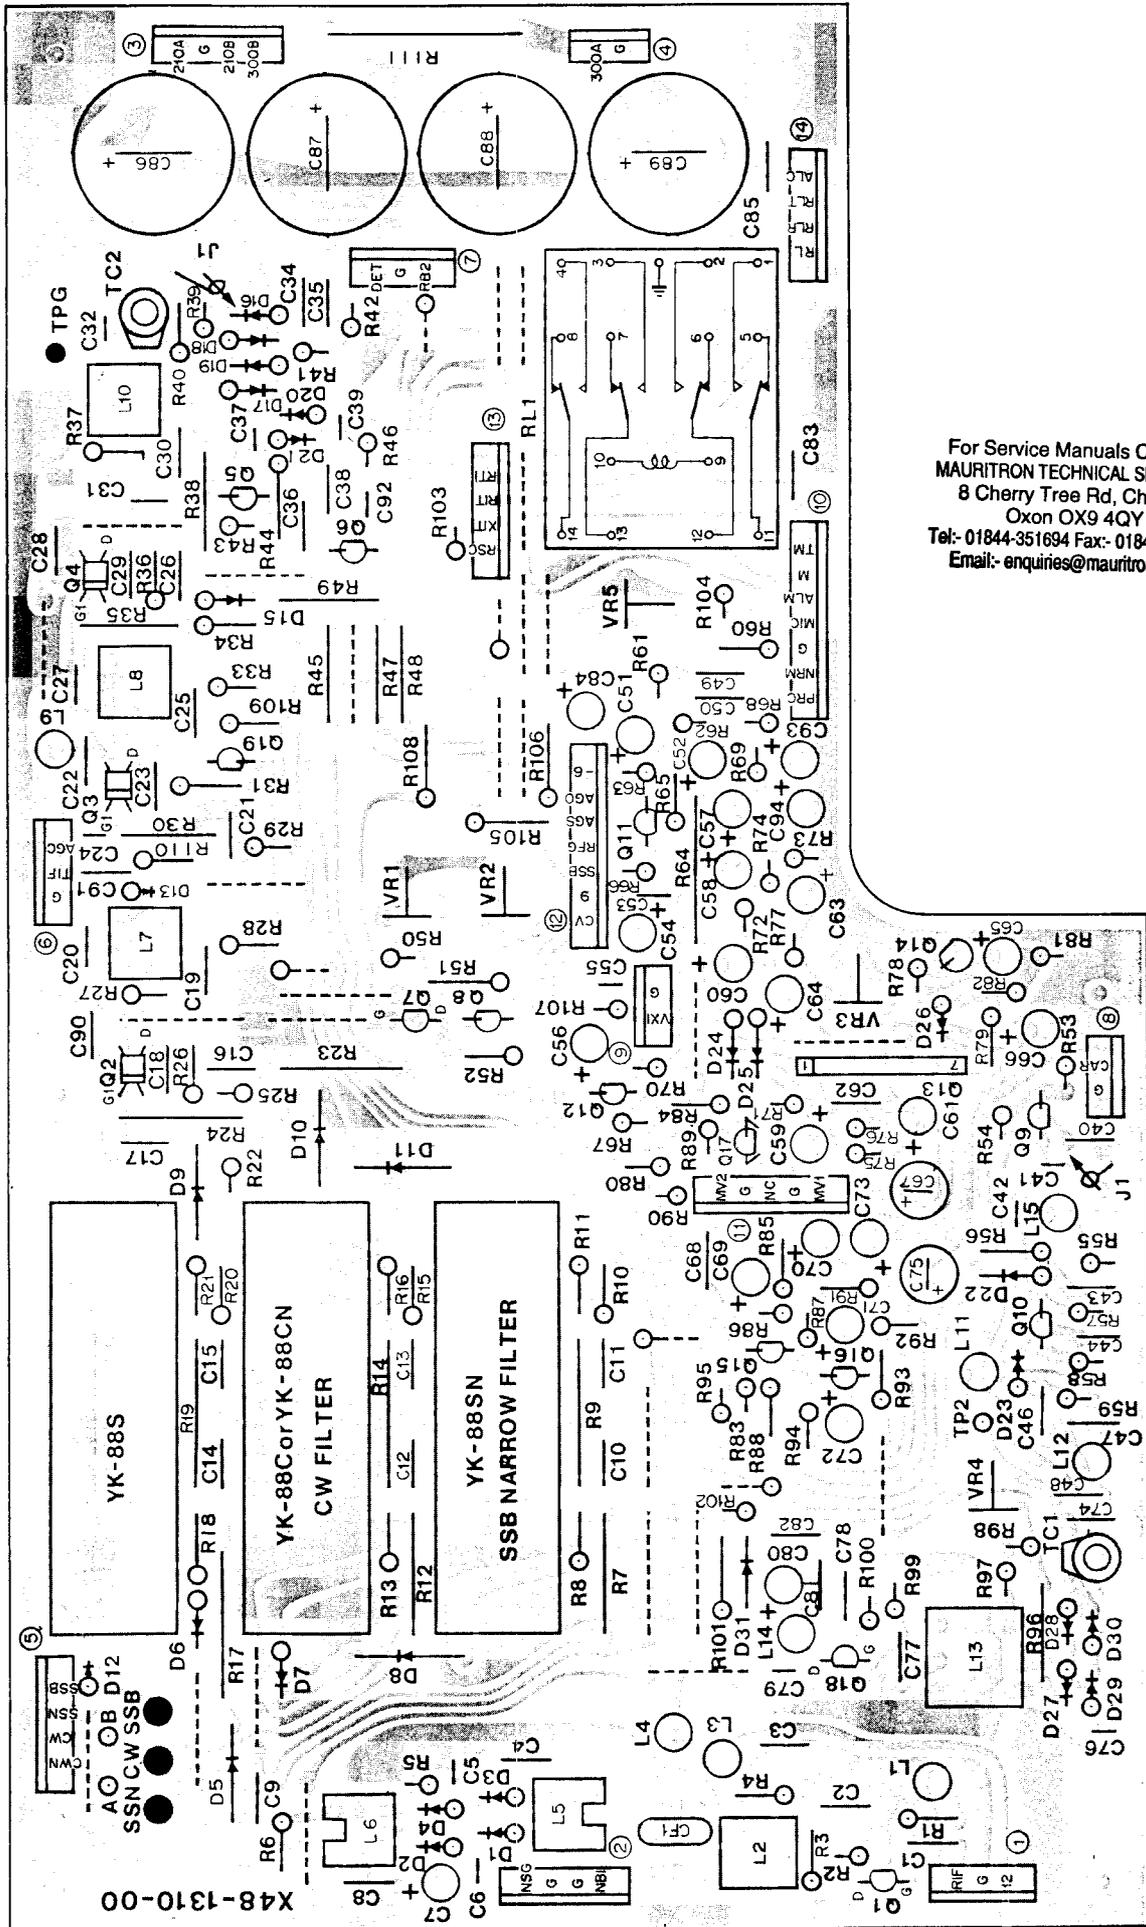

For Service Manuals Contact
 MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquires@mauritron.co.uk






▶ IF UNIT (X48-1310-00)

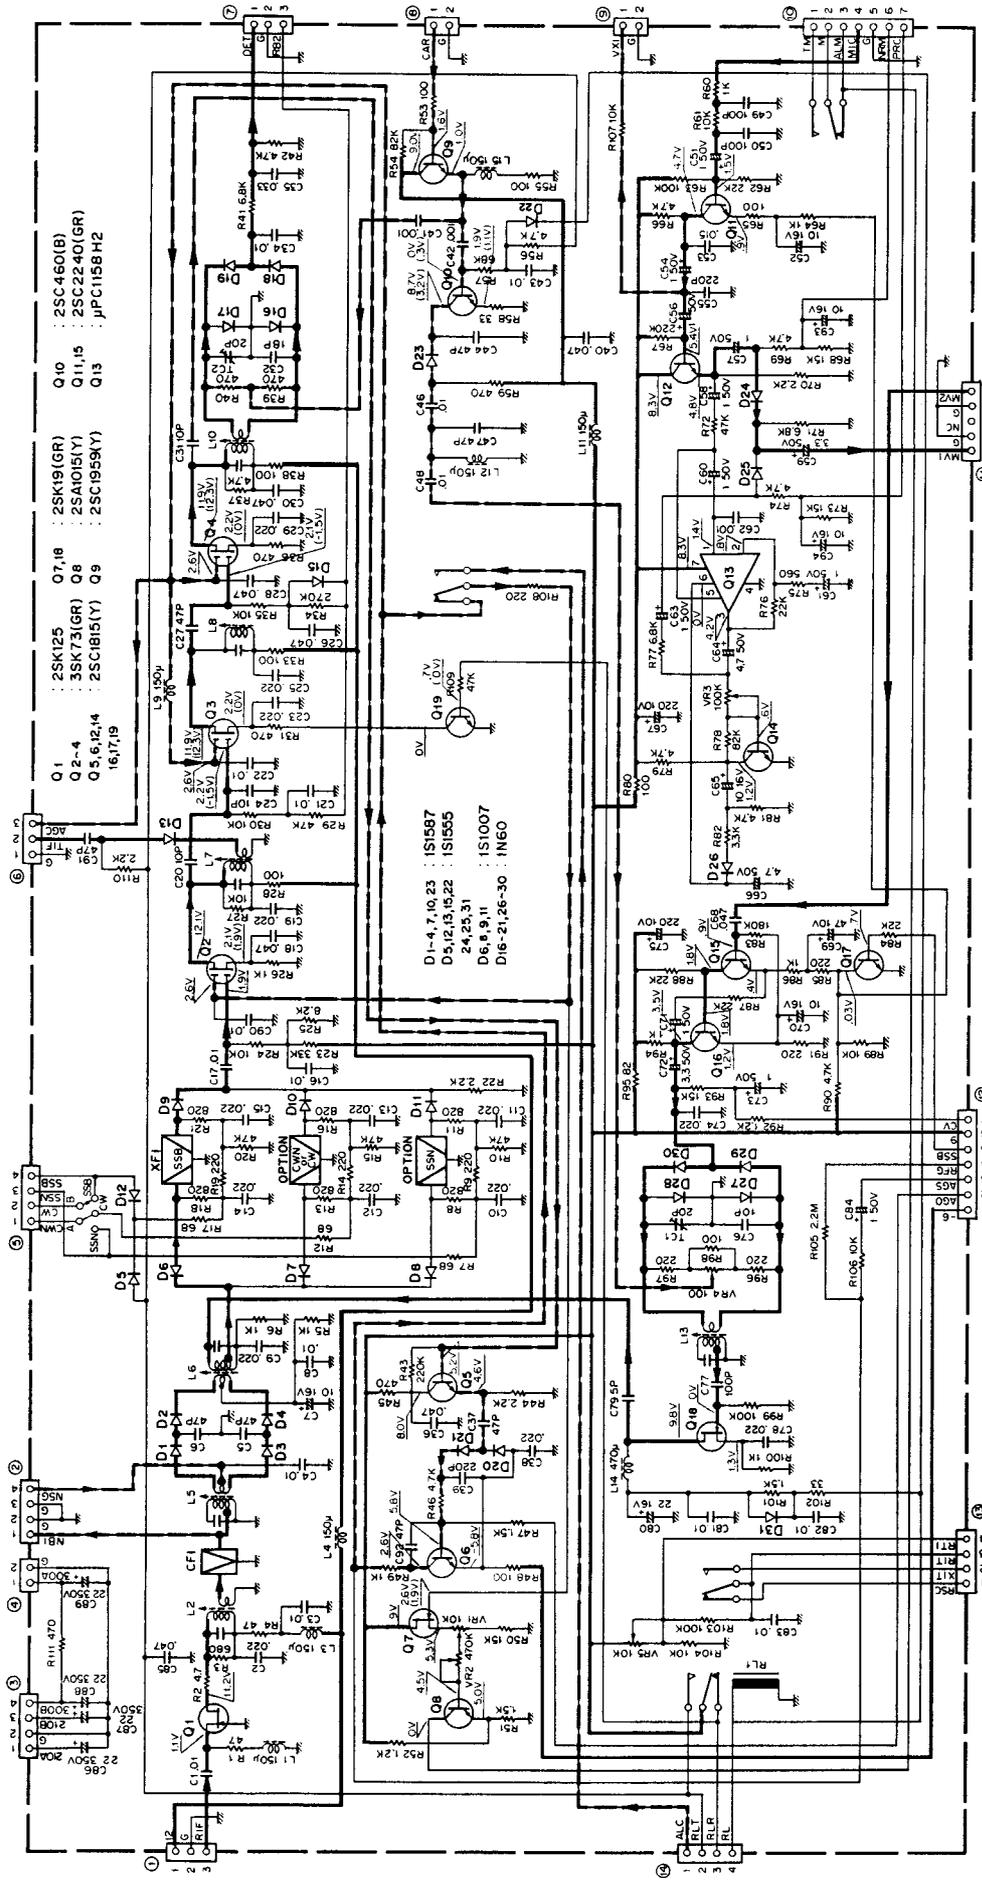

- Q1 : 2SK125 0718
- Q2-4 : 3SK73(GR) 08
- Q5, 6, 12, 14 : 2SC1815(Y) 09
- 1617, 19
- Q10 : 2SC460(B)
- Q11, 15 : 2SA1015(Y)
- Q13 : μ PC1158H2

- D1-4, 7, 10, 23 : IS1597
- D5, 12, 15, 22 : IS1555
- D6, 9, 11 : IS1007
- D16-21, 26-30 : IN60

- 2SA1015
- 2SC1815
- 2SC1959
- 2SC2240



For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01944-351894 Fax: 01944-352554
 Email: enquiries@mauritron.co.uk

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

- 2SC1675
- 2SC1775
- 2SC1885
- 2SC1923
- 2SC1959



25C460



2SK19




3SK73



NJM78L05A




▼ PLL UNIT (X50-1680-01) View from component side

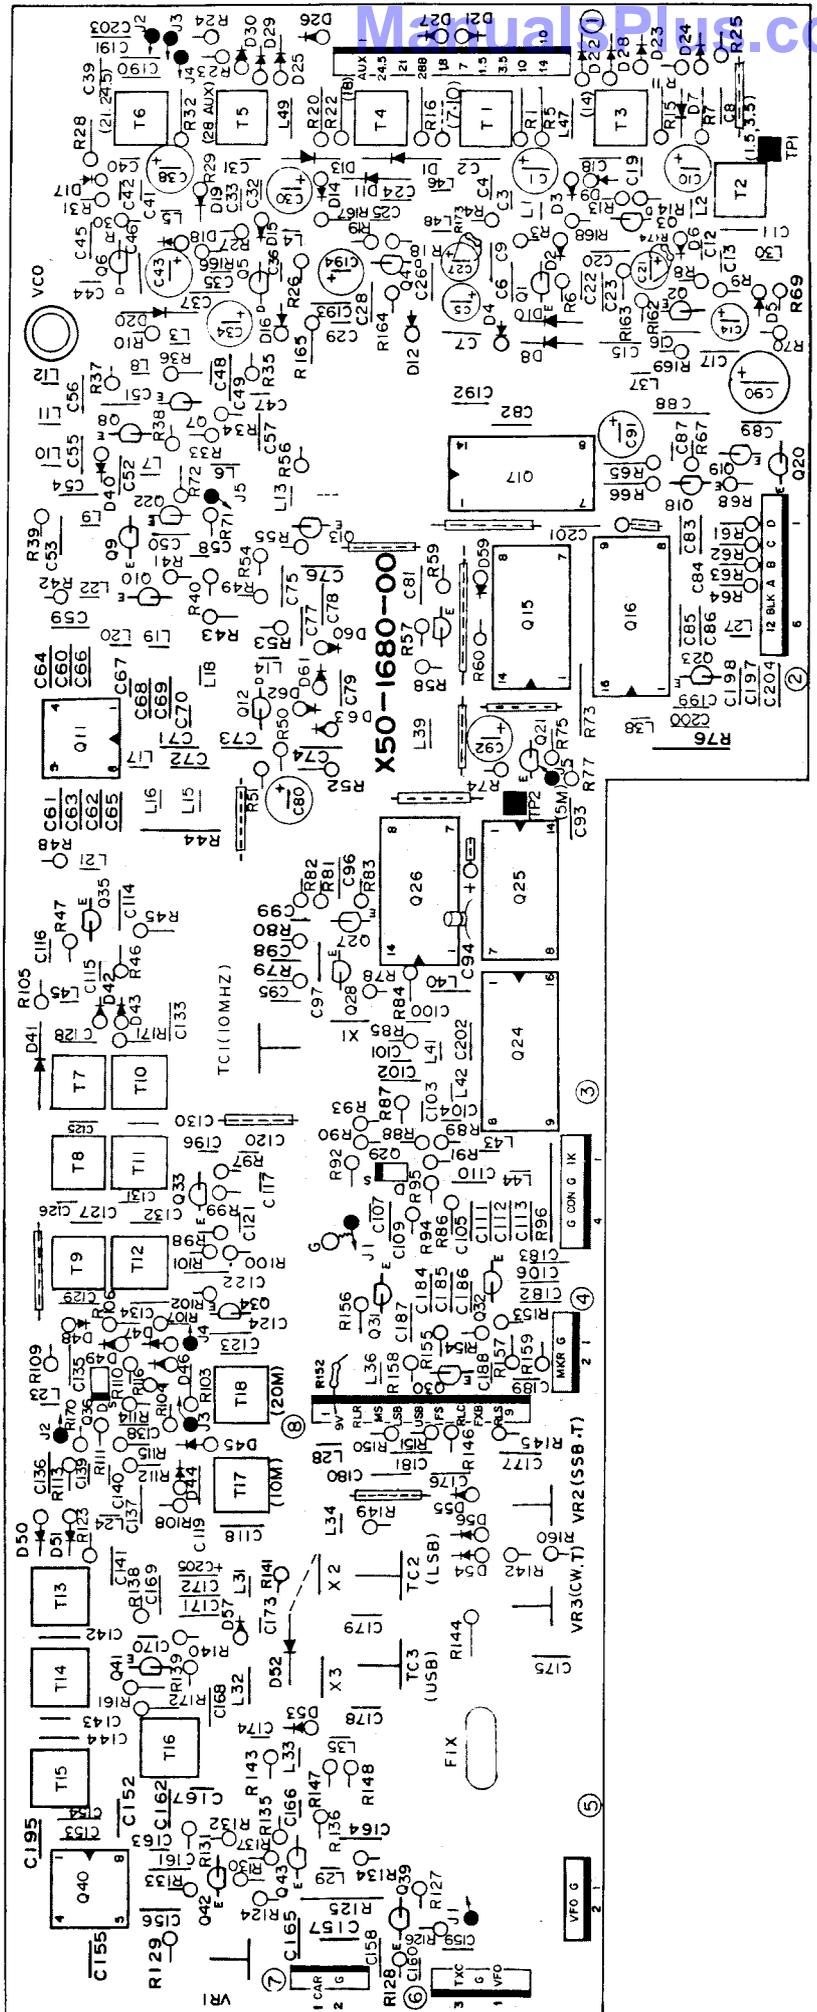

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

▼ PLL UNIT (X50-1680-01)

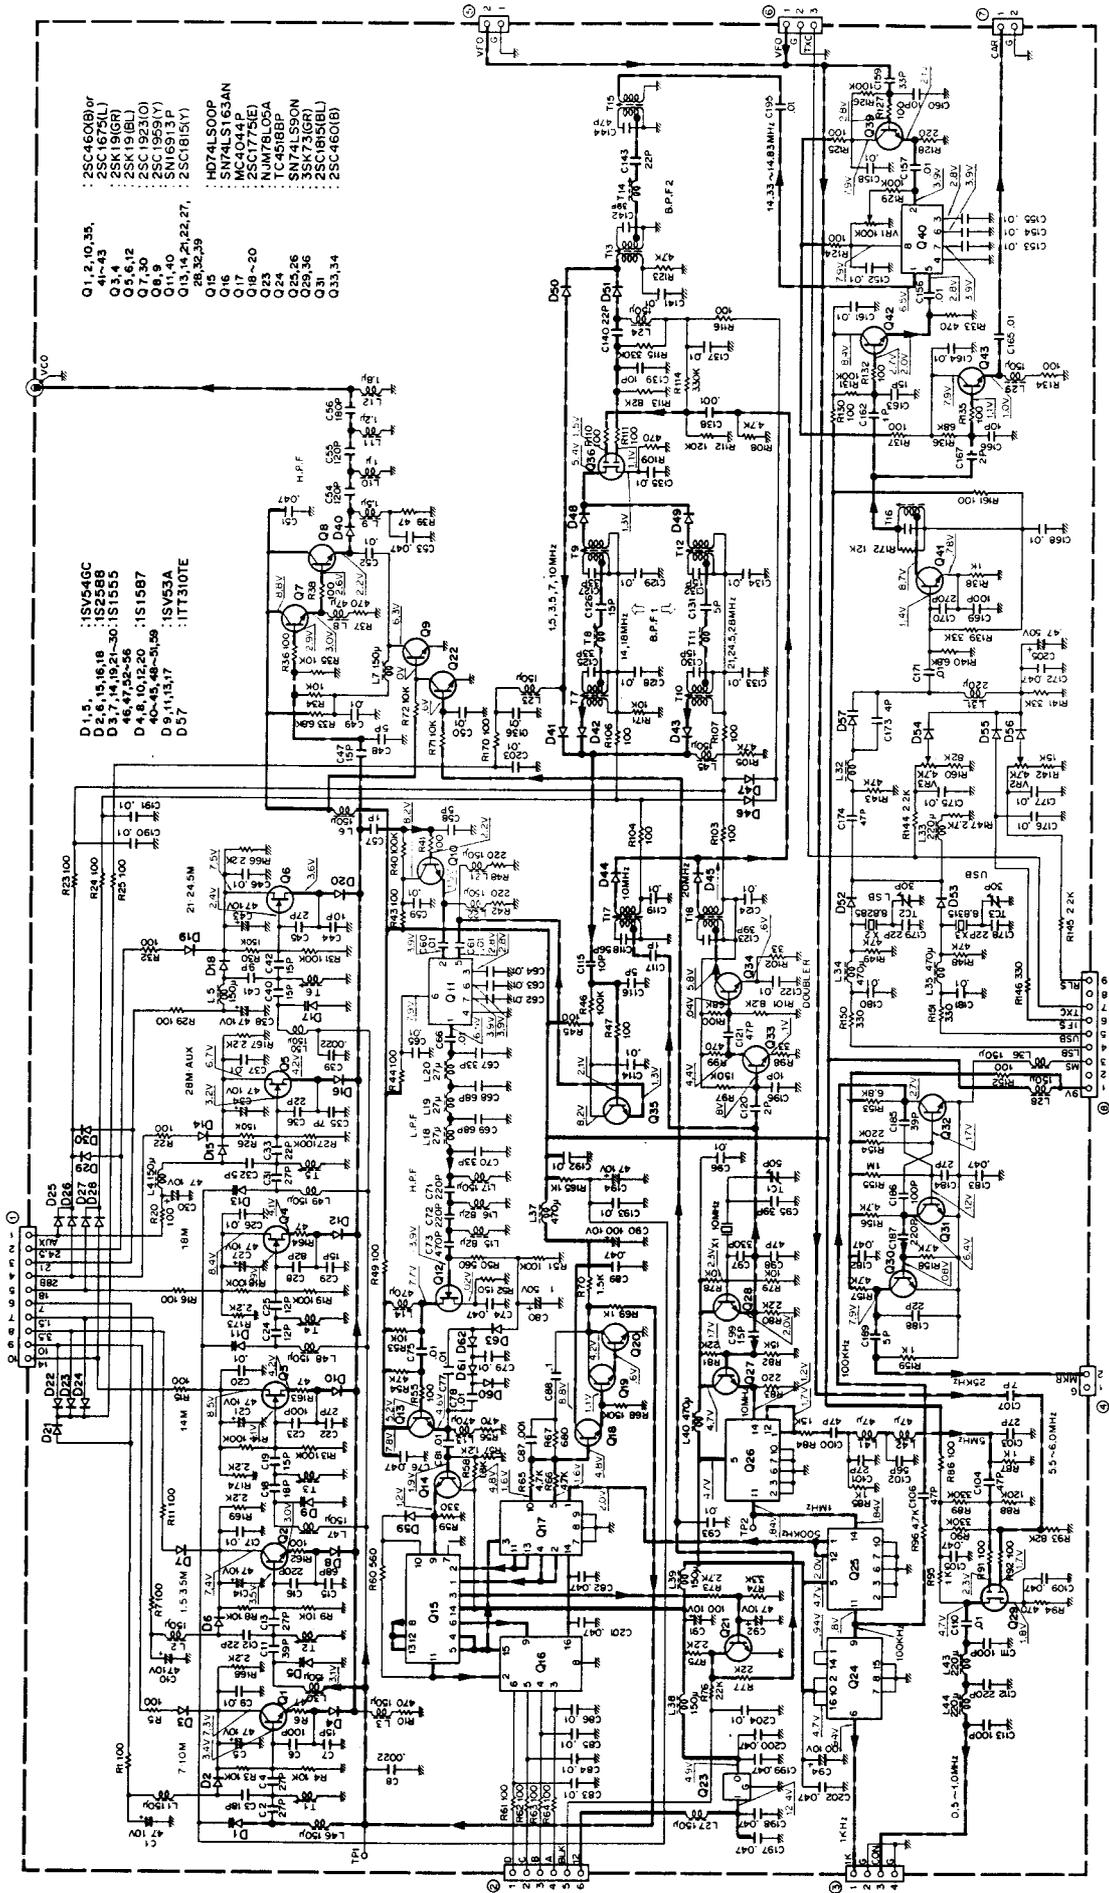


- 25C460(B) or
- 25C1675(L)
- 25K181(BL)
- 25K181(BL)
- 25C1923(O)
- 25C1959(Y)
- 5N16913(P)
- 25C1815(Y)
- 25C3239
- HD74LS00P
- SN74LS163AN
- MC4044P
- 25C1775(E)
- NJM78L05A
- TC4588BP
- SN74LS90N
- 25C4536
- 25C4531(BL)
- 25C460(B)

- O1, 2, 10, 35,
- 4~43
- O5, 5, 12
- O7, 30
- O8, 9
- O11, 40
- O13, 14, 21, 22, 27,
- O16
- O17
- O18~20
- O23
- O24
- O25, 26
- O28
- O31
- O33, 34


- ISV546C
- ISV546C
- ISV555
- ISV555
- ISV587
- ISV587
- ISV53A
- ITT310TE

- D1, 5
- D1, 5, 15, 16, 18
- D3, 7, 14, 19, 24, 30
- 46, 47, 52, 55
- D4, 8, 10, 12, 20
- 40, 45, 48, 51, 59
- D9, 11, 15, 17
- D5, 7



▼ COUNTER UNIT (X54-1540-00) View from component side

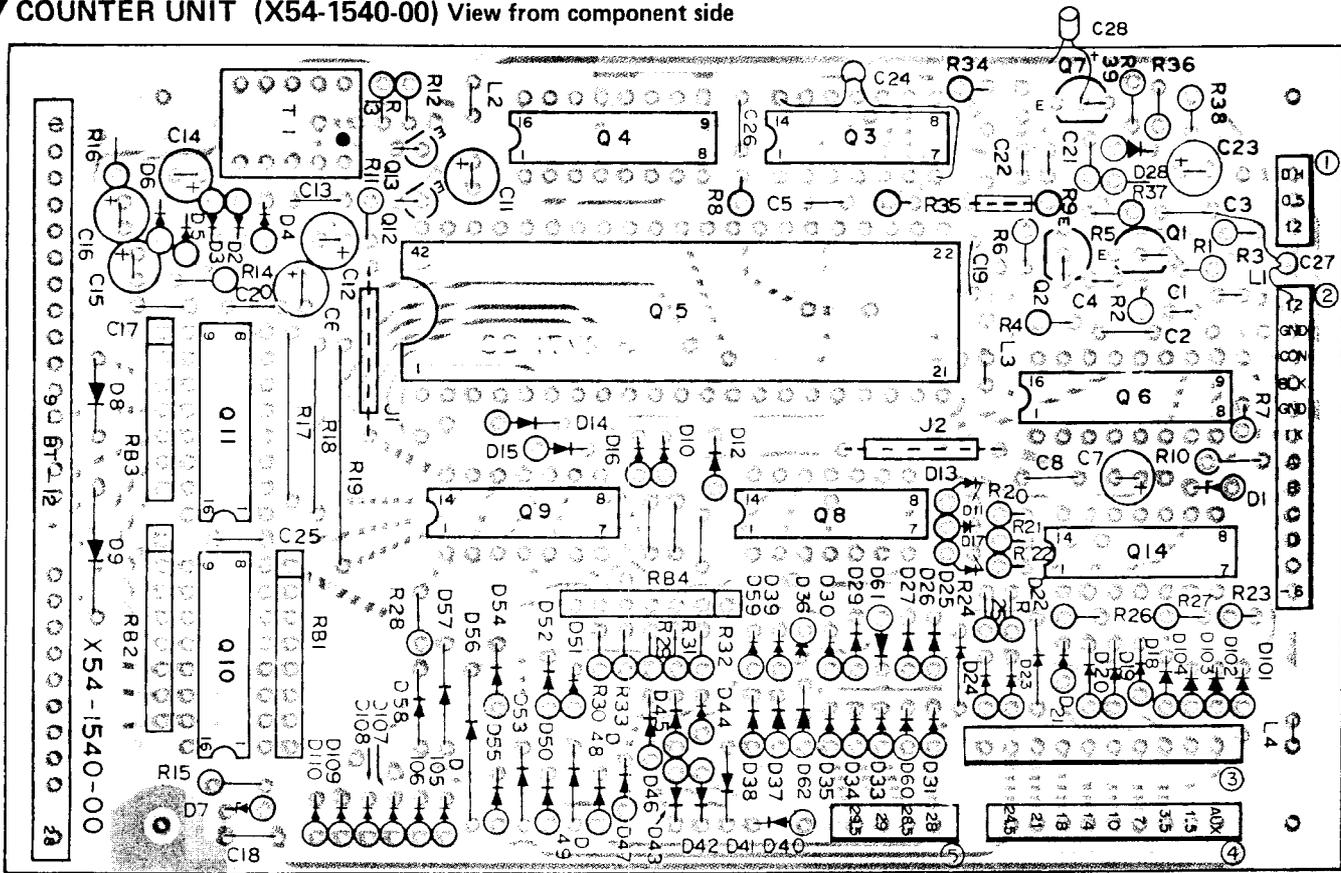


COUNTER UNIT (X54-1540-00)

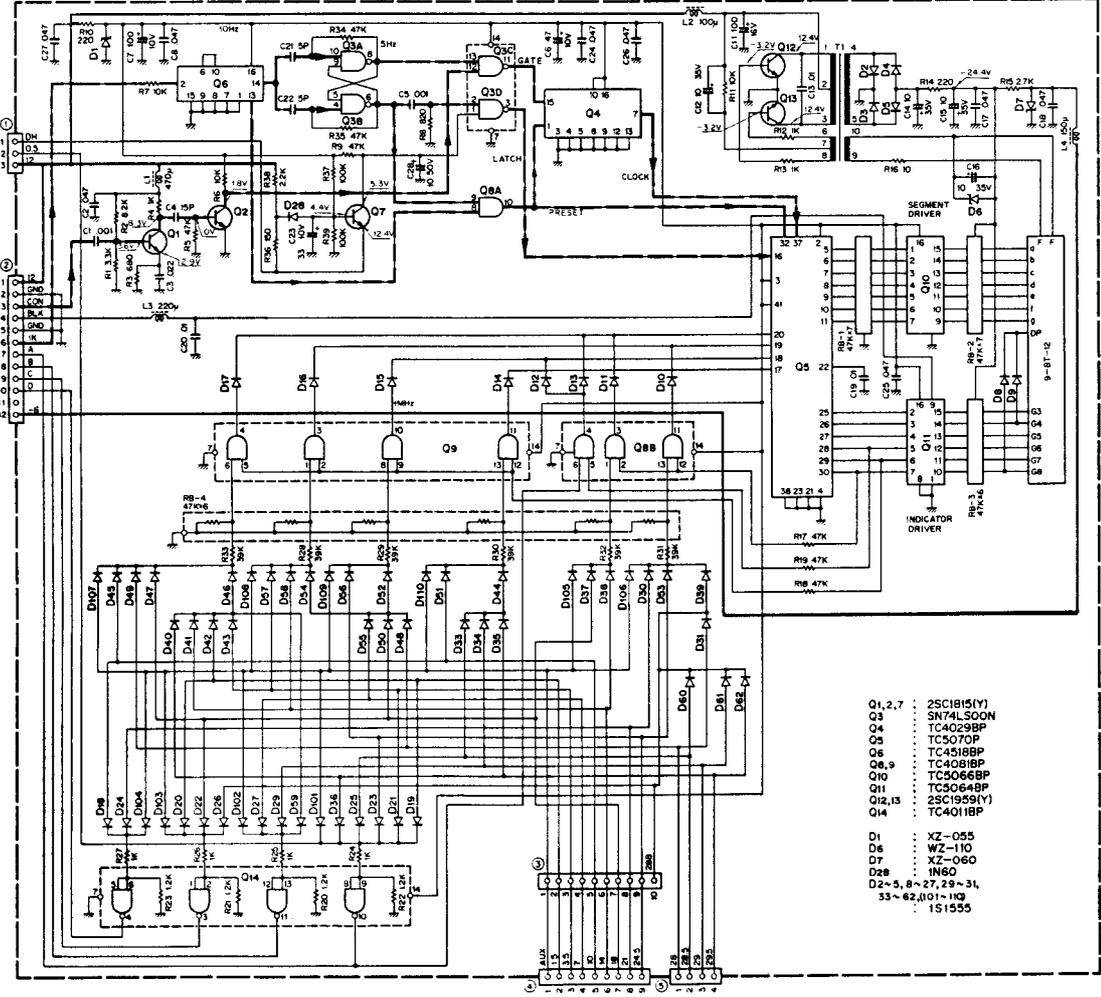

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Fd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

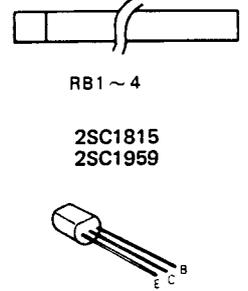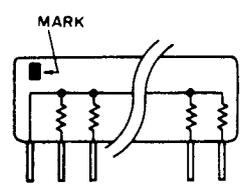

RB1 ~ 4
 2SC1815
 2SC1959



PARTS LIST

Note 1:

K: U.S.A. T: Britain W: Europe X: Australia

Note 2:


Only special type of resistors (example: cement, metal film, etc.) and capacitors (example: electrolytic, tantalum, mylar, temp. coeff. capacitors) are detailed in the PARTS LIST. For the value of all common type components, refer to the schematic diagram of the P.C. board illustration. Resistors not otherwise detailed are carbon type (1/4W or 1/8W). Order carbon resistors and capacitors according to the following example:

A carbon resistor's part number is RD14BY 2E222J.

A ceramic capacitor's number is CK45F1H103Z, CC45TH1H220J.

RESISTOR

1. Type of the carbon resistor



2. Wattage

1W → 3A 3W → 3F 5W → 3H
2W → 3D 4W → 3G

3' = CC45 ○ ○ ...

Ceramic capacitor (type I) temperature coeff. capacitor 1' 3'.

1st word (Color)	C (Black)	L (Red)	P (Orange)	R (Yellow)	S (Green)	T (Blue)	U (Violet)
ppm/°C	0	-80	-150	-220	-330	-470	-750

3 = CK45 ○

Ceramic capacitor (type II) 3

Cord	B	D	E	F
Operating temperature °C	-30 +85	-30 +85	-30 +85	-10 +70

6 = Tolerance


Cord	C	D	G	J	K	M	X	Z	P	No cord
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10 μF -10 ~ +50 Less than 4.7 μF -10 ~ +75

Less than 10 pF

Cord	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

Abbreviation		Abbreviation	
Cap.	Capacitor	ML	Mylar
C	Ceramic	S	Styren
E	Electrolytic	T	Tantalum
MC	Mica		

3. Resistance value



4. Tolerance

J = ±5% (Gold) K = ±10% (Silver)

CAPACITORS

Type I

Type II

CC	45	TH	1H	220	J	CK	45	F	1H	103	Z
1'	2	3'	4	5	6	1	2	3	4	5	6
1 = Type ceramic, electrolytic, etc.						4 = Voltage rating					
2 = Shape round, square, etc.						5 = Value					
3 = Temp range						6 = Tolerance					
3' = Temp coefficient											


Ex. CC45TH = -470 ±60 ppm/°C

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500


5 = Capacitor value

Example: 010 → 1 pF
100 → 10 pF
101 → 100 pF
102 → 1000 pF = 0.001 μF
103 → 0.01 μF

CC45

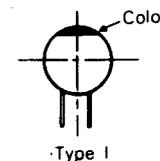

CK45

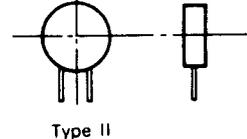

TS-530 SEMICONDUCTOR

☆: New parts

Item	Name	Parts No.	Re-remarks	Item	Name	Parts No.	Re-remarks
Diode	1N60	V11-0051-05		Vari-cap diode	1SV53A	V11-4161-36	
	1S1007	V11-4160-66			1SV54GC	V11-4173-46	☆
	1S1555	V11-0076-05		LED	SLP-144	V11-6172-76	
	1S1587	V11-0370-05			TLR-205	V11-3162-96	
	1S2588	V11-0414-05			Zener diode	WZ-061	V11-0243-05
	V03C	V11-0290-05 200V 1.3A		WZ-090		V11-0240-05	
	V06B	V11-0219-05 100V 1.1A		WZ-110		V11-4161-46	
Varistor	V06E	V11-0285-05 400V 1.1A		Surge absorber	XZ-055	V11-4105-50	
	V08J	V11-0282-05 800V 1.1A			XZ-060	V11-4101-20	
	MV-13	V21-0004-05			XZ-090	V11-4167-06	
	MV-203						

PARTS LIST

Item	Name	Parts No.	Re- marks	Ref. No.	Parts No.	Description	Re- marks
TR	2SA473(Y)	V01-0473-06	☆	TS-530S GENERAL			
	2SA562(Y)	V01-0032-05		A01-0274-05	Fan case		
	2SA778A(K)	V01-0778-16		A01-0778-11	Case (upper)		
	2SA1015(Y)	V01-1015-06		A01-0779-01	Case (lower)		
	2SC460(B)	V03-0079-05		A20-2420-03	Panel	☆	
	2SC945(O)	V03-0945-06		B03-0519-04	Switch mask Panel		
	2SC1515(K)	V03-0450-05		B03-0520-04	Switch mask Panel		
	2SC1775(E)	V03-1775-06		B05-0708-04	Speaker grill cloth		
	2SC1815(BL)	V03-1815-26		B09-0003-05	Coupling Plate		
	2SC1815(GR)	V03-1815-16		B10-0631-04	Front glass (small)		
2SC1815(Y)	V03-1815-06	B10-0639-04	Front glass (large)	☆			
2SC1923(O)	V03-1923-06	B21-0501-04	Pointer Plate				
2SC1959(Y)	V03-1959-06	B30-0817-15	Pilot lamp Meter 12V, 80mA				
2SC2240(GR)	V03-2240-06	B31-0630-05	Meter	☆			
FET	2SK19(BL)	V09-0111-05		B42-1702-04	Adj. seal	☆	
	2SK19(GR)	V09-0012-05		B43-0651-04	Name plate	T ☆	
	2SK19(Y)	V09-0011-05		B43-0653-04	Name plate	K, W, X, M ☆	
	2SK30A(O)	V09-0056-05		B46-0058-10	Warranty card	K	
	2SK125	V09-0136-10		B50-2791-00	Operating manual	K, W, X, M ☆	
IC	3SK73(GR)	V09-1002-46	☆	B50-2792-00	Operating manual	T ☆	
	74LS163N	V30-1037-06		B58-0625-00	Transmit warning paper		
	HD74LS00P	V30-0192-16		B58-0631-00	Warning paper	W, T, X, M	
	HD74LS90P	V30-1083-06		C7	C90-0186-05	C 0.001μF 3kV	
	HD74LS163P	V30-1047-06		C8	C91-0079-05	C 0.01μF 2kV	
	MB3712	V30-1231-16		C9	C91-0401-05	C 100pF 3kV	
	MC4044P	V30-0173-05		C10	C91-0017-05	C 390pF 3kV	
	NJM78L05A	V30-1149-06		C12	CC45SL2H101J	C 100pF 500V	
	SN74LS00N	V30-1005-66		C13	CC45SL2H271J	C 270pF 500V S/SP	
	SN74LS90N	V30-1005-26		C14	CC45SL2H681J	C 680pF 500V S/SP	
SN74LS163AN	V30-1154-06	C15	CC45SL2H121J	C 120pF 500V			
SN16913P	V30-1048-06	C16	CC45SL2H821J	C 820pF 500V			
Tube	TC4011BP	V30-0301-70	☆	C17	CC45SL2H102J	C 0.001μF 500V	
	TC4029BP	V30-1051-06		C18, 19	C90-0300-05	C 470pF AC150V	
	TC4081BP	V30-0299-10		C20	C91-0079-05	C 0.01μF 2kV	
	TC4518BP	V30-1039-06		C22, 24	C90-0327-05	E 100μF 500V	
	TC5064BP	V30-1056-06		C26	C91-0467-05	C 22pF 3kV	
	TC5066BP	V30-1057-06		C30	CC45SL1H030C	C 3pF ±0.25pF	
	TC5070P	V30-1172-06		C31	CC45SL2H101J	C 100pF 500V	
	μPC1158H2	V11-1177-26		TC1	C03-0002-05	Trimmer	
	12BY7A	V40-0114-00		VC1	C03-0060-05	Variable cap. (A) FINAL	
	6146B	V40-0138-00 K		VC2	C01-0084-05	Variable cap. (B) LOAD	
S2001A	W, T, X, M	D22-0402-05	Universal coupling BAND LOAD				
<p>For Service Manuals Contact MAURITRON TECHNICAL SERVICES 8 Cherry Tree Rd, Chinner Oxon OX9 4QY Tel: 01844-351694 Fax: 01844-352554 Email: enquiries@mauritron.co.uk</p>			D22-0405-04	Coupling PLATE			
			D22-0407-04	Shaft coupling φ6			
			D32-0051-04	Shaft stopper M3 x 10			
			D32-0075-04	Switch stopper	W, T, X, M		
			D40-0613-05	Vernier mechanism			
			E04-0152-05	UHF type receptacle ANT			
			E06-0451-15	4P male socket MIC			
			E06-0751-05	7P DIN socket REMOTE			
			E06-0851-05	8P DIN socket EXT. VFO			
			E07-0403-05	4P MIC plug (accessory) W, T, X, M			
E07-0751-05	7P DIN plug (accessory)						
E07-0851-05	8P DIN plug EXT. VFO						
E11-0404-05	3P phone jack KEY, PHONE						
E11-0410-05	Phone jack EXT. SP						
E12-0001-05	Phone plug (accessory) EXT. SP						

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
	E22-0207-05	Lug plate			N14-0115-05	Flange nut GND	
	E22-0472-05	Lug plate Final	☆		N14-0509-05	Wing nut GND	
	E23-0046-04	Square terminal Switch, Relay			N14-0517-05	Cap nut BIAS	
	E30-0181-05	AC cord UL/CSA	K, M		N30-4012-46	Round screw Foot (large)	
	E30-0185-05	AC cord SAA	X		N30-4016-46	Round screw GND	
	E30-0585-05	AC cord CEE	W		N30-4025-46	Round screw Foot (accessory)	
	E30-0602-05	AC cord 3P	T		N33-3006-41	Round flat screw SP	
	E31-2086-05	Coax cable with plug			N35-3008-45	Bind screw Foot (small)	
	E90-0004-15	Plate cap			N35-4006-41	Bind screw Case	
	F05-4022-05	Fuse 4A	W, T, X, M		N87-4012-46	Self tapping screw Foot (large)	
	F05-6021-05	Fuse 6A	K, M		N89-3006-46	Bind tapping screw Final cover	
	F09-0041-05	Fan			N99-0306-04	Hex. head screw VFO	
	G01-0801-04	Gnd spring		R22	RC05GF2H221J	Solid 220Ω 1/2W	
	G09-0410-05	D spring φ6		R24	RC05GF3A103K	Solid 10kΩ 1W	
	G13-0633-14	Cushion Meter		R25,26	RC05GF2H474J	Solid 470kΩ 1/2W	
	G13-0639-04	Cushion Indicating tube		R28	RC05GF2H330J	Solid 33Ω 1/2W	
	G53-0502-04	Packing Case side		VR1	R01-3414-05	Pot. 10kΩ(A) AF	☆
	G53-0512-04	Packing Panel		VR2	R01-3415-05	Pot. 10kΩ(B) RF	☆
	H01-2741-04	Carton case (inside)	K, W, X, M	VR3	R01-3417-05	Pot. 10kΩ(F) IF SHIFT	☆
	H01-2742-04	Carton case (inside)	T	VR4	R01-2405-05	Pot. 5kΩ(B) RIT/XIT	☆
	H03-1797-04	Carton case (outside)		VR5	R01-3414-05	Pot. 10kΩ(A) MIC	☆
	H10-2539-02	Packing fixture (F)		VR6	R01-3416-05	Pot. 10kΩ(B) CAR	☆
	H10-2540-02	Packing fixture (R)		VR7	R01-4408-05	Pot. 50kΩ(B) VOX GAIN	☆
	H20-0439-03	Protective cover		VR8	R01-0404-05	Pot. 300Ω(B) NB	
	H25-0120-04	Protective bag		VR9	R01-6401-05	Pot. 250kΩ(B) DELAY	
	J02-0022-05	Foot (small)		VR10	R01-0405-05	Pot. 300Ω(B) ANTI	☆
	J02-0049-14	Foot (large)		VR11,12	R01-3411-05	Pot. 10kΩ(B) RF OUT, BIAS	
	J13-0033-15	Fuse holder		S1~6	S40-2419-05	Push switch PC board type	
	J25-3015-04	PC board Relay	☆	S7	S40-2403-05	Push switch +0.5 SHIFT	
	J32-0029-04	Hex. boss Relay, PLL		S8,9	S36-1403-05	See saw switch HEATER, POWER	☆
	J32-0159-04	Hex. boss Final		S11	S01-1423-05	Rotary switch AGC	
	J41-0006-05	Cord bushing	K, M	S13	S01-1427-05	Rotary switch METER	☆
	J41-0024-15	Cord bushing	W, T, X	S14,16	S40-2415-05	Push switch Lead type	
	J42-0409-04	Knob bushing +0.5 SHIFT		S17	S33-2403-05	Paddle switch STBY	☆
	J61-0019-05	Vinyle tie		S18	S01-2429-05	Rotary switch MODE	☆
	J61-0401-05	Nylon band		S20	S31-2007-05	Slide switch SG	
	J61-0402-05	Free up belt	W	S22	S01-3406-05	Rotary switch FINAL	
	K01-0406-05	Handle	☆	S23	S31-2027-05	Slide switch AC volt W,T,X,M	
	K21-0723-04	Pointer knob BAND		RL1	S51-2407-05	Relay	
	K23-0738-04	Knob 1 METER, AGC		T07-0215-05	Speaker	☆	
	K23-0745-04	Knob VOX, NB, CAR	☆	T40-0022-05	Motor FAN		
	K27-0414-04	Push knob		X43-1370-02	Rectifier unit	☆	
	K29-0713-04	Push knob +0.5 SHIFT		X44-1360-01	RF unit	☆	
	K29-0715-04	Pointer knob MODE		X48-1310-00	IF unit	☆	
	K29-0737-04	Knob 5 PLATE		X49-1150-00	AF unit	☆	
	K29-0738-04	Knob 6		X50-1680-01	PLL unit	☆	
	K29-0744-04	Paddle knob STBY	☆	X54-1540-00	Counter unit		
L1	L40-6891-13	Choke coil 6.8μH		X56-1380-00	Final unit		
L2	L33-0635-05	Final choke		X60-1150-01	VFO ass'y unit	☆	
L3	L34-1004-05	Final coil B 28 MHz					
L4	L34-0560-25	Final coil A					
L5	L33-0259-05	Choke coil 470μH					
T1	L01-8106-15	Power trans					
PS1,2	L39-0046-05	PS coil PLATE					
	N09-0256-05	Gnd screw					

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
RECTIFIER UNIT (X43-1370-02)							
C5,6	CE02W2C330	E 33μF 160V		C62	CC45RH1H150J	C 15pF	
	E23-0047-04	Square terminal		C63	CC45SL1H151J	C 150pF	
	J31-0502-04	PC board collar		C66,67	C91-0456-05	C 0.047μF	
	J42-0404-05	PC board bushing		C69	CC45SL2H151J	C 150pF 500V	
L1	L40-1511-03	Ferri-inductor 150μH		C78	C91-0456-05	C 0.047μF	
R1~4	RC05GF2H474J	Solid 470kΩ 1/2W		VC1~3	C01-0127-15	Variable capacitor	
R9	RC05GF2H334J	Solid 330kΩ 1/2W			D13-0404-04	Sprocket large	
R10	RC05GF2H183J	Solid 18kΩ 1/2W			D13-0405-04	Sprocket small	
R11	RS14AB3A471J	Metal film 470Ω 1W			D16-0403-04	Chain ass'y	
R14	RC05GF2H102J	Solid 1kΩ 1/2W			E04-0154-05	Coax connector	
R15	RC05GF2H563J	Solid 56kΩ 1/2W			E10-1902-05	9P tube socket	
R16	RC05GF2H563J	Solid 56kΩ 1/2W			E23-0047-04	Square terminal	
	R92-0150-05	Short jumper			E40-0273-05	Mini connect wafer 2P	
					E40-0373-05	Mini connect wafer 3P	
					E40-0374-05	Mini connect wafer 3P L type	
					E40-0474-05	Mini connect wafer 4P L type	
					E40-0973-05	Mini connect wafer 9P	
					F11-0249-05	Tube shield	
RF UNIT (X44-1360-01)					J31-0502-04	PC board collar	
	J42-0404-05	PC board bushing		L1	L40-2792-02	Ferri-inductor 2.7μH	
C1	CQ92M1H182K	ML 0.0018μF		L2	L40-4791-02	Ferri-inductor 4.7μH	
C4	CQ92M1H152K	ML 0.0015μF		L3	L34-0559-05	Trap coil	
C6	CC45RH1H101J	C 100pF		L4	L34-0558-05	Trap coil	
C7	CQ09S1H122J	S 0.0012μF		L5	L34-0930-05	Tuning coil 3.5 MHz	
C8	CC45RH1H221J	C 220pF		L6	L34-0931-05	Tuning coil 7 MHz	
C9	CC45RH1H330J	C 33pF		L7	L34-0932-05	Tuning coil 10 MHz	
C10	CC45RH1H121J	C 120pF		L8	L34-0933-05	Tuning coil 14 MHz	
C11	CC45RH1H560J	C 56pF		L9	L34-0934-05	Tuning coil 18 MHz	
C12	CC45RH1H330J	C 33pF		L10	L34-0990-05	Tuning coil 21 MHz	
C13	CC45RH1H101J	C 100pF		L11	L34-0935-05	Tuning coil 24.5 MHz	
C14,15	CC45RH1H330J	C 33pF		L12	L34-0995-05	Tuning coil 28 MHz	
C16	CC45SL1H561J	C 560pF		L13	L34-0936-05	Tuning coil MIX 1.5 MHz	
C17	CC45RH1H221J	C 220pF		L14	L34-0930-05	Tuning coil 3.5 MHz	
C19	CC45RH1H150J	C 15pF		L15	L34-0931-05	Tuning coil 7 MHz	
C20	CC45RH1H330J	C 33pF		L16	L34-0932-05	Tuning coil 10 MHz	
C21	CC45RH1H121J	C 120pF		L17	L34-0933-05	Tuning coil 14 MHz	
C22	CC45RH1H560J	C 56pF		L18	L34-0934-05	Tuning coil 18 MHz	
C23	CC45RH1H330J	C 33pF		L19	L34-0990-05	Tuning coil 21 MHz	
C24	CC45RH1H101J	C 100pF		L20	L34-0935-05	Tuning coil 24.5 MHz	
C25	CC45RH1H330J	C 33pF		L21	L34-0995-05	Tuning coil 28 MHz	
C26	C91-0456-05	C 0.047μF		L23	L34-0552-15	Tuning coil 1.5 MHz	
C28	CC45SL1H561J	C 560pF		L24	L34-0553-15	Tuning coil 3.5 MHz	
C30	CC45RH2H330J	C 33pF 500V		L25	L34-0554-05	Tuning coil 7 MHz	
C31	CC45RH2H121J	C 120pF 500V		L26	L34-0937-05	Tuning coil 10 MHz	
C32	CC45RH2H181J	C 180pF 500V		L27	L34-0555-05	Tuning coil 14 MHz	
C33	CC45RH2H470J	C 47pF 500V		L28	L34-0938-05	Tuning coil 18 MHz	
C34	CC45RH2H270J	C 27pF 500V		L29	L34-0556-05	Tuning coil 21 MHz	
C35	CC45RH2H101J	C 100pF 500V		L30	L34-0939-05	Tuning coil 24.5 MHz	
C36	CC45RH2H390J	C 39pF 500V		L31	L34-0557-05	Tuning coil 28 MHz	
C37	CC45RH2H180J	C 18pF 500V		L32~34	L40-4711-03	Ferri-inductor 470μH	
C38	CC45SL2H100D	C 10pF ±0.5pF 500V		L35	L40-1511-03	Ferri-inductor 150μH	
C40	CC45SL2H561JTD	C 560pF 500V		L36	L40-4711-03	Ferri-inductor 470μH	
C41	CC45RH1H150J	C 15pF		L37	L40-1511-03	Ferri-inductor 150μH	
C42	CC45SL1H101J	C 100pF		L39	L33-0074-05	Heater choke 0.3μH	
C45,46	C91-0456-05	C 0.047μF		L40	L40-4782-02	Ferri-inductor 0.47μH	
C49	CC45SL1H050C	C 5pF ±0.25pF		L41	L34-2004-05	Tuning coil ANT 1.5 MHz	
C50	CC45SL1H220J	C 22pF		L42	L40-4711-03	Ferri-inductor 470μH	
C55,57,58	C91-0456-05	C 0.047μF		L43	L40-1511-03	Ferri-inductor 150μH	
C61	CC45SL1H470J	C 47pF					

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks	
L44	L40-2282-01	Ferri-inductor 0.22μH		C76	CC45UJ1H100D	C 10pF ±0.5pF		
L45,46	L40-1511-03	Ferri-inductor 150μH		C77	CC45SL1H101J	C 100pF		
T1	L19-0303-05	Wide bandwidth trans		C78	C91-0457-05	C 0.022μF		
T2	L30-0509-05	IFT		C79	CC45CH1H050C	C 5pF ±0.25pF		
T3	L19-0303-05	Wide bandwidth trans		C80	CE04W1C220M	E 22μF 16V		
T4	L30-0509-05	IFT		C84	CE04W1H010M	E 1μF 50V		
R34	RC05GF2H104J	Solid 100kΩ 1/2W		C85	C91-0456-05	C 0.047μF		
R35	RC05GF2H151J	Solid 150Ω 1/2W		C86~89	CE04W2V220	E 22μF 350V		
R36	RC05GF2H104J	Solid 100kΩ 1/2W		C91,92	CC45SL1H470J	C 47pF		
R37	RS14AB3A332J	Metal film 3.3kΩ 1W		C93,94	CE04W1C100M	E 10μF 16V		
R38	RC05GF2H474J	Solid 470kΩ 1/2W		TC1,2	C05-0030-15	Ceramic trimmer 20pF		
VR2	R12-6404-05	Trim. pot 470kΩ			E23-0401-05	Round terminal		
	R92-0150-05	Short jumper			E40-0273-05	Mini connect wafer 2P		
	S29-7401-05	Rotary wafer ass'y			E40-0373-05	Mini connect wafer 3P		
IF UNIT (X48-1310-00)						E40-0473-05	Mini connect wafer 4P	
					E40-0573-05	Mini connect wafer 5P		
					E40-0773-05	Mini connect wafer 7P		
					J31-0502-04	PC board collar		
					J42-0404-05	PC board bushing		
C2	C91-0457-05	C 0.022μF		L1	L40-1511-03	Ferri-inductor 150μH		
C5,6	CC45SL1H470J	C 47pF		L2	L34-0940-05	Tuning coil		
C7	CE04W1C100M	E 10μF 16V		L3,4	L40-1511-03	Ferri-inductor 150μH		
C9~15	C91-0457-05	C 0.022μF		L5	L34-0942-05	Tuning coil		
C18	C91-0456-05	C 0.047μF		L6	L34-0997-05	Tuning coil		
C19	C91-0457-05	C 0.022μF		L7,8	L34-0535-05	Tuning coil		
C20	CC45SL1H100D	C 10pF ±0.5pF		L9	L40-1511-03	Ferri-inductor 150μH		
C23	C91-0457-05	C 0.022μF		L10	L34-0536-05	Tuning coil		
C24	CC45SL1H100D	C 10pF ±0.5pF		L11,12	L40-1511-03	Ferri-inductor 150μH		
C25	C91-0457-05	C 0.022μF		L13	L34-0567-05	Tuning coil BM		
C26	C91-0456-05	C 0.047μF		L14	L40-4711-03	Ferri-inductor 470μH		
C27	CC45SL1H470J	C 47pF		L15	L40-1511-03	Ferri-inductor 150μH		
C28	C91-0456-05	C 0.047μF		CF1	L72-0324-05	Ceramic filter 8.83 MHz NB	☆	
C29	C91-0457-05	C 0.022μF		XF1	L71-0208-05	MCF YK-88S		
C30	C91-0456-05	C 0.047μF		R111	RS14GB3D471J	Metal film 470Ω 2W		
C31	CC45SL1H100D	C 10pF ±0.5pF		VR1	R12-3045-05	Trim. pot 10kΩ		
C32	CC45UJ1H070D	C 7pF ±0.5pF		VR2	R12-6401-05	Trim. pot 470kΩ		
C35	CQ92M1H333K	ML 0.033μF		VR3	R12-5030-05	Trim. pot 100kΩ		
C36	C91-0456-05	C 0.047μF		VR4	R12-0401-05	Trim. pot 100Ω		
C37	CC45SL1H470J	C 47pF		VR5	R12-3045-05	Trim. pot 10kΩ		
C38	C91-0457-05	C 0.022μF			R92-0150-05	Short jumper		
C40	C91-0456-05	C 0.047μF		RL1	S51-4401-05	Relay LZN-4		
C44,47	CC45SL1H470J	C 47pF		AF UNIT (X49-1150-00)				
C49,50	CC45SL1H101J	C 100pF		C1,2	CQ92M1H123K	ML 0.012μF		
C51	CE04W1H010M	E 1μF 50V		C3	CQ92M1H223K	ML 0.022μF		
C52	CE04W1C100M	E 10μF 16V		C4,5	CQ92M1H123K	ML 0.012μF		
C53	CQ92M1H153K	ML 0.015μF		C6	CE04W1C100M	E 10μF 16V		
C54,56~58	CE04W1H010M	E 1μF 50V		C7	CE04W1H010M	E 1μF 50V		
C59	CE04W1H3R3M	E 3.3μF 50V		C8	CE04W1HR10M	E 0.1μF 50V		
C60,61,63	CE04W1H010M	E 1μF 50V		C9	CE04W1C100M	E 10μF 16V		
C64	CE04W1H4R7M	E 4.7μF 50V		C10	CQ92M1H103K	ML 0.01μF		
C65	CE04W1C100M	E 10μF 16V		C11	CE04W1A101M	E 100μF 10V		
C66	CE04W1H4R7M	E 4.7μF 50V		C12	CE04W1HR47M	E 0.47μF 50V		
C67	CE04W1A221M	E 220μF 10V						
C68	CQ92M1H473K	ML 0.047μF						
C69	CE04W1A470M	E 47μF 10V						
C70	CE04W1C100M	E 10μF 16V						
C71	CE04W1H010M	E 1μF 50V						
C72	CE04W1H3R3M	E 3.3μF 50V						
C73	CE04W1H010M	E 1μF 50V						
C74	C91-0457-05	C 0.022μF						
C75	CE04W1A221M	E 220μF 10V						

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
C13	CE04W1C100M	E 10µF 16V		C10	CE04W1A470M	E 47µF 10V	
C14	CE04W1H010M	E 1µF 50V		C11	CC45TH1H390J	C 39pF	
C15	CE04W1C3R3M	E 3.3µF 16V		C12	CC45TH1H220J	C 22pF	
C16	CQ92M1H472K	ML 0.0047µF		C13	CC45TH1H270J	C 27pF	
C17	CQ92M1H473K	ML 0.047µF		C14	CE04W1A470M	E 47µF 10V	
C19	CE04W1H3R3M	E 3.3µF 50V		C15	CC45SH1H680J	C 68pF	
C20	CE04W1H010M	E 1µF 50V		C16	CC45RH1H221J	C 220pF	
C21	C91-0456-05	C 0.047µF 25V		C18	CC45TH1H180J	C 18pF	
C22	CQ92M1H223K	ML 0.022µF		C19	CC45TH1H150J	C 15pF	
C24	CE04W1C471M	E 470µF 16V		C21	CE04W1A470M	E 47µF 10V	
C26	CE04W1C100M	E 10µF 16V		C22	CC45UJ1H270J	C 27pF	
C27	CE04W1C470M	E 47µF 16V		C23	CC45TH1H101J	C 100pF	
C29	C90-0834-05	Cap. 0.15µF 25V	☆	C24,25	CC45UJ1H120J	C 12pF	
C30	CE04W1C221M	E 220µF 16V		C27	CE04W1A470M	E 47µF 10V	
C32	CE04W1A101M	E 100µF 10V		C28	CC45UJ1H820J	C 82pF	
C33	CE04W1H010M	E 1µF 50V		C29	CC45UJ1H150J	C 15pF	
C34,35	CE04W1A470M	E 47µF 10V		C30	CE04W1A470M	E 47µF 10V	
C37	CE04W1H3R3M	E 3.3µF 50V		C31	CC45TH1H270J	C 27pF	
C43	CC45SL1H100D	C 10pF ±0.25pF		C32	CC45UJ1H050C	C 5pF ±0.25pF	
C45,52	CE04W1H010M	E 1µF 50V		C33	CC45UJ1H220J	C 22pF	
C55	CE04W1C470M	E 47µF 16V		C34	CE04W1A470M	E 47µF 10V	
C57	CE04W1C102M	E 0.001µF 16V		C35	CC45UJ1H070D	C 7pF ±0.5pF	
C58	CE04W1H3R3M	E 3.3µF 50V		C36	CC45UJ1H220J	C 22pF	
C60,61	C90-0807-05	E 2200µF 25V		C38	CE04W1A470M	E 47µF 10V	
C64,65	CQ93M2A473K	ML 0.047µF 100V		C40	CC45UJ1J150J	C 15pF	
C68	CE04W1C100M	E 10µF 16V		C41	CC45UJ1H090D	C 9pF ±0.5pF	
C69	CE04W1HR47M	E 0.47µF 50V		C42	CC45TH1H150J	C 15pF	
C73	CQ93M2A224M	ML 0.22µF 100V		C43	CE04W1A470M	E 47µF 10V	
	E23-0047-04	Square terminal		C44	CC45UJ1H100D	C 10pF ±0.5pF	
	E40-0273-05	Mini connect wafer 2P		C45	CC45UJ1H270J	C 27pF	
	E40-0373-05	Mini connect wafer 3P		C47	CC45TH1H150J	C 15pF	
	E40-0473-05	Mini connect wafer 4P		C48	CC45TH1H050C	C 5pF ±0.25pF	
	E40-0573-05	Mini connect wafer 5P		C51,53	C91-0456-05	C 0.047µF	
	E40-0673-05	Mini connect wafer 6P		C54,55	CC45SL1H121J	C 120pF	
	E40-0773-05	Mini connect wafer 7P		C56	CC45SL1H181J	C 180pF	
	F20-0516-05	Insulating sheet		C57	CC45CH1H010C	C 1pF ±0.25pF	
	F29-0014-05	Shoulder washer		C58	CC45SL1H050C	C 5pF ±0.25pF	
	J31-0502-04	PC board collar		C67	CC45SL1H330J	C 33pF	
	J42-0404-05	PC board bushing		C68,69	CC45SL1H680J	C 68pF	
L1	L40-3392-02	Ferri-inductor 3.3µH		C70	CC45SL1H330J	C 33pF	
L2~4	L40-1511-03	Ferri-inductor 150µH		C71,72	CC45SL1H221J	C 220pF	
T1	L34-0535-05	Tuning coil red NB		C74,76	C91-0456-05	C 0.047µF	
T2	L34-0536-05	Tuning coil blue NB		C80	CE04W1H010M	E 1µF 50V	
VR1	R12-3411-05	Trim. pot 47kΩ		C82	C91-0456-05	C 0.047µF	
VR2	R12-0413-05	Trim. pot 470Ω		C87	CQ92M1H102K	ML 0.001µF	
VR3	R12-3411-05	Trim. pot 47kΩ		C88	CQ92M1H104K	ML 0.1µF	
	R92-0150-05	Short jumper		C89	C91-0456-05	C 0.047µF	
PLL UNIT (X50-1680-01)				C90,91	CE04W1A101M	E 100µF 10V	
C1	CE04W1A470M	E 47µF 10V		C92	CE04W1A470M	E 47µF 10V	
C2	CC45TH1H270J	C 27pF		C94	CE04W1A101M	E 100µF 10V	
C3	CC45TH1H180J	C 18pF		C95	CC45SL1H390J	C 39pF	
C4	CC45TH1H270J	C 27pF		C97	CC45SL1H331J	C 330pF	
C5	CE04W1A470M	E 47µF 10V		C98	CC45SL1H470J	C 47pF	
C6	CC45UJ1H101J	C 100pF		C99	CC45SL1H150J	C 15pF	
C7	CC45UJ1H150J	C 15pF		C100	CC45SL1H470J	C 47pF	
				C101	CC45SL1H270J	C 27pF	
				C102	CC45SL1H560J	C 56pF	
				C103	CC45SL1H270J	C 27pF	
				C104	CC45SL1H470J	C 47pF	
				C105	C91-0456-05	C 0.047µF	
				C106	CC45SL1H470J	C 47pF	
				C107	CC45SL1H070D	C 7pF ±0.5pF	
				C109	C91-0456-05	C 0.047µF	
				C111	CC45SL1H101J	C 100pF	
				C112	CC45SL1H221J	C 220pF	

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
C113	CC45SL1H101J	C 100pF		L31	L40-2211-03	Ferri-inductor 220μH	
C115	CC45RH1H100D	C 10pF ±0.5pF		L32	L33-0636-05	Choke coil 20μH	
C116	CC45TH1H050C	C 5pF ±0.25pF		L33~36	L40-1511-03	Ferri-inductor 150μH	
C117	CC45CH1H010C	C 1pF ±0.25pF		L37	L40-4711-03	Ferri-inductor 470μH	
C118	CC45RH1H560J	C 56pF		L38,39	L40-1511-03	Ferri-inductor 150μH	
C120	CC45CH1H020C	C 2pF ±0.25pF		L40	L40-4711-03	Ferri-inductor 470μH	
C121	CC45SL1H470J	C 47pF		L41,42	L40-4701-03	Ferri-inductor 47μH	
C123	CC45RH1H390J	C 39pF		L43,44	L40-2211-03	Ferri-inductor 220μH	
C125	CC45TH1H330J	C 33pF		L45~50	L40-1511-03	Ferri-inductor 150μH	
C126	CC45TH1H150J	C 15pF		T1	L32-0195-05	OSC coil 7, 10 MHz	
C127	CC45TH1H330J	C 33pF		T2	L32-0193-05	OSC coil 1.5, 3.5 MHz	
C130	CC45UJ1H150J	C 15pF		T3	L32-0196-05	OSC coil 14 MHz	
C131	CC45UJ1H050C	C 5pF ±0.25pF		T4	L32-0199-05	OSC coil 18 MHz	
C132	CC45UJ1H150J	C 15pF		T5	L32-0198-05	OSC coil 28 MHz	
C139	CC45SL1H100D	C 10pF ±0.5pF		T6	L32-0197-05	OSC coil 21, 24.5 MHz	
C140	CC45RH1H220J	C 22pF		T7	L34-0714-05	Tuning coil	
C142	CC45RH1H470J	C 47pF		T8	L34-0715-05	Tuning coil	
C143	CC45RH1H220J	C 22pF		T9	L34-0716-05	Tuning coil	
C144	CC45RH1H470J	C 47pF		T10	L34-0717-05	Tuning coil	
C159	CC45SL1H330J	C 33pF		T11	L34-0718-05	Tuning coil	
C160	CC45SL1H100D	C 10pF ±0.5pF		T12	L34-0757-05	Tuning coil	
C162	CC45CH1H010C	C 1pF ±0.25pF		T13	L34-0711-05	Tuning coil	
C163	CC45SL1H150J	C 15pF		T14	L34-0713-15	Tuning coil	
C166	CC45SL1H100D	C 10pF ±0.5pF		T15	L34-0712-05	Tuning coil	
C167	CC45CH1H020C	C 2pF ±0.25pF		T16	L32-0201-05	OSC coil 8.83 MHz	
C169	CC45SL1H101J	C 100pF		T17	L34-0709-05	Tuning coil 10 MHz	
C172	C91-0456-05	C 0.047μF		T18	L34-0710-05	Tuning coil 20 MHz	
C173	CC45RH1H040C	C 4pF ±0.25pF		X1	L77-0482-05	Crystal 10 MHz	
C174	CC45RH1H470J	C 47pF		X2	L77-0486-05	Crystal 8.8285 MHz	
C178,179	CC45RH1H220J	C 22pF		X3	L77-0485-05	Crystal 8.8315 MHz	
C182,183	C91-0456-05	C 0.047μF		VR1	R12-5030-05	Trim. pot 100kΩ	
C184	CC45CH1H270J	C 27pF		VR2,3	R12-1040-05	Trim. pot 4.7kΩ	
C185	CC45CH1H390J	C 39pF			R92-0150-05	Short jumper	
C186	CC45CH1H101J	C 100pF		COUNTER UNIT (X54-1540-00)			
C187	CC45SL1H221J	C 220pF		C2	C91-0456-05	C 0.047μF	
C188	CC45SL1H220J	C 22pF		C3	C91-0457-05	C 0.022μF	
C189	CC45SL1H050C	C 5pF ±0.25pF		C4	CC45SL1H150J	C 15pF	
C194	CE04W1A470M	E 47μF 10V		C6	CE04W1A470Q	E 47μF 10V	
C196	CC45SL1H100D	C 10pF ±0.5pF		C7	CE04W1A101Q	E 100μF 10V	
C197~202	C91-0456-05	C 0.047μF		C8,9	C91-0456-05	C 0.047μF	
C205	CE04W1HR47M	E 0.47μF 50V		C11	CE04W1C101M	E 100μF 16V	
TC1	C05-0029-15	Ceramic trimmer 50pF		C12	CE04W1V100Q	E 10μF 35V	
TC2,3	C05-0056-05	Ceramic trimmer 30pF		C13	CQ92M1H103K	ML 0.01μF 50V	
	E04-0154-05	Coax connector		C14~16	CE04W1V100Q	E 10μF 35V	
	E23-0046-04	Square terminal		C17,18	C91-0456-05	C 0.047μF	
	E40-0273-05	Mini connect wafer 2P		C19	CQ92M1H103K	ML 0.01μF 50V	
	E40-0373-05	Mini connect wafer 3P		C21,22	CC45SL1H050C	C 5pF ±0.25pF	
	E40-0473-05	Mini connect wafer 4P		C23	CE04W1A330Q	E 33μF 10V	
	E40-0673-05	Mini connect wafer 6P		C24~26	C91-0456-05	C 0.047μF	
	E40-0973-05	Mini connect wafer 9P		C28	CE04W1H100M	E 10μF 50V	
	E40-1073-05	Mini connect wafer 10P			J31-0502-04	PC board collar	
L1~7	L40-1511-03	Ferri-inductor 150μH			J42-0404-05	PC board bushing	
L8	L40-4701-03	Ferri-inductor 47μH		L1	L40-4711-03	Ferri-inductor 470μH	
L9	L40-1592-02	Ferri-inductor 1.5μH		L2	L40-1011-04	Ferri-inductor 100μH	
L10	L40-1092-02	Ferri-inductor 1μH		L3	L40-2211-03	Ferri-inductor 220μH	
L11	L40-1292-02	Ferri-inductor 1.2μH		L4	L40-1511-03	Ferri-inductor 150μH	
L12	L40-1892-02	Ferri-inductor 1.8μH					
L13,14	L40-4711-03	Ferri-inductor 470μH					
L15,16	L40-8201-03	Ferri-inductor 82μH					
L17	L40-1511-03	Ferri-inductor 150μH					
L18~20	L40-2701-03	Ferri-inductor 27μH					
L21~24,27~30	L40-1511-03	Ferri-inductor 150μH					


PARTS LIST/PACKING

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
T1	L19-0323-05	OSC trans	☆	VFO UNIT (X40-1170-00)			
R10	RC05GF2H221J	Solid 220Ω 1/2W		C2	C91-0456-05	C 0.047μF 25V	
RB1,2	R90-0521-05	Resistor block 47kΩ X7		C4	CC45CG1H050C	C 5pF ±0.25pF	
RB3,4	R90-0522-05	Resistor block 47kΩ X6		C6	C91-0456-05	C 0.047μF 25V	
	R92-0150-05	Short jumper		C7	CC45LG1H151J	C 150pF	
FINAL UNIT (X56-1380-00)				C9	CC45LG1H121J	C 120pF	
C1	CC45SL2H101J	C 100pF 500V		C12	CC45LG1H680J	C 68pF	
C36	CC45CH2H150J	C 15pF 500V D		C13	CC45CG1H220J	C 22pF	
	E01-0002-05	8P (octal) socket		C14	CC45PG1H100D	C 10pF ±0.5pF	
	E23-0046-04	Square terminal		C15,16	CC45LG1H151J	C 150pF	
L1	L40-1511-03	Ferr-inductor 150μH		C17	CC45CH1H020C	C 2pF ±0.25pF	
L2	L40-4711-03	Ferri-inductor 470μH		C18	C91-0456-05	C 0.047μF 25V	
PS1,2	L33-0010-05	Parastic suppressor GRID		C21	CC45SL1H390J	C 39pF	
R2~5	RC05GF2H200J	Solid 20Ω 1/2W		C22	CC45CH1H100D	C 10pF ±0.5pF	
R7	RC05GF2H101J	Solid 100Ω 1/2W		C23	CC45SL1H390J	C 39pF	
R8	RC05GF2H101J	Solid 100Ω 1/2W		C24	C91-0456-05	C 0.047μF 25V	
R29	R92-0615-05	Cement 6.2Ω 7W D		TC1	C05-0009-15	Ceramic trimmer 6pF	
VFO ASS'Y UNIT (X60-1150-01)				TC2	C05-0013-15	Ceramic trimmer 20pF	
	B07-0630-05	Dial escutcheon		VC1	C02-0019-05	Variable cap.	
	B10-0632-04	Escutcheon glass		D40-0614-05		Dial mechanism ass'y	
	B20-0816-04	Dial scale (B)		E40-0574-05		Mini connect wafer 5P	
	B20-0818-04	Dial scale (A)	☆	F29-0014-05		Insulating washer	
	B30-0819-05	Pilot lamp		L1	L32-0628-05	OSC coil	
	B42-1645-04	Seal Bottom		L2	L33-0025-05	Choke coil 1μH	
	B42-1671-04	Seal Top		L3	L32-0629-05	OSC coil	
	G01-0804-04	Coil spring		L4	L32-0609-05	OSC coil	
	K21-0753-04	Main knob		L5	L40-1021-03	Ferri-inductor 1mH	
	X40-1170-00	VFO unit		L6	L40-4711-03	Ferri-inductor 470μH	
				L7	L40-1021-03	Ferri-inductor 1mH	
				L8	L40-1501-03	Ferri-inductor 15μH	
				L9~11	L40-4711-03	Ferri-inductor 470μH	
					R92-0150-05	Short jumper	


PACKING

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk


- ★ Protective bag (H25-0120-04)
- 4P MIC plug (E07-0403-05) (W),(T),(X),(M)
- 7P DIN plug (E07-0751-05)
- Phone plug (E12-0001-05)
- Fuse 4A (F05-4022-05) (W),(T),(X),(M)
- Fuse 6A (F05-6021-05) (K),(M)
- Foot (large) x2 (J02-0049-14)
- Round crew (4 x25) x2 (N30-4025-46)

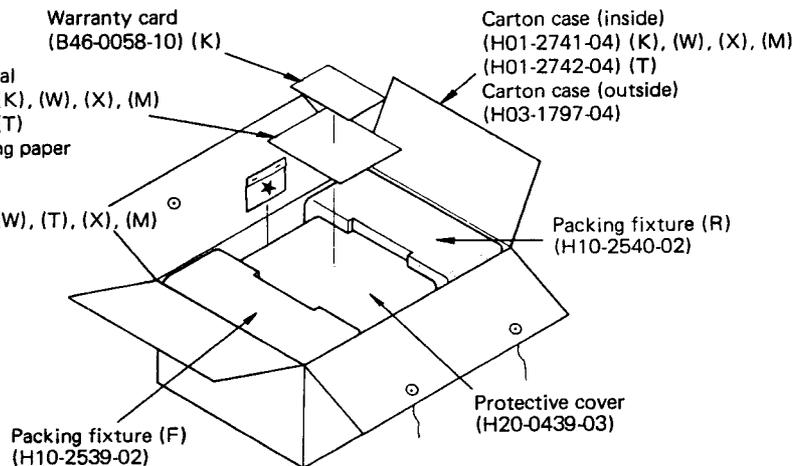

DISASSEMBLY

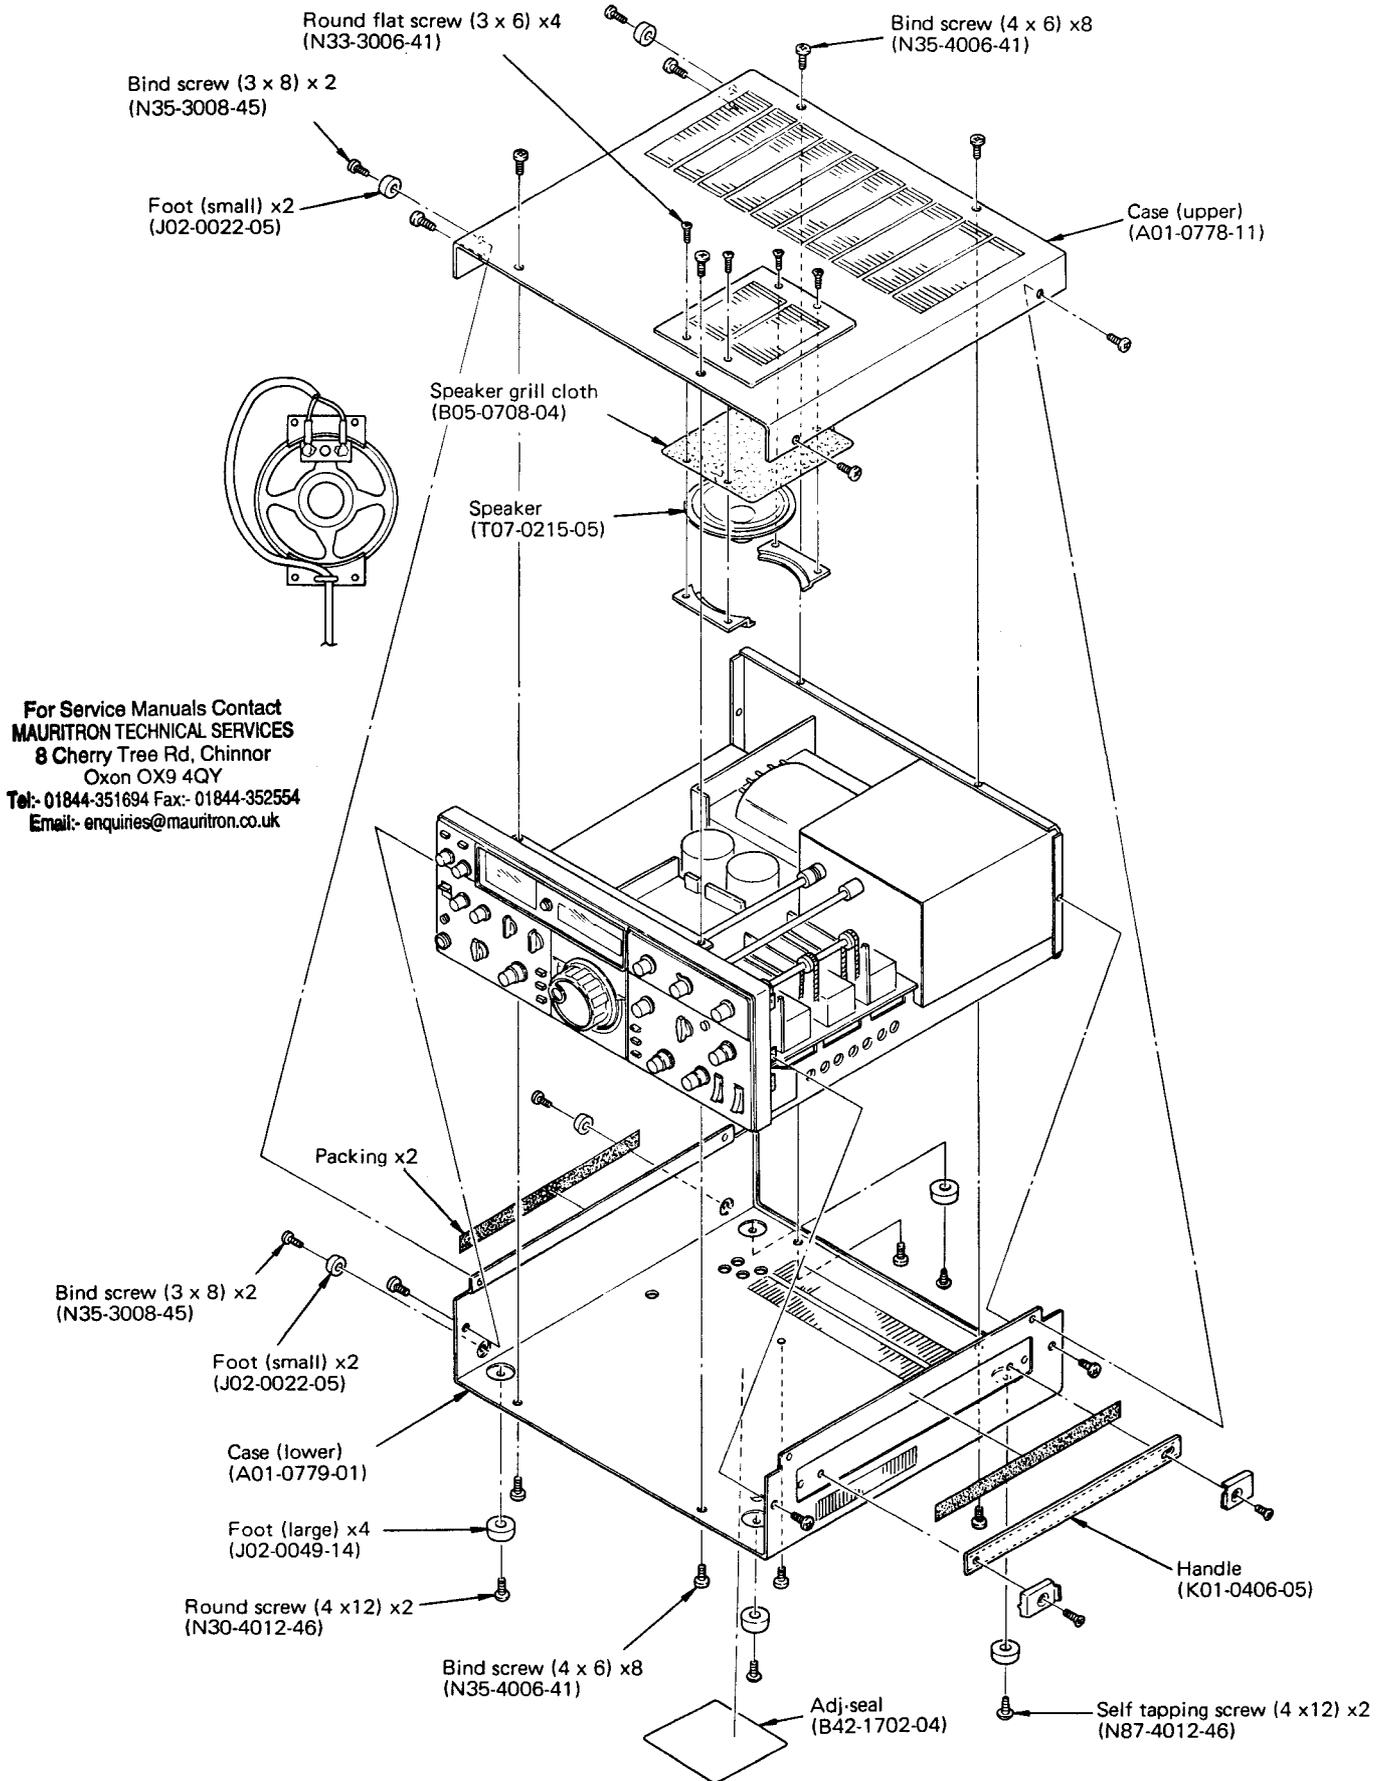


DISASSEMBLY

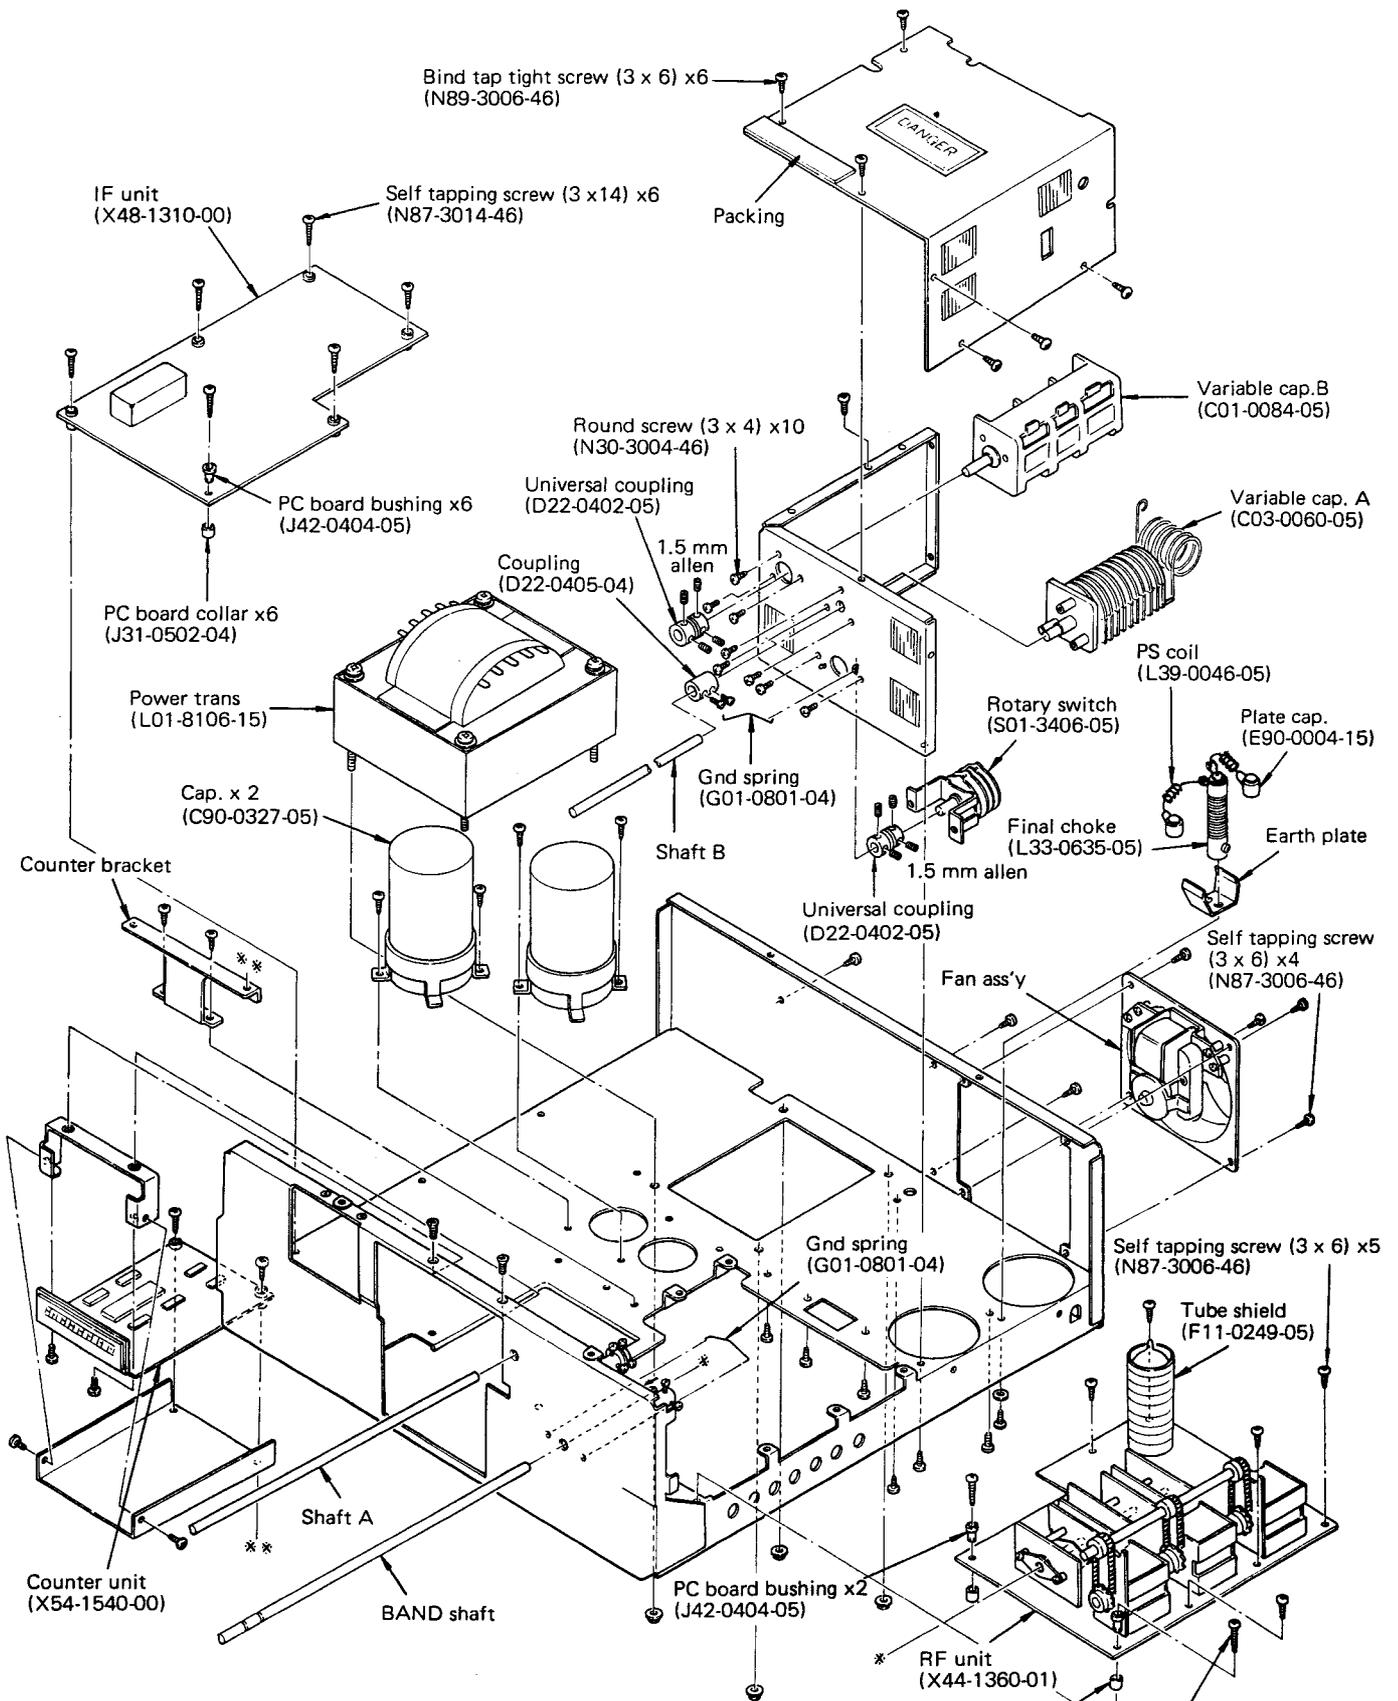

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

DISASSEMBLY

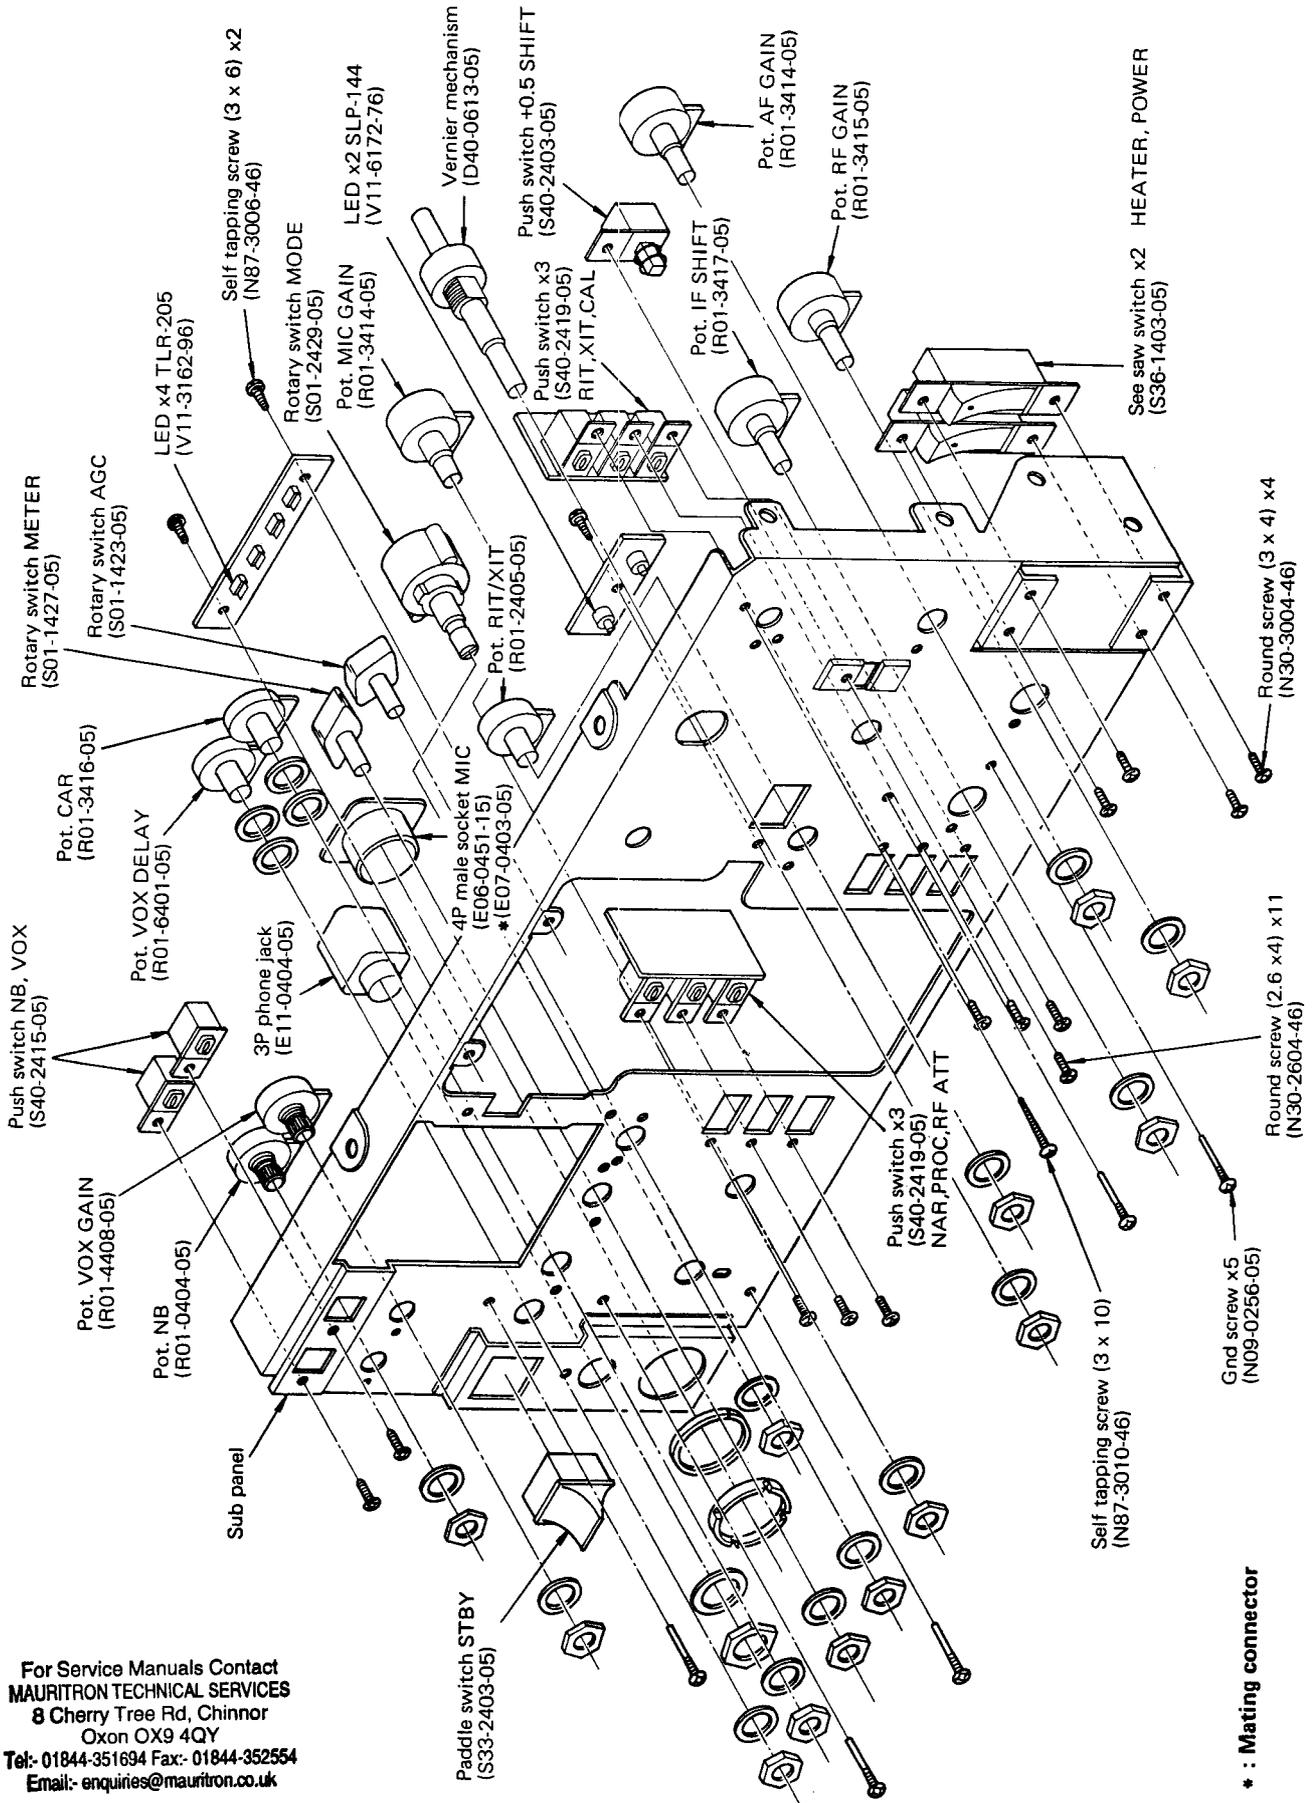

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

* : Mating connector

ADJUSTMENTS

TEST EQUIPMENT REQUIRED

1. VTVM or DVM

- 1) Input resistance: More than 1 MΩ
- 2) Voltage range: 1.5 to 1000V AC/DC

NOTE:

A high-precision voltmeter may be used. However, accurate readings can not be obtained for high-impedance circuits.

2. RF VTVM

- 1) Input impedance: 1 MΩ and less than 3 pF.
- 2) Voltage range: 10 mV to 300V
- 3) Frequency range: 50 MHz or greater

3. AF VTVM

- 1) Frequency range: 50 Hz to 10 kHz
- 2) Input impedance: 1 MΩ or greater
- 3) Voltage range: 10 mV to 30V

4. AF GENERATOR (AG)

- 1) Frequency range: 200 Hz to 5 kHz
- 2) Output: 2 mV~ 1V, low distortion

5. AF DUMMY LOAD

- 1) Impedance: 8Ω
- 2) Dissipation: 3W or greater

6. RF DUMMY LOAD

- 1) Impedance: 50Ω
- 2) Dissipation: 100W continuous or greater
- 3) Frequency limits: 1.8 to 30 MHz

7. OSCILLOSCOPE

Requires high sensitivity and external synchronization capability.

8. SWEEP GENERATOR

- 1) Center frequency: 8 to 40 MHz
- 2) Sweep bandwidth: Maximum ±16 MHz
- 3) Output voltage: More than 0.1V

9. STANDARD SIGNAL GENERATOR (SSG)

- 1) Frequency range: 1.8 to 30 MHz
 - 2) Output: -20 dB/0.1 μV~120 dB/1V
 - 3) Output Z= 50Ω
- Generator must be frequency stable.

10. FREQUENCY COUNTER

- 1) Minimum input voltage: 50 mV
- 2) Frequency range: Greater than 50 MHz

11. NOISE GENERATOR

Must generate ignition-like noise containing harmonics beyond 30 MHz.

12. Spectrum analyzer


- 1) Frequency range: 100 kHz to 110 MHz
- 2) Bandwidth: 1 kHz to 3 MHz

NOTE:

R-1000 receiver may be used.

13. Detector

For adjustment of PLL unit BPF.



14. Directional coupler

15. 8P DIN connector

Refer to Fig. 9 on page 43.

PREPARATION

Unless otherwise specified, set the controls as follows.

Rear panel

SG SW OFF

Front panel

MODE	TUNE	MIC GAIN	MIN
CAR	MIN	RF GAIN	MAX
VOX	OFF	PROC	OFF
METER	IP	BAND	1.5
RIT/XIT	CENTERED	AGC	OFF
HEATER	OFF	VOX GAIN	MIN
NB	OFF	RIT	OFF
RF ATT	OFF	CAL	OFF
XIT	OFF	VOX DELAY	MIN
IF SHIFT	CENTERED	AF GAIN	MIN
		NB LEVEL	MIN

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks	
		Test equipment	Unit	Terminal	Unit	Parts	Method			
1. 9V AVR and 3.2V adjustment		DVM	AF	TP-6 Pin-5, connector ①	AF	VR2 VR3	9V 3.2V	9V±0.05V 3.2V±0.05V	RF1 (FET bias)	
2. Base current adjustment	SG SW : ON MODE : USB METER : IP HEATER : ON DRIVE : Fully clockwise STBY : SEND BIAS pot. : Adjust	1P meter								
	STBY REC, SG SW OFF				Rear panel	Bias pot.		Set to 60mA	Set to 30mA (TS-530D)	
3. Carrier adjustment ①	IF SHIFT : Centered MODE : USB	RF VTVM	IF	Pin1, connector ⑧	PLL	NOTE : T16	0.3V	0.3V±1 dB	NOTE : The slug of T16 should be turned counter clockwise for this adjustment after the peak point is determined.	
	MODE : LSB STBY : REC ↓ SEND	F. counter				VR2	Obtain the same frequency for both transmission and reception	±20 Hz		
	STBY : REC					TC2	8828.50 kHz			
	MODE : USB					TC3	8831.50 kHz			
	MODE : CW STBY : SEND					VR3	8830.70 kHz			
	STBY : REC									
4. IF SHIFT check	MODE : LSB Rotate the IF SHIFT and check the variation	F. counter	IF	Pin 1, connector ⑧				Set IF SHIFT to center. More than + 1.1 kHz , Less than -1.1 kHz.		
	MODE : USB Same as above									
	STBY : SEND Regardless of the IF SHIFT setting								8831.50 kHz	USB
	STBY : REC								8828.50 kHz	LSB
5. VFO, RIT check and adjustment	Scale 0~500							Should rotate smoothly and have no abnormal noise.		
	Rear panel SG SW OFF	RF VTVM	PLL	Pin 1, connector ⑧ 2P(GND)	Adjust if the voltage is out of specification.			200 mV±1 dB		
	VFO : 250 MODE : CW STBY : SEND	F. counter	Rear panel	EXT VFO 1P, 7P (GND)	Adjust if the frequency is out of specification.	VFO TC2	200mV 800 Hz UP	800±50 Hz	CW SHIFT	

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks	
		Test equipment	Unit	Terminal	Unit	Parts	Method			
	STBY : REC Set the VFO dial to 50. At this time set the CAL control to the index.	F.counter	Rear panel	EXT VFO	VFO	L3		5550.00 kHz ±200 Hz	Repeat the adjustment several times until the frequency is within specification.	
	Set the VFO dial to approx. 450. Set the CAL control dial calibrated under this VFO setting exactly to the index.			1P 7P (GND)		TC1		5950.00 kHz ±200 Hz		
	Tune to 5550.00 kHz with the main tuning knob.									The 50 kHz point on the dial scale must be aligned to the index.
Dial calibration, electrical.	Tune to the CAL signal in order : 0, 100, 200, 300, 400, and 500 to check dial calibration at each 100 kHz point.				0 100 200 300 400 500	5.5 MHz 5.6 5.7 5.8 5.9 6.0		Within ±2.5 kHz	Check the dial scale (Electrically)	
Backlash	Calibrate the dial at 0kHz. Tune to 250kHz, then reverse direction and tune back to 0kHz without rocking the dial, and stop.							Less than 400Hz Backlash	Backlash	
Dial calibration mechanical	Repeat electrical dial scale check procedure (for mechanical spec).								Calibration should come in contact with the dial pointer.	Check the dial scale (mechanically).
	RIT SW : ON Set the VFO main control to 5750.000 kHz				IF	VR5	5750.000 kHz			
	Check that the same frequency is obtained when the RIT switch is turned ON and OFF.							Within ±50 Hz		
	RIT SW : ON VFO : 250 RIT control : fully counter-clockwise (⊖ position) RIT control : fully clockwise (⊕ position).								-1.5kHz or less +1.5kHz or more Reference to the center (⌀ position of the RIT control).	

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
9. BPF-B adjustment	Disconnect connectors ① and ⑤ on the PLL unit. Connect the cathode of D27 (1S1555) to the jumper wire next to R44 with a clip lead. Connect the cathode of D50 (1S1587) to the jumper wire next to TC1 with a clip lead. Connect the RF output of the sweep generator to R111(100Ω) via a 15pF capacitor.	Sweep generator Oscilloscope	PLL	Q35 ⑥	PLL	T7 T8 T9 T17	Adjust T7~T9 until the response shown at the right is obtained. Then adjust T17 for maximum amplitude.		
10. BPF-C adjustment	Disconnect connectors ① and ⑤ on the PLL unit. Connect the cathode of D26 (1S1555) to the jumper wire next to R44 with a clip lead. Connect the cathode of D50 (1S1587) to the jumper wire next to TC1 with a clip lead.					T10 T11 T12 T18	Adjust T10 through T12 until the band response shown at right is obtained. Then adjust T18 for maximum amplitude.		
11. Carrier balance adjustment	IF SHIFT : Centered RF GAIN : Fully counter-clockwise	RF VTVM	IF	Drain of Q4	IF	TC2	Minimum		Reference approx. 5mV
12. IF AMP adjustment	BAND : 1.5 VFO : 400 DRIVE : 12 : 00 RF GAIN : fully clockwise IF SHIFT : Centered RF ATT : OFF MODE : USB AGC : OFF NB SW : OFF SG SW : OFF Connect the SSG output (1.9MHz, 40dB) to the antenna terminal. While adjusting, gradually decrease the SSG output level down to -6dB.	AF VTVM Oscilloscope	Rear panel	EXT. SP	RF	ANT coil 1.8 RF coil 1.8 T2 L2 L5 L6 L7 L8 L10	Max. audio output		

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks								
		Test equipment	Unit	Terminal	Unit	Parts	Method										
13. Coil pack adjustment	Connect the SSG (40dB) to the ANT terminal DRIVE : 12:00 While adjusting, gradually decrease the SSG output level down to -6 dB. Adjust at the following points:	AF VTVM Oscilloscope	Rear panel	EXT. SP	RF	ANT coil RF coil	Max. audio output										
										No.	BAND	VFO	f				
										1	1.5	400	1.9 MHz	1.8			
										2	3.5	250	3.75	3.5			
										3	7	150	7.15	7			
										4	10	125	10.125	10			
										5	14	175	14.175	14			
										6	18	125	18.125	18			
										7	21	225	21.225	21			
										8	24.5	450	24.950	24.5			
	9	28.5	300	28.800	28												
14. Drive coil adjustment	CAL : ON CAR VR : optimum level METER : ALC HEATER : ON MODE : CW SG SW : OFF ANT : 50Ω dummy should be connected. Connect pin 2 to pin 4, connector ⑦ on the AF unit with a clip lead. Receive the marker frequency in the following bands and obtain the peak level by adjusting the DRIVE control. Set the STBY switch to SEND and adjust each drive coil.	50Ω dummy			RF	DRIVE coil	Max. ALC meter reading		NOTE: The 50Ω dummy should be connected to the ANT terminal. Otherwise drive tuning will be incorrect. () : See note BEFORE adjustment Note : TRANSMITTING ON WARC BANDS As supplied, the TS-530S will receive but not transmit on the 3 new WARC bands. If transmit capability is desired, a minor wiring change is required. 1. For all 3 bands : Break the line between the RF unit X44-1360-01, connector #6, Pin #1 (TOF terminal) and AF unit X49-1150-00, connector #7, Pin #4 (TOF terminal). 2. Or, for individual Bands : On the RF unit X44-1360-01 : <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">Band</td> <td style="width: 50%;">Remove (or Cut) Part</td> </tr> <tr> <td>10 MHz</td> <td>D4</td> </tr> <tr> <td>18 MHz</td> <td>D5</td> </tr> <tr> <td>24.5 MHz</td> <td>D6</td> </tr> </table>	Band	Remove (or Cut) Part	10 MHz	D4	18 MHz	D5	24.5 MHz	D6
										Band	Remove (or Cut) Part						
										10 MHz	D4						
										18 MHz	D5						
										24.5 MHz	D6						
										BAND	VFO						
										1.5	400			1.8			
										3.5	250			3.5			
										7	150			7			
										(10)	(125)			10			
14	175			14													
(18)	(125)			18													
21	225			21													
(24.5)	(450)			24.5													
28.5	300			28													
	STBY : REC																

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844 351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
	BAND : 14 VFO : 175 STBY : SEND Adjust the CAR control until the ALC meter reads maximum.				IF RF	L13 T4	Max. ALC meter reading		
	STBY : REC Disconnect clip lead from connector ⑦.								
15. IF TRAP adjustment	BAND : Between 1.5 and AUX. Connect the SSG (8.83 MHz, 80dB) to the ANT terminal.	Oscilloscope AF VTVM	Rear panel	EXT. SP	RF	L3 L4	Adjust alternately for minimum		Preset the slugs of L3 and L4 fully clockwise.
16. VFO MIX spurious adjustment	BAND : 3.5 VFO : 388 MODE : LSB Connect the SSG output (3.888 MHz, 60dB) to the ANT terminal. 1) Adjust the SSG frequency to obtain zero beat. 2) Turn the VFO tuning to dial 384 to obtain a spurious beat.	Oscilloscope AF VTVM	Rear panel	EXT. SP	PLL	VR1	minimum beat output		The position of VR1 after adjustment should be approximately centered.
17. S meter adjustment	AGC : OFF				IF	VR1	Set to the deflection starting point.		
	BAND : 14 VFO : 175 AGC : FAST Connect the SSG (14.174 MHz, 8dB) to the ANT terminal.	Oscilloscope AF VTVM	Rear panel	EXT. SP			Adjust the DRIVE control for maximum AF output.		
	SSG output : 40dB				IF	L8	Turn the coil slug counterclockwise until S-1 is obtained.		
						VR2	Set to S-9		Repeat S-1,9 adjustment several times.
18. NB adjustment	NB LEVEL : fully counterclockwise BAND : 14 VFO : 175 Connect the SSG output (14.175 MHz 60dB) to the ANT terminal. SSG output : 20dB Adjust as described above.	DVM	AF	TP4	AF	T1 T2	Minimum		

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks						
		Test equipment	Unit	Terminal	Unit	Parts	Method								
NB adjustment	AGC : FAST	Speaker	Rear panel	EXT. SP											
	Disconnect the SSG output from the ANT terminal, and connect the noise generator output in it's place. Set the noise generator output level to S5~7.														
	NB : ON							The NB must provide adequate effect.							
								If adequate effect is not obtained, repeat the adjustment several times.							
	Reduce the noise generator output level to below the threshold of sensitivity. Turn the NB LEVEL control fully clockwise.							Noise must be blanked.							
	NB : OFF														
19. Neutralization trimmer adjustment	BAND : 28, +0.5 SHIFT : ON	Power meter Sync'ed scope	Rear panel	ANT					Tune-up for MAX RF output.						
	VFO : 300														
	SG SW : ON														
	STBY : SEND														
	Tune the DRIVE, PLATE and LOAD														
SG SW : OFF							RF output must be 0.								
METER : ALC															
Set the ALC to maximum with the DRIVE control. Increase oscilloscope sensitivity.						Neutralization trimmer TC1	Minimum								
Reduce oscilloscope sensitivity (5V/div.).															
SG SW : ON								The normal power must be obtained. The signal waveform must be normal.							
20. Side tone, semi-break-in function adjustment	Connect a power meter to the ANT terminal. Plug key into the rear Key jack to transmit in any band.	Oscilloscope AF VTVM	Rear panel	EXT. SP	AF	VR1	0.63V/8Ω								
	Operate the key.														The key must control RF output.
	STBY : REC														
	VOX : ON														
	Operate the key														

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
21. Transmission spurious adjustment	Connect pin2 and 4 of connector ⑦ on the AF unit with a clip lead. Set the BAND switch to 18, and VFO to 125. Connect a power meter to the ANT terminal. Set the STBY switch to SEND and tune up.	Spectrum analyzer (receive 17.66MHz with a monitor receiver.)	Rear panel	ANT	RF	VR2	Minimum (Monitor level)	Less than -40dB	
	STBY : REC Disconnect clip lead from connector ⑦								
22. RF meter adjustment	BAND : 14 VFO : 175 METER : RF Connect a power meter to the ANT terminal. Tune up. STBY : REC				Rear panel	RF Meter Pot.	Set the meter to read 250 on the IP scale.		
23. Carrier suppression adjustment	BAND : 14 VFO : 175 MODE : CW Connect power meter to ANT. STBY : SEND	Sync'ro scope	Rear panel	ANT					Tune-up for max RF output.
	MODE : USB				IF	VR4 TC1	Adjust alternately until minimum output is obtained.		
	MODE : LSB ↓ USB						Adjust until no level difference exists between LSB and USB.		
	MODE : CW Sync'ed scope level calibration						Note scope deflection level.		
	MODE : USB, LSB STBY : REC							Less than -50dB	Compared with CW.
24. SSB frequency response adjustment	BAND : 14 VFO : 175 MODE : USB Connect the AG (1500 Hz, 7mV) to the MIC input connector. STBY : SEND Tune up. Set to 50W output with MIC GAIN control.	Power meter Sync'ed scope	Rear panel	ANT					

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
	AG : 300Hz ↓ 2700Hz				PLL	TC3	Adjust until the same level is obtained for both 300Hz and 2700Hz (equal audio rolloff).		
	MODE : LSB same as above AG : 400Hz AG : 2600Hz					TC2		More than 1/2 with respect to the 1500Hz signal level observed on the scope.	
	After completing the above adjustment, readjust carrier suppression (see item 23.)				IF	VR4 TC1	Minimum	Less than -50dB	
	STBY : REC								
25. Speech processor adjustment	SG SW : OFF MODE : USB PROC : OFF METER : ALC Connect the AG (1500 Hz, 10mV) to the MIC input connector. STBY : SEND Adjust the MIC gain control until the meter indicates the maximum on-scale ALC reading.								
	PROC : ON				IF	VR3	Adjust until the same meter reading is obtained (max on-scale ALC).		
	STBY : REC PROC : OFF								

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel:- 01844-351694 Fax:- 01844-352554
Email:- enquiries@mauritron.co.uk

ADJUSTMENTS

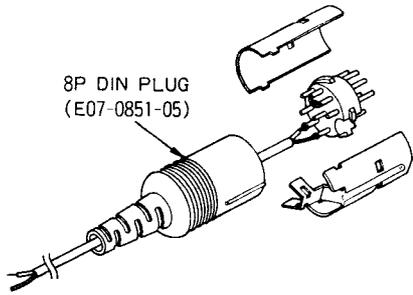


Fig. 9 8P DIN connector

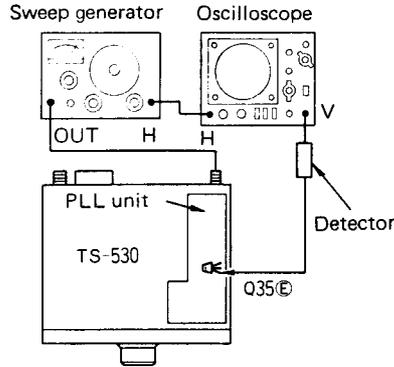


Fig. 10 (8) BPF-A, (9) BPF-B, (10) BPF-C


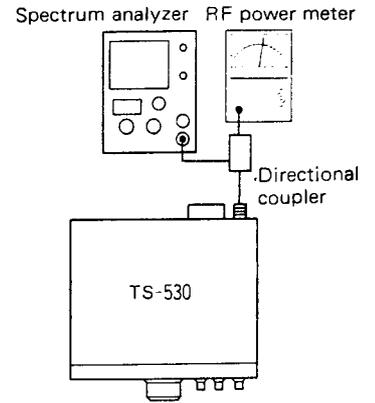


Fig. 11 (21) TX SPURIOUS

▼ TOP VIEW

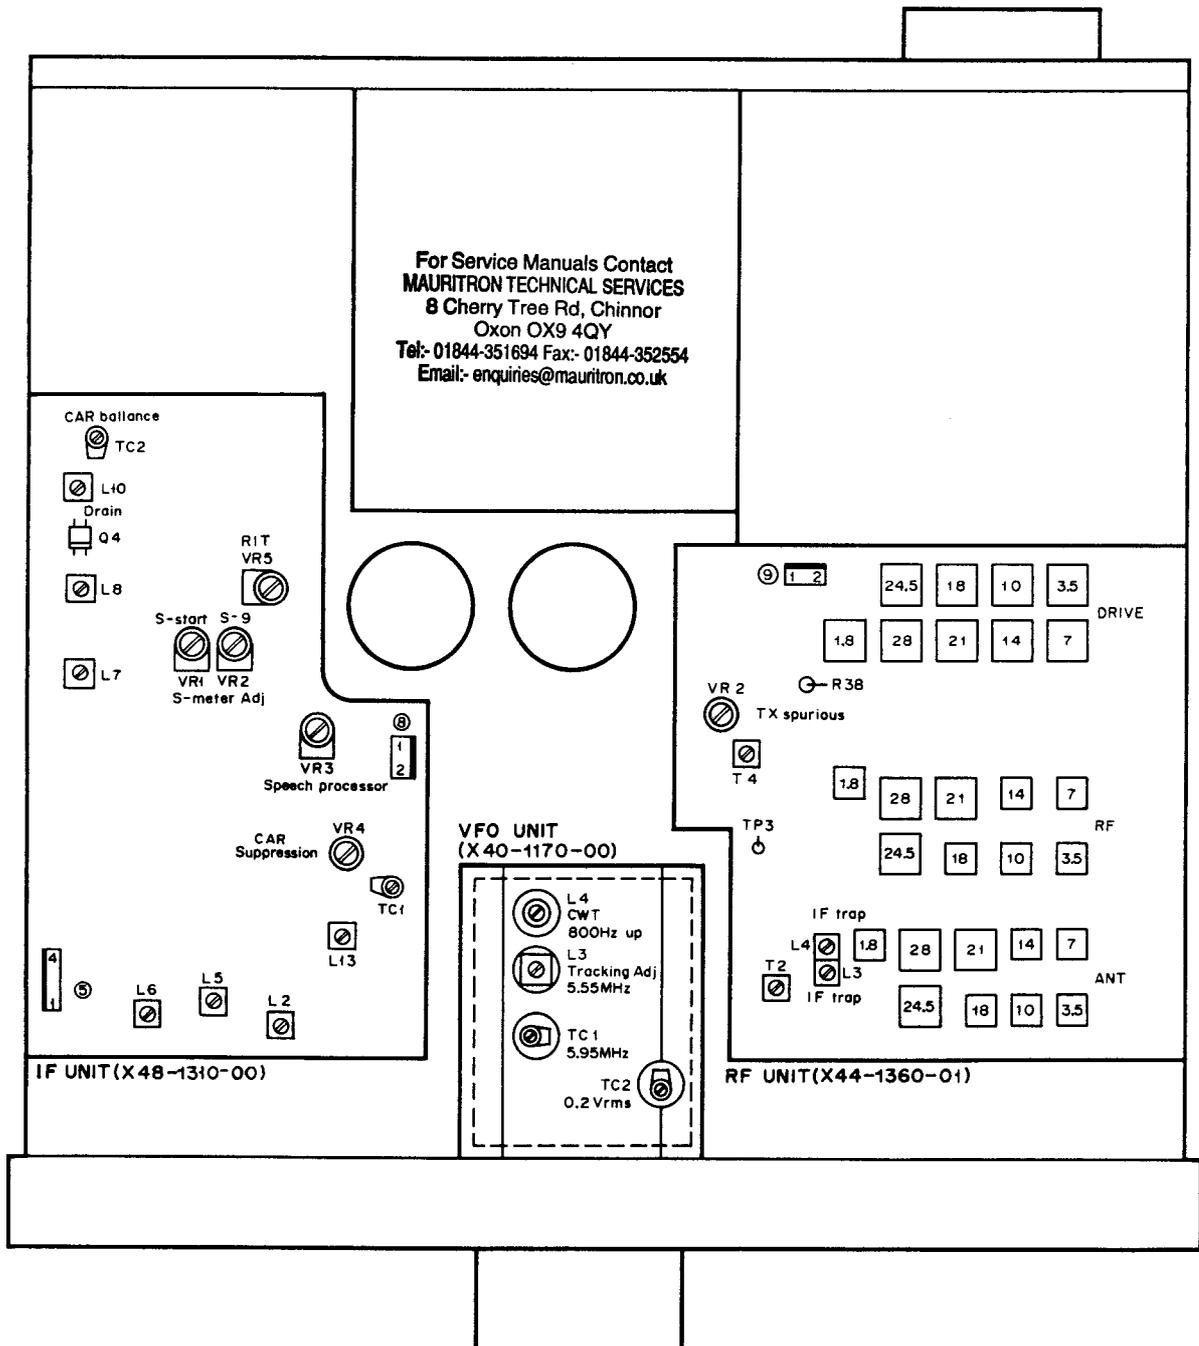

ADJUSTMENTS


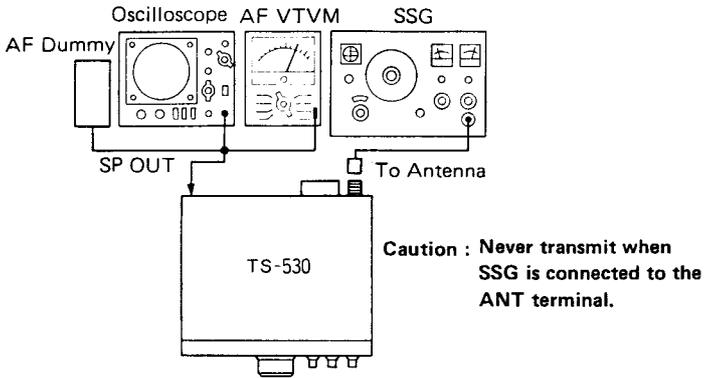


Fig. 12 (12) IF AMP, (13) COIL PACK, (15) IF TRAP

▼ BOTTOM VIEW

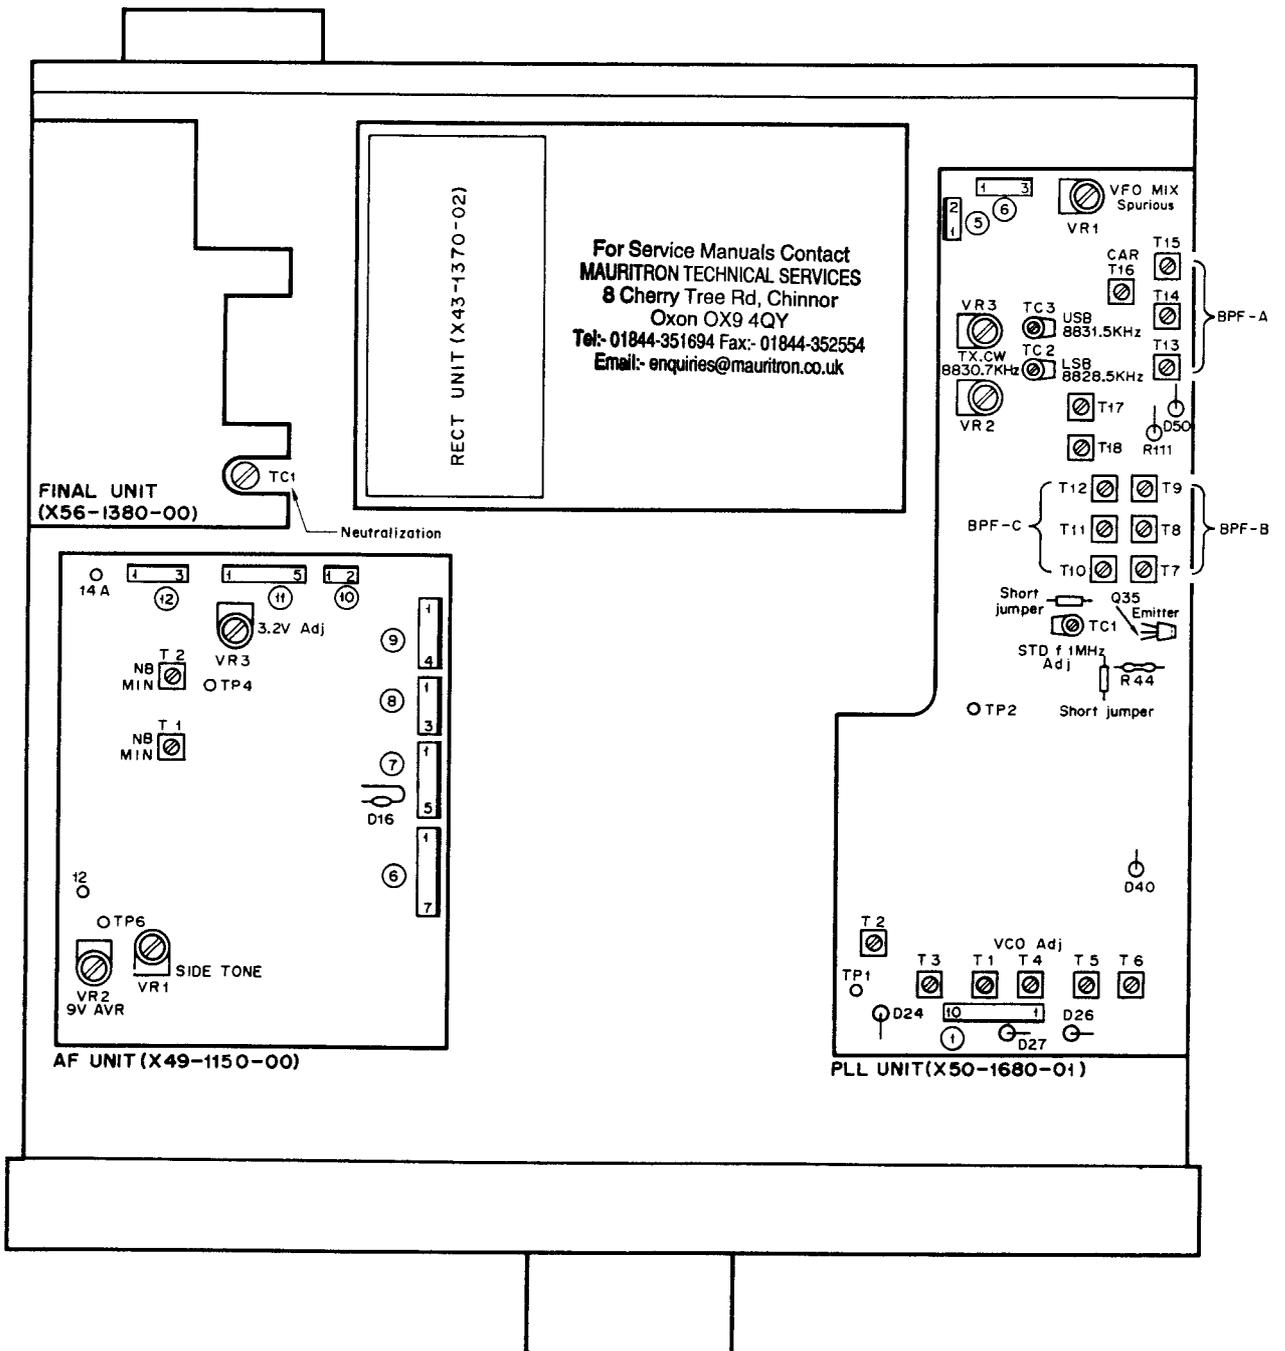


VFO-240

SPECIFICATIONS

- Oscillator frequency 5.50 ~ 6.00 MHz
- Oscillator circuit..... Clapp
- Output voltage 0.2V ± 1dB (across 470 ohm load)
- Frequency stability..... Within 100 Hz per 30 minutes after 3 minutes warm-up (at room temperature)
- Solid-state complement FET: 2
Transistor: 2
Diode: 6
- Power source..... From TS-530S or TS-830S
- Dimensions 180 (7-1/8") W x 133 (5-1/4") H x 288 (11-5/16") D mm (inch)
- Weight 2.9 kg (6.4 lbs)


* Specifications are subject to change for improvement without notice.

OUTSIDE VIEW

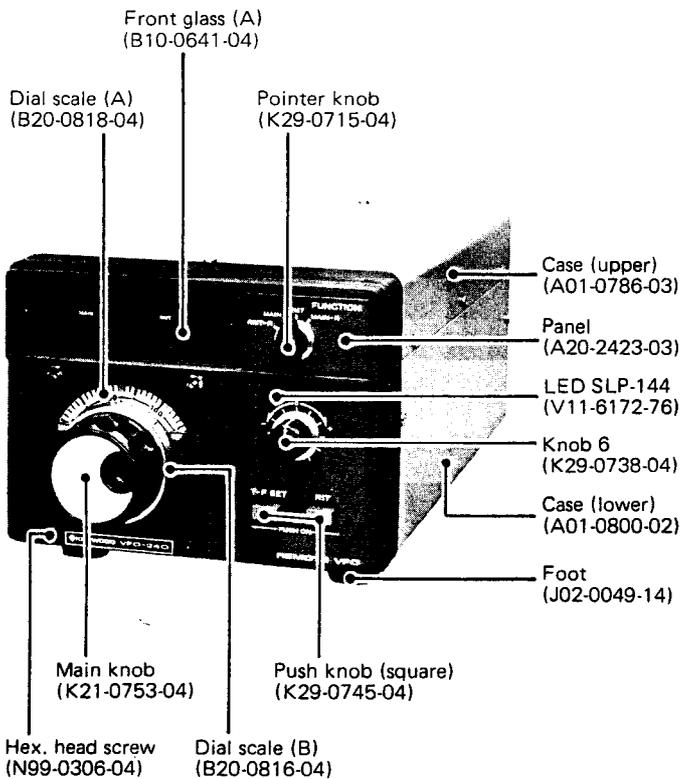


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

BLOCK DIAGRAM

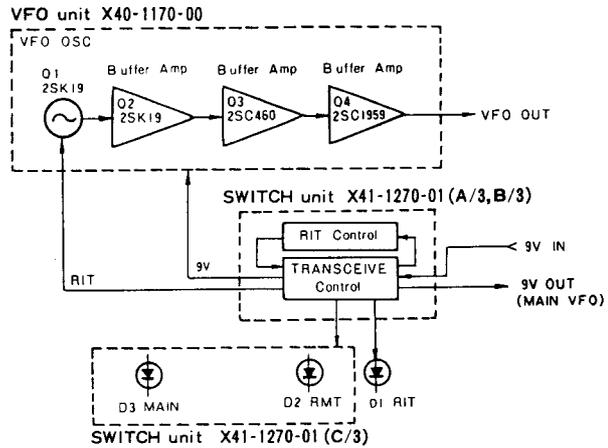

PACKING

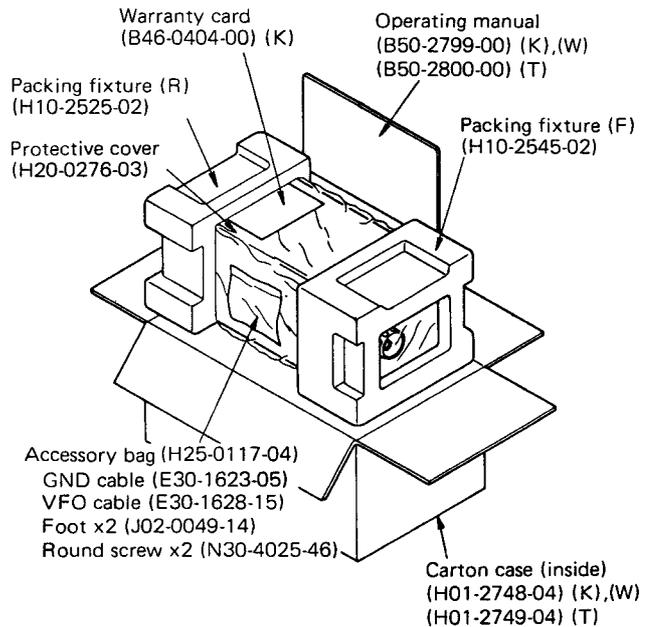

PARTS LIST

☆: New parts


Ref. No.	Parts No.	Description	Re-marks
VFO-240 GENERAL			
	A01-0786-03	Case (upper)	☆
	A01-0800-02	Case (lower)	☆
	A20-2423-03	Panel	☆
	B10-0641-04	Front glass (A)	☆
	B43-0658-04	Name plate	T ☆
	B43-0659-04	Name plate	K,W ☆
	B46-0404-00	Warranty card	K
	B50-2799-00	Operating manual	K,W ☆
	B50-2800-00	Operating manual	T ☆

VFO-240

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
	E06-0852-05	8P DIN socket VFO OUT		VFO ASS'Y UNIT (X60-1150-01)			
	E30-1623-05	GND cable (accessory)			B07-0630-05	Dial escutcheon	
	E30-1628-15	VFO cable (accessory)			B10-0632-04	Escutcheon glass	
	E31-2091-05	Connector with lead (A)	☆		B20-0816-04	Dial scale (B)	
	E31-2092-05	Connector with lead (B)	☆		B20-0818-04	Dial scale (A)	☆
	G09-0410-05	D spring φ6 RIT,FUNCTION			B30-0819-05	Pilot lamp	
	H01-2748-04	Carton case (inside)	K,W		B42-1645-04	Seal Bottom	
	H01-2749-04	Carton case (inside)	T		B42-1671-04	Seal Top	
	H10-2525-02	Packing fixture (R)	☆		G01-0804-04	Coil spring	
	H10-2545-02	Packing fixture (F)	☆		K21-0753-04	Main knob	
	H20-0276-03	Protective cover			X40-1170-00	VFO unit	
	H25-0117-04	Accessory bag		VFO UNIT (X40-1170-00)			
	J02-0049-14	Foot (large)		C2	C91-0456-05	C 0.047μF 25V	
	J61-0019-05	Vinyle tie		C4	CC45CG1H050C	C 5pF ±0.25pF	
	K29-0715-04	Pointer knob FUNCTION		C6	C91-0456-05	C 0.047μF 25V	
	K29-0738-04	Knob 6 RIT		C7	CC45LG1H151J	C 150pF	
	K29-0745-04	Push knob (square) RIT, T-F SET	☆	C9	CC45LG1H121J	C 120pF	
	N14-0115-05	Flange nut GND		C12	CC45LG1H680J	C 68pF	
	N14-0509-05	Wing nut GND		C13	CC45CG1H220J	C 22pF	
	N15-1040-46	Washer GND		C14	CC45PG1H100D	C 10pF ±0.5pF	
	N16-0040-46	Spring washer GND		C15,16	CC45LG1H151J	C 150pF	
	N30-4012-46	Round screw Foot		C17	CC45CH1H020C	C 2pF ±0.25pF	
	N30-4016-46	Round screw GND		C18	C91-0456-05	C 0.047μF 25V	
	N30-4025-46	Round screw Foot (accessory)		C21	CC45SL1H390J	C 39pF	
	N35-3006-41	Bind screw Case		C22	CC45CH1H100D	C 10pF ±0.5pF	
	N87-4012-46	Self tapping screw Foot		C23	CC45SL1H390J	C 39pF	
	N99-0306-04	Hex. head screw VFO		C24	C91-0456-05	C 0.047μF 25V	
	N99-0308-04	Hex. head screw Front glass	☆	TC1	C05-0009-15	Ceramic trimmer 6pF	
D1	V11-6172-76	LED SLP-144		TC2	C05-0013-15	Ceramic trimmer 20pF	
	X41-1270-01	Switch unit	☆	VC1	C02-0019-05	Variable cap.	
	X60-1150-01	VFO ass'y unit		D40-0614-05		Dial mechanism ass'y	
SWITCH UNIT (X41-1270-01)					D40-0574-05	Mini connect wafer 5P	
	E23-0047-04	Square terminal			F29-0014-05	Insulating washer	
	E23-0401-05	Round terminal		L1	L32-0628-05	OSC coil	
	E40-0216-05	Mini connect wafer 2P		L2	L33-0025-05	Choke coil 1μH	
	E40-0474-05	Mini connect wafer 4P L type		L3	L32-0629-05	OSC coil	
	E40-0774-05	Mini connect wafer 7P L type		L4	L32-0609-05	OSC coil	
VR1	R01-2407-05	Pot. 5kΩ (B) RIT	☆	L5	L40-1021-03	Ferri-inductor 1mH	
VR2	R12-3025-05	Trim. pot 10kΩ (B)		L6	L40-4711-03	Ferri-inductor 470μH	
	R92-0150-05	Short jumper		L7	L40-1021-03	Ferri-inductor 1mH	
S1	S29-1418-05	Slide rotary switch	☆	L8	L40-1501-03	Ferri-inductor 15μH	
S2	S40-2424-05	Push switch T-F SET	☆	L9~11	L40-4711-03	Ferri-inductor 470μH	
S3	S40-2425-05	Push switch RIT	☆		R92-0150-05	Short jumper	
RL1	S51-2408-05	Relay G2V-2		Q1,2	V09-0011-05	FET 2SK19(Y)	
D1	V11-0076-05	Diode 1S1555		Q3	V03-0079-05	TR 2SC460(B)	
D2	V11-3162-86	LED TLG-205		Q4	V03-1959-06	TR 2SC1959(Y)	
D3	V11-3163-16	LED TLY-205		D1	V11-0414-05	Diode 1S2588	
				D2	V11-4161-36	Vari-cap. 1SV53A	


VFO-240/AT-230

VFO-240 SCHEMATIC DIAGRAM

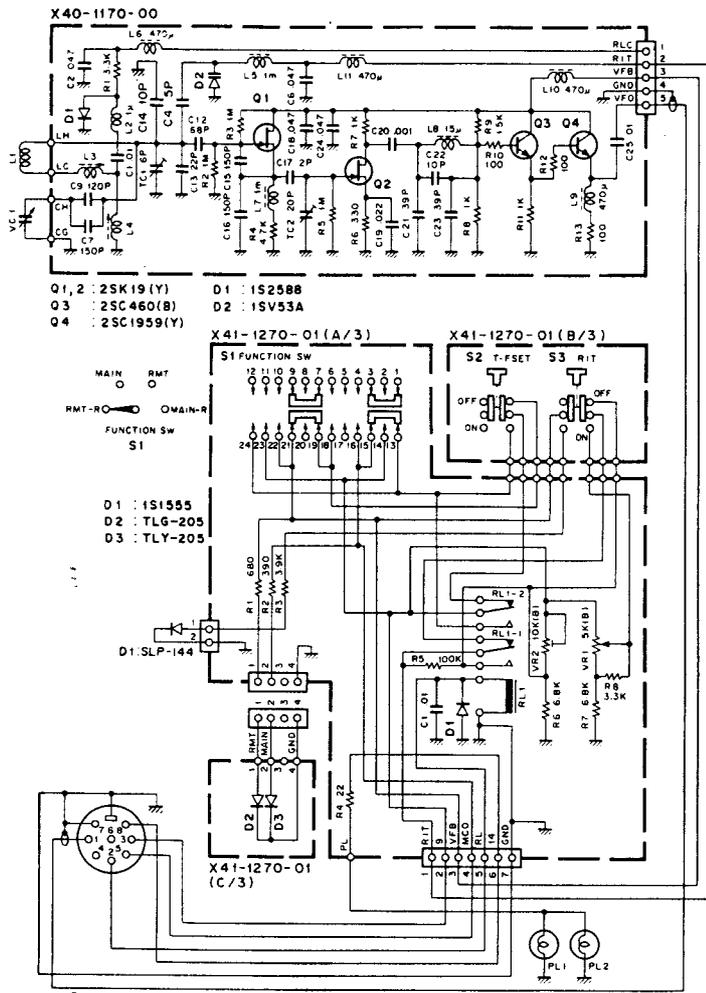


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

AT-230 SCHEMATIC DIAGRAM

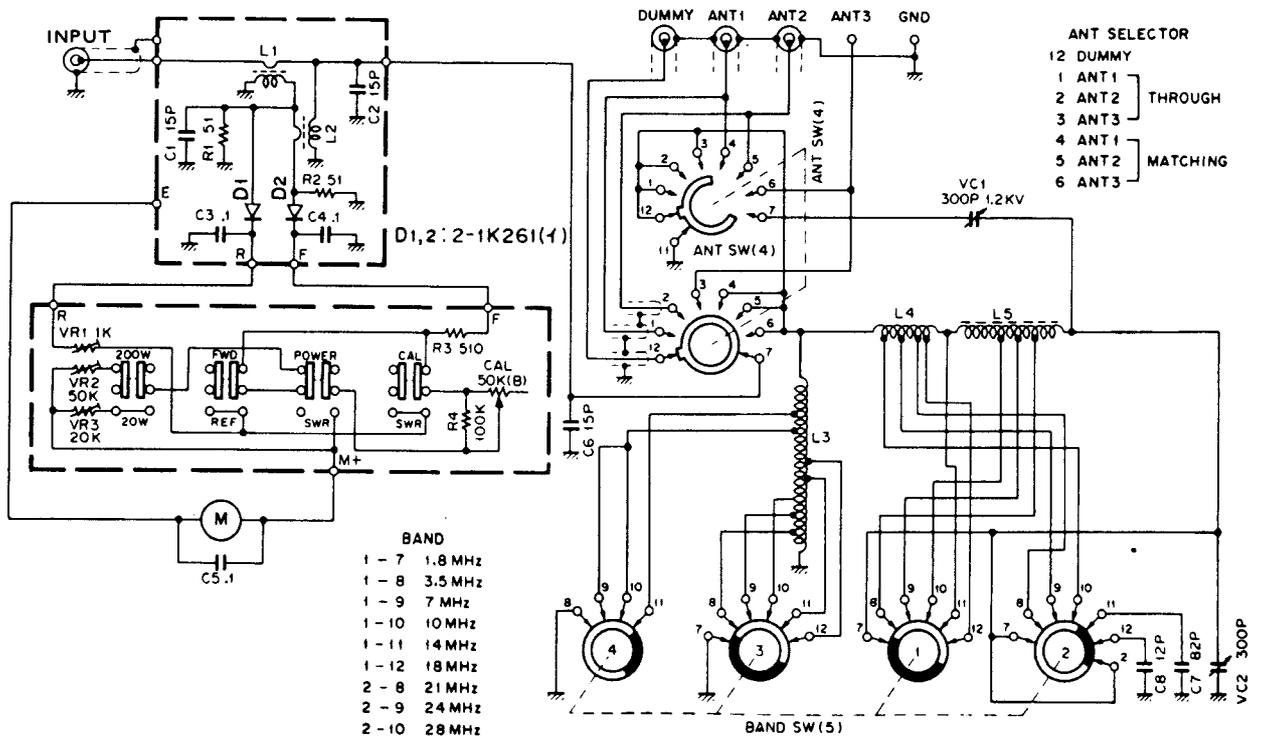

AT-230

OUTSIDE VIEW

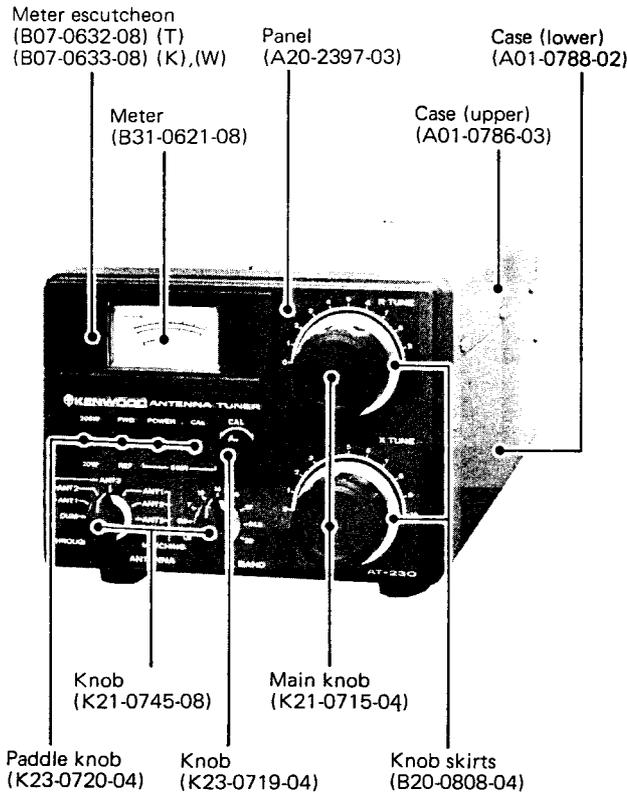

2) Adjustment

1. Connect as in Fig. 1.
2. Unless otherwise specified, controls should be set as follows:

ANT SW	DUMMY
BAND SW	14
200W/20W SW	200W
FWD/REF SW	FWD
POWER/SWR SW	POWER
CAL/SWR SW	SWR

- Tune up the transceiver at 14.175 MHz.
3. Adjust the transceiver for 100W output at the power meter (adjusted by the carrier level control). Adjust VR2 on the switch unit for a meter reading of 100 on the AT-230.

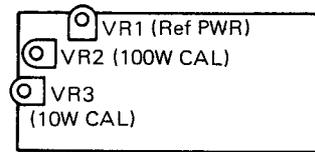


Fig. 2

4. As in step 3, lower transceiver output to 10W and adjust VR3 for a meter indication of 10 on the 20W scale.

ADJUSTMENTS

1. INSTRUMENTS

1) Terminated Power Meter

1. Frequency range: 50 MHz or more
2. Input impedance: 50Ω
3. Power range: 20W and 200W

2) HF Transmitter or Transceiver

- 1) Output: 100W CW
Variable to 10W.
Example: TS-530, TS-830S

2. POWER METER ADJUSTMENT

1) Test Equipment Connection




Fig. 1

3. CALIBRATION OF REF POWER

1) Connection

As in Fig. 1.

2) Adjustment

1. Set controls as described in 2.2.
Confirm 100W CW output reading
2. Unkey the transceiver and reverse the coaxial cable between the INPUT and DUMMY terminals on the AT-230. Move the FWD/REF switch to the REF position.
3. Transmit and adjust VR1 for previously confirmed 100W reading.

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquires@mauritron.co.uk


SCHEMATIC ABBREVIATION

Connector No.	Terminal name		Connector No.	Terminal name	
VFO ass'y unit (X60-1150-01)					
	RLC	From MODE SW S-18-3, 5	⑫	-6	B - 6V input
	RIT	RIT voltage input		AGO	AGC off
	VFB	VFO B + 9V		AGS	AGC slow
	G			RFG	Arm of RF gain control
	VFO	VFO output		SSB	From mode SW S18-4
PLL unit (X50-1680-01)					
①		BAND SW input information	⑬	RSC	Receiver RIT
②	A,B,C,D	BCD code from counter unit		XIT	Transmitter RIT
	BLK	Blanking signal		RIT	RIT voltage to VFO
	12	B + 12V		RTI	RIT SW S3-1
③	1K	Reference signal from PLL Q24	⑭	ALC	ALC input from AF unit Q31
④	CON	To counter unit from PLL Q29		RLT	+ 9V when transmit
	MKR	Marker output		RLR	+ 9V when receive
	VCO	VCO output		RL	Relay voltage
⑤、⑥	VFO	VFO input		RF unit (X44-1360-01)	
⑦	CAR	Carrier output	①	AUX~24.5	To counter unit + 9V on any band
⑧	RLS	MODE SW S18-3	②	28,29 9V	To counter unit + 9V on any band B + 9V
	TXC	MODE SW S18-3	③	ANT	Receiver antenna
	IFS	IF shift arm of VR-3	④	RLR	+ 9V at receive
	USB	From S18-1 + 9V on USB	⑤	MKR	Marker signal input
	LSB	From S18-1 + 9V on LSB	⑥	AGC	AGC input
	MS	Calibrator SW S1-1		RIF	Receiver IF output
9	B + 9V		⑦	TOF 12	Transmit stop signal input for WARC B + 12V
Counter unit (X54-1540-00)				MXB	MIXer B + turn on signal B + 12V
①	0.5	0.5 MHz shift signal	⑧	TIF	Transmit IF signal input
	12	B + 12V		300A	From IF unit + 300V
②	CON	Counter signal input	⑨	DRB	Control grid bias for 12BY7A
	BLK	Blanking signal		RB1	Receiver bias voltage
	1K	Reference signal 1 kHz		H	Heater voltage
	A~D	BCD input from PLL		210A	B + 210V
③	AUX~28B	Band information to PLL		VCO	VCO input
④、⑤	AUX~29.5	Band SW information to + 9V on any band		DRV	Drive voltage to 6146B
				NC	Neutralization
IF unit (X48-1310-00)			AF unit (X49-1150-00)		
①	12	B + 12V	①	SSB	+ 9V on SSB mode
	RIF	Receiver IF input		VXI	VOX amp input
②	NBI	To noise blanker amp	②	DET	Detector signal from IF unit
	NSG	Noise blanker gate signal		NBI	Noise blanker amp input
③	210A	B + 210V	③	AV2	Arm of AF gain control
	210B	B + 210V		AV3	Top of AF gain control
300B	B + 300V	STE		To ground in CW and CW NAR	
④	300A	B + 300V	KEY	To ground in tune and USB/LSB	
⑤	CWN~SSB	To NAR SW S4-1,2	④	SP	Speaker internal
⑥	TIF	Transceiver IF output		STS	Side tone SW
	AGC	Output for AGC	⑤	SS	Stand by SW
DET	Detector output	VXS		VOX SW to ground when VOX ON	
RB2	Receiver amp bias	VXD		VOX delay control	
⑧	CAR	Carrier input		SP	Speaker internal
⑨	VXI	To VOX circuit	⑥	VR3	Final grid bias control
⑩	TM	Meter select SW S-13 arm		KEY	To ground in tune and USB/LSB
	M	S meter voltage		VR1	Final grid bias control
	ALM	To ALC meter DC signal		AV	Anti VOX signal input
	MIC	MIC input		SS	Stand by SW
	NRM	Processor SW OFF		RL	Relay voltage
PRC	Processor SW ON	9	B + 9V		
⑪	MV1	Top of MIC gain control	⑦	RB1	Bias for Q1 RF amp on RF unit
	MV2	Arm of MIC gain control		MXB	B + to MIXer from Q29 on AF unit
		TOF		TX stop signal for WARC	
		DRB		Bias for control grid of 12BY7A	


SCHEMATIC ABBREVIATION

Connector No.	Terminal name	
⑧	RLT	+ 9V on transmit
	RLR	+ 9V on receive
	-6	B -6V
⑨	ALC	ALC output from Q31
	RLT	+ 9V when transmit
	RLR	+ 9V when receive
	RL	Relay voltage
⑩	RAL	External ALC input remote socket
	VR2	Arm of TX bias control
⑪	NBV	Top of noise blanker VR
	NBS	Noise blanker SW
	9	B + 9V
	PRS	Processor SW
	RF1	Top of RF gain control
⑫	NSG	Noise blanker gate signal
	RB2	Receiver bias for IF unit
	14A	14V input
	G14	14V input (ground)
	FG	Bias for control grid of 6146B
Final unit (X56-1380-00)		
	DRV	Drive input
	FG	Control grid bias
	H	Heater voltage AC12.3V
	IPM	IP meter voltage
	SG	Screen grid voltage
Rectifier unit (X43-1370-02)		
	800	B + 800V
	HV	High voltage signal to METER
	300B	B + 300V
	210B	B + 210V
	210A	B + 210V
	-C	Common B- approx. -100V
	12	Screen grid cut off voltage
	SG2	Screen grid voltage
	TUN	Screen grid voltage for TUN

TS-530S (T)(W)(X)Type

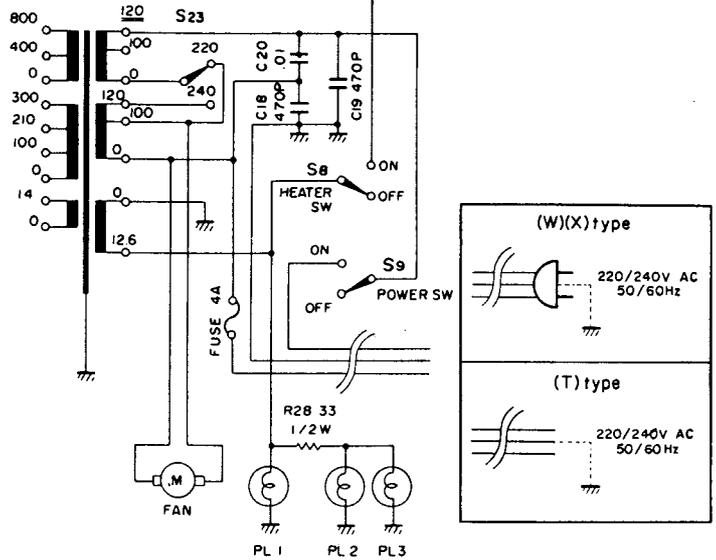


TS-530S (M)Type


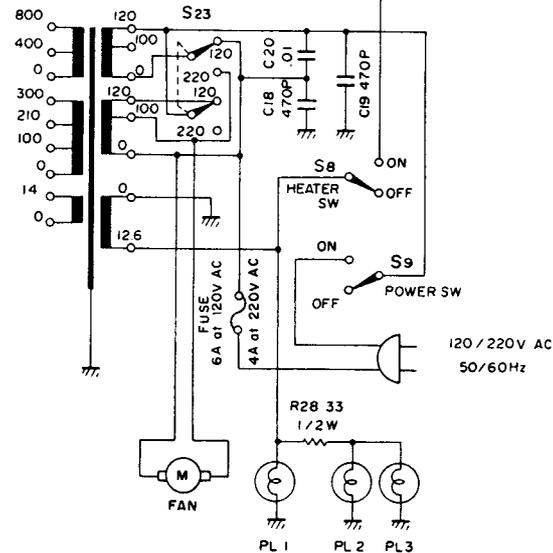


- 2SA778A 2SC1775
- 2SA1015 2SC1815
- 2SC945 2SC1923
- 2SC1515 2SC1959
- 2SC1675 2SC2240


2SA473




2SA562




2SC460



2SK19




2SK125
2SK30A




3SK73



MB3712



NJM78L05A




μPC1158H2




SLP-144



TLR-205



MV-13

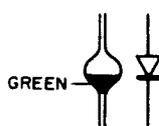


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

Signal Line


Control Line

Common DC Line

SCHEMATIC DIAGRAM

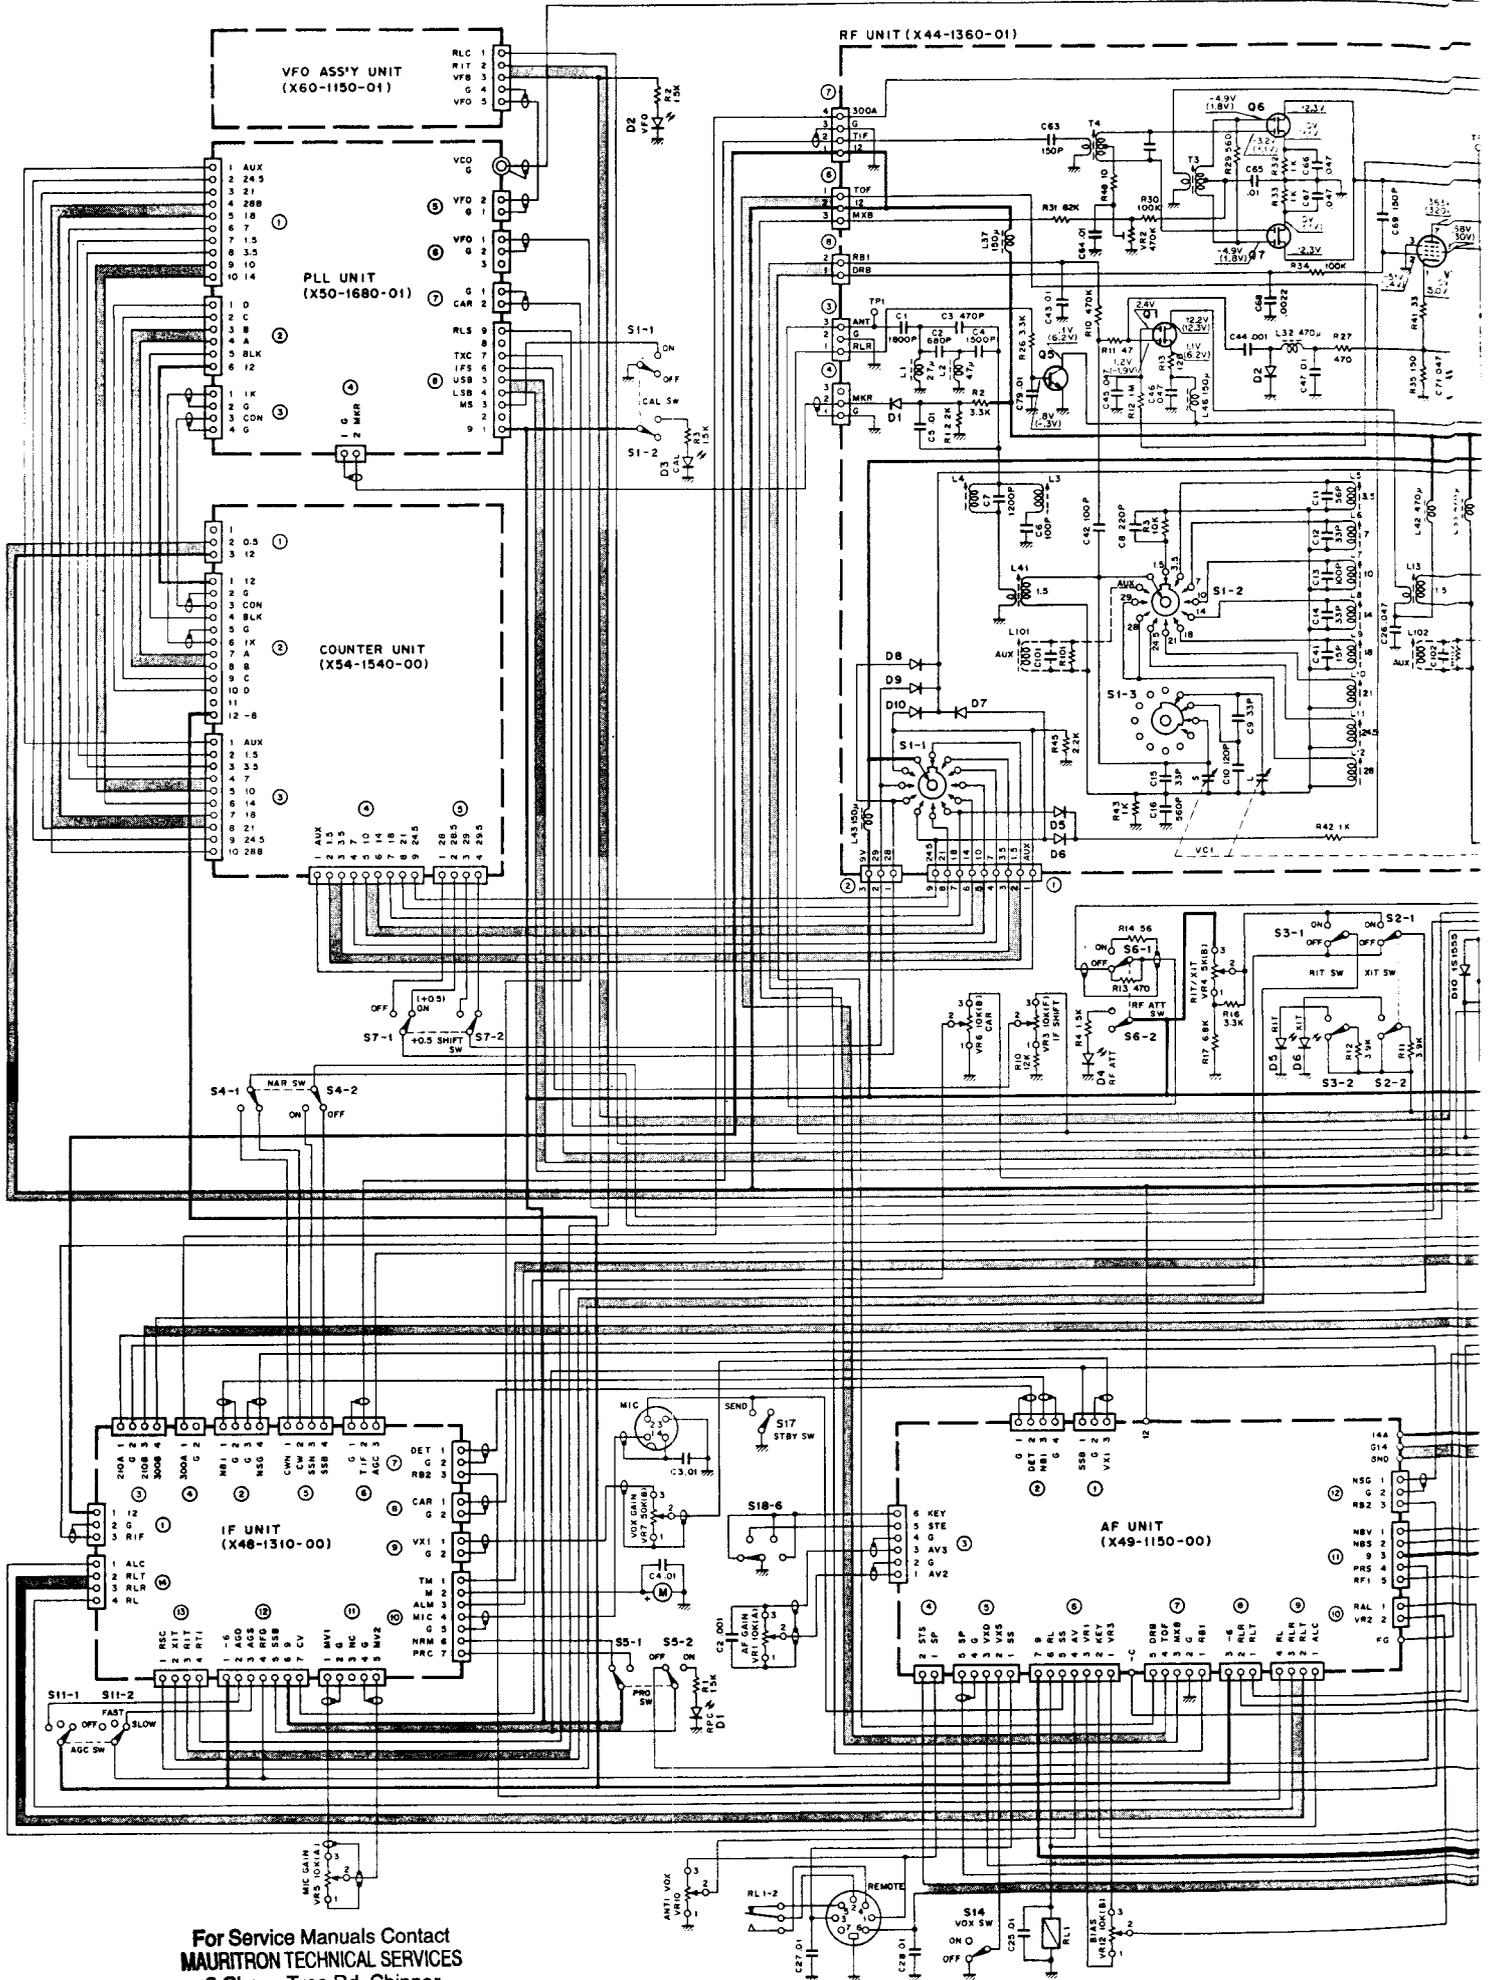


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

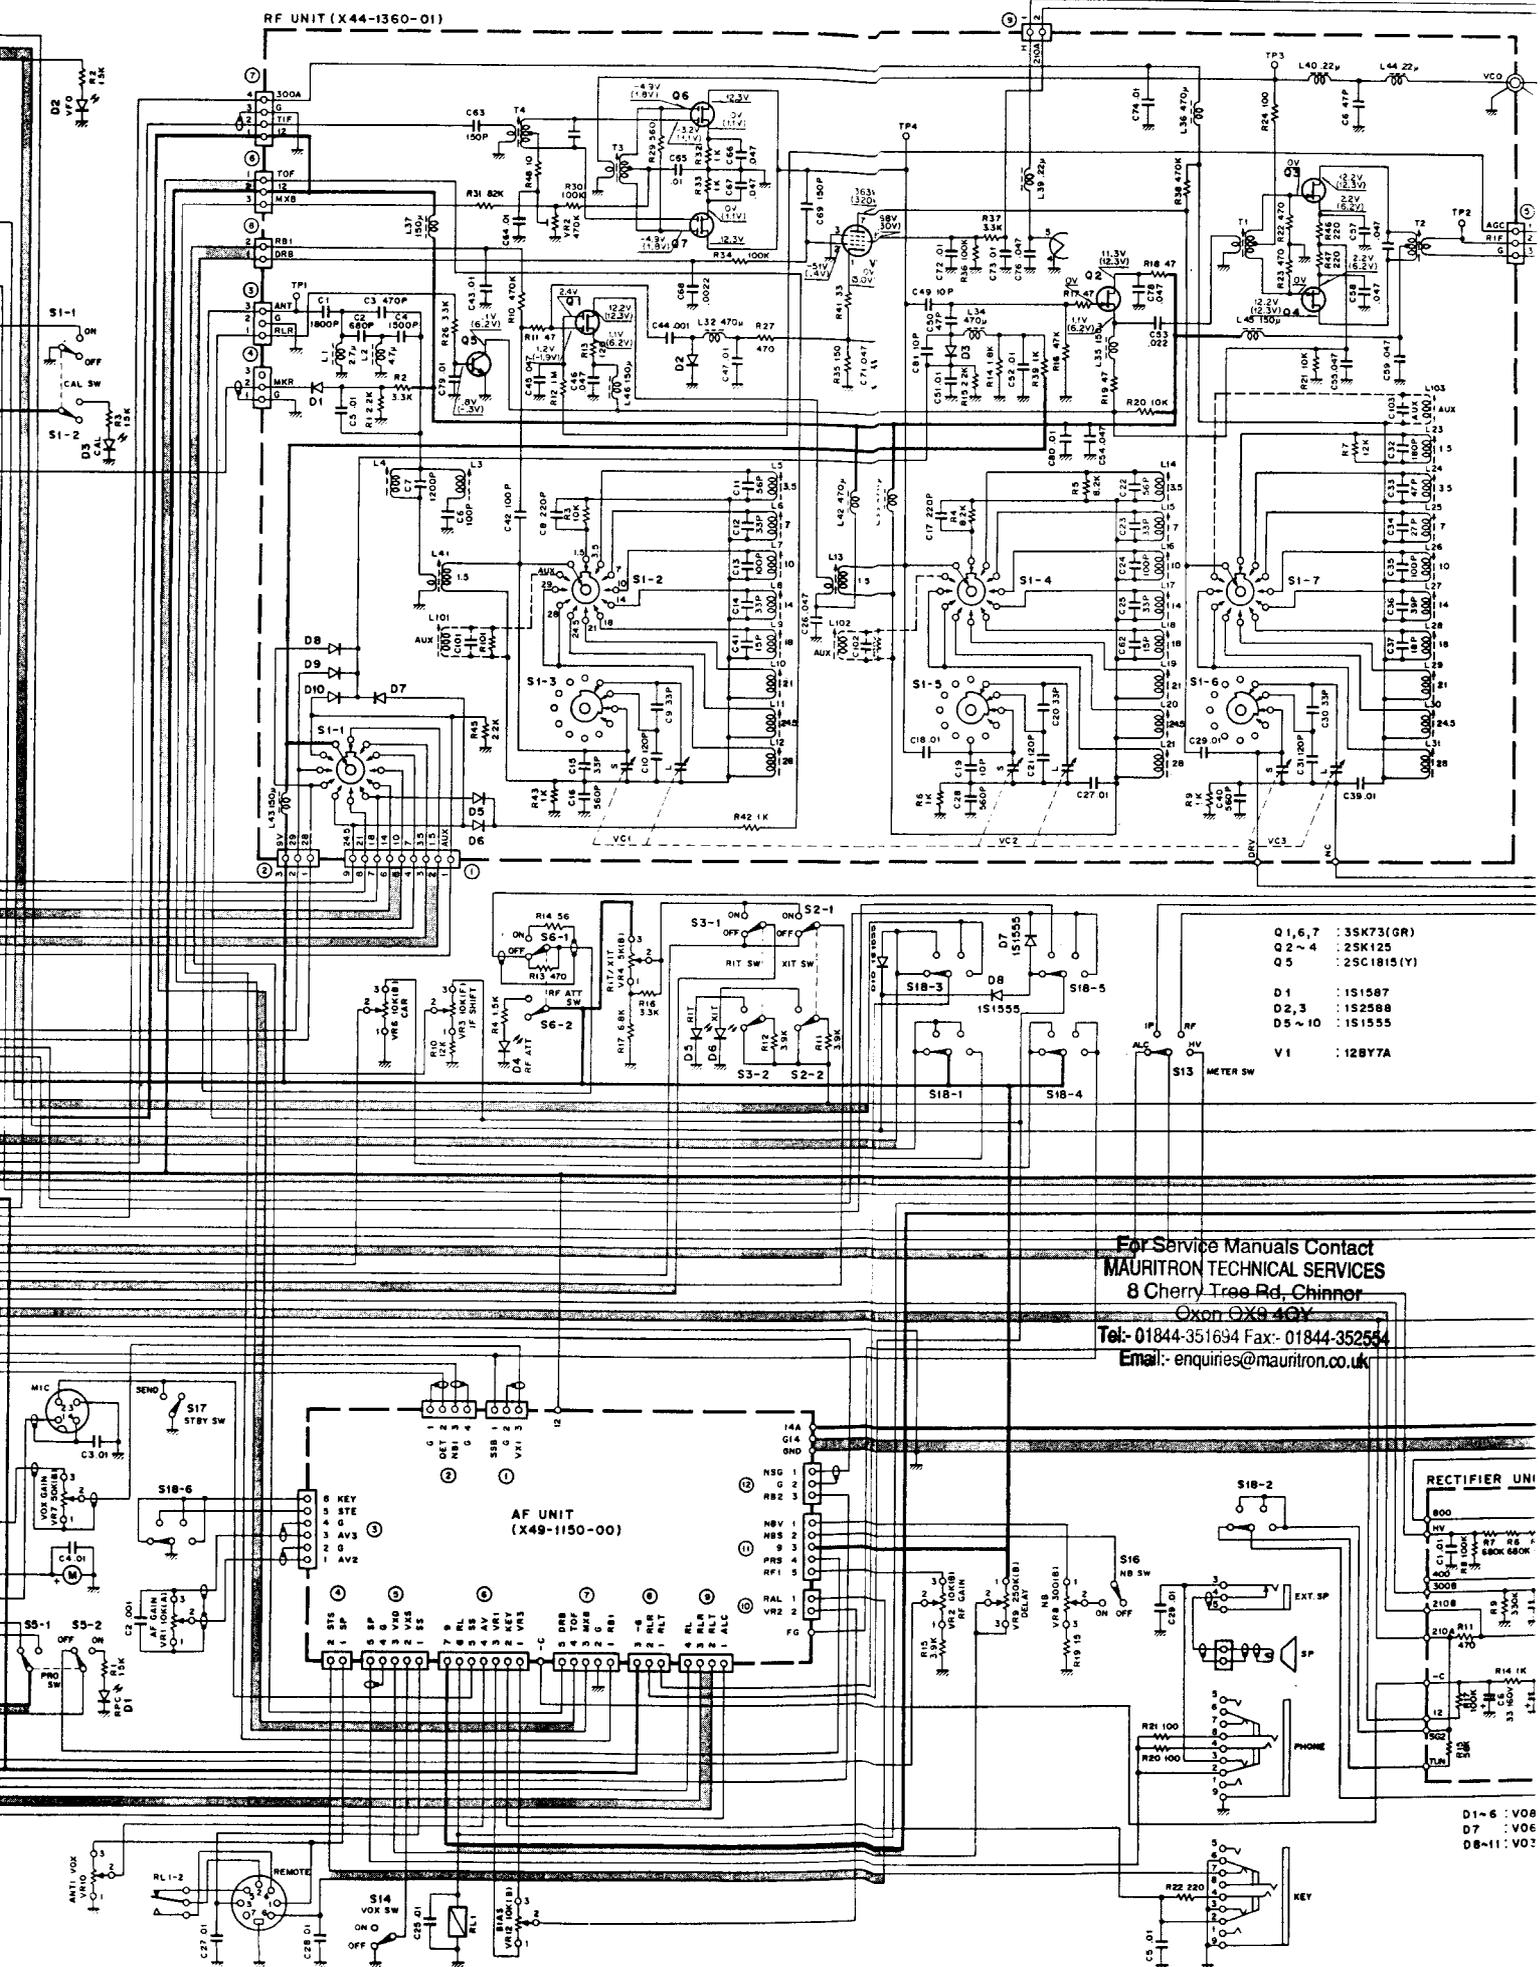

- Q 1, 6, 7 : 3SK73(GR)
- Q 2 ~ 4 : 2SK125
- Q 5 : 2SC1815(Y)
- D 1 : 1S1587
- D 2, 3 : 1S2588
- D 5 ~ 10 : 1S1555
- V 1 : 12BY7A


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QV
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquires@mauritron.co.uk

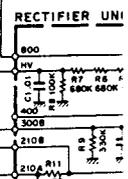

- D1-6 : V08
- D7 : V06
- D8-11 : V07

DIAGRAM (K)



Voltage measurement conditions f=14.175MHz, RX no signal, () in TX

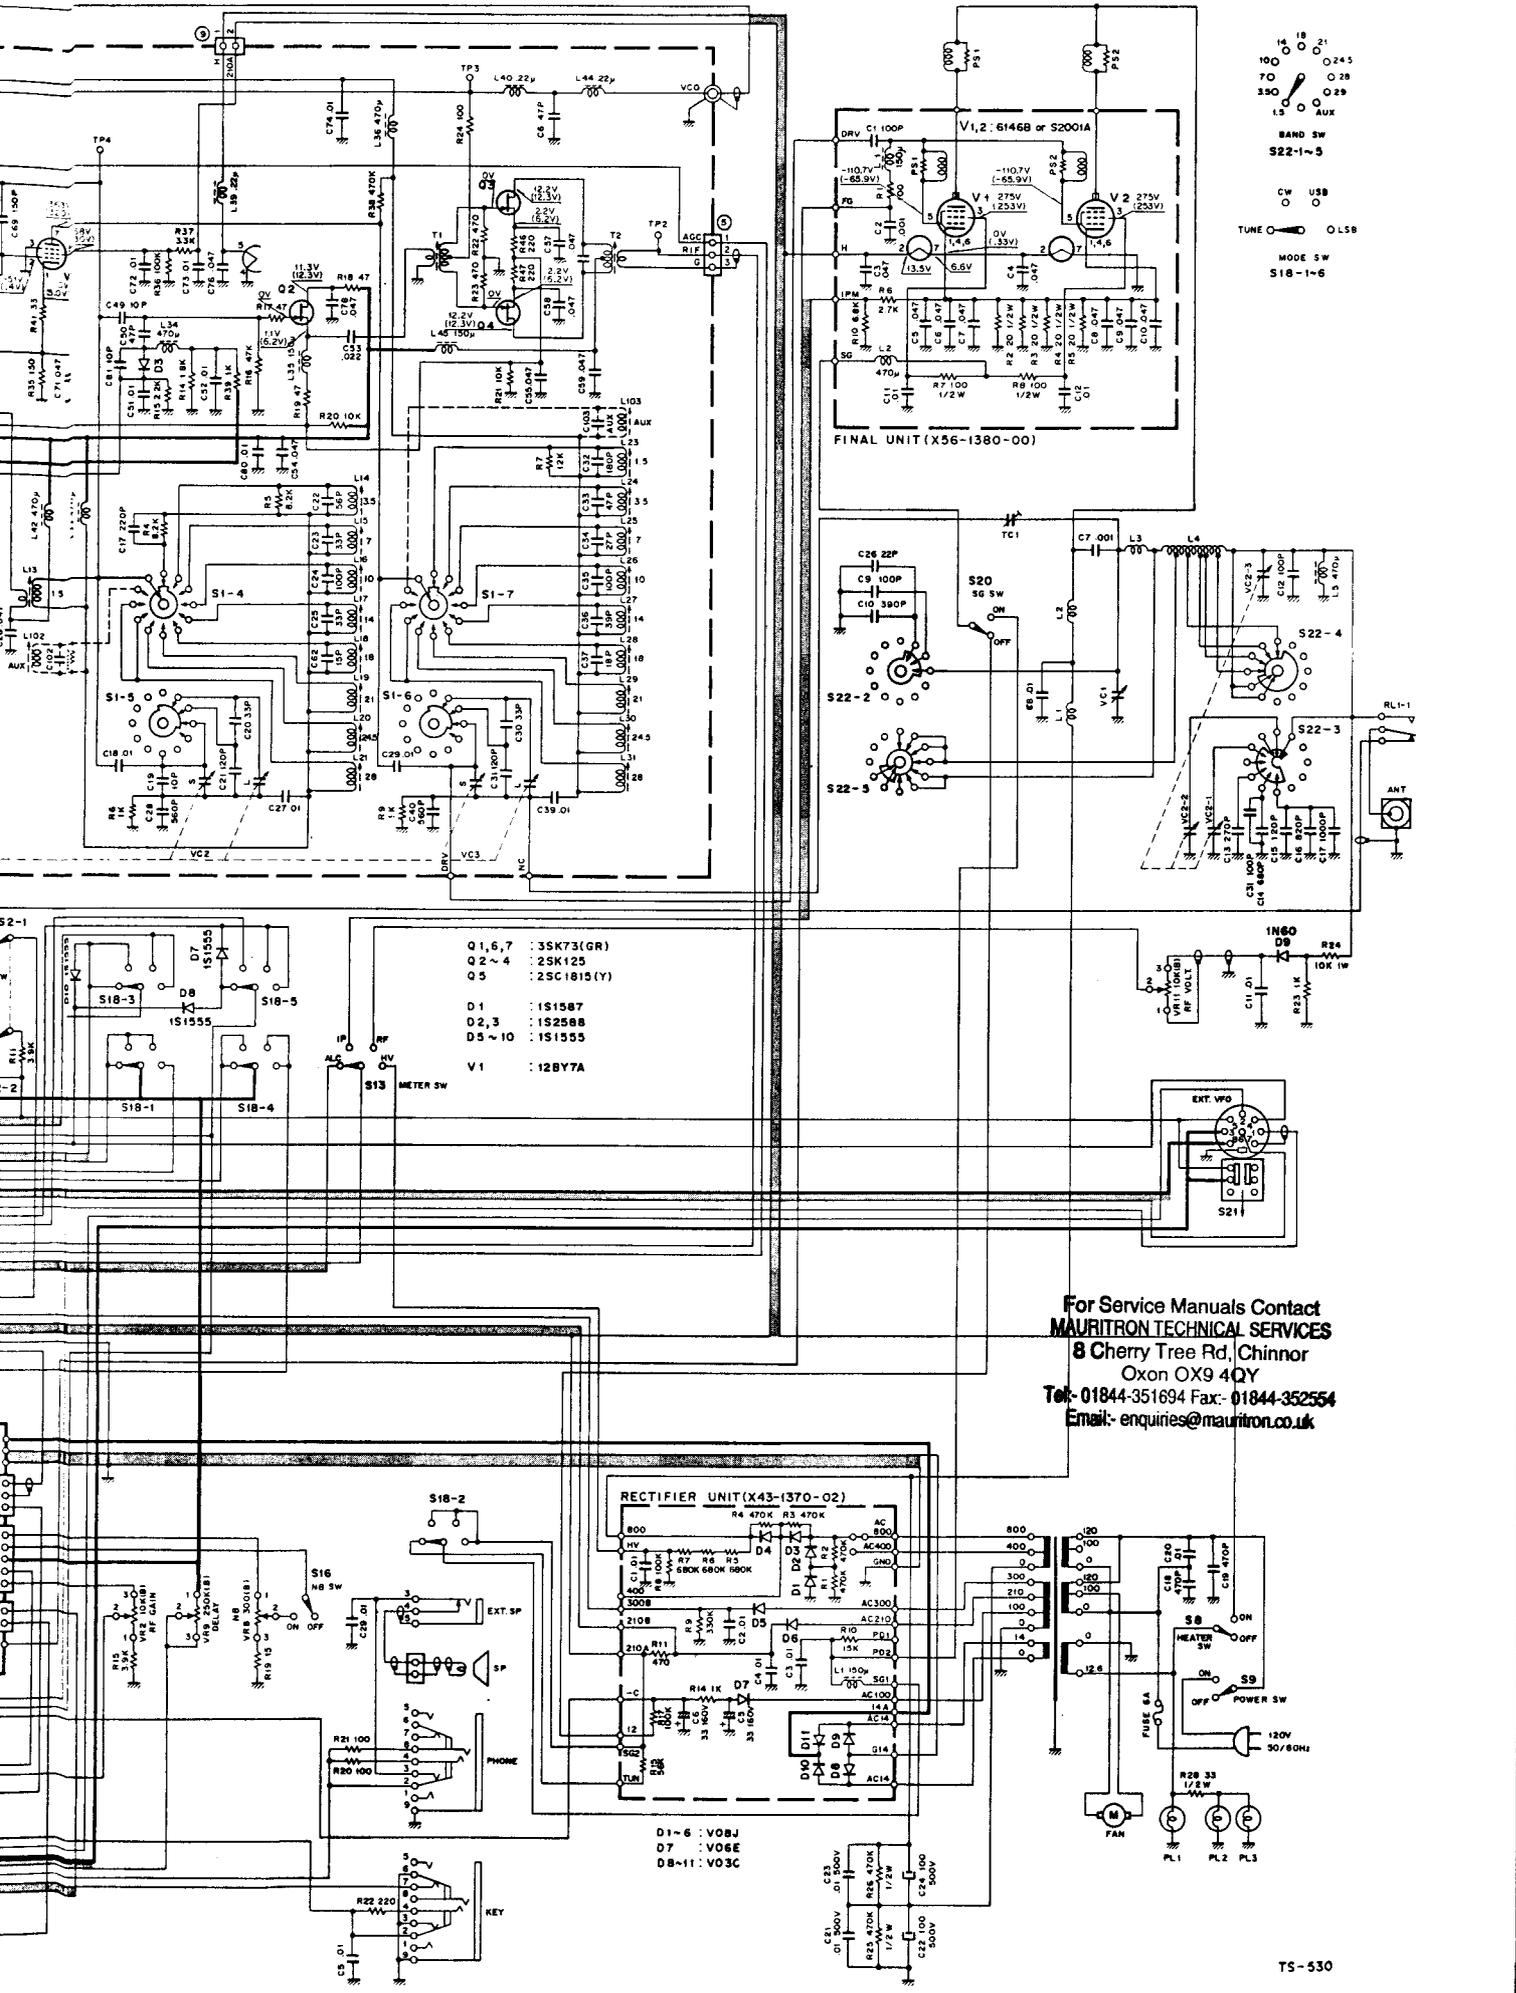

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

TS-530SP/D SCHEMATIC DIAGRAM

TS-530D ONLY

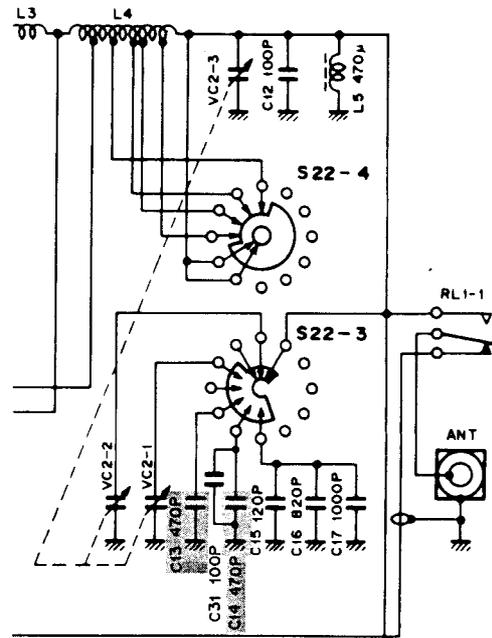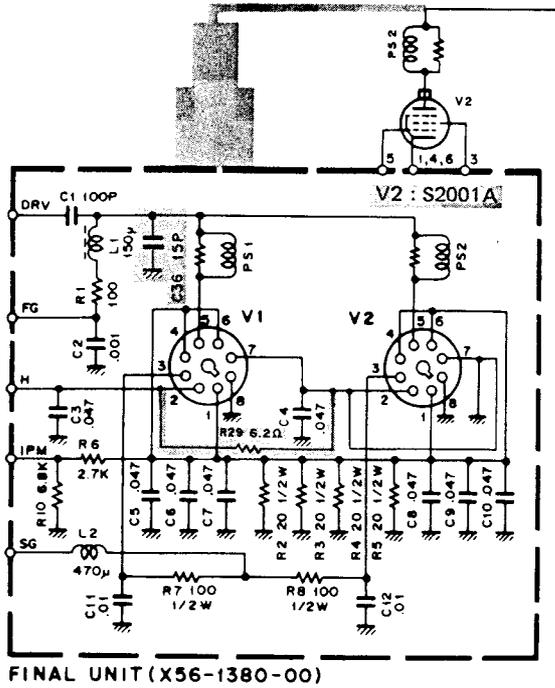



▼NOTCH UNIT

The shaded parts indicate the changed circuit from TS-530S to TS-530SP/D.

NOTCH UNIT (X51-1310-10)

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel: 01844-351694 Fax: 01844-352554
 Email: enquiries@mauritron.co.uk

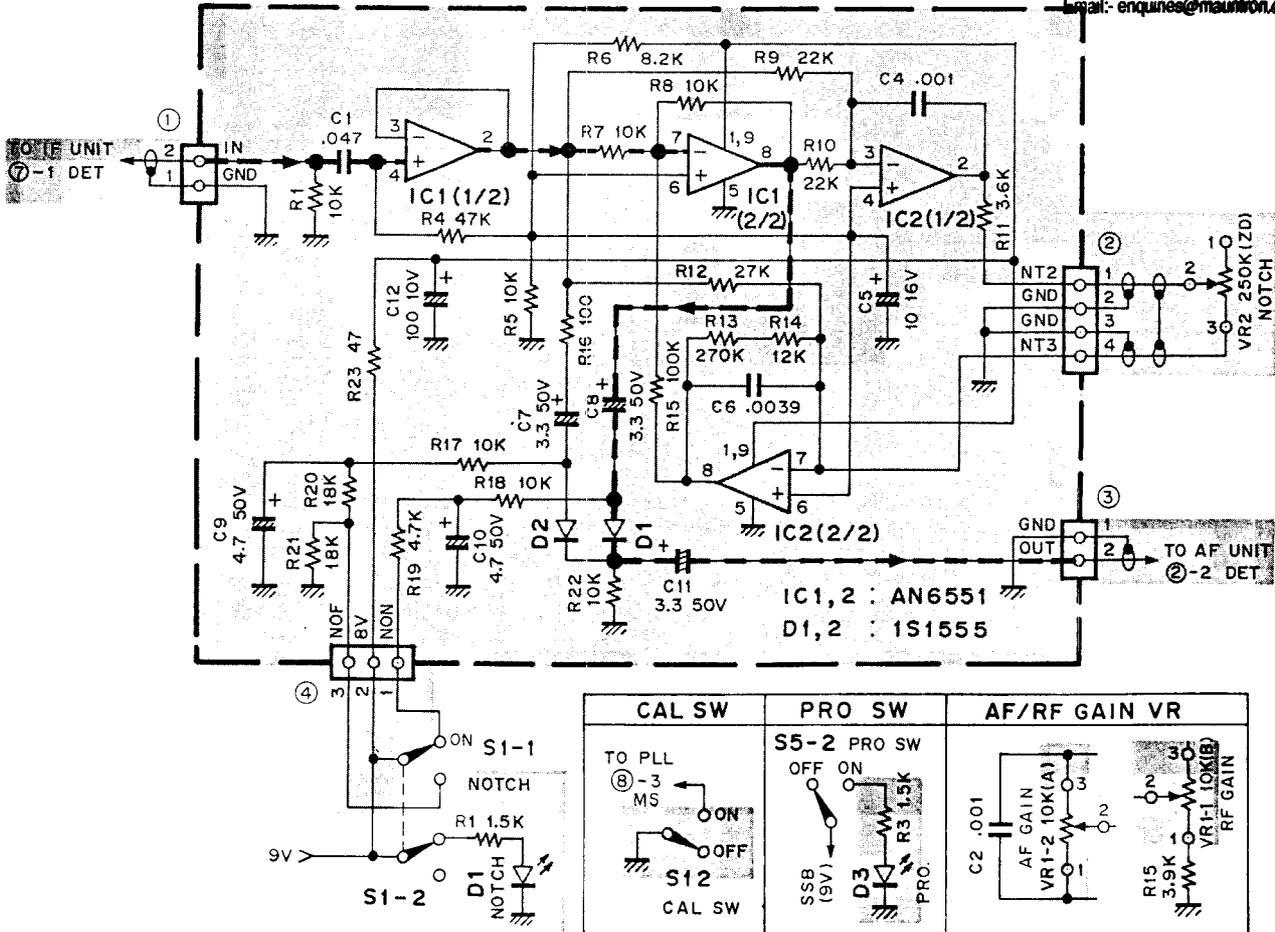


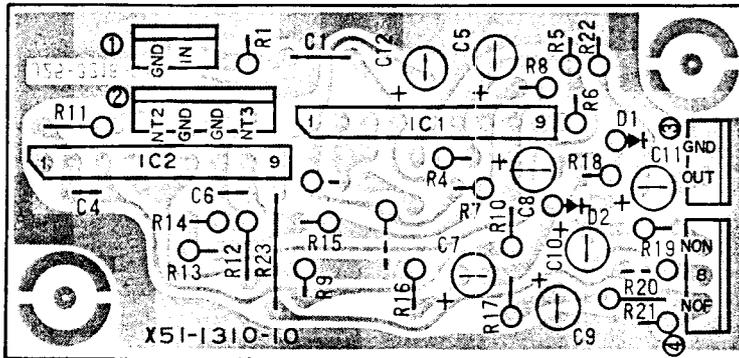

◀ NOTCH UNIT (X51-1310-10)

View from component side

DISASSEMBLY

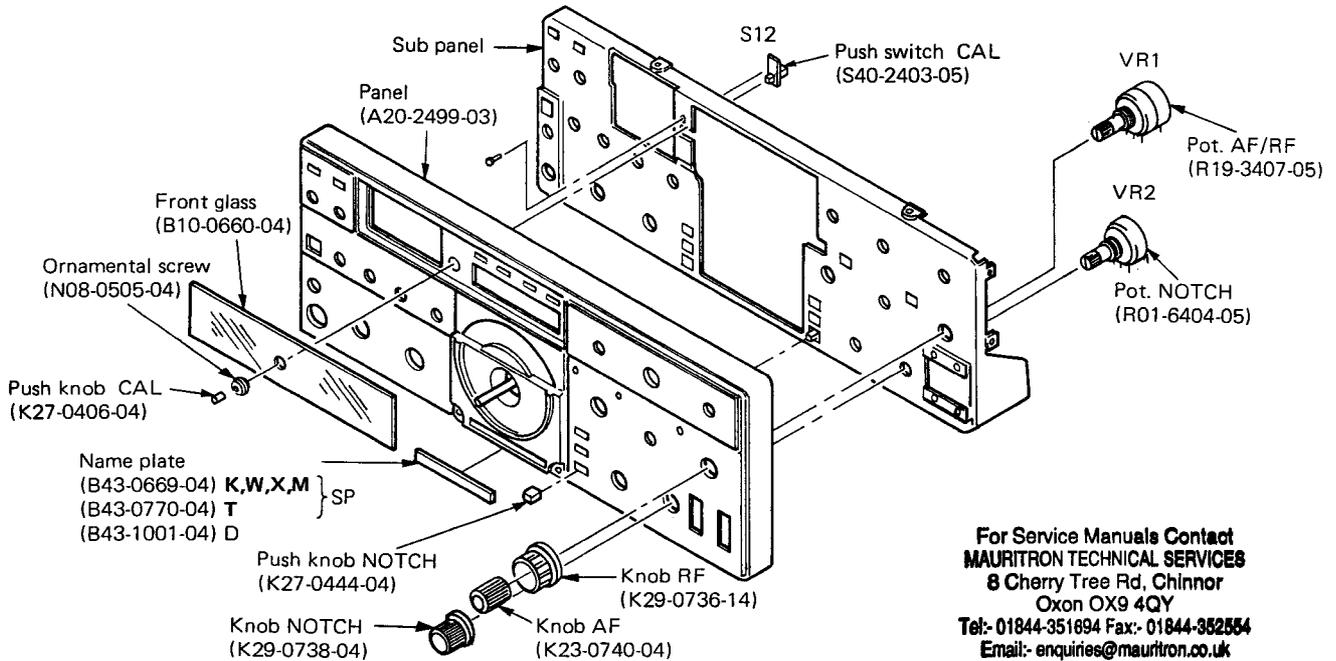


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351894 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

PARTS LIST

Ref. No.	Parts No.	Description	Re- marks	Ref. No.	Parts No.	Description	Re- marks
GENERAL				S12	S40-2403-05	Push switch CAL	
	A20-2499-03	Panel	☆		T91-0318-05	Microphone 10kΩ	X,M ☆
	B10-0660-04	Front glass (large)	☆	NOTCH UNIT (X51-1310-10)			
	B43-0669-04	Name plate	☆	IC1,2	AN6551		
	B43-0700-04	Name plate	☆	D1,2	1S1555		
	B43-1001-04	Name plate	☆	C1	CQ92M1H473K	ML 0.047	
	B50-4075-00	Operating manual	☆	C4	CQ92M1H102K	ML 0.001	
	B50-4076-00	Operating manual	☆	C5	CE04W1C100M	E 10 16V	
C13,14	CC45SL2H471J	C 470pF 500V	(D) ☆	C6	CQ92M1H392K	ML 0.0039	
	H01-4520-04	Carton case inside	☆	C7,8	CE04W1H3R3M	E 3.3 50V	
	H03-2151-04	Carton case outside	(SP) ☆	C9,10	CE04W1H4R7M	E 4.7 50V	
	H03-2152-04	Carton case outside	(D) ☆	C11	CE04W1H3R3M	E 3.3 50V	
	K23-0740-04	Knob AF	☆	C12	CE04W1A101M	E 100 10V	
	K29-0736-14	Knob RF	☆	E40-0273-05	Mini connector 2P		
	L01-8206-05	Power trans	(D) ☆	E40-0373-05	Mini connector 3P		
	N08-0505-04	Ornamental screw CAL	☆	E40-0473-05	Mini connector 4P		
VR1	R19-3407-05	Pot. 100kΩ(A)/10kΩ(B) AF/RF					
VR2	R01-6404-05	Pot. 250kΩ(ZD) NOTCH					

BLOCK DIAGRAM

* TS-530S/SP
6146B/SZ001A x 2
TS-530D
SZ001A x 1

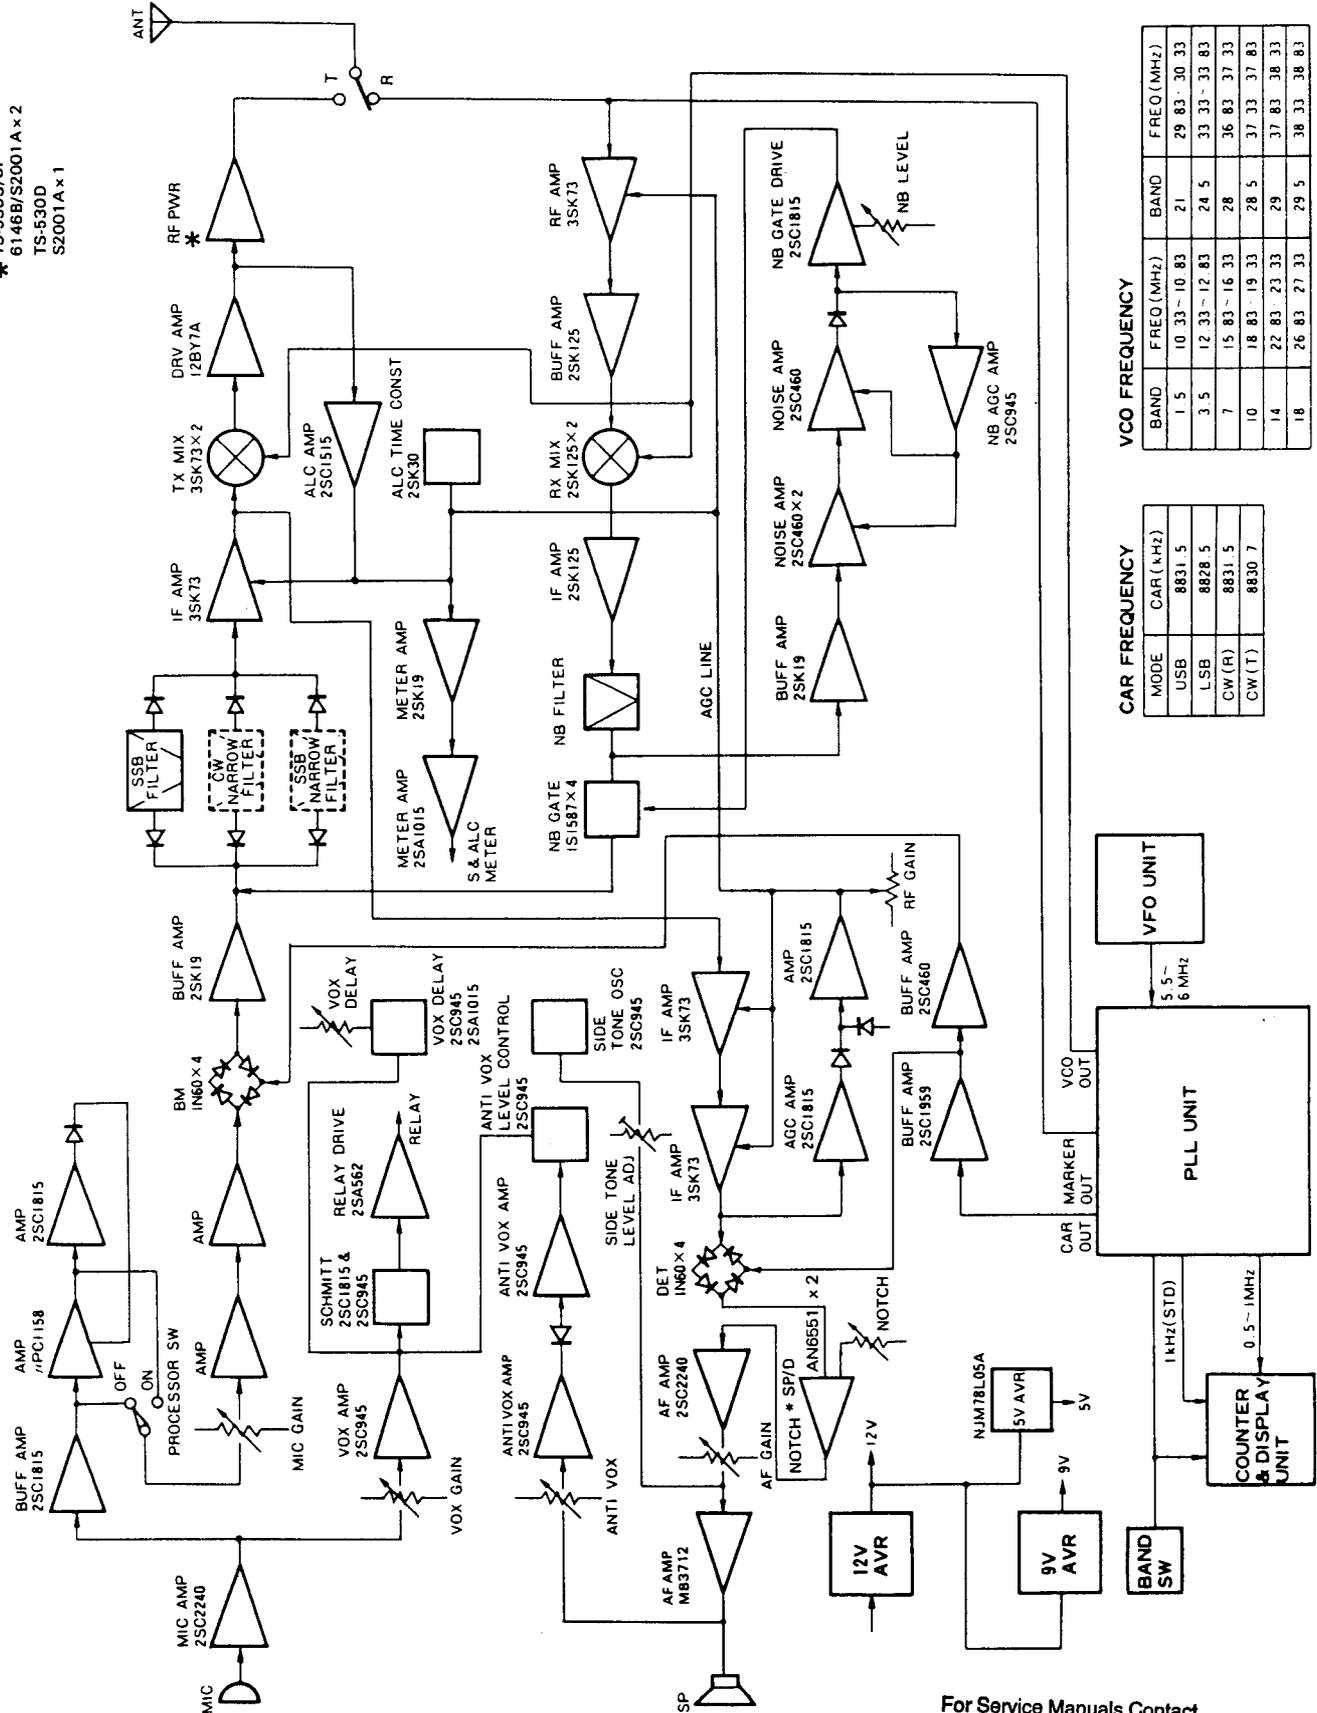

CAR FREQUENCY

MODE	CAR (kHz)
USB	8831.5
LSB	8828.5
CW (R)	8831.5
CW (T)	8830.7

VCO FREQUENCY

BAND	FREQ (MHz)	BAND	FREQ (MHz)
1 5	10.33 - 10.83	21	29.83 - 30.33
3 5	12.33 - 12.83	24 5	33.33 - 33.83
7	15.83 - 16.33	28	36.83 - 37.33
10	18.83 - 19.33	28 5	37.33 - 37.83
14	22.83 - 23.33	29	37.83 - 38.33
18	26.83 - 27.33	29 5	38.33 - 38.83

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

For Service Manuals Contact
MAURITRON TECHNICAL SERVICES
 8 Cherry Tree Rd, Chinnor
 Oxon OX9 4QY
 Tel:- 01844-351694 Fax:- 01844-352554
 Email:- enquiries@mauritron.co.uk

SP-230/PK-3

SPECIFICATIONS

Speaker used: 12 cm dia.
Rated Input: 2 Watts
Impedance: 8Ω
Frequency response: 100Hz to 5kHz.
Filter cut-off frequency,
LOW: 400Hz, -3dB.
HIGH 1: 3kHz, -3dB.
HIGH 2: 1.5kHz, -3dB.
HIGH 1 + HIGH 2: 1 kHz, -3dB.
Filter attenuation: -6dB/oct.
Dimensions: W 180 mm (7-1/16")
 H 133 mm (5-1/4")
 D 287 mm (11-5/16")
Net weight: 1.8 kg. (4.0 lbs.)
Accessories furnished: Speaker cord, 1 pc.
 (E14-0101-05)
 Extension foot, 2 pcs.
 (J02-0049-14)
 Screw, M4 x 12, 2 pcs.
 (N30-4012-41)
 1 pin plug, 2 pcs.
 (E20-1610-05)

PK-3

POWER UP KIT for the TS-530D

Ref. No.	Parts No.	Description	Re- marks
	S2001A		
	B50-4103-00	Instruction manual	☆
	E90-0004-15	Plate cap	
	H01-4540-03	Carton case	☆
	H21-0802-04	Protective sheet	☆
	H25-0096-04	Protective bag	☆
	L39-0046-05	PS coil PLATE	

Ref. No.	Parts No.	Description	Re- marks
	A01-0786-03	Case (upper)	
	A01-0789-02	Case (lower)	☆
	A20-2399-05	Panel (T)	☆
	A20-2400-05	Panel (K)(W)	☆
	B46-0058-00	Warranty card (K)	
	B50-2759-00	Operating manual (K)(W)	☆
	B50-2760-00	Operating manual (T)	☆
	E11-0404-05	Phone jack	
	E12-0001-05	Phone plug	
	E13-0361-05	3P Pin jack	
	E14-0101-05	1P Pin plug	
	E30-1610-05	Connector with lead	
	G53-0502-04	Packing	
	H01-2723-04	Carton (inside)(K)(W)	☆
	H01-2724-04	Carton case (inside)(T)	☆
	H10-2523-02	Packing fixture (F)	
	H10-2525-02	Packing fixture (R)	
	H20-0276-03	Protective cover	
	H25-0049-03	Protective bag	
	J02-0049-14	Foot	
	K29-0716-04	Push knob	
	L79-0443-25	Filter	
	RS14AB3D8R2J	Solid 8.2Ω 2W	
	S40-2414-05	Push switch INPUT	
	S42-3401-05	Push switch LOW, HIGH 1, 2	
	T06-0011-05	Speaker	