


OPERATING AND PROGRAMMING MANUAL

HP 8157A OPTICAL ATTENUATOR

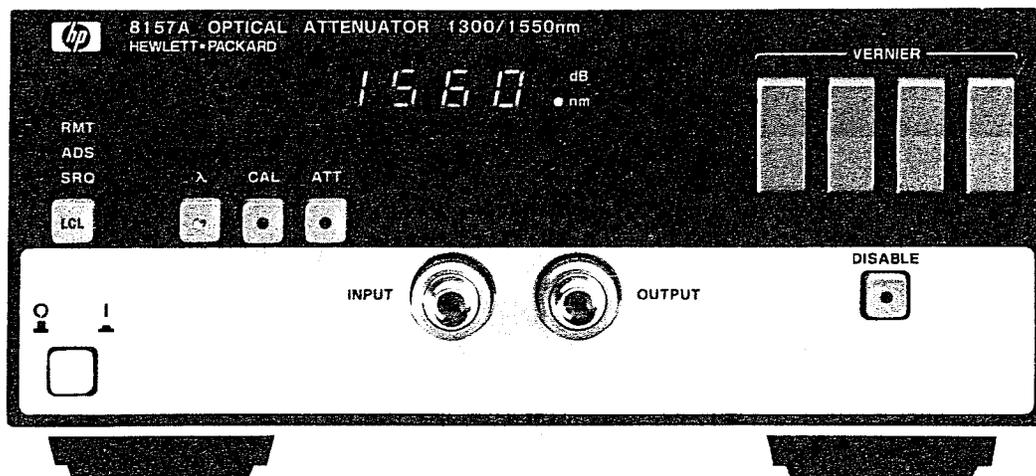

OPERATING AND PROGRAMMING MANUAL

HP 8157A OPTICAL ATTENUATOR

SERIAL NUMBERS

This manual applies directly to instruments with serial number 2720G00101 and higher. Any change made in instruments having serial numbers higher than the above number will be found in a "Manual Changes" supplement supplied with this manual. Be sure to examine the supplement for changes which apply to your instrument and record these changes in the manual.

© HEWLETT-PACKARD GMBH 1987
HERRENBERGER STR. 130, D-7030 BOEBLINGEN
FEDERAL REPUBLIC OF GERMANY

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, HP will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

LIST OF EFFECTIVE PAGES

The List of Effective Pages gives the date of the most recent version of each page in the manual. To verify that your manual contains the most current information, check the dates printed at the bottom of each page with those listed below. The date on the bottom of each page reflects the edition or subsequent update in which that page was printed.

First Edition	October 1987
---------------	--------------

Effective Pages	Date
-----------------	------

ALL	October 1987
-----	--------------

PRINTING HISTORY

New editions are complete revisions of the manual. Update packages, which are issued between editions, contain additional and replacement pages to be merged into the manual by the customer. The date on the title page and back cover of the manual only changes when a new edition is published. When an edition is reprinted, all the prior updates to the edition are incorporated. No information is incorporated into a new edition unless it appears in a prior update.

First Edition Printed

October 1987

CONTENTS

SECTION	Page
1 GENERAL INFORMATION	
1.1 INTRODUCTION	1-1
1.2 SPECIFICATIONS	1-1
1.3 SAFETY CONSIDERATIONS	1-1
1.4 INSTRUMENTS COVERED BY THIS MANUAL	1-2
1.5 DESCRIPTION	1-2
1.6 ACCESSORIES SUPPLIED	1-2
1.7 ACCESSORIES AVAILABLE	1-2
2 INSTALLATION	
2.1 INTRODUCTION	2-1
2.2 INITIAL INSPECTION	2-1
2.3 PREPARATION FOR USE	2-1
2.4 Power Requirements	2-1
2.5 Line Voltage Selection	2-2
2.6 Power Cable	2-3
2.7 HP-IB Connector	2-4
2.8 HP-IB Logic Levels	2-4
2.9 OPERATING ENVIRONMENT	2-4
2.10 CLAIMS AND REPACKAGING	2-4
2.11 STORAGE AND SHIPMENT	2-5
3 OPERATING AND PROGRAMMING	
3.1 INTRODUCTION	3-1
3.2 SPECIAL OPERATING CONSIDERATIONS	3-1
3.3 OPERATORS CHECKS	3-1
3.4 GETTING TO KNOW YOUR INSTRUMENT	3-2
3.5 SETTING THE ATTENUATION	3-3
3.6 Basic Considerations	3-3
3.7 Optimize the Display With the CAL Key	3-4
3.8 PROGRAMMING	3-5
3.9 WHAT YOU NEED TO KNOW ...	3-5
3.10 ... About The HP 8157A's HP-IB Capabilities	3-5
3.11 ... About Programming Examples in This Section	3-5
3.12 GETTING STARTED	3-6
3.13 Setting The Address	3-6
3.14 Checking Remote Operation	3-6
3.15 SENDING DATA TO THE HP 8157A (LISTENER FUNCTION)	3-7
3.16 RECEIVING DATA FROM THE HP 8157A (TALKER FUNCTION)	3-8
3.17 STATUS/ERROR REPORTING (TALKER FUNCTION)	3-9
3.18 Status Register and Status Byte	3-9
3.19 Setting The SRQ Mask	3-11
3.20 Condition Register	3-11
COMMAND SUMMARY	3-12

CONTENTS (CONTD)

SECTION		Page
4	PERFORMANCE TESTS	
4-1	INTRODUCTION	4-1
4-2	EQUIPMENT REQUIRED	4-1
4-3	TEST RECORD	4-2
4-4	TEST FAILURE	4-2
4-5	INSTRUMENTS SPECIFICATION	4-2
4-6	PERFORMANCE TEST	4-2
4-7	TOTAL INSERTION LOSS TEST	4-3
4-8	ATTENUATION ACCURACY	4-5
4-9	ATTENUATOR REPEATABILITY	4-7
4-10	ATTENUATOR RETURN LOSS	4-8

TABLES

TABLE		Page
1-1	Specifications	1-3
3-1	HP-IB Capabilities	3-5
4-1	Recommended Test Equipment	4-1

FIGURES

FIGURE		Page
2-1	Line Voltage Switch Assembly	2-2
2-2	Power Cables-Plug Identification	2-3
2-3	HP-IB Connector	2-4
3-1	Front and Rear Panels	3-0
3-2	Typical Set-up	3-4
4-1	Reference Measurement Set-up	4-3
4-2	Total Insertion Loss Set-up	4-4
4-3	Attenuation Accuracy Test Set-up	4-5
4-4	Return Loss Set-up	4-8

SECTION I

GENERAL INFORMATION

1.1 INTRODUCTION

This manual contains the information required to install, test, and operate the Hewlett-Packard Model HP 8157A Optical Attenuator.

1.2 SPECIFICATIONS

Specifications of the Model HP 8157A are given in Table I-1. These specifications are the performance standards or limits against which the instrument is tested. The specifications are measured with Diamond[®] HMS-10/HP (Opt.011) connector interfaces and Diamond[®] HMS-10/HP connectors.

1.3 SAFETY CONSIDERATIONS

The Model HP 8157A is a Safety Class 1 instrument (instrument with an exposed metal chassis that is directly connected to earth via the power supply cable). The symbol used to indicate a protective earth terminal in the instrument is \oplus .

Before operation, the instrument and manual, including the red safety page, should be reviewed for safety markings and instructions. These must then be followed to ensure safe operation and to maintain the instrument in a safe condition.

CAUTION

Every time that you connect a fiber to the HP 8157A, CLEAN the connectors. This is because any dirt particles on the ferrule of the HP 8157A connector will effect the return loss of the instrument and could also lead to permanent damage of the optical block.

DO NOT use index matching gel on the HP 8157A connectors, as this could damage the instrument. If you must improve connections, use only immersion oils.

Recommended Immersion Oils:

R.P. Cargille Laboratories, INC

Refractive Index Liquid, use one with the refractive index of glass.

Zeiss Immersion Oil

HP Part Number 6040-0648

CAUTION

If you wish to use a DIN multimode connector on this instrument, screw the connector onto the HP 8157A's connector interface very softly, otherwise permanent damage can be caused to the ferrule of the HP 8157A.

1.4 INSTRUMENTS COVERED BY THIS MANUAL

Each Model HP 8157A has a two-part serial number. The first 4 digits and the letter comprise the serial number prefix; the last 5 digits a sequential suffix which is unique to each Model HP 8157A. The contents of this manual apply directly to optical attenuators having serial numbers above 2720G00101

1.5 DESCRIPTION

The HP 8157A Optical Attenuator is precisely calibrated at 1300nm and 1550nm over the whole 60dB attenuation range. Because of the advanced optical system, including the lens design and coating, the attenuation can be easily corrected for other wavelengths in the respective ranges by simple entry of the desired wavelength into the instrument memory. This enables you to match the attenuator exactly to the center wavelength of your source, thus ensuring reliable measurement results. The following lists the features of the HP 8157A Optical Attenuator:

- designed for single-mode fibers
- full HP-IB programmability
- 60dB attenuation range, 0.01dB resolution and 0.04dB repeatability
- correction of attenuation between 1200nm and 1650nm

1.6 ACCESSORIES SUPPLIED

The Model HP 8157A is supplied complete with the following accessories:

Item	HP Part No.
T 800mA, 250Vac Fuse (100/120V)*	2110-0020
T 400mA, 250Vac Fuse (220/240V)*	2110-0340
Power Cord	see Figure 2-2

* one fitted and one supplied

1.7 ACCESSORIES AVAILABLE

A number of interface cables are available for simplifying connection of the Model HP 8157A to various optical signal sources and receivers. For a list of these adapter cables and connectors, see the latest Ordering Guide. The following lists the company options available for the HP 8157A:

Option 907	Front Handle Kit
Option 908	Rack Flange Kit
Option 916	Additional Operating and Programming Manual
P/N 5061-9071	Bail Handle Kit

An additional accessory for the Model HP 8157A is the HP 15475A Cleaning Kit. This kit includes cleaning material (brush, tissue, tape, etc.) to clean optical surfaces such as connectors and is supplied in a plastic carrying case.

Table 1-1. Specifications

Specifications describe the instrument's warranted performance. They are measured with Diamond® HMS-10/HP connector interfaces (Opt.011) and Diamond® HMS-10/HP connectors, if not otherwise specified. The connectors must have Manufacturing Date Code 31-87 or higher to achieve the warranted return loss values.

Optical Characteristics

Specifications are measured at 1300nm and 1550nm using a CW laser diode source with constant output power and single-mode fibers with 9/125 μm (NA=0.1).

Wavelength Range:
1200nm to 1650nm

Attenuation Range (excl. insertion loss): 60.00dB

Insertion Loss (incl. both connectors)

	HMS-10/HP Opt.011	FC/PC, DIN, ST Opts.012,013,014
worst case	< 4.0dB	< 6.0dB
typical	2.0dB	2.0dB

Linearity: $\pm 0.20\text{dB}$, typically 0.05dB

Return Loss (incl. two Diamond® HMS-10/HP connector interfaces and a terminated fiber end*): >33dB

Typical Return Loss (incl. two connector interfaces and a terminated fiber end*):

HMS-10/HP	PC	ST	DIN 47256	FC**
> 36dB	> 30dB	> 20dB	> 33dB	< 14dB

* Far end of fiber connected to the output port is terminated reflection-free.

** Note: FC is not a physical contact connector, therefore return loss is < 14dB.

Repeatability (of attenuation after any parameter has been changed and reset): < $\pm 0.04\text{dB}$

Display

Display Range: 0.00 to 64.00dB

Display Resolution: 0.01dB (min. step size)

Supplementary Performance Characteristics

(Description of non-warranted typical performance parameters)

Repeatability (of attenuation after a max. of 6 matings of same connector pair): <0.2dB

Operating Modes

Output disable: Optical signal path interrupted.

λ : Entry of wavelength for automatic correction of attenuation using typical correction values

Att: Attenuation is displayed and can be varied

Cal: Entry of calibration factor to adjust display so that displayed value indicates actual power level at output connector of attenuator. Range: ± 99.99 dB

General

Recalibration period: 1 year

No warm-up time required if previously stored within operating temperature range.

HP-IB Capability

All modes and parameters can be programmed.

Listen (time for HP 8157A to receive, verify and execute a message).

Output disable/enable, attenuation, λ : < 20 to 550ms (depending on actual setting/programmed parameter)

Cal: < 5ms

Talk (time for HP 8157A to transmit a message).

Query commands: < 1ms/character

HP-IB Interface Function Code: SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT0, C0

Environmental

Storage temperature: -40°C to +75°C

Operating temperature: 0°C to +55°C

Humidity: <95% R.H. from 0°C to 40°C

Power: 100/120/220/240Vrms, +5%, -10%, 90VA max., 48-400Hz

Battery back-up (for non-volatile memory): with instrument switched off all current modes and data will be maintained for at least 10 years after instrument delivery

Dimensions: 89mm H, 212.3mm W, 345mm D (3.5"x8.36"x13.6")

Weight: net 6.3 kg (13.9 lbs), shipping 10.6 kg (23.4 lbs)

For adapter cables and other accessories see latest Ordering Guide.

Data subject to change.

SECTION II

INSTALLATION

2.1 INTRODUCTION

This section provides installation instructions for the Model HP 8157A and its accessories. It also includes information about initial inspection and damage claims, preparation for use, packaging, storage and shipment.

2.2 INITIAL INSPECTION

Inspect the shipping container for damage. If the container or cushioning is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been verified both mechanically and electrically.

Procedures for checking the optical operation are given in Section 4. If the contents are incomplete, mechanical damage or defect is apparent, or if an instrument does not pass the operator's checks, notify the nearest Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The HP office will arrange for repair or replacement without waiting settlement.

2.3 PREPARATION FOR USE

WARNING

To avoid hazardous electrical shock, do not perform electrical tests when there are signs of shipping damage to any portion of the outer enclosure (covers, panels, etc.).

When operating the HP 8157A in the vertical position i.e. standing on the rear panel feet, care should be taken to ensure the instrument does not fall over and cause operator injury.

2.4 Power Requirements

The instrument requires a power source of 100/120/220/240 Vrms (+10%, -5%) at a frequency of 48-400 Hz single phase. The maximum power consumption is 90 VA.

2.5 Line Voltage Selection



BEFORE SWITCHING ON THE INSTRUMENT, make sure that the instrument is set to the local line voltage.

The switch is combined with the power line voltage receptacle on the rear panel. If it is necessary to change the setting, **THE POWER CORD MUST FIRST BE DISCONNECTED.** Then insert a screwdriver into the recess at the left-hand side of the assembly and prise open the cover. Figure 2-1 shows the main details of the assembly. To change the voltage setting, the selector must be removed and then replaced with the new setting value displayed. If necessary, change the fuse in accordance with the new voltage setting.

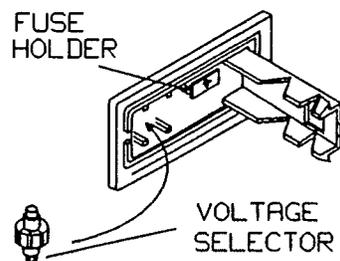


Figure 2-1. Line Voltage Switch Assembly.

VOLTAGE	100/120V	220/240V
FUSE	T 800mA, 250Vac	T 400mA, 250Vac

2.6 Power Cable

In accordance with international safety standards, this instrument is equipped with a three-wire power cable. When connected to an appropriate ac power receptacle, this cable grounds the instrument cabinet. The type of power cable shipped with each instrument depends on the country of destination. Refer to Figure 2-2 for the part numbers of the power cables available.

WARNING

To avoid the possibility of injury or death, the following precautions must be followed before the instrument is switched on.

- If this instrument is to be energised via an autotransformer for voltage reduction, ensure that the Common terminal is connected to the grounded pole of the power source.*
- The power cable plug shall only be inserted into a socket outlet provided with a protective ground contact. The protective action must not be negated by the use of an extension cord without a protective conductor.*
- Before switching on the instrument, the protective ground terminal of the instrument must be connected to a protective conductor. This is verified by using the power cord which is supplied with the instrument.*

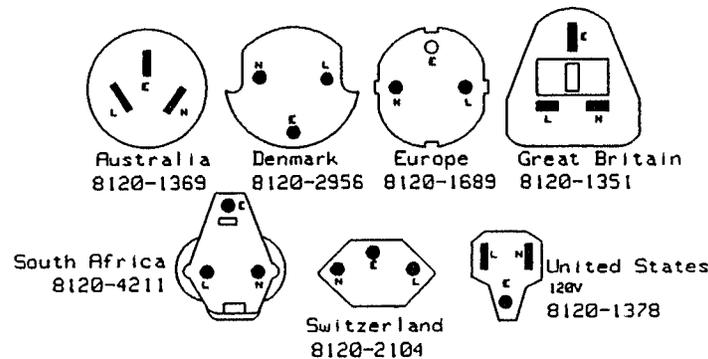


Figure 2-2. Power Cables - Plug Identification

The following work should be carried out by a qualified electrician - all local electrical codes being strictly observed. If the plug on the cable does not fit the power outlet, or the cable is to be attached to a terminal block, cut the cable at the plug end and re-wire it.

The color coding used in the cable will depend on the cable supplied (see Figure 2-2). If a new plug is to be connected, it should meet local safety requirements and include the following features:

- Adequate load-carrying capacity (see table of specifications in Section 1).
- Ground connection.
- Cable clamp.

2.7 HP-IB Connector

The rear panel HP-IB connector (Fig 2-3), is compatible with the connector on Cable Assemblies 10833A, B, C and D. If a cable is to be locally manufactured, use connector male, HP part number 1251-0293.

2.8 HP-IB Logic Levels

The HP 8157A HP-IB lines use standard TTL logic, the levels being as follows:

True = Low = digital ground or 0V dc to 0.4V dc,

False = High = open or 2.5V dc to 5V dc.

All HP-IB lines have LOW assertion states. High states are held at 3.0V d.c. by pull-ups within the instrument. When a line functions as an input, approximately 3.2mA of current is required to pull it low through a closure to digital ground. When a line functions as an output, it will sink up to 48mA in the low state and approximately 0.6mA in the high state.

NOTE: Isolation, the HP-IB line screens are not isolated from ground.

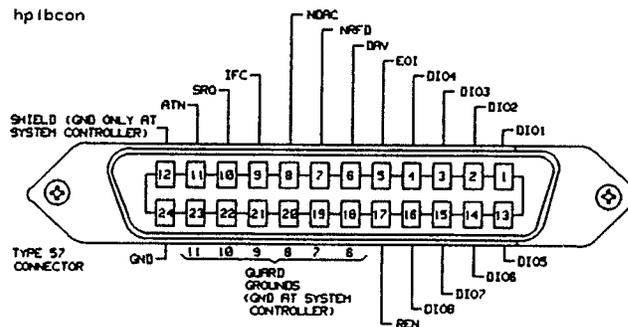


Figure 2-3. HB-IB Connector

2.9 OPERATING ENVIRONMENT

The operating temperature limits are 0°C to 55°C. The specifications also apply over this range.

2.10 CLAIMS AND REPACKAGING

If physical damage is evident or if the instrument does not meet specification when received, notify the carrier and the nearest Hewlett-Packard Service Office. The Sales/Service Office will arrange for repair or replacement of the unit without waiting for settlement of the claim against the carrier.

2.11 STORAGE AND SHIPMENT


The instrument can be stored or shipped at temperatures between minus 40 deg C and plus 75 deg C. The instrument should be protected from temperature extremes which may cause condensation within it.

If the instrument is to be shipped to a Hewlett-Packard Sales/Service Office, attach a tag showing owner, return address, model number and full serial number and the type of service required.

The original shipping carton and packing material may be reusable, but the Hewlett-Packard Sales/Service Office will also provide information and recommendations on materials to be used if the original packing is no longer available or reusable. General instructions for repacking are as follows:

1. Wrap instrument in heavy paper or plastic.
2. Use strong shipping container. A double wall carton made of 350-pound test material is adequate.
3. Use enough shock-absorbing material (3 to 4 inch layer) around all sides of the instrument to provide a firm cushion and prevent movement inside container. Protect control panel with cardboard.
4. Seal shipping container securely.
5. Mark shipping container FRAGILE to encourage careful handling.
6. In any correspondence, refer to instrument by model number and serial number.

Figure 3-1. Front and Rear Panel

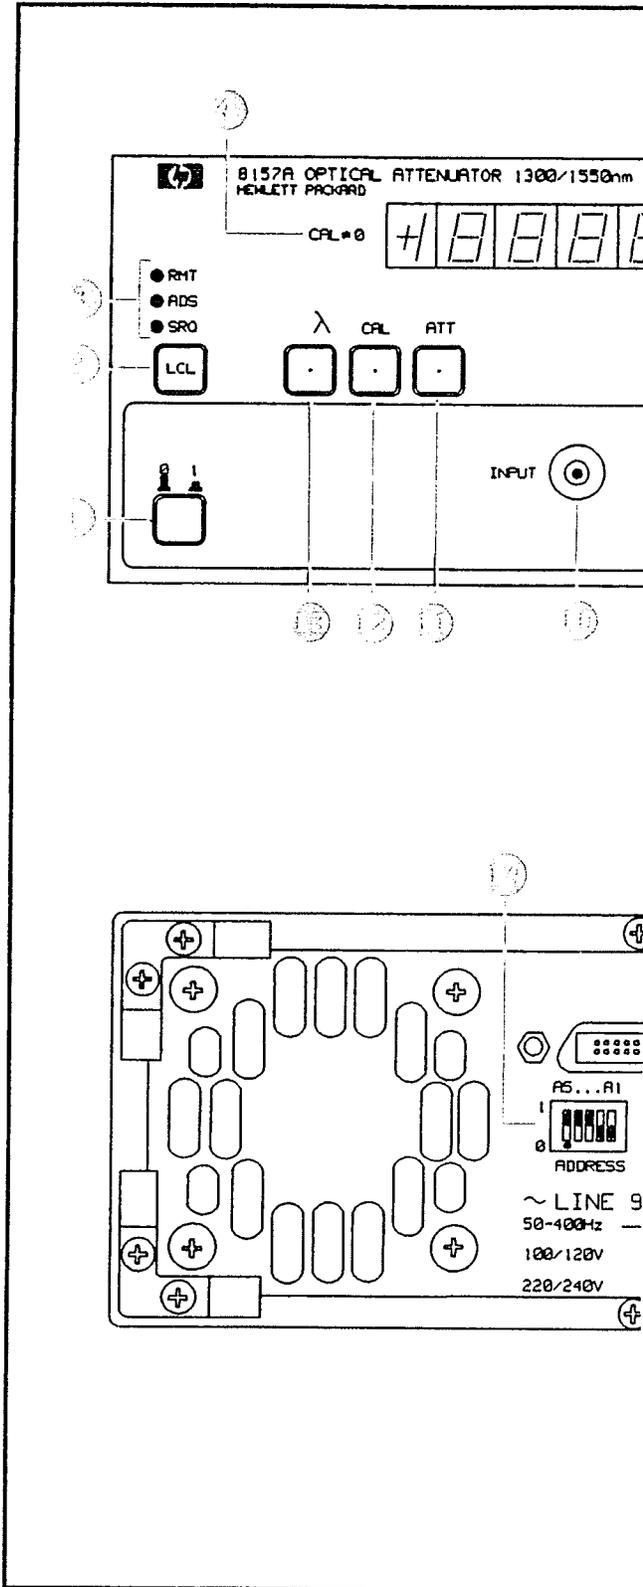

SECTION III

OPERATING AND PROGRAMMING

3.1 INTRODUCTION

This section explains the functions of controls, indicators and connectors, as well as providing operating and programming information. Figure 3-1 provides a numbered illustration of the front and rear panel controls, and should be folded out when reading the description "Getting to Know Your Instrument " on the following pages. This description should be read before continuing with the more detailed operating information. Programming information is located at the end of this section.

3.2 SPECIAL OPERATING CONSIDERATIONS

The following points should be noted before applying power to the instrument:

- ➔ Read the safety summary at the beginning of this manual.
- ➔ Ensure that the VOLTAGE SELECTOR switch on the rear panel is set for operation at the local line voltage.

If any change is made to the setting of the VOLTAGE SELECTOR switch, the fuse must also be changed. Before making either of these changes, switch the instrument off and disconnect the power cord.

WARNING

How to Avoid Potential Exposure to Radiation

When connecting the Model HP 8157A into the optical path between an optical source and optical receiver, complete the connection between the Model HP 8157A and receiver first. Then regarding the connection between Model HP 8157A and source, make the Model HP 8157A connection before the source connection. This avoids any potential exposure to radiation.

3.3 OPERATORS CHECKS

The HP 8157A performs a self-test routine at power switch-on. At the start of this routine, all front panel LEDs should be momentarily lit. In the event of a fault being detected, an error code will be presented in the digital display. The error codes and required action are listed as follows:

- Keyboard test failed. Check that no key is stuck in pressed position.

Exxx where xxx is a 3-digit number. Indicates a serious fault and instrument should be returned to the nearest Hewlett-Packard Service Office.

3.4 GETTING TO KNOW YOUR INSTRUMENT

The following should be read in conjunction with Figure 3-1 which can be folded out to aid understanding.

Frontpanel

1. LINE switch. Power on/off switch.
2. LCL key. This key returns the HP 8157A to local manual operation when the instrument is under program control. Note that this key is disabled when the LOCAL LOCKOUT command has been sent by the system controller to the instrument.
3. Program status LEDs. When illuminated, the following is indicated.
 - RMT: Indicates remote control. All front panel pushbuttons (except the LCL pushbutton) are disabled.
 - ADS: Indicates that the instrument is being addressed under program control, although the front panel pushbuttons may still be enabled depending on the status of the RMT LED.
 - SRQ: Indicates that a Service Request has been sent by the instrument to the controller.
4. CAL \neq 0 LED. Indicates that a non-zero value is currently selected for the CAL factor (see description for CAL key 13). The difference between the **displayed** attenuation and **actual** attenuation = the CAL factor.
5. Digital display. Displays numerical value of currently selected parameter (wavelength, CAL-factor or attenuation).
6. Unit LEDs. Operate in conjunction with the digital display (6) to indicate the base units of the currently selected parameter.
7. VERNIER rocker keys. Used to vary parameter values.
8. DISABLE key. Used to enable/disable the optical output (10). When the key LED is illuminated, the optical output is disabled.
9. Connector for optical output.
10. Connector for optical input.
11. ATT key. Used to set the attenuation. When pressed, current attenuation is displayed and can be changed via VERNIER keys (8).
12. CAL key. Used to offset the **displayed** attenuation value (as set via key (12)). When pressed, current offset (CAL factor) is displayed and can be changed via VERNIER keys (8). **NOTE:** When CAL key is already active, i.e. key LED illuminated, holding the key down will display the insertion loss for the selected fiber mode.
13. λ key. Used for setting the wavelength. When pressed, the current wavelength is displayed and can be changed via VERNIER keys (8).

Rearpanel

14. HP-IB address switch.
15. HP-IB connector.
16. LINE connector assembly (including VOLTAGE SELECTOR switch). A three-pronged receptacle to provide chassis ground through the power cable for operator protection.

3.5 SETTING THE ATTENUATION

3.6 Basic Considerations

When you press the ATTenuation key on the HP 8157A front panel, the displayed setting automatically takes into consideration:

- The operating wavelength of the optical input. (Selected by λ key 13).

Due to the fact that attenuation is dependent on **wavelength**, you must first set the HP 8157A to the operating wavelength of the optical input to ensure attenuation accuracy. To make sure that you obtain the optimum performance from your optical system, use the center wavelength of your source. This can be found, for example, on the heatsink at the rear of the HP8154B. To set the wavelength, press λ key (13) and the current setting will be displayed. You can then change this setting via VERNIER keys (7), and the HP 8157A adjusts the attenuating filters automatically.

NOTE

Although instrument operation is specified for wavelengths 1300nm and 1550nm the setting range is 1200nm to 1650nm. For any setting other than that specified, the attenuation is based on a wavelength correction factor which is **typically** interpolated from the specified values.

With wavelength selected, the HP 8157A now performs automatic correction for any attenuation settings you make via the ATT key (11).

3.7 Optimize The Display With The CAL Key

The CAL key can be used to change the displayed attenuation setting without a corresponding change in actual attenuation at the output. Two examples of how this would be useful are as follows:

1. Making relative settings. If you want the displayed attenuation to be referenced to 20 dB, then entering -20 dB via the CAL key will set 20 dB **actual** attenuation to be the 0 dB **displayed** setting.
2. Adjusting the displayed attenuation to take known external losses into account. Consider the typical setup shown in the following figure 3-2.

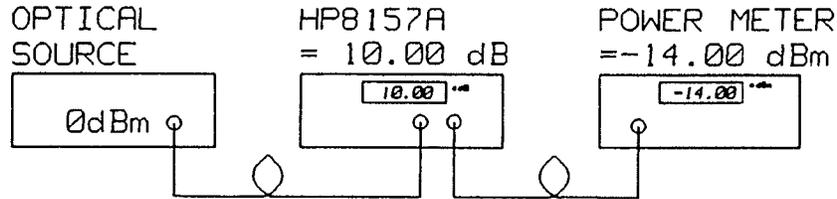


Figure 3-2.

Total attenuation from source to power meter is 14 dB, although the HP 8157A's displayed attenuation setting is 10 dB. There are therefore 4 dB external losses. By entering 4 dB via the CAL key, the displayed attenuation setting will change to 14 dB to include the 4 dB external losses, thus corresponding to power meter reading. Note that the CAL \neq 0 LED is now illuminated. This informs you that the displayed attenuation has been corrected via the following formula to include the CAL factor:

$$\text{Actual attenuation} + \text{CAL factor} = \text{Displayed attenuation}$$

Substituting the values in the example gives the following:

$$10\text{dB} + 4\text{dB} = 14\text{dB}$$

3.8 PROGRAMMING

3.9 WHAT YOU NEED TO KNOW

Programming information in this section is restricted to HP 8157A specifics, and assumes that you have a working knowledge of HP-IB intrinsics. If you are not familiar with HP-IB, then refer to the following publications:

- HP Publication 5952-0156, "Tutorial Description of HP-IB"
- ANSI/IEEE-488-1978, "Digital Interface for Programmable Instrumentation" published by the Institute of Electrical and Electronic Engineers

For a complete list of the HP 8157A programming commands, refer to the pages at the end of this section.

3.10 . . . About The HP 8157A's HP-IB Capabilities

The HP 8157A interfaces to the HP-IB as defined by the IEEE Standard 488-1978. The interface functional subset which the HP 8157A implements is specified in Table 3-1.

Table 3-1. HP-IB Capabilities

MNEMONIC	INTERFACE FUNCTION NAME
SH1	SOURCE HANDSHAKE CAPABILITY
AH1	ACCEPTOR HANDSHAKE CAPABILITY
T6	BASIC TALKER, SERIAL POLL, UNADDRESSED IF MY LISTEN ADDRESS
L4	BASIC LISTENER, UNADDRESSED IF MY TALK ADDRESS
SR1	SERVICE REQUEST CAPABILITY
RL1	REMOTE/LOCAL CAPABILITY
PPO	NO PARALLEL POLL CAPABILITY
DC1	DEVICE CLEAR CAPABILITY
DT0	NO DEVICE TRIGGER CAPABILITY
CO	NO CONTROLLER CAPABILITY

3.11 . . . About Programming Examples in This Section

Programming examples are given in this section to aid explanation. These examples assume the following:

- an HP9000, Series 200 or 300 Computer is controller
- that BASIC is the programming language
- the HP 8157A is set to HP-IB address 28 (factory setting)

3.12 GETTING STARTED


If this is the first time you are programming the HP 8157A, the following gives you a few simple tasks to carry out prior to detailed program development. The benefits are twofold in that it gets you started on programming the HP 8157A, at the same time checking remote operation of your instrument.

3.13 Setting the Address

Each instrument that you connect to the interface bus has a unique "address", and the HP 8157A is no different. The address used in a typical BASIC statement takes the form "7xx" where:

- 7 = the interface select code
- xx = the instrument address, which can be any integer from 00 to 30 (21 is usually reserved for the controller)

The HP 8157A is preset at the factory to address 28 as shown in the following illustration of the address switch (you can check this by pressing the front panel LCL key to display the address).

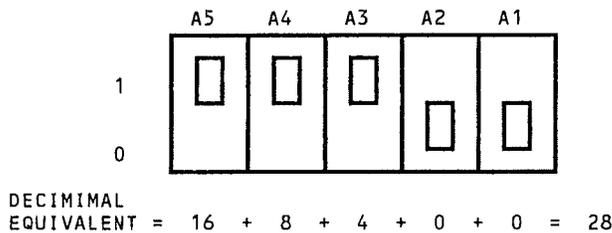

If you are satisfied with this address, then continue with the next task "Checking Remote Operation" (Note that all examples in this section assume the address is set to 28).

If you want to change the address, first ensure that the HP 8157A is in **local mode** and **not addressed** (i.e. the ADS and RMT LEDs (3) are not illuminated), then change the bit settings on rear panel address switch (16). Now press the front panel LCL key, and the new address will be activated and displayed.

3.14 Checking Remote Operation

You can now check remote operation using a few simple commands as follows:

<pre>10 DIM A\$(7) 20 CLEAR 728 30 OUTPUT 728; "ATT 5.00 dB" 40 OUTPUT 728; "ATT?" 50 ENTER 728;A\$ 60 PRINT A\$ 70 END</pre>	<ul style="list-style-type: none"> -clears HP 8157A's input/output buffers -sets attenuation to 5.00 dB -interrogates attenuation setting -transfers setting data to controller
---	---

The controller output should read " 5.00" which indicates that both the Listener and Talker functions of the HP 8157A are operating correctly.

3.15 SENDING DATA TO THE HP 8157A (LISTENER FUNCTION)

All the settings you can make via front panel switches can also be programmed via HP-IB. To aid explanation, consider the following programming example:

```
10 OUTPUT 728;"WVL 1300 NM;Cal 0dB;D0;Att 3.2dB"  
20 END
```

This sets the HP 8157A to a wavelength of 1300nm, attenuation 3.2dB, CAL factor 0.0dB and output ON. The points to note on the setting "string" are as follows:

- Each setting in the string must be terminated by a ";"
- Either upper or lower case may be selected (d0 is the same as D0)
- Any of 3 different data formats may be used. The following settings are equivalent and will be interpreted correctly:
wvl 1300 nm WVL 1.3 um WVL 1300 e-09 m WVL 1.3E-06
- If no unit is specified, then the default unit will be assumed. The default unit is **dB** for attenuation and CAL factor, and **meter** for wavelength

(A complete list of the setting commands is given at the end of this section).

3.16 RECEIVING DATA FROM THE HP 8157A (TALKER FUNCTION)

Just as you can program all HP 8157A settings via HP-IB, you can also interrogate all settings - either individually or as a complete set (learn string). The HP 8157A can also send data regarding installed firmware, error and status reports. (A complete list of the interrogating commands is given on the blue pages at the end of this section).

From the programming example given in the previous sub-section, the wavelength was set to 1300nm. If you now want to interrogate this setting, you could use the following simple program:

```
10 DIM A$(11)           -dimensions string A$ for 11 characters
20 OUTPUT 728;"WVL?"   -interrogates the wavelength setting
30 ENTER 728;A$        -transfer setting data to controller
40 DISP A$             -displays the setting data. ( 0.1300E-05)
50 END
```

Depending on which setting is being interrogated, the length of the character string returned to the controller is 1 to 11 characters long. You can also interrogate the complete settings using a single command. The following provides an example:

```
10 DIM A$(56)
20 OUTPUT 728;"LRN?"
30 ENTER 728;A$
40 PRINT A$
50 END
```

The Model HP 8157A then returns its settings as a 56-character string to the controller. The setting sequence is always the same and listed as follows:

Fiber setting	4 characters
Output state	4 characters
SRQ mask	8 characters
CAL factor	12 characters
Attenuation	12 characters
Wavelength	16 characters

3.17 STATUS/ERROR REPORTING (TALKER FUNCTION)


Another important feature of the HP 8157A is that you can program it to interrupt the controller when certain status/error conditions are met. The Require Service (SRQ) message is used to implement this feature and is independent of all other HP-IB activity. However, the HP 8157A **must be programmed** for the interrupt, via the SRQ mask, before the interrupt will take place. The possible interrupt conditions that can be programmed via the SRQ mask are listed as follows:

Self-Test Error	If an error is detected by the self-test at power-on, or via the "TST?" command (e.g. OUTPUT 728;"TST?").
Settled	When the HP 8157A's hardware has settled to the new setting values. (Hardware Ready).
Parameter Error	A wrong value has been set for a parameter.
Message Available	When the HP 8157A is ready to respond to an interrogation command.
Syntax Error	An invalid instruction has been sent.

These 6 interrupt conditions are monitored by an 8-bit Status Register, the content of this register being referred to as the Status Byte.

3.18 Status Register and Status Byte

The following shows which bit in the Status Register is allocated to which interrupt condition:

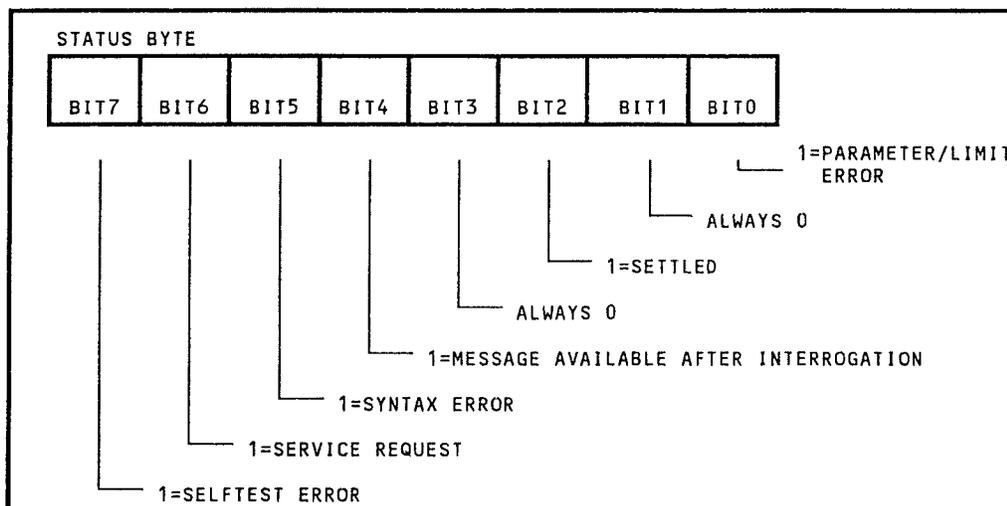

When an interrupt condition is true, the corresponding bit in the status Register is set to 1 - **independent of the SRQ mask setting**. However, an interrupt (SRQ) will only occur when the SRQ mask has been set for that condition. It is therefore possible for one or more bits of the Status Register to be true without the HP 8157A causing an interrupt - **because the SRQ mask has not been set for these bits**.

This is typically the case at power-on or after "Device Clear" - as the SRQ mask is then set to decimal 000 and all interrupts are disabled. If the HP 8157A is now serial polled or receives the "STB?" command, the decimal equivalent of the Status Byte is returned to the controller - but the Status Byte remains unchanged. To clear the Status Byte, the "CSB" (Clear Status Byte) command must be used. For example:

10	DIM A\$(7)	- Dimension of A-string
20	CLEAR 728	- Clears HP 8157A's I/O buffers; SRQ mask = 000
30	OUTPUT 728;"CSB"	- Clear Status Byte
40	OUTPUT 728;"wvl?"	- Interrogate wavelength setting.
50	S=SPOLL(728)	- Serial poll of HP 8157A
60	IF BIT(S,4) = 0 THEN GOTO 50	- Check Status Byte; if Bit 4=0,repeat Serial poll; if Bit 4=1, message available
70	ENTER 728;A\$	- Transfer wavelength setting to controller
80	PRINT A\$	- Print result
90	OUTPUT 728;"CSB"	- Clear Status Byte
100	END	

If the SRQ mask is set for certain conditions, and one of these conditions occur, bit 6 of the Status Register will go true ("1" state), the SRQ LED on the front panel will illuminate, and the HP-IB SRQ message will be sent. At this point, it will be necessary to address the HP 8157A as talker by using the Serial Poll command or "STB?" command:

10	A=SPOLL(728)	- Transfers Status Byte to variable "A"
20	PRINT A	
30	END	
	or	
10	OUTPUT 728;"STB?"	- Interrogates the Status Byte
20	ENTER 728;A	- Transfers the Status Byte to variable "A"
30	PRINT A	
40	END	


The Status Byte is returned to the controller as a decimal number which can be broken down into its 8 binary components to determine which bit has gone true. At the same time, the Status Register is cleared and SRQ set false.

NOTES

- Once SRQ is set true, the Status Byte remains unchanged until serial polled or interrogated via the "STB?" command. For any interrupt condition going true during this period, the corresponding bit in the Status Register will not be set. Instead, the "1" state will be held in HP 8157A memory and loaded into the Status Register after it is cleared e.g. by serial poll.
- For this reason, if several conditions are enabled by the SRQ mask and they all go true, only the condition that occurred first will have its bit set in the Status Register. The bit settings for the other conditions will be held in HP 8157A memory, and loaded simultaneously into the Status Register after it is cleared. If you have set more than one condition by the SRQ mask, therefore, your program should serial poll the HP 8157A twice to ensure that the Status Register is cleared and SRQ set false.

3.19 Setting the SRQ Mask


The SRQ mask can be set to mask bits 0-5 and bit 7 on the Status Register. Default mask value is 0 i.e. all interrupt conditions are disabled and no SRQ can be generated. To set the mask first determine which conditions you want to interrupt the controller, e.g., parameter error, syntax error, etc. Determine the decimal number (1-191) corresponding to those conditions. A "1" in the mask byte enables the corresponding interrupt condition. Then output the "SRE" instruction mnemonic followed by the decimal number. The following shows the Status Register and the SRQ mask set for bit 1 and bit 5, syntax error and parameter error. (OUTPUT 728;"SRE33").

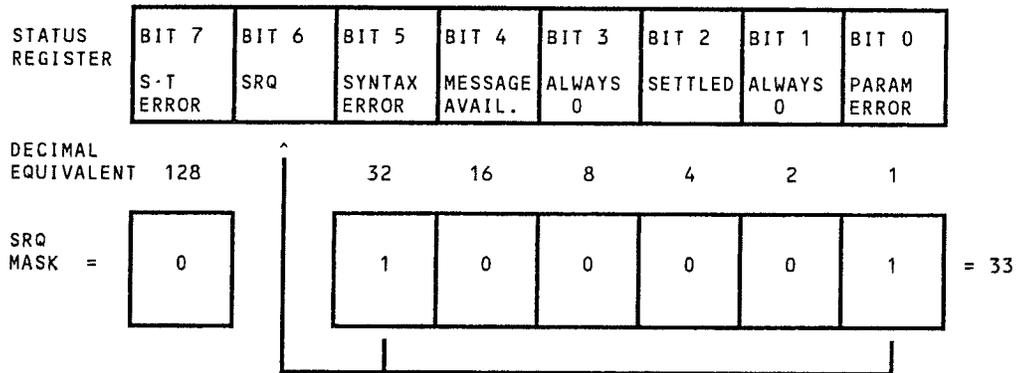

3.20 Condition Register

Whereas the **Status Register** monitors events, i.e. when an interrupt condition occurs, a bit is set and remains set until the register is cleared, the **condition register** monitors the current status regarding "settled" and "attenuation > display".

The bit allocation in the condition register is as follows:

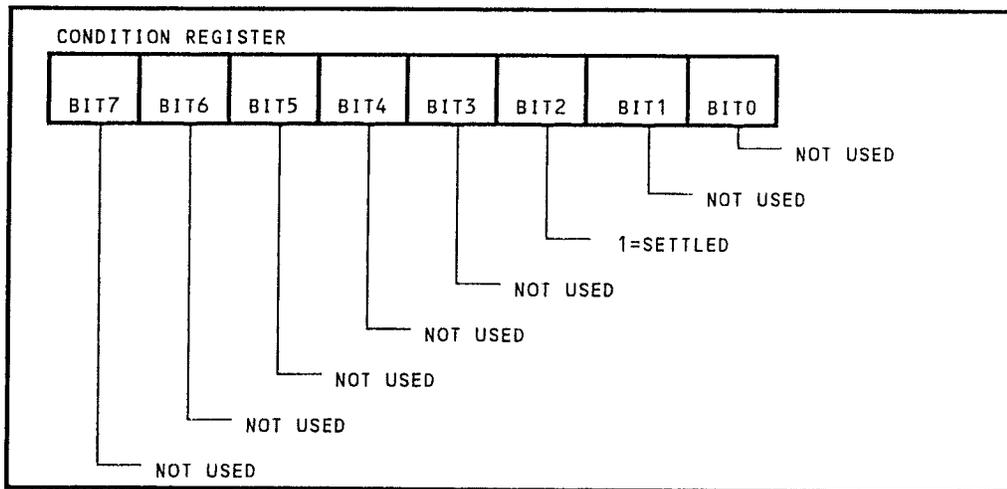

When the condition register is interrogated via the "CNB?" command, the contents are returned to the controller as a decimal number. This number can then be broken down into its binary components to determine which bit has been set to "1".

HP 8157A COMMAND SUMMARY

SETTINGS (LISTENER FUNCTION)

Parameter/Operation	Mnemonics	Data	Unit	Comment
Select Single-Mode Select Multimode	F F	1 2		These commands will be ignored, as always single-mode i.e. 1. Here due to compatability to HP 8158B.
Enable Output Disable Output	D D	0 1		
Set Wavelength	WVL	value	M MM UM NM	meter. Default if no unit defined millimeter micrometer nanometer
Set Attenuation	ATT	value	DB	Default is dB if no unit defined
Set CAL Factor	CAL	value	DB	Default is dB if no unit defined
Set SRQ Mask	SRE	value		value = decimal number (0-191). A "1" in the binary equivalent sets SRQ on this condition.
Clear Status Byte	CSB			Always clears Status Byte independent of SRQ state.
Clear Device	CLR			Clears all I/O buffers. Same as Universal Device Clear Command.

INTERROGATING SETTINGS (TALKER FUNCTION)

Parameter/Operation	Mnemonics	Comment
Learn Mode	LRN?	Returns 56-character string detailing all settings.
Interrogate setting	F? WVL? CAL? ATT? D?	Always returns 1, i.e. single-mode. Returns 11-character string for λ setting. Always in meters. Returns 7-character string for CAL factor. Always in dB. Returns 7-character string for attenuation setting. Always in dB. Returns integer (0 or 1) for output off/on.

STATUS/ERROR REPORTING (TALKER FUNCTION)

Interrogation	Mnemonics	Comment
Status Byte	STB?	Returns 3-digit integer (000-191). With SRQ false, does not clear Status Byte.
Status Byte Mask	SRE?	Returns 3-digit integer (000-191)
Condition Byte	CNB?	Returns 2-digit integer (00-06)
Self-test	TST?	Executes self-test and returns 0 or 1 to indicate passed or failed
Error Number	ERR?	Returns 3-digit integer representing HP 8157A error code (details given in Service info). 000 means no error. An error code is only available if bit 7 (self-test) in the Status Byte has been set. Other error conditions in the Status Byte will not cause an error code. On readout, the error code is transferred to the 'Last Error Number' register.
Last Error Number	LERR?	Returns 3-digit integer for last active error. This is a destructive readout.
Operation Complete	OPC?	1 if no further command to interpret and execute in the input buffer. 0 if further commands in the input buffer.
Identifier	IDN?	Returns 40-character string identifying currently installed firmware and manufacturer model no.

UNIVERSAL COMMANDS

Command	ASCII Character	Equivalent Forms		
		Binary	Octal	Decimal
Device Clear	DC ₄	00010100	024	20
Selected Device Clear	EOT	00000100	004	4

Both "CLEAR" commands clear all input/output buffers, reset SRQ mask to all disabled and SRQ to false, but have no effect on HP 8157A mode/parameter settings.

SECTION IV

PERFORMANCE TESTS

4.1 INTRODUCTION

The procedures in this section test the optical performance of the instrument. The complete specifications to which the HP 8157A is tested are given in Table 1-1. All tests can be performed without access to the interior of the instrument.

4.2 EQUIPMENT REQUIRED

Equipment required for the performance test is listed in Table 4-1. Recommended Test Equipment. Any equipment which satisfies the critical specifications given in the table may be substituted for recommended models.

Table 4-1. Recommended Test Equipment

Instrument/Accessory	Rec. Model	Critical Specification
Power Meter Standard	HP8152A HP81521B	Accuracy: < 2%, Dynamic Range >60dB. Accuracy (rel) <0.15dB
Lens Adapter	HP81010BL	
Connector Adapter	HP81000AA	
Single-Mode Fibers	HP81101AC 2 off	Date code 31-87 and higher.
Laser Source	HP8155A Opt.002/011	1300nm -3dBm into single-mode fiber
CW Laser Source	HP8155A Opt.003/011	1550nm -3dBm into single-mode fiber
OTDR	HP8145A Opt.002/011 or Opt.003/011	
Optical Attenuator	HP8158B Opt.002/011 or HP8157A Opt.011	
Single-Mode Fiber	≥0.5Km length with 2 Diamond HMS-10/HP connectors	
Connector Adapters	P/N 08154-61701 (Opt 011), if required	
Cleaning Kit	HP15475A	

4.3 TEST RECORD

Results of the performance test may be tabulated on the Test Record provided at the end of the test procedures. It is recommended that you fill out the Test Record and refer to it while doing the test. Since the test limits and setup information are printed on the Test Record for easy reference, the record can be also be used as an abbreviated test procedure (if you are familiar with test procedures). The Test Record can also be used as a permanent record and may be reproduced without written permission from Hewlett-Packard.

4.4 TEST FAILURE

If the HP 8157A fails any performance test, return the instrument to the nearest Hewlett-Packard Sales/Service Office for repair.

4.5 INSTRUMENTS SPECIFICATION

Specifications are the performance characteristics of the instrument which are certified. These specifications, listed in Table 1-1, are the performance standards or limits against which the HP 8157A can be tested. Table 1-1 also lists some supplementary characteristics of the HP 8157A and should be considered as additional information.

Any changes in the specifications due to manufacturing changes, design, or traceability to the National Bureau of Standards will be covered in a manual change supplement or revised manual. The specifications listed here supercede any previously published.

4.6 PERFORMANCE TEST

The performance tests given in this section are separated into Total Insertion Loss Test, Attenuation Accuracy Test, Attenuation Repeatability Test and Return Loss Test. Perform each step in the tests in the order they are given using the corresponding test equipment.

NOTE

Make sure that all optical connections of the test setups given in the procedure are dry and clean. For cleaning use accessory kit Model HP15475A. **DO NOT USE INDEX MATCHING GEL.**

The Optical Cables from the Laser Source to the HP 8157A and from the Attenuator to the Power Meter must be fixed on the table to ensure minimum cable movement during the tests.

All tests and equipment mentioned in the Performance Test section refer to tests carried out with the Diamond[®] HMS-10/HP connectors with date codes 31-87 and higher.

4.7 TOTAL INSERTION LOSS TEST

Specification:

Insertion loss (including both connectors) < 4.0 dB with single-mode fiber 9 μ m.

Equipment required:

1300nm single-mode tests

HP8155A Opt.002/011 Laser Source with constant output power 1300nm wavelength.
Power Meter Standard with Optical Head, connector adapter and lens adapter
for single-mode fiber. (8152A; 81521B; 81010BL; 81000AA)

Optical Cable (9 μ m) HP81101AC

Optical Cable (9 μ m) HP81101AC

1550nm single-mode tests

HP8155A Opt.003/011 Laser Source with constant output power 1550nm wavelength.
Power Meter Standard with Optical Head, connector adapter and lens adapter
for single-mode fiber. (8152A; 81521B; 81010BL; 81000AA)

Optical Cable (9 μ m) HP81101AC

Optical Cable (9 μ m) HP81101AC

Carry out the following TOTAL INSERTION LOSS test for 1300nm or 1550nm single-mode, using the equipment listed above.

- Using the VERNIER rocker keys set the HP 8157A attenuation to 0000 dB.
- Connect the equipment as shown in Figure 4-1

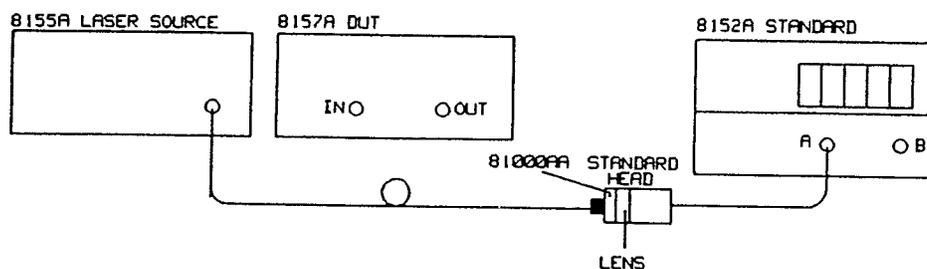


Figure 4-1. Reference Measurement Set-up

- Set the Average Power Meter to Autorange. Display [dB].
- Set DISPlay to REference on the power meter 8152A.

5. Connect the equipment as shown in Figure 4-2.

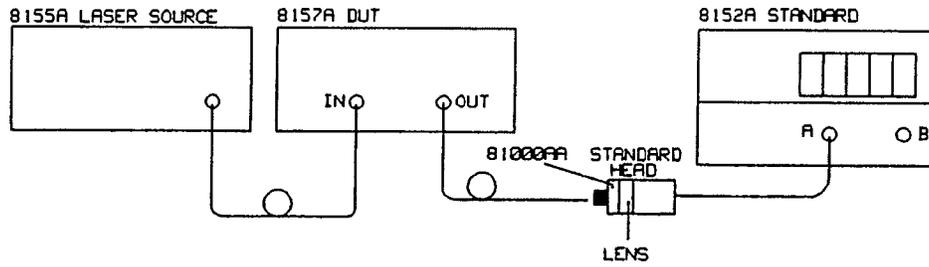


Figure 4-2. Total Insertion Loss Test Set-up

6. Enable the HP 8157A attenuator output and record the power meter reading (in dB) on the Test Record and check that it is within specifications.

4.8 ATTENUATION ACCURACY

Specifications:

Linearity for single-mode, ± 0.2 dB.

Equipment required:

1300nm single-mode tests

HP8155A Opt.002/011 Laser Source with constant output power 1300nm wavelength.

Power Meter Standard with Optical Head, connector adapter and lens adapter for single-mode fiber. (8152A; 81521B; 81010BL; 81000AA)

Optical Cable (9 μ m) HP81101AC

Optical Cable (9 μ m) HP81101AC

1550nm single-mode tests

HP8155A Opt.003/011 Laser Source with constant output power 1550nm wavelength.

Power Meter Standard with Optical Head, connector adapter and lens adapter for single-mode fiber. (8152A; 81521B; 81010BL; 81000AA)

Optical Cable (9 μ m) HP81101AC

Optical Cable (9 μ m) HP81101AC

Carry out the following ATTENUATION ACCURACY tests for 1300nm single-mode and 1550nm single-mode using the equipment listed above.

1. Set HP 8157A as follows:

λ as required

CAL to 0.00 dB.

ATT to 0.00 dB

2. Connect equipment as shown in Figure 4-3.

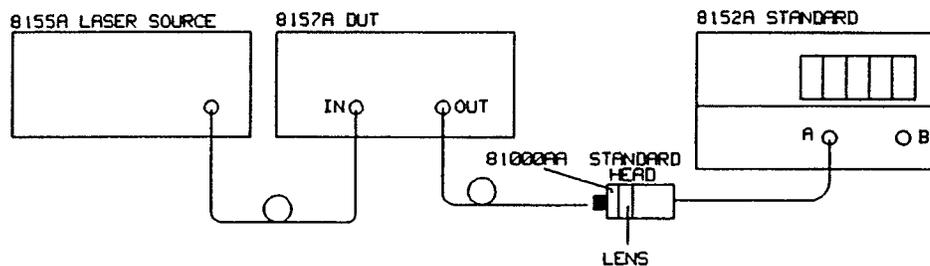


Figure 4-3. Attenuation Accuracy Test Set-up

3. Set HP 8157A output power level as 0.00 dB reference level on the Average Power Meter and check the following attenuation settings for ± 0.2 dB accuracy.

0.00 dB = Reference

1 dB	11 dB
2 dB	12 dB
3 dB	13 dB
4 dB	14 dB
5 dB	24 dB
6 dB	34 dB
7 dB	44 dB
8 dB	54 dB
9 dB	
10 dB	

4.9 ATTENUATOR REPEATABILITY

Specifications:

Repeatability after any parameter has been changed and reset $< \pm 0.04$ dB.

Equipment required:

Use the same equipment, test set-up and HP 8157A settings as used for the ATTENUATION ACCURACY test (either for 1300nm or 1550nm wavelength).

1. Set the HP8157A attenuation to the values shown in step 3 and note the AVG Power Meter reading in the Test Record.
2. Set the HP8157A attenuation to any other value (e.g.0.00dB) and then back to the previous value. Note the AVG Power Meter reading in the Test Record and check that the second reading is within ± 0.04 dB of the first reading.
3. Repeat steps 1 and 2 for following attenuation settings:

5dB
12dB
24dB
36dB
48dB
50dB
53dB

4.10 ATTENUATOR RETURN LOSS

Specifications:

Return Loss > 33 dB

Equipment required:

Return Loss Test

HP8145A Optical Time Domain Reflectometer Opt.002/011 or Opt.003/011.

Single-Mode Fiber with 2 HMS10/HP Connectors(≥ 0.5 km)

HP8157A or HP8158B Opt.002/011 Attenuator

2 off HP81101AC Single-Mode Fibers

15475-68701 Adhesive Tape Kit (Part of HP15475A Cleaning Kit) to terminate the HP8157A output.

1. Make sure that all optical connectors are cleaned carefully.
2. Connect equipment as shown in Figure 4-4

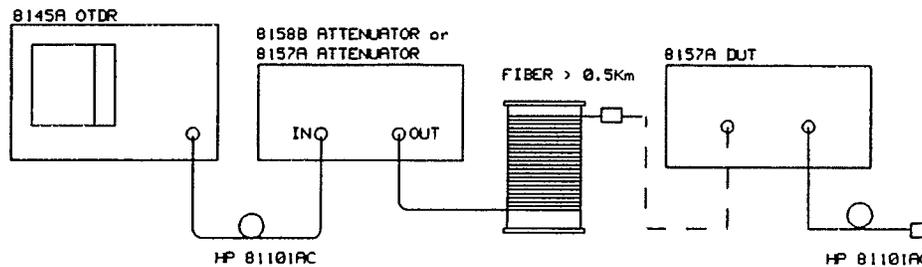


Figure 4-4. Return Loss Set-up

3. Set the 8158B (or HP 8157A) to min. attenuation and enable the output.
4. Set the HP8145A as follows:

Press RCL 0 ENTER and then START.

Select span and move the end-reflection of the connected fiber to the center of the screen.

Next press the center position softkey.

STOP measurement.

Change the HP8145A as follows:

vertical offset	to:	7dB
vertical scale	to:	2.5dB
span	to:	1Km
measurement mode	to:	fast refresh

5. Press MEASUREMENT START. The displayed end-reflection signal shows that the receiver is in saturation. Therefore increase the attenuation of the HP8158B (HP 8157A) until the displayed end-reflection shows only one peak which should be approx. one minor division below saturation.
6. Using vertical offset move the peak (fresnel reflection of 4%) to the upper graticule line as reference (14 dB).
7. Check the dynamic range by pressing the open fiber connector slightly against a piece of adhesive tape supplied with the HP15475A Cleaning Kit. The end-reflection signal should decrease by at least 5 divisions. If the end-reflection is higher, clean the connectors again.
8. Connect the open fiber connector to the input of the HP8157A DUT, set CAL and ATT to 0.00 and enable the output.
9. Terminate the output cable of the HP8157A DUT by pressing the open connector slightly against the piece of adhesive tape and check that the end-reflection decreases below to the center horizontal graticule line. Note the reading in dB, multiply by 2 and add 14 dB. Note the result in the Performance Test Record.

NOTE: The HP8145A OTDR displays the measurement results only for one way in the fiber, therefore the displayed results must be multiplied by 2. The measurement results are referenced to 14dB fresnel reflection which must be added.

PERFORMANCE TEST RECORD FOR HP 8157A OPT.011 ManualsPlus.com

Hewlett-Packard Model 8157A

Test Performed By _____

Optical Attenuator

Date _____

Serial Number _____

Comments _____

TOTAL INSERTION LOSS TEST

Test Conditions; 1300nm with single-mode fibers
 1550nm with single-mode fibers
 with Diamond HMS-10/HP connectors

Description	Test Pass Fail
1300nm with single-mode fibers < 4.0dB	
Output via 8157A (min. ATT.)	
Total Insertion Loss = _____ dB	____ _
1550nm with single-mode fibers < 4.0dB	
Output via 8157A (min. ATT.)	
Total Insertion Loss = _____ dB	____ _

PERFORMANCE TEST RECORD FOR HP 8157A OPT.011

Hewlett-Packard Model 8157A

Test Performed By _____

Optical Attenuator

Date _____

Serial Number _____

Comments _____

ATTENUATION ACCURACY TEST

Test Condition: 1300nm with single-mode fibers
with Diamond HMS-10/HP connectors

Attenuation Setting	Power Meter Reading			Test Pass	Test Fail
	min.	act.	max.		
0 dB	0.00 dB Reference				
1 dB	0.8dB	_____ dB	1.2dB	_____	_____
2 dB	1.8dB	_____ dB	2.2dB	_____	_____
3 dB	2.8dB	_____ dB	3.2dB	_____	_____
4 dB	3.8dB	_____ dB	4.2dB	_____	_____
5 dB	4.8dB	_____ dB	5.2dB	_____	_____
6 dB	5.8dB	_____ dB	6.2dB	_____	_____
7 dB	6.8dB	_____ dB	7.2dB	_____	_____
8 dB	7.8dB	_____ dB	8.2dB	_____	_____
9 dB	8.8dB	_____ dB	9.2dB	_____	_____
10 dB	9.8dB	_____ dB	10.2dB	_____	_____
11 dB	10.8dB	_____ dB	11.2dB	_____	_____
12 dB	11.8dB	_____ dB	12.2dB	_____	_____
13 dB	12.8dB	_____ dB	1.2dB	_____	_____
24 dB	23.8dB	_____ dB	24.2dB	_____	_____
34 dB	33.8dB	_____ dB	34.2dB	_____	_____
44 dB	43.8dB	_____ dB	44.2dB	_____	_____
54 dB	53.8dB	_____ dB	54.2dB	_____	_____

PERFORMANCE TEST RECORD FOR HP 8157A OPT.011 ManualsPlus.com

Hewlett-Packard Model 8157A

Test Performed By _____

Optical Attenuator

Date _____

Serial Number _____

Comments _____

ATTENUATION ACCURACY TEST

Test Condition: 1550nm with single-mode fibers
with Diamond HMS-10/HP connectors

Attenuation Setting	Power Meter Reading			Test Pass	Test Fail
	min.	act.	max.		
0 dB	0.00 dB Reference				
1 dB	0.8dB	_____ dB	1.2dB	_____	_____
2 dB	1.8dB	_____ dB	2.2dB	_____	_____
3 dB	2.8dB	_____ dB	3.2dB	_____	_____
4 dB	3.8dB	_____ dB	4.2dB	_____	_____
5 dB	4.8dB	_____ dB	5.2dB	_____	_____
6 dB	5.8dB	_____ dB	6.2dB	_____	_____
7 dB	6.8dB	_____ dB	7.2dB	_____	_____
8 dB	7.8dB	_____ dB	8.2dB	_____	_____
9 dB	8.8dB	_____ dB	9.2dB	_____	_____
10 dB	9.8dB	_____ dB	10.2dB	_____	_____
11 dB	10.8dB	_____ dB	11.2dB	_____	_____
12 dB	11.8dB	_____ dB	12.2dB	_____	_____
13 dB	12.8dB	_____ dB	1.2dB	_____	_____
24 dB	23.8dB	_____ dB	24.2dB	_____	_____
34 dB	33.8dB	_____ dB	34.2dB	_____	_____
44 dB	43.8dB	_____ dB	44.2dB	_____	_____
54 dB	53.8dB	_____ dB	54.2dB	_____	_____

PERFORMANCE TEST RECORD FOR HP 8157A OPT.011

Hewlett-Packard Model 8157A	Test Performed By _____
Optical Attenuator	Date _____
Serial Number _____	Comments _____

ATTENUATOR REPEATABILITY TEST

Test Condition: 1300nm or 1550nm with single-mode fibers
with Diamond HMS-10/HP connectors

Attenuation Setting	Reading 1	Power Meter Reading 2	Reading 1-2	Spec.	Test Pass	Test Fail
5 dB	_____ dB	_____ dB	_____ dB	+/-0.04dB	_____	_____
12 dB	_____ dB	_____ dB	_____ dB	+/-0.04dB	_____	_____
24 dB	_____ dB	_____ dB	_____ dB	+/-0.04dB	_____	_____
36 dB	_____ dB	_____ dB	_____ dB	+/-0.04dB	_____	_____
48 dB	_____ dB	_____ dB	_____ dB	+/-0.04dB	_____	_____
53 dB	_____ dB	_____ dB	_____ dB	+/-0.04dB	_____	_____

PERFORMANCE TEST RECORD FOR HP 8157A OPT.011 ManualsPlus.com

Hewlett-Packard Model 8157A

Test Performed By _____

Optical Attenuator

Date _____

Serial Number _____

Comments _____

RETURN LOSS TEST

Test Condition: 1300nm or 1550nm with single-mode fibers
with Diamond HMS-10/HP connectors

Specification

>33 dB

Actual Return Loss Measured

_____ dB

Product Line Sales/Support Key

Key Product Line

A Analytical

CM Components

C Computer Systems

E Electronic Instruments & Measurement Systems

M Medical Products

P Personal Computation Products

* Sales only for specific product line

** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices

ASIA

Hewlett-Packard Asia Ltd
47/F, 26 Harbour Rd.,
Wanchai, HONG KONG
G P O Box 863, Hong Kong
Tel: 5-8330833
Telex: 76793 HPA HX
Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 069-8644

EASTERN EUROPE

Hewlett-Packard Ges m b h
Lieblgasse 1
P O Box 72
A-1222 VIENNA, Austria
Tel: (222) 2500-0
Telex: 13 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S A
V D Hooplaan 241
P O Box 999
NL-118 LN 15 AMSTELVEEN
The Netherlands
Tel: 20 5479999
Telex: 18919 hpner

SOUTH EAST EUROPE

Hewlett-Packard S A
World Trade Center
110 Avenue Louis-Casai
1215 Cointrin, GENEVA, Switzerland
Tel: (022) 98 96 51
Telex: 27225 hpser
Mail Address:
P O Box
CH-1217 Meyrin 1
GENEVA
Switzerland

MIDDLE EAST AND CENTRAL AFRICA

Hewlett-Packard S A
Middle East/Central
Africa Sales H Q
7 rue du Bois-du-Lan
P O Box 364
CH-1217 Meyrin 1
GENEVA
Switzerland
Tel: (022) 83 12 12
Telex: 27835 hmea ch
Telefax: (022) 83 15 35

UNITED KINGDOM

Hewlett-Packard Ltd
Nine Mile Ride
WOKINGHAM
Berkshire, RG113LL
Tel: 0344 773100
Telex: 848805/8488 14/848912

UNITED STATES OF AMERICA

Customer Information Center
(800) 752-0900
6:00 AM to 5 PM Pacific Time

EASTERN USA

Hewlett-Packard Co
4 Chokey Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370

MIDWESTERN USA

Hewlett-Packard Co
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co
5161 Lankershim Blvd
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPAC

ALGERIA

Hewlett-Packard Trading S A
Bureau de Liaison Alger
Villa des Lions
9 Hai Galloul
DZ-BORDJ EL BAHRI
Tel: 76 03 36
Telex: 63343 dlion dz

ANGOLA

Telectra Angola LDA
Empresa Técnica de Equipamentos
16 rue Cons Julio de Vilhema
LUANDA
Tel: 353 15,355 16
Telex: 3134
E, P

ARGENTINA

Hewlett-Packard Argentina S A
Montaneses 2140/50
1428 BUENOS AIRES
Tel: 541-11-1441
Telex: 22796 HEW PAC-AR
A, C, E, P
Biotron S A C I M e I
Av. Paso Colon 221, Piso 9
1399 BUENOS AIRES
Tel: 541-333-490,
541-322-587
Telex: 17595 BIONAR
M

Laboratorio Rodriguez

Corswant S R L

Misiones, 1156 - 1876

Bernal, Oeste

BUENOS AIRES

Tel: 252-3958, 252-4991
A

Intermaco S R L

Florida 537/71

Galeria Jardin - Local 28

1005 BUENOS AIRES

Tel: 393-4471/1928

Telex: 22796 HEW PAC-AR

P (Calculators)

Argentina Esanco S R L

A/ASCO 2328

1416 BUENOS AIRES

Tel: 541-58-1981, 541-59-2767

Telex: 22796 HEW PAC-AR

A

All Computers S A

Montaneses 2140/50 5 Piso

1428 BUENOS AIRES

Tel: 781-4030/4039/783-4886

Telex: 18148 Ocm e

P

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd
153 Greenhill Road
PARKSIDE, S A 5063
Tel: 61-8-272-5911
Telex: 82536
Cable: HEWPARD Adelaide
A*, C, CM, E, P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd
10 Payne Road
THE GAP, Queensland 4061
Tel: 61-7-300-4133
Telex: 42133
Cable: HEWPARD Brisbane
A, C, CM, E, M, P

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd
Thynne Street, Fern Hill Park
BRUCE, A C T 2617
P O Box 257,
JAMISON, A C T 2614
Tel: 61-62-80-4244
Telex: 62650
Cable: HEWPARD Canberra
C, CM, E, P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd
31-41 Joseph Street
P O Box 221
BLACKBURN, Victoria 3130
Tel: 61-3-895-2895
Telex: 31-024
Cable: HEWPARD Melbourne
A, C, CM, E, M, P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd
Herdsman Business Park
CLAREMONT, W A 6010
Tel: 61-9-383-2188
Telex: 93859
Cable: HEWPARD Perth
C, CM, E, P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd
17-23 Talavera Road
P O Box 308
NORTH RYDE, N S W 2113
Tel: 61-2-888-4444
Telex: 21561
Cable: HEWPARD Sydney
A, C, CM, E, M, P

AUSTRIA

Hewlett-Packard Ges m b h
Verkaufsbuero Graz
Grottenholstrasse 94
A-8052 GRAZ
Tel: 43-316-291-5660
Telex: 312375
C E

Hewlett-Packard Ges m b h

Lieblgasse 1

P O Box 72

A-1222 VIENNA

Tel: 43-222-2500

Telex: 134425 HEPA A

A, C, CM, E, M, P

BAHRAIN

Green Salon
P O Box 557
MANAMA
Tel: 255503-250950
Telex: 84419
P

Wael Pharmacy

P O Box 648

MANAMA

Tel: 256123

Telex: 8550 WAEI BN

E, M

Zayani Computer Systems

218 Shaik Mubarak Building

Government Avenue

P O Box 5918

MANAMA

Tel: 276278

Telex: 9015 plans bn

P

BELGIUM

Hewlett-Packard Belgium S A /N V

Bldv de la Woluwe, 100

Woluwedal

B-1200 BRUSSELS

Tel: (02) 32-2-761-31-11

Telex: 23494 hewpac

A, C, CM, E, M, P

BERMUDA

Applied Computer Technologies

Atlantic House Building

P O Box HM 2091

Par-La-Ville Road

HAMILTON 5

Tel: 295-1616

Telex: 380 3589/ACT BA

P

BOLIVIA

Arrellano Ltda

Av. 20 de Octubre #2125

Casilla 1383

LA PAZ

Tel: 368541

M

BRAZIL

Hewlett-Packard do Brasil S A

Alameda Rio Negro, 750-I AND

ALPHAVILLE

06400 Barueri SP

Tel: (011) 421 1311

Telex: (011) 71351 HPBR BR

Cable: HEWPAC Sao Paulo

CM E

Hewlett-Packard do Brasil S A

Praia de Botafogo 228-A-614

6 AND -CONJ 601

Edificio Argentina - Ala A

22250 RIO DE JANEIRO, RJ

Tel: (021) 552-6422

Telex: 21905 HPBR BR

Cable: HEWPAC Rio de Janeiro

E

Van Den Cientifica Ltda

Rua Jose Bonifacio, 458

Todos os Santos

20771 RIO DE JANEIRO, RJ

Tel: (021) 593-8223

Telex: 33487 EGLB BR

A

ANAMED I C E I Ltda

Rua Vergueiro, 360

04012 SAO PAULO, SP

Tel: (011) 572-1106

Telex: 24720 HPBR BR

M

Datatronix Electronica Ltda

Av Pacaembu 746-C11

SAO PAULO, SP

Tel: (118) 260111

CM

BRUNEI

Komputer Wisman Sdn Bhd
G6, Chandrawaseh Cmplx,
Jalan Tutong
P O Box 1297,

BANDAR SERI BEGAWAN

NEGARA BRUNI DARUSSALAM
Tel: 673-2-2000-70/26711
C,E,P

CAMEROON

Beriac
B P 23
DOUALA
Tel: 420153
Telex: 5351
C,P

**CANADA
Alberta**

Hewlett-Packard (Canada) Ltd
3030 3rd Avenue N E

CALGARY, Alberta T2A 6T7

Tel: (403) 235-3100

A,C,CM,E*,M,P*

Hewlett-Packard (Canada) Ltd
11120-178th Street

EDMONTON, Alberta T5S 1P2

Tel: (403) 486-6666

A,C,CM,E,M,P

British Columbia

Hewlett-Packard (Canada) Ltd
10691 Shellbridge Way

RICHMOND,

British Columbia V6X 2W8

Tel: (604) 270-2277

Telex: 610-922-5059

A,C,CM,E*,M,P*

Hewlett-Packard (Canada) Ltd
121 - 3350 Douglas Street

VICTORIA, British Columbia V8Z 3L1

Tel: (604) 381-6616

C

Manitoba

Hewlett-Packard (Canada) Ltd
1825 Inkster Blvd

WINNIPEG, Manitoba R2X 1R3

Tel: (204) 694-2777

A,C,CM,E,M,P*

New Brunswick

Hewlett-Packard (Canada) Ltd
814 Main Street

MONCTON, New Brunswick E1C 1E6

Tel: (506) 855-2841

C

Nova Scotia

Hewlett-Packard (Canada) Ltd
Suite 111
900 Windmill Road

DARTMOUTH, Nova Scotia B3B 1P7

Tel: (902) 469-7820

C,CM,E*,M,P*

Ontario

Hewlett-Packard (Canada) Ltd
3325 N. Service Rd., Unit W03

BURLINGTON, Ontario L7N 3G2

Tel: (416) 335-8644

C,M*

Hewlett-Packard (Canada) Ltd.
552 Newbold Street

LONDON, Ontario N6E 2S5

Tel: (519) 686-9181

A,C,CM,E*,M,P*

Hewlett-Packard (Canada) Ltd.

6877 Goreway Drive

MISSISSAUGA, Ontario L4V 1M8

Tel: (416) 678-9430

Telex: 069-83644

A,C,CM,E,M,P

Hewlett-Packard (Canada) Ltd.

2670 Queensview Dr

OTTAWA, Ontario K2B 8K1

Tel: (613) 820-6483

A,C,CM,E*,M,P*

Hewlett-Packard (Canada) Ltd.

3790 Victoria Park Ave.

WILLOWDALE, Ontario M2H 3H7

Tel: (416) 499-2550

C,E

Quebec

Hewlett-Packard (Canada) Ltd.

17500 Trans Canada Highway

South Service Road

KIRKLAND, Quebec H9J 2X8

Tel: (514) 697-4232

Telex: 058-21521

A,C,CM,E,M,P*

Hewlett-Packard (Canada) Ltd.

1150 rue Claire Fontaine

QUEBEC CITY, Quebec G1R 5G4

Tel: (418) 648-0726

C

Hewlett-Packard (Canada) Ltd

130 Robin Crescent

SASKATOON, Saskatchewan S7L 6M7

Tel: (306) 242-3702

C

CHILE

ASC Ltda.

Austria 2041

SANTIAGO

Tel: 223-5946, 223-6148

Telex: 392-340192 ASC CK

C,P

Jorge Calcagni y Cia

Av. Italia 634 Santiago

Casilla 16475

SANTIAGO 9

Tel: 9-011-562-222-0222

Telex: 392440283 JCYCL CZ

CM,E,M

Metrolab S A

Monjitas 454 of 206

SANTIAGO

Tel: 395752, 398296

Telex: 340866 METLAB CK

A

Olympia (Chile) Ltda

Av. Rodrigo de Araya 1045

Casilla 256-V

SANTIAGO 21

Tel: 225-5044

Telex: 340892 OLYMP

Cable: Olympiachile Santiagochile

C,P

**CHINA, People's
Republic of**

China Hewlett-Packard Co., Ltd

47/F China Resources Bldg

26 Harbour Road

HONG KONG

Tel: 5-8330833

Telex: 76793 HPA HX

Cable: HP ASIA LTD

A*,M*

China Hewlett-Packard Co., Ltd

P O Box 9610, Beijing

4th Floor, 2nd Watch Factory Main

Shuang Yu Shou, Bei San Huan Road

Hai Dian District

BEIJING

Tel: 33-1947 33-7426

Telex: 22601 CTSHP CN

Cable: 1920 Beijing

A,C,CM,E,M,P

China Hewlett-Packard Co., Ltd

CHP Shanghai Branch

23/F Shanghai Union Building

100 Yan An Rd. East

SHANG-HAI

Tel: 265550

Telex: 33571 CHPSB CN

Cable: 3416 Shanghai

A,C,CM,E,M,P

COLOMBIA

Instrumentación

H A. Langebaek & Kier S A

Carrera 4A No 52A-26

Apartado Aereo 6287

BOGOTA 1, D E

Tel: 212-1466

Telex: 44400 INST CO

Cable: AARIS Bogota

CM,E,M

Nefromedicas Ltda

Calle 123 No. 9B-31

Apartado Aereo 100-958

BOGOTA D E, 10

Tel: 213-5267, 213-1615

Telex: 43415 HEGAS CO

A

Compumundo

Avenida 15 # 107-80

BOGOTA D E

Tel: 57-214-4458

Telex: 39645466 MARCO

P

Carvajal, S A

Calle 29 Norte No. 6A-40

Apartado Aereo 46

CALI

Tel: 9-011-57-3-621888

Telex: 39655650 CUJCL CO

C,E,P

CONGO

Seric-Congo

B P 2105

BRAZZAVILLE

Tel: 815034

Telex: 5262

COSTA RICA

Cientifica Costarricense S A

Avenida 2, Calle 5

San Pedro de Montes de Oca

Apartado 10159

SAN JOSE

Tel: 9-011-506-243-820

Telex: 3032367 GALGUR CR

CM,E,M

O Fischel R Y Cia S A

Apartados 434-10174

SAN JOSE

Tel: 23-72-44

Telex: 2379

Cable: OFIR

A

CYPRUS

Telerexa Ltd.

P O Box 1152

Valentine House

8 Stassandrou St.

NICOSIA

Tel: 45 628, 62 698

Telex: 5845 tlrx cy

E,M,P

DENMARK

Hewlett-Packard A/S

Kongevejen 25

DK-3460 BIRKEROD

Tel: 45-02-81-6640

Telex: 37409 hpas dk

A,C,CM,E,M,P

Hewlett-Packard A/S

Rolighedsvej 32

DK-8240 RISSKOV, Aarhus

Tel: 45-06-17-6000

Telex: 37409 hpas dk

C,E

DOMINICAN REPUBLIC

Microprog S A

Juan Tomás Mejía y Cotes No. 60

Arroyo Hondo

SANTO DOMINGO

Tel: 565-6268

Telex: 4510 ARENTA DR (RCA)

P

ECUADOR

CYEDE Cia. Ltda

Avenida Eloy Alfaro 1749

y Belgica

Casilla 6423 CCI

QUITO

Tel: 9-011-593-2-450975

Telex: 39322548 CYEDE ED

E,P

Medtronics

Valladolid 524 Madrid

P O 9171, QUITO

Tel: 2-238-951

Telex: 2298 ECUAME ED

A

Hospitalar S A

Robles 625

Casilla 3590

QUITO

Tel: 545-250, 545-122

Telex: 2485 HOSPTL ED

Cable: HOSPITALAR-Quito

M

Ecuador Overseas Agencies C A

Calle 9 de Octubre #818

P O Box 1296, Guayaquil

QUITO

Tel: 306022

Telex: 3361 PBCGYE ED

M

EGYPT

Sakrcro Enterprises

P O Box 259

ALEXANDRIA

Tel: 802908, 808020, 805302

Telex: 543333

C

International Engineering Associates

6 El Gamea Street

Agouza

CAIRO

Tel: 71-21-68134-80-940

Telex: 93830 IEA UN

Cable: INTEGASSO

E

Sakrcro Enterprises

70 Mossadak Street

Dokki, Giza

CAIRO

FRANCE (Cont'd)

Hewlett-Packard France
28 Rue de la République
Boite Postale 503
25026 BESANCON CEDEX, FRANCE
Tel: (81) 83-16-22
Telex: 361157
C,E*

Hewlett-Packard France
ZA Kergaradec
Rue Fernand Forest
F-29239 GOUESNOU
Tel: (98) 41-87-90
E

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
69131 ECULLY Cedex (Lyon)
Tel: 33-78-33-8125
Telex: 310617F
A,C,E,M,P*

Hewlett-Packard France
Parc d'activités du Bois Briard
2 Avenue du Lac
F-91040 EVRY Cedex
Tel: 33 11/6077 9660
Telex: 692315F
C

Hewlett-Packard France
Application Center
5, avenue Raymond Chanas
38320 EYBENS (Grenoble)
Tel: (76) 62-57-98
Telex: 980124 HP GRENOB EYBE
C

Hewlett-Packard France
Rue Fernand Forest
Z A Kergaradec
29239 GOUESNOU
Tel: (98) 41-87-90

Hewlett-Packard France
Parc Club des Tanneries
Batiment B4
4, Rue de la Faisanderie
67381 LINCOLSHEIM
(Strasbourg)
Tel: (88) 76-15-00
Telex: 890141F
C,E*,M*,P*

Hewlett-Packard France
Centre d'affaires Paris-Nord
Bâtiment Ampère
Rue de la Commune de Paris
Boite Postale 300
93153 LE BLANC-MESNIL
Tel: (1) 865-44-52
Telex: 211032F
C,E,M

Hewlett-Packard France
Parc d'activités Cadéra
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
33700 MÉRIGNAC (Bordeaux)
Tel: 33-56-34-0084
Telex: 550105F
C,E,M

Hewlett-Packard France
3, Rue Graham Bell
BP 5149
57074 METZ Cedex
Tel: (87) 36-13-31
Telex: 860802F
C,E

Hewlett-Packard France
Miniparc-ZIRST
Chemin du Vieux Chêne
38240 MEYLAN (Grenoble)
Tel: (76) 90-38-40
980124 HP Grenoble
C

Hewlett-Packard France
Bureau vert du Bois Briard
Cheman de la Garde
- CP 212 212
44085 NANTES Cedex
Tel: (40) 50-32-22
Telex: 711085F
A,C,E,CM*,P

Hewlett-Packard France
125 Rue du Faubourg Bannier
45000 ORLÉANS
Tel: 33-38-62-2031
E,P*

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
91947 LES ULIS Cedex (Orsay)
Tel: 33-6-907 7825
Telex: 600048F
A,C,CM,E,M,P**

Hewlett-Packard France
15, Avenue de L'Amiral-Bruix
75782 PARIS Cedex 16
Tel: 33-15-02-1220
Telex: 613663F
C,P*

Hewlett-Packard France
242 Ter. Ave J Mermoz
64000 PAU
Tel: 33-59-80-3802
Telex: 550365F
C,E*

Hewlett-Packard France
6, Place Sainte Croix
86000 POITIERS
Tel: 33-49-41-2707
Telex: 792335F
C,E*

Hewlett-Packard France
47, Rue de Chativesle
51100 REIMS
Tel: 33-26-88-6919
C,P*

Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautel-Boimel
35000 RENNES
Tel: 33-99-51-4244
Telex: 740912F
A*,C,E,M,P*

Hewlett-Packard France
98 Avenue de Bretagne
76100 ROUEN
Tel: 33-35-63-5766
Telex: 770035F
C,E

Hewlett-Packard France
4, Rue Thomas-Mann
Boite Postale 56
67033 STRASBOURG Cedex
Tel: (88) 28-56-46
Telex: 890141F
C,E,M,P*

Hewlett-Packard France
Le Péripole III
3, Chemin du Pigeonnier de la Cèpière
31081 TOULOUSE Cedex
Tel: 33-61-40-1112
Telex: 531639F
A,C,E,M,P*

Hewlett-Packard France
Les Cardoulines
Batiment B2
Route des Dolines
Parc d'activité de Valbonne
Sophia Antipolis
06560 VALBONNE (Nice)
Tel: (93) 65-39-40
C

Hewlett-Packard France
9, Rue Baudin
26000 VALENCE
Tel: 33-75-42-7616
C**

Hewlett-Packard France
Carolor
ZAC de Bois Briard
57640 VIGY (Metz)
Tel: (8) 77 1 20 22
C

Hewlett-Packard France
Parc d'activité des Prés
1, Rue Papin Cedex
59658 VILLENEUVE D'ASCO
Tel: 33-20-91-4125
Telex: 160124F
C,E,M,P

Hewlett-Packard France
Parc d'activités Paris-Nord 11
Boite Postale 60020
95971 Roissy Charles de Gaulle
VILLEPINTE
Tel: (1) 48 63 80 80
Telex: 211032F
C,E,M,P*

GABON

Sho Gabon
P O Box 89
LIBREVILLE
Tel: 721 484
Telex: 5230

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrum Mitte
Hewlett-Packard-Strasse
D-6380 BAD HOMBURG
Tel: (06172) 400-0
Telex: 410 844 hpbhg
A,C,E,M,P
Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbln d
A,C,E,M,P

Hewlett-Packard GmbH
Verbindungsstelle Bonn
Friedrich-Ebert-Allee 26
5300 BONN
Tel: (0228) 234001
Telex: 8869421

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BÖBLINGEN
Postfach 1427
Tel: (07031) 645-0
Telex: 7265 743 hep
A,C,CM,E,M,P

Hewlett-Packard GmbH
Zentralbereich Mktg
Herrenberger Strasse 130
D-7030 BÖBLINGEN
Tel: (07031) 14-0
Telex: 7265739 hep

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr 28a
D-4600 DORTMUND-41
Tel: (0231) 45001
Telex: 822858 hepdod
A,C,E

Hewlett-Packard GmbH
Reparaturzentrum Frankfurt
Bernner Strasse 117
6000 FRANKFURT/MAIN 60
Tel: (069) 500001-0
Telex: 413249 hpffm

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kapstadtring 5
D-2000 HAMBURG 60
Tel: 49-40-63-804-0
Telex: 021 63 032 hphh d
A,C*,CM,E

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259 hphan
A,C,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
D-6800 MANNHEIM
Tel: 49-0621-70-05-0
Telex: 0462105 hpmhm
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 49-0731-70-73-0
Telex: 0712816 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Emmericher Strasse 13
D-8500 NURNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg
C,CM,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Ratingen
Berliner Strasse 111
D-4030 RATINGEN 4
Postfach 31 12
Tel: (02102) 494-0
Telex: 589 070 hprad
A,C,E,M,P

Hewlett-Packard GmbH
Vertriebszentrum Muchen
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: 49-89-61-2070
Telex: 0524985 hpm h
A,C,CM,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Ermlisallee
7517 WALDBRONN 2
Postfach 1251
Tel: (07243) 602-0
Telex: 782 838 hepkl
A,C,E

**GREAT BRITAIN
See United Kingdom****GREECE**

Hewlett-Packard A E
178, Kifissias Avenue
6th Floor
Halandri-ATHENS
Greece
Tel: 301116473 360, 301116726 090
Telex: 221 286 HPHLGR
A,C,CM*,E,M,P

Kostas Karayannis S A
8, Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,C*,CM,E

Impexin
Intellect Div
209 Mesogion
11525 ATHENS
Tel: 6474481/2
Telex: 216286
P

Haril Company
38, Mihalakopoulou
ATHENS 612
Tel: 7236071
Telex: 218767
M*
Hellamco
P O Box 87528
18507 PIRAEUS
Tel: 4827049
Telex: 241441
A

GUATEMALA

IPESA DE GUATEMALA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 317853, 66471/5
9-011-502-2-316627
Telex: 3055765 IPESA GU
A,C,CM,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd
G P O Box 795

5th Floor, Sun Hung Kai Centre
30 Harbour Road, Wan Chai

HONG KONG

Tel: 852-5-832-3211

Telex: 66678 HEWPA HX

Cable: HEWPACK HONG KONG
E,C,P

CET Ltd.

10th Floor, Hua Asia Bldg

64-66 Gloucester Road

HONG KONG

Tel: (5) 200922

Telex: 85148 CET HX

CM

Schmidt & Co (Hong Kong) Ltd

18th Floor, Great Eagle Centre

23 Harbour Road, Wanchai

HONG KONG

Tel: 5-8330222

Telex: 74766 SCHMC HX

A,M

ICELAND

Hewlett-Packard Iceland

Hoefdabakka 9

112 REYKJAVIK

Tel: 354-1-67-1000

Telex: 37409

A,C,CM,E,M,P

INDIA

Computer products are sold through
Blue Star Ltd All computer repairs
and maintenance service is done
through Computer Maintenance Corp

Blue Star Ltd

B D Patel House

Near Sardar Patel Colony

AHMEDABAD 380 014

Tel: 403531, 403532

Telex: 0121-234

Cable: BLUE FROST

A,C,CM,E

Blue Star Ltd

40/4 Lavelle Road

BANGALORE 560 001

Tel: 57881, 867780

Telex: 0845-430 BSLBIN

Cable: BLUESTAR

A,C*,CM,E

Blue Star Ltd

Band Box House

Prabhadevi

BOMBAY 400 025

Tel: 4933101, 4933222

Telex: 011-71051

Cable: BLUESTAR

A,M

Blue Star Ltd

Sahas

414/2 Vir Savarkar Marg

Prabhadevi

BOMBAY 400 025

Tel: 422-6155

Telex: 011-71193 BSSS IN

Cable: FROSTBLUE

A,CM,E,M

Blue Star Ltd

Kalyan, 19 Vishwas Colony

A.kapuri, BORDA, 390 005

Tel: 65235, 65236

Cable: BLUE STAR

A

Blue Star Ltd

7 Hare Street

P O Box 506

CALCUTTA 700 001

Tel: 230131, 230132

Telex: 031-61120 BSNF IN

Cable: BLUESTAR

A,M,C,E

Blue Star Ltd

133 Kodambakkam High Road

MADRAS 600 034

Tel: 472056, 470238

Telex: 041-379

Cable: BLUESTAR

A,M

Blue Star Ltd

13 Community Center

New Friends Colony

NEW DELHI 110 065

Tel: 682547

Telex: 031-2463

Cable: BLUEFROST

A,C*,CM,E,M

Blue Star Ltd

15/16 C Wellesley Rd.

PUNE 411 011

Tel: 22775

Cable: BLUE STAR

A

Blue Star Ltd

2-2-47/1108 Bolarum Rd

SECUNDERABAD 500 003

Tel: 72057, 72058

Telex: 0155-459

Cable: BLUEFROST

A,C,E

Blue Star Ltd.

T C 7/603 Poornima

Maruthunkuzhi

TRIVANDRUM 695 013

Tel: 65799, 65820

Telex: 0884-259

Cable: BLUESTAR

E

Computer Maintenance Corporation

Ltd

115, Sarojini Devi Road

SECUNDERABAD 500 003

Tel: 310-184, 345-774

Telex: 031-2960

C**

INDONESIA

BERCA Indonesia P.T.

P O Box 496/Jkt.

Jl Abdul Muis 62

JAKARTA

Tel: 21-373009

Telex: 46748 BERSAL IA

Cable: BERSAL JAKARTA

P

BERCA Indonesia P T

P O Box 24977/Jkt

Antara Bldg, 12th Floor

Jl Medan Merdeka Selatan 17

JAKARTA-PUSAT

Tel: 21-340417

Telex: 46748 BERSAL IA

A,C,E,M,P

BERCA Indonesia P T

Jalan Kutai 24

SURABAYA

Tel: 67118

Telex: 31146 BERSAL SB

Cable: BERSAL-SURABAYA

A*,E,M,P

IRAQ

Hewlett-Packard Trading S A
Service Operation

Al Mansoor City 9B/3/7

BAGHDAD

Tel: 551-49-73

Telex: 212-455 HEPAIRAQ IK

C

IRELAND

Hewlett-Packard Ireland Ltd

Temple House, Temple Road

Blackrock, Co. DUBLIN

Tel: 88/333/99

Telex: 30439

C,E,P

Hewlett-Packard Ltd

75 Belfast Rd, Carrickfergus

Belfast BT38 8PH

NORTHERN IRELAND

Tel: 09603-67333

Telex: 747626

M

ISRAEL

Eldan Electronic Instrument Ltd

P O Box 1270

JERUSALEM 91000

16, Ohaliav St.

JERUSALEM 94467

Tel: 533 221, 553 242

Telex: 25231 AB/PAKRD IL

A,M

Computation and Measurement

Systems (CMS) Ltd

11 Masad Street

67060

TEL-AVIV

Tel: 388 388

Telex: 33569 Motil IL

C,CM,E,P

ITALY

Hewlett-Packard Italiana S p A

Traversa 99C

Via Giulio Petroni, 19

I-70124 BARI

Tel: (080) 41-07-44

C,M

Hewlett-Packard Italiana S p A

Via Emilia, 51/C

I-40011 BOLOGNA Anzola Dell'Emilia

Tel: 39-051-731061

Telex: 511630

C,E,M

Hewlett-Packard Italiana S p A

Via Principe Nicola 43G/C

I-95126 CATANIA

Tel: (095) 37-10-87

Telex: 970291

C

Hewlett-Packard Italiana S p A

Via G di Vittorio 10

20094 CORSICO (Milano)

Tel: 39-02-4408351

Hewlett-Packard Italiana S p A

Viale Brigata Bisagno 2

16129 GENOVA

Tel: 39-10-541141

Telex: 215238

Hewlett-Packard Italiana S p A

Viale G Modugno 33

I-16156 GENOVA PEGLI

Tel: (010) 68-37-07

Telex: 215238

C,E

Hewlett-Packard Italiana S p A

Via G di Vittorio 9

I-20063 CERNUSCO SUL

NAVIGLIO

(Milano)

Tel: (02) 923691

Telex: 334632

A,C,CM,E,M,P

Hewlett-Packard Italiana S p A

Via Nuova Rivoltana 95

20090 LIMITO (Milano)

Tel: 02-92761

Hewlett-Packard Italiana S p A

Via Nuova San Rocco a

Capodimonte, 62/A

I-80131 NAPOLI

Tel: (081) 7413544

Telex: 710698

A*,C,E,M

Hewlett-Packard Italiana S.p.A.

Via Orazio 16

80122 NAPOLI

Tel: (081) 7611444

Telex: 710698

Hewlett-Packard Italiana S p A

Via Pellizzo 15

35128 PADOVA

Tel: 39-49-664-888

Telex: 430315

A,C,E,M

Hewlett-Packard Italiana S p A

Viale C Pavese 340

I-00144 ROMA EUR

Tel: 39-65-48-31

Telex: 610514

A,C,E,M,P*

Hewlett-Packard Italiana S p A

Via di Casellina 57/C

500518 SCANDICCI-FIRENZE

Tel: 39-55-753863

C,E,M

Hewlett-Packard Italiana S p A

Corso Svizzera, 185

I-10144 TORINO

Tel: 39-11-74-4044

Telex: 221079

A*,C,E

IVORY COAST

S I T E L

Societe Ivoirienne de

Telecommunications

Bd Giscard d'Estaing

Carrefour Marcory

Zone 4 A

Boite postale 2580

ABIDJAN 01

Tel: 353600

Telex: 43175

E

S I T I

Immeuble "Le General"

JAPAN (Cont'd)

Yokogawa-Hewlett-Packard Ltd
Chuo Bldg, 5-4-20 Nishi-Nakajima
4-20 Nishinakajima, 5 Chome,
Yodogawa-ku

OSAKA, 532
Tel: (06) 304-6021

Telex: YHPOSA 523-3624
C,CM,E,M,P*

Yokogawa-Hewlett-Packard Ltd
1-27-15, Yabe

SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd
Hamamtsu Motoshiro-Cho Daichi
Seimei Bldg 219-21, Motoshiro-Cho
Hamamatsu-shi

SHIZUOKA, 430
Tel: (0534) 56 1771

C,E

Yokogawa-Hewlett-Packard Ltd
Shinjuku Daiichi Seimei Bldg
2-7-1, Nishi Shinjuku
Shinjuku-ku **TOKYO 163**

Tel: 03-348-4611
C,E,M

Yokogawa Hewlett-Packard Ltd
9-1, Takakura-cho
Hachioji-shi, **TOKYO, 192**
Tel: 81-426-42-1231
C,E

Yokogawa-Hewlett-Packard Ltd
3-29-21 Takaido-Higashi, 3 Chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
C,CM,E,P*

Yokogawa Hokushin Electric
Corporation
Shinjuku-NS Bldg 10F
4-1 Nishi-Shinjuku 2-Chome
Shinjuku-ku

TOKYO, 163
Tel: (03) 349-1859

Telex: J27584
A

Yokogawa Hokushin Electric Corp
9-32 Nokacho 2 Chome
Musashino-shi

TOKYO, 180
Tel: (0422) 54-1111

Telex: 02822-421 YEW MTK J
A

Yokogawa-Hewlett-Packard Ltd
Meiji-Seimei
Utsunomiya Odori Building
1-5 Odori, 2 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 33-1153
C,E

Yokogawa-Hewlett-Packard Ltd
Yasuda Seimei Nishiguchi Bldg
30-4 Tsuruya-cho, 3 Chome
Kanagawa-ku, **YOKOHAMA 221**
Tel: (045) 312-1252
C,CM,E

JORDAN

Scientific and Medical Supplies Co
P O Box 1387

AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
C,E,M,P

KENYA

ADCOM Ltd, Inc., Kenya
P O Box 30070

NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Hewlett-Packard Co Ltd
Dongbang Yeooido Building
12-16th Floors

36-1 Yeooido-Dong
Youngdeungpo-Ku

SEOUL
Tel: 784-4666, 784-2666
Telex: 25166 SAMSAN K
C,CM,E,M,P

Young In Scientific Co., Ltd
Youngwha Building
547 Shinsa Dong, Kangnam-Ku

SEOUL 135
Tel: 546-7771
Telex: K23457 GINSCO
A

Dongbang Healthcare
Products Co Ltd
Suite 301 Medical Supply Center
Bldg 1-31 Dongsungdong
Jong Ro-gu **SEOUL**
Tel: 764-1171, 741-1641
Telex: K25706 TKBKO
Cable: TKBEEPKO
M

KUWAIT

Al-Khaldiya Trading & Contracting
P O Box 830

SAFAT
Tel: 424910, 411726
Telex: 22481 AREEG KT
Cable: VISCOUNT
E,M,A

Gulf Computing Systems
P O Box 25125

SAFAT
Tel: 435969
Telex: 23648
P

Photo & Cine Equipment
P O Box 270

SAFAT
Tel: 2445111
Telex: 22247 MATIN KT
Cable: MATIN KUWAIT
P

W J Towell Computer Services
P O Box 5897

SAFAT
Tel: 2462640/1
Telex: 30336 TOWELL KT
C

LEBANON

Computer Information Systems S A L
Charmas Building
P O Box 11-6274 Dora

BEIRUT
Tel: 89 40 73
Telex: 42309 chasis le
C,E,M,P

LIBERIA

Unichemicals Inc
P O Box 4509

MONROVIA
Tel: 224282
Telex: 4509
E

LUXEMBOURG

Hewlett-Packard Belgium S A /N V
Blvd de la Woluwe, 100

Woluwedal
B-1200 **BRUSSELS**
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,C,CM,E,M,P

MADAGASCAR

Technique et Precision
12, rue de Nice
P O Box 1227

101 **ANTANANARIVO**
Tel: 22090
Telex: 22255
P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn Bhd

9th Floor
Chung Khaiw Bank Building
46, Jalan Raja Laut
50736 **KUALA LUMPUR, MALAYSIA**
Tel: 03-2986555
Telex: 31011 HPSM MA
A,C,E,M,P*

Protel Engineering
P O Box 1917

Lot 6624, Section 64
23/4 Pending Road
Kuching, **SARAWAK**
Tel: 36299
Telex: 70904 PROMAL MA
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd
Kirkirkara P O Box 11
Notabile Rd

MRIEHEL
Tel: 447 47, 455 66, 4915 25
Telex: Media MW 649
E,M,P

MAURITIUS

Blanche Birger Co Ltd
18, Jules Koenig Street
PORT LOUIS

Tel: 20828
Telex: 4296
P

MEXICO

Hewlett-Packard de Mexico,
S A de C V
Rio Nio No 4049 Desp 12
Fracc Cordoba

JUAREZ
Tel: 161-3-15-62
P

Hewlett-Packard de Mexico,
S A de C V
Condominio Kadereyta
Circuito del Mezon No 186 Desp 6
COL DEL PRADO - 76030 Qro
Tel: 463-6-02-71
P

Hewlett-Packard de Mexico,
S A de C V
Monti Morelos No 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco

Tel: 36-31-48-00
Telex: 0684 186 ECOME
P

Microcomputadoras
Hewlett-Packard, S A
Monti Pelvoux 115
LOS LOMAS, Mexico, D F
Tel: 520-9127
P

Microcomputadoras Hewlett-Packard,
S A de C V
Monte Pelvoux No 115
Lomas de Chapultepec, 11000
MEXICO, D.F.
Tel: 520-9127
P

Hewlett-Packard de Mexico,
S A de C V
Monte Pelvoux No 111
Lomas de Chapultepec
11000 **MEXICO, D.F.**

Tel: 5-40-62-28 72-66, 50-25
Telex: 17-74-507 HEWPACK MEX
A,C,CM,E,M,P

Hewlett-Packard De Mexico (Polanco)
Avenida Ejercito Nacional #579
2da y 3ra piso
Colonia Granada 11560
MEXICO D.F.

Tel: 254-4433
P

Hewlett-Packard de Mexico,
S A de C V

Czda del Valle
409 Ote 4th Piso
Colonia del Valle
Municipio de Garza
Garcia Nuevo Leon
66220 **MONTERREY, Nuevo Leon**

Tel: 83-78-42-40
Telex: 382410 HPMY
C

Infograficas y Sistemas
del Noreste, S A
Rio Orinoco #171 Oriente
Despacho 2001

Colonia Del Valle
MONTERREY
Tel: 559-4415 575-3837
Telex: 483164

A,E

Hewlett-Packard de Mexico,
S A de C V
Blvd Independencia No 2000 Ote
Col Estrella
TORREON, COAH
Tel: 171-18-21-99
P

MOROCCO

Etablissement Hubert Dolbeau & Fils
81 rue Karatchi
B P 11133

CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E

Gerep
2, rue Agadir
Boite Postale 156
CASABLANCA 01
Tel: 272093, 272095
Telex: 23 739
P

Sema-Maroc
Dept Seric
6, rue Lapebie
CASABLANCA
Tel: 260980
Telex: 21641
C,P

NETHERLANDS

Hewlett-Packard Nederland B V
Startbaan 16
NL-1187 XR **AMSTELVEEN**
P O Box 667

NL-1180 AR **AMSTELVEEN**
Tel: (020) 547-6911
Telex: 13 216 HEPA NL
A,C,CM,E,M,P

Hewlett-Packard Nederland B V
Bongerd 2
P O Box 41
NL 2900AA **CAPELLE A/D IJSSEL**
Tel: 31-20-51-6444
Telex: 21261 HEPAC NL
C,E

Hewlett-Packard Nederland B V
Pastoor Petersstraat 134-136
P O Box 2342
NL 5600 CH **EINDHOVEN**
Tel: 31-40-32-6911
Telex: 51484 hepae nl
C,E,P

NEW ZEALAND

Hewlett-Packard (N Z) Ltd
5 Owens Road
P O Box 26-189

Epsom, **AUCKLAND**
Tel: 64-9-687-159
Cable: HEWPAK Auckland
C,CM,E,P*

Hewlett-Packard (N Z) Ltd
184-190 Willis Street

WELLINGTON
P O Box 9443
Courtenay Place, **WELLINGTON 3**
Tel: 64-4-887-199
Cable: HEWPAK Wellington
C,CM,E,P

Northrop Instruments & Systems Ltd
369 Khyber Pass Road
P O Box 8602

AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems Ltd
110 Mandeville St.
P O Box 8388
CHRISTCHURCH
Tel: 488-873
Telex: 4203
A,M

Northrop Instruments & Systems Ltd
Sturdee House
85-87 Ghuznee Street
P O Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NIGERIA

Elmeco Nigeria Ltd
45 Saka Tirubu St
Victoria Island
LAGOS
Tel: 61-98-94
Telex: 20-117
E

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P O Box 3558
N-5033 FYLLINGSDALEN (Bergen)
Tel: 0047/5/16 55 40
Telex: 76621 hpnas n
C,E,M

Hewlett-Packard Norge A/S
Osterdalen 16-18
P O Box 34
N-1345 OEËSTERAAS
Tel: 47-2-17-1180
Telex: 76621 hpnas n
A,C,CM,E,M,P

Hewlett-Packard Norge A/S
Boehmergt 42
Box 2470
N-5037 SOLHEIMSVIK
Tel: 0047/5/29 00 90

OMAN

Khimji Ramdas
P O Box 19
MUSCAT/SULTANATE OF OMAN
Tel: 795 901
Telex: 3489 BROKER MB MUSCAT
P

Suhail & Saud Bahwan

P O Box 169
MUSCAT/SULTANATE OF OMAN
Tel: 734 201-3
Telex: 5274 BAHWAN MB
E

Imlac LLC
P O Box 9196
MINA AL FAHAL/SULTANATE OF OMAN
Tel: 70-77-27, 70-77-23
Telex: 3865 Tawoos On
A,C,M

PAKISTAN

Mushko & Company Ltd
Hcuse No 16, Street No 16
Sector F-6/3
ISLAMABAD
Tel: 824545
Telex: 54001 Muski Pk
Cable: FEMUS Islamabad
A,E,P*

Mushko & Company Ltd
Osman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,P*

PANAMA

Electronico Balboa, S A
Calle Samuel Lewis, Ed Alfa
Apartado 4929
PANAMA CITY
Tel: 9-011-507-636613
Telex: 368 3483 ELECTRON PG
CM,E,M,P

PERU

Cia Electro Médica S A
Los Flamencos 145, Ofc 301/2
San Isidro
Casilla 1030
LIMA 1
Tel: 9-011-511-4-414325, 41-3705
Telex: 39425257 PE PB SIS
CM,E,M,P
SAMS S A
Arenida Republica de Panama 3534
San Isidro. **LIMA**
Tel: 9-011-511-4-229332/413984/
413226
Telex: 39420450 PE LIBERTAD
A,C,P

PHILIPPINES

The Online Advanced Systems Corp
2nd Floor, Electra House
115-117 Esteban Street
P O Box 1510
Legaspi Village, Makati
Metro **MANILA**
Tel: 815-38-10 (up to 16)
Telex: 63274 ONLINE PN
A,C,E,M,P

PORTUGAL

Mundinter Intercambio
Mundial de Comércio S A R L
Av Antonio Augusto Aguiar 138
Apartado 2761
LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M

Soquimica
Av da Liberdade, 220-2
1298 **LISBOA** Codex
Tel: 56-21-82
Telex: 13316 SABASA
A
Telectra-Empresa Técnica de
Equipamentos Eléctricos S A R L
Rua Rodrigo da Fonseca 103
P O Box 2531
LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CM,E

C P C S I
Rua de Costa Cabral 575
4200 **PORTO**
Tel: 499174/495173
Telex: 26054
C,P

PUERTO RICO

Hewlett-Packard Puerto Rico
101 Muñoz Rivera Av
Esu Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800
A,C,CM,E,P

QATAR

Computer Arabia
P O Box 2750
DOHA
Tel: 428555
Telex: 4806 CHPARB
P
Nasser Trading & Contracting
P O Box 1563
DOHA
Tel: 422170
Telex: 4439 NASSER DH
M

SAUDI ARABIA

Modern Electronics Establishment
Hewlett-Packard Division
P O Box 281
Thuobah
AL-KHOBAR 31952
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
C,E,M

Modern Electronics Establishment
Hewlett-Packard Division
P O Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
A,C,CM,E,M,P

Modern Electronics Establishment
Hewlett-Packard Division
P O Box 22015
RIYADH 11495
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYD SJ
C,E,M

Abdul Ghani El Ajou Corp
P O Box 78
RIYADH
Tel: 40 41 717
Telex: 200 932 EL AJOU
P

SCOTLAND

See United Kingdom

SENEGAL

Societe Hussein Ayad & Cie
76, Avenue Georges Pompidou
B P 305
DAKAR
Tel: 32339
Cable: AYAD-Dakar
E
Moneger Distribution S A
1, Rue Parent
B P 148
DAKAR
Tel: 215 671
Telex: 587
P

Systeme Service Conseil (SSC)
14, Avenue du Parachois
DAKAR ETOILE
Tel: 219976
Telex: 577
C,P

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte Ltd
1150 Depot Road
SINGAPORE, 0410
Tel: 4731788
Telex: 34209 HPSGSO RS
Cable: HEWPACK, Singapore
A,C,E,M,P
Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: 26283 RS
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty) Ltd.
P O Box 120
Howard Place, **CAPE PROVINCE**
7450 South Africa
Tel: 27 121153-7954
Telex: 57-20006
A,C,CM,E,M,P
Hewlett-Packard So Africa (Pty) Ltd
2nd Floor Juniper House
92 Overport Drive
DURBAN 4067
Tel: 27-31-28-4178
Telex: 6-22954
C

Hewlett-Packard So Africa (Pty) Ltd
Shop 6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6001
Tel: 27141130 1201
Telex: 24-2916
C

Hewlett-Packard So Africa (Pty) Ltd
Fountain Center
Kalkoen Str
Monument Park Ext 2
PRETORIA 0105
Tel: (012) 45 5725
Telex: 32163
C,E

Hewlett-Packard So Africa (Pty) Ltd
Private Bag Wendywood
SANDTON 2144
Tel: 27-11-802-5111, 27-11-802-5125
Telex: 4-20877 SA
Cable: HEWPACK Johannesburg
A,C,CM,E,M,P

SPAIN

Hewlett-Packard Española, S A
Calle Entenza, 321
E-BARCELONA 29
Tel: 3/322 24 51, 321 73 54
Telex: 52603 hpbee
A,C,E,M,P
Hewlett-Packard Española, S A
Calle San Vicente S/N
Edificio Albia II-7B
48001 **BILBAO**
Tel: 4/423 83 06
A,C,E,M

Hewlett-Packard Española, S A
C/ta N-VI, Km 16, 400
Las Rozas
E-MADRID
Tel: (1) 637 00 11
Telex: 23515 HPE
C,M

Hewlett-Packard Española, S A
Avda S Francisco Javier, S/N
Planta 10 Edificio Sevilla 2
E-SEVILLA 5, SPAIN
Tel: 54/64 44 54
Telex: 72933
A,C,M,P

Hewlett-Packard Española, S A
Isabel La Católica, 8
E-46004 VALENCIA
Tel: 34-6-361 1354
Telex: 63435
C,P

Hewlett-Packard Española, S A
Av de Zugazarte, 8
Las Arenas-Guecho
E-48930 VIZCAYA VIZCAYA
Tel: 34-423-83 06
Telex: 33032

SWEDEN

Hewlett-Packard Sverige AB
Östra Tullgatan 3
S-20011 **MALMÖ**
Box 6132
Tel: 46-40-702-70
Telex: (854) 17886 (via Spånga office)
C,P
Hewlett-Packard Sverige AB
Elementvagen 16
S-7022 7 **ÖREBRO**
Tel: 49-019-10-4820
Telex: (854) 17886 (via Spånga office)
C

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
P O Box 19
S-16393 **SPÅNGA**
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781
A,C,CM,E,M,P
Hewlett-Packard Sverige AB
Box 266
Topasgatan 1A
S-42123 **VÄSTRA-FRÖLUNDA**
(Gothenburg)
Tel: 46-031-89-1000
Telex: (854) 17886 (via Spånga office)
A,C,CM,E,M,P

SUDAN

Mediterranean Engineering
& Trading Co Ltd
P O Box 1025
KHARTOUM
Tel: 41184
Telex: 24052
C,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 **BASEL**
Tel: 41-61-33-5920
A,C,E,P
Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365-1366
CH-1217 **MEYRIN 1**
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
A,C,CM,E,M,P

SWITZERLAND (Cont'd) TOGO

Hewlett-Packard (Schweiz) AG
 Alimend 2
 CH-8967 WIDEN
 Tel: 41-57-31-2111
 Telex: 53933 hpag ch
 Cable: HPAG CH
 A,C,CM,E,M,P

Hewlett-Packard (Schweiz) AG
 Schwamendingenstrasse 10
 CH-8050 ZURICH
 Tel: 41-1-315-8181
 Telex: 823 537 HPAG CH
 C,P

SYRIA

General Electronic Inc
 Nuri Basha Ahnal Ebn Kays Street
 P O Box 5781
 DAMASCUS

Tel: 33-24-87
 Telex: 44-19-88
 Cable: ELECTROBOR DAMASCUS
 E

Middle East Electronics
 P O Box 2308

Abu Rumaneh
 DAMASCUS
 Tel: 33 45 92
 Telex: 411 771 Meesy
 M

TAIWAN

Hewlett-Packard Taiwan Ltd
 THM Office

2 Huan Nan Road
 CHUNG LI, Taoyuan
 Tel: (034) 929-666
 C

Hewlett-Packard Taiwan Ltd

Kachsiung Office
 11/F, 456 Chung Hsiao 1st Road
 KAOHSIUNG
 Tel: (07) 2412318
 C,E

Hewlett-Packard Taiwan Ltd
 8th Floor, Hewlett-Packard Building
 337 Fu Hsing North Road
 TAIPEI

Tel: (02) 712-0404
 Telex: 24439 HEWPACK
 Cable: HEWPACK Taipei
 A,C,CM,E,M,P

Ing Lih Trading Co
 3rd Floor, No. 7, Sect. 2
 Jen Ai Road
 TAIPEI 100
 Tel: (02) 394-8191
 Telex: 22894 SANKWANG
 A

THAILAND

Unimesa Co. Ltd
 30 Patpong Ave., Suriwong
 BANGKOK 5,
 Tel: 235-5727, 234-0991/3
 Telex: 84439 Simonco TH
 Cable: UNIMESA Bangkok
 A,C,E,M

Bangkok Business Equipment Ltd
 5/5-6 Dejo Road

BANGKOK
 Tel: 234-8670, 234-8671
 Telex: 87699-BEQUIPT TH
 Cable: BUSIQUIPT Bangkok
 P

Societe Africaine De Promotion
 Immeuble Sageb
 Rue d'Atakpame
 P O Box 4150
 LOME
 Tel: 21-62-88
 Telex: 5357
 P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd
 Corner McAllister Street &
 Eastern Main Road, Laventille
 P O Box 732

PORT-OF-SPAIN
 Tel: 624-4213
 Telex: 22561 CARTEL WG
 Cable: CARTEL, PORT OF SPAIN
 CM,E,M,P

Computer and Controls Ltd
 P O Box 51
 1 Taylor Street

PORT-OF-SPAIN
 Tel: (809) 622-7719/622-7985
 Telex: 38722798 COMCON WG
 LOOGO AGENCY 1264
 A,P

Feral Assoc
 8 Fitzgerald Lane

PORT-OF-SPAIN
 Tel: 62-36864, 62-39255
 Telex: 22432 FERALCO
 Cable: FERALCO
 M

TUNISIA

Tunisie Electronique S A R L
 31 Avenue de la Liberte

TUNIS
 Tel: 280-144
 C,E,P

Tunisie Electronique S A R L
 94 Av Jurgurtha, Mutuelleville
 1002 TUNIS-BELVEDERE
 Tel: 280144
 Telex: 13238

C,E,P
 Corema S A
 1 ter Av de Carthage

TUNIS
 Tel: 253-821
 Telex: 12319 CABAM TN
 M

TURKEY

E M A
 Mediha Eldem Sokak No. 41/6
 Yenisehir

ANKARA
 Tel: 319175
 Telex: 42321 KTX TR
 Cable: EMATRADE ANKARA
 M

Teknim Company Ltd
 Iran Caddesi No 7
 Karaklidere

ANKARA
 Tel: 275800
 Telex: 42155 TKNM TR
 C,E

Kurt & Kurt A S
 Mithatpasa Caddesi No 75
 Kat 4 Kizilay

ANKARA
 Tel: 318875/6/7/8
 Telex: 42490 MESR TR
 A

Sanwa Bilgisayar Sistemleri A S
 Buyukdere Caddesi 103/6

Gayrettepe
 ISTANBUL
 Tel: 1673180
 Telex: 26345 SANI TR
 C,P

Best Inc
 Esentepe, Gazeteciler Sitesi
 Keskin Kalem
 Sokak 6/3, Gayrettepe
 ISTANBUL
 Tel: 172 1328, 173 3344
 Telex: 42490
 A

UNITED ARAB EMIRATES

Emitac Ltd
 P O Box 1641

SHARJAH
 Tel: 591181
 Telex: 68136 EMITAC EM
 Cable: EMITAC SHARJAH
 E,C,M,P,A

Emitac Ltd
 P O Box 2711

ABU DHABI
 Tel: 820419-20
 Cable: EMITACH ABUDHABI

Emitac Ltd
 P O Box 8391

DUBAI,
 Tel: 377591
 Emitac Ltd
 P O Box 473

RAS AL KHAIMAH
 Tel: 28133, 21270

UNITED KINGDOM ENGLAND

Hewlett-Packard Ltd
 Miller House

The Ring BRACKNELL
 Berks RG12 1XN
 Tel: 44/344/424-898
 Telex: 848733
 E

Hewlett-Packard Ltd
 Elstree House Elstree Way
 BOREHAMWOOD, Herts WD6 1SG

Tel: 01 207 5000
 Telex: 8952716
 C,E

Hewlett-Packard Ltd
 Oakfield House, Oakfield Grove
 Clifton BRISTOL, Avon BS8 2BN

Tel: 44-272-736 806
 Telex: 444302
 C,E,P

Hewlett-Packard Ltd
 9 Bridewell Place
 LONDON EC4V 6BS

Tel: 44-01-583-6565
 Telex: 298163
 C,P

Hewlett-Packard Ltd
 Pontefract Road

NORMANTON, West Yorkshire WF6 1RN
 Tel: 44/924/895 566
 Telex: 557355
 C,P

Hewlett-Packard Ltd
 The Quadrangle
 106-118 Station Road
 REDHILL, Surrey RH1 1PS
 Tel: 44-737-686-55
 Telex: 947234
 C,E,P

Hewlett-Packard Ltd
 Avon House
 435 Stratford Road
 Shirley, SOLIHULL, West Midlands
 B90 4BL
 Tel: 44-21-745-8800
 Telex: 339105
 C,E,P

Hewlett-Packard Ltd
 Heathside Park Road
 Cheadle Heath, Stockport
 SK3 ORB, United Kingdom
 Tel: 44-061-428-0828
 Telex: 668068
 A,C,E,M,P

Hewlett-Packard Ltd
 Harmon House
 No 1 George Street
 UXBRIDGE, Middlesex UX8 1YH
 Tel: 895 720 20
 Telex: 893134/5
 C,CM,E,M,P

Hewlett-Packard Ltd
 King Street Lane
 Winnersh, WOKINGHAM
 Berkshire RG11 5AR
 Tel: 44/734/784774
 Telex: 8471789
 A,C,E,M,P

NORTHERN IRELAND

Hewlett-Packard (Ireland) Ltd
 Carrickfergus Industrial Centre
 75 Belfast Road, Carrickfergus
 CO. ANTRIM BT38 8PM
 Tel: 09603 67333
 C E

Cardiac Services Company
 95A Finaghy Road South
 BELFAST, BT10 OBY
 Tel: 0232-625566
 Telex: 747626
 M

SCOTLAND

Hewlett-Packard Ltd
 1/3 Springburn Place
 College Milton North
 EAST KILBRIDE, G74 5NU
 Tel: 041-332-6232
 Telex: 779615
 C,E

Hewlett-Packard Ltd
 SOUTH QUEENSFERRY
 West Lothian, EH30 9TG
 Tel: 031 331 1188
 Telex: 72682 HPSQFYG
 C,CM,E,M,P

UNITED STATES

Hewlett-Packard Co
 Customer Information Center
 Tel: (800) 752-0900
 Hours: 6:00 AM to 5:00 PM
 Pacific Time

Alabama

Hewlett-Packard Co
 2100 Riverchase Center
 Building 100 - Suite 118
 BIRMINGHAM, AL 35244
 Tel: (205) 988-0547
 A,C,M,P*

Hewlett-Packard Co
 420 Wynn Drive
 HUNTSVILLE, AL 35805
 Tel: (205) 830-2000
 C,CM,E,M*

Alaska

Hewlett-Packard Co
 4000 Old Seward Highway
 Suite 101
 ANCHORAGE, AK 99503
 Tel: (907) 563-8855
 C E

Arizona

Hewlett-Packard Co
 8080 Pointe Parkway West
 PHOENIX, AZ 85044
 Tel: (602) 273-8000
 A,C,CM,E,M,P

Hewlett-Packard Co
 3400 East Britannia Dr
 Bldg C, Suite 124
 TUCSON, AZ 85706
 Tel: (602) 573-7400
 C,E,M**

California

Hewlett-Packard Co
 99 South Hill Dr
 BRISBANE, CA 94005
 Tel: (415) 330-2500
 C

Hewlett-Packard Co
 1907 North Gateway Blvd
 FRESNO, CA 93727
 Tel: (209) 252-9652
 C,M

Hewlett-Packard Co
 1421 S Manhattan Av
 FULLERTON, CA 92631
 Tel: (714) 999-6700
 C,CM,E,M

Hewlett-Packard Co
 7408 Hollister Ave #A
 GOLETA, CA 93117
 Tel: (805) 685-6100
 C,E

Hewlett-Packard Co
 2525 Grand Avenue
 LONG BEACH, CA 90815
 Tel: (213) 498-1111
 C

Hewlett-Packard Co
 5651 West Manchester Ave
 LOS ANGELES, CA 90045
 Tel: (213) 337-8000

Hewlett-Packard Co
 3155 Porter Drive
 PALO ALTO, CA 94304
 Tel: (415) 857-8000
 C,E

Hewlett-Packard Co.
5725 W Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
C

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
A*,C,E,M

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200
C,CM,E,M

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Telex: 910-338-0586
A,C,CM,E

Hewlett-Packard Co.
2150 W Hillcrest Dr
THOUSAND OAKS, CA 91320
(805) 373-7000
C,CM,E

Colorado
Hewlett-Packard Co.
2945 Center Green Court South
Suite A
BOULDER, CO 80301
Tel: (303) 499-6655
A,C,E

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
A,C,CM,E,M

Connecticut
Hewlett-Packard Co.
500 Sylvan Av
BRIDGEPORT, CT 06606
Tel: (203) 371-6454
C,E

Hewlett-Packard Co.
47 Barnes Industrial Road South
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,C,CM,E,M

Florida
Hewlett-Packard Co.
2901 N W 62nd Street
FORT LAUDERDALE, FL 33309
Tel: (305) 973-2600
C,E,M,P*

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 636-9955
C*,M**

Hewlett-Packard Co.
255 East Drive, Suite B
MELBOURNE, FL 32901
Tel: (305) 729-0704
CM,E

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 859-2900
A,C,CM,E,P*

Hewlett-Packard Co.
4700 Bayou Blvd
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
A,C,M

Hewlett-Packard Co.
5550 W. Idlewild, #150
TAMPA, FL 33614
Tel: (813) 884-3282
C,E,M,P

Georgia
Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890
A,C,CM,E,M,P*

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
NORCROSS, GA 30092
Tel: (404) 448-1894
C,E,P

Hawaii
Hewlett-Packard Co.
Pacific Tower
1001 Bishop St
Suite 2400
HONOLULU, HI 96813
Tel: (808) 526-1555
A,C,E,M

Idaho
Hewlett-Packard Co.
11309 Chinden Blvd
BOISE, ID 83714
Tel: (208) 323-2700
C

Illinois
Hewlett-Packard Co.
2205 E Empire St
P O Box 1607
BLOOMINGTON, IL 61702-1607
Tel: (309) 662-9411
A,C,E,M**

Hewlett-Packard Co.
525 W Monroe, #1308
CHICAGO, IL 60606
Tel: (312) 930-0010
C

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (312) 357-8800
C

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,C,CM,E,M

Indiana
Hewlett-Packard Co.
11911 N. Meridian St
CARMEL, IN 46032
Tel: (317) 844-4100
A,C,CM,E,M

Hewlett-Packard Co.
111 E Ludwig Road
Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4283
C,E

Iowa
Hewlett-Packard Co.
4070 22nd Av SW
CEDAR RAPIDS, IA 52404
Tel: (319) 390-4250
C,E,M

Hewlett-Packard Co.
4201 Corporate Dr
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
A**,C,M**

Kansas
Hewlett-Packard Co.
North Rock Business Park
3450 N Rock Rd
Suite 300
WICHITA, KS 67226
Tel: (316) 684-8491
C,E

Kentucky
Hewlett-Packard Co.
305 N. Hurstbourne Lane,
Suite 100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,C,M

Louisiana
Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P O Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A,C,E,M,P

Maryland
Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A,C,CM,E,M

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,C,CM,E,M

Massachusetts
Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A,C,CM,E,M,P*

Hewlett-Packard Co.
29 Burlington Mall Rd
BURLINGTON, MA 01803-4514
Tel: (617) 270-7000
C,E

Michigan
Hewlett-Packard Co.
4326 Cascade Road S E
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
C,M

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
A,C,E,M

Hewlett-Packard Co.
560 Kirts Rd
Suite 101
TROY, MI 48064
Tel: (313) 362-5180
C

Minnesota
Hewlett-Packard Co.
2025 W. Larpenteur Ave
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,C,CM,E,M

Missouri
Hewlett-Packard Co.
1001 E 101st Terrace Suite 120
KANSAS CITY, MO 64131-3368
Tel: (816) 941-0411
A,C,CM,E,M

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,C,E,M

Nebraska
Hewlett-Packard
11626 Nicholas St
OMAHA, NE 68154
Tel: (402) 493-0300
C,E,M

New Jersey
Hewlett-Packard Co.
120 W Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,C,CM,E,M

Hewlett-Packard Co.
20 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
A,C,CM,E

New Mexico
Hewlett-Packard Co.
7801 Jefferson N E
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
C,E,M

Hewlett-Packard Co.
1362-C Trinity Dr
LOS ALAMOS, NM 87544
Tel: (505) 662-6700
C,E

New York
Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A,C,E,M

Hewlett-Packard Co.
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621
C,E,M

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
A,C,CM,E,M

Hewlett-Packard Co.
7641 Henry Clay Blvd
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,C,CM,E,M

Hewlett-Packard Co.
No 1 Pennsylvania Plaza
55th Floor
34th Street & 7th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
C,M*

Hewlett-Packard Co.
15 Myers Corner Rd.
Hollowbrook Park, Suite 2D
WAPPINGERS FALLS, NY 12590
Tel: (914) 298-9125
CM,E

Hewlett-Packard Co.
2975 Westchester Ave
PURCHASE, NY 10577
Tel: (914) 935-6300
C,CM,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800
A,C,CM,E,M

North Carolina
Hewlett-Packard Co.
305 Gregson Dr
CARY, NC 27511
Tel: (919) 467-6600
C,CM,E,M,P*

Hewlett-Packard Co.
9401 Arrow Point Blvd
Suite 100
CHARLOTTE, NC 28217
Tel: (704) 527-8780
C*

Hewlett-Packard Co.
5605 Roanne Way
GREENSBORO, NC 27420
Tel: (919) 852-1800
A,C,CM,E,M,P*

Ohio
Hewlett-Packard Co.
2717 S Arlington Road
AKRON, OH 44312
Tel: (216) 644-2270
C,E

Hewlett-Packard Co.
4501 Erskine Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
C,M

Hewlett-Packard Co.
15885 Sprague Road
CLEVELAND, OH 44136
Tel: (216) 243-7300
A,C,CM,E,M

Hewlett-Packard Co.
9080 Springboro Pike
MIAMISBURG, OH 45342
Tel: (513) 433-2223
A,C,CM,E*,M

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
C

Hewlett-Packard Co.
675 Brooksedge Blvd
WESTERVILLE, OH 43081
Tel: (614) 891-3344
C,CM,E*

Oklahoma
Hewlett-Packard Co.
3525 N W 55th St
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
C,E*,M

UNITED STATES (Cont'd)

Hewlett-Packard Co
6655 South Lewis,
Suite 105
TULSA, OK 74136
Tel: (918) 481-6700
A*, C, E, M*, P*

Oregon

Hewlett-Packard Co
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A, C, E*, M

Pennsylvania

Hewlett-Packard Co
Heatherwood Industrial Park
50 Dorchester Rd
Route 22
HARRISBURG, PA 17112-2799
Tel: (717) 657-5900
C

Hewlett-Packard Co
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A, C, E, M

Hewlett-Packard Co
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A, C, CM, E, M

South Carolina

Hewlett-Packard Co
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29212
Tel: (803) 732-0400
C, M

Hewlett-Packard Co
545 N. Pleasantburg Dr.
Suite 100
GREENVILLE, SC 29607
Tel: (803) 232-8002
C

Tennessee

Hewlett-Packard Co
One Energy Centr. Suite 200
Pellissippi Pkwy
KNOXVILLE, TN 37932
Tel: (615) 966-4747
A, C, E, M, P

Hewlett-Packard Co
3070 Directors Row
Directors Square
MEMPHIS, TN 38131
Tel: (901) 346-8370
A, C, E, M

Hewlett-Packard Co
44 Vantage Way,
Suite 160
NASHVILLE, TN 37228
Tel: (615) 255-1271
A, C, E, M, P

Texas

Hewlett-Packard Co
1826-P Kramer Lane
AUSTIN, TX 78758
Tel: (512) 835-6771
C, E, P*

Hewlett-Packard Co
5700 Cromo Dr
EL PASO, TX 79912
Tel: (915) 833-4400
C, E*, M**

Hewlett-Packard Co
3952 Sandshell Drive
FORT WORTH, TX 76137
Tel: (817) 232-9500
C

Hewlett-Packard Co
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
A, C, E, M, P*

Hewlett-Packard Co
3301 West Royal Lane
IRVING, TX 75063
Tel: (214) 869-3377
C, E

Hewlett-Packard Co.
109 E. Toronto, Suite 100
McALLEN, TX 78501
Tel: (512) 630-3030
C

Hewlett-Packard Co.
930 E. Campbell Rd
RICHARDSON, TX 75081
Tel: (214) 231-6101
A, C, CM, E, M, P*

Hewlett-Packard Co
1020 Central Parkway South
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
A, C, E, M, P*

Utah

Hewlett-Packard Co
3530 W. 2100 South St
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A, C, E, M

Virginia

Hewlett-Packard Co
840 Greenbrier Circle
Suite 101
CHESAPEAKE, VA 23320
Tel: (804) 424-7105
C, E, M
Hewlett-Packard Co
4305 Cox Road
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
A, C, E, M, P*

Hewlett-Packard Co
Tanglewood West Bldg
Suite 240
3959 Electric Road
ROANOKE, VA 24018
Tel: (703) 774-3444
C, E, P

Washington

Hewlett-Packard Co
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4004
A, C, CM, E, M

Hewlett-Packard Co
1225 Argonne Rd
SPOKANE, WA 99212
Tel: (509) 922-7000
C

West Virginia

Hewlett-Packard Co
501 56th Street
CHARLESTON, WV 25304
Tel: (304) 925-0492
A, C, M

Wisconsin

Hewlett-Packard Co
275 N. Corporate Dr
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A, C, E*, M

URUGUAY

Pablo Ferrando S A C e l
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 59-82-802-586
Telex: 398802586

A, C, E, M
Olympia de Uruguay S.A.
Maquinas de Oficina
Avda del Libertador 1997
Casilla de Correo 6644
MONTEVIDEO
Tel: 91-1809, 98-3807
Telex: 6342 OROU UY
P

VENEZUELA

Hewlett-Packard de Venezuela C A
3A Transversal Los Ruices Norte
Edificio Segre 2 & 3
Apartado 50933
CARACAS 1050
Tel: (582) 239-4133
Telex: 251046 HEWPACK
A, C, CM, E, M, P

Hewlett-Packard de Venezuela, C A
Centro Ciudad Comercial Tamanaco
Nivel C-2 (Nueva Etapa)
Local 53H05
Chuaq. CARACAS
Tel: 928291
P

Albis Venezolana S R L
Av. Las Marias, Ota. Alix,
El Pedregal
Apartado 81025
CARACAS 1080A
Tel: 747984, 742146
Telex: 24009 ALBIS VC
A

Tecnologica Medica del Caribe, C A
Multicentro Empresarial del Este
Ave. Libertador
Edif. Libertador
Nucleo "C" - Oficina 51-52
CARACAS
Tel: 339867/333780
M

Hewlett-Packard de Venezuela C.A
Residencias Tia Betty Local 1
Avenida 3 y con Calle 75
MARACAIBO, Estado Zulia
Apartado 2646
Tel: 58-2-617-5669
Telex: 62464 HPMAR
C, E*

Hewlett-Packard de Venezuela C A
Urb. Lomas de Este
Torre Trebol — Piso 11
VALENCIA, Estado Carabobo
Apartado 3347
Tel: (584 1) 222992
C, P

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433
A, C, E, M, P

Do Hermes
Celovska 73
YU-61000 LJUBLJANA
Tel: (061) 553 170
Telex: 31583
A, C, E, M, P
Elektrotehna
Titova 51
YU-61000 LJUBLJANA
CM
Do Hermes
Kralja Tomislava 1
YU-71000 SARAJEVO
Tel: (071) 35 859
Telex: 41634
C**, P

ZAIRE

Computer & Industrial Engineering
25, Avenue de la Justice
B. P. 12797
KINSHASA, Gombe
Tel: 32063
Telex: 21552
C, P

ZAMBIA

R. J. Tilbury (Zambia) Ltd
P. O. Box 32792
LUSAKA
Tel: 215590
Telex: 40128
E

ZIMBABWE

Field Technical Sales (Private) Limited
45, Kelvin Road North
P. O. Box 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
E, P

September 1987

