

# ThinkJet Printer

The Personal Printer from Hewlett-Packard

## Reference Section

March 1987

Printed in Singapore

## **NOTICE**

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

# Table of Contents

## GENERAL INFORMATION

How to Use Your Reference Manual. . . . .	vi
---	----

## CHAPTER 1 USING PRINT FEATURES . . . . . 1-1

Introduction to Control Codes and Escape Sequences . . . . .	1-1
Control Sequence Modes . . . . .	1-3
Print Pitches . . . . .	1-4
Print Quality . . . . .	1-5
Quality Mode . . . . .	1-5
Bold Print . . . . .	1-6
Underlining . . . . .	1-7
Mixing Modes . . . . .	1-7
Perforation Skip. . . . .	1-8
Page Length . . . . .	1-9
Line Spacing . . . . .	1-10

## CHAPTER 2 MORE ON PRINT FEATURES . . . . . 2-1

Positioning the Print on the Page . . . . .	2-1
Overstrike . . . . .	2-2
Graphics . . . . .	2-2
Selecting Unidirectional or Bidirectional Print . . . . .	2-6
End of Line Wrap-Around. . . . .	2-7
Linking Escape Sequences. . . . .	2-7
Display Functions Mode . . . . .	2-7
Self Test . . . . .	2-8
Resets . . . . .	2-9
Ready to Print. . . . .	2-9
Automatic Line Termination. . . . .	2-9

## CHAPTER 3 MAINTENANCE AND TROUBLESHOOTING . . . . . 3-1

Environmental Conditions. . . . .	3-1
Maintenance of the Print Head Cartridge. . . . .	3-1
Maintenance of the Printer . . . . .	3-3
Troubleshooting. . . . .	3-3

## APPENDICES . . . . . A-1

Appendix A: Mode Select Switches . . . . .	A-1
Appendix B: Table of HP Mode Print Features . . . . .	B-1
Appendix C: Table of Alternate Mode Print Features . . . . .	C-1
Appendix D: Character Sets . . . . .	D-1

Appendix E: Power Modules .....	E-1
Appendix F: Parallel Interface Specifications .....	F-1
Appendix G: List of Accessories and Supplies .....	G-1
Appendix H: Warranty and Service Information .....	H-1
Appendix I: Application notes (Hardware and Software) .....	I-1
<b>INDEX .....</b>	<b>Index-1</b>

Trademarks: IBM/International Business Machines Corporation  
Apple/Apple Computer Inc.  
Epson/EPSON, Shinshu Seiki Co., Ltd.  
Microsoft/Microsoft, Inc.

## General Information

Congratulations on your purchase of the Hewlett-Packard ThinkJet printer. Your printer is designed to give you years of trouble-free operation. Its small footprint uses little precious desk space. However, do not let its size fool you. It is fast (150 characters per second), intelligent, and offers a wide variety of easy-to-use print features.



The versatility and convenience of your printer are enhanced by the quietness of its ink jet printing. The ink jet print head cartridge contains sufficient ink to print approximately 500 pages. The cartridge is completely disposable and easy to replace. In addition, the ThinkJet printer uses a standard parallel printer interface to communicate with many different computers.

To set up your printer you will need a printer cable. You should have obtained a printer cable with either your computer or your parallel printer interface card. If you do not have one, contact your Hewlett-Packard dealer or an authorized sales representative.

## How to Use Your Reference Manual

Chapters 1 and 2, “Using Print Features” and “More on Print Features,” describe how to use the many advanced print features of the ThinkJet printer.

Chapter 3, “Maintenance and Troubleshooting,” offers easy-to-use tips on how to keep your printer running smoothly.

The appendices contain reference guides where you can quickly find information about your printer. Also included in the appendices are the list of accessories and information on warranty and service.

# Using Print Features

The Operator's Section described how to set up and begin operating your ThinkJet printer. This chapter tells you how to use the more commonly selected print modes and form control features: print pitches, Quality mode, Bold printing, underlining, line spacing and perforation skip. Chapter 2 introduces more advanced print features.

## Introduction to Control Codes and Escape Sequences

You may already have software which allows you to use many of the print features of your ThinkJet printer. If, however, you wish to use any of these print features on your own, the following two chapters provide you with examples of each of the print features and the data used to generate those examples.

The print features of your printer are controlled by "control codes" and "escape sequences." Control codes are data that, when sent to your printer, do not cause anything to be printed. They are commands which cause an action. An example of how control codes are written in this manual is `[CTL] N`, abbreviation for "Control N."

One of the control codes is named "escape," which appears in this manual as `[ESC]`. Escape sequences consist of the `[ESC]` control code followed by one or more other characters. For example, `[ESC] & k 1 S` is an escape sequence which changes the print pitch. None of the characters in an escape sequence is printed; together they form a command which is used to control a feature of your printer, just as a single control code is a command.

### NOTE

When reading this manual, be very careful to not confuse O (uppercase oh) with 0 (zero) or l (lowercase ell) with 1 (one).

Some features are controlled by both a mode select switch on the rear panel of the printer and an escape sequence. In these cases, the switch sets the default condition of the feature but the escape sequence will override the switch. If the printer is turned off and on, the feature will return to the setting selected by the switch.

To generate printouts using these print features, you will need to become familiar with the method used by your computer or software to send escape sequences and control codes to your printer. Some of the different methods commonly used are:

- Typing escape sequences and control codes directly from the keyboard.

Many computer keyboards have a key labeled **ESC** and another key labeled **CTRL**, **CTL**, or **CTRL**. When the **ESC** key is pressed, it generates the escape control code. Other control codes are generated by holding down the **CTL** key while pressing a different key, just as holding down the **SHIFT** key while pressing another key generates special punctuation characters and uppercase characters. On some keyboards that do not have an **ESC** key, **ESC** can be generated as **CTL** |.

#### NOTE

If you are entering escape sequences in this manner, do not type any spaces between the characters of the escape sequence. In this manual spaces have been inserted in the escape sequences for readability; they are not part of the escape sequence.

- Specifying each control code, including **ESC**, by its ASCII\* number.

Some software packages require that you specify each control code by its ASCII number, usually preceded by a special character such as “\”. For example, the escape sequence **ESC** & k 1 S would be specified as \027 & k 1 S. Appendix D contains the ASCII representation of each control code.

- Specifying each character of the escape sequence by its ASCII number.

Some software packages require that you specify **ESC** and the characters following it by their ASCII numbers. The reference tables in Appendices B and C contain the ASCII representation of each escape sequence.

As an example, the escape sequence **ESC** & k 1 S is represented in ASCII as 27 38 107 49-83.

\*The ASCII (American Standard Code for Information Interchange) character tables in Appendix D assign a number between 0 and 255 to every character or control code recognized by the printer. Computers use these numbers when storing and communicating text material. Unless specifically noted otherwise, the numbers used in this manual are decimal numbers. A few software packages require you to enter ASCII numbers in “hexadecimal.” The reference tables in Appendices B and C include the hexadecimal representation of each control code and escape sequence.

If you are using a software package such as a word processor or spreadsheet, refer to your software documentation to learn how to represent control codes and escape sequences.

If you are writing BASIC programs, you can generate control codes with the CHR\$( ) function. For more information on the CHR\$( ) function, refer to a BASIC programming manual.

In this manual, CHR\$( ) is used to specify numbers which are ASCII numbers, not characters. For example, 83 and CHR\$(83) are two different things. The first, 83, is a string of two characters: 8 and 3. CHR\$(83) is a single character, uppercase "S".

## Control Sequence Modes

The ThinkJet printer has two different control sequence modes: HP Control Sequence Mode (HP mode) and Alternate Control Sequence Mode (Alternate mode). The escape sequences and control codes which control the print features are different for the two modes. If the printer receives an escape sequence or control code which is invalid for the current mode, it will either ignore the command or produce unexpected results. However, do not be afraid of making mistakes. You cannot damage your printer with an invalid escape sequence.

Switch 5 on the rear panel of the printer determines which mode is currently being used. If switch 5 is down, the printer is in HP Control Sequence Mode; if switch 5 is up, the printer is in Alternate Control Sequence Mode. Page A-3 discusses choosing the appropriate control sequence mode for your computer system.

The following sections discuss both control sequence modes for each print feature. For reference purposes, Appendix B lists all of the HP mode control sequences; the control sequences for Alternate mode are listed in Appendix C.

## Print Pitches

Your ThinkJet printer offers four print pitches: normal, expanded, compressed, and expanded-compressed.

This is compressed print.

This is normal print.

This is expanded-compressed print.

This is expanded print.

If switch 5 is DOWN (HP mode):

Table 1-1 provides the specific escape sequence for each print pitch.

**Table 1-1  
Print Pitches (HP Mode)**

Print Pitch	Characters/Inch	Characters/Line	Escape Sequence
Compressed	21.3	142	<code>[ESC] &amp; k 2 S</code>
Normal	12.0	80	<code>[ESC] &amp; k 0 S</code>
Expanded- Compressed	10.7	71	<code>[ESC] &amp; k 3 S</code>
Expanded	6.0	40	<code>[ESC] &amp; k 1 S</code>

If more characters per line are sent than is allowed by the selected print pitch, the additional characters are normally ignored. To print those additional characters, you may use the wrap-around mode described in Chapter 2.

The data used to generate the preceding example is:

`[ESC] & k 2 S`This is compressed print.

`[ESC] & k 0 S`This is normal print.

`[ESC] & k 3 S`This is expanded-compressed print.

`[ESC] & k 1 S`This is expanded print.

If switch 5 is UP (Alternate mode):

Table 1-2 specifies the control codes which turn on or off each of the print pitches.

**Table 1-2  
Print Pitches (Alternate Mode)**

Print Pitch	Chars/Inch	Chars/Line	Turn On	Turn Off
Compressed	21.3	142	[CTL] O	[CTL] R
Normal	12.0	80	default	
Expanded- Compressed	10.7	71	[CTL] N [CTL] O	[CTL] T [CTL] R
Expanded	6.0	40	[CTL] N	[CTL] T

The data used to generate the preceding example is:

```
[CTL]O This is compressed print. [CTL]R
This is normal print.
[CTL]N [CTL]O This is expanded-compressed print. [CTL]T [CTL]R
[CTL]N This is expanded print. [CTL]T
```

## Print Quality

The ThinkJet printer can print characters in normal, Quality mode, or bold.

### Quality Mode

Quality mode can be enabled in two ways as described below.

- **Through the Keypad**

Quality mode is enabled by holding down the blue button while turning ON the printer. Once Quality mode is enabled through the blue button, it can only be disabled by turning the printer OFF. See the example of Quality mode given below.

- **By Escape Sequence**

**If switch 5 is DOWN (HP mode):**

Quality mode is enabled by sending the escape sequence `[ESC](s1B`. The printer will then print darker characters until Quality mode is disabled by sending the escape sequence `[ESC](s0B`, or by turning the printer OFF.

Quality mode is used to print entire documents. Quality mode can highlight a whole page or several pages. The instructions on this page tell you how to enable Quality mode in two ways.

The data used to generate the preceding example is:

```
[ESC](s1BQuality mode is used to print entire documents. Quality
mode can highlight a whole page or several pages. The instructions
on this page tell you how to enable Quality mode in two ways.
[ESC](s0B
```

**If switch 5 is UP (Alternate mode):**

Quality mode is enabled by sending the escape sequence `ESC`G. The printer will then print darker characters until Quality mode is disabled by sending the escape sequence `ESC`H, or by turning the printer OFF.

The data used to generate the preceding example is:

`ESC`GQuality mode is used to print entire documents. Quality mode can highlight a whole page or several pages. The instructions on this page tell you how to enable Quality mode in two ways. `ESC`H

**NOTE**

If Quality Mode has been enabled through the keypad be aware that some word processing software packages may not respond to "emphasized" commands.

**Bold Print**

Bold printing is enabled by sending an escape sequence.

Bold print can **highlight** single words.

**Entire lines can also be highlighted.**

**If switch 5 is DOWN (HP mode):**

Bold printing is enabled by sending the escape sequence `ESC`(s1B. The printer will then print darker characters until Bold printing is disabled by sending the escape sequence `ESC`(s0B, or by turning the power OFF.

The data used to generate the preceding example is:

Bold printing can `ESC`(s1Bhighlight`ESC`(s0B single words.  
`ESC`(s1BEntire lines can also be highlighted. `ESC`(s0B

**If switch 5 is UP (Alternate mode):**

Bold printing is enabled by sending the escape sequence `ESC`E. The printer will then print darker characters until Bold printing is disabled by sending the escape sequence `ESC`F, or by turning the power OFF.

The data used to generate the preceding example is:

Bold printing can `ESC`Ehighlight`ESC`F single words.  
`ESC`EEntire lines can also be highlighted. `ESC`F

## Underlining

Your ThinkJet printer can underline text as shown in the following example.

Underlining can be used for a single word.  
Entire lines can be underlined.

### If switch 5 is DOWN (HP mode):

Underline mode is enabled by `[ESC] & d D`. The printer will then underline all characters until underline is disabled by `[ESC] & d @`.

The data used to generate the preceding example is:

Underlining can be used for a `[ESC] & d S`single`[ESC] & d @` word.  
`[ESC] & d E`Entire lines can be underlined.`[ESC] & d @`

### If switch 5 is UP (Alternate mode):

Underline mode is enabled by `[ESC] - 1`. The printer will then underline all characters until underline is disabled by `[ESC] - 0`.

The data used to generate the preceding example is:

Underlining can be used for a `[ESC] - 1`single`[ESC] - 0` word.  
`[ESC] - 1`Entire lines can be underlined.`[ESC] - 0`

## Mixing Modes

The ThinkJet printer is capable of mixing any combination of print modes. For example, it can print in expanded and underlined mode. The printer does not limit the number of mode changes allowed in a single line.

Print modes can be mixed on a line.

### If switch 5 is DOWN (HP mode):

The data used to generate the preceding example is:

Print modes can be mixed on a `[ESC] & k 1 S``[ESC] & d D`line`[ESC] & d @` `[ESC] & k 0 S`.

### If switch 5 is UP (Alternate mode):

The data used to generate the preceding example is:

Print modes can be mixed on a `[CTL] N` `[ESC] - 1`line`[ESC] - 0``[CTL] T`.

## Perforation Skip

The ThinkJet printer is capable of automatically leaving top and bottom margins on every page. This is called “perforation skip mode” because, when printing, the printer does not print on the perforations, it skips over them.

The printer does not sense the perforations in the paper; you must tell it where to put the margins by setting top of form as described in the Operator’s Section. When you set top of form, you specify the position of the first line of print: the line immediately following the top margin. The default “perforation skip length” (combined length of the top and bottom margins) is 6 lines. If top of form is set to the fourth line of the page, the printer will leave a margin of three lines at the top and bottom of each page.

Figure 1-1 shows top of form set correctly for equal top and bottom margins.

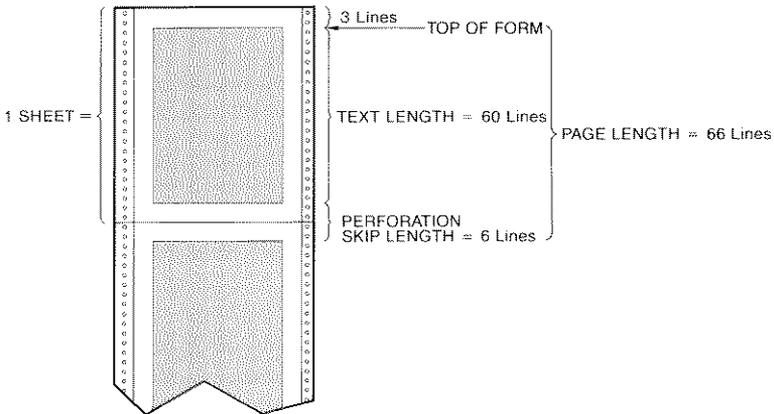


Figure 1-1 Top and Bottom Margins

Switch 3 on the rear panel of the printer determines whether perforation skip mode defaults on or off. If switch 3 is down, perforation skip mode defaults off; if switch 3 is up, perforation skip mode defaults on.

**If switch 5 is DOWN (HP mode):**

The escape sequence `[ESC] & ℓ 1 L` turns perforation skip mode on, `[ESC] & ℓ 0 L` turns it off. These escape sequences override switch 3.

The perforation skip length is not specified directly. If you wish to use a value other than the default, you must specify a new “text length,” which is the number of lines to be printed on each page. The perforation skip length is the total length of each page minus the text length.

The escape sequence to set the text length is `[ESC] & ℓ # F`, where # is the text length specified in number of lines. For example, the escape sequence `[ESC] & ℓ 54 F` sets the text length to 54 lines. If the printer is set for a page length of 66 lines (11 inch paper, 6 lines per inch), the perforation skip length is 66 minus 54: 12 lines. To get equal top and bottom margins of 6 lines, top of form must be set to the seventh line of the page.

Text length cannot be less than one line nor greater than the page length. The escape sequence `[ESC] & ℓ 0 F` will set the text length back to the default, which is 1 inch less than the page length.

**If switch 5 is UP (Alternate mode):**

The escape sequence `[ESC] N CHR$(#)` sets the perforation skip length to # lines and turns perforation skip mode on. The number used to set the perforation skip length is the ASCII number associated with the character following “N.” For example, `[ESC] N 1` does not set perforation skip length to 1 line, the ASCII number for the character “1” is 48 (see Appendix D), so perforation skip length is set to 48 lines. To set the perforation skip length to 10 lines, look in Table D-1 of Appendix D and find that 10 is equivalent to `[CTL] J`. Then use the escape sequence `[ESC] N [CTL] J`.

The escape sequence `[ESC] O` turns perforation skip mode off.

These escape sequences override switch 3.

## Page Length

The ThinkJet printer allows you to change the page length. The current value of page length determines how far the printer advances the paper when the form feed button is pressed or the printer receives a form feed control code. The printer also uses the value of page length, when perforation skip mode is on, to determine where to place the top and bottom margins.

Switch 4 on the rear panel of the printer selects the default page length. If switch 4 is down, page length defaults to 11 inches (279.4 mm), which is 66 lines at 6 lines per inch. If switch 4 is up, page length defaults to 12 inches (304.8 mm), which is 72 lines at 6 lines per inch.

**If switch 5 is DOWN (HP mode):**

The escape sequence `[ESC] & l # P` sets the page length where # is the page length specified in number of lines. For example, `[ESC] & l 50 P` sets the page length to 50 lines. This escape sequence overrides switch 4.

Page length can be set to any number of lines from 1 to 255. The escape sequence `[ESC] & l 0 P` will reset the page length to the default.

The page length escape sequence automatically sets the text length to 1 inch (6 lines at 6 lines per inch) less than the new page length.

**If switch 5 is UP (Alternate mode):**

The escape sequence `[ESC] C CHR$(#)` sets the page length to # lines. The number used to specify the page length is the ASCII number associated with the character following "C." For example, `[ESC] C 1` does not set page length to 1 line. The ASCII number associated with the character "1" is 48, so page length is set to 48 lines. To set page length to 70 lines, look up 70 in Table D-1 of Appendix D and find that 70 is equivalent to the character "F". Then use the escape sequence `[ESC] C F`.

The escape sequence `[ESC] C CHR$(0) CHR$(#)` sets the page length to # inches. The number used to specify the page length is the ASCII number associated with #.

These escape sequences also turn perforation skip mode off.

## Line Spacing

The ThinkJet printer offers different line spacings as shown in the following example.

This group of lines is printed at a line spacing of 8 lines per inch. Notice that they are close together.

These three lines are printed at the default line spacing of 6 lines per inch.

**If switch 5 is DOWN (HP mode):**

To print at 8 lines per inch, send the escape sequence `[ESC] &ℓ8D`. To return to 6 lines per inch, use `[ESC] &ℓ6D`.

If line spacing is changed, page length and text length measured in inches remain the same. For example, if line spacing is 6 lines per inch and page length is 66 lines (11 inches), changing line spacing to 8 lines per inch will also change page length to 88 lines (11 inches).

The data used to generate the preceding example is:

```
[ESC] &ℓ8DThis group of lines is printed at a
line spacing of 8 lines per inch. Notice that
they are close together. [ESC] &ℓ6D
```

```
These three lines are printed at
the default line spacing of
6 lines per inch.
```

**If switch 5 is UP (Alternate Mode):**

To print at 8 lines per inch, send the escape sequence `[ESC] 0`. To return to 6 lines per inch, use `[ESC] 2`. To set line spacing to 7 dot rows (96/7 lines per inch), use `[ESC] 1`. `[ESC] A CHR$(#)` sets line spacing to # dot rows. The number used to set the line spacing is the ASCII number associated with the character following "A." For example, `[ESC] A [CTL] T` sets the line spacing to 20 dot rows because the ASCII value of `[CTL] T` is 20.

The data used to generate the preceding example is:

```
[ESC] 0This group of lines is printed at a
line spacing of 8 lines per inch. Notice that
they are close together. [ESC] 2
```

```
These three lines are printed at
the default line spacing of
6 lines per inch.
```



## More on Print Features

In the previous chapter we discussed the frequently used print features. In this chapter we will discuss some advanced print features.

### Positioning the Print on the Page

Some of the control codes and escape sequences change the position at which the next character received will be printed. This position is called the "current active position." Each time the printer receives a printing character, the current active position is moved one character to the right. The following control codes separate lines of print, cause the printer to overstrike characters, or cause the printer to advance the paper.

Unless specifically noted otherwise, these control codes and escape sequences are identical in HP mode (switch 5 down) or Alternate mode (switch 5 up).

- Carriage Return (**[CTL M]**): Moves the current active position to the first character position on the current line. Normally you do not need to send carriage returns explicitly; your computer system will send them automatically.

Either switch 1 on the rear panel of the printer or the Automatic Line Termination escape sequence discussed on page 2-9 can cause the printer to perform a line feed in addition to each carriage return.

- Back Space (**[CTL H]**): Moves the current active position one character to the left. If the current active position is already the leftmost character position, no action is taken.
- Line Feed (**[CTL J]**): Advances the paper one line. Normally you do not need to send line feeds explicitly; your computer system will send them automatically.

Either switch 2 on the rear panel of the printer or the Automatic Line Termination escape sequence discussed on page 2-9 can cause the printer to perform a carriage return in addition to each line feed.

- Half Line Feed (**[ESC =]**): Advances the paper half the distance of the current line spacing.

This escape sequence is only valid if switch 5 is down (HP mode). If switch 5 is up (Alternate mode) you must change the line spacing and then send a line feed control code.

Half line feed is useful for printing subscripts and superscripts.

H<sub>2</sub>O  
a<sup>3</sup> = b<sup>2</sup> + c

The data used to generate the preceding example is:

H 0[ESC] = [CTL] M 2  
3 2[ESC] = [CTL] M a =b +c

- Form Feed ([CTL] L): Advances the paper to the top of the next form.

#### NOTE

The printer cannot sense the actual position of the paper. For form feed to advance the paper to the next perforation, top of form must be set correctly as described in the Operator's Section.

## Overstrike

There are two methods of overstriking text:

- Sending two lines of text separated only by a carriage return. This causes the printer to print the second line over the first line.

This method will work only if carriage return does not perform a line feed (see Carriage Return on page 2-1). If carriage return does perform a line feed, you must use the back space method for overstriking.

- Using back space. Each time the printer receives a back space control code, it moves the current active position one character position to the left before printing the next character. Therefore, if two characters are sent to the printer separated only by a back space, the second character is printed over the first.

## Graphics

Many computer systems allow you to draw graphs or pictures on your computer display using the computer's capabilities and a graphics software package. The computer then handles the details of copying the graphics data to the printer. You may, however, be interested in writing your own graphics software program. The following information provides the details of the ThinkJet graphics capabilities.

The ThinkJet printer is capable of printing in two modes: text mode and graphics mode. In text mode, the printer interprets each data byte it receives from the computer as an ASCII character. It then looks that character up in its internal character table and prints the dot pattern which it finds. In graphics mode, however, the data received from the computer directly specifies the dot pattern which is to be printed.

The ThinkJet uses a form of graphics called "dot-image" graphics. In this system, the paper can be thought of as consisting of a grid of dot positions. Graphics data specifies which of the dot positions should be printed and which should be left blank.

#### NOTE

Some computers automatically add control codes, such as carriage returns and line feeds, or blanks to the data being sent to the printer. These characters are necessary when printing text. In graphics mode, however, they may be interpreted as graphics data and give unexpected results. Before writing programs which generate graphics, you should consult the manual for your computer to determine how to prevent your computer from sending this extra data to the printer.

If switch 5 is DOWN (HP mode):

#### Graphics Density

The ThinkJet is capable of printing graphics in two different dot densities. The default dot density is 96 dots/inch in both the horizontal and vertical directions; the print region is 640 dots wide. The higher dot density is 192 dots/inch in the horizontal direction and 96 dots/inch in the vertical direction; the print region is 1280 dots wide. The escape sequence used to select high density graphics is `[ESC] * r 1280 S`. To return to the default graphics density use `[ESC] * r 640 S`. Once the graphics resolution is specified, it stays in effect until it is explicitly changed or the printer is reset.

#### Raster Dot Row

Graphics data is sent to the printer one byte (8 bits) at a time. Each bit specifies one dot position. If a bit is zero, the corresponding dot position is left blank. If a bit is one, a dot is printed at the corresponding position. In HP mode, graphics data bytes are sent to the printer in groups, where each group contains the graphics data for one "raster" (horizontal) dot row. The first (most significant) bit of a graphics data byte specifies the leftmost dot; the last (least significant) bit specifies the rightmost dot.

The escape sequence to transfer the data for one dot row is `[ESC] * b # W`. The value field, #, specifies the number of graphics data bytes which follow the escape sequence. For example, if the printer receives `[ESC] * b 20 W`, it interprets the next 20 bytes of data as specifying 160 dots (20 x 8 bits) of the current dot row. If less data is sent for a dot row than will fit in the print region, the rightmost dots of the row are left blank. If more data is sent than will fit in the print region, the extra data is ignored.

Paper advance occurs automatically between graphics dot rows; it is not necessary to send any paper advance control codes.

### Beginning and Ending Graphics Mode

If the printer has a partial line of text data in its buffer and it receives the raster dot row escape sequence, it terminates the line of text with a carriage return (but no line feed), prints it, and then accepts the graphics data. This may cause the graphics data to be printed over the text data.

To avoid printing graphics over text, send the escape sequence `[ESC] * r A` before sending any graphics data. This escape sequence causes any partial lines of text to be terminated with a carriage return and line feed. If there is no text in the buffer, this escape sequence has no effect.

When the printer receives graphics data, it places that data in its buffer. Normally the graphics data is not actually printed until the buffer contains 12 dot rows of default-density graphics or 6 dot rows of high-density graphics. To make sure all of the dot rows are printed and not still stored in the printer's buffer, send the escape sequence `[ESC] * r B` after sending all of the graphics data.

### Sample Graphics Program

The following is an example of a simple HP BASIC program which prints graphics.

Enter	Description
10 PRINT CHR\$(27)&"*r640S";	Select default graphics density
20 PRINT CHR\$(27)&"*rA";	Begin raster graphics
30 FOR I=1 TO 55	55 dot rows will be printed
40 PRINT CHR\$(27)&"*b5W";	Initiate a dot row of length 5 bytes
50 FOR J=1 TO 5	5 bytes = 40 dots
60 PRINT CHR\$(136);	Send 1 byte of graphics data
70 NEXT J	136 decimal = 10001000 binary
80 NEXT I	
90 PRINT CHR\$(27)&"*rB"	Terminate raster graphics

Printer output:



You may need to modify this program to make it run correctly on your computer. To produce the preceding graphics example using Microsoft BASIC, Version A2.00, use the following program:

Enter	Description
10 OPEN "LPT1:" AS #1 20 WIDTH #1,255	Prevent the computer from sending CR, LF
30 PRINT #1, CHR\$(27)+"*r640\$";	Select default graphics density
40 PRINT #1, CHR\$(27)+"*rA";	Begin raster graphics
50 FOR I= 1 TO 55	55 dot rows will be printed
60 PRINT #1, CHR\$(27)+"*b5W";	Initiate a dot row of length 5 bytes
70 FOR J= 1 TO 5	5 bytes = 40 dots
80 PRINT #1, CHR\$(136);	Send 1 byte of graphics data
90 NEXT J	136 decimal = 10001000 binary
100 NEXT I	
110 PRINT #1, CHR\$(27)+"*rB"	Terminate raster graphics

#### If switch 5 is UP (Alternate mode):

In Alternate mode, each byte of graphics data specifies an 8-dot high column. The first (most significant) bit specifies the top dot of the column; the last (least significant) bit specifies the bottom dot of the column. If a bit is zero, the corresponding dot position is left blank. If a bit is one, a dot is printed at the corresponding position.

You can specify the horizontal distance between adjacent columns as either 1/96 inch or 1/192 inch. The escape sequence `[ESC] K #1 #2` selects default-density graphics (1/96 inch between columns), `[ESC] L #1 #2` selects high-density graphics (1/192 inch between columns).

The 2-byte value field (#1 and #2) specifies the number of following bytes which are to be interpreted as graphics data. #1 and #2 are not interpreted as ASCII characters; they form a 16 bit binary number where #2 is the most significant byte and #1 is the least significant byte. For example, `[ESC] K CHR$(128) CHR$(1)` specifies that the next 384 bytes ( $128 + (256 * 1) = 384$ ) of data are graphics dot columns which are to be printed 1/96 of an inch apart.

Before sending any graphics data, line spacing should be set to 8 dot rows by the `[ESC] A CHR$(8)` escape sequence. After sending all of the graphics columns across one row, you must send a carriage return and line feed to the printer to cause it to advance the paper and return to the left margin.

Some computer systems do not have the capability of controlling the most significant bit of data bytes sent to the printer. If your computer system always clears this bit, you can still print graphics by setting line spacing to 7 dot rows (by either `[ESC] 1` or `[ESC] A CHR$(7)`) before sending graphics data.

## Selecting Unidirectional or Bidirectional Printing

The ThinkJet printer normally prints text bidirectionally. You can get slightly better alignment between lines of print by setting the printer to print unidirectionally (left to right only).

### If switch 5 is DOWN (HP mode):

The escape sequence `[ESC] & k 0 W` will force unidirectional printing. To return to bidirectional text printing, use `[ESC] & k 1 W`.

This escape sequence does not affect graphics printing; the printer always prints graphics unidirectionally.

### If switch 5 is UP (Alternate mode):

The escape sequence `[ESC] U 1` will force unidirectional printing. To return to bidirectional text printing, use `[ESC] U 0`.

This escape sequence does not affect graphics printing; the printer always prints graphics unidirectionally.

## End of Line Wrap-Around

If the printer is in wrap-around mode, the first character received which exceeds the line length of the printer forces a new line of print to be started. This causes long lines to be broken and printed as several lines. If the printer is not in wrap-around mode, characters which exceed the line length of the current print pitch are not printed.

**If switch 5 is DOWN (HP mode):**

The default is wrap-around mode disabled. The escape sequence `[ESC] & s 0 C` enables wrap-around mode, `[ESC] & s 1 C` disables wrap-around mode.

**If switch 5 is UP (Alternate mode):**

The printer is always in wrap-around mode; you cannot disable it.

## Linking Escape Sequences

**If switch 5 is DOWN (HP mode):**

You can link several escape sequences into one escape sequence string. For example, you can enable perforation skip mode and set line spacing to 8 lines per inch by entering either `[ESC] & ℓ 8 D` and `[ESC] & ℓ 1 L` or `[ESC] & ℓ 8 d 1 L`.

The two rules to follow when linking escape sequences are:

- The first two characters after `[ESC]` must be the same. In the example above these are `&` and `ℓ`. `[ESC]` and the first two characters following it are used only once in a string of linked escape sequences.
- The final character of the internal escape sequences becomes lower case. In the example above, `D` becomes `d`.

**If switch 5 is UP (Alternate mode):**

It is not possible to link escape sequences; each one must be sent exactly as it is specified in this manual.

## Display Functions Mode

Control codes and escape sequences are not normally printed; they are either recognized as commands and cause some action or they are ignored.

The display functions mode allows you to print control codes and escape sequences without executing them. This is useful if you are trying to determine exactly what control codes and escape sequences are being sent to your printer. The symbol which is printed for each control code can be found in Table D-1 of Appendix D.

In **Display Functions mode**, control codes are printed not executed.

Ⓕ

Ⓕ In ⒻDisplay Functions modeⒻ, control codesⒻ are printed Ⓕ&dDnotⒻ&d@ executed.Ⓕ

ⒻⒻZ

#### If switch 5 is DOWN (HP mode):

Display functions mode is enabled by **[ESC] Y** and disabled by **[ESC] Z**.

When in display functions mode, the only control codes or escape sequences executed are:

- Carriage Return, which is printed and then executed as a carriage return and line feed.
- **[ESC] Z**, which is printed and then executed.

The data used to generate the preceding example is:

In **[CTL]N Display Functions mode[CTL]O**, control codes are printed, **[ESC] &dDnot[ESC] &d@**, executed.

**[ESC] Y**

In **[CTL]N Display Functions mode[CTL]O**, control codes are printed, **[ESC] &dDnot[ESC] &d@**, executed.

**[ESC] Z**

#### If switch 5 is UP (Alternate mode):

There is no display functions mode; escape sequences and control codes are always executed.

## Self Test

#### If switch 5 is DOWN (HP mode):

Your ThinkJet printer can perform a self test to ensure that it is operating properly. The escape sequence **[ESC] z** causes it to perform a test of the electronics and then print one page of characters.

In addition, the Operator's Manual explains how to perform a power-up self test.

#### If switch 5 is UP (Alternate mode):

There is no escape sequence to cause a self test. The power-up self test described in the Operator's Manual must be used.

## Resets

The simplest way to return your printer to its default printing specifications is to turn the printer off for several seconds, then on. This causes the printer to read the mode select switches, reset all features to their default values, and set top of form to the current line.

### If switch 5 is DOWN (HP mode):

The escape sequence `[ESC] E` causes the printer to print whatever data is in the print buffer, reset all features to their default values, and, if the paper is not at the top of form, execute a form feed.

This escape sequence does not cause the mode select switches to be read. The printer will use the value it read when it was turned on.

### If switch 5 is UP (Alternate mode):

The escape sequence `[ESC] @` causes the printer to reset all features to their default values.

This escape sequence does not cause the mode select switches to be read. The printer will use the value it read when it was turned on.

## Ready to Print

The ThinkJet printer is now prepared for printing. The design of ThinkJet requires a minimum left and right margin of 1". This gives a fixed printing area of 6.7 inches, which can accommodate 80 characters in normal print mode. You can increase the margins (i.e., wider) by setting them from your computer. The printer is also pre-set to the following (default) printing specifications:

- 12 characters/inch
- 80 characters/line
- 6 lines/inch
- 66 lines/page

## Automatic Line Termination

Most computers terminate each line with a carriage return and a line feed. However, there are computers which terminate with either a carriage return or a line feed, but not both. In order for your printer to operate normally with these systems, you need to change the definition of the carriage return and line feed control codes. This can be done with either switches 1 and 2 on the rear panel of your printer (see Appendix A) or with the escape sequences of Table 2-1.

If switch 5 is DOWN (HP mode):

**Table 2-1**  
**Automatic Line Termination Escape Sequences**

Character* received by printer	Character(s) executed by printer	Escape Sequence
CR LF FF	CR LF FF	<code>[ESC] &amp; k 0 G</code>
CR LF FF	CR, LF LF FF	<code>[ESC] &amp; k 1 G</code>
CR LF FF	CR CR, LF CR, FF	<code>[ESC] &amp; k 2 G</code>
CR LF FF	CR, LF CR, LF CR, FF	<code>[ESC] &amp; k 3 G</code>

\*NOTE: CR = Carriage Return

LF = Line Feed

FF = Form Feed

These escape sequences override switches 1 and 2.

**If switch 5 is UP (Alternate mode):**

There are no escape sequences to change the definition of carriage return, line-feed, or form feed control codes. You must use switches 1 and 2 to specify their definition.

# Maintenance and Troubleshooting

Your ThinkJet printer is designed for durability. This chapter provides a few basic instructions on care and some simple troubleshooting instructions for printer malfunctions.

## Environmental Conditions

Your printer should be maintained and operated under the following environmental conditions:

- Operate only at temperatures from 50°F to 104°F (10°C to 40°C).
- Store only at temperatures from -4°F to 140°F (-20°C to 60°C).
- Operate only in relative humidity from 10% to 90%.

## Maintenance of the Print Head Cartridge

The print head cartridge is durable, disposable, and easy to maintain. Observe a few simple rules of care, and your print head cartridge should be trouble-free.

- Avoid touching the face of the print head cartridge with your fingers.
- Periodically check the ink level of the print head cartridge. Hold the cartridge up and view the bladder inside. If the bladder is collapsed, then the ink supply is nearly depleted and the cartridge needs to be replaced.

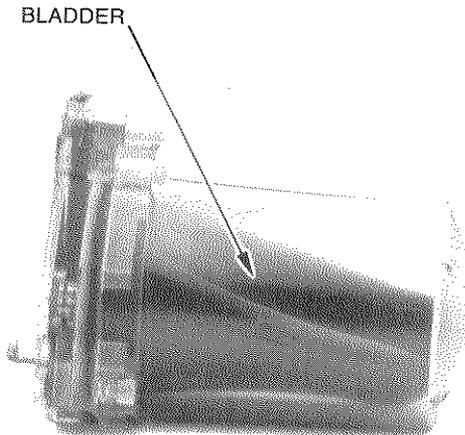


Figure 3-1 Empty Cartridge

- If the printer has not been used for a prolonged period, or if dust has accumulated on the face of the print head cartridge, wipe the face of the cartridge with a tissue to maintain best print quality. If print quality problems remain, see Table 3-1.

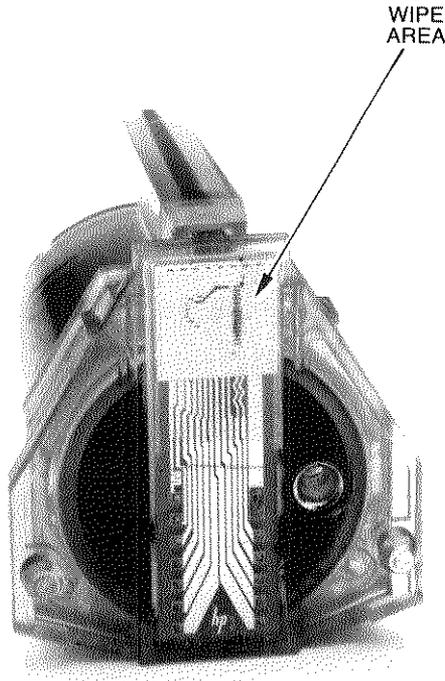


Figure 3-2 Wipe Area

- Avoid allowing the face of the print head cartridge to come into prolonged contact with other materials. This may cause the ink to wick out of the cartridge.
- Use the print head cartridge prior to the month and year of expiration printed on the package.

**WARNING**

The ink in the print head cartridge contains diethylene glycol which is HARMFUL IF SWALLOWED. Keep new or used cartridges OUT OF REACH OF CHILDREN.

## Maintenance of the Printer

Ideally your printer should be stored and operated in a clean, dust-free environment. However, it can endure some rugged use.

To remove dirt and smudges, damp wipe with a mild solution of dishwashing detergent and water. Never use harsh chemicals to clean the printer. Unplug the printer prior to cleaning.

Periodically clean the paper dust out of the printer.

## Troubleshooting

Table 3-1 contains some possible error conditions and recommended corrective action. In most instances, performing the corrective action described will eliminate the problem. If the problem persists, however, the printer should be returned for repair.

**Table 3-1**  
**Error Conditions**

Error Condition	Correction Action
1. Red power light off.	<ul style="list-style-type: none"> <li>• Ensure that the power module is plugged into a working outlet and the power switch is on. See Operator's Section (Power/Interface).</li> <li>• Ensure that the correct power module is used. (See Appendix E.)</li> </ul>
2. Yellow attention light on continuously.	<ul style="list-style-type: none"> <li>• Load paper into the printer. The attention light will begin flashing. See Operator's Section (Loading ThinkJet Paper).</li> </ul>

3. Yellow attention light flashing.	<ul style="list-style-type: none"><li>• Press the blue button. The carriage will move and the attention light will turn off. See Operator's Section (Loading ThinkJet Paper).</li><li>• Remove any obstruction from around the carriage and press the blue button again. See Operator's Section (Loading ThinkJet Paper).</li><li>• If the attention light continues flashing, the printer should be returned for repair.</li></ul>
4. Printer does not respond to computer.	<ul style="list-style-type: none"><li>• Ensure that the power light is on and the attention light is off. If this is not the case, refer to error conditions 1 through 3 above.</li><li>• Verify that the printer is operational by running the self test. See Operator's Section (Self Test).</li></ul>
5. The format of your printouts is incorrect. Lines may start in the wrong place or the top and bottom margins are excessive.	<ul style="list-style-type: none"><li>• Your computer may be sending all data bytes to the printer with the high bit set. If you are using the Roman-8 character set, control codes with the high bit set are not recognized. Try using one of the 7 bit character sets such as US ASCII (see Appendix D).</li><li>• Your printer is not correctly configured for your computer system. See Operator's Section (Power/Interface) for switch configurations or work through the instructions in Appendix A for setting the mode select switches of your printer.</li></ul>
6. Paper does not feed properly.	<ul style="list-style-type: none"><li>• Remove the paper from the printer and discard any that is crumpled.</li><li>• If you are using fanfold paper, verify that it can travel freely without catching, and that the right-side pinwheel is adjusted correctly for the width of your paper. See Operator's Section (Loading ThinkJet Paper).</li><li>• Reload the paper. See Operator's Section (Loading ThinkJet Paper).</li></ul>

7. Print quality is poor, rows of dots are missing from print-outs, or the carriage moves but produces no print.

- If the print head stops printing after a few lines, it was probably jarred in shipment and needs to be activated. See Operator's Section (Maintenance).
- Ensure that there is sufficient ink in the cartridge by viewing the bladder. If the bladder is collapsed, replace the cartridge. See Operator's Section (Maintenance).
- Ensure that the carriage latch is fully closed. See Operator's Section (Loading Cartridge).
- Ensure that you are using a recommended ink jet paper.
- Wipe the face of the print head using a tissue to remove any accumulated dust. See Operator's Section (Maintenance). If the print head cartridge has not been used for a prolonged period, moisten the tissue with water before wiping.
- Lightly wipe the electrical connector of the carriage using a cotton swab dipped in alcohol. See Operator's Section (Maintenance).
- If the problem continues, replace the print head cartridge.

CONNECTOR

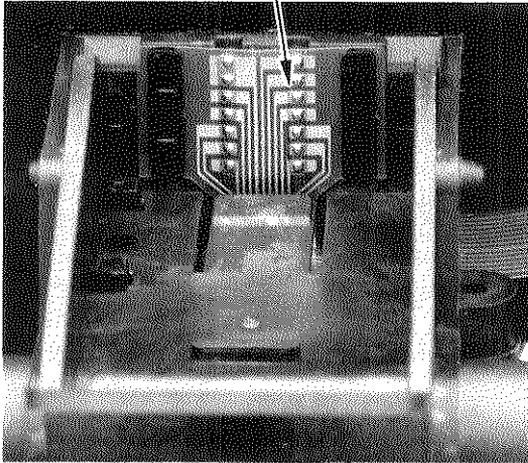


Figure 3-3 Carriage Electrical Connector



**Table A-1**  
**Mode Select Switches (1 through 5)**

Switch number and name	Up	Down
1 CR* definition	CR does CR, LF	CR does CR only
2 LF* definition	LF does CR, LF	LF does LF only
3 Perforation skip mode	1" perforation skip	no perforation skip
4 Page length	12" (304.8 mm)	11" (279.4 mm)
5 Control sequence mode	Alternate	HP

\*NOTE: CR = Carriage Return  
LF = Line Feed

**Table A-2**  
**Mode Select Switches (6 through 8)**

Switch Settings			Character Set
6	7	8	
down	down	down	Roman-8
up	down	down	United States ASCII
down	up	down	Swedish
up	up	down	IBM 8
down	down	up	French
up	down	up	German
down	up	up	United Kingdom
up	up	up	Spanish

## Setting the Mode Select Switches

The switch settings in Table A-3 can be used as a guide for configuring some computer systems.

**Table A-3**  
**Mode Select Configuration Guide**  
**(8½" x 11" paper, English language)**

Computer	Switch Settings							
	1	2	3	4	5	6	7	8
Hewlett-Packard	down	down	down	down	down	down	down	down
IBM PC/XT	down	down	down	down	*	up	up	down
Apple IIe	down	down	down	down	*	up	down	down

\*This switch is software dependent, see mode switch 5 description in following text.

If your computer system is not included in Table A-3, or the format of your printouts is incorrect, the following instructions will help you correctly configure your printer.

Before using these instructions, you must obtain some printout from your computer and printer. If you are going to use your printer with software such as a spreadsheet program or a word processor, use your software to generate some printout. Alternatively you may generate printout with a short BASIC program such as the following example.

```
10 FOR I = 1 TO 10
20 LPRINT "This is a line of sample output for testing my printer."
30 NEXT I
40 END
```

If your printer does not respond to your computer at all, try setting switch 6 on the rear panel of your printer up. If you still get no response, refer to the owner's manual for your computer or parallel printer interface card.

#### **NOTE**

The printer reads the switch settings only when it is first turned on. Therefore if you change any of the switch settings, you must turn the printer off for several seconds and back on before printing.

The switches are numbered from 1 (closest to the power switch) to 8 (farthest from the power switch). The remainder of this section describes, for each switch, conditions which may cause you to change the switch setting. If none of the conditions apply, leave the switch at its current setting.

#### **Switch 1 - Carriage Return (CR) Definition**

If your printer does not advance the paper between lines of print, set switch 1 up. The printer will add a line feed to each carriage return it receives.

If your printout is double spaced, set switch 1 down. The printer will not add a line feed to each carriage return.

#### **Switch 2 - Line Feed (LF) Definition**

If some lines of your printout start too far to the right, or only the first line is printed, set switch 2 up. This causes the printer to add a carriage return to each line feed it receives.

If some lines of your printout start too far to the left, set switch 2 down. The printer will not add a carriage return to each line feed.

**Switch 3 - Perforation Skip Mode**

If you are listing programs or using software which does not provide top and bottom margins in your printout, set switch 3 up. This will put the printer in perforation skip mode. In this mode the printer automatically provides top and bottom margins.

If you do not want top and bottom margins or you are using software such as a word processor which already provides margins, set switch 3 down. This turns off perforation skip mode.

**Switch 4 - Page Length**

If you are using 12" (304.8 mm) paper, set switch 4 up. This sets the printer's page length to 12 inches (304.8 mm).

If you are using 11" (279.4 mm) paper, set switch 4 down. This sets the printer's page length to 11 inches (279.4 mm).

**Switch 5 - Select HP or Alternate Control Sequence Mode**

If you are using software such as a word processor or graphics package that does not expect a Hewlett-Packard printer but does expect one of the following printers;

- Epson MX-80
- Epson MX-100
- IBM 80 CPS Printer
- IBM Graphics Printer

set switch 5 up. This puts your printer in Alternate Control Sequence Mode which will work correctly with many software packages.

If you are using software which expects a Hewlett-Packard printer or you are writing your own software, set switch 5 down. This puts your printer in HP Control Sequence Mode.

**Switches 6, 7, and 8 - Select Character Set**

The ThinkJet printer contains 8 different character sets. Switches 6, 7, and 8 together select which character set is being used for printouts. The 8 character sets and the switch settings used to select them are contained in the following table.

**Table A-4**  
**Character Set Selection**

Switch Settings			Character Set
6	7	8	
down	down	down	Roman-8
up	down	down	United States ASCII
down	up	down	Swedish
up	up	down	IBM 8
down	down	up	French
up	down	up	German
down	up	up	United Kingdom
up	up	up	Spanish

If you are using an HP computer system which is already configured for the language you want printed, use the Roman-8 character set. Otherwise select the appropriate language character set from the list.

For more details on the character sets, see Appendix D.

## Alternate Control Sequence Mode

The ThinkJet printer has two sets of control sequences: HP mode and Alternate mode. Mode selection is controlled by Switch 5 on the rear of the unit. Setting the switch in the UP position selects Alternate mode. HP recommends that your software be written for HP mode for two reasons:

- Your software can be leveraged through both the present and future Hewlett-Packard printer produce line, and
- Your system can have better performance. For example, single density graphics is 50% faster in HP mode than in Alternate mode.

If your system already uses an Epson printer or an IBM Graphics Printer, the use of ThinkJet's Alternate mode may save you development time, since you may not need changes in your software. However, care must be taken to be sure that your software does not depend on the physical characteristics of the printer.

Print Feature	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
<b>DISPLAY FUNCTIONS MODE</b>			
Display Functions on	<b>[ESC]</b> Y	27, 89	1B, 59
Display Functions off (default)	<b>[ESC]</b> Z	27, 90	1B, 60
<b>UNIDIRECTIONAL OR BIDIRECTIONAL PRINT</b>			
Unidirectional print	<b>[ESC]</b> & k 0 W	27, 38, 107, 48, 87	1B, 26, 6B, 30, 57
Bidirectional text print (default)	<b>[ESC]</b> & k 1 W	27, 38, 107, 49, 87	1B, 26, 6B, 31, 57
<b>PRINT POSITION CONTROLS</b>			
Line Feed	<b>[CTL]</b> J	10	0A
Carriage Return	<b>[CTL]</b> M	13	0D
Back Space	<b>[CTL]</b> H	8	08
Half Line Feed	<b>[ESC]</b> =	27, 61	1B, 3D
Form Feed	<b>[CTL]</b> L	12	0C
<b>GRAPHICS</b>			
Select low density graphics	<b>[ESC]</b> * r 640 S	27, 42, 114, 54, 52, 48, 83	1B, 2A, 72, 36, 34, 30, 53
Select high density graphics	<b>[ESC]</b> * r 1280 S	27, 42, 114, 49, 50, 56, 48, 83	1B, 2A, 72, 31, 32, 38, 30, 53
Raster dot row*	<b>[ESC]</b> * b # W	27, 42, 98, #, ..#, 87	1B, 2A, 62, #, ..#, 57
Begin raster graphics	<b>[ESC]</b> * r A	27, 42, 114, 65	1B, 2A, 72, 41
End raster graphics	<b>[ESC]</b> * r B	27, 42, 114, 66	1B, 2A, 72, 42

AUTOMATIC LINE TERMINATION				
Character** Received	Character(s) Executed	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
CR LF FF	CR LF FF	<u>ESC</u> & k 0 G	27, 38, 107, 48, 71	1B, 26, 6B, 30, 47
CR LF FF	CR, LF LF FF	<u>ESC</u> & k 1 G	27, 38, 107, 49, 71	1B, 26, 6B, 31, 47
CR LF FF	CR CR, LF CR, FF	<u>ESC</u> & k 2 G	27, 38, 107, 50, 71	1B, 26, 6B, 32, 47
CR LF FF	CR, LF CR, LF CR, FF	<u>ESC</u> & k 3 G	27, 38, 107, 51, 71	1B, 26, 6B, 33, 47
(switches 1 and 2 set default)				
<b>SELF TEST</b> Perform self test		<u>ESC</u> z	27, 122	1B, 7A
<b>RESET</b> Perform reset		<u>ESC</u> E	27, 69	1B, 45

\*When using the decimal or hexadecimal form of these escape sequences, you must substitute the decimal or hexadecimal form of each digit of the value field (#). For example, the character "7" is represented in ASCII as 55 decimal or 37 hexadecimal; the character "2" is represented in ASCII as 50 decimal or 32 hexadecimal (see Appendix D). Therefore the escape sequence ESC & ℓ 72 P has a decimal form of 27,38,108,55,50,80 and a hexadecimal form of 1B,26,6C,37,32,50.

\*\*NOTE: CR = Carriage Return  
 LF = Line Feed  
 FF = Form Feed



# Table of Alternate Mode Print Features

You may use the escape sequences and control codes of this table only if switch 5 on the rear panel of the printer is up. If switch 5 is down, you must use the escape sequences and control codes found in Appendix B.

Print Feature	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
<b>PRINT PITCHES</b>			
Expanded on	<b>CTL</b> N	14	0E
Expanded off (default)	<b>CTL</b> T	20	14
Compressed on	<b>CTL</b> O	15	0F
Compressed off (default)	<b>CTL</b> R	18	12
Expanded-compressed on	<b>CTL</b> N <b>CTL</b> O	14, 15	0E, 0F
Expanded-compressed off (default)	<b>CTL</b> T <b>CTL</b> R	20, 18	14, 12
<b>QUALITY MODE</b>			
Quality Mode on	<b>ESC</b> G	27, 71	1B, 47
Quality Mode off (default)	<b>ESC</b> H	27, 72	1B, 48
<b>BOLD PRINT</b>			
Bold Print on	<b>ESC</b> E	27, 69	1B, 45
Bold Print off (default)	<b>ESC</b> F	27, 70	1B, 46
<b>UNDERLINE</b>			
Underline on	<b>ESC</b> -1	27, 45, 49	1B, 2D, 31
Underline off (default)	<b>ESC</b> -0	27, 45, 48	1B, 2D, 30
<b>LINE SPACING</b>			
6 lines/inch (default)	<b>ESC</b> 2	27, 50	1B, 32
8 lines/inch	<b>ESC</b> 0	27, 48	1B, 30
7 dot row line spacing	<b>ESC</b> 1	27, 49	1B, 31
# dot row line spacing	<b>ESC</b> A CHR\$(#)	27, 65, #	1B, 41, (# Hex)
<b>PERFORATION SKIP</b>			
Set perf skip length (in lines)*	<b>ESC</b> N CHR\$(#)	27, 78, #	1B, 4E, (# Hex)
Perforation skip off (switch 3 sets default)	<b>ESC</b> O	27, 79	1B, 4F
<b>PAGE LENGTH</b>			
# lines/page*	<b>ESC</b> C CHR\$(#)	27, 67, #	1B, 43, (# Hex)
# inches/page* (switch 4 sets default)	<b>ESC</b> C CHR\$(0) CHR\$(#)	27, 67, 0, #	1B, 43, 0, (# Hex)

Print Feature	Escape Sequence or Control Code	ASCII Decimal Equivalent	ASCII Hexadecimal Equivalent
<b>PRINT POSITION</b>	<b>CONTROLS</b>		
Line Feed	<b>[CTL]</b> J	10 or 138	0A or 8A
Carriage Return	<b>[CTL]</b> M	13 or 141	0D or 8D
Back Space	<b>[CTL]</b> H	8 or 136	08 or 88
Form Feed	<b>[CTL]</b> L	12 or 140	0C or 8C
<b>GRAPHICS</b>			
Low density column graphics*	<b>[ESC]</b> K #1 #2	27, 75, #1, #2	1B, 4B, (#1 Hex), (#2 Hex)
High density column graphics*	<b>[ESC]</b> L #1 #2	27, 76, #1, #2	1B, 4C, (#1 Hex), (#2 Hex)
<b>RESET</b>			
Perform reset	<b>[ESC]</b> @	27, 64	1B, 40

\*When using the decimal or hexadecimal form of these escape sequences, you must substitute the hexadecimal form of the value field (#). The character tables in Appendix D can be used to find the hexadecimal form of decimal numbers. For example, the escape sequence **[ESC]** C CHR\$(48) is represented in decimal as 27, 67, 48. Table D-1 in Appendix D shows that the hexadecimal form of 48 is 30, so the hexadecimal form of **[ESC]** C CHR\$(48) is 1B, 43, 30.

## Character Sets

Your computer communicates with your printer by sending it a series of "data bytes" (numbers between 0 and 255). Each data byte value corresponds to either a control code (0-31, 127, 128-159, and 255) or a printing character (32-126, and 160-254).

When the printer receives a data byte corresponding to a printing character, it looks up the value in the current character table and prints the character which it finds. When the printer receives a data byte corresponding to a control code, it either executes the control code (8, 10, 12-15, and 27 are executed) or ignores it.

Some character sets are "7-bit" character sets, which only contain 128 characters. If the printer is using a 7-bit character set and it receives a data byte with a value greater than or equal to 128, it first subtracts 128 from the data byte and then looks the new value up in its character table. Other character sets are "8-bit" character sets, which contain 256 characters. If the printer is using an 8-bit character set, it does not modify the value of the data bytes before looking them up in the character table.

The ThinkJet printer contains eight different character sets, which are discussed in this appendix. Table A-4 of Appendix A shows the switch setting for selecting each of the different character sets.

## Roman-8

The Roman-8 character set is an 8-bit character set. In addition to all of the characters of the standard ASCII character set, shown in Table D-1, it contains the international characters and symbols which are displayed in Table D-2.

**Table D-1**  
**Roman-8 Characters (ASCII)**

CHAR.	DEC.	HEX.
CTL@	N <sub>U</sub>	0 00
CTL@	S <sub>H</sub>	1 01
CTLB	S <sub>X</sub>	2 02
CTLC	E <sub>X</sub>	3 03
CTLD	E <sub>T</sub>	4 04
CTLE	E <sub>G</sub>	5 05
CTLF	A <sub>X</sub>	6 06
CTLG	Φ	7 07
CTLH	B <sub>S</sub>	8 08
CTLI	H <sub>T</sub>	9 09
CTLJ	L <sub>T</sub>	10 0A
CTLK	V <sub>T</sub>	11 0B
CTLL	F <sub>T</sub>	12 0C
CTLM	C <sub>R</sub>	13 0D
CTLN	S <sub>O</sub>	14 0E
CTLO	S <sub>I</sub>	15 0F
CTLP	D <sub>L</sub>	16 10
CTLQ	D <sub>1</sub>	17 11
CTLR	D <sub>2</sub>	18 12
CTLS	D <sub>3</sub>	19 13
CTLT	D <sub>4</sub>	20 14
CTLU	N <sub>X</sub>	21 15
CTLV	S <sub>V</sub>	22 16
CTLW	E <sub>B</sub>	23 17
CTLX	C <sub>H</sub>	24 18
CTLY	E <sub>M</sub>	25 19
CTLZ	S <sub>B</sub>	26 1A
CTL[	E <sub>C</sub>	27 1B
CTL\	F <sub>S</sub>	28 1C
CTL]	G <sub>S</sub>	29 1D
CTL^	R <sub>S</sub>	30 1E
CTL_	U <sub>S</sub>	31 1F

CHAR.	DEC.	HEX.
	32	20
	33	21
"	34	22
#	35	23
\$	36	24
%	37	25
&	38	26
'	39	27
(	40	28
)	41	29
*	42	2A
+	43	2B
,	44	2C
-	45	2D
.	46	2E
/	47	2F
0	48	30
1	49	31
2	50	32
3	51	33
4	52	34
5	53	35
6	54	36
7	55	37
8	56	38
9	57	39
:	58	3A
;	59	3B
<	60	3C
=	61	3D
>	62	3E
?	63	3F

CHAR.	DEC.	HEX.
@	64	40
A	65	41
B	66	42
C	67	43
D	68	44
E	69	45
F	70	46
G	71	47
H	72	48
I	73	49
J	74	4A
K	75	4B
L	76	4C
M	77	4D
N	78	4E
O	79	4F
P	80	50
Q	81	51
R	82	52
S	83	53
T	84	54
U	85	55
V	86	56
W	87	57
X	88	58
Y	89	59
Z	90	5A
[	91	5B
\	92	5C
]	93	5D
^	94	5E
_	95	5F

CHAR.	DEC.	HEX.
`	96	60
a	97	61
b	98	62
c	99	63
d	100	64
e	101	65
f	102	66
g	103	67
h	104	68
i	105	69
j	106	6A
k	107	6B
l	108	6C
m	109	6D
n	110	6E
o	111	6F
p	112	70
q	113	71
r	114	72
s	115	73
t	116	74
u	117	75
v	118	76
w	119	77
x	120	78
y	121	79
z	122	7A
{	123	7B
	124	7C
}	125	7D
~	126	7E
␣	127	7F

NOTE: Characters DEC. 0-31, 127-159 and 255 are only printed when display functions are enabled.

**Table D-2  
Roman-8 Characters (Roman Extension)**

CHAR.	DEC.	HEX.
N <sub>1</sub>	128	80
S <sub>1</sub>	129	81
S <sub>2</sub>	130	82
E <sub>1</sub>	131	83
E <sub>2</sub>	132	84
E <sub>3</sub>	133	85
A <sub>1</sub>	134	86
Q	135	87
E <sub>4</sub>	136	88
H <sub>1</sub>	137	89
L <sub>1</sub>	138	8A
V <sub>1</sub>	139	8B
F <sub>1</sub>	140	8C
C <sub>1</sub>	141	8D
S <sub>3</sub>	142	8E
S <sub>4</sub>	143	8F
D <sub>1</sub>	144	90
D <sub>2</sub>	145	91
D <sub>3</sub>	146	92
D <sub>4</sub>	147	93
D <sub>5</sub>	148	94
N <sub>2</sub>	149	95
S <sub>5</sub>	150	96
E <sub>5</sub>	151	97
C <sub>2</sub>	152	98
L <sub>2</sub>	153	99
S <sub>6</sub>	154	9A
E <sub>6</sub>	155	9B
F <sub>2</sub>	156	9C
C <sub>3</sub>	157	9D
R <sub>1</sub>	158	9E
U <sub>1</sub>	159	9F

CHAR.	DEC.	HEX.
	160	A0
À	161	A1
Á	162	A2
Ê	163	A3
Ë	164	A4
Ï	165	A5
Î	166	A6
Ì	167	A7
Í	168	A8
Î	169	A9
Ï	170	AA
Ï	171	AB
Ï	172	AC
Û	173	AD
Ü	174	AE
£	175	AF
—	176	B0
	177	B1
	178	B2
°	179	B3
Ç	180	B4
ç	181	B5
Ñ	182	B6
ñ	183	B7
ï	184	B8
ÿ	185	B9
ÿ	186	BA
£	187	BB
¥	188	BC
§	189	BD
f	190	BE
ç	191	BF

CHAR.	DEC.	HEX.
ä	192	C0
é	193	C1
ò	194	C2
û	195	C3
à	196	C4
é	197	C5
ó	198	C6
ú	199	C7
à	200	C8
è	201	C9
ò	202	CA
ù	203	CB
ã	204	CC
ë	205	CD
ö	206	CE
ü	207	CF
Á	208	DC
í	209	D1
ø	210	D2
Æ	211	D3
â	212	D4
ï	213	D5
à	214	D6
æ	215	D7
Á	216	D8
ì	217	D9
Ô	218	DA
Û	219	DB
É	220	DC
ì	221	DD
ß	222	DE
Ô	223	DF

CHAR.	DEC.	HEX.
À	224	E0
Á	225	E1
ä	226	E2
ð	227	E3
đ	228	E4
ı	229	E5
ı	230	E6
Ó	231	E7
Ô	232	E8
Õ	233	E9
ó	234	EA
Š	235	EB
š	236	EC
Ú	237	ED
ÿ	238	EE
ÿ	239	EF
ƒ	240	F0
ƒ	241	F1
	242	F2
	243	F3
	244	F4
	245	F5
—	246	F6
$\frac{1}{4}$	247	F7
$\frac{1}{2}$	248	F8
$\frac{3}{4}$	249	F9
♀	250	FA
«	251	FB
■	252	FC
»	253	FD
±	254	FE
■	255	FF

**Table D-3  
IBM-8 Characters (ASCII)**

CHAR.	DEC.	HEX.
CTL@	N <sub>U</sub>	0 00
CTLA	S <sub>H</sub>	1 01
CTLB	S <sub>X</sub>	2 02
CTLC		3 03
CTLD		4 04
CTLE		5 05
CTLF		6 06
CTLG	Q	7 07
CTLH	B <sub>S</sub>	8 08
CTLI	H <sub>T</sub>	9 09
CTLJ	L <sub>F</sub>	10 0A
CTLK	V <sub>T</sub>	11 0B
CTLL	F <sub>F</sub>	12 0C
CTLM	C <sub>N</sub>	13 0D
CTLN	S <sub>O</sub>	14 0E
CTLO	S <sub>I</sub>	15 0F
CTLP	D <sub>L</sub>	16 10
CTLQ	D <sub>1</sub>	17 11
CTLR	D <sub>2</sub>	18 12
CTLS	D <sub>3</sub>	19 13
CTLT	D <sub>4</sub>	20 14
CTLU	N <sub>K</sub>	21 15
CTLV	S <sub>Y</sub>	22 16
CTLW	E <sub>B</sub>	23 17
CTLX	C <sub>N</sub>	24 18
CTLY	E <sub>M</sub>	25 19
CTLZ	S <sub>B</sub>	26 1A
CTL[	E <sub>C</sub>	27 1B
CTL\	F <sub>S</sub>	28 1C
CTL]	G <sub>S</sub>	29 1D
CTL^	R <sub>S</sub>	30 1E
CTL_	U <sub>S</sub>	31 1F

CHAR.	DEC.	HEX.
	32	20
!	33	21
"	34	22
#	35	23
\$	36	24
%	37	25
&	38	26
'	39	27
(	40	28
)	41	29
*	42	2A
+	43	2B
,	44	2C
-	45	2D
.	46	2E
/	47	2F
0	48	30
1	49	31
2	50	32
3	51	33
4	52	34
5	53	35
6	54	36
7	55	37
8	56	38
9	57	39
:	58	3A
;	59	3B
<	60	3C
=	61	3D
>	62	3E
?	63	3F

CHAR.	DEC.	HEX.
@	64	40
A	65	41
B	66	42
C	67	43
D	68	44
E	69	45
F	70	46
G	71	47
H	72	48
I	73	49
J	74	4A
K	75	4B
L	76	4C
M	77	4D
N	78	4E
O	79	4F
P	80	50
Q	81	51
R	82	52
S	83	53
T	84	54
U	85	55
V	86	56
W	87	57
X	88	58
Y	89	59
Z	90	5A
[	91	5B
\	92	5C
]	93	5D
^	94	5E
_	95	5F

CHAR.	DEC.	HEX.
'	96	60
a	97	61
b	98	62
c	99	63
d	100	64
e	101	65
f	102	66
g	103	67
h	104	68
i	105	69
j	106	6A
k	107	6B
l	108	6C
m	109	6D
n	110	6E
o	111	6F
p	112	70
q	113	71
r	114	72
s	115	73
t	116	74
u	117	75
v	118	76
w	119	77
x	120	78
y	121	79
z	122	7A
{	123	7B
	124	7C
}	125	7D
~	126	7E
■	127	7F

**Table D-4**  
**IBM-8 Characters (ASCII)**

CHAR.	DEC.	HEX.
Ç	128	80
ü	129	81
é	130	82
à	131	83
ä	132	84
å	133	85
á	134	86
ç	135	87
ê	136	88
ë	137	89
è	138	8A
ì	139	8B
í	140	8C
î	141	8D
Ã	142	8E
Ä	143	8F
É	144	90
æ	145	91
Æ	146	92
ó	147	93
ô	148	94
ò	149	95
ù	150	96
ú	151	97
ÿ	152	98
Û	153	99
Ü	154	9A
ç	155	9B
£	156	9C
¥	157	9D
	158	9E
f	159	9F

CHAR.	DEC.	HEX.
à	160	A0
í	161	A1
ó	162	A2
ú	163	A3
ñ	164	A4
Ñ	165	A5
ã	166	A6
õ	167	A7
¸	168	A8
	169	A9
	170	AA
$\frac{1}{2}$	171	AB
$\frac{1}{4}$	172	AC
¡	173	AD
«	174	AE
»	175	AF
	176	B0
	177	B1
	178	B2
	179	B3
	180	B4
	181	B5
	182	B6
	183	B7
	184	B8
	185	B9
	186	BA
	187	BB
	188	BC
	189	BD
	190	BE
	191	BF

CHAR.	DEC.	HEX.
	192	C0
	193	C1
	194	C2
	195	C3
	196	C4
	197	C5
	198	C6
	199	C7
	200	C8
	201	C9
	202	CA
	203	CB
	204	CC
	205	CD
	206	CE
	207	CF
	208	D0
	209	D1
	210	D2
	211	D3
	212	D4
	213	D5
	214	D6
	215	D7
	216	D8
	217	D9
	218	DA
	219	DB
	220	DC
	221	DD
	222	DE
	223	DF

CHAR.	DEC.	HEX.
	224	E0
ß	225	E1
	226	E2
	227	E3
	228	E4
	229	E5
	230	E6
	231	E7
	232	E8
	233	E9
	234	EA
	235	EB
	236	EC
	237	ED
	238	EE
	239	EF
	240	F0
±	241	F1
	242	F2
	243	F3
	244	F4
	245	F5
	246	F6
	247	F7
.	248	F8
	249	F9
	250	FA
	251	FB
	252	FC
	253	FD
■	254	FE
	255	FF

## International Character Sets

The ThinkJet printer contains seven, 7-bit, international character sets. These character sets are all very similar to characters 0 through 127 of the Roman-8 character set, found in Table D-1. Table D-3 shows the differences between Roman-8 and the seven international character sets.

**Table D-5**  
**International Character Sets**

Dec.	Roman-8	US ASCII	IBM-8	Swedish	French	German	UK	Spanish
35	#	#	#	#	£	#	£	£
36	\$	\$	\$	¤	\$	\$	\$	\$
39	,	,	,	,	,	,	,	,
64	@	@	@	É	à	§	@	§
91	[	[	[	Ä	°	Ä	[	¡
92	\	\	\	Ö	ç	Ö	\	Ñ
93	]	]	]	Å	§	Ü	]	¿
94	^	^	^	Ü	^	^	^	^
96	´	´	´	é	´	´	´	´
123	{	{	{	ä	é	ä	{	°
124				ö	ù	ö		ñ
125	}	}	}	å	è	ü	}	ç
126	~	~	~	ü	·	ß	—	~

## Power Modules

The power module supplied with your printer should match the plug requirement for your area. However, power modules with different plugs are available to operate printers in different countries. The part numbers for these power modules are listed below.

**Table E-1**  
**Power Modules**

<u>LINE VOLTAGE</u>	<u>AREA</u>	<u>PART NUMBER</u>
100 Volts	Japan	82241AJ
120 Volts	USA/Canada	82241A
220 Volts	Europe	82241AB
240 Volts	United Kingdom	82241AU
240 Volts	Australia	82241AG
240 Volts	South Africa	82241AA



## Parallel Interface Specifications

The ThinkJet printer uses a standard parallel printer interface which is compatible with many personal computers.

### Printer Connector Pin Assignments

The printer interface connector is compatible with a standard Amphenol-type, 36-pin connector.

The direction conventions used in Table F-1 are:

“In” - The signal is received by the printer from the computer.

“Out” - The signal is transmitted by the printer to the computer.

**Table F-1**  
**Pin Assignments**

Pin No.	Signal	Direction	Description
1	Strobe	In	A LOW pulse of width greater than 0.5 $\mu$ s causes the printer to read one byte of data.
2	DATA 1	In	Data bit 0
3	DATA 2	In	Data bit 1
4	DATA 3	In	Data bit 2
5	DATA 4	In	Data bit 3
6	DATA 5	In	Data bit 4
7	DATA 6	In	Data bit 5
8	DATA 7	In	Data bit 6
9	DATA 8	In	Data bit 7
10	$\overline{\text{Acknlg}}$	Out	The printer sends a LOW pulse to indicate that it has accepted a byte of data and is ready for more data.
11	Busy	Out	A HIGH logic level indicates the printer cannot receive data due to data entry, a full buffer, or error status.
12	OOP	Out	A HIGH logic level indicates the printer is out of paper.
13	Selected	Out	Always HIGH
14,15			Not used
16	Logic Gnd		

17,18			Not used
19 to 30	Logic Gnd		
31	$\overline{\text{Input Prime}}$	In	A LOW pulse of width greater than 40 $\mu\text{s}$ resets the printer and clears the print buffer.
32	$\overline{\text{Error}}$	Out	A LOW level indicates the printer has reached an error state: self test failed or carriage position lost.
33	Logic GND		
34 to 36			Not used

## Printer Timing Diagram

The timing diagram, Figure F-1, illustrates the data and handshake lines during transfer of one data byte to the printer. DATA 1 through DATA 8 and the Strobe line are driven by the computer; the Acknlg line is driven by the printer.

**Table F-2**  
Minimum and Typical Timing Intervals

Interval	Description	Minimum Value	Typical Value
$t_D$	Delay from DATA written to data $\overline{\text{Strobe}}$ .	0.5 $\mu\text{s}$	
$t_{SB}$	Data $\overline{\text{Strobe}}$ width.	0.5 $\mu\text{s}$	
$t_{ACK}$	Acknlg pulse width.		5 $\mu\text{s}$
$t_H$	Duration of valid data after $\overline{\text{Strobe}}$ .	0.5 $\mu\text{s}$	

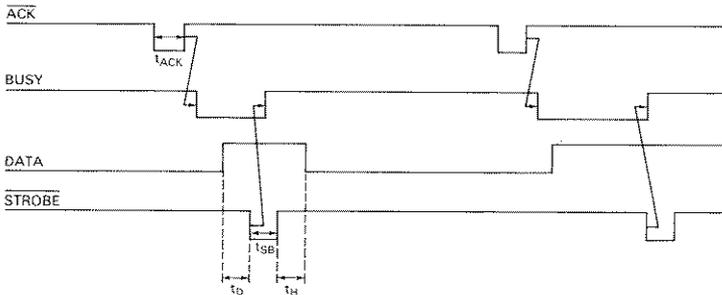


Figure F-1 Timing Diagram

## List of Accessories and Supplies

**Table G-1**  
**Accessories and Supplies**

Part No.	Description
92261A	Print Head Cartridge— Black only
51605R	Print Head Cartridge— Red only
51605G	Print Head Cartridge— Green only
51605B	Print Head Cartridge— Blue only
92261N	Ink Jet Paper — 2500 sheets, Z-fold
51630J	Ink Jet Paper— 500 sheets, single sheets
51630A	Ink Jet Paper— 500 sheets, Z-fold
92261S	Printer Stand — Clear Acrylic
	Power Modules— See page E-1.

### Parallel [Centronics] Interface

The parallel interface has an Amphenol 36-pin female connector on the rear of the unit. The table below lists the cables used to connect your printer to some popular personal computers.

**Table G-2**  
**Cables to connect a Parallel ThinkJet  
to popular Personal Computers**

PC	Cable P/N
HP 150 (w/45643A I/F)	HP 13242D
HP 80 Series	HP 82949A Parallel Printer I/F
HP 86	HP 82957A
IBM PC/XT	IBM Parallel Printer Cable
IBM PCjr	PCjr printer cable
Compaq	IBM Parallel Printer Cable
TI Professional	TI #2223106-001
Apple IIe Parallel Interface Card	Apple #590-0042

**Fast phones for price and availability by location:**

Austria: (0222) 25 00 or 615/616 • Belgium/Luxembourg: (02) 7 62 32 00 • Denmark: (02) 8166 40, Ext. 258 • Finland: (90) 4 55 0211 • France: (6) 9 28 32 64 • Greece: (01) 6473360-1 • Italy: (02) 92 36 91 or (06) 5 48 31 • Middle East: Athens –(01) 808-0359 • Norway: (02) 17 1180 • South Africa: Johannesburg –(011) 802 5111; Cape Town –(021) 53 7954; Durban –(031) 28 4178 • Spain: (01) 6 38 4013 • Sweden: (08) 750 20 28 • The Netherlands: (020) 47 0639 • Switzerland: (057) 312254/59 • United Kingdom: (0734) 69 72 01 • United States: 800-538-8787; California –408-738-4133 • West Germany: 0130 33 22.

## Warranty and Service Information

### Warranty Information

The complete 1 year limited warranty statement is included in the front of this manual. Additional copies may be obtained from any authorized Hewlett-Packard dealer, or the sales and service office where you purchased your printer.

If you have any questions concerning this warranty, please contact an authorized Hewlett-Packard dealer or a Hewlett-Packard sales and service office, listed in the back of this manual. Should you be unable to contact them, please contact:

• **In the United States:**

Hewlett-Packard Company  
Personal Computer Group  
Customer Support  
11000 Wolfe Road  
Cupertino, CA 95014  
Telephone: (503) 758-1010

Toll-Free Number: (800) FOR-HPPC (800 367-4772)

• **In Europe:**

Hewlett-Packard S.A.  
150, route de Nant-d'Avril  
P.O. Box CH-1217 Meyrin 2  
Geneva  
Switzerland  
Telephone: (022) 83 81 11

Note: Do **not** send units to this address for repair.

• **In other countries:**

Hewlett-Packard Intercontinental  
3495 Deer Creek Rd.  
Palo Alto, CA 94304  
U.S.A.  
Telephone: (415) 857-1501

Note: Do **not** send units to this address for repair.

## How to Obtain Repair Service

For information on service in your area, contact an authorized HP dealer, or the nearest Hewlett-Packard service facility listed in the back of this manual under Sales & Support Offices.

If your printer malfunctions and repair is required, you can help assure efficient servicing by having the following items with your printer at the time of service:

- A description of the configuration of the system you were using at the time of failure.
- A brief description of the malfunction symptoms for the service personnel.
- Printouts or other material that illustrate the problem area(s).
- A copy of the sales slip or other proof of purchase to establish the warranty coverage period.

## Serial Number

Each printer carries an individual serial number. It is a good idea to keep a separate record of this number. Should your printer be stolen or lost, the serial number is required for insurance claims and is often helpful for tracing and recovery. Hewlett-Packard does not maintain records of individual owners' names and printer serial numbers.

## General Shipping Instructions

Should you ever need to ship the printer, be sure that all components are packed in a protective package (use the original shipping case) to avoid in-transit damage. We suggest that you always insure shipments.

If you happen to be outside of the country where you bought your printer, contact the nearest authorized dealer or local Hewlett-Packard office for shipping instructions. All customs and duty charges are your responsibility.

# Application Notes (Hardware and Software)

A variety of interface options and extensive software support allow you to use the ThinkJet Printer with most major personal computers—Hewlett-Packard Touchscreen PC's and The Portable, the IBM Family, and Apple's Macintosh, IIc and IIe, to name just a few. Feature definition and set up can vary between manufacturers. Because of this, specific hardware and software documentation has been specially written to facilitate the set up and use of your ThinkJet Printer with your application.

The following list of Application Notes is complete as of April, 1985. New Application Notes will be added on a periodic basis. Ask for the application notes that meet your needs at your local HP Dealer. Your HP Dealer will also have an updated list should you find that your application is not listed here.

## Hardware Application Notes

### IBM

Connecting the ThinkJet Printer:

- to an IBM PC, XT (Serial Interface) 5954-2901(54)
- to an IBM PC XT (Parallel Interface) 5954-2905(54)
- to an IBM PCjr (Parallel Interface) 5954-2909(54)
- to an IBM PCjr (Serial Interface) 5954-2912(54)

### Apple

Connecting the ThinkJet Printer:

- to an Apple II+, Apple IIe (Parallel Interface) 5954-2902(54)
- to an Apple IIc (Serial Interface) 5954-2903(54)
- to an Apple II+, IIc (Serial Interface) 5954-2904(54)
- ThinkJet Works on Macintosh 5954-6121(54)

### Hewlett-Packard

Connecting the ThinkJet Printer:

- to an HP 150 A/B (Serial Interface) 5954-2906(54)
- to an HP 150 A/B (HP-IB Interface) 5954-2907(54)
- to an HP 110 (HP-IL Interface) 5954-2908(54)
- to an HP 150 A/B (Parallel Interface) 5954-2910(54)
- to an HP 150 A/B (HP-IL Interface) 5954-2911(54)

## Software Application Notes

**IBM (Serial Interface)**

IBM Writing Assistant on the IBM PCjr	5954-6106(54)
IBM Filing Assistant on the IBM PCjr	5954-6107(54)
IBM Reporting Assistant on the IBM PCjr	5954-6108(54)
IBM Graphing Assistant on the IBM PCjr	5954-6109(54)
Lotus 1-2-3® on the IBM PCjr	5954-6110(54)
WordStar® on the IBM PCjr	5954-6111(54)
Multiplan® on the IBM PCjr	5954-6112(54)
Andrew Tobias Managing Your Money™ on the IBM PCjr	5954-6115(54)
Bank Street Writer® on the IBM PCjr	5954-6118(54)

**Apple (Parallel Interface)**

<i>pfs</i> ®:write on the Apple IIe	5954-2917(54)
WordStar® on the Apple IIe	5954-2919(54)
<i>pfs</i> ®:report on the Apple IIe	5954-2924(54)
Bank Street Writer® on the Apple IIe	5954-2934(54)
Apple® Writer II on the Apple IIe	5954-2941(54)
Multiplan® on the Apple IIe	5954-2942(54)
<i>pfs</i> ®:file on the Apple IIe	5954-2944(54)
Apple® Works on the Apple IIe	5954-2945(54)
<i>pfs</i> ®:graph on the Apple IIe	5954-2946(54)

**Apple (Serial Interface)**

Homeward on the Apple IIc	5954-2913(54)
DOLLAR AND SENSE™ on the Apple IIc	5954-6113(54)
Bank Street Writer® on the Apple IIc	5954-6114(54)
Apple® Works on the Apple IIc	5954-6116(54)
The Home Accountant™ on the Apple IIc	5954-6117(54)
WORD JUGGLER™ on the Apple IIc	5954-6119(54)
WORD HANDLER II™ on the Apple IIc	5954-6120(54)

**Hewlett-Packard (HP-IB Interface)**

MultiMate™ on the HP 150 A/B	5954-2916(54)
Microsoft® Word on the HP 150 A/B	5954-2920(54)
MemoMaker on the HP 110 (HP-IL)	5954-2921(54)
WordStar® on the HP 150 A/B	5954-2922(54)
Lotus 1-2-3® on the HP 150 A/B and the HP 110 (HP-IL)	5954-2923(54)
dBase II™ on the HP 150 A/B	5954-2928(54)
Diagraph™ on the HP 150 A/B	5954-2929(54)
MemoMaker on the HP 150 A/B	5954-2947(54)
Multiplan® on the HP 150 A/B	5954-2949(54)
Picture Perfect™ on the HP 150 A/B	5954-2950(54)

## IBM (Parallel Interface)

<i>pfs</i> ®:graph on the IBM PC,XT	5954-2918(54)
<i>pfs</i> ®:write on the IBM PC, XT	5954-2925(54)
MultiMate™ on the IBM PC, XT	5954-2926(54)
TK!Solver™ on the IBM PC, XT	5954-2927(54)
<i>pfs</i> ®:file on the IBM PC, XT	5954-2930(54)
Lotus 1-2-3® on the IBM PC, XT	5954-2931(54)
Volkswriter Deluxe™ on the IBM PC, XT	5954-2932(54)
Multiplan® on the IBM PC, XT	5954-2933(54)
Symphony® on the IBM PC, XT	5954-2935(54)
<i>pfs</i> ®:report on the IBM PC, XT	5954-2936(54)
Framework™ on the IBM PC, XT	5954-2937(54)
Microsoft® Word on the IBM PC, XT	5954-2938(54)
WordStar® on the IBM PC, XT	5954-2939(54)
dBase II™ on the IBM PC, XT	5954-2940(54)
dBase III™ on the IBM PC, XT	5954-2943(54)
EasyWriter II™ System on the IBM PC, XT	5954-2948(54)

1-2-3 and Symphony are registered trademarks of Lotus Development Corporation. dBase II, dBase III, and Framework are trademarks of Ashton-Tate, Inc. MultiMate is a registered trademark of MultiMate International Corporation. *pfs* is a registered trademark of Software Publishing Corporation. Volkswriter Deluxe and Volkswriter Scientific are trademarks of Lifetree Software, Inc. WordStar is a registered trademark of MicroPro International Company. Supercalc III is a trademark of Sorcium/IUS. Microsoft and Multiplan are registered trademarks of Microsoft Corporation. DOLLARS AND SENSE is a trademark of Monogram. Bank Street Writer is a trademark of Brøderbund Software, Inc. IBM is a registered trademark of International Business Machines Corporation. Managing Your Money is a trademark of Micro Education Corporation of America. Apple Works, MacWRITE and MacPAINT are trademarks of Apple Computer, Inc. The Home Accountant is a trademark of Continental Software Company. WORD JUGGLER is a trademark of Quark, Inc. WORD HANDLER II is a trademark of Advanced Logic Systems. HOMEWORD is a trademark of Sierra On-Line, Inc. Microsoft and Multiplan are registered trademarks of Microsoft Corporation. SoftStyle and Jetstart are trademarks of SoftStyle, Inc.



# Index

Page numbers in **bold type** indicate primary references; page numbers in standard type indicate secondary references.

## A

- Accessories . . . . . G-1
- Alternate Controls Mode . . . . . 1-3, A-1, **A-3**, C-1
- Alternate Control Sequence Mode . . . . . A-5
- ASCII . . . . . 1-2, 2-3, A-1, **A-4**, **D-2**, **D-4**
- Attention (Yellow) Light . . . . . 3-3, 3-4
- Automatic Line Termination . . . . . 2-1, **2-9**, B-3

## B

- Back Space . . . . . 2-1, 2-2, B-2, C-2
- Battery Pack Maintenance . . . . . 3-1
- Bidirectional Print . . . . . **2-6**, B-2, C-1
- Blue Button . . . . . 1-5, 3-3, 3-4
- Bold Print . . . . . **1-6**, 1-7, B-1, C-1

## C

- Cable . . . . . Inside Back Cover
- Carriage Return . . . . . 2-1, 2-2 thru 2-6, 2-8, 2-10, A-1, **A-3**, B-2, C-2
- Character Sets . . . . . 3-4, A-1, **A-4**, **D-1 thru D-6**
- CHR\$( ) Function . . . . . 1-3
- Control Codes . **1-1 thru 1-3**, 1-5, 2-1, 2-2, 2-7 thru 2-10, B-1, B-2, C-1, C-2
- Control Sequence Modes . . . . . **1-3**, A-1, **A-3**
- Current Active Position . . . . . 2-1, 2-2

## D

- Default Printing Specifications . . . . . 2-9
- Display Functions . . . . . 2-7, **2-8**, B-2

## E

- Environmental Conditions . . . . . 3-1
- Error Conditions . . . . . **3-3 thru 3-5**
- Escape Sequences **1-1**, 1-2 thru 1-10, 2-1 thru 2-10, **B-1 thru B-3**, C-1, C-2
  - Linking . . . . . 2-7

## F

- Form Feed
  - Button . . . . . 1-8
  - Control . . . . . 1-8, 2-2, 2-10, B-2, C-2

## G

- Graphics . . . . . **2-2 thru 2-6**, B-2, C-2

## H

- Half Line Feed . . . . . 2-1, 2-2, B-2
- HP Controls Mode . . . . . 1-3, A-1, A-3, B-1

## I

- IBM-8 Characters (ASCII) . . . . . D-4
- IBM Graphics Printer Functions Not in ThinkJet . . . . . A-6
- Interface Cables . . . . . G-1
- Interference . . . . . Inside Back Cover, 3-6

## L

- Line Feed
  - Control . . . . . 2-1, 2-9, 2-10, A-1, A-3, B-2, C-2
- Line Spacing . . . . . 1-10, 1-11, 2-1, 2-6, B-1, C-1

## M

- Maintenance
  - Print Head Cartridge . . . . . 3-1, 3-2, 3-5
  - Printer . . . . . 3-3
- Margins (Horizontal) . . . . . 2-9
- Margins (Vertical) . . . . . 1-8, 2-9, 3-4, A-3
- Mixing Modes . . . . . 1-7
- Mode Select Switches . . . . . 1-1, 1-3, A-1 thru A-4
  - Configuration Guide . . . . . A-2

## O

- Operating Conditions . . . . . 3-1
- Overstrike . . . . . 2-2

## P

- Page Length . . . . . 1-9, 1-10, A-1, A-3, B-1, C-1
- Paper . . . . . 3-5, G-1
  - Advance . . . . . 2-1, 2-2, 2-4, 2-6
  - Dust . . . . . 3-5
  - Fanfold . . . . . G-1
  - Ink Jet . . . . . 3-5, G-1
  - Out of . . . . . F-1
  - Single Sheet . . . . . G-1
- Parallel Interface . . . . . F-1, F-2, G-1
- Perforation Skip . . . . . 1-8, 1-9, 2-9, A-1, A-3, B-1, C-1
- Power Modules . . . . . E-1
- Power (Red) Light . . . . . 3-3
- Print Head Cartridge . . . . . 3-1, 3-2, 3-5, F-1
- Print Pitches . . . . . 1-4, 1-5, B-1, C-1
- Print Quality . . . . . 1-5
- Printer Stand . . . . . F-1

Printing Self Test . . . . .	2-8
<b>Q</b>	
Quality Mode . . . . .	1-5, 1-6
<b>R</b>	
Repair. . . . .	3-3, H-2
Reset. . . . .	2-9, B-3, C-2, F-2
<b>S</b>	
Self Test . . . . .	2-8, B-3, F-2
Serial Number . . . . .	H-2
Service Information. . . . .	H-1
Shipping Instructions . . . . .	H-2
Storing Conditions . . . . .	3-1, 3-3
Subscripts . . . . .	2-2
Superscripts . . . . .	2-2
Supplies. . . . .	F-1
<b>T</b>	
Text Length . . . . .	1-8, 1-9, 1-10, B-1
Top of Form. . . . .	1-7, 1-8, 2-9
Troubleshooting. . . . .	3-3
<b>U</b>	
Underlining . . . . .	1-7, B-1, C-1
Unidirectional Print . . . . .	2-6, B-2, C-1
<b>W</b>	
Warranty Information . . . . .	H-1
Wrap-Around . . . . .	2-7, B-1



# SALES & SUPPORT OFFICES

Arranged alphabetically by country

## Product Line Sales/Support Key

Key Product Line

A Analytical

CM Components

C Computer Systems Sales only

CH Computer Systems Hardware Sales and Services

CS Computer Systems Software Sales and Services

E Electronic Instruments & Measurement Systems

M Medical Products

P Personal Computation Products

\* Sales only for specific product line

\*\* Support only for specific product line

**IMPORTANT:** These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

*HP distributors are printed in italics.*

## HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

### AFRICA AND MIDDLE EAST

Hewlett-Packard S.A.  
Mediterranean and Middle East  
Operations

Afrifa Centre

32 Kilissias Ave.

Paradissos-Amarousion, ATHENS

Greece

Tel: 682 88 11

Tel: 21-6588 HPAT GR

Cable: HEWPACKSA Athens

### NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.  
7, Rue du Bois-du-Lan

CH-1217 MEYRIN 2, Switzerland

Tel: (022) 83 12 12

Tel: 27835 hpse

Cable: HEWPACKSA Geneva

### ASIA

Hewlett-Packard Asia Ltd.

47/F, 26 Harbour Rd.,

Wanchai, HONG KONG

G.P.O. Box 863, Hong Kong

Tel: 5-820833

Tel: 76793 HPA HX

Cable: HPASIAL TD

### CANADA

Hewlett-Packard (Canada) Ltd.

687 Goreway Drive

MISSISSAUGA, Ontario L4V 1M8

Tel: (416) 678-9430

Tel: 610-492-4246

### EASTERN EUROPE

Hewlett-Packard Ges.m.b.H.

Liebigasse 1

P.O. Box 72

A-1222 VIENNA, Austria

Tel: (222) 2365110

Tel: 1 3 4425 HEPA A

### NORTHERN EUROPE

Hewlett-Packard S.A.

Uilensteede 475

P.O. Box 959

NL-1180 AZ AMSTELVEEN

The Netherlands

Tel: 20 437711

### SOUTH EAST EUROPE

Hewlett-Packard S.A.

World Trade Center

110 Avenue Louis Carot

1215 Cointrin, GENEVA, Switzerland

Tel: (022) 96 96 51

Tel: 27225 hpse.

### EASTERN USA

Hewlett-Packard Co.

4 Choke Cherry Road

ROCKVILLE, MD 20850

Tel: (301) 258-2000

### MIDWESTERN USA

Hewlett-Packard Co.

5201 Tolliver Drive

ROLLING MEADOWS, IL 60008

Tel: (312) 255-9800

### SOUTHERN USA

Hewlett-Packard Co.

2000 South Park Place

P.O. Box 105005

ATLANTA, GA 30346

Tel: (404) 353-1500

### WESTERN USA

Hewlett-Packard Co.

3539 Lanarkshire Blvd.

P.O. Box 3919

LOS ANGELES, CA 91604

Tel: (213) 506-3700

### OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.

Intercontinental headquarters

3495 Deer Creek Road

PALO ALTO, CA 94304

Tel: (415) 857-1501

Tel: 034-8300

Cable: HEWPACK

### ANGOLA

Electra

Empresa TÁcnica de Equipamentos

R. Barbosa Rodrigues, 411 DT.

Caixa Postal 648?

LUANDA

Tel: 35515.35516

E/P

### ARGENTINA

Hewlett-Packard Argentina S.A.

Avenida Santa Fe 2035

Martinez 1640 BUENOS AIRES

Tel: 798-5725, 792-1293

Cable: HEWPACKARG

A.E.CH.CS.P

### AUSTRALIA

#### Adelaide, South Australia

Office

Hewlett-Packard Australia Ltd.

153 Greenhill Road

FARKSIDE, S.A. 5063

Tel: 272-5911

Tel: 82536

Cable: HEWPARD Adelaide

A\*,CH,CM,CS,E,M,P

#### Brisbane, Queensland

Office

Hewlett-Packard Australia Ltd.

13 Payne Road

THE GAP, Queensland 4061

Tel: 30-4133

Tel: 42133

Cable: HEWPARD Brisbane

A,CH,CS,CM,E,M,P

#### Canberra, Australia

Capital Territory

Office

Hewlett-Packard Australia Ltd.

121 Wolfongong Street

FYSHWICK, A.C.T. 2609

Tel: 80 4244

Tel: 62650

Cable: HEWPARD Canberra

A,CH,CM,CS,E,P

#### Melbourne, Victoria

Office

Hewlett-Packard Australia Ltd.

31-41 Joseph Street

BLACKBURN, Victoria 3130

Tel: 895-2895

Tel: 31-024

Cable: HEWPARD Melbourne

A,CH,CM,CS,E,M,P

#### Perth, Western Australia

Office

Hewlett-Packard Australia Ltd.

261 Stirling Highway

CLAREMONT, W.A. 6010

Tel: 383-2188

Tel: 93859

Cable: HEWPARD Perth

A,CH,CM,CS,E,M,P

### Sydney, New South

Wales Office

Hewlett-Packard Australia Ltd.

17-23 Talavera Road

P.O. Box 308

NORTH RYDE, N.S.W. 2113

Tel: 888-4444

Tel: 21561

Cable: HEWPARD Sydney

A,CH,CM,CS,E,M,P

### AUSTRIA

Hewlett-Packard Ges.m.b.H.

Grottenhofstrasse 94

A-9052 GRAZ

Tel: (0316) 291 5 66

Tel: 32375

CH,E

Hewlett-Packard Ges.m.b.H.

Liebigasse 1

P.O. Box 72

A-1222 VIENNA

Tel: (022) 23 65 11-0

Tel: 134425 HEPA A

A,CH,CM,CS,E,M,P

### BAHRAIN

Office

P.O. Box 557

Manama

BAHRAIN

Tel: 25503-255950

Tel: 64419

P

Wael Pharmacy

P.O. Box 648

BAHRAIN

Tel: 256120

Tel: 0530 WAEI BN

E,M

### BELGIUM

Hewlett-Packard Belgium S.A./N.V.

Bldv de la Woluwe, 100

Woluwedal

B-1200 BRUSSELS

Tel: (02) 762-32-00

Tel: 23-484 paloben brv

A,CH,CM,CS,E,M,P

### BERMUDA

Applied Computer Technologies

Atlantic House Building

Par-La-Ville Road

Hamilton 5

Tel: 295-1616

P

### BRAZIL

Hewlett-Packard do Brasil

I.E.C. Ltda.

Avameda Rio Negro, 750

Alphaville

06403 BARBERI SP

Tel: (011) 421-1311

Tel: (011) 33672 HPBR-BR

Cable: HEWPACK Sao Paulo

A,CH,CM,CS,E,M,P

## SALES &amp; SUPPORT OFFICES

Arranged alphabetically by country

**BRAZIL (Cont'd)**

Hewlett-Packard do Brasil  
L.C. Ltda.  
Avenida Epitacio Pessoa, 4664  
22471 RIO DE JANEIRO-RJ  
Tel: (021) 286 0237  
Telex: 021-21905 HPBR-BR  
Cable: HEWPADK Rio de Janeiro  
A.CH.CM.E.M.P.\*  
Convex/Van Den  
Rua Jose Bonifacio  
468 Todos Os Santos  
CEP 20771  
RIO DE JANEIRO, RJ  
Tel: 240-7121, 591-4946  
Telex: 33487  
ANAMED I C E I Ltda  
Rua Rago, 103  
04012 SAO PAULO  
Tel: (011) 570-6726  
Telex: 021-21905 HPBR-BR  
M

**CANADA**

**Alberta**  
Hewlett-Packard (Canada) Ltd.  
3030 3rd Avenue N.E.  
CALGARY, Alberta T2A 6T7  
Tel: (403) 235-3100  
A.CH.CM.E.\* M.P.\*  
Hewlett-Packard (Canada) Ltd.  
11120-178th Street  
EDMONTON, Alberta T5S 1P2  
Tel: (403) 486-6666  
A.CH.CM.CS.E.M.P

**British Columbia**

Hewlett-Packard (Canada) Ltd.  
10691 Shellbridge Way  
RICHMOND,

British Columbia V6X 2W7  
Tel: (604) 270-2277  
Telex: 610-922-5059  
A.CH.CM.CS.E.\* M.P.\*

Hewlett-Packard (Canada) Ltd.  
121 - 3350 Douglas Street  
VICTORIA, British Columbia V8Z 3L1  
Tel: (604) 381-6616  
CH,CS

**Manitoba**

Hewlett-Packard (Canada) Ltd.  
1825 Inkster Blvd.  
WINNIPEG, Manitoba R3H 0Y1  
Tel: (204) 796-6701  
A.CH.CM.E.M.P.\*

**New Brunswick**

Hewlett-Packard (Canada) Ltd.  
37 Shediac Road  
MONCTON, New Brunswick E1A 2R6  
Tel: (506) 855-2841  
CH,CS

**Nova Scotia**

Hewlett-Packard (Canada) Ltd.  
Suite 111  
900 Windmill Road  
DARTMOUTH, Nova Scotia B2Y 3Z6  
Tel: (902) 469-7820  
CH,CM,CS,E\*,M.P.\*

**Ontario**

Hewlett-Packard (Canada) Ltd.  
3325 N. Service Rd., Unit 6  
BURLINGTON, Ontario P3A 2A3  
Tel: (416) 335-8644  
CS,M\*

Hewlett-Packard (Canada) Ltd.  
495 Days Road  
KINGSTON, Ontario K7M 5R4  
Tel: (613) 384-2088  
CH,CS

Hewlett-Packard (Canada) Ltd.  
552 Newbold Street  
LONDON, Ontario N6E 2S5  
Tel: (519) 686-9181  
A.CH.CM.E.\* M.P.\*

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
MISSISSAUGA, Ontario L4V 1M8  
Tel: (416) 678-9430  
A.CH.CM.CS.E.M.P

Hewlett-Packard (Canada) Ltd.  
2670 Queensview Dr.  
OTTAWA, Ontario K2B 8K1  
Tel: (613) 820-6483  
A.CH.CM.CS.E.\* M.S.P.\*

Hewlett-Packard (Canada) Ltd.  
1835 Lasalle Boulevard  
SUDBURY, Ontario P3A 2A3  
Tel: (705) 560-5459  
CH

Hewlett-Packard (Canada) Ltd.  
220 Yorkland Blvd. Unit #11  
WILLOWDALE, Ontario M2J 1R5  
Tel: (416) 499-8333  
CH

**Quebec**

Hewlett-Packard (Canada) Ltd.  
17500 South Service Road  
Trans-Canada Highway  
KIRKLAND, Quebec J9J 2M5  
Tel: (514) 697-4292  
A.CH.CM.CS.E.M.P.\*

Hewlett-Packard (Canada) Ltd.  
1150 Rue Claire Fontaine  
QUEBEC CITY, Quebec G1R 5G4  
Tel: (418) 648-0726  
CH,CS

Hewlett-Packard (Canada) Ltd.  
170-130 Robin Crescent  
SASKATOON, Saskatchewan S7J 6M7  
Tel: (306) 242-3702  
CH,CS

**CHILE**

ASC Ltda.  
Austria 2041  
SANTIAGO  
Tel: 223-5946, 220-6148  
Telex: 348152 ASC/CK  
P.C

Jorge Calcaqui y Cia Ltda.  
Av. Italia 834 Santiago  
Santiago 16475  
SANTIAGO 9  
Tel: 222-0222  
Telex: 440285 JCYCL/CZ  
CM,E,M

**Metrolab S.A**

Montañas 454 of. 206  
SANTIAGO  
Tel: 395752, 398296  
Telex: 340566 METLAB/CK  
A

Olympia (Chile) Ltda.  
Av. Rodrigo de Araya 1045  
Castilla 256-V  
SANTIAGO 21  
Tel: 225-5014  
Telex: 340892 OLYMP  
Cable: Olympiachile Santiago/chile  
CH,CS,P

**CHINA, People's Republic of**

China Hewlett-Packard Co., Ltd.  
6th Floor, Sun Hung Kai Centre  
30 Harbour Road

HONG KONG  
Tel: 5-8323211  
Telex: 36678 HEWPA/HX  
A.C,CH,CS,E,M,P

China Hewlett-Packard Rep. Office  
P.O. Box 418  
1A Lian 2, Luchang St.

Beiwai Rd., Xuanwu District  
BEIJING  
Tel: 93-1847, 33-7246  
Telex: 30261 CTS/SP/CN  
Cable: 1920  
A.CH.CM.CS.E.P

**COLOMBIA**

Instrumentación Ot  
H. A. Langehaer & Kier S.A  
Carrera 4A No. 52A-26  
Apartado Aereo 6287  
BOGOTA 1, D.E.

Tel: 212-1466  
Telex: 44400 INST/CO  
Cable: AARIS Bogota  
CM,E,M

Neftomedicas Ltda.  
Calle 123 No. 98-31  
Apartado Aereo 100-958  
BOGOTA D.E., 10  
Tel: 213-3267, 213-1615  
Telex: 43415 HEGAS/CO  
A

Processa, S.A  
CRA 7 No. 24-89 Piso 25  
Torre Colpatria  
Apartado Aereo No. 49667  
BOGOTA D.E.  
Tel: 2344925, 2344958 2344742  
Telex: 43127 COVER/CO  
C,P

Compu mundo  
Avenida 15 # 107-80  
BOGOTA D.E.  
Tel: 214-4458  
Telex: 45468 MARICO  
P

**COSTA RICA**

Clientica Costarricense S.A.  
Avenida 2, Calle 5  
San Pedro de Montes de Oca  
Apartado 10159

SAN JOSE  
Tel: 24-38-20, 24-05-19  
Telex: 2267 GALGUR/CR  
CM,E,M

**CYPRUS**

Telerex Ltd.  
P.O. Box 4809  
14C Stavros Avenue

CH,CS,P  
NICOSIA  
Tel: 62696  
Telex: 2894 LEVDDO/CY  
E,M,P

**DENMARK**

Hewlett-Packard A/S  
Datavej 52  
DK-3460 BIRKEROD  
Tel: (32) 51-55-40  
Telex: 37409 hpas/dk  
A.CH.CM.CS.E.M,P  
Hewlett-Packard A/S  
Rohlgadevej 32  
DK-8240 RISSKOV, Aarhus  
Tel: (06) 17-60-00  
Telex: 37409 hpas/dk  
CH,E

**DOMINICAN REPUBLIC**

Micrograf S.A  
Juan Tomas Mejia y Cotes No. 80  
Arroyo Honda  
SANTO DOMINGO  
Tel: 585-6268  
Telex: 4510 AARENTA/DR/(RCA)  
P

**ECUADOR**

CYEDE Cia. Ltda.  
Avenida Eloy Alfaro 1749  
y Belgica  
Casilla 6423 CCI  
QUITO

Tel: 450-975, 243-052  
Telex: 2548 CYEDE ED  
CM,E,P  
Hospitalar S.A.  
Robles 625  
Casilla 3580  
QUITO

Tel: 545-250, 545-122  
Telex: 2485 HOSP/TL ED  
Cable: HOSPITALAR-Quito  
M

QUITO  
Tel: 2-238-951  
Telex: 2298 ECU/AME ED

**EGYPT**

Egyptian International  
Office for Foreign Trade  
P.O. Box 2556  
42 El-Zakara Street  
Dokki, CAIRO,  
Tel: 212230  
Telex: 93037 EGPOR/UN  
Cable: EGYPOR  
P.A

**EGYPT (Cont'd)****INFORMATIC FOR SYSTEMS**

24 Talat Harb Street

**CAIRO,**

Tel: 759006

Telex: 93697 SAFLM UN

**CS***International Engineering Associates*

24 Hussein Hogazi Street

*Kasr-el-Aini***CAIRO,**

Tel: 23829, 21641

Telex: 93630 IEA UN

Cable: INTEGASSO

**E****S.S.C. Medical**

40 Gharat El Arab Street

Mohandessin

**CAIRO,**

Tel: 803844, 805998, 810263

Telex: 20500 SSC UN

**M\*****EL SALVADOR***IPESA de El Salvador S.A.*

29 Avenida Norte 1216

**SAN SALVADOR**

Tel: 26-8858, 26-6868

Telex: 20539 IPESASAL

**A,CH,CM,CS,E,P****FINLAND****Hewlett-Packard Oy**

Pitspankallontie 17

02200 ESPOO

Tel: 00359-0-88721

Telex: 121563 HEWPA SF

**CH,CM,SS,P****Hewlett-Packard Oy**

(Olariluoma 7)

PL 24

02101 ESPOO 10

Tel: (90) 4521022

**A,E,M****Hewlett-Packard Oy**

Aatoksenkatu 10-C

SF-40720-72 JYVASKYLA

CH (941) 216318

**CH****Hewlett-Packard Oy**

Kalivuote 1-C

SF-80140-14 OULU

Tel: (851) 338765

**CH****FRANCE****Hewlett-Packard France**

Z.I. Mercure B

Rue Barthelot

F-13763 Les Milles Cedex

**AIX-EN-PROVENCE**

Tel: (42) 59-41-02

Telex: 410770F

**A,CH,E,M,P\*****Hewlett-Packard France**

64, rue Marchand Saillant

F-61000 ALENCON

Tel: (33) 29 04 42

**Hewlett-Packard France**

Boite Postale 503

F-25026 BESANCON

28 rue de la Republique

**F-25000 BESANCON**

Tel: (81) 83-16-22

Telex: 361157

**CH,M****Hewlett-Packard France**

13, Place Napoleon III

**F-69000 BREST**

Tel: (98) 03-38-95

**Hewlett-Packard France**

Chemin des Mouilles

Boite Postale 162

F-69130 ECULLY Cedex (Lyon)

Tel: (78) 893-81-25

Telex: 310617F

**A,CH,CS,E,M****Hewlett-Packard France**

Parc d'Activite du Bois Briard

Ave. du Lac

F-91040 ERY Cedex

Tel: 6 977-8383

Telex: 692315F

**E****Hewlett-Packard France**

5, Avenue Raymond Chanas

F-38520 EYBENS (Grenoble)

Tel: (76) 82-67-98

Telex: 980124 HP GRENBO EYBE

**CH****Hewlett-Packard France**

Centre d'Affaire Paris-Nord

Bâtiment Ampère 5 étage

Rue de la Commune de Paris

Boite Postale 300

F-93158 LE BLANC MESNIL

Tel: (1) 865-44-52

Telex: 211032F

**CH,CS,E,M****Hewlett-Packard France**

Parc d'Activites Cadura

Quartier Jean Mermoz

Avenue du Président JF Kennedy

F-33760 MERIGNAC (Bordeaux)

Tel: (56) 34-00-84

Telex: 550105F

**CH,E,M****Hewlett-Packard France**

immeuble "Les 3 B"

Nouveau Chemin de la Garde

ZAC de Bois Briand

F-44065 NANTES Cedex

Tel: (40) 50-32-22

Telex: 711085F

**CH\*\*****Hewlett-Packard France**

Zones Industrielle de Courtabouef

Avenue des Tropiques

F-91947 Les Ulis Cedex ORSAY

Tel: (6) 907-78-25

Telex: 600046F

**A,CH,CM,CS,E,M,P****Hewlett-Packard France**

Paris Porte-Maillet

15, Avenue de l'Amiral Bruix

F-75762 PARIS CEDEX 16

Tel: (1) 502-12-20

Telex: 619863F

**CH,M,P****Hewlett-Packard France**

124, Boulevard Tourasse

F-64000 PAU

Tel: (59) 60 38 02

**Hewlett-Packard France**

2 ABIE de la Bourgonnette

F-35100 RENNES

Tel: (99) 51-42-44

Telex: 740912F

**CH,CM,E,M,P\*****Hewlett-Packard France**

98 Avenue de Bretagne

F-76100 ROUEN

Tel: (35) 83-57-66

Telex: 770035F

**CH\*\* CS****Hewlett-Packard France**

4 Rue Thomas Mann

Boite Postale 56

F-67033 STRASBOURG Cedex

Tel: (88) 26-56-46

Telex: 890141F

**CH,E,M,P\*\*****Hewlett-Packard France**

Le PAPIROLE

20, Chemin du Pigeonnier de la

CAEPIEERE

F-31063 TOULOUSE Cedex

Tel: (61) 40-11-12

Telex: 531639F

**A,CH,CS,E,P\*****Hewlett-Packard France**

9, rue Baudin

F-26000 VALENCE

Tel: (75) 42 76 18

**Hewlett-Packard France**

Carolor

ZAC de Bois Briand

F-57640 WIGY (Metz)

Tel: (8) 771 20 22

**CH****Hewlett-Packard France**

immeuble PÉricentre

F-69658 VILLENEUVE D'ASCQ Cedex

Tel: (20) 91-41-25

Telex: 160124F

**CH,E,M,P\*****GERMAN FEDERAL****REPUBLIC****Hewlett-Packard GmbH**

Geschäftsstelle

Kalthausstrasse 2-4

D-1000 BERLIN 30

Tel: (030) 24-90-86

Telex: 018 3405 hpbbn d

**A,CH,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Hörrenberger Strasse 130

D-7030 BOBLINGEN

Tel: (7031) 14-0

Telex: 07265739

**A,CH,CM,CS,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Emanuel-Leutze-Strasse 1

D-4900 DUSSELDORF

Tel: (0211) 5971-1

Telex: 085/86 533 hppd d

**A,CH,CS,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Schleefstr. 28a

D-4600 DORTMUND-Aplerbeck

Tel: (0231) 45001

**Hewlett-Packard GmbH**

Vertriebszentrale Frankfurt

Bernar Strasse 117

Postfach 560 140

D-6000 FRANKFURT 56

Tel: (0611) 50-04-1

Telex: 04 13249 hpfm d

**A,CH,CM,CS,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Ausstellung Bad Homburg

Louisenstrasse 115

D-6360 BAD HOMBURG

Tel: (06172) 109-0

**Hewlett-Packard GmbH**

Geschäftsstelle

Kapstadtring 5

D-2000 HAMBURG 60

Tel: (040) 63604-1

Telex: 021 63 032 hphd d

**A,CH,CS,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Härdinger 37-39

D-3000 HANNOVER 61

Tel: (0511) 5798-0

Telex: 092 3259

**A,CH,CM,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Rostauer Weg 2-4

D-6800 MANNHEIM

Tel: (0621) 70050

Telex: 0462105

**A,C,E****Hewlett-Packard GmbH**

Geschäftsstelle

Messerschmittstrasse 7

D-7910 NEU ULM

Tel: 0731-70241

Telex: 0712616 HP ULM-D

**A,C,E\*****Hewlett-Packard GmbH**

Geschäftsstelle

Ethenicherstr. 13

D-8500 NÜRNBERG 10

Tel: (0911) 5205-0

Telex: 0623 860

**CH,CM,E,M,P****Hewlett-Packard GmbH**

Geschäftsstelle

Eschenstrasse 5

D-9028 TAUFKIRCHEN

Tel: (089) 6117-1

Telex: 0524985

**A,CH,CM,E,M,P****GREAT BRITAIN****See United Kingdom**

## SALES & SUPPORT OFFICES

Arranged alphabetically by country

### GREECE

Hewlett-Packard A.E.  
178, Kifissias Avenue  
6th Floor  
Halandri-ATHENS  
Greece  
Tel: 647 1673, 647 1540, 6472971  
A,CH,CM\*\*,CS\*\*,E,M,P

Kostas Karayannis S.A.  
3 Omirou Street  
ATHENS 133  
Tel: 32 30 303, 32 37 371  
Telex: 215962 RKAR GR  
A,CH,CM,CS,E,M,P

### FLAINDO S.A.

Etiquetas Brokers Ltd  
11854

### ATHENS

Tel: 34-51-911  
Telex: 216286  
P

### GUATEMALA

#### IPESA

Avenida Reforma 3-45, Zona 9

#### GUATEMALA CITY

Tel: 318627, 314786  
Telex: 4192 TELTRO GU  
A,CH,CM,CS,E,M,P

### HONG KONG

Hewlett-Packard Hong Kong, Ltd.  
G.P.O. Box 795  
5th Floor, Sun Hung Kai Centre  
38 Harbour Road

#### HONG KONG

Tel: 5-8525211  
Telex: 66678 HEWPA HX  
Cable: HEWPACK HONG KONG  
E,CH,CS,P

#### CET Ltd.

10th Floor, Hua Asia  
Bldg, Gloucester  
64-66 Gloucester Road

#### HONG KONG

Tel: (5) 200922  
Telex: 85148 CET HX  
CM

Schmidt & Co. (Hong Kong) Ltd.  
18th Floor, Great Eagle Centre  
23 Harbour Road, Wanchai

#### HONG KONG

Tel: 5-830022  
Telex: 74796 SCHMC HX  
A,M

### ICELAND

Elding Trading Company Inc.  
Hafnarmyvli-Tryggvagotu  
P.O. Box 895  
IS-REYKJAVIK  
Tel: 1-58-20, 1-63-03  
M

### INDIA

Computer products are sold through  
Blue Star Ltd. All computer repairs and  
maintenance service is done through  
Computer Maintenance Corp.

Blue Star Ltd.  
Sabri Complex II Floor  
24 Residency Rd.  
BANGALORE 560 025  
Tel: 56660  
Telex: 0845-430  
Cable: BLUESTAR  
A,CH\*\*,CM,CS\*,E

#### Blue Star Ltd.

#### Band Box House

#### Prabhadevi

#### BOMBAY 400 025

#### Tel: 422-2101

#### Telex: 011-3751

#### Cable: BLUESTAR

#### A,M

#### Blue Star Ltd.

#### Sahas

#### 414/2 Vir Savarkar Marg

#### Prabhadevi

#### BOMBAY 400 025

#### Tel: 422-6155

#### Cable: FROSTBLUE

#### A,CH\*\*,CM,CS\*,E,M

#### Blue Star Ltd.

#### Kalyan, 19 Vishwas Colony

#### Alknapur, BORDOA, 390 005

#### Tel: 83235

#### Cable: BLUE STAR

#### A

#### Blue Star Ltd.

#### 7 Hare Street

#### CALCUTTA 700 001

#### Tel: 12-01-31

#### Telex: 021-7655

#### Cable: BLUESTAR

#### A,M

#### Blue Star Ltd.

#### 133 Kodambakkam High Road

#### MADRAS 600 034

#### Tel: 82057

#### Telex: 041-379

#### Cable: BLUESTAR

#### A,M

#### Blue Star Ltd.

#### Brandari House, 7th/8th Floors

#### 31 Metro Place

#### NEW DELHI 110 024

#### Tel: 682547

#### Telex: 031-2463

#### Cable: BLUESTAR

#### A,CH\*\*,CM,CS\*,E,M

#### Blue Star Ltd.

#### 15/16-C Wellesley Rd.

#### PUNE 411 011

#### Tel: 22775

#### Cable: BLUE STAR

#### A

#### Blue Star Ltd.

#### 2-2-47/1108 Botaram Rd.

#### SECUNDERABAD 500 003

#### Tel: 72257

#### Telex: 0155-459

#### Cable: BLUEFROST

#### A,E

Blue Star Ltd.  
T.C. 7/693 Poomina  
Maruthakuzhi  
TRIVANDRUM 695 015  
Tel: 65792  
Telex: 0884-258  
Cable: BLUESTAR  
E

#### Computer Maintenance Corporation Ltd.

#### 115, Sarsajini Devi Road

#### SECUNDERABAD 500 003

#### Tel: 310-184, 345-774

#### Telex: 031-2960

#### CH\*\*

### INDONESIA

#### BERCA Indonesia P.T.

#### P.O. Box 4063/34

#### Jl. Abdul Muis 62

#### JAKARTA

#### Tel: 21-373009

#### Telex: 46748 BERSAL IA

#### Cable: BERSAL JAKARTA

#### P

#### BERCA Indonesia P.T.

#### P.O. Box 2497/41st

#### Antara Bldg., 17th Floor

#### Jl. Medan Merdeka Selatan 17

#### JAKARTA-PUSAT

#### Tel: 21-341-181

#### Cable: BERSAL IA

#### A,CS,E,M

#### BERCA Indonesia P.T.

#### P.O. Box 174/SBY.

#### Jl. Kutei No. 11

#### SURABAYA

#### Tel: 66172

#### Telex: 31146 BERSAL SB

#### Cable: BERSAL-SURABAYA

#### A\*,E,M,P

### IRAQ

#### Hewlett-Packard Trading S.A.

#### Service Operation

#### Al Mansoor City 98/3/7

#### BAGHDAD

#### Tel: 551-49-73

#### Telex: 212-455 HEPAIRAQ IK

#### CH,CS

### IRELAND

#### Hewlett-Packard Ireland Ltd.

#### 82/83 Lower Leeson Street

#### DUBLIN 2

#### Tel: 0001 608800

#### Telex: 30439

#### A,CH,CM,CS,E,M,P

#### Cardiac Services Ltd.

#### Kilmore Road

#### Artane

#### DUBLIN 5

#### Tel: (01) 351820

#### Telex: 30439

#### M

### ISRAEL

#### Eldan Electronic Instrument Ltd.

#### P.O. Box 1270

#### JERUSALEM 91000

#### 16, Ohazit St.

#### JERUSALEM 94467

#### Tel: 533 221, 533 242

#### Telex: 25231 AB/PAKRO IL

#### A,M

Computation and Measurement  
Systems (CMS) Ltd.  
11 Masad Street  
67060

#### TEL-AVIV

#### Tel: 388 388

#### Telex: 33569 MASH IL

#### CH,CM,CS,E,P

### ITALY

#### Hewlett-Packard Italiana S.p.A.

#### Traversa 99C

#### Via Giulio Petroni, 18

#### I-70124 BARI

#### Tel: (080) 41-07-44

#### M,CH

#### Hewlett-Packard Italiana S.p.A.

#### Via Martin Luther King, 38/39

#### I-40132 BOLOGNA

#### Tel: (051) 402384

#### Telex: 511630

#### CH,CS,E,M

#### Hewlett-Packard Italiana S.p.A.

#### Via Principe Nicola 43G/C

#### I-95126 CATANIA

#### Tel: (095) 37-10-87

#### Telex: 970291

#### CH

#### Hewlett-Packard Italiana S.p.A.

#### Via G. Di Vittorio 9

#### I-20063 CERNUSCO SUL

#### NAVIGLIO

#### (Milano)

#### Tel: (02) 923601

#### Telex: 334632

#### A,CH,CM,CS,E,M,P

#### Hewlett-Packard Italiana S.p.A.

#### Viale C. Colombo 49

#### I-20090 TREZZANO SUL

#### NAVIGLIO

#### (Milano)

#### Tel: (02) 4459041

#### Telex: 322116

#### CH,CS

#### Hewlett-Packard Italiana S.p.A.

#### Via Nuova San Rocco a

#### Capodimonte, 62/A

#### I-80131 NAPOLI

#### Tel: (081) 7415544

#### Telex: 710698

#### A\*,CH,CS,E,M

#### Hewlett-Packard Italiana S.p.A.

#### Viale G. Modugno 33

#### I-16156 GENOVA PEGLI

#### Tel: (010) 68-37-07

#### Telex: 215238

#### E,C

#### Hewlett-Packard Italiana S.p.A.

#### Viale G. Pavese 340

#### I-35128 PADOVA

#### Tel: (049) 664888

#### Telex: 430315

#### A,CH,CS,E,M

#### Hewlett-Packard Italiana S.p.A.

#### I-00144 ROMA EUR

#### Viale G. Pavese 340

#### Tel: (06) 54831

#### Telex: 610514

#### A,CH,CS,E,M,P\*

**ITALY (Cont'd)**

Hewlett-Packard Italiana S.p.A.  
Via di Casellina 57/C  
I-50018 SCANDICCI-FIRENZE  
Tel: (055) 753863  
CH,E,M

Hewlett-Packard Italiana S.p.A.  
Corso Svizzera, 185  
I-10144 TORINO  
Tel: (011) 74 4044  
Telex: 22 1079  
A\*,CS,CH,E

**JAPAN**

Yokogawa-Hewlett-Packard Ltd.  
152-1, Onna  
ATSUGI, Kanagawa, 243  
Tel: (0462) 28-0451  
CM,C\*,E

Yokogawa-Hewlett-Packard Ltd.  
Meiji-Seimei Bldg, 6F  
3-1 Hon Chiba-cho  
CHIBA, 280  
Tel: 472 25 7701  
E,CH,CS

Yokogawa-Hewlett-Packard Ltd.  
Yasuda-Seimei Hiroshima Bldg.  
6-11, Hon-dori, Naka-ku  
HIROSHIMA, 730  
Tel: 82-241-0611

Yokogawa-Hewlett-Packard Ltd.  
Towa Building  
2-3, Kaigan-dori, 2 Chome Chuo-ku  
KOBE, 250  
Tel: (078) 392-4791  
C,E

Yokogawa-Hewlett-Packard Ltd.  
Kumagaya Asahi 82 Bldg  
3-4 Tsukuba  
KUMAGAYA, Saitama 360  
Tel: (0485) 24-6563  
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.  
Asahi Shinbun Daiichi Seimei Bldg.  
4-7, Hanabata-cho  
KUMAMOTO, 860  
Tel: (0963) 54-7311  
CH,E

Yokogawa-Hewlett-Packard Ltd.  
Shin-Kyoto Center Bldg.  
614, Higashi-Shiohori-cho  
Karasuma-Nishiru  
Shiohori-dori, Shimogyo-ku  
KYOTO, 600  
Tel: 075-343-0921  
CH,E

Yokogawa-Hewlett-Packard Ltd.  
Mito Mitsui Bldg  
4-73, Sanno-maru, 1 Chome  
MITO, Ibaraki 310  
Tel: (0292) 25-7470  
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.  
Meiji-Seimei Kokubun Bldg, 7-8  
Kokubun, 1 Chome, Sendai  
MIYAGI, 980  
Tel: (0222) 25-1011  
Telex:  
C,E

Yokogawa-Hewlett-Packard Ltd.  
Sumitomo Seimei 14-9 Bldg.  
Meieki-Mitsumi, 2 Chome  
Nakamae-ku  
NAGAYA, 450  
Tel: (052) 571-5171  
CH,CM,CS,E,M

Yokogawa-Hewlett-Packard Ltd.  
Chuo Bldg.,  
4-20 Nishinakajima, 5 Chome  
Yodogawa-ku  
OSAKA, 532  
Tel: (06) 304-6021  
Telex: YHPOSA 523-3624  
A,CH,CM,CS,E,M,P\*

Yokogawa-Hewlett-Packard Ltd.  
27-15, Yaba, 1 Chome  
SAGAMIHARA Kanagawa, 229  
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.  
Daiichi Seimei Bldg.  
7-1, Nishi Shinjuku, 2 Chome  
Shinjuku-ku, TOKYO 160  
Tel: 03-348-4611  
CH,E

Yokogawa-Hewlett-Packard Ltd.  
29-21 Takaido-Higashi, 3 Chome  
Suginami-ku TOKYO 168  
Tel: (03) 331-6111  
Telex: 232-2024 YHPYOK  
A,CH,CM,CS,E,M,P\*

Yokogawa-Hewlett-Packard Ltd.  
Daiichi Asano Building  
2-8, Odori, 5 Chome  
UTSUNOMIYA, Tochigi 320  
Tel: (0286) 25-7155  
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.  
Yasuda Seimei Nishiguchi Bldg.  
30-4 Tsunaya-cho, 3 Chome  
YOKOHAMA 221  
Tel: (045) 312-1252  
CH,CM,E

**JORDAN**  
*Scientific and Medical Supplies Co.*  
P.O. Box 1387

**AMMAN**  
Tel: 24907, 39907  
Telex: 21436 SABCO JO  
CH,E,M,P

**KENYA**  
ADCOM Ltd., Inc., Kenya  
P.O. Box 30070

**NAIROBI**  
Tel: 331855  
Telex: 22639  
E,M

**KOREA**  
Samsung Hewlett-Packard Co. Ltd.  
12 Fl., Kinan Bldg.  
San 75-31, Yeoksam-Dong  
Kangnam-ku  
Yeongdong P.O. Box 72  
SEOUL  
Tel: 555-7535, 555-5447  
Telex: K27364 SAMSAN  
A,CH,CM,CS,E,M,P

**KUWAIT**

Al-Khaliifa Trading & Contracting  
P.O. Box 830  
SAFAT  
Tel: 4249 10, 411726  
Telex: 22481 AREEG KT  
Cable: VISCOUNT  
E.M.A

Photo & Cine Equipment  
P.O. Box 270  
SAFAT  
Tel: 2445111  
Telex: 22241 MATIN KT  
Cable: MATIN KUWAIT  
P

W.J. Towell Computer Services  
P.O. Box 75  
SAFAT  
Tel: 2462640/1  
Telex: 38336 FOWELL KT  
C

**LEBANON**

Computer Information Systems  
P.O. Box 11-6274  
BEIRUT  
Tel: 89 40 73  
Telex: 42309  
C,E,M,P

**LUXEMBOURG**

Hewlett-Packard Belgium S.A./N.V.  
Bivd de la Woluwe, 100  
Woluwe-la  
B-1200 BRUSSELS  
Tel: (02) 762-32-00  
Telex: 23-468 pacobes bru  
A,CH,CM,CS,E,M,P

**MALAYSIA**

Hewlett-Packard Sales (Malaysia)  
Sdn. Bhd.  
1st Floor, Bangunan British  
American  
Jalan Semantan, Damansara Heights  
KUALA LUMPUR 23-03  
Tel: 943022  
Telex: MA31011  
A,CH,E,M,P\*

Protei Engineering  
P.O. Box 1917  
Lot 6624, Section 84  
23/4 Pandan Road  
Kuching, SARAWAK  
Tel: 36299  
Telex: MA 70904 PROMAL  
Cable: PROTELENG  
A,E,M

**MALTA**

Phios Tolado Ltd.  
Notabile Rd.

**MRIHEL**  
Tel: 447 47, 455 66  
Telex: Media MW 649  
E,P,M

**MEXICO**

Hewlett-Packard Mexicana, S.A.  
de C.V.  
Av. Periferico Sur No. 6501  
Tepepan, Xochimilco  
16020 MEXICO D.F.  
Tel: 6-76-48-00  
Telex: 17-74-507 HEWPACK MEX  
A,CH,CS,E,M,P

Hewlett-Packard Mexicana, S.A.  
de C.V.  
Czda. del Valle  
409 Ote. 1° Piso  
Colonia del Valle  
Municipio de Garza Garcia  
66228 MONTERREY, Nuevo Leon  
Tel: 76 42 41  
Telex: 0384186 ECOMEX  
A

Equipos Cientificos de Occidente, S.A.  
Av. Lazaro Cardenas 3540  
QUADALAJARA  
Tel: 21-66-91  
Telex: 0384186 ECOMEX  
A

Infograficas y Sistemas del Noroeste, S.A.  
Rta. Orizaba #171 Oriente  
Cuspachto 2001  
Colonia Del Valle  
MONTERREY  
Tel: 784399, 761259A  
A

**MOROCCO**

Dubona  
87 rue Karachi  
CASABLANCA  
Tel: 3041-82, 3069-38  
Telex: 23051, 22822  
E

**Gerep**

2 rue d'Agadir  
Boite Postale 156  
CASABLANCA  
Tel: 272093, 272095  
Telex: 23 739  
P

**Sema-Maroc**

Rue Lapebie  
CASABLANCA  
Tel: 26 29 80  
CH,CS, P

**NETHERLANDS**

Hewlett-Packard Nederland B.V.  
Van Heuven Goedhartlaan 121  
NL 1181KX AMSTELVEEN  
P.O. Box 667  
NL 1180 AR AMSTELVEEN  
Tel: (020) 47-20-21  
Telex: 13 216 HEPAC NL  
A,CH,CM,CS,E,M,P

Hewlett-Packard Nederland B.V.  
Bongerd 2  
NL 2906VK CAPELLE A/D IJSEL  
P.O. Box 41  
NL 2909AA CAPELLE A/D IJSEL  
Tel: (10) 51-64-44  
Telex: 21281 HEPAC NL  
A,CH,CS,E

Hewlett-Packard Nederland B.V.  
Pastoor Petersstraat 134-136  
NL 5612 LV EINDHOVEN  
P.O. Box 2342  
NL 5600 CH EINDHOVEN  
Tel: (040) 3269 11  
Telex: 51494 hepae nl  
A,CH\*\*,E,M

## SALES & SUPPORT OFFICES

Arranged alphabetically by country

### NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.  
5 Owens Road  
P.O. Box 26-189

Epsom, AUCKLAND  
Tel: 687-159  
Cable: HEWPAK Auckland  
CH,CS,CM,E,P\*

Hewlett-Packard (N.Z.) Ltd.  
4-12 Cruickshank Street  
Kilbirnie, WELLINGTON 3  
P.O. Box 9443

Courtenay Place, WELLINGTON 3  
Tel: 677-199  
Cable: HEWPAK Wellington  
CH,CS,CM,E,P

Northrop Instruments & Systems Ltd.  
366 Kyber Pass Road  
P.O. Box 8092

### AUCKLAND

Tel: 794-091  
Telex: 00605

A,M

Northrop Instruments & Systems Ltd.  
110 Mandeville St.  
P.O. Box 6388

### CHRISTCHURCH

Tel: 488-873  
Telex: 4203

A,M

Northrop Instruments & Systems Ltd.  
Sturdee House  
85-87 Ghuznee Street

P.O. Box 2406  
WELLINGTON

Tel: 850-091

Telex: NZ 3380

A,M

### NORTHERN IRELAND

See United Kingdom

### NORWAY

Hewlett-Packard Norge A/S  
Folke Bernadottes vei 50  
P.O. Box 3558

N-5033 FYLLINGSDALEN (Bergen)  
Tel: 0047/5/16 55 40

Telex: 16621 hpnas n  
CH,CS,E,M

Hewlett-Packard Norge A/S  
UCOsterndalen 16-18  
P.O. Box 34

### N-1345 OCUSTERÅS

Tel: 0047/2/17 11 80

Telex: 16621 hpnas n

A,CH,CM,CS,E,M,P

### OMAN

Khimji Ramdas

P.O. Box 19

### MUSCAT

Tel: 722255, 745601

Telex: 3289 BROKER MB MUSCAT

P

Suhail & Saud Bahwan

P.O. Box 169

### MUSCAT

Tel: 734 201-3

Telex: 3074 BAHWAN MB

E

### India LLC

P.O. Box 8678

### MUMBAI

Tel: 601695

Telex: 5741 Tawcos On

A,C,M

### PAKISTAN

Mushko & Company Ltd.

House No. 16, Street No. 16

Sector F-6/3

### ISLAMABAD

Tel: 824545

Cable: FEMUS Islamabad

A,E,M,P\*

Mushko & Company Ltd.

Osman Chambers

Abdulrah Haroon Road

### KARACHI

0302

Tel: 524131, 524132

Telex: 2894 MUSKO PK

Cable: COOPERATOR Karachi

A,E,M,P\*

### PANAMA

ElectrOnco Balboa, S.A.

Calle Samuel Lewis, Ed. Alfa

Panama 4929

### APARADO

Tel: 63-8613, 63-6748

Telex: 3483 ELECTRON PG

A,CH,CS,E,M,P

### PERU

Ola Electro Médica S.A.

Los Flamencos 145, San Isidro

Castilla 1030

### LIMA 1

Tel: 41-4325, 41-3703

Telex: Pub. Booth 25306

CM,E,M,P

### SAMS

Río De La Plata 305

### SAO ISIDRO

Tel: 419828

Telex: 394 20450 PELIBERTAD

P

### PHILIPPINES

The Online Advanced Systems

Corporation

Rico House, Amorsolo Cor. Herrera

Street

Legaspi Village, Makati

P.O. Box 1510

### Metro MANILA

Tel: 816-38-11 (up to 16)

Telex: 63274 Online PN

A,CH,CS,E,M

Electronic Specialists and

Proponents Inc.

690-B Epifanio de los Santos

Avenue

### Cebu, QUEZON CITY

P.O. Box 2849 Manila

Tel: 98-96-81, 98-96-82, 98-96-83

Telex: 40018, 42000 ITT GLOBE MAC-

KAY BOOTH

P

### PORTUGAL

#### Mundieyer

Intercambio Mundial de Com&Ercio

S.A.R.L.

P.O. Box 2761

Av. Antonio Augusto de Aguiar 138

#### PLISSON

Tel: (19) 53-21-31, 53-21-37

Telex: 16691 munter p

M

#### Soquimica

Av. da Liberdade, 220-2

1295 LISBOA, Codex

Tel: 56 21 81/2/3

Telex: 13319 SABASA

P

Telectra-Empresa Técnica de

Equipamentos Eléctricos S.A.R.L.

Rua Rodrigo da Fonseca 103

P.O. Box 2531

#### P-LISSON 1

Tel: (19) 88-60-72

Telex: 12598

CM,E

Rancentro Ltda

R. Costa Cabral 575

#### 4200 PORTO

Tel: 493174/495173

Telex: 26054

CH,CS

### PUERTO RICO

Hewlett-Packard Puerto Rico

101 MuAÑoz Rivera Av

ESU, Calle Ochoa

HATO REY, Puerto Rico 00918

Tel: (809) 754-7800

A,CH,CS,CM,M,E,P

### QATAR

Computer Arabia

P.O. Box 2750

### DOHA

Tel: 883555

Telex: 4806 CHPARB

P

Nasser Trading & Contracting

P.O. Box 1563

### DOHA

Tel: 422170

Telex: 4439 NASSER DH

M

### SAUDI ARABIA

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 281

Thuobah

### AL-KHOBAR

Tel: 895-1760, 895-1764

Telex: 671 106 HPMEEK SJ

Cable: ELECTA AL-KHOBAR

CH,CS,E,M

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 1228

Redec Plaza, 6th Floor

### JEDDAH

Tel: 644 38 48

Telex: 4027 52 FARNAS SJ

Cable: ELECTA JEDDAH

A,CH,CS,CM,E,M,P

### Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 22015

### RIYADH

Tel: 491-87 15, 491-63 87

Telex: 220249 MEERYD SJ

CH,CS,E,M

Abdul Ghani El Ajou

P.O. Box 78

### RIYADH

Tel: 40 41 717

Telex: 200 932 EL AJOU

P

### SCOTLAND

See United Kingdom

### SINGAPORE

Hewlett-Packard Singapore (Sales)

Pte. Ltd.

#08-00 Incape House

450-2 Alexandra Road

P.O. Box 58 Alexandra Rd. Post

Office

SINGAPORE, 9115

Tel: 631788

Telex: HPSGSO RS 34209

Cable: HEWPAK, Singapore

A,CH,CS,E,MS,P

Dynamar International Ltd.

Unit 05-11Block 6

Kolam Ayer Industrial Estate

SINGAPORE 1334

Tel: 747-6188

Telex: RS 26283

CM

### SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 120

Howard Place CAPE PROVINCE 7450

Pine Park Center, Forest Drive, Pine-

lands

CAPE PROVINCE 7405

Tel: 53-7954

Telex: 57-20006

A,CH,CM,E,M,P

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 37099

Overport Drive 92

### DURBAN 4067

Tel: 26-4178

Telex: 6-22954

CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.

6 Linton Arcade

511 Cape Road

Linton Grange

PORT ELIZABETH 6001

CH

Hewlett-Packard So Africa (Pty.) Ltd.

Fountain Center

Kallden Str.

Monument Park

Ext 2

PRETORIA 0105

Tel: 45-5723

Telex: 32163

CH,E

**SOUTH AFRICA (Cont'd)**

Hewlett-Packard So Africa (Pty.) Ltd.  
Private Bag Wendywood  
**SANDTON 2144**  
Tel: 802-5111, 802-5125  
Telex: 4-20877  
Cable: HEWPACK Johannesburg  
A,CH,CS,E,M,P

**SPAIN**

Hewlett-Packard Española S.A.  
Calle Entenza, 321  
**E-BARCELONA 29**  
Tel: 322.24.51, 321.73.54  
Telex: 52603 hpbee  
A,CH,CS,E,M,P

Hewlett-Packard Española S.A.  
Calle San Vicente S/No  
Edificio Aibisa II 7B  
**E-BILBAO 1**  
Tel: 423.83.06  
A,CH,CS,E,M,P

Hewlett-Packard Española S.A.  
C/ta. de la Coruña, Km. 16, 400  
Las Rozas  
**E-MADRID**  
Tel: (1) 637.00.11  
Telex: 23515 HPE  
CH,CS,M

Hewlett-Packard Española S.A.  
Avda. S. Francisco Javier, S/No  
Planta 10, Edificio Sevilla 2,  
**E-SEVILLA 5**  
Tel: 64.44.54  
Telex: 72993  
A,CS,M,P

Hewlett-Packard Española S.A.  
C/Isabel La Católica, 8  
**E-VALENCIA**  
Tel: 0034/6/351 59 44  
CH,P

**SWEDEN**

Hewlett-Packard Sverige AB  
Sunnanvägen 14K  
**S-22226 LUND**  
Tel: (046) 13-69-79  
Telex: (854) 17886 (via Spånga office)  
CH

Hewlett-Packard Sverige AB  
Östra Tullgatan 3  
**S-21128 MALMÖ**  
Tel: (040) 70270  
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB  
Västra Vintergatan 9  
**S-76344 ÖREBRO**  
Tel: (18) 10-48-90  
Telex: (854) 17886 (via Spånga office)  
CH

Hewlett-Packard Sverige AB  
Skålhölgatan 9, Kista  
Box 19  
**S-16393 SPÅNGA**  
Tel: (08) 750-2000  
Telex: (854) 17886  
Teletex: (08) 7527781  
A,CH,CM,CS,E,M,P

Hewlett-Packard Sverige AB  
Frotalingsgatan 30  
**S-42132 VÄSTRA-FRÖLUNDA**  
Tel: (031) 49-09-50  
Telex: (854) 17886 (via Spånga office)  
CH,E,P

**SWITZERLAND**

Hewlett-Packard (Schweiz) AG  
Clarendstrasse 12  
**CH-4050 BASEL**  
Tel: (61) 33-59-20  
A

Hewlett-Packard (Schweiz) AG  
7, rue du Bois-du-Lan  
Case Postale 365  
**CH-1217 MEYRIN 2**  
Tel: (0041) 22-83-11-11  
Telex: 27233 HPAG CH  
CH,CM,CS

Hewlett-Packard (Schweiz) AG  
Alimend 2  
**CH-8987 WIDEN**  
Tel: (0041) 57 31 21 11  
Telex: 53933 hpag ch  
Cable: HPAG CH  
A,CH,CM,CS,E,M,P

**SYRIA**

General Electronic Inc.  
Nuri Basha Ahmad Ebn Kays Street  
**P.O. Box 5781**  
**DAMASCUS**  
Tel: 33-24-87  
Telex: 411 215  
Cable: ELECTROBOR DAMASCUS  
E

Middle East Electronics  
**P.O. Box 2308**  
Abu Rumanneh

**DAMASCUS**

Tel: 33 42 92  
Telex: 411 304  
M

**TAIWAN**

Hewlett-Packard Taiwan  
Kaohsiung Office  
117F 456, Chung Hsiao 1st Road  
**KAHSIUNG**  
Tel: (07) 2412316  
CH,CS,E

Hewlett-Packard Taiwan  
8th Floor Hewlett-Packard Building  
307 Fu Hsing North Road  
**TAIPEI**  
Tel: (02) 712-0404  
Telex: 24439 HEWPACK  
Cable: HEWPACK Taipei  
A,CH,CM,CS,E,M,P

Ing Lih Trading Co.  
3rd Floor, 7 Jen-Ai Road, Sec. 2  
**TAIPEI 100**  
Tel: (02) 3949 101  
Cable: INGLIH TAIPEI  
A

**THAILAND**

Unimesa  
30 Falpong Ave., Suriwong  
**BANGKOK 5**  
Tel: 235-5727  
Telex: 84439 Sinowco TH  
Cable: UNIMESA Bangkok  
A,CH,CS,E,M

Bangkok Business Equipment Ltd.  
5/5-6 Dejo Road  
**BANGKOK**  
Tel: 234-8670, 234-8671  
Telex: 67689-BEQUP1 TH  
Cable: BUSIGU1PT Bangkok  
P

**TOGO**

Societe Africaine De  
Promotion  
**B.P. 12271**  
**LOME**  
Tel: 21-62-88  
Telex: 5304

**TRINIDAD & TOBAGO**

Caribbean Telecoms Ltd.  
Corner McAlister Street &  
Eastern Main Road, Laventille  
**P.O. Box 732**  
**PORT-OF-SPAIN**  
Tel: 624-4213  
Telex: 22561 CARTEL WG  
Cable: CARTEL, PORT OF SPAIN  
CM,E,M,P

Computer and Controls Ltd.  
**P.O. Box 51**  
86 Independence Square  
**PORT-OF-SPAIN**  
Tel: 623-4472  
Telex: 3030 POSTLX WG  
P

**TUNISIA**

Tunisite Electronique  
21 Avenue de la Liberté  
**TUNIS**  
Tel: 280-144  
CH,CS,E,P

Carisma  
1 ter. Av. de Carthage  
**ANKARA**  
Tel: 319175  
Telex: 42321 KTX TP  
Cable: EMATRADE ANKARA  
M

Kur & Kurt A.S.  
Mithatpaşa Caddesi No. 75  
**Kat 4 Kızılay**  
**ANKARA**  
Tel: 318675/6/7/6  
Telex: 42490 MESR TR  
A

**TURKEY**

E.M.A  
Medina Eldem Sokak No. 41/6  
Yenişehir  
**ANKARA**  
Tel: 319175  
Telex: 42321 KTX TP  
Cable: EMATRADE ANKARA  
M

Kur & Kurt A.S.  
Mithatpaşa Caddesi No. 75  
**Kat 4 Kızılay**  
**ANKARA**  
Tel: 318675/6/7/6  
Telex: 42490 MESR TR  
A

**Sarıya Bilgisayar Sistemleri A.Ş.**

Büyükdere Caddesi 103/6  
Gayretiye  
**ISTANBUL**  
Tel: 1673180  
Telex: 26345 SANI TR  
C,P

Teknım Company Ltd.  
Iran Caddesi No. 7  
Kavaklıdere  
**ANKARA**  
Tel: 278800  
Telex: 42155 TKNM TR  
E,CM

**UNITED ARAB EMIRATES**

Emirat Ltd.  
**P.O. Box 1641**  
**SHARJAH**,  
Tel: 591181  
Telex: 08136 EMITAC EM  
Cable: EMITAC SHARJAH  
E,CM,P,A

Emilat Ltd.  
**P.O. Box 2711**  
**ABU DHABI**,  
Tel: 820419-20  
Cable: EMITACH ABUDHABI

**Emilat Ltd.**

**P.O. Box 6391**  
**DUBAI**,  
Tel: 377951

Emilat Ltd.  
**P.O. Box 473**  
**RAS AL KHAIMAH**,  
Tel: 28193, 21270

**UNITED KINGDOM****GREAT BRITAIN**

Hewlett-Packard Ltd.  
Trafalgar House  
Navigation Road  
**ALTRINCHAM**  
Cheshire WA14 1NU  
Tel: 061 928 6422  
Telex: 868068  
A,CH,CS,E,M,M,P

Hewlett-Packard Ltd.  
Miller House  
The Ring, **BRACKNELL**  
Berkshire RG12 1XH  
Tel: 44344 424898  
Telex: 848733  
E

Hewlett-Packard Ltd.  
Elstree House, Elstree Way  
**BOREHAMWOOD**, Herts WD6 1SG  
Tel: 01 207 5800  
Telex: 895216  
E,CH,CS,P

Hewlett-Packard Ltd.  
Oakfield House, Oakfield Grove  
Clifton **BRISTOL**, Avon BS6 2BN  
Tel: 0272 736806  
Telex: 444302  
CH,CS,E,P

## SALES &amp; SUPPORT OFFICES

Arranged alphabetically by country

## GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.  
Bridewell House  
Bridewell Place  
LONDON EC4V 6BS  
Tel: 01 583 6565  
Telex: 298163  
CH,CS,P

Hewlett-Packard Ltd.  
Fountain House  
267-263 High Street  
LONDON COLNEY  
Herts. AL2 1HA, St. Albans  
Tel: 0727 24400  
Telex: 1-8692716  
CH,CS

Hewlett-Packard Ltd.  
Pontefract Road  
NORMANTON, West Yorkshire WF5 1RN  
Tel: 0924 993589  
Telex: 557355  
CH,CS,P

Hewlett-Packard Ltd.  
The Quadrangle  
106-118 Station Road  
REDHILL, Surrey RH1 1PS  
Tel: 0737 89655  
Telex: 947234  
CH,CS,E,P

Hewlett-Packard Ltd.  
Avon House  
435 Stratford Road  
Shirley, SOLIHULL, West Midlands  
B90 4BL  
Tel: 021 745 8800  
Telex: 339105  
CH,CS,E,P

Hewlett-Packard Ltd.  
West End House  
41 High Street, West End  
SOUTHAMPTON  
Hampshire SO3 3DD  
Tel: 04218 6767  
Telex: 477138  
CH,CS,P

Hewlett-Packard Ltd.  
King Street Lane  
Winnersh, WOKINGHAM  
Berkshire RG11 5AR  
Tel: 0734 784774  
Telex: 847178  
A,CH,CS,E,M,P

Hewlett-Packard Ltd.  
Nine Mile Ride  
Easthampstead, WOKINGHAM  
Berkshire, RG11 3LL  
Tel: 0544 773100  
Telex: 848605  
CH,CS,E,P

## IRELAND

NORTHERN IRELAND  
Hewlett-Packard Ltd.  
Cardiac Services Building  
95A Finaghy Road South  
BELFAST BT10 0BY  
Tel: 0232 625-566  
Telex: 747626  
CH,CS

## SCOTLAND

Hewlett-Packard Ltd.  
SOUTH QUEENSFERRY  
West Lothian. EH30 9TG  
Tel: 031 331 1188  
Telex: 72682  
CH,CM,CS,E,M,P

## UNITED STATES

## Alabama

Hewlett-Packard Co  
700 Century Park South, Suite 128  
BIRMINGHAM, AL 35226  
Tel: (205) 822-6802  
C,CH,CS,P\*

Hewlett-Packard Co.  
420 Wynn Drive  
P.O. Box 7760  
HUNTSVILLE, AL 35897  
Tel: (205) 830-2000

C,CH,CS,CS,E,M\*  
Alaska  
Hewlett-Packard Co.  
3601 C St., Suite 1234  
ANCHORAGE, AK 99503  
Tel: (907) 563-8865  
CH,CS,E

## Arizona

Hewlett-Packard Co  
8880 Pointe Parkway West  
PHOENIX, AZ 85044  
Tel: (602) 273-8000  
A,CH,CM,CS,E,M

Hewlett-Packard Co  
2424 East Aragon Road  
TUCSON, AZ 85706  
Tel: (602) 573-7400  
CH,E,M\*\*

Hewlett-Packard Co.  
99 South Hill Dr.  
BRISBANE, CA 94005  
Tel: (415) 930-2500  
CH,CS

Hewlett-Packard Co.  
P.O. Box 7830 (93374)  
5060 E. Clinton Avenue, Suite 102  
FRESNO, CA 93727  
Tel: (209) 252-3652  
CH,CS,M

Hewlett-Packard Co.  
1421 S. Manhattan Av.  
FULLERTON, CA 92631  
Tel: (714) 999-8700  
CH,CM,CS,E,M

Hewlett-Packard Co.  
320 S. Kellogg, Suite B  
GOLETA, CA 93117  
Tel: (805) 967-3405  
CH

Hewlett-Packard Co.  
5400 W. Rosecrans Blvd.  
LAWNDALE, CA 90260  
P.O. Box 32105  
LOS ANGELES, CA 90009  
Tel: (213) 843-7500  
Telex: 910-325-6808  
CH,CM,CS,M

Hewlett-Packard Co  
3155 Porter Drive  
PALO ALTO, CA 94304  
Tel: (415) 957-8000  
CH,CS,E

Hewlett-Packard Co  
4344 So. Market Court, Suite A  
P.O. Box 15976  
SACRAMENTO, CA 95813  
Tel: (916) 929-7222  
A\*,CH,CS,E,M

Hewlett-Packard Co.  
9606 Aero Drive  
P.O. Box 23333  
SAN DIEGO, CA 92123  
Tel: (619) 279-3200  
CH,CM,CS,E,M

Hewlett-Packard Co.  
2335 Camino Ramon "C"  
SAN RAMON, CA 94583  
Tel: (415) 698-6900  
CH,CS

Hewlett-Packard Co  
3805 Scott Boulevard  
SANTA CLARA, CA 95050  
Tel: (408) 988-7000  
Telex: 910-338-0586  
A,CH,CM,CS,E,M

Hewlett-Packard Co.  
5703 Corsa Avenue  
WESTLAKE VILLAGE, CA 91362  
Tel: (213) 706-6800  
E\*,CH\*,CS\*

## Colorado

Hewlett-Packard Co.  
24 Inverness Place, East  
ENGLEWOOD, CO 80112  
Tel: (303) 649-5000  
A,CH,CM,CS,E,M

## Connecticut

*Et. Dec. 1, 1984*  
Hewlett-Packard Co.  
500 Sylvan Av.  
BRIDGEPORT, CT 06606  
Tel: (203) 371-6454  
CH,CS,E

Hewlett-Packard Co.  
47 Barnes Industrial Road South  
P.O. Box 5007  
WALLINGFORD, CT 06492  
Tel: (203) 265-7801  
A,CH,CM,CS,E,M

## Florida

Hewlett-Packard Co.  
2901 N.W. 82nd Street  
P.O. Box 24210  
FORT LAUDERDALE, FL 33307  
Tel: (805) 973-2600  
CH,CS,E,M,P\*

Hewlett-Packard Co.  
4885 Woodloch Drive, Suite 132  
JACKSONVILLE, FL 32207  
Tel: (904) 398-0663  
C\*,CH\*,M\*\*

Hewlett-Packard Co.  
6177 Lake Ellenor Drive  
P.O. Box 13910

ORLANDO, FL 32858  
Tel: (305) 859-2900  
A,C,CH,CM,CS,E,P\*

Hewlett-Packard Co.  
4709 Bayview Blvd.  
Building 5  
PENSACOLA, FL 32505  
Tel: (904) 476-8422  
A,C,CH,CM,CS,E,M

Hewlett-Packard Co.  
5550 Idlewild, #150  
P.O. Box 15200  
TAMPA, FL 33684  
Tel: (813) 884-3282  
A\*,C,CH,CS,E\*,M\*,P\*

## Georgia

Hewlett-Packard Co.  
2000 South Park Place  
P.O. Box 105005  
ATLANTA, GA 30348  
Tel: (404) 955-1500  
Telex: 610-766-4990  
A,C,CH,CM,CS,E,M,P\*

## Hawaii

Hewlett-Packard Co.  
Kawaliahau Plaza, Suite 190  
567 South King Street  
HONOLULU, HI 96813  
Tel: (808) 526-1555  
A,CH,E,M

## Illinois

Hewlett-Packard Co.  
394 Eldorado Road  
P.O. Box 1607  
BLOOMINGTON, IL 61701  
Tel: (309) 662-9411  
CH,M\*\*

Hewlett-Packard Co.  
525 W. Monroe, #1300  
CHICAGO, IL 60606  
Tel: (312) 930-0010  
CH,CS

Hewlett-Packard Co.  
1900 Ouel  
NAPERVILLE, IL 60566  
Tel: (312) 357-8600  
CH\*,CS

Hewlett-Packard Co.  
5201 Tolview Drive  
ROLLING MEADOWS, IL 60008  
Tel: (312) 255-9800  
Telex: 910-687-1066  
A,CH,CM,CS,E,M

## Indiana

Hewlett-Packard Co.  
11911 N. Meridian St.  
CARMEL, IN 46032  
Tel: (317) 844-4100  
A,CH,CM,CS,E,M

## Iowa

Hewlett-Packard Co.  
4070 22nd Av. SW  
CEDAR RAPIDS, IA 52404  
Tel: (319) 390-4250  
CH,CS,E,M

## UNITED STATES (Cont'd)

Hewlett-Packard Co.  
4201 Corporate Dr.  
**WEST DES MOINES, IA 50265**  
Tel: (515) 224-1435  
A\*\*, CH, M\*\*

### Kentucky

Hewlett-Packard Co.  
10300 Linn Station Road, #100  
**LOUISVILLE, KY 40223**  
Tel: (502) 426-0100  
A, CH, CS, M

### Louisiana

Hewlett-Packard Co.  
160 James Drive East  
**ST. ROSE, LA 70087**  
P.O. Box 1449  
**KENNER, LA 70065**  
Tel: (504) 467-4100  
A, C, CH, E, M, P\*

### Maryland

Hewlett-Packard Co.  
3701 Koppers Street  
**BALTIMORE, MD 21227**  
Tel: (301) 644-5800  
Telex: 710-862-1943  
A, CH, CM, CS, E, M

Hewlett-Packard Co.  
2 Choike Cherry Road  
**ROCKVILLE, MD 20850**  
Tel: (301) 946-6370  
A, CH, CM, CS, E, M

### Massachusetts

Hewlett-Packard Co.  
1775 Minuteman Road  
**ANDOVER, MA 01810**  
Tel: (617) 682-1500  
A, C, CH, CS, CM, E, M, P\*  
Hewlett-Packard Co.  
32 Hartwell Avenue  
**LEXINGTON, MA 02173**  
Tel: (617) 861-8960  
CH, CS, E

### Michigan

Hewlett-Packard Co.  
4325 Cascade Road S.E.  
**GRAND RAPIDS, MI 49506**  
Tel: (616) 957-1970  
CH, CS, M

Hewlett-Packard Co.  
38550 Orchard Hill Place Drive  
**NOVI, MI 48050**  
Tel: (313) 349-9200  
A, CH, CS, E, M

Hewlett-Packard Co.  
1771 W. Big Beaver Road  
**TROY, MI 48064**  
Tel: (313) 643-6474  
CH, CS

### Minnesota

Hewlett-Packard Co.  
2025 W. Larpenteur Ave.  
**ST. PAUL, MN 55113**  
Tel: (612) 644-1100  
A, CH, CM, CS, E, M

### Missouri

Hewlett-Packard Co.  
1001 E. 101st Terrace  
**KANSAS CITY, MO 64131**  
Tel: (816) 941-0411  
A, CH, CM, CS, E, M

Hewlett-Packard Co.  
13001 Hollenberg Drive  
**BRIDGETON, MO 63044**  
Tel: (314) 344-5100  
A, CH, CS, E, M

### Nebraska

Hewlett-Packard Co.  
10824 Old Mill Rd., Suite 3  
**OMAHA, NE 68154**  
Tel: (402) 334-1813  
CM, M

### New Jersey

Hewlett-Packard Co.  
120 W. Century Road  
**PARAMUS, NJ 07652**  
Tel: (201) 265-5000  
A, CH, CM, CS, E, M  
Hewlett-Packard Co.  
20 New England Av. West  
**PISCATAWAY, NJ 08854**  
Tel: (201) 981-1199  
A, CH, CM, CS, E

### New Mexico

Hewlett-Packard Co.  
11300 Lomas Blvd., N.E.  
P.O. Box 11634  
**ALBUQUERQUE, NM 87112**  
Tel: (505) 292-1330  
CH, CS, E, M

### New York

Hewlett-Packard Co.  
5 Computer Drive South  
**ALBANY, NY 12205**  
Tel: (518) 458-1550  
A, CH, E, M  
Hewlett-Packard Co.  
9500 Main Street  
P.O. Box AC  
**CLARENCE, NY 14031**  
Tel: (716) 759-8621  
CH, CS, E

Hewlett-Packard Co.  
200 Cross Keys Office Park  
**FAIRPORT, NY 14450**  
Tel: (716) 223-9950  
A, CH, CM, CS, E, M

Hewlett-Packard Co.  
7641 Henry Clay Blvd.  
**LIVERPOOL, NY 13088**  
Tel: (315) 451-1820  
A, CH, CM, CS, E, M

Hewlett-Packard Co.  
No. 1 Pennsylvania Plaza  
55th Floor  
34th Street & 8th Avenue  
**MANHATTAN NY 10119**  
Tel: (212) 971-0800  
CH, CS, M\*

Hewlett-Packard Co.  
15 Myers Corner Rd.  
**WAPPINGER FALLS, NY 12590**  
CM, E

Hewlett-Packard Co.  
250 Westchester Avenue  
**WHITE PLAINS, NY 10604**  
Tel: (914) 684-6100  
CM, CH, CS, E

Hewlett-Packard Co.  
3 Crossways Park West  
**WOODBURY, NY 11797**  
Tel: (516) 921-6300  
A, CH, CM, CS, E, M

### North Carolina

Hewlett-Packard Co.  
305 Gregson Dr.  
**CARY, NC 27511**  
Tel: (919) 467-6600  
C, CH, CM, CS, E, M, P\*  
Hewlett-Packard Co.  
9600-H Southern Pine Blvd.  
**CHARLOTTE, NC 28210**  
Tel: (704) 527-8780  
CH\*, CS\*

Hewlett-Packard Co.  
5605 Roanne Way  
P.O. Box 26500  
**GREENSBORO, NC 27420**  
Tel: (919) 852-1800  
A, C, CH, CM, CS, E, M, P\*

### Ohio

Hewlett-Packard Co.  
9020 Carver Road  
**CINCINNATI, OH 45242**  
Tel: (513) 891-9870  
CH, CS, M

Hewlett-Packard Co.  
16500 Sprague Road  
**CLEVELAND, OH 44130**  
Tel: (216) 243-7300  
A, CH, CM, CS, E, M

Hewlett-Packard Co.  
980 Springboro Pike  
**MIAMISBURG, OH 45343**  
Tel: (513) 859-8202  
A, CH, CM, E\*, M

Hewlett-Packard Co.  
675 Brooksedge Blvd.  
**WESTERVILLE, OH 43081**  
Tel: (614) 436-1041  
CH, CM, CS, E\*

### Oklahoma

Hewlett-Packard Co.  
304 N. Meridian, Suite A  
P.O. Box 75609  
**OKLAHOMA CITY, OK 73147**  
Tel: (405) 946-9499  
C, CH, CS, E\*, M

Hewlett-Packard Co.  
2840 S. 103rd E. Ave., #100  
P.O. Box 35747  
**TULSA, OK 74153**  
Tel: (918) 665-3300  
A\*\*, C, CH, CS, M\*, E, P\*

### Oregon

Hewlett-Packard Co.  
9255 S. W. Pioneer Court  
P.O. Box 328  
**WILSONVILLE, OR 97070**  
Tel: (503) 682-8000  
A, CH, CS, E\*, M

### Pennsylvania

Hewlett-Packard Co.  
50 Dorchester Rd.  
P.O. Box 6080  
**HARRISBURG, PA 17111**  
Tel: (717) 657-5900  
C

Hewlett-Packard Co.  
111 Zela Drive  
**PITTSBURGH, PA 15238**  
Tel: (412) 762-0400  
A, CH, CS, E, M

Hewlett-Packard Co.  
2750 Monroe Boulevard  
P.O. Box 713  
**VALLEY FORGE, PA 19482**  
Tel: (215) 666-9000  
A, CH, CM, CS, E, M

### South Carolina

Hewlett-Packard Co.  
Brookside Park, Suite 122  
1 Harbison Way  
P.O. Box 21708  
**COLUMBIA, SC 29221**  
Tel: (803) 732-0400  
A, C, CH, CS, M

Hewlett-Packard Co.  
100 Executive Cntr. Dr.  
Koger Executive Center  
Chesterfield Bldg., Suite 124  
**GREENVILLE, SC 29615**  
Tel: (803) 297-4120  
C

### Tennessee

Hewlett-Packard Co.  
One Energy Cntr. #200  
Mississippi Pkwy.  
P.O. Box 22490  
**KNOXVILLE, TN 37933**  
Tel: (615) 955-4747  
A, C, CH, CS, M

Hewlett-Packard Co.  
3070 Directors Row  
**MEMPHIS, TN 38131**  
Tel: (901) 346-8370  
A, C, M

Hewlett-Packard Co.  
220 Great Circle Road, Suite 116  
**NASHVILLE, TN 37228**  
Tel: (615) 255-1271  
C, M, P\*

### Texas

Hewlett-Packard Co.  
11002-B Metric Boulevard  
**AUSTIN, TX 78758**  
Tel: (512) 836-6771  
C, M, E, P\*

Hewlett-Packard Co.  
5700 Cromo Dr  
P.O. Box 12903  
**EL PASO, TX 79913**  
Tel: (915) 833-4400  
CH, E\*, M\*\*

## SALES &amp; SUPPORT OFFICES

Arranged alphabetically by country

## UNITED STATES (Cont'd)

Hewlett-Packard Co.  
3952 Sand Shell St  
FORT WORTH, TX 76137  
Tel: (817) 232-9500  
A,C,CH,E,M

Hewlett-Packard Co.  
10535 Harwin Drive  
P.O. Box 42816  
HOUSTON, TX 77042  
Tel: (713) 776-6400  
A,C,CH,CS,E,M,P\*

Hewlett-Packard Co.  
511 W. John W. Carpenter Fwy.  
Royal Tech. Center #100  
IRVINE, TX 75062  
Tel: (214) 566-1950  
C,CH,CS,E

Hewlett-Packard Co.  
930 E. Campbell Rd.  
P.O. Box 83/1270  
RICHARDSON, TX 75083-1270  
Tel: (214) 231-6101  
A,CH,CM,CS,E,M,P\*

Hewlett-Packard Co.  
1020 Central Parkway South  
P.O. Box 32593  
SAN ANTONIO, TX 78232  
Tel: (512) 494-9336  
A,C,CH,CS,E,M,P\*

## Utah

Hewlett-Packard Co.  
3530 W. 2100 South  
P.O. Box 26626  
SALT LAKE CITY, UT 84126  
Tel: (801) 974-1700  
A,CH,CS,E,M

## Virginia

Hewlett-Packard Co.  
4305 Cox Road  
GLEN ALLEN, VA 23060  
P.O. Box 9669  
RICHMOND, VA 23228  
Tel: (804) 747-7750  
A,C,CH,CS,E,M,P\*

## Washington

Hewlett-Packard Co.  
15815 S. E. 37th Street  
BELLEVUE, WA 98006  
Tel: (206) 643-4000  
A,CH,CM,CS,E,M

Hewlett-Packard Co.  
708 North Argonne Road  
P.O. Box 3608  
SPOKANE, WA 99220-3608  
Tel: (509) 922-7000  
CH,CS

## West Virginia

Hewlett-Packard Co.  
4654 MacCorkie Ave.  
CHARLESTON, WV 25304  
Tel: (304) 925-4092  
A,M

## Wisconsin

Hewlett-Packard Co.  
275 N. Corporate Dr.  
BROOKFIELD, WI 53005  
Tel: (414) 784-8806  
A,CH,CS,E\*,M

## URUGUAY

Pablo Ferrando S.A.C. e I.  
275 N. Corporate Dr.  
Avenida Italia 2877  
Casilla de Correo 370  
MONTEVIDEO  
Tel: 80-2666  
Telex: Public Booth 901  
A,C,M,E,M

Miti Computadores, Ltda  
Avda. del Libertador Brig  
Graf Lavalleja 2071  
Local 007

## MONTEVIDEO

Tel: 28-55-22  
Telex: 901 F BOOTH UY  
P  
Olympia de Uruguay S.A.  
Máquinas de Oficina  
Avda. del Libertador 1997  
Casilla de Correo 6644

## MONTEVIDEO

Tel: 91 1809, 98 3807  
Telex: 6342 OROU UY  
P

## VENEZUELA

Hewlett-Packard de Venezuela C.A.  
SRA Transversal Los Ruices Norte  
Edificio Segre 1, 2 & 3  
Apartado 50933  
CARACAS 1071  
Tel: 239-4133  
Telex: 251046 HEWPACK  
A,CH,CS,E,M,P

Hewlett-Packard de Venezuela C.A.  
Residencias Tia Betty Local 1  
Avenida 3 y con calle 75  
MARACAIBO, Estado Zulia  
Apartado 2648  
Tel: (061) 75601-75805-75806-  
80304

Telex: 62464 HPMAR  
C,E\*

Hewlett-Packard de Venezuela C.A.  
Urb. Lomas de Este  
Torre Trebol — Piso 11  
VALENCIA, Estado Carabobo  
Apartado 3347  
Tel: (041) 322992/223024  
CH,CS,P

Albis Venezolana S.R.L.  
Av. Las Marías, Ota Aliz,  
El Padregal  
Apartado 81025

CARACAS 10604  
Tel: 747864, 742148  
Telex: 24009 ALBIS VC  
A

Tecnologica Medica del Caribe, C.A.  
Multicentro Empresarial del Este  
Ave. Libertador  
Edif. Libertador  
Núcleo "C" - Oficina 51-52

CARACAS  
Tel: 338887/333780  
M

## CZUGA

Centrica Zulia C.A.  
Calle 70, Los Olivos  
No. 65-96

Apartado 1843

MARACAIBO  
Tel: 54-64-37, 54-63-85, 54-64-94  
Telex: 62144  
A

## YUGOSLAVIA

Do Hermes  
General Zdanova 4  
Telex: YU-11000 BEOGRAD  
A,CH,E,P

Hermes

Titova 50

Telex: YU-61000 LJUBLJANA  
CH,CS,E,M,P

Elektrotehna

Titova 51

Telex: YU-61000 LJUBLJANA  
CM

## ZAMBIA

R.J. Tibury (Zambia) Ltd.  
P.O. Box 32792

LUSAKA

Tel: 215590  
Telex: 40128  
E

## ZIMBABWE









Field Technical Sales  
45 Kelvin Road, North  
P.B. 3458

SALISBURY

Tel: 705 231  
Telex: 4-122 RH  
E,P

August 1984

HP distributors are printed in italics.

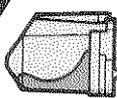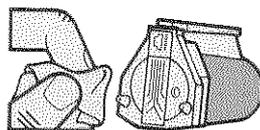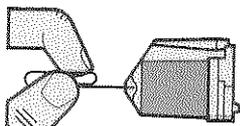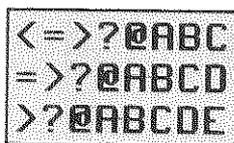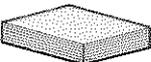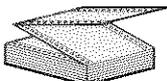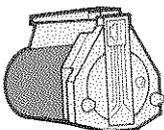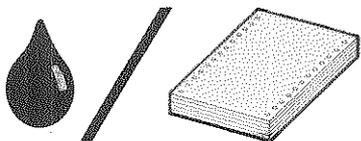





The ink in the print head cartridge contains diethylene glycol which is **HARMFUL IF SWALLOWED**. Keep new or used cartridges **OUT OF THE REACH OF CHILDREN**.

Die Tinte der Druckkopfpatrone enthält Diäthylenglycol. **EINNAHME IST SCHADLICH!** Bewahren Sie deshalb die Druckkopfpatronen **ÄUßERHALB DER REICHWEITE VON KINDERN** auf.

L'encre de la cartouche destinée à tête d'impression contient du glycol-diéthylène dont **L'ABSORPTION EST DANGEREUSE**. Conservez les cartouches neuves ou usagées **HORS DE LA PORTEE DES ENFANTS**.

La tinta que va en el interior de la cabeza impresora contiene dietilenglicol, el cual puede ser dañino si es ingerido. Mantenga las cabezas nuevas o usadas fuera del alcance de los niños.


L'inchiostro nella cartuccia della testina di stampa contiene dietilen-glicole, una sostanza molto pericolosa se ingerita. Tenete le cartucce, nuove o usate, fuori dalla portata dei bambini.

De inkt in de inktpatroon bevat diethylene glycol, dat schadelijk is bij inwendig gebruik. **NIEUWE OF GEBRUIKTE PATRONEN MOETEN BUITEN HET BEREIK VAN KINDEREN WORDEN GEHOUDEN**.

Blækket i skriv hoved-beholderen indeholder diethylene glycol, hvilket er farligt at indtage. Opbevar brugte og ubrugte beholdere uden for børns rækkevidde.

Bläcket i skrivhuvudets behållare innehåller diethylen glykol som är farligt att förtära. Förvara dessa behållare utom räckhåll för barn.

Kirjoitinpääyksikön muste sisältää dietyleeni glykolia, joka on haitallista nautittuna. Pidä uudet tai käytetyt kirjoitinpääyksiköt **POISSA LASTEN ULOTTUVILTA**.

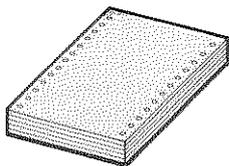

---

**Use Hewlett-Packard ink jet paper for best print quality.**

Benutzen Sie das ThinkJet-Papier von Hewlett-Packard, um eine hochwertige Druckqualität zu erreichen.

Pour obtenir une meilleure qualité d'impression, utilisez le papier spécial Hewlett-Packard pour imprimante à jet d'encre.

Use el papel especial de Hewlett-Packard para una mayor calidad de impresión.

Per una migliore qualità di stampa usate la carta speciale della Hewlett-Packard per la finkjet.



Gebruik Hewlett-Packard ThinkJet papier voor het beste afdrukresultaat.





Anvend Hewlett-Packard ThinkJet papir for at opnå den bedste skrivekvalitet.






Bruk Hewlett-Packard's spesielle Thinkjet-papir for å oppnå best skrivekvalitet.

Hewlett-Packard speciella ThinkJet papper använd för bästa resultat vid utskrift.


Käytä Hewlett-Packard "THINKJET"-paperia parhaan kirjoituslaadun saavuttamiseksi.

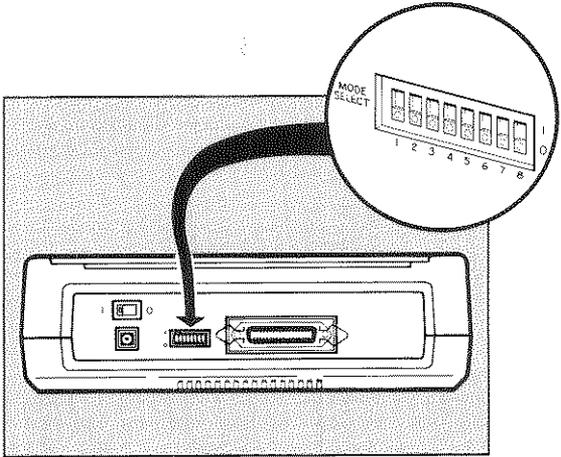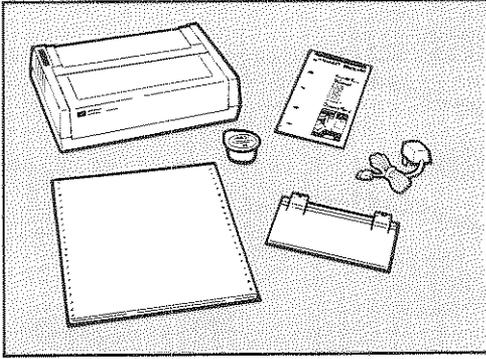

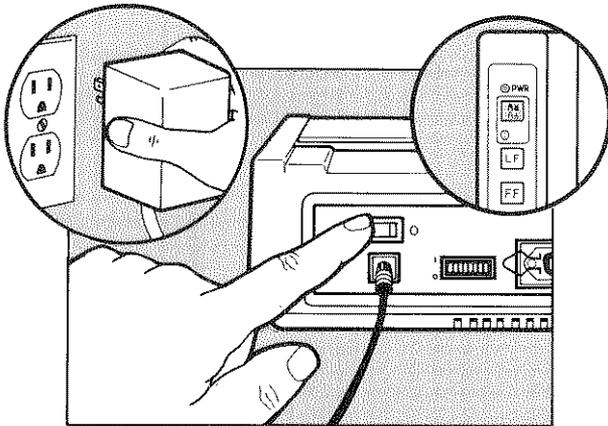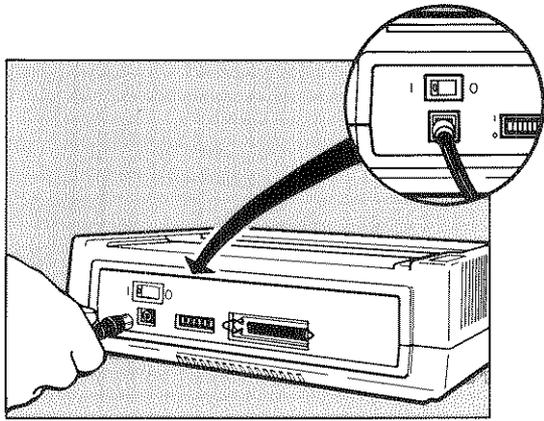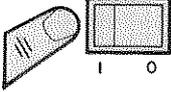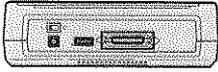

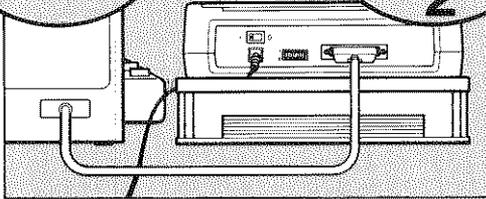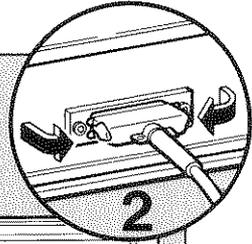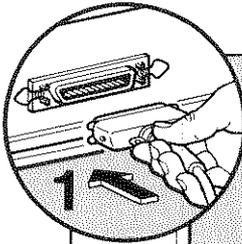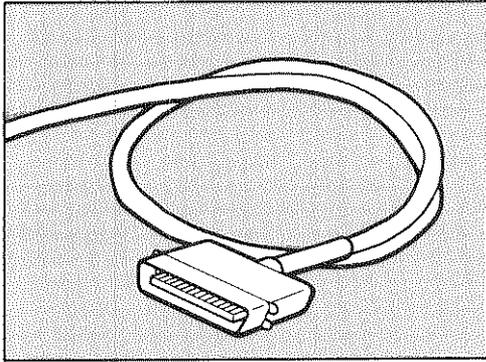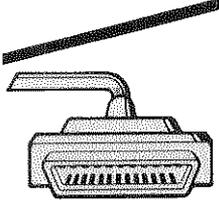



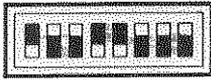

## MODE SELECT SWITCHES

Wahl der betriebsart

Commutateur de selection de mode

Conmutadores de selección de modos

Selettori predisposizione modo operativo


Modus keuzeschakelaar

Status-kontaktsæt

Modus brytere

Funktionsval

Kirjoitintyyppin valintakytkimet

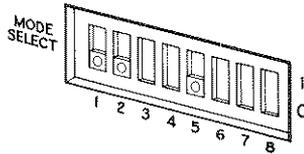


### HEWLETT-PACKARD

HP 150

HP SERIES 80


HP SERIES 100

HP SERIES 200

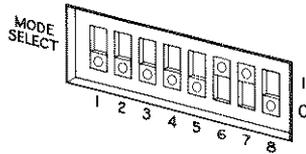


IBM PC

IBM PCXT

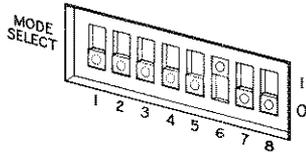

APPLE II

APPLE IIe

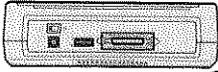

## PERFORATION SKIP MODE (YES)

Automatischer vorschub vor der perforation  
(ja)

Mode saut de perforation (oui)

Modo salto de línea perforada (si)

Margine superiore e inferiore della pagina (si)



Perforatie sprong modus

Spring over perforering (ja)

Automatisk linjeskift (ja)

Skrivning över pappersskarv (ja)

Perforoinnin ylitys (kyllä)

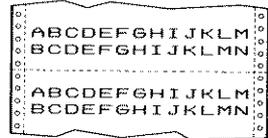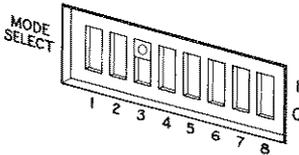

## PERFORATION SKIP MODE (NO)

Automatischer vorschub vor der perforation  
(nein)

Mode saut de perforation (non)

Modo salto de línea perforada (no)

Margine superiore e inferiore della pagina  
(no)


Perforatie sprong modus



Spring over perforering (nej)

Automatisk linjeskift (nei)

Skrivning över pappersskarv (nej)

Perforoinnin ylitys (ei)

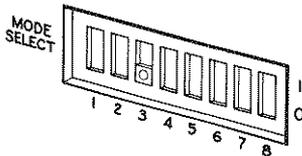

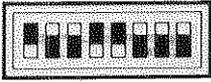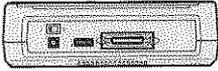

## PAGE LENGTH SETTING

Einstellen der seitenlänge

Definition de la longueur de page

Fijación de la longitud de página

Dimensioni lunghezza pagina







Instelling papierlengte



Sidelængdeindstilling

Bestemmelse av arklengde

Val av papperslængd

Sivun pituuden asetus

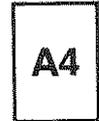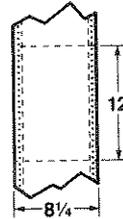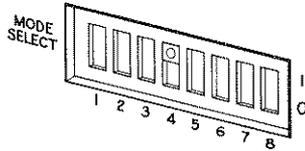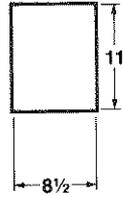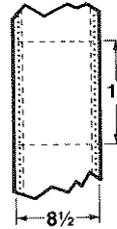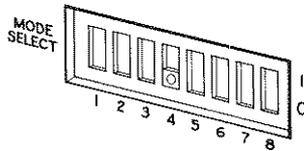

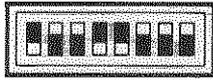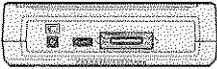

## CHARACTER SELECT SWITCHES

Wahl des Zeichensatzes

Commutateur de sélection de caractères

Conmutadores de selección de caracteres

Interruttori selezione caratteri


Tekenset keuzeschakelaar

Tegnsætsindstilling


Brytere for valg av tegnsett

Val av teckenuppsättning


Merkkivalikoiman valintakytkimet

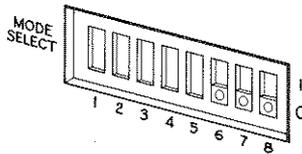


ROMAN-8

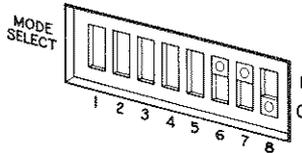


IBM-8

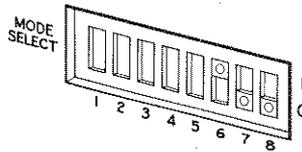

USASCII

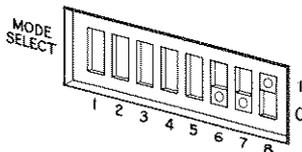

FRENCH

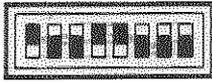

## CHARACTER SELECT SWITCHES

Wahl des Zeichensatzes

Commutateur de selection de caracteres

Conmutadores de selección de caracteres

Interruttori selezione caratteri


Tekenset keuzeschakelaar

Tegnsætsindstilling


Brytere for valg av tegnsett

Val av teckenupsättning


Merkkivalikoiman valintakytkimet

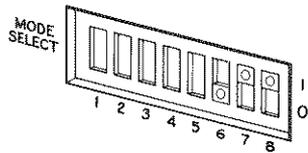


UK

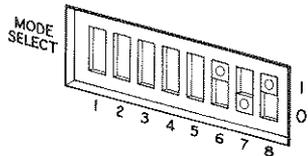

GERMAN




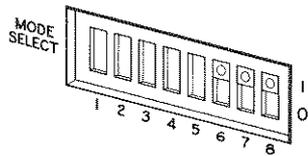






SPANISH




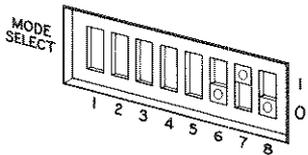






SWEDISH







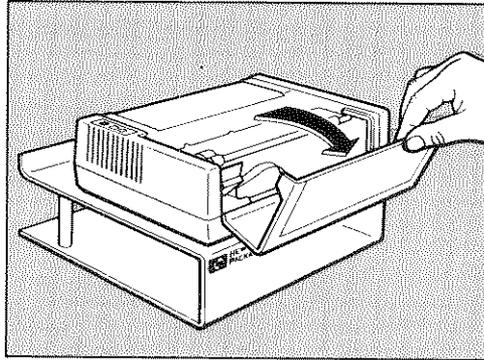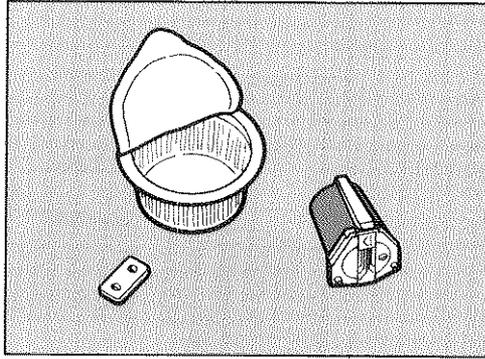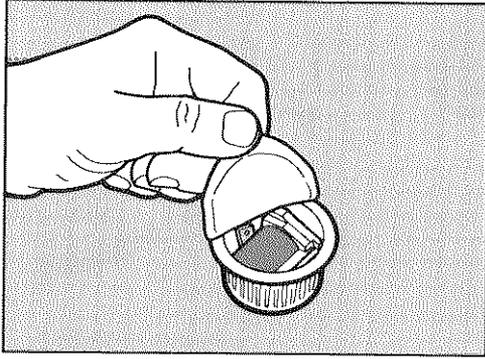
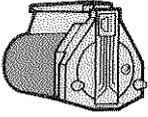


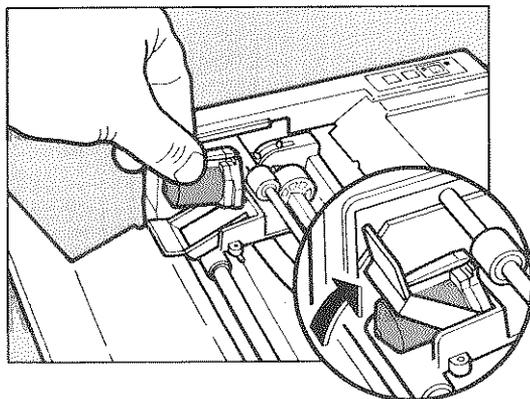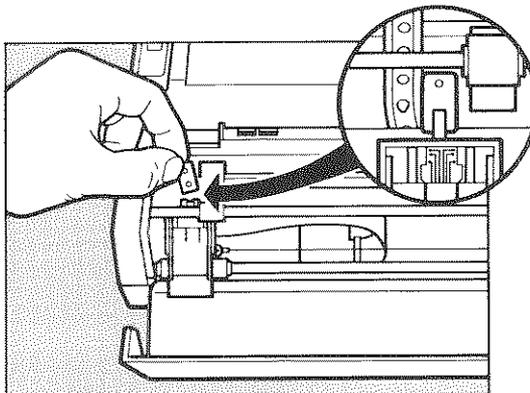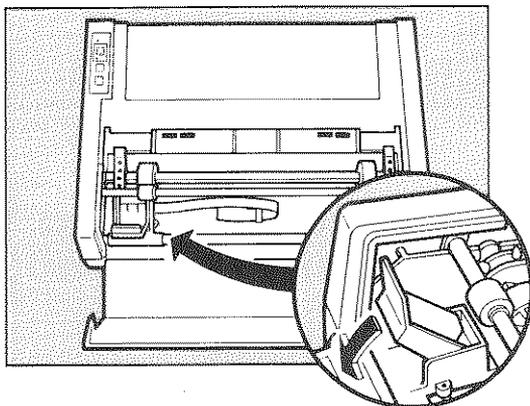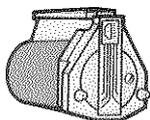


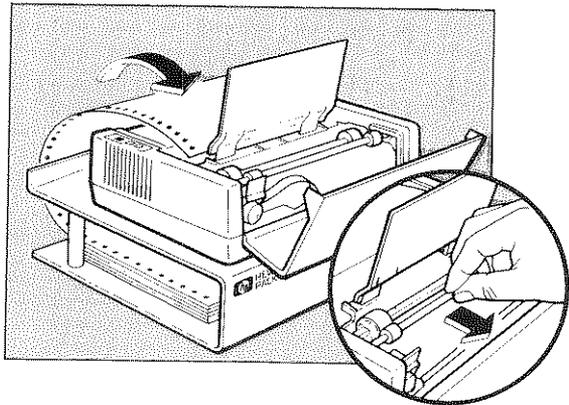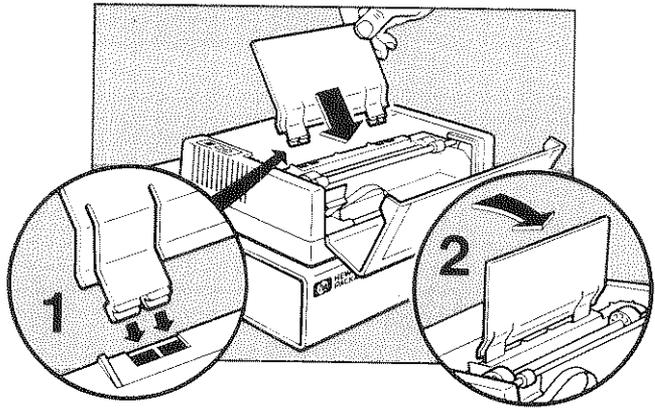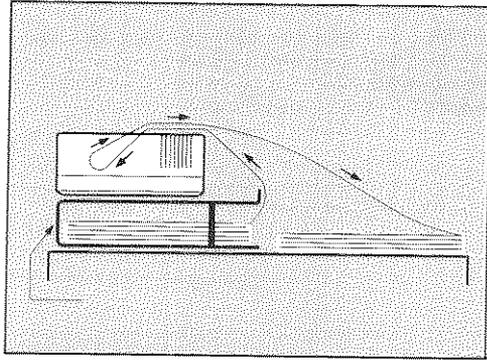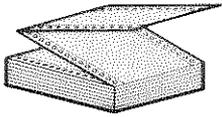

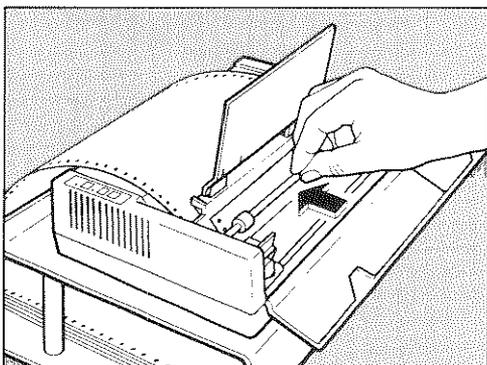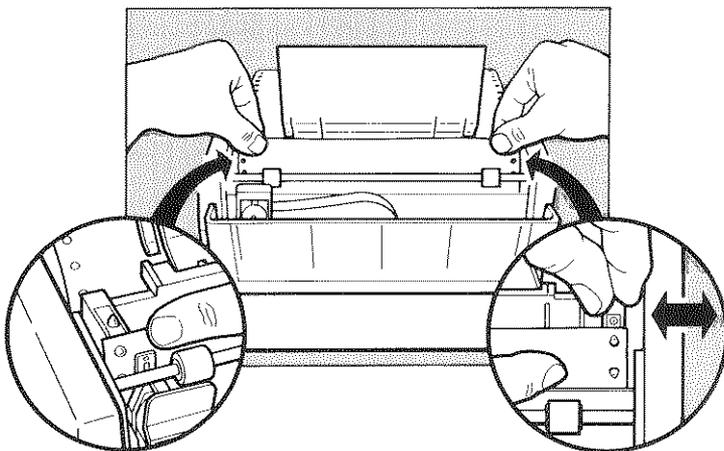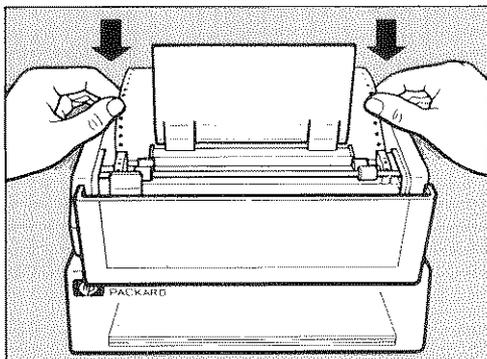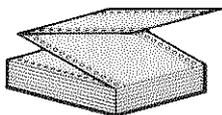

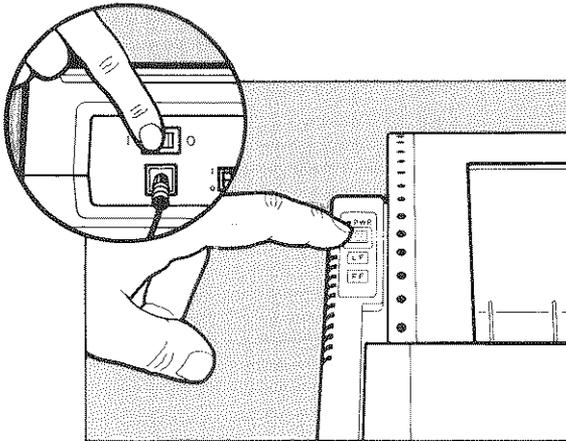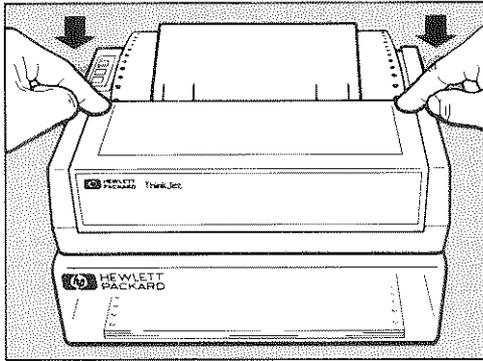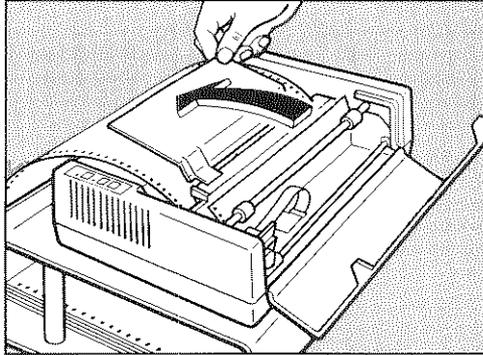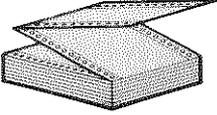

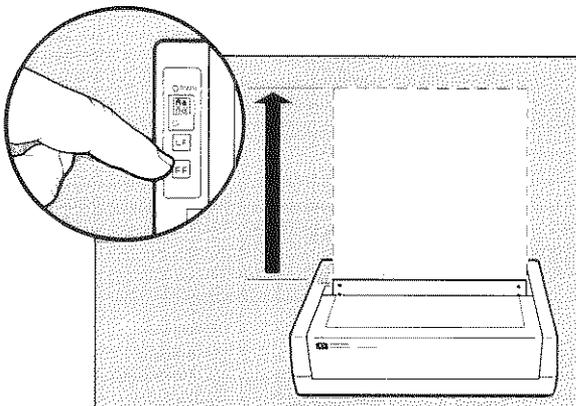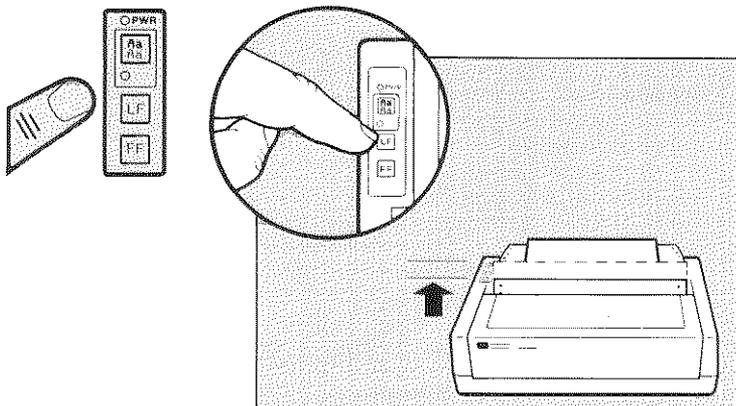

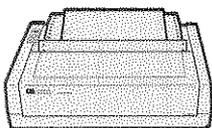

**Top of form is set to the current line each time the printer is turned on or the blue button is pushed.**

Seitenvorschub wird immer auf die aktuelle Zeile gesetzt, wenn der Drucker eingeschaltet oder der blaue Knopf gedrückt wird.

L'imprimante se positionne en HAUT DE PAGE sur la ligne en cours à chaque remise en marche, ou à chaque fois que vous pressez la touche bleue.

El límite superior del formato se fija en la línea en que se encuentra la cabeza cada vez que se enciende la impresora o se oprime el botón azul.

L'inizio della pagina e' fissato alla linea corrente ogni volta che la stampante viene accesa o il pulsante blu viene premuto.


De bladzijde bovenkant wordt ingesteld op de huidige lijn, waar de printkop staat, iedere keer wanneer de printer aangezet wordt of wanneer de blauwe knop wordt ingedrukt.



Skrivehovedet vil være i startposition (d.v.s. dem linje, hvor shrivehovedet er i postion vil blive toppen of papiret) hver gang skriveren tandes eller hver gang der trykkes p& den blå tast.





Når skriveren slås på eller den blå knappen trykkes inn, vil skriveren være innstilt i skriveposisjon.




Skrivhuvudets startpunkt ("Top Of Form") i förhållande till papperet bestäms när skrivaren slås på eller när den blå knappen trycks ned.





Sivun yläreuna asettuu aina sen hetkiselle riville, kun virta kytketään päälle tai kun painetaan sinistä painiketta.



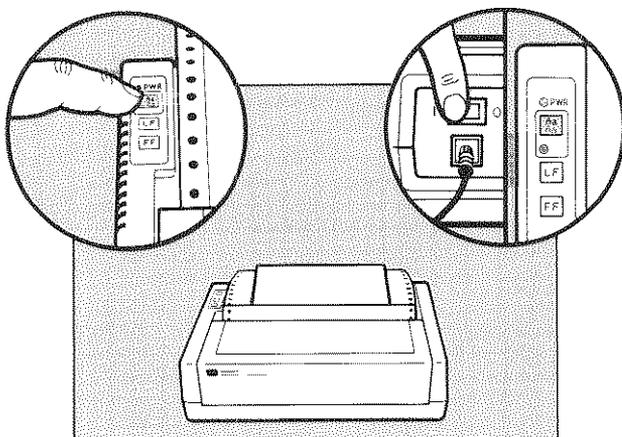


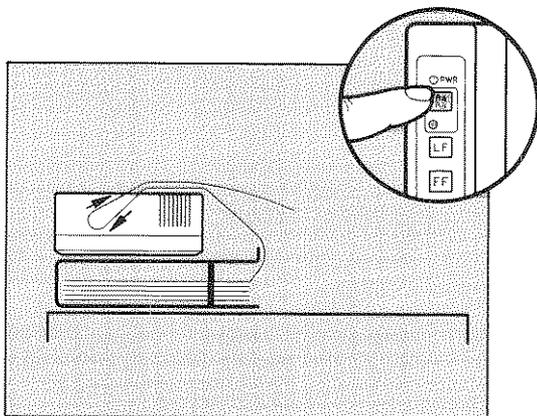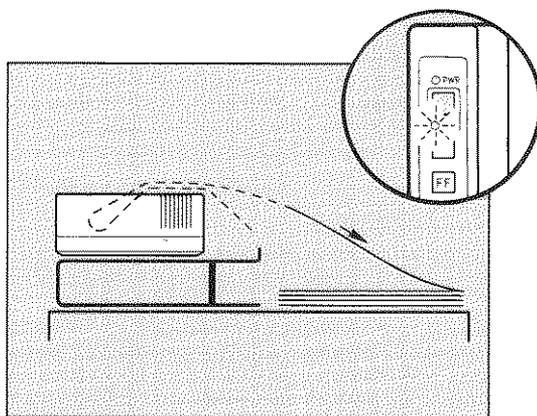


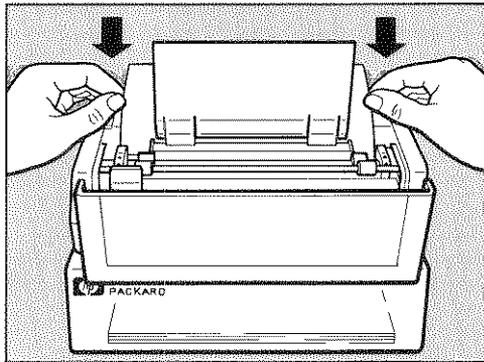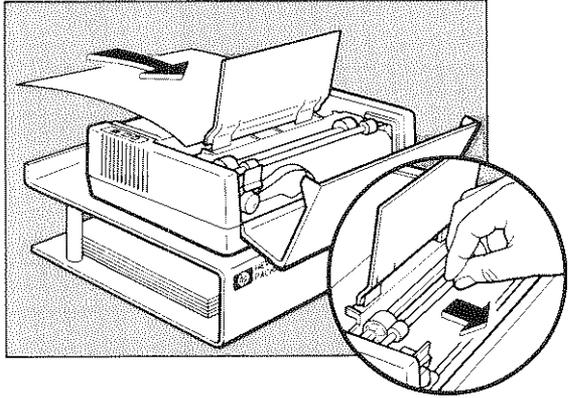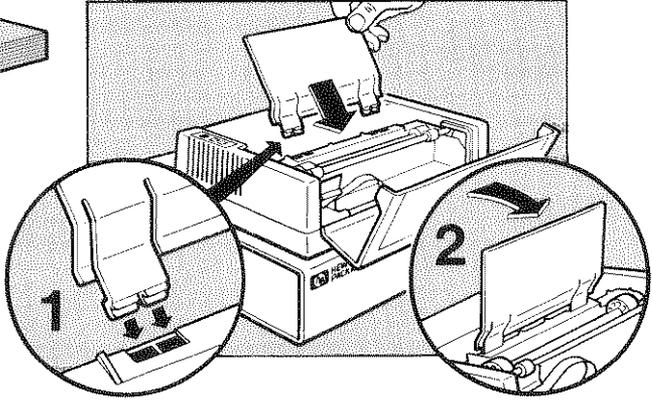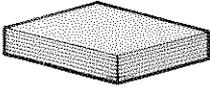

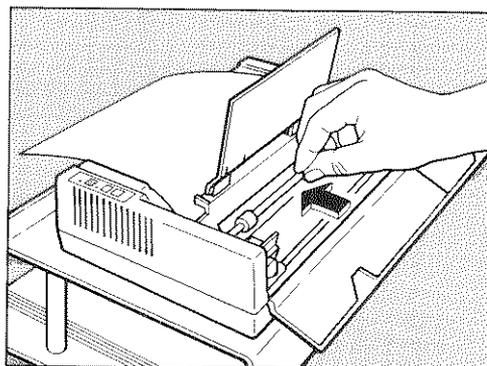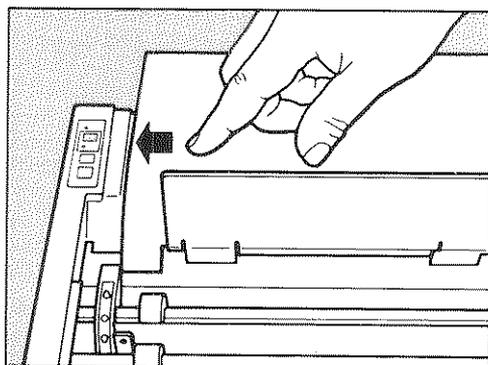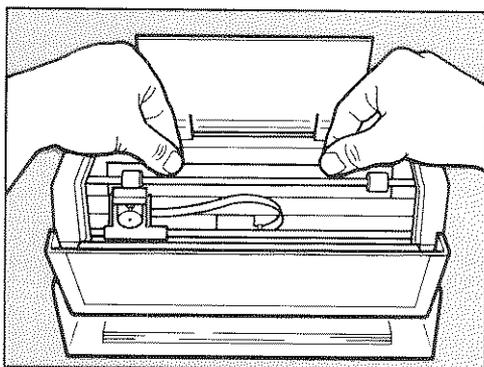

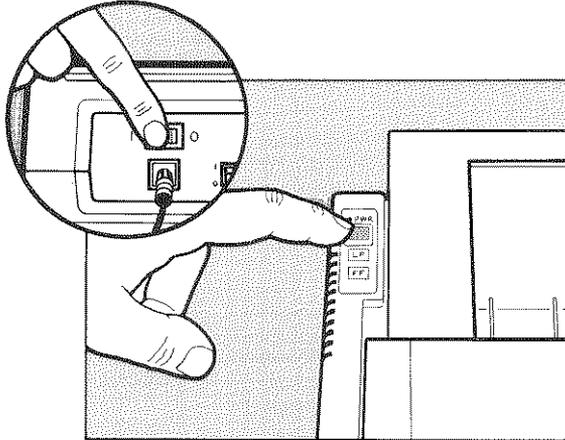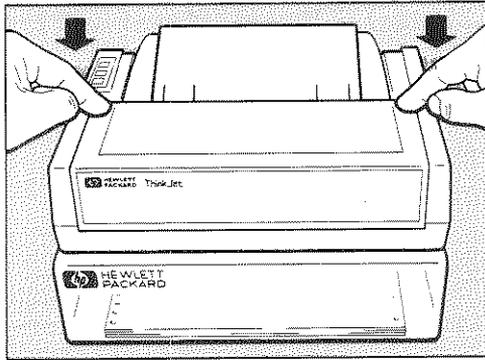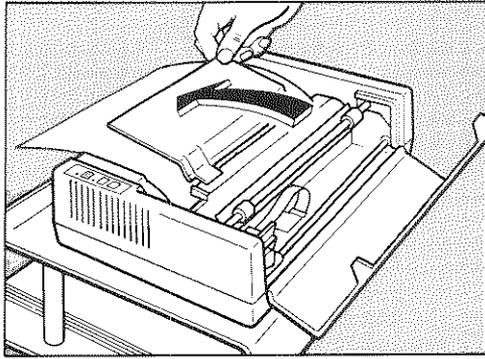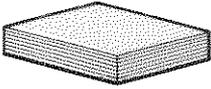

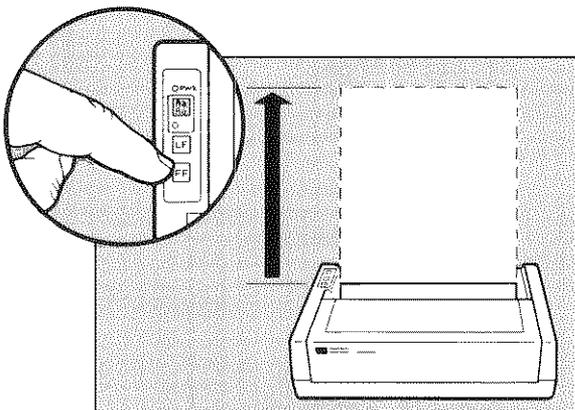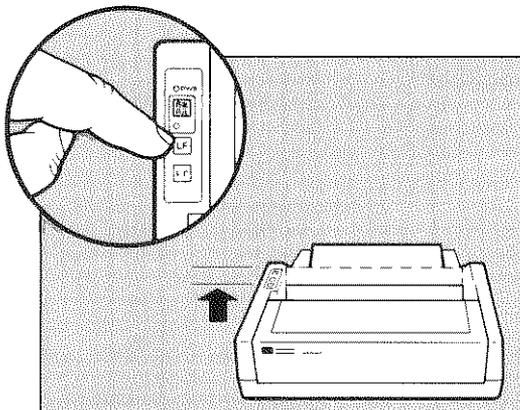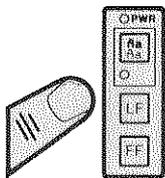

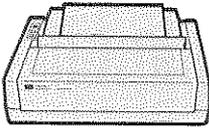

**Top of form is set to the current line each time the printer is turned on or the blue button is pushed.**

Seitenvorschub wird immer auf die aktuelle Zeile gesetzt, wenn der Drucker eingeschaltet oder der blaue Knopf gedrückt wird.

L'imprimante se positionne en HAUT DE PAGE sur la ligne en cours à chaque remise en marche, ou à chaque fois que vous pressez la touche bleue.

El límite superior del formato se fija en la línea en que se encuentra la cabeza cada vez que se enciende la impresora o se oprime el botón azul.

L'inizio della pagina é fissato alla linea corrente ogni volta che la stampante viene accesa o il pulsante blu viene premuto.


De bladzijde bovenkant wordt ingesteld op de huidige lijn, waar de printkop staat, iedere keer wanneer de printer aangezet wordt of wanneer de blauwe knop wordt ingedrukt.

Skrivehovedet vil være i startposition (d. v. s. den linie, hvor skrivehovedet nu befinder sig vil blive toppen af papiret) hver gang skriveren tændes eller hver gang der trykkes på den blå tast.


Når skriveren slås på eller den blå knappen trykkes inn, vil skriveren være innstilt i skriveposisjon.

Skrivhuvudets startpunkt ("Top Of Form") i förhållande till papperet bestäms när skrivaren slås på eller när den blå knappen trycks ned.


Sivun yläreuna asettuu aina sen hetkisellev riville, kun virta kytketään päälle tai kun painetaan sinistä painiketta.

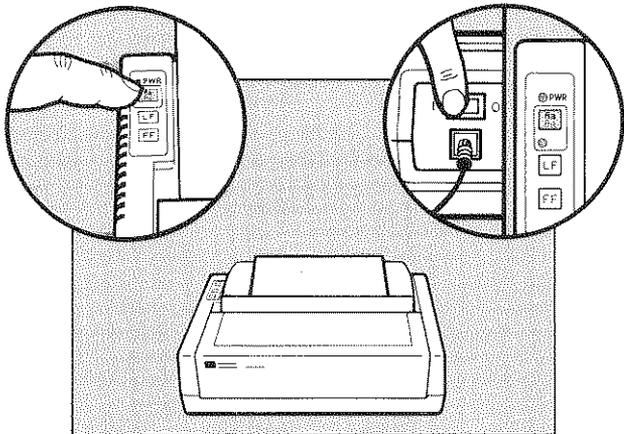

Aa  
Aa

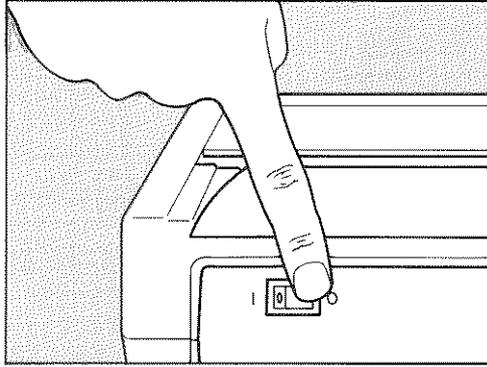

**HOLD**  
HALTEN  
MAINTENIR  
MANTENER OPRIMIDO  
TENERE PREMUTO  
HOUD VAST  
HOLD  
TRYKK  
HALL KNAPPEN NEDTRYCKT.  
PIDÄ PAINETTUNA

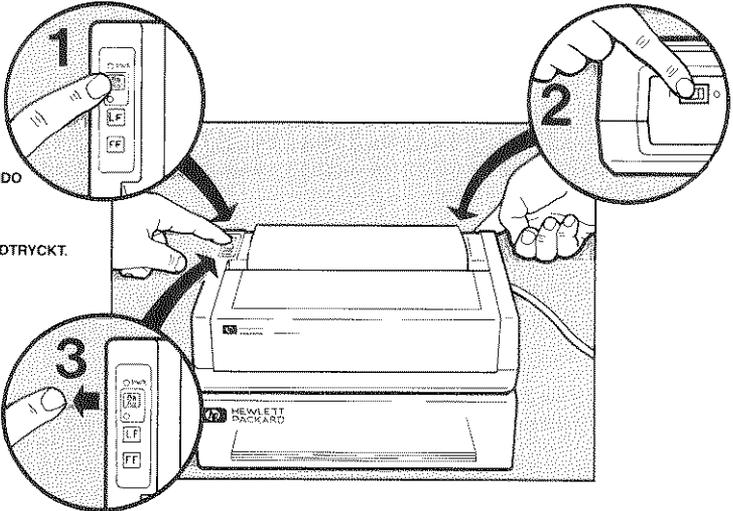


**RELEASE**  
LOSLASSEN  
RELÂCHER  
SOLTAR  
RILASCIARE  
LAAT LOS  
SLIP  
FRIGJØR  
SLAPP KNAPPEN.  
VAPAUTA

Quality mode is used to print entire documents. Quality mode can highlight a whole page or several pages. The illustrations above tell you how to enable Quality mode.

<=>?@ABC  
 =>?@ABCD  
 >?@ABCDE

**Self test**

Eingnungsprüfung  
 Test de diagnostic  
 Prueba de diagnóstico  
 Test diagnostico  
 Zelf proef  
 System test  
 Selvprøve  
 Kone testa  
 Selv eksamen

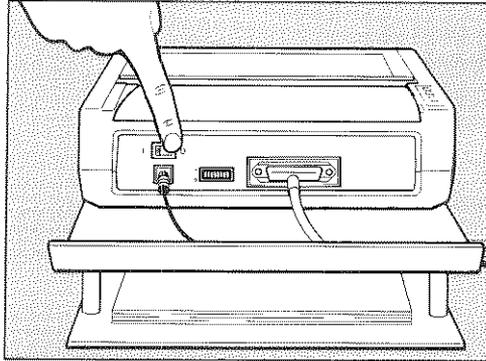

**HOLD**  
 HALTEN  
 MAINTENIR  
 MANTENER OPRIMIDO  
 TENERE PREMUTO  
 HOUD VAST  
 HOLD  
 TRYKK  
 HÅLL KNAPPEN NEDTRYCKT.  
 PIDÄ PAINETTUNA

**RELEASE**  
 LOSLASSEN  
 RELÄCHER  
 SOLTAR  
 RILASCIARE  
 LAAT LOS  
 SLIP  
 FRIGJØR  
 SLÄPP KNAPPEN.  
 VAPAUTA

