

CW75
ELECTRONIC KEYS

by





LIMITED WARRANTY

R. L. DRAKE COMPANY warrants to the original purchaser that this product shall be free from defects in material (except tubes and RF output transistors) or workmanship for ninety (90) days from the date of original purchase.

During the warranty period the R. L. DRAKE COMPANY or an authorized Drake service facility will provide free of charge both parts (except tubes and RF output transistors) and labor necessary to correct defects in material or workmanship.

To obtain such warranty service, the original purchaser must:

- (1) Complete and send in the Warranty Registration Card.
- (2) Notify R. L. DRAKE COMPANY or its nearest authorized service facility, as soon as possible after discovery of a possible defect, of:
 - (a) The model number and serial number, if any;
 - (b) The identity of the seller and the approximate date of purchase;
 - (c) A detailed description of the problem, including details on the electrical connection to associated equipment and the list of such equipment.
- (3) Deliver the product to the R. L. DRAKE COMPANY or the nearest authorized service facility, or ship the same in its original container or equivalent, fully insured and shipping charges prepaid.

Correct maintenance, repair and use are important to obtain proper performance from this product. Therefore, carefully read the Instruction Manual. This warranty does not apply to any defect that R. L. DRAKE COMPANY determines is due to:

- (1) Improper maintenance or repair, including the installation of parts or accessories that do not conform to the quality and specifications of the original parts.
- (2) Misuse, abuse, neglect or improper installation.
- (3) Accidental or intentional damage.

All implied warranties, if any, terminate ninety (90) days from the date of the original purchase.

The foregoing constitutes R. L. DRAKE COMPANY'S entire obligation with respect to this product, and the original purchaser and any user or owner shall have no other remedy and no claim for incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives specific legal rights and you may also have other rights which vary from state to state.

R. L. DRAKE COMPANY
540 Richard Street • Miamisburg, Ohio 45342



CW75


ELECTRONIC KEYS

MODEL 1507

OPERATOR'S MANUAL

©R. L. DRAKE COMPANY 1981

PRINTED IN U.S.A.

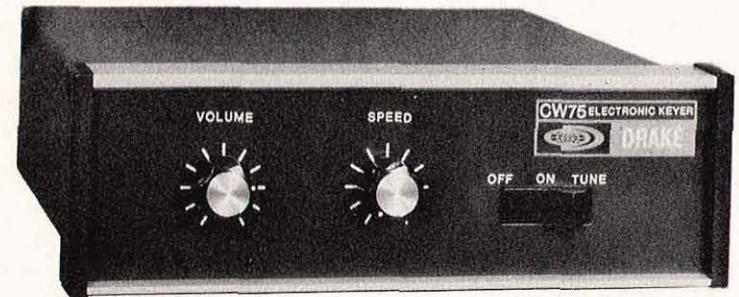

I. GENERAL DESCRIPTION

The CW75 Keyer can be used to provide a keying function for virtually any type of transmitter (cathode keying, grid block keying, solid-state, etc.), as well as a code practice keyer. The styling matches that of the Drake 7-line. A sidetone oscillator is provided with an internally adjustable tone control.

The CW75 may be used with a straight key, semi-automatic key (bug) or 'squeeze' paddle. When using a 'squeeze' paddle the keyer provides iambic operation. Front panel controls adjust sidetone volume, keyer speed and ON/OFF/TUNE.

II. FEATURES

- * Built-in Sidetone
- * Optically Coupled Keyline for Positive or Negative Keying Voltages
- * Speed and Volume Control (Front Panel Adjustable)
- * Tone Control (Internally Adjustable)
- * Self-Completing Dots and Dashes
- * Squeeze Keyer, Semi-Automatic "Bug" or Straight Key Operation
- * Iambic Keying
- * Optional Internal 9 Volt Supply (Battery)
- * Speed Control (5-50 WPM)

III. SPECIFICATIONS

Keying:	Reliable optically coupled solid state. (± 300 V, 100 mA maximum)
Supply:	7-16 VDC 50 mA @ Maximum Output (TUNE) @ 13 VDC
Speed:	5-50 Words Per Minute
Side Tone Output:	
Level:	20 mW @ 13 VDC.
Frequency:	Adjustable Internal (700-1100 Hz)
Size:	7" L \times 6.25" W \times 2.25" H (17.3 \times 15.9 \times 5.4 cm)
Weight:	1.4 lbs. (.63 kg)

IV. INSTALLATION

The CW75 may be located at any convenient location but care should be exercised in not putting the keyer in a position to block heat venting holes in other equipment.

The CW75 may be secured to the top of an RV7, MS7, SP75, CS7, P75 or equivalent cabinet with the two retaining clips provided. First, remove the screw-in mounting feet on the CW75 and replace with the four number 6 screws provided. Place the four stick-on rubber feet on the bottom of the CW75 next to the cover mounting screws on the cover. Remove the top screws on each front extrusion end cap of the cabinet that is to be under the CW75 and the bottom screws on each CW75 end cap. Place the retaining clip between the end cap and extrusion. Position so that the hole is properly aligned and replace the screws. Repeat the retaining clip installation on the other side.

Screw terminals are located on the rear panel for all external connections. The wiring cables can be secured by one of the cable clamps on the rear panel.

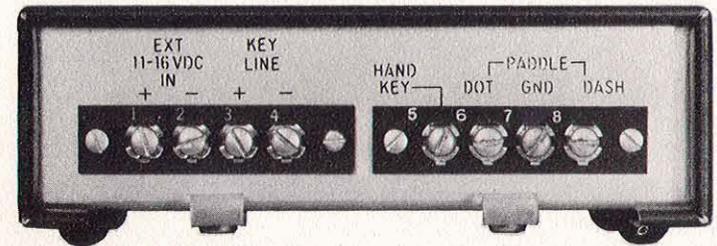


Figure 2 Rear Panel Connections

EXT (1-2): For External Power Supply (7-16 Volts DC at 50 mA).
 KEY LINE (3-4): Connect to Key Line of Transmitter (internally protected against reverse connections).
 HAND KEY (5-7): Connect Key to Terminals to Leads 5 and 7.
 PADDLE: Connect to Squeeze Keyer Noting Dot and Dash Connections.

V. OPERATION

The CW75 electronic keyer may be used as a code practice keyer or connected to the key line of a transmitter/transceiver for transmitter CW keying.

An optical coupled solid state keying circuit is used to provide keying action to solid state transmitters as well as vacuum tube transmitters. The keying circuit will provide reliable keying to key lines as high as plus or minus 300 volts (open circuit) and will sink as much as 100 mA. Connect the key line to the transmitter, noting the polarity. (The CW75 is internally protected against reverse polarity hook-up.)

Connect an external supply (7-16 VDC) to the rear or use an internal 9 V battery. Connect the key to the rear panel connections and the CW75 is ready for operation.

The 3-position rocker switch provides an OFF position, ON position in the middle and TUNE position at the extreme right. The tune position provides a constant keyed output for use in tuning a transmitter or matching unit.

A small access hole is located on the bottom cover to permit adjustment of the side-tone frequency. This adjustment provides a range of about 700 to 1100 Hz and may be adjusted for your preference. Use a small blade screwdriver and adjust the variable resistor for the desired tone while in the tune position.

VI. SERVICE DATA

The CW75 should provide reliable, maintenance-free service. Should problems arise that cannot be corrected, either return the unit to your dealer, or write our Service Department. Please describe your problem in detail, including external connections, accessory equipment, etc. Please write or call the factory for authorization before returning your unit for service. Address your requests for authorization to:

R. L. DRAKE COMPANY
540 Richard Street
Miamisburg, OH 45342
ATTN: Customer Service Department
Telephone: (Area Code 513) 866-3211
Telex: 288-017

NOTES:

